

LabWindows/CVI, VXIplnp Driver history for R&S®UPV and R&S®UPP200/400/800 Audio Analyzers

Products:

- | R&S®UPV
- | R&S®UPP200/400/800

History for LabWindows/CVI and
VXIplug&play driver for C#, C/C++, Visual
Basic .NET, VEE, etc.

Version History

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.		
Revision	Date	Note
3.4.0	04/2020	<ul style="list-style-type: none"> * Added rsupv_optionCheckState() with default state ON. Switch it off to override the driver's instrument/options restrictions. * Removed instrument check from the following functions <ul style="list-style-type: none"> - rsupv_GetAnalogAnalyzerChannelMode - rsupv_SetAnalyzerCoupling - rsupv_SetAnalyzerInstrument - rsupv_SetAnalyzerCoupling - rsupv_SetAnalyzerChannelInputCommon - rsupv_SetAnalyzerChannelInputCommon
3.3.4	10/2017	<ul style="list-style-type: none"> * Modified <ul style="list-style-type: none"> - rsupv_ReadMeasurementResultMinMax - fixed range checking for Modifier
3.3.3	10/2017	<ul style="list-style-type: none"> * Fixed rsupv_GetAnalyzerChannelInputRangeValue * Removed instrument checking in rsupv_SetAnalyzerChannelInputRangeValue, rsupv_GetAnalyzerChannelInputRangeValue
3.3.2	06/2013	<ul style="list-style-type: none"> * Modified <ul style="list-style-type: none"> - rsupv_SetAnalyzerChannelInputImpedance, rsupv_GetAnalyzerChannelInputImpedance removed UPP instrument checking - rsupv_SetAnalyzerTHDNFrequencyLimUp - changed valid range
3.3.1	07/2012	<ul style="list-style-type: none"> * Modified <ul style="list-style-type: none"> - rsupv_ConfigureMeasurementFunctionsSettling - if settling is off, no other parameter is sent to instrument - rsupv_GetDigBitstreamAnalyzerClockFrequency, rsupv_SetDigBitstreamAnalyzerClockFrequency - fixed SCPI command
3.3.0	01/2012	<p>Modifications:</p> <ul style="list-style-type: none"> * New <ul style="list-style-type: none"> rsupv_SetDigitalGeneratorChannels rsupv_GetDigitalGeneratorChannels rsupv_SetHDMIGeneratorAudioFormat rsupv_GetHDMIGeneratorAudioFormat rsupv_SetHDMIGeneratorAudioSinkARC rsupv_GetHDMIGeneratorAudioSinkARC rsupv_GetHDMIGeneratorAudioInfoFrame rsupv_SetHDMIGeneratorChannelsMode rsupv_GetHDMIGeneratorChannelsMode rsupv_GetHDMIGeneratorVideoFormatNo

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_SetHDMIGeneratorVideoColorDepth rsupv_GetHDMIGeneratorVideoColorDepth rsupv_SetHDMIGeneratorVideoContent rsupv_GetHDMIGeneratorVideoContent rsupv_GetHDMIGeneratorVideoColorString rsupv_GetHDMIGeneratorVideoAVI rsupv_GetHDMIGeneratorVideoSPD rsupv_GetHDMIGeneratorVideoEEDID rsupv_GetHDMIGeneratorVideoCEC rsupv_SetHDMIGeneratorVideoFormatFrequency rsupv_GetHDMIGeneratorVideoFormatFrequency rsupv_SetHDMIGeneratorVideoFormatResolution rsupv_GetHDMIGeneratorVideoFormatResolution rsupv_SetHDMIGeneratorVideoSource rsupv_GetHDMIGeneratorVideoSource rsupv_SetGeneratorDCOffsetChannelValue rsupv_GetGeneratorDCOffsetChannelValue rsupv_SetGeneratorDCOffsetCoupling rsupv_GetGeneratorDCOffsetCoupling rsupv_SetGeneratorEqualizerCoupling rsupv_GetGeneratorEqualizerCoupling rsupv_SetGeneratorStereoChannelFilterCoupling rsupv_GetGeneratorStereoChannelFilterCoupling rsupv_SetGeneratorStereoChannelFilter rsupv_GetGeneratorStereoChannelFilter rsupv_SetGeneratorStereoEqualizer rsupv_GetGeneratorStereoEqualizer rsupv_SetGeneratorStereoEqualizerFile rsupv_SetGeneratorMultichannelFilter rsupv_GetGeneratorMultichannelFilter rsupv_SetGeneratorMultichannelAllChanSine rsupv_GetGeneratorMultichannelAllChanSine rsupv_SetGeneratorMultichannelGain rsupv_GetGeneratorMultichannelGain rsupv_SetGeneratorMultichannelLimitToFS rsupv_GetGeneratorMultichannelLimitToFS rsupv_SetGeneratorMultichannelTotalGain rsupv_GetGeneratorMultichannelTotalGain rsupv_SetGeneratorMultichannelSine rsupv_GetGeneratorMultichannelSine rsupv_SetGeneratorMultichannelSineFrequency

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_GetGeneratorMultichannelSineFrequency rsupv_SetGeneratorMultichannelSinePhase rsupv_GetGeneratorMultichannelSinePhase rsupv_SetGeneratorMultichannelSineVoltage rsupv_GetGeneratorMultichannelSineVoltage rsupv_SetGeneratorMultichannelSineArbitrary rsupv_GetGeneratorMultichannelSineArbitrary rsupv_SetGeneratorMultichannelSineArbitraryFilename rsupv_SetGeneratorMultichannelSineVoltPeak rsupv_GetGeneratorMultichannelSineVoltPeak rsupv_SetGeneratorMultichannelSineEqualizer rsupv_GetGeneratorMultichannelSineEqualizer rsupv_SetGeneratorMultichannelSineEqualizerFilename rsupv_SetGeneratorMultichannelDCOffset rsupv_GetGeneratorMultichannelDCOffset rsupv_SetGeneratorMultichannelDCOffsetValue rsupv_GetGeneratorMultichannelDCOffsetValue rsupv_SetGeneratorSingleChannelTrackToOtherChannel rsupv_GetGeneratorSingleChannelTrackToOtherChannel rsupv_SetGeneratorSingleChannel rsupv_GetGeneratorSingleChannel rsupv_SetGeneratorAllChannelSine rsupv_GetGeneratorAllChannelSine rsupv_SetGeneratorSineFrequency rsupv_GetGeneratorSineFrequency rsupv_SetGeneratorSineVoltage rsupv_GetGeneratorSineVoltage rsupv_SetMultichannelAnalyzerImpedanceChannel rsupv_GetMultichannelAnalyzerImpedanceChannel rsupv_SetMultichannelAnalyzerChannelInputImpedance rsupv_GetMultichannelAnalyzerChannelInputImpedance rsupv_SetHDMIAnalyzerAudioInput rsupv_GetHDMIAnalyzerAudioInput rsupv_SetHDMIAnalyzerAudioFormat rsupv_GetHDMIAnalyzerAudioFormat rsupv_SetHDMIAnalyzerAudioCoding rsupv_GetHDMIAnalyzerAudioCoding rsupv_GetHDMIAnalyzerAudioDetected rsupv_GetHDMIAnalyzerAudioNParameter rsupv_GetHDMIAnalyzerAudioCTSParameter rsupv_SetHDMIAnalyzerAudioChannel

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_GetHDMIAnalyzerAudioChannel rsupv_SetHDMIAnalyzerAudioMeasChannelState rsupv_GetHDMIAnalyzerAudioMeasChannelState rsupv_GetHDMIAnalyzerAudioInfoFrame rsupv_GetHDMIAnalyzerVideoFormatNo rsupv_GetHDMIAnalyzerVideoColorDepth rsupv_GetHDMIAnalyzerVideoHDCPState rsupv_GetHDMIAnalyzerVideoTimings rsupv_GetHDMIAnalyzerVideoAVI rsupv_GetHDMIAnalyzerVideoSPD rsupv_GetHDMIAnalyzerVideoEEDID rsupv_SetDigBitstreamAnalyzerClockSource rsupv_GetDigBitstreamAnalyzerClockSource rsupv_SetDigBitstreamAnalyzerChannelMode rsupv_GetDigBitstreamAnalyzerChannelMode rsupv_SetDigBitstreamAnalyzerAlignment rsupv_GetDigBitstreamAnalyzerAlignment rsupv_SetDigBitstreamAnalyzerClockFrequency rsupv_GetDigBitstreamAnalyzerClockFrequency rsupv_SetDigBitstreamAnalyzerDutyCycle rsupv_GetDigBitstreamAnalyzerDutyCycle rsupv_SetDigBitstreamAnalyzerDownSamplingFactor rsupv_GetDigBitstreamAnalyzerDownSamplingFactor rsupv_SetAnalyzerRefinement rsupv_GetAnalyzerRefinement rsupv_SetAnalyzerFFTMaxSize rsupv_GetAnalyzerFFTMaxSize rsupv_SetAnalyzerPOLQABand rsupv_GetAnalyzerPOLQABand rsupv_SetAnalyzerPOLQAMeasurementMode rsupv_GetAnalyzerPOLQAMeasurementMode rsupv_SetAnalyzerPOLQAGain rsupv_GetAnalyzerPOLQAGain rsupv_GetAnalyzerPOLQAReferenceLevel rsupv_GetAnalyzerPOLQADegLevel rsupv_GetAnalyzerPOLQAAttenuation rsupv_GetAnalyzerPOLQASNRRef rsupv_GetAnalyzerPOLQASNRDegraded rsupv_GetAnalyzerPOLQARefSpRatio rsupv_GetAnalyzerPOLQADegSpRatio rsupv_GetAnalyzerPOLQAMinDelay

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		<pre> rsupv_GetAnalyzerPOLQAMaxDelay rsupv_SetLipSyncAnalysisActiveColorHigh rsupv_GetLipSyncAnalysisActiveColorHigh rsupv_SetLipSyncAnalysisActiveColorLow rsupv_GetLipSyncAnalysisActiveColorLow rsupv_SetLipSyncAnalysisActivePatternColor rsupv_GetLipSyncAnalysisActivePatternColor rsupv_SetLipSyncAnalysisMutePatternColor rsupv_GetLipSyncAnalysisMutePatternColor rsupv_SetLipSyncAnalysisAudioTriggerThreshold rsupv_GetLipSyncAnalysisAudioTriggerThreshold rsupv_SetSwitcherConnection rsupv_GetSwitcherConnection rsupv_SetDisplayMaxChannels rsupv_GetDisplayMaxChannels rsupv_ConfigureHDMIGeneratorAudio rsupv_ConfigureHDMIGeneratorVideo rsupv_ConfigureHDMIAnalyzerAudio rsupv_ConfigureDigBitstreamAnalyzer * Updated rsupv_SaveSetup - double qoutes added to the file name rsupv_SetAnalyzerFunction rsupv_GetAnalyzerFunction rsupv_SetAnalyzerInstrument rsupv_GetAnalyzerInstrument rsupv_SetGeneratorInstrument rsupv_GetGeneratorInstrument rsupv_ConfigureGeneratorDigital rsupv_SetDigitalGeneratorChannelMode rsupv_GetDigitalGeneratorChannelMode rsupv_SetDigitalGeneratorSyncTo rsupv_GetDigitalGeneratorSyncTo rsupv_SetGeneratorFunction rsupv_GetGeneratorFunction rsupv_SetUSIAalyzerSyncTo rsupv_GetUSIAalyzerSyncTo rsupv_SetUSIAalyzerFirstBit rsupv_GetUSIAalyzerFirstBit rsupv_SetSwitcherPort rsupv_GetSwitcherPort rsupv_ConfigureAudioMonitoring </pre>

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_SetAuxSignalSource rsupv_GetAuxSignalSource rsupv_SetProtocolAnalysisDisplayStyle rsupv_GetProtocolAnalysisDisplayStyle rsupv_SetProtocolAnalysisHighlight rsupv_GetProtocolAnalysisHighlight rsupv_SetProtocolAnalysisPersistence rsupv_GetProtocolAnalysisPersistence rsupv_SetProtocolAnalysisViewMode rsupv_GetProtocolAnalysisViewMode
3.1.2	12/2010	<p>Modifications:</p> <ul style="list-style-type: none"> * Option query does not fail on UPP without any option. However, if you have UPV without K4, you will no longer get error message. Both UPP with remote-control and without any option and UPV without remote control, return same response for *OPT? * Fixed rsupv.h - added missing visa.h
3.1.0	08/2010	<p>Driver for UPV firmware version 3.1.0</p> <p>Added support for R&S®UPP200/400/800 Audio Analyzer</p> <p>Modifications:</p> <ul style="list-style-type: none"> - rsupv_ConfigureGeneratorAnalog, rsupv_SetGeneratorImpedance, rsupv_GetGeneratorImpedance - added new impedance value - rsupv_SetGeneratorBandwidth, rsupv_GetGeneratorBandwidth - added new bandwidth values - rsupv_ConfigureGeneratorDigital, rsupv_SetDigitalGeneratorSyncTo, rsupv_GetDigitalGeneratorSyncTo - added new Sync To options - rsupv_SetGeneratorSweepXAxis, rsupv_GetGeneratorSweepXAxis - added new axis options - rsupv_SetAnalyzerChannelInputImpedance, rsupv_GetAnalyzerChannelInputImpedance - added new impedance values - rsupv_SetDigitalAnalyzerAudioInput, rsupv_GetDigitalAnalyzerAudioInput - added new audio input options - rsupv_SetI2SAnalyzerSampleFrequency, rsupv_GetI2SAnalyzerSampleFrequency - new sample frequencies added - rsupv_SetAnalyzerLevelMeasTime, rsupv_GetAnalyzerLevelMeasTime - added new measurement time values - rsupv_SetAnalyzerLevelDCMeasTime, rsupv_GetAnalyzerLevelDCMeasTime - added new measurement time values - rsupv_GetAnalyzerPEAQModel - bugfix - rsupv_SetAnalyzerWaveformMonitorTriggerSource,

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		<p>rsupv_GetAnalyzerWaveformMonitorTriggerSource - new trigger sources added rsupv_SetAnalyzerCombinedMeasurement, rsupv_GetAnalyzerCombinedMeasurement - new measurements added rsupv_SetDisplayUnit, rsupv_GetDisplayUnit, rsupv_SetAnalyzerUnit, rsupv_GetAnalyzerUnit, rsupv_SetAnalyzerFrequencyUnit, rsupv_GetAnalyzerFrequencyUnit - new units added rsupv_SetAnalyzerFrequencyPhaseReference, rsupv_GetAnalyzerFrequencyPhaseReference - new reference added</p> <p>* New functions</p> <ul style="list-style-type: none"> Analyzer Trigger Settling Analyzer Function Settling External Sweep FFT Analysis Equalizer FFT Analysis Frequency Limit rsupv_SetDigitalGeneratorBalancedImpedance rsupv_GetDigitalGeneratorBalancedImpedance rsupv_SetDigitalGeneratorUnbalancedImpedance rsupv_GetDigitalGeneratorUnbalancedImpedance rsupv_GetI2SGeneratorBClkFrequency rsupv_SetGeneratorSweepHalt rsupv_GetGeneratorSweepHalt rsupv_SetGeneratorPlayRestart rsupv_GetGeneratorPlayRestart rsupv_SetAnalyzerSNSequenceState rsupv_GetAnalyzerSNSequenceState rsupv_SetAnalyzerFFTTriggeredState rsupv_GetAnalyzerFFTTriggeredState rsupv_SetAuxSpeakerMonitor rsupv_GetAuxSpeakerMonitor rsupv_SetSwitcherPort rsupv_GetSwitcherPort rsupv_SetDisplayInvertEqu rsupv_GetDisplayInvertEqu rsupv_SetStatusRegister rsupv_GetStatusRegister
2.6.0	08/2009	<p>Driver supports UPV firmware version 2.6</p> <p>Updated functions</p> <ul style="list-style-type: none"> rsupv_SetGeneratorFunction, rsupv_GetGeneratorFunction - added new function rsupv_SetAnalyzerFunction, rsupv_GetAnalyzerFunction - added new function rsupv_SetProtocolGeneratorCodingMode, rsupv_GetProtocolGeneratorCodingMode - added new mode

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.		
Revision	Date	Note
		<p>New functions</p> <p> Audio Quality Measurement rsupv_SetProtocolGeneratorCodingFile</p>
2.4.2	11/2008	<p>Modified functions(command removed - SYST:COMM:GPIB:LTER):</p> <p> rsupv_StoreMemoryDataBinary rsupv_readToFile rsupv_writeHugeFileStart rsupv_contHugeFile</p>
2.4.1	10/2008	<p>Driver for UPV firmware version 2.4</p> <p>New functions:</p> <ul style="list-style-type: none"> - rsupv_readToFile - rsupv_writeFromFile - rsupv_writeHugeFileStart - rsupv_contHugeFile
2.4.0	08/2008	<p>Driver update for UPV firmware version 2.4</p> <p>New features:</p> <ul style="list-style-type: none"> - Added Analog 8 Channel option - Added Analog 16 Channel option - Added USI Dual Channel option - Added USI 8 Channel option - Added Speech Quality Measurements (PESQ) <p>- Modified functions:</p> <ul style="list-style-type: none"> • rsupv_ConfigureGeneratorDigital - removed argument Source Mode • rsupv_SetAnalyzerInstrument, rsupv_SetAnalyzerInstrument - added new instrument types (Analog Multichannel and USI instruments) • rsupv_SetAnalyzerChannelInputRange, rsupv_SetAnalyzerChannelInputRange, rsupv_SetAnalyzerChannelInputRangeValue, rsupv_GetAnalyzerChannelInputRangeValue - range of Channel is now 1 to 16 • rsupv_SetAnalyzerFTFAvgCount - changed range • rsupv_SetAnalyzerWaveformMonitorTriggerSource, rsupv_GetAnalyzerWaveformMonitorTriggerSource, rsupv_SetAnalyzerRecordTriggerSource, rsupv_GetAnalyzerRecordTriggerSource - added Gen Burst • rsupv_SetGeneratorFilter, rsupv_GetGeneratorFilter, rsupv_SetAnalyzerPrefilter, rsupv_GetAnalyzerPrefilter, rsupv_SetAnalyzerFilter, rsupv_GetAnalyzerFilter - added AES 17 and C Weighting • rsupv_SetMeasurementMode, rsupv_GetMeasurementMode - added Wait • rsupv_SetGeneratorInstrument, rsupv_SetGeneratorInstrument - added USI Dual Chan instrument <p>- New functions:</p>

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.		
Revision	Date	Note
		<ul style="list-style-type: none"> • rsupv_SetGeneratorOutputState, rsupv_GetGeneratorOutputState • rsupv_SetAnalyzerFFTUndersampleState, rsupv_GetAnalyzerFFTUndersampleState • rsupv_SetAnalyzerFFTCompFactor, rsupv_GetAnalyzerFFTCompFactor • rsupv_SetDisplayNormalization, rsupv_GetDisplayNormalization • rsupv_SetDisplayNormalizeValue, rsupv_GetDisplayNormalizeValue • rsupv_GetProtocolAnalysisError • rsupv_SetDisplayCursorMoveTo • rsupv_SetMeasurementTimeout, rsupv_GetMeasurementTimeout • rsupv_ReadMeasurementResultMinMax • rsupv_ReadAxisData • rsupv_ReadAxisDataCount • rsupv_SetHardcopySize, rsupv_GetHardcopySize • rsupv_SetWindowSize, rsupv_GetWindowSize
1.4.0	03/2007	<p>Driver update for UPV firmware version 1.4</p> <p>Added support for USB interface</p> <p>New Functions:</p> <pre> rsupv_SetDigitalGeneratorAddlImpairment rsupv_GetDigitalGeneratorAddlImpairment rsupv_ConfigureGeneratorI2S rsupv_SetI2SGeneratorSyncTo rsupv_GetI2SGeneratorSyncTo rsupv_SetI2SGeneratorWordLength rsupv_GetI2SGeneratorWordLength rsupv_SetI2SGeneratorSampleFrequency rsupv_GetI2SGeneratorSampleFrequency rsupv_SetI2SGeneratorMClockRatio rsupv_GetI2SGeneratorMClockRatio rsupv_SetI2SGeneratorAudioBits rsupv_GetI2SGeneratorAudioBits rsupv_SetI2SGeneratorFormat rsupv_GetI2SGeneratorFormat rsupv_SetI2SGeneratorFsyncShape rsupv_GetI2SGeneratorFsyncShape rsupv_SetI2SGeneratorFsyncPolarity rsupv_GetI2SGeneratorFsyncPolarity rsupv_SetI2SGeneratorWordOffset rsupv_GetI2SGeneratorWordOffset rsupv_SetGeneratorPhaseFile rsupv_SetGeneratorPlayScalePkToFS rsupv_GetGeneratorPlayScalePkToFS </pre>

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_SetGeneratorPlayChannel rsupv_GetGeneratorPlayChannel rsupv_SetGeneratorPlayMode rsupv_GetGeneratorPlayMode rsupv_SetGeneratorPlayTime rsupv_GetGeneratorPlayTime rsupv_SetGeneratorPlayShapeFile rsupv_SetGeneratorPlayAnalyzerLoopChannel rsupv_GetGeneratorPlayAnalyzerLoopChannel rsupv_SetGeneratorPlayAnalyzerLoopGain rsupv_GetGeneratorPlayAnalyzerLoopGain rsupv_SetGeneratorAmplitudeVariation rsupv_GetGeneratorAmplitudeVariation rsupv_SetGeneratorAVModulationFrequency rsupv_GetGeneratorAVModulationFrequency rsupv_SetGeneratorVariation rsupv_GetGeneratorVariation rsupv_SetI2SAnalyzerWordLength rsupv_GetI2SAnalyzerWordLength rsupv_SetI2SAnalyzerFormat rsupv_GetI2SAnalyzerFormat rsupv_SetI2SAnalyzerFsyncSlope rsupv_GetI2SAnalyzerFsyncSlope rsupv_SetI2SAnalyzerWordOffset rsupv_GetI2SAnalyzerWordOffset rsupv_SetI2SAnalyzerInput rsupv_GetI2SAnalyzerInput rsupv_SetI2SAnalyzerChannelMode rsupv_GetI2SAnalyzerChannelMode rsupv_SetI2SAnalyzerSampleFrequency rsupv_GetI2SAnalyzerSampleFrequency rsupv_SetAnalyzerLevelMeasBandwidth rsupv_GetAnalyzerLevelMeasBandwidth rsupv_SetAnalyzerLevelMeasBandwidthValue rsupv_GetAnalyzerLevelMeasBandwidthValue rsupv_SetAnalyzerLevelMeasFrequencyMode rsupv_GetAnalyzerLevelMeasFrequencyMode rsupv_SetAnalyzerLevelMeasFrequencyValue rsupv_GetAnalyzerLevelMeasFrequencyValue rsupv_SetAnalyzerLevelMeasFrequencyFactor rsupv_GetAnalyzerLevelMeasFrequencyFactor

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_SetAnalyzerLevelMeasFrequencyStart rsupv_GetAnalyzerLevelMeasFrequencyStart rsupv_SetAnalyzerLevelMeasFrequencyStop rsupv_GetAnalyzerLevelMeasFrequencyStop rsupv_SetAnalyzerLevelDCMeasTime rsupv_GetAnalyzerLevelDCMeasTime rsupv_SetAnalyzerBargraphState rsupv_GetAnalyzerBargraphState rsupv_SetAnalyzerWaveformMonitorMeasMode rsupv_GetAnalyzerWaveformMonitorMeasMode rsupv_SetAnalyzerWaveformMonitorCompressionFactor rsupv_GetAnalyzerWaveformMonitorCompressionFactor rsupv_SetAnalyzerWaveformMonitorTraceLength rsupv_GetAnalyzerWaveformMonitorTraceLength rsupv_SetAnalyzerWaveformMonitorTriggerSource rsupv_GetAnalyzerWaveformMonitorTriggerSource rsupv_SetAnalyzerWaveformMonitorTriggerLevel rsupv_GetAnalyzerWaveformMonitorTriggerLevel rsupv_SetAnalyzerWaveformMonitorTriggerSlope rsupv_GetAnalyzerWaveformMonitorTriggerSlope rsupv_SetAnalyzerWaveformMonitorPretrigger rsupv_GetAnalyzerWaveformMonitorPretrigger rsupv_SetAnalyzerWaveformMonitorAutotrigger rsupv_GetAnalyzerWaveformMonitorAutotrigger rsupv_SetAnalyzerSNMeasMode rsupv_GetAnalyzerSNMeasMode rsupv_SetAnalyzerSNMeasTime rsupv_GetAnalyzerSNMeasTime rsupv_SetAnalyzerNOCTMeasMode rsupv_GetAnalyzerNOCTMeasMode rsupv_SetAnalyzerRecordFile rsupv_SetAnalyzerRecordLength rsupv_GetAnalyzerRecordLength rsupv_GetAnalyzerRecordFileLength rsupv_SetAnalyzerRecordTriggerSource rsupv_GetAnalyzerRecordTriggerSource rsupv_SetAnalyzerRecordTriggerLevel rsupv_GetAnalyzerRecordTriggerLevel rsupv_SetAnalyzerRecordTriggerSlope rsupv_GetAnalyzerRecordTriggerSlope rsupv_SetAnalyzerRecordPretrigger

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_GetAnalyzerRecordPretrigger rsupv_SetProtocolAnalysisState rsupv_GetProtocolAnalysisState rsupv_SetProtocolAnalysisDisplayState rsupv_GetProtocolAnalysisDisplayState rsupv_SetProtocolAnalysisDisplayStyle rsupv_GetProtocolAnalysisDisplayStyle rsupv_SetProtocolAnalysisHighlight rsupv_GetProtocolAnalysisHighlight rsupv_SetProtocolAnalysisPersistence rsupv_GetProtocolAnalysisPersistence rsupv_SetProtocolAnalysisViewMode rsupv_GetProtocolAnalysisViewMode rsupv_GetProtocolAnalysisChannelByte rsupv_SetAuxAudioMonitor rsupv_GetAuxAudioMonitor rsupv_SetAuxPhoneState rsupv_GetAuxPhoneState rsupv_SetAuxPhonePermanentState rsupv_GetAuxPhonePermanentState rsupv_SetAuxTriggerInputEnable rsupv_GetAuxTriggerInputEnable rsupv_SetAuxTriggerInputMode rsupv_GetAuxTriggerInputMode rsupv_SetAuxTriggerInputEdge rsupv_GetAuxTriggerInputEdge rsupv_SetAuxTriggerOutputEnable rsupv_GetAuxTriggerOutputEnable rsupv_SetAuxTriggerOutputMode rsupv_GetAuxTriggerOutputMode rsupv_SetAuxTriggerOutputFrequency rsupv_GetAuxTriggerOutputFrequency rsupv_SetAuxTriggerOutputEdge rsupv_GetAuxTriggerOutputEdge rsupv_SetSwitcherState rsupv_GetSwitcherState rsupv_SetSwitcherTracking rsupv_GetSwitcherTracking rsupv_SetSwitcherOffset rsupv_GetSwitcherOffset rsupv_SetSwitcherInput

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_GetSwitcherInput rsupv_SetSwitcherOutput rsupv_GetSwitcherOutput rsupv_SetProtocolGeneratorCodingMode rsupv_GetProtocolGeneratorCodingMode rsupv_SetProtocolGeneratorCRC rsupv_GetProtocolGeneratorCRC rsupv_SetProtocolGeneratorValidity rsupv_GetProtocolGeneratorValidity rsupv_SetProtocolGeneratorAllBitsToZero rsupv_SetProtocolGeneratorChannelByte rsupv_GetProtocolGeneratorChannelByte rsupv_SetProtocolGeneratorChannels rsupv_GetProtocolGeneratorChannels rsupv_SetDisplayDataListFilter rsupv_GetDisplayDataListFilter rsupv_SetDisplayScanOffset rsupv_GetDisplayScanOffset rsupv_SetDisplaySweepYSource rsupv_GetDisplaySweepYSource rsupv_SetDisplayFFTGraphYSource rsupv_GetDisplayFFTGraphYSource rsupv_SetDisplayWaveformYSource rsupv_GetDisplayWaveformYSource rsupv_SetDisplayBargraphYSource rsupv_GetDisplayBargraphYSource rsupv_SetDisplayYSourceFile rsupv_SetDisplayTraceUpdate rsupv_GetDisplayTraceUpdate rsupv_SetDisplayReference rsupv_GetDisplayReference rsupv_SetDisplayReferenceValue rsupv_GetDisplayReferenceValue rsupv_SetDisplayReferenceFile rsupv_SetDisplayCopyReferenceSettings rsupv_GetDisplayCopyReferenceSettings rsupv_SetDisplayCopyScalingSettings rsupv_GetDisplayCopyScalingSettings rsupv_SetDisplayUnitFunctionTrack rsupv_GetDisplayUnitFunctionTrack rsupv_SetDisplayUnit

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_GetDisplayUnit rsupv_SetDisplayUnitAuto rsupv_GetDisplayUnitAuto rsupv_SetDisplayUnitUserString rsupv_GetDisplayUnitUserString rsupv_SetDisplayYAxisSpacing rsupv_GetDisplayYAxisSpacing rsupv_SetDisplayYAxisTop rsupv_GetDisplayYAxisTop rsupv_SetDisplayYAxisBottom rsupv_GetDisplayYAxisBottom rsupv_SetDisplayCopyLimitSettings rsupv_GetDisplayCopyLimitSettings rsupv_SetDisplayLimitState rsupv_GetDisplayLimitState rsupv_SetDisplayLimitSource rsupv_GetDisplayLimitSource rsupv_SetDisplayLimitSourceValue rsupv_GetDisplayLimitSourceValue rsupv_SetDisplayLimitSourceFilename rsupv_GetDisplayLimitSourceFilename rsupv_SetDisplayLimitShift rsupv_GetDisplayLimitShift rsupv_SetDisplayLimitShiftParallel rsupv_GetDisplayLimitShiftParallel rsupv_SetDisplayLimitShiftSymmetrical rsupv_GetDisplayLimitShiftSymmetrical rsupv_SetDisplaySweepGraphXSource rsupv_GetDisplaySweepGraphXSource rsupv_SetDisplaySweepGraphXAxis rsupv_GetDisplaySweepGraphXAxis rsupv_SetDisplayXAxisReferenceValue rsupv_GetDisplayXAxisReferenceValue rsupv_SetDisplayXAxisScaling rsupv_GetDisplayXAxisScaling rsupv_SetDisplayXAxisSpacing rsupv_GetDisplayXAxisSpacing rsupv_SetDisplayXAxisLeft rsupv_GetDisplayXAxisLeft rsupv_SetDisplayXAxisRight rsupv_GetDisplayXAxisRight

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_SetDisplayCursorState rsupv_GetDisplayCursorState rsupv_SetDisplayCursorMode rsupv_GetDisplayCursorMode rsupv_SetDisplayCursorAmplitude rsupv_SetDisplayCursorMoveTo rsupv_SetDisplayCursorXPosition rsupv_GetDisplayCursorXPosition rsupv_SetDisplayCursorYPosition rsupv_GetDisplayCursorYPosition rsupv_SetDisplayCursorMovement rsupv_GetDisplayCursorMovement rsupv_SetDisplayMarkerMode rsupv_GetDisplayMarkerMode rsupv_SetDisplayMarkerHarmonics rsupv_GetDisplayMarkerHarmonics rsupv_SetDisplayMarkerMoveTo rsupv_SetDisplayMarkerXPosition rsupv_GetDisplayMarkerXPosition rsupv_SetDisplayStoreTraceAs rsupv_GetDisplayStoreTraceAs rsupv_SetDisplayTraceSelect rsupv_GetDisplayTraceSelect rsupv_SetDisplayNormalizationFrequency rsupv_GetDisplayNormalizationFrequency rsupv_SetDisplayModifyEqu rsupv_GetDisplayModifyEqu rsupv_SetDisplayLimitOffset rsupv_GetDisplayLimitOffset rsupv_SetDisplayLimitOffsetValue rsupv_GetDisplayLimitOffsetValue rsupv_SetDisplayStoreTraceToFile rsupv_GetDisplayStoreTraceToFile rsupv_MeasurementControl rsupv_ReadTraceDataSets rsupv_WriteTraceDataSets rsupv_ReadTraceDataSetCount rsupv_ReadTraceDataList rsupv_ReadTraceDataListCount rsupv_SetHardcopySource rsupv_GetHardcopySource

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		<pre> rsupv_SetHardcopyDestination rsupv_GetHardcopyDestination rsupv_SetHardcopyOrientation rsupv_GetHardcopyOrientation rsupv_SetHardcopyStoreMode rsupv_GetHardcopyStoreMode rsupv_SetHardcopyFileName rsupv_GetHardcopyFileName rsupv_SetHardcopyHeaderFooterState rsupv_GetHardcopyHeaderFooterState rsupv_SetHardcopyDefineHeader rsupv_GetHardcopyDefineHeader rsupv_SetHardcopyDefineFooter rsupv_GetHardcopyDefineFooter rsupv_HardcopyImmediate rsupv_SetMemoryString rsupv_GetMemoryString rsupv_StoreMemoryDataNumeric rsupv_StoreMemoryDataBinary rsupv_ResetMemoryBuffers rsupv_SystemShutdown Modified Functions: rsupv_SetGeneratorInstrument rsupv_GetGeneratorInstrument rsupv_ConfigureGeneratorAnalog rsupv_SetGeneratorOutputType rsupv_GetGeneratorOutputType rsupv_SetGeneratorBandwidth rsupv_GetGeneratorBandwidth rsupv_SetGeneratorVoltageRange rsupv_SetGeneratorCrestFactor rsupv_GetGeneratorCrestFactor rsupv_SetGeneratorCrestFactorValue rsupv_GetGeneratorCrestFactorValue rsupv_SetGeneratorSweepXAxis rsupv_GetGeneratorSweepXAxis rsupv_SetGeneratorSweepZAxis rsupv_GetGeneratorSweepZAxis rsupv_SetGeneratorSweepSpacing rsupv_GetGeneratorSweepSpacing </pre>

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_SetGeneratorSweepStart rsupv_GetGeneratorSweepStart rsupv_SetGeneratorSweepStop rsupv_GetGeneratorSweepStop rsupv_SetGeneratorSweepPoints rsupv_GetGeneratorSweepPoints rsupv_SetGeneratorSweepSteps rsupv_GetGeneratorSweepSteps rsupv_SetGeneratorFilter rsupv_GetGeneratorFilter rsupv_SetGeneratorEqualizerFile rsupv_SetGeneratorFunction rsupv_GetGeneratorFunction rsupv_SetGeneratorRandomShape rsupv_GetGeneratorRandomShape rsupv_SetAnalyzerInstrument rsupv_GetAnalyzerInstrument rsupv_SetAnalyzerChannelInputRange rsupv_GetAnalyzerChannelInputRange rsupv_GetAnalyzerChannelInputRangeValue rsupv_SetDigitalAnalyzerAudioInput rsupv_SetAnalyzerSampleFrequency rsupv_GetAnalyzerSampleFrequency rsupv_SetAnalyzerStartCondition rsupv_GetAnalyzerStartCondition rsupv_SetAnalyzerFunction rsupv_GetAnalyzerFunction rsupv_ConfigureAnalyzerSweep rsupv_SetAnalyzerLevelMeasTime rsupv_GetAnalyzerLevelMeasTime rsupv_ConfigureAnalyzerPeakMeasurement rsupv_SetAnalyzerPeakMeasIntervalTime rsupv_GetAnalyzerPeakMeasIntervalTime rsupv_ConfigureAnalyzerFundamental rsupv_SetAnalyzerTHDFundamental rsupv_SetAnalyzerTHDNFrequencyLimUpp rsupv_SetAnalyzerLevelMonitor rsupv_SetAnalyzerPrefilter rsupv_GetAnalyzerPrefilter rsupv_SetAnalyzerFilter rsupv_GetAnalyzerFilter

Driver history for LabWindows/CVI and VXIplug&play driver for C#, C/C++, Visual Basic .NET, VEE, etc.

Revision	Date	Note
		rsupv_SetAnalyzerNotchFrequency rsupv_ConfigureAudioMonitoring rsupv_SetAuxSpeaker rsupv_GetAuxSpeaker rsupv_SetAuxPhoneOutput rsupv_GetAuxPhoneOutput rsupv_SetAuxAnalogOutput rsupv_GetAuxAnalogOutput rsupv_SetAnalyzerFrequencyPhaseReferenceValue rsupv_ReadMeasurementResult rsupv_SetDigitalGeneratorSampleFrequency rsupv_GetDigitalGeneratorSampleFrequency rsupv_SetAnalyzerPhaseUnit rsupv_GetAnalyzerPhaseUnit rsupv_error_query - SENS:DATA? sent prior to SYST:ERR? to switch to other parser - fixes the error read out bug rsupv_StartMeasurementWaitOPC
1.0.2	02/2006	Modifications - Changed help of rsupv_init() for LAN Interface
1.0.1	04/2005	Modifications - I/O conversion specification fixed: Input: "%le" Output: "%.12f" - System locale are set to default "C"
1.0	01/2005	Created.

About Rohde & Schwarz

Rohde & Schwarz is an independent group of companies specializing in electronics. It is a leading supplier of solutions in the fields of test and measurement, broadcasting, radiomonitoring and radiolocation, as well as secure communications. Established more than 80 years ago, Rohde & Schwarz has a global presence and a dedicated service network in over 70 countries. Company headquarters are in Munich, Germany.

Regional contact

Europe, Africa, Middle East

+49 1805 12 42 42* or +49 89 4129 137 74

customersupport@rohde-schwarz.com

North America

1-888-TEST-RSA (1-888-837-8772)

customer.support@rsa.rohde-schwarz.com

Latin America

+1-410-910-7988

customersupport.la@rohde-schwarz.com

Asia/Pacific

+65 65 13 04 88

customersupport.asia@rohde-schwarz.com

Certified Quality System
ISO 9001
DQS REG. NO 1954 QM

Rohde & Schwarz GmbH & Co. KG

Mühldorfstraße 15 | D - 81671 München

Phone + 49 89 4129 - 0 | Fax + 49 89 4129 – 13777

www.rohde-schwarz.com