

This manual applies to the following FSW models with firmware version 6.00 and later:

- R&S®FSW8 (1331.5003K08 / 1312.8000K08)
- R&S®FSW13 (1331.5003K13 / 1312.8000K13)
- R&S®FSW26 (1331.5003K26 / 1312.8000K26)
- R&S®FSW43 (1331.5003K43 / 1312.8000K43)
- R&S®FSW50 (1331.5003K50 / 1312.8000K50)
- R&S®FSW67 (1331.5003K67 / 1312.8000K67)
- R&S®FSW85 (1331.5003K85 / 1312.8000K85)

The following firmware options are described:

- FSW-K70 (1313.1416.02)
- FSW-K70P (1338.3893.xx)
- FSW-K70M (1338.4177.xx)

© 2024 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Rohde & Schwarz is under license.

CDMA2000® is a registered trademark of the Telecommunications Industry Association (TIA-USA).

DOCSIS® is a registered trademark of the Cable Television Laboratories, Inc.

All other trademarks are the properties of their respective owners.

1173.9292.02 | Version 39 | R&S®FSW-K70

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol, e.g. R&S®FSW is indicated as R&S FSW. R&S®SMW200A is indicated as R&S SMW200A.

Contents

| | | |
|----------|--|-----------|
| 1 | Documentation overview..... | 11 |
| 1.1 | Getting started manual..... | 11 |
| 1.2 | User manuals and help..... | 11 |
| 1.3 | Service manual..... | 11 |
| 1.4 | Instrument security procedures..... | 12 |
| 1.5 | Printed safety instructions..... | 12 |
| 1.6 | Specifications and brochures..... | 12 |
| 1.7 | Release notes and open-source acknowledgment (OSA)..... | 12 |
| 1.8 | Application notes, application cards, white papers, etc..... | 13 |
| 1.9 | Videos..... | 13 |
| 2 | Welcome to the R&S FSW VSA application..... | 14 |
| 2.1 | Introduction to vector signal analysis..... | 15 |
| 2.2 | Starting the VSA application..... | 16 |
| 2.3 | Understanding the display information..... | 16 |
| 3 | Measurements and result displays..... | 19 |
| 3.1 | Evaluation data sources in VSA..... | 19 |
| 3.2 | Result types in VSA..... | 23 |
| 3.2.1 | Bit error rate (BER)..... | 25 |
| 3.2.2 | Channel frequency response group delay..... | 27 |
| 3.2.3 | Channel frequency response magnitude..... | 28 |
| 3.2.4 | Constellation frequency..... | 29 |
| 3.2.5 | Constellation I/Q..... | 29 |
| 3.2.6 | Constellation I/Q (rotated)..... | 31 |
| 3.2.7 | Error vector magnitude (EVM)..... | 32 |
| 3.2.8 | Eye diagram frequency..... | 33 |
| 3.2.9 | Eye diagram imag (Q)..... | 34 |
| 3.2.10 | Eye diagram real (I)..... | 36 |
| 3.2.11 | Frequency absolute..... | 37 |
| 3.2.12 | Frequency relative..... | 38 |
| 3.2.13 | Frequency error absolute..... | 39 |
| 3.2.14 | Frequency error relative..... | 41 |

| | | |
|------------|--|-----------|
| 3.2.15 | Frequency response group delay..... | 42 |
| 3.2.16 | Frequency response magnitude..... | 43 |
| 3.2.17 | Frequency response phase..... | 43 |
| 3.2.18 | Impulse response magnitude..... | 44 |
| 3.2.19 | Impulse response phase..... | 45 |
| 3.2.20 | Impulse response real/imag..... | 46 |
| 3.2.21 | Magnitude absolute..... | 46 |
| 3.2.22 | Magnitude overview (capture buffer)..... | 48 |
| 3.2.23 | Magnitude relative..... | 49 |
| 3.2.24 | Magnitude error..... | 50 |
| 3.2.25 | Phase error..... | 51 |
| 3.2.26 | Phase wrap..... | 52 |
| 3.2.27 | Phase unwrap..... | 53 |
| 3.2.28 | Real/imag (I/Q)..... | 54 |
| 3.2.29 | Result summary..... | 55 |
| 3.2.30 | Spectrum (capture buffer + error)..... | 58 |
| 3.2.31 | Spectrum (measurement + error)..... | 60 |
| 3.2.32 | Symbol table..... | 61 |
| 3.2.33 | Vector frequency..... | 63 |
| 3.2.34 | Vector I/Q..... | 63 |
| 3.3 | Predefined display configuration..... | 65 |
| 3.4 | Common parameters in VSA..... | 66 |
| 4 | Measurement basics..... | 68 |
| 4.1 | Filters and bandwidths during signal processing..... | 68 |
| 4.1.1 | I/Q bandwidth..... | 69 |
| 4.1.2 | Demodulation bandwidth (measurement bandwidth)..... | 70 |
| 4.1.3 | Modulation and demodulation filters..... | 70 |
| 4.1.4 | Measurement filters..... | 71 |
| 4.1.5 | Customized filters..... | 73 |
| 4.2 | Sample rate, symbol rate and I/Q bandwidth..... | 75 |
| 4.2.1 | Sample rate and maximum usable I/Q bandwidth for RF input..... | 76 |
| 4.2.2 | Sample rates and bandwidths for digital I/Q data..... | 95 |
| 4.3 | Symbol mapping..... | 97 |

| | | |
|-------------|--|------------|
| 4.3.1 | Phase shift keying (PSK)..... | 98 |
| 4.3.2 | Rotating PSK..... | 102 |
| 4.3.3 | Differential PSK..... | 105 |
| 4.3.4 | Rotating differential PSK modulation..... | 106 |
| 4.3.5 | Offset QPSK..... | 108 |
| 4.3.6 | Shaped offset QPSK..... | 109 |
| 4.3.7 | Frequency shift keying (FSK)..... | 110 |
| 4.3.8 | Minimum shift keying (MSK)..... | 115 |
| 4.3.9 | Quadrature amplitude modulation (QAM)..... | 116 |
| 4.3.10 | ASK..... | 128 |
| 4.3.11 | APSK..... | 129 |
| 4.3.12 | User-defined modulation..... | 130 |
| 4.4 | Overview of the demodulation process..... | 131 |
| 4.4.1 | Burst search..... | 134 |
| 4.4.2 | I/Q pattern search..... | 135 |
| 4.4.3 | Demodulation and symbol decisions..... | 136 |
| 4.4.4 | Pattern symbol check..... | 139 |
| 4.4.5 | Synchronization and the reference signal..... | 140 |
| 4.4.6 | The equalizer..... | 142 |
| 4.5 | Signal model, estimation and modulation errors..... | 144 |
| 4.5.1 | PSK, QAM and MSK modulation..... | 145 |
| 4.5.2 | FSK modulation..... | 156 |
| 4.6 | Measurement ranges..... | 161 |
| 4.6.1 | Result range..... | 162 |
| 4.6.2 | Evaluation range..... | 164 |
| 4.7 | Display points vs estimation points per symbol..... | 166 |
| 4.8 | Capture buffer display..... | 167 |
| 4.9 | Known data files - dependencies and restrictions..... | 169 |
| 4.10 | Known data from PRBS generators..... | 170 |
| 4.11 | Multi-modulation analysis (FSW-K70M)..... | 172 |
| 4.12 | VSA in MSRA/MSRT operating mode..... | 178 |
| 5 | Configuration..... | 180 |
| 5.1 | Configuration overview..... | 180 |

| | |
|--|------------|
| 5.2 Configuration according to digital standards..... | 184 |
| 5.3 Signal description..... | 186 |
| 5.3.1 Modulation..... | 186 |
| 5.3.2 Signal structure..... | 190 |
| 5.3.3 Frame structure..... | 193 |
| 5.3.4 Known data..... | 201 |
| 5.4 Input, output and frontend settings..... | 204 |
| 5.4.1 Input settings..... | 204 |
| 5.4.2 Output settings..... | 210 |
| 5.4.3 Digital I/Q output settings..... | 214 |
| 5.4.4 Digital I/Q 40G output settings..... | 216 |
| 5.4.5 Frequency settings..... | 217 |
| 5.4.6 Amplitude and vertical axis configuration..... | 219 |
| 5.5 Signal capture..... | 230 |
| 5.5.1 Data acquisition..... | 230 |
| 5.5.2 Trigger settings..... | 232 |
| 5.5.3 Sweep settings..... | 240 |
| 5.6 Burst and pattern configuration..... | 243 |
| 5.6.1 Burst search..... | 243 |
| 5.6.2 Pattern search..... | 245 |
| 5.6.3 Pattern configuration..... | 247 |
| 5.6.4 Pattern definition..... | 250 |
| 5.7 Result range configuration..... | 253 |
| 5.8 Demodulation settings..... | 255 |
| 5.8.1 Demodulation - compensation and equalizer..... | 255 |
| 5.8.2 Advanced demodulation (synchronization)..... | 259 |
| 5.9 Measurement filter settings..... | 263 |
| 5.10 Evaluation range configuration..... | 265 |
| 5.11 Adjusting settings automatically..... | 266 |
| 5.12 Restoring factory settings for vector signal analysis..... | 268 |
| 6 Analysis..... | 270 |
| 6.1 Trace settings..... | 270 |
| 6.2 Trace export settings..... | 275 |

| | | |
|------------|---|------------|
| 6.3 | Markers..... | 277 |
| 6.3.1 | Individual marker settings..... | 277 |
| 6.3.2 | Marker search settings..... | 279 |
| 6.3.3 | Marker positioning functions..... | 280 |
| 6.4 | Limit and display lines..... | 281 |
| 6.4.1 | Display lines for eye diagrams..... | 281 |
| 6.4.2 | Modulation accuracy limit lines..... | 283 |
| 6.5 | Display and window configuration..... | 285 |
| 6.5.1 | Result window configuration..... | 286 |
| 6.6 | Analysis in MSRA/MSRT mode..... | 289 |
| 7 | I/Q data import and export..... | 291 |
| 8 | How to perform vector signal analysis..... | 292 |
| 8.1 | How to perform VSA according to digital standards..... | 292 |
| 8.2 | How to perform customized VSA measurements..... | 294 |
| 8.2.1 | How to define the result range..... | 295 |
| 8.2.2 | How to select user-defined filters..... | 296 |
| 8.2.3 | How to perform pattern searches..... | 297 |
| 8.2.4 | How to work with known data files..... | 302 |
| 8.2.5 | How to work with PRBS as known data..... | 305 |
| 8.3 | How to analyze the measured data..... | 306 |
| 8.3.1 | How to change the display scaling..... | 307 |
| 8.3.2 | How to measure the size of an eye..... | 310 |
| 8.3.3 | How to check limits for modulation accuracy..... | 311 |
| 8.3.4 | How to export the trace data to a file..... | 312 |
| 9 | Measurement examples..... | 313 |
| 9.1 | Connecting the transmitter and analyzer..... | 313 |
| 9.2 | Measurement example 1: continuous QPSK signal..... | 314 |
| 9.2.1 | Transmitter settings..... | 314 |
| 9.2.2 | Analyzer settings..... | 315 |
| 9.2.3 | Changing the display configuration..... | 316 |
| 9.2.4 | Navigating through the capture buffer..... | 317 |
| 9.2.5 | Averaging several evaluations..... | 318 |

| | | |
|-------------|---|------------|
| 9.3 | Measurement example 2: burst GSM EDGE signals..... | 319 |
| 9.3.1 | Transmitter settings..... | 319 |
| 9.3.2 | Analyzer settings..... | 321 |
| 9.3.3 | Navigating through the capture buffer..... | 322 |
| 9.3.4 | Evaluating the rising and falling edges..... | 323 |
| 9.3.5 | Setting the evaluation range..... | 324 |
| 9.3.6 | Comparing the measurement signal to the reference signal..... | 325 |
| 10 | Troubleshooting the measurement..... | 327 |
| 10.1 | Flow chart for troubleshooting..... | 327 |
| 10.2 | Explanation of status bar messages..... | 329 |
| 10.3 | Frequently asked questions..... | 338 |
| 10.3.1 | Issues with graphical results..... | 338 |
| 10.3.2 | Issues with numeric results..... | 343 |
| 10.3.3 | Synchronization and demodulation problems..... | 347 |
| 10.3.4 | Other measurement issues..... | 348 |
| 11 | Remote commands for VSA..... | 350 |
| 11.1 | Introduction..... | 351 |
| 11.1.1 | Conventions used in descriptions..... | 351 |
| 11.1.2 | Long and short form..... | 352 |
| 11.1.3 | Numeric suffixes..... | 352 |
| 11.1.4 | Optional keywords..... | 352 |
| 11.1.5 | Alternative keywords..... | 353 |
| 11.1.6 | SCPI parameters..... | 353 |
| 11.2 | Common suffixes..... | 355 |
| 11.3 | Activating vector signal analysis..... | 356 |
| 11.4 | Digital standards..... | 360 |
| 11.5 | Configuring VSA..... | 362 |
| 11.5.1 | Signal description..... | 362 |
| 11.5.2 | Input, output and frontend settings..... | 390 |
| 11.5.3 | Signal capture..... | 470 |
| 11.5.4 | Triggering measurements..... | 474 |
| 11.5.5 | Configuring sweeps..... | 481 |
| 11.5.6 | Configuring bursts and patterns..... | 482 |

| | | |
|--------------|---|------------|
| 11.5.7 | Defining the result range..... | 490 |
| 11.5.8 | Demodulation settings..... | 492 |
| 11.5.9 | Measurement filter settings..... | 502 |
| 11.5.10 | Defining the evaluation range..... | 504 |
| 11.5.11 | Adjusting settings automatically..... | 505 |
| 11.6 | Performing a measurement..... | 508 |
| 11.7 | Analysis..... | 513 |
| 11.7.1 | Configuring traces..... | 514 |
| 11.7.2 | Working with markers..... | 517 |
| 11.7.3 | Configuring display lines for eye diagrams..... | 529 |
| 11.7.4 | Configuring modulation accuracy limit lines..... | 533 |
| 11.7.5 | Configuring an analysis interval and line (MSRA mode only)..... | 539 |
| 11.7.6 | Configuring an analysis interval and line (MSRT mode only)..... | 541 |
| 11.8 | Configuring the result display..... | 543 |
| 11.8.1 | General window commands..... | 543 |
| 11.8.2 | Working with windows in the display..... | 544 |
| 11.8.3 | VSA window configuration..... | 552 |
| 11.9 | Retrieving results..... | 559 |
| 11.9.1 | Retrieving trace data and marker values..... | 560 |
| 11.9.2 | Measurement results for TRACe<n>[:DATA]? TRACE<n>..... | 565 |
| 11.9.3 | Retrieving general burst and pattern information..... | 568 |
| 11.9.4 | Retrieving parameter values..... | 573 |
| 11.9.5 | Retrieving limit check results..... | 588 |
| 11.10 | Importing and exporting I/Q data and results..... | 589 |
| 11.11 | Status reporting system..... | 591 |
| 11.11.1 | STATus:QUESTionable:SYNC<n> register..... | 594 |
| 11.11.2 | STATus:QUESTionable:MODulation<n> register..... | 594 |
| 11.11.3 | STATus:QUESTionable:MODulation<n>:EVM register..... | 594 |
| 11.11.4 | STATus:QUESTionable:MODulation<n>:PHASe register..... | 595 |
| 11.11.5 | STATus:QUESTionable:MODulation<n>:MAGnitude register..... | 595 |
| 11.11.6 | STATus:QUESTionable:MODulation<n>:CFRequency register..... | 596 |
| 11.11.7 | STATus:QUESTionable:MODulation<n>:IQRHO register..... | 596 |
| 11.11.8 | STATus:QUESTionable:MODulation<n>:FSK register..... | 597 |

| | | |
|--------------|--|------------|
| 11.11.9 | Querying the status registers..... | 597 |
| 11.12 | Deprecated commands..... | 602 |
| 11.13 | Programming examples..... | 603 |
| 11.13.1 | Measurement example 1: user-defined measurement of continuous QPSK signal.... | 604 |
| 11.13.2 | Measurement example 2: GSM EDGE burst measurement based on a digital standard | 606 |
| 11.13.3 | Measurement example 3: user-defined pattern search and limit check..... | 609 |
| | Annex..... | 612 |
| A | Abbreviations..... | 612 |
| B | Predefined standards and settings..... | 613 |
| C | Predefined measurement and tx filters..... | 622 |
| C.1 | Transmit filters..... | 622 |
| C.2 | Measurement filters..... | 623 |
| C.3 | Typical combinations of tx and measurement filters..... | 624 |
| D | ASCII file export format for VSA data..... | 625 |
| E | Known data file syntax description..... | 627 |
| F | Formulae..... | 629 |
| F.1 | Trace-based evaluations..... | 629 |
| F.2 | Result summary evaluations..... | 631 |
| F.2.1 | PSK, QAM and MSK modulation..... | 631 |
| F.2.2 | FSK modulation..... | 633 |
| F.3 | Statistical evaluations for the result summary..... | 634 |
| F.4 | Trace averaging..... | 634 |
| F.5 | Analytically calculated filters..... | 635 |
| F.6 | Standard-specific filters..... | 636 |
| F.6.1 | Transmit filter..... | 636 |
| F.6.2 | Measurement filter..... | 636 |
| | List of Commands (VSA)..... | 643 |
| | Index..... | 657 |

1 Documentation overview

This section provides an overview of the FSW user documentation. Unless specified otherwise, you find the documents at:

www.rohde-schwarz.com/manual/FSW

Further documents are available at:

www.rohde-schwarz.com/product/FSW

1.1 Getting started manual

Introduces the FSW and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc.

A printed version is delivered with the instrument. A PDF version is available for download on the Internet.

1.2 User manuals and help

Separate user manuals are provided for the base unit and the firmware applications:

- Base unit manual
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- Firmware application manual
Contains the description of the specific functions of a firmware application, including remote control commands. Basic information on operating the FSW is not included.

The contents of the user manuals are available as help in the FSW. The help offers quick, context-sensitive access to the complete information for the base unit and the firmware applications.

All user manuals are also available for download or for immediate display on the Internet.

1.3 Service manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

<https://gloris.rohde-schwarz.com>

1.4 Instrument security procedures

Deals with security issues when working with the FSW in secure areas. It is available for download on the internet.

1.5 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

1.6 Specifications and brochures

The specifications document, also known as the data sheet, contains the technical specifications of the FSW. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/FSW

1.7 Release notes and open-source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The firmware makes use of several valuable open source software packages. An open-source acknowledgment document provides verbatim license texts of the used open source software.

See www.rohde-schwarz.com/firmware/FSW

1.8 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/FSW

1.9 Videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>

2 Welcome to the R&S FSW VSA application

The R&S FSW-K70 is a firmware application that adds functionality to perform vector signal analysis (VSA) to the FSW.

The R&S FSW VSA application performs vector and scalar measurements on digitally modulated single-carrier signals. To perform the measurements, it converts RF signals into the complex baseband. The R&S FSW VSA application can also use the optional "Digital Baseband" interface or the optional "Analog Baseband" interface to analyze I/Q signals already delivered to the complex baseband.

Use of an optional external mixer is also supported.

Use of an optional external frontend is also supported.

The R&S FSW VSA application features:

- Flexible modulation analysis from MSK to 1024QAM
- Numerous standard-specific default settings
- Various graphical, numerical and statistical evaluations and result displays
- Spectrum analyses of the measurement and error signal
- Flexible burst search for the analysis of complex signal combinations, short bursts or signal mix

This user manual contains a description of the functionality that the application provides, including remote control operation.

General FSW functions

The application-independent functions for general tasks on the FSW are also available for VSA measurements and are described in the FSW user manual. In particular, this comprises the following functionality:

- Data management
- Test report functionality
- General software preferences and information

The latest version is available for download at the product homepage

<http://www.rohde-schwarz.com/product/FSW.html>.

Additional information

Several application notes discussing vector signal analysis using the R&S FSW VSA application are available from the Rohde & Schwarz website:

[1EF93: Modulation Accuracy Measurements of DVB-S2 and DVB-S2X Signals](#)

[1EF55: EVM Measurements for ZigBee signals in the 2.4 GHz band](#)

[1MA171: How to use Rohde & Schwarz Instruments in MATLAB](#)

Installation

You can find detailed installation instructions in the FSW Getting Started manual or in the Release Notes.

- [Introduction to vector signal analysis](#)..... 15
- [Starting the VSA application](#)..... 16
- [Understanding the display information](#)..... 16

2.1 Introduction to vector signal analysis

The goal of vector signal analysis is to determine the quality of the signal that is transmitted by the device under test (DUT) by comparing it against an ideal signal. The DUT is usually connected with the analyzer via a cable. The key task of the analyzer is to determine the ideal signal. Hence, the analyzer aims to reconstruct the ideal signal from the measured signal that is transmitted by the DUT. This ideal signal is commonly referred to as the *reference signal*, while the signal from the DUT is called the *measurement signal*.

After extracting the reference signal, the R&S FSW VSA application compares the measurement signal and the reference signal, and the results of this comparison are displayed.

Example:

The most common vector signal analysis measurement is the EVM ("Error Vector Magnitude") measurement. Here, the complex baseband reference signal is subtracted from the complex baseband measurement signal. The magnitude of this error vector represents the EVM value. The EVM has the advantage that it "summarizes" all potential errors and distortions in one single value. If the EVM value is low, the signal quality of the DUT is high.

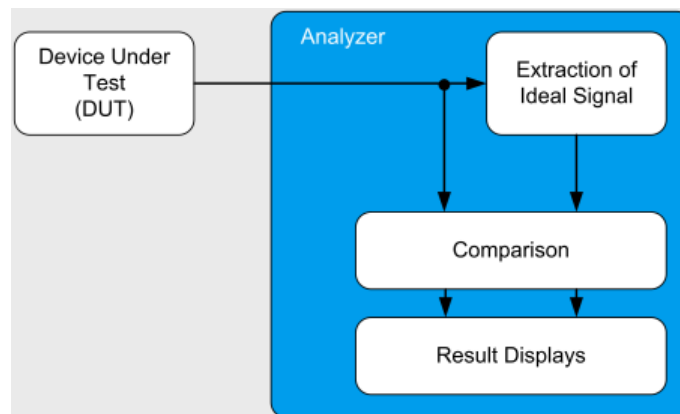


Figure 2-1: Simplified schema of vector signal analysis

2.2 Starting the VSA application

 
The VSA application adds a new application to the FSW.

To activate the VSA application

1. Select [MODE].

A dialog box opens that contains all operating modes and applications currently available on your FSW.

2. Select the "VSA" item.

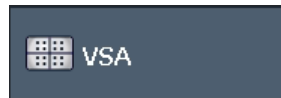

The FSW opens a new measurement channel for the VSA application.


The measurement is started immediately with the default settings. It can be configured in the VSA "Overview" dialog box, which is displayed when you select "Overview" from any menu (see [Chapter 5.1, "Configuration overview"](#), on page 180).

Multiple Measurement Channels and Sequencer Function

When you activate an application, a new measurement channel is created which determines the measurement settings for that application. The same application can be activated with different measurement settings by creating several channels for the same application.

The number of channels that can be configured at the same time depends on the available memory on the instrument.


Only one measurement can be performed at any time, namely the one in the currently active channel. However, to perform the configured measurements consecutively, a Sequencer function is provided.

If activated, the measurements configured in the currently active channels are performed one after the other in the order of the tabs. The currently active measurement is indicated by a  symbol in the tab label. The result displays of the individual channels are updated in the tabs (as well as the "MultiView") as the measurements are performed. Sequential operation itself is independent of the currently *displayed* tab.

For details on the Sequencer function, see the FSW User Manual.

2.3 Understanding the display information

The following figure shows a measurement diagram during analyzer operation. All different information areas are labeled. They are explained in more detail in the following sections.

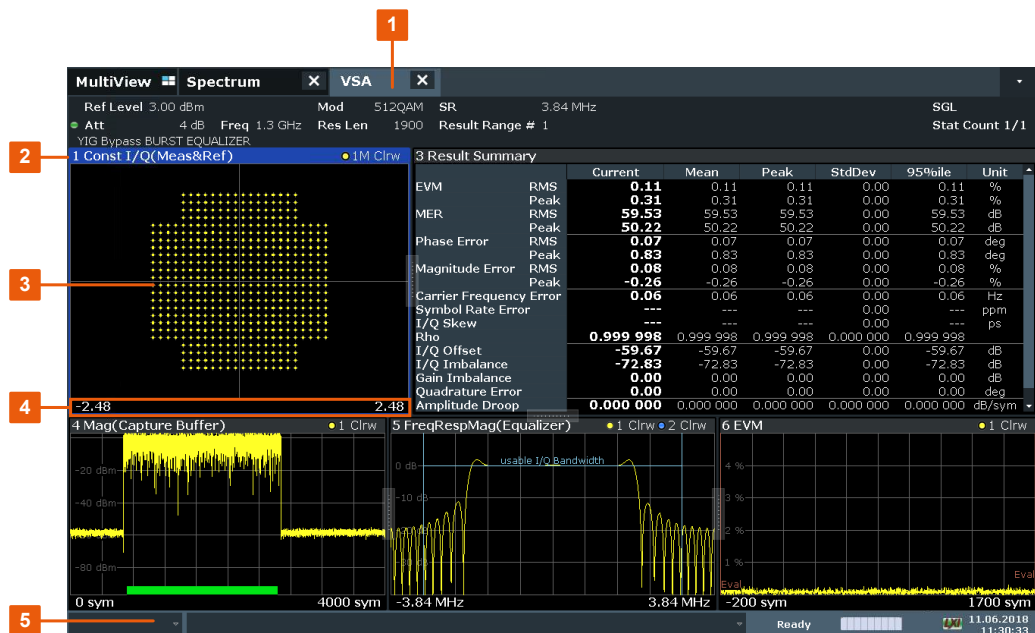

- 1 = Channel bar for firmware and measurement settings
- 2 = Window title bar with diagram-specific (trace) information
- 3 = Diagram area
- 4 = Diagram footer with diagram-specific information, depending on measurement application
- 5 = Instrument status bar with error messages, progress bar and date/time display

Channel bar information

In VSA application, the FSW shows the following settings:

Table 2-1: Information displayed in the channel bar in VSA application

| | |
|-----------|---|
| Ref Level | Reference level |
| Offset | Reference level offset (if not 0) |
| Cap Len | Capture Length (instead of result length for "Capture Buffer" display), see "Capture Length Settings" on page 231 |
| Std/Mod | Selected measurement standard or, if no standard selected, modulation type or loaded user-defined modulation file |
| Res Len | Result Length |
| Att | Mechanical and electronic RF attenuation |
| Freq | Center frequency for the RF signal |
| SR | Symbol Rate |
| Tx filter | Transmit filter, see "Transmit Filter Type" on page 189 |
| Res Rng # | Number of the selected result range for burst signals, see Chapter 4.6.1, "Result range", on page 162 |
| Count | Statistics count for averaging and other statistical operations, see "Statistic Count" on page 242; cannot be edited directly |

| | |
|------------------|--|
| Input | Input type of the signal source See Chapter 5.4.1, "Input settings" , on page 204 |
| Burst | Burst search active (see "Enabling Burst Searches" on page 244) |
| Pattern | Pattern search active (see "Enabling Pattern Searches" on page 246) |
| Equalizer | "Equalizer" active (see "State" on page 258) |
| SGL | The sweep is set to single sweep mode. |

In addition, the channel bar also displays information on instrument settings that affect the measurement results even though this is not immediately apparent from the display of the measured values (e.g. transducer or trigger settings). This information is displayed only when applicable for the current measurement.

For details see the FSW Getting Started manual.

Window title bar information

For each diagram, the header provides the following information:



Figure 2-2: Window title bar information in VSA application

- 1 = Window name
- 2 = Result type
- 3 = Data source type
- 4 = Trace color
- 5 = Trace number
- 6 = Displayed signal for Meas&Ref or multi data source: "M" (Meas), "R" (Ref), "C" (Capture buffer), "E" (Error)
- 7 = Trace mode

Diagram area

The diagram area displays the results according to the selected result displays (see [Chapter 3, "Measurements and result displays"](#), on page 19).

Diagram footer information

The diagram footer (beneath the diagram) contains the start and stop symbols or time of the evaluation range.

Status bar information

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram. Furthermore, the progress of the current operation is displayed in the status bar.

3 Measurements and result displays

Various different result displays for VSA measurements are available. Which result types are available depends on the selected data source. You can define which part of the measured signal is to be evaluated and displayed.

The determined result and evaluation ranges are included in the result displays (where useful) to visualize the basis of the displayed values and traces.

For background information on the result and evaluation ranges, see [Chapter 4.6, "Measurement ranges"](#), on page 161.)

- [Evaluation data sources in VSA](#).....19
- [Result types in VSA](#).....23
- [Predefined display configuration](#).....65
- [Common parameters in VSA](#).....66


3.1 Evaluation data sources in VSA

All data sources for evaluation available for VSA are displayed in the evaluation bar in SmartGrid mode.

The data source determines which result types are available (see [Table 3-1](#)). For details on selecting the data source for evaluation, see [Chapter 6.5, "Display and window configuration"](#), on page 285.



In diagrams in the frequency domain (Spectrum transformation, see ["Result Type Transformation"](#) on page 287) the usable I/Q bandwidth is indicated by vertical blue lines.

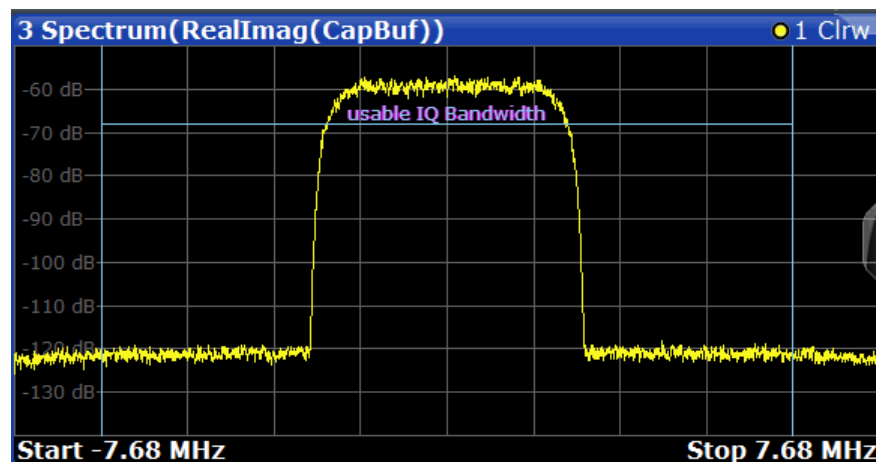

- [Capture Buffer](#).....20
- [Measurement & Reference Signal](#).....20
- [Symbols](#).....21
- [Error Vector](#).....21

| | |
|--------------------------|----|
| Modulation Errors..... | 21 |
| Modulation Accuracy..... | 22 |
| Equalizer..... | 22 |
| Multi Source..... | 23 |

Capture Buffer

Displays the captured I/Q data.

In "Capture Buffer" result diagrams, the result ranges are indicated by green bars along the time axis. The currently displayed result range is indicated by a blue bar.

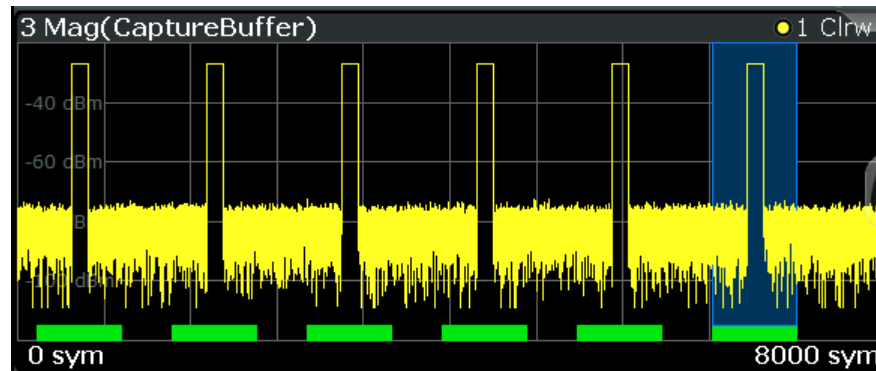


Figure 3-1: Result ranges for a burst signal

Note: You can use the "Capture Buffer" display to navigate through the available result ranges (using [Select Result Rng](#) function), and analyze the individual result ranges in separate windows.

Once the sweep has stopped, you can change the position of the result range quickly and easily. Drag the blue bar representing the result range to a different position in the "Capture Buffer".

If the optional 2 GHz / 5 GHz bandwidth extension (B2000/B5000) is active, the capture buffer is restricted to 256 000 samples; thus, all data is included in one single range.

The default result type is "Magnitude Absolute".

The following result types are available:

- [Chapter 3.2.21, "Magnitude absolute"](#), on page 46
- [Chapter 3.2.22, "Magnitude overview \(capture buffer\)"](#), on page 48
- [Chapter 3.2.28, "Real/imag \(I/Q\)"](#), on page 54
- [Chapter 3.2.11, "Frequency absolute"](#), on page 37
- [Chapter 3.2.34, "Vector I/Q"](#), on page 63

Remote command:

LAY:ADD? '1',BEL,TCAP(see [LAYout:ADD\[:WINDow\]?](#) on page 545)

Measurement & Reference Signal

The measurement signal or the ideal reference signal (or both)

The default result type is "Magnitude Relative".

The following result types are available:

- [Chapter 3.2.21, "Magnitude absolute"](#), on page 46
- [Chapter 3.2.23, "Magnitude relative"](#), on page 49

- [Chapter 3.2.26, "Phase wrap"](#), on page 52
- [Chapter 3.2.27, "Phase unwrap"](#), on page 53
- [Chapter 3.2.11, "Frequency absolute"](#), on page 37
- [Chapter 3.2.12, "Frequency relative"](#), on page 38
- [Chapter 3.2.28, "Real/imag \(I/Q\)"](#), on page 54
- [Chapter 3.2.10, "Eye diagram real \(I\)"](#), on page 36
- [Chapter 3.2.9, "Eye diagram imag \(Q\)"](#), on page 34
- [Chapter 3.2.8, "Eye diagram frequency"](#), on page 33
- [Chapter 3.2.5, "Constellation I/Q"](#), on page 29
- [Chapter 3.2.34, "Vector I/Q"](#), on page 63
- [Chapter 3.2.4, "Constellation frequency"](#), on page 29
- [Chapter 3.2.33, "Vector frequency"](#), on page 63

Remote command:

LAY:ADD? '1',BEL,REF(see [LAYout:ADD\[:WINDow\]?](#) on page 545)

Symbols

The detected symbols (i.e. the detected bits) displayed in a table.

The default result type is a hexadecimal symbol table.

Other formats for the symbol table are available, but no other result types (see [Chapter 3.2.32, "Symbol table"](#), on page 61).

Remote command:

LAY:ADD? '1',BEL,SYMB(see [LAYout:ADD\[:WINDow\]?](#) on page 545)

Error Vector

The modulated difference between the complex measurement signal and the complex reference signal:

Modulation (measurement signal - reference signal)

For example: $EVM = \text{Mag}(\text{meas} - \text{ref})$

The default result type is "EVM".

The following result types are available:

- [Chapter 3.2.7, "Error vector magnitude \(EVM\)"](#), on page 32
- [Chapter 3.2.28, "Real/imag \(I/Q\)"](#), on page 54
- [Chapter 3.2.34, "Vector I/Q"](#), on page 63

Remote command:

LAY:ADD? '1',BEL,EVEC(see [LAYout:ADD\[:WINDow\]?](#) on page 545)

Modulation Errors

The difference between the modulated complex samples in the measurement and the modulated reference signal:

Modulation (measurement signal) - Modulation (reference signal)

For example: $\text{Magnitude Error} = \text{Mag}(\text{meas}) - \text{Mag}(\text{ref})$

The default result type is "Magnitude Error".

The following result types are available:

- [Chapter 3.2.21, "Magnitude absolute"](#), on page 46
- [Chapter 3.2.25, "Phase error"](#), on page 51
- [Chapter 3.2.13, "Frequency error absolute"](#), on page 39

- [Chapter 3.2.14, "Frequency error relative"](#), on page 41

Remote command:

LAY:ADD? '1',BEL,MERR(see [LAYout:ADD\[:WINDow\]?](#) on page 545)

Modulation Accuracy

Parameters that characterize the accuracy of modulation.

The default result type is "Result Summary".

The following result types are available:

- [Chapter 3.2.29, "Result summary"](#), on page 55
- [Chapter 3.2.1, "Bit error rate \(BER\)"](#), on page 25

The results of a "modulation accuracy" measurement can be checked for violation of defined limits automatically. If limit check is activated and the measured values exceed the limits, those values are indicated in red in the "Result Summary" table. If limit check is activated and no values exceed the limits, the checked values are indicated in green.

| 1 Result Summary | | Current | Peak | Unit |
|-------------------------|------|-----------|-----------|--------|
| *EVM | RMS | 12.59* | 12.59 | % |
| * | Peak | 103.31* | 103.31 | % |
| MER | RMS | 18.00 | 18.00 | dB |
| | Peak | -0.28 | -0.28 | dB |
| Phase Error | RMS | 6.62 | 6.62 | deg |
| | Peak | 44.67 | 44.67 | deg |
| Magnitude Error | RMS | 5.04 | 5.04 | % |
| | Peak | 48.74 | 48.74 | % |
| Carrier Frequency Error | | -201.04 | -201.04 | Hz |
| Rho | | 0.984 404 | 0.984 404 | |
| I/Q Offset | | -40.15 | -40.15 | dB |
| I/Q Imbalance | | -57.56 | -57.56 | dB |
| Gain Imbalance | | 0.01 | 0.01 | dB |
| Quadrature Error | | 0.14 | 0.14 | deg |
| Amplitude Droop | | -0.000 53 | 0.000 005 | dB/sym |

Remote command:

LAY:ADD? '1',BEL,MACC(see [LAYout:ADD\[:WINDow\]?](#) on page 545)

Equalizer

Filter characteristics of the "equalizer" used to compensate for channel distortion and parameters of the distortion itself.

The following result types are available:

- [Chapter 3.2.18, "Impulse response magnitude"](#), on page 44
- [Chapter 3.2.19, "Impulse response phase"](#), on page 45
- [Chapter 3.2.20, "Impulse response real/imag"](#), on page 46
- [Chapter 3.2.16, "Frequency response magnitude"](#), on page 43
- [Chapter 3.2.17, "Frequency response phase"](#), on page 43
- [Chapter 3.2.15, "Frequency response group delay"](#), on page 42
- [Chapter 3.2.3, "Channel frequency response magnitude"](#), on page 28
- [Chapter 3.2.2, "Channel frequency response group delay"](#), on page 27

The default result type is "Frequency Response Magnitude".

Remote command:

LAY:ADD? '1',BEL,EQU(see [LAYout:ADD\[:WINDow\]?](#) on page 545)

Multi Source

Combines two data sources in one diagram, with (initially) one trace for each data source. This display allows you to compare the errors to the captured or measured data directly in the diagram.

Furthermore, for carrier-in-carrier measurements, this data source makes both carriers visible.

The default result type is "Spec (Meas+Error)".

The following result types are available:

- [Chapter 3.2.30, "Spectrum \(capture buffer + error\)"](#), on page 58
- [Chapter 3.2.31, "Spectrum \(measurement + error\)"](#), on page 60

Remote command:

LAY:ADD? '1', RIGH, MCOM, see [LAYout:ADD\[:WINDow\]?](#) on page 545

3.2 Result types in VSA

The available result types for a window depend on the selected evaluation data source.



The SCPI parameters in the following table refer to the `CALC:FORM` command, see [CALCulate<n>:FORMat](#) on page 555.

Table 3-1: Available result types depending on data source

| Evaluation data source | Result type | SCPI parameter |
|------------------------|---|----------------|
| "Capture Buffer" | "Magnitude Absolute" (selected capture buffer section) | MAGNitude |
| | "Real/Imag (I/Q)" | RIMag |
| | "Frequency Absolute" | FREQuency |
| | "Vector I/Q" | COMP |
| "Capture Buffer" | "Magnitude Overview Absolute" (entire capture buffer) | MOVerview |
| "Meas & Ref Signal" | "Magnitude Absolute" | MAGNitude |
| | "Magnitude Relative" | MAGNitude |
| | "Phase Wrap" | PHASe |
| | "Phase Unwrap" | UPHase |
| | "Frequency Absolute" | FREQuency |
| | "Frequency Relative" | FREQuency |
| | "Real/Imag (I/Q)" | RIMag |
| | "Eye Diagram Real (I)" | IEYE |
| | "Eye Diagram Imag (Q)" | QEYE |

| Evaluation data source | Result type | SCPI parameter |
|------------------------|---|--------------------|
| | "Eye Diagram Frequency" | FEYE |
| | "Constellation I/Q" | CONS |
| | "Constellation I/Q (Rotated)" | RCON |
| | "Vector I/Q" | COMP |
| | "Constellation Frequency" | CONF |
| | "Vector Frequency" | COVF |
| "Symbols" | "Binary" | - |
| | "Octal" | - |
| | "Decimal" | - |
| | "Hexadecimal" | - |
| "Error Vector" | "EVM" | MAGNitude |
| | "Real/Imag (I/Q)" | RIMag |
| | "Vector I/Q" | COMP |
| "Modulation Errors" | "Magnitude Error" | MAGNitude |
| | "Phase Error" | PHASe |
| | "Frequency Error Absolute" | FREQuency |
| | "Frequency Error Relative" | FREQuency |
| "Modulation Accuracy" | "Bit Error Rate" | BERate |
| | "Result Summary" | RSUM |
| "Equalizer" | "Impulse Response Magnitude" | MAGNitude |
| | "Impulse Response Phase" | UPHase |
| | "Impulse Response Real/Imag" | RIMag |
| | "Frequency Response Magnitude" | MAGNitude |
| | "Frequency Response Phase" | UPHase |
| | "Frequency Response Group Delay" | GDELay |
| | "Channel Frequency Response Magnitude" | MAGNitude |
| | "Channel Frequency Response Group Delay" | GDELay |
| "Multi Source" | "Spectrum (Real/Imag) (Capture buffer + Error)" | RIMag (query only) |
| | "Spectrum (Real/Imag) (Measurement + Error)" | RIMag (query only) |

For details on selecting the data source and result types for evaluation, see [Chapter 6.5, "Display and window configuration"](#), on page 285.

Remote command:

CALCulate<n>:FORMat on page 555

| | |
|---|----|
| • Bit error rate (BER)..... | 25 |
| • Channel frequency response group delay..... | 27 |
| • Channel frequency response magnitude..... | 28 |
| • Constellation frequency..... | 29 |
| • Constellation I/Q..... | 29 |
| • Constellation I/Q (rotated)..... | 31 |
| • Error vector magnitude (EVM)..... | 32 |
| • Eye diagram frequency..... | 33 |
| • Eye diagram imag (Q)..... | 34 |
| • Eye diagram real (I)..... | 36 |
| • Frequency absolute..... | 37 |
| • Frequency relative..... | 38 |
| • Frequency error absolute..... | 39 |
| • Frequency error relative..... | 41 |
| • Frequency response group delay..... | 42 |
| • Frequency response magnitude..... | 43 |
| • Frequency response phase..... | 43 |
| • Impulse response magnitude..... | 44 |
| • Impulse response phase..... | 45 |
| • Impulse response real/imag..... | 46 |
| • Magnitude absolute..... | 46 |
| • Magnitude overview (capture buffer)..... | 48 |
| • Magnitude relative..... | 49 |
| • Magnitude error..... | 50 |
| • Phase error..... | 51 |
| • Phase wrap..... | 52 |
| • Phase unwrap..... | 53 |
| • Real/imag (I/Q)..... | 54 |
| • Result summary..... | 55 |
| • Spectrum (capture buffer + error)..... | 58 |
| • Spectrum (measurement + error)..... | 60 |
| • Symbol table..... | 61 |
| • Vector frequency..... | 63 |
| • Vector I/Q..... | 63 |

3.2.1 Bit error rate (BER)

A bit error rate (BER) measurement compares the transmitted bits with the determined symbol decision bits:

$$\text{BER} = \text{error bits} / \text{number of analyzed bits}$$

As a prerequisite for this measurement, the VSA application must know which bit sequences are correct, i.e. which bit sequences can occur. This knowledge must be

provided as a list of possible data sequences in xml format, which is loaded in the VSA application (see [Chapter 4.9, "Known data files - dependencies and restrictions"](#), on page 169).



Auxiliary tool to create known data files

An auxiliary tool to create known data files from data that is already available in the R&S FSW VSA application is provided with the instrument free of charge.

See [Chapter 8.2.4.2, "How to create known data files"](#), on page 303.

Alternatively, for data generated by a pseudo-random bit sequence (PRBS) generator, you can specify the algorithm used to generate the data, so the R&S FSW VSA application knows which sequences can occur. This function requires the FSW-K70P option. See [Chapter 4.10, "Known data from PRBS generators"](#), on page 170.

If known data is specified in the application, the BER result display is available for the following source types:

- "Modulation Accuracy"



Note that this measurement can take some time, as each symbol decision must be compared to the possible data sequences one by one.

The BER measurement is an indicator for the quality of the demodulated signal. High BER values indicate problems such as:

- Inadequate demodulation settings
- Poor quality in the source data
- False or missing sequences in the known data file
- Result range alignment leads to a mismatch of the input data with the defined sequences

A BER value of 0.5 means that for at least one measurement no matching sequence was found.

See also [Chapter 4.4.3, "Demodulation and symbol decisions"](#), on page 136 and the application sheet [R&S®FSW-K70 Measuring the BER and the EVM for Signals with Low SNR](#) on the Rohde & Schwarz Internet site.

| 4 Bit Error Rate | | |
|-------------------|----------------------|---------------|
| | Current | Accumulative |
| Bit Error Rate | 0.002 252 252 | 0.002 252 252 |
| Total # of Errors | 1 | 1 |
| Total # of Bits | 444 | 444 |

The following information is provided in the "Bit Error Rate" result display:

- "Bit Error Rate": error bits / number of analyzed bits
- "Total # of Errors": number of detected bit errors (known data compared to symbol decisions)
- "Total # of Bits": number of analyzed bits

For each of these results, the following values are provided:

| BER result | Description |
|--------------|--|
| Current | Value for current result range |
| Minimum | Minimum "Current" value during the current measurement |
| Maximum | Maximum "Current" value during the current measurement |
| Accumulative | Total value over several measurements; For BER: "Total # of Errors" / "Total # of Bits" (similar to average function) |

Remote commands:

```
LAY:ADD? '1',BEL,MACC
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM BER
```


To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
CALC:BER?
```

To query the results (see [CALCulate<n>:BERate?](#) on page 574).

3.2.2 Channel frequency response group delay

The frequency response group delay of the channel is the derivation of phase over frequency for the original input signal. It is a measure of phase distortion.

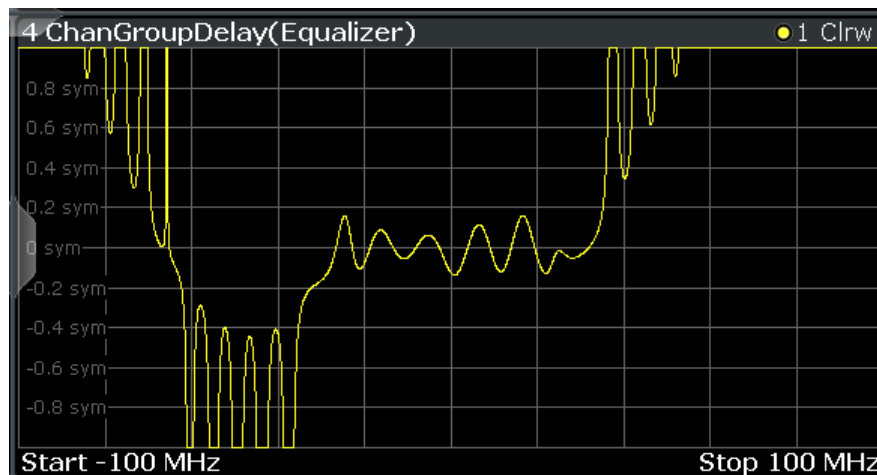**Remote commands:**

```
LAY:ADD? '1',BEL,EQU
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FEED 'XFR:DDEM:IRAT'
```

To define the channel frequency response result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:FORM GDEL
```


To define the group delay result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.6, "Equalizer"](#), on page 568).

3.2.3 Channel frequency response magnitude

The frequency response magnitude of the channel indicates which distortions occurred during transmission of the input signal. It is only determined if the equalizer is activated.

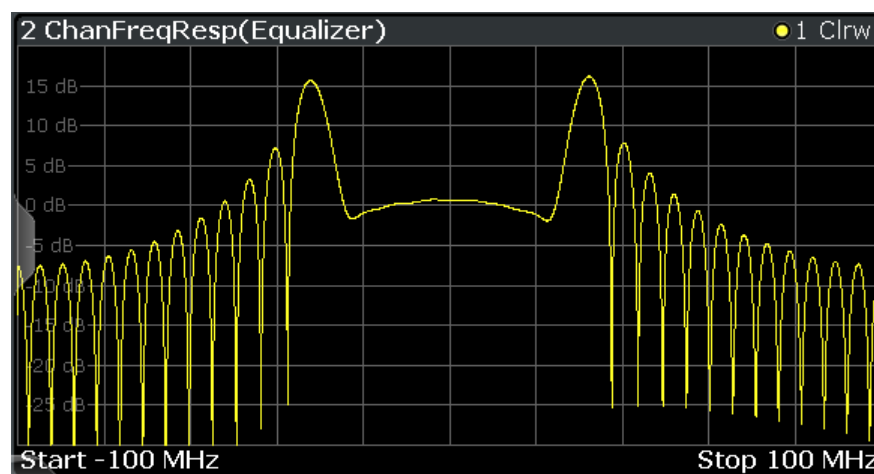

The bandwidth for which the channel transfer function can be estimated is not only limited by the usable I/Q bandwidth, but also by the bandwidth of the analyzed input signal. Areas with low reception power, e.g. at the filter edges, can suffer from less accurate estimation results.

Remote commands:

```
LAY:ADD? '1',BEL,EQU
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FEED 'XFR:DDEM:IRAT'
```

To define the channel frequency response result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:FORM MAGN
```

To define the magnitude result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.6, "Equalizer"](#), on page 568).

3.2.4 Constellation frequency

Depending on the modulation type, the source signal (without inter-symbol interference) as an X/Y plot; only the symbol decision instants are drawn and not connected.

Available for source types:

- "Meas & Ref Signal"

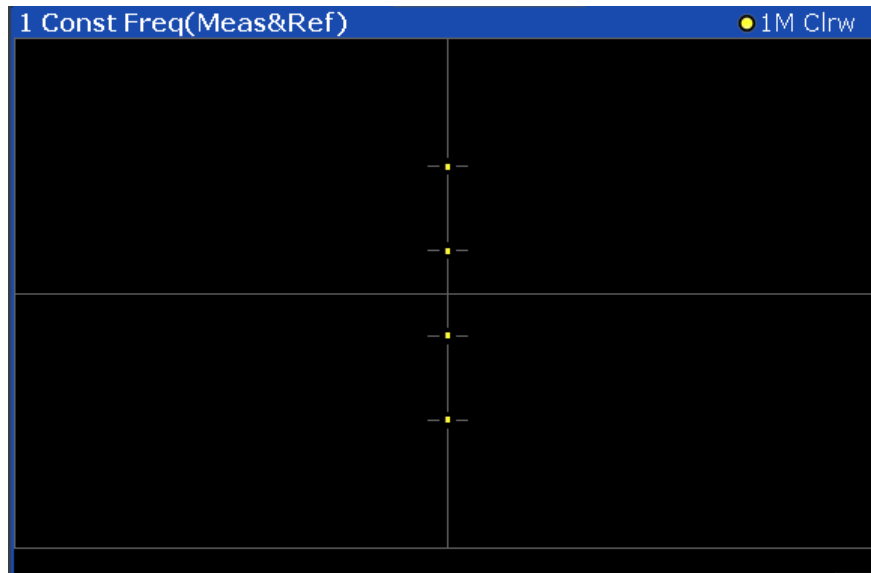


Figure 3-2: Constellation Frequency result display

A special density trace mode is available for this diagram. The occurrence of each value within the current result range or evaluation range is indicated by color.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545)

```
CALC:FORM CONF
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555)

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]?](#) [TRACE<n>](#) and [Chapter 11.9.2.3, "Polar diagrams"](#), on page 567)

3.2.5 Constellation I/Q

The complex source signal (without inter-symbol interference) as an X/Y plot; only the (de-rotated) symbol decision instants are drawn and not connected

Available for source types:

- "Meas & Ref Signal"



Figure 3-3: Constellation I/Q diagram for QPSK modulated signal

Markers in the Constellation diagram


Using markers you can detect individual constellation points for a specific symbol. When you activate a marker in the Constellation diagram, its position is defined by the symbol the point belongs to. However, the marker result indicates the I and Q values of the point.



Constellation for subframe or symbol types in multi-modulation signals

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the constellation diagram displays all symbols in the entire frame by default. However, if you restrict the evaluation range to the symbols of a particular subframe, only those constellation points are displayed (see [Chapter 5.10, "Evaluation range configuration"](#), on page 265).

You can also define different colored traces for different symbol types (see [Chapter 6.1, "Trace settings"](#), on page 270).

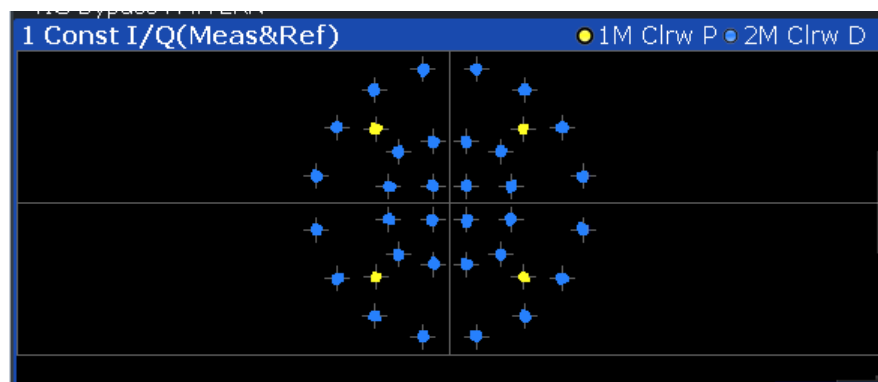

Density trace

A special density trace mode is available for this diagram. The occurrence of each value within the current result range or evaluation range is indicated by color.

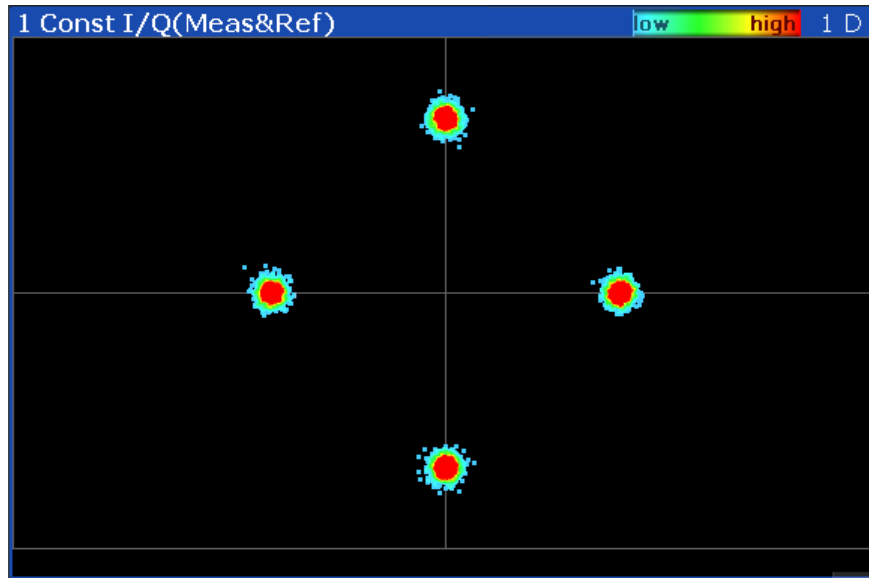


Figure 3-4: Example for a density constellation trace

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM CONS
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.3, "Polar diagrams"](#), on page 567).

```
CALCulate<n>:MARKer<m>:Y? on page 520
```

To query the marker I/Q values.

3.2.6 Constellation I/Q (rotated)

The complex source signal as an X/Y plot. As opposed to the common "Constellation I/Q" display, the symbol decision instants, *including the rotated ones*, are drawn and not connected.

Available for source types:

- "Meas & Ref Signal"
This result type is only available for signals with a rotating modulation.



Figure 3-5: Constellation I/Q (Rotated) result display vs. common Constellation I/Q for $3\pi/8$ -8PSK modulation

A special density trace mode is available for this diagram. The occurrence of each value within the current result range or evaluation range is indicated by color.

Remote commands:

LAY:ADD? '1', BEL, MEAS

To define the required source type (see LAYout:ADD[:WINDow]? on page 545).

CALC:FORM RCON

To define the result type (see CALCulate<n>:FORMat on page 555).

TRAC:DATA? TRACE1

To query the trace results (see TRACe<n>[:DATA]? TRACE<n> and Chapter 11.9.2.3, "Polar diagrams", on page 567).

3.2.7 Error vector magnitude (EVM)

Displays the error vector magnitude as a function of symbols or time.

$$EVM(t) = \frac{|EV(t)|}{C}$$

with $t = n \cdot T_D$ and T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see "Display Points/Sym" on page 288).

The normalization constant C is chosen according to the EVM normalization. By default C^2 is the mean power of the reference signal.

$$C = \sqrt{\frac{1}{K} \sum_k |REF(k \cdot T)|^2}$$

and

T = duration of symbol periods

Note that $k=0.5 \cdot n \cdot T$ for Offset QPSK with inactive [Offset EVM](#).

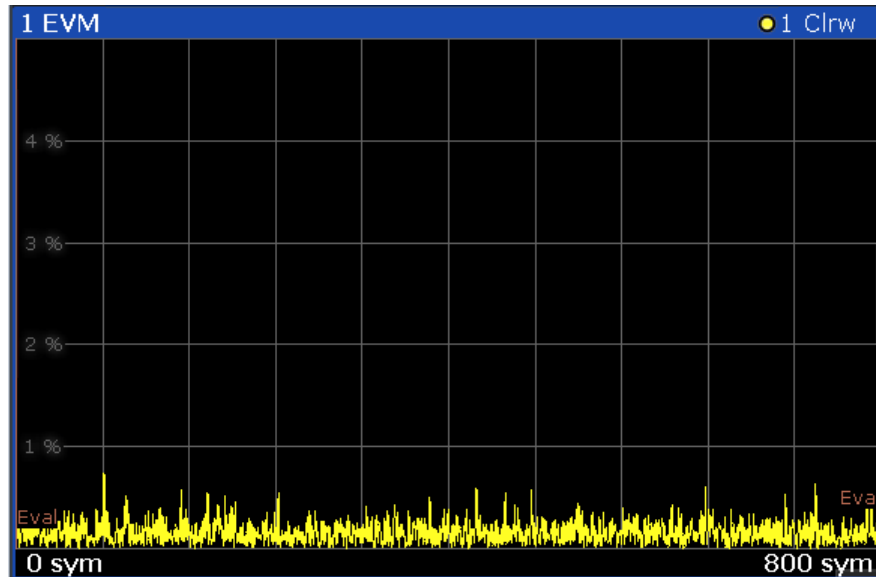


Figure 3-6: Error Vector Magnitude result display

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the individual subframes are indicated by vertical green lines.

Available for source types:

- "Error Vector"

Remote commands:

```
LAY:ADD? '1',BEL,EVEC
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM MAGN
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.8 Eye diagram frequency

The eye diagram of the currently measured frequencies and/or the reference signal. The time span of the data depends on the evaluation range (capture buffer).

Available for source types:

- "Meas & Ref Signal"



Display lines are available in eye diagrams which allow you to determine the size of the eye, see also [Chapter 8.3.2, "How to measure the size of an eye"](#), on page 310.

A special density trace mode is available for this diagram. The occurrence of each value within the current result range or evaluation range is indicated by color.

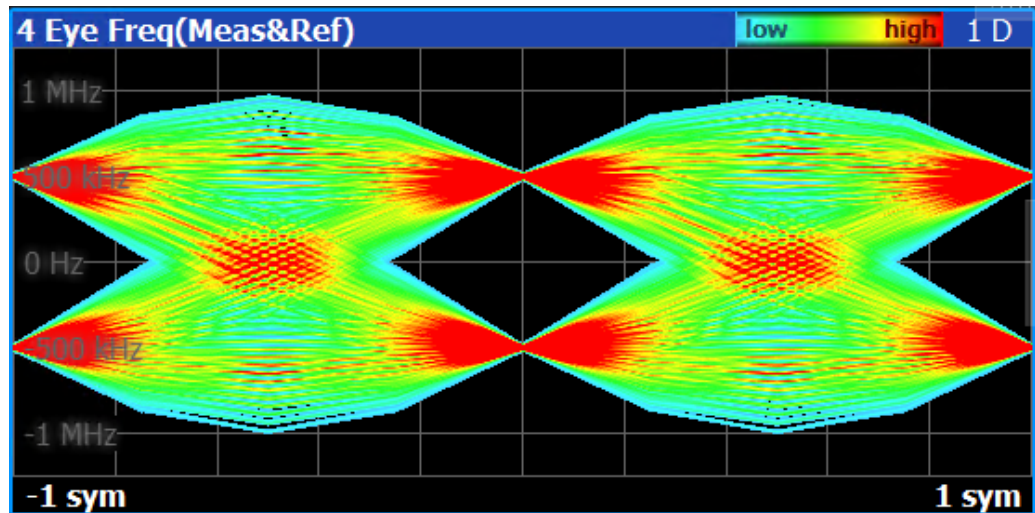


Figure 3-7: Eye Diagram Frequency result display with density trace

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDOW\]?](#) on page 545).

```
CALC:FORM FEYE
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

[Chapter 11.7.3, "Configuring display lines for eye diagrams"](#), on page 529

3.2.9 Eye diagram imag (Q)

The eye pattern of the quadrature (Q) channel; the x-axis range is from -1 to +1 symbols (MSK: -2 to +2)

Available for source types:

- "Meas & Ref Signal"

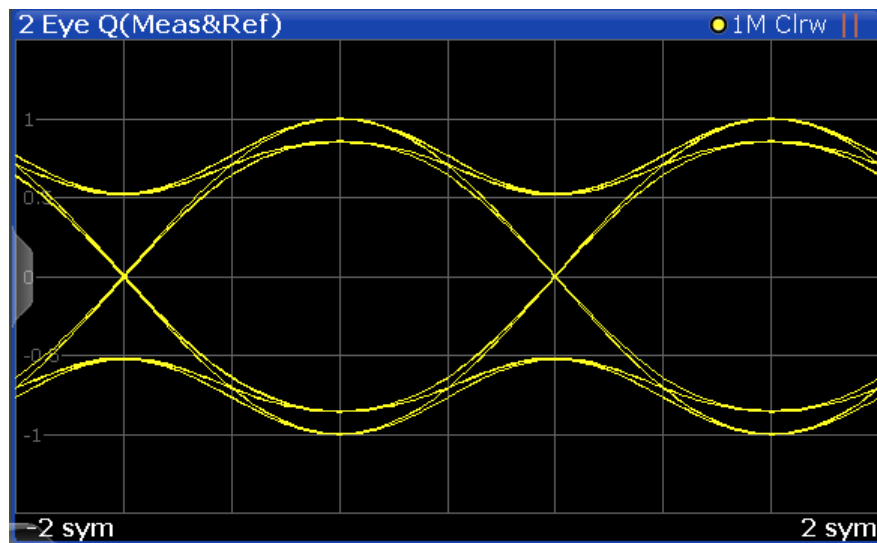


Figure 3-8: Eye Diagram Imag (Q) result display



Display lines are available in eye diagrams which allow you to determine the size of the eye.

See also [Chapter 8.3.2, "How to measure the size of an eye"](#), on page 310.

A special density trace mode is available for this diagram. The occurrence of each value within the current result range or evaluation range is indicated by color.

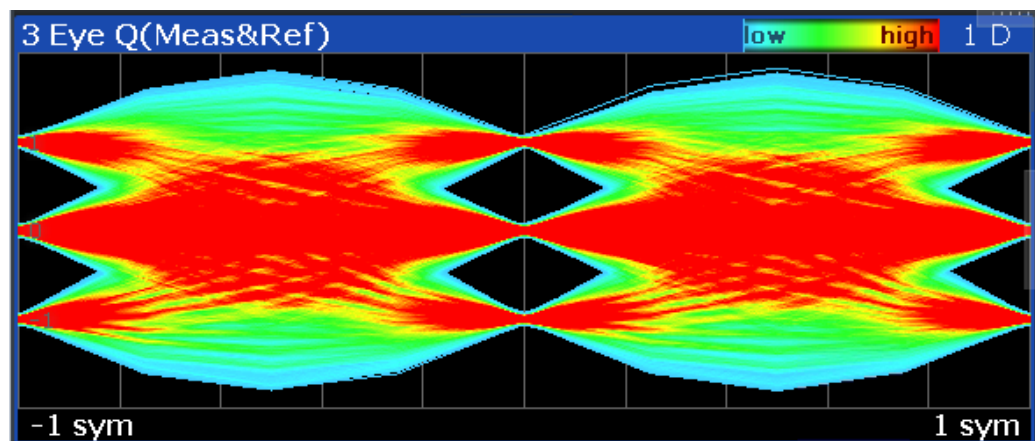


Figure 3-9: Eye Diagram Imag (Q) result display with density trace

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM QEYE
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

[Chapter 11.7.3, "Configuring display lines for eye diagrams"](#), on page 529

3.2.10 Eye diagram real (I)

The eye pattern of the inphase (I) channel; the x-axis value range is from -1 to +1 symbols (MSK: -2 to +2)

Available for source types:

- "Meas & Ref Signal"

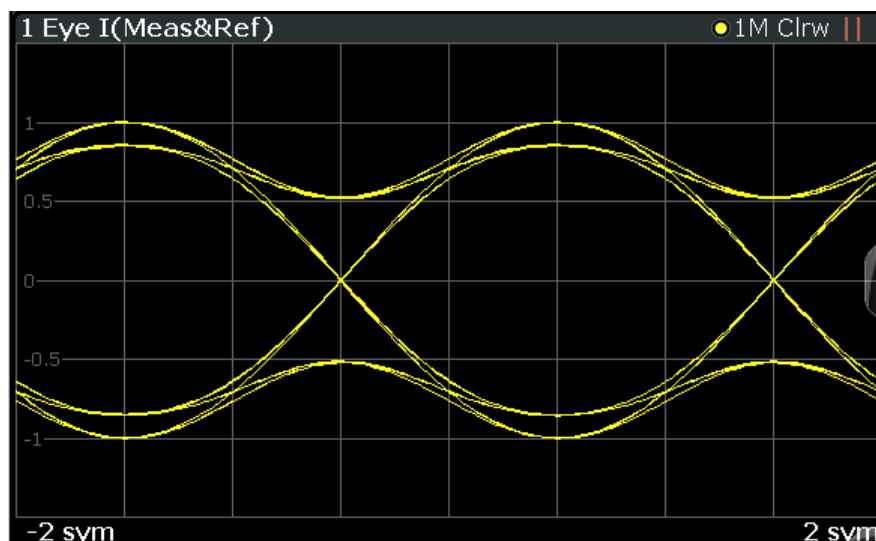


Figure 3-10: Eye Diagram Real (I) result display



Display lines are available in eye diagrams which allow you to determine the size of the eye.

See also [Chapter 8.3.2, "How to measure the size of an eye"](#), on page 310.

A special density trace mode is available for this diagram. The occurrence of each value within the current result range or evaluation range is indicated by color.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM IEYE
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACe<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

[Chapter 11.7.3, "Configuring display lines for eye diagrams"](#), on page 529

3.2.11 Frequency absolute

The instantaneous frequency of the signal source; the absolute value is displayed in Hz.

Available for source types:

- "Meas & Ref Signal"
- "Capture Buffer"

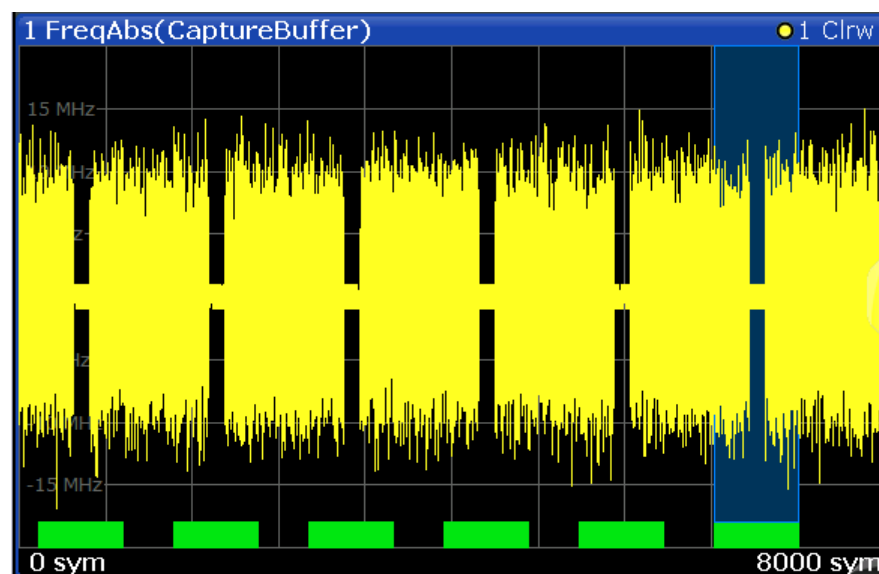


Figure 3-11: Frequency Absolute result display

Meas&Ref signal:

$$FREQ_{MEAS}(t) = \frac{1}{2 \cdot \pi} \frac{d}{dt} \angle MEAS(t)$$

with $t = n \cdot T_D$ and T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see ["Display Points/Sym"](#) on page 288).

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), and based on the "Meas and Ref" signal, the individual subframes are indicated by vertical green lines.

Capture buffer:

$$FREQ_{CAPT.}(t) = \frac{1}{2 \cdot \pi} \frac{d}{dt} \angle Capt(t)$$

When evaluating the capture buffer, the absolute frequency is derived from the measured phase, with T_D = the duration of one sampling period at the sample rate (see "Sample Rate" on page 231).

Note that this result display is based on an individual capture buffer *range*. If more than 256 000 samples are captured, overlapping ranges with a size of 256 000 each are created. Only one range at a time can be displayed in the "Frequency Absolute" result display. For details see Chapter 4.8, "Capture buffer display", on page 167.



This measurement is mainly of interest when using the MSK or FSK modulation, but can also be used for the PSK/QAM modulations. However, since these modulations can have transitions through zero in the I/Q plane, in this case, possibly you notice uncritical spikes. The reason is that the phase of zero (or a complex value close to zero) is of limited significance, but still influences the result of the instantaneous frequency measurement.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see LAYout:ADD[:WINDow]? on page 545).

```
CALC:FORM FREQ
```

To define the result type (see CALCulate<n>:FORMat on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see TRACe<n>[:DATA]? TRACE<n> and Chapter 11.9.2.1, "Capture buffer results", on page 566/Chapter 11.9.2.2, "Cartesian diagrams", on page 566).

3.2.12 Frequency relative

The instantaneous frequency of the signal source.

The results are normalized to the symbol rate (PSK and QAM modulated signals), the estimated FSK deviation (FSK modulated signals) or one quarter of the symbol rate (MSK modulated signals).

$$FREQ_{MEAS}(t) = \frac{1}{2 \cdot \pi} \frac{d}{dt} \angle MEAS(t)$$

with $t = n \cdot T_D$ and T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see "Display Points/Sym" on page 288).



This measurement is mainly of interest when using the MSK or FSK modulation, but can also be used for the PSK/QAM modulations. See also the note for Chapter 3.2.11, "Frequency absolute", on page 37.

Available for source types:

- "Meas & Ref Signal"

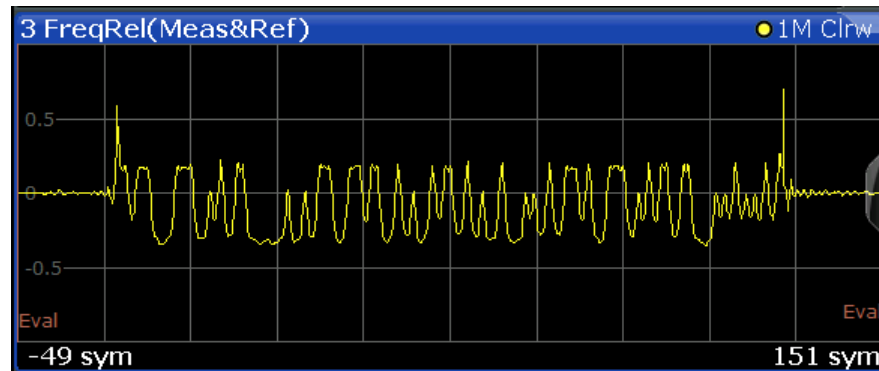


Figure 3-12: Frequency Relative result display

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the individual subframes are indicated by vertical green lines.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM FREQ
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
DISP:TRAC:Y:MODE REL
```

To define relative values (see [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:MODE](#) on page 559).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.13 Frequency error absolute

Displays the error of the instantaneous frequency in Hz of the measurement signal with respect to the reference signal as a function of symbols over time.

$$FREQ_ERR(t) = FREQ_{MEAS}(t) - FREQ_{REF}(t)$$

with $t = n \cdot T_D$ and T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see ["Display Points/Sym"](#) on page 288).

Note that this measurement does not consider a possible carrier frequency offset. It has already been compensated for in the measurement signal.



This measurement is mainly of interest when using the MSK or FSK modulation, but can also be used for the PSK/QAM modulations. However, since these modulations can have transitions through zero in the I/Q plane, in this case, you possibly notice uncritical spikes. The reason is that the phase of zero (or a complex value close to zero) has in fact limited significance, but still influences the result of the current frequency measurement.

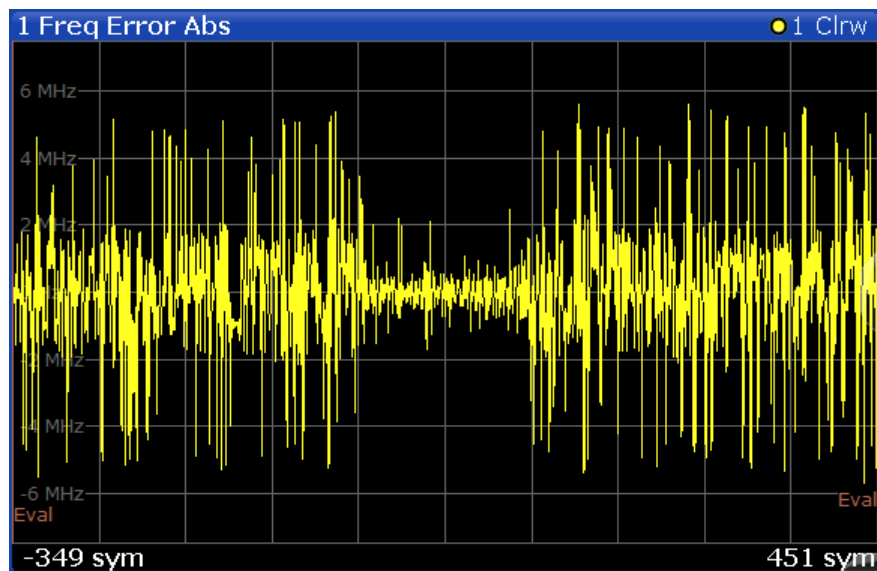


Figure 3-13: Frequency Error Absolute result display

Available for source types:

- "Modulation Errors"

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the individual subframes are indicated by vertical green lines.

Remote commands:

```
LAY:ADD? '1',BEL,MERR
```

To define the required source type (see [LAYout:ADD\[:WINDOW\]?](#) on page 545).

```
CALC:FORM FREQ
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.14 Frequency error relative

Displays the error of the instantaneous frequency of the measurement signal with respect to the reference signal as a function of symbols over time.

The results are normalized to the symbol rate (PSK and QAM modulated signals), the estimated FSK deviation (FSK modulated signals) or one quarter of the symbol rate (MSK modulated signals).

$$FREQ_ERR(t) = FREQ_{MEAS}(t) - FREQ_{REF}(t)$$

with $t = n \cdot T_D$ and T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see "Display Points/Sym" on page 288).



This measurement is mainly of interest when using the MSK or FSK modulation, but can also be used for the PSK/QAM modulations. See also the note for [Chapter 3.2.13, "Frequency error absolute"](#), on page 39.

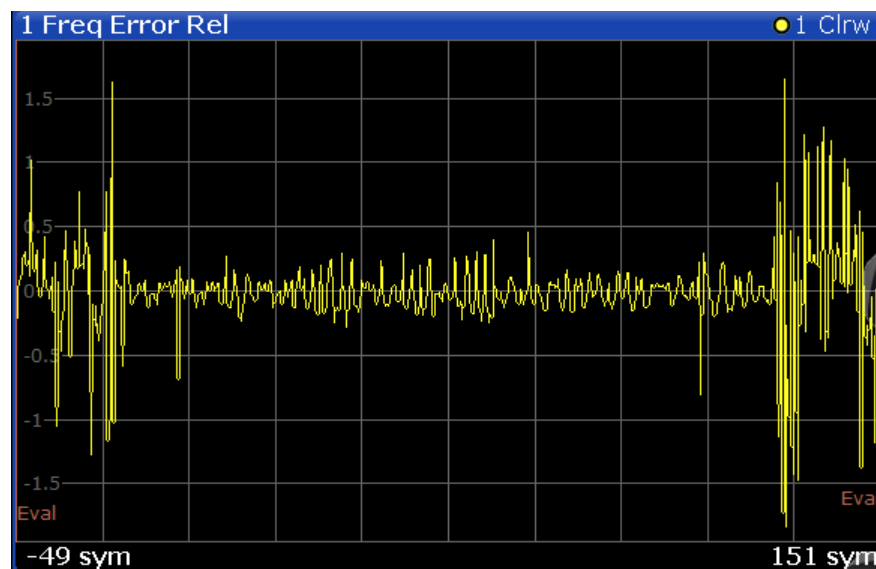


Figure 3-14: Frequency Error Relative result display

Available for source types:

- "Modulation Errors"

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the individual subframes are indicated by vertical green lines.

Remote commands:

```
LAY:ADD? '1',BEL,MERR
```

To define the required source type (see [LAYout:ADD\[:WINDOW\]?](#) on page 545).

```
CALC:FORM FREQ
```

To define the result type (see `CALCulate<n>:FORMat` on page 555).

```
DISP:TRAC:Y:MODE REL
```


To define relative values (see `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:MODE` on page 559).

```
TRAC:DATA? TRACE1
```

To query the trace results (see `TRACe<n>[:DATA]? TRACE<n>` and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.15 Frequency response group delay

The Frequency Response Group Delay of the "equalizer" is the derivation of phase over frequency. It is a measure of phase distortion.

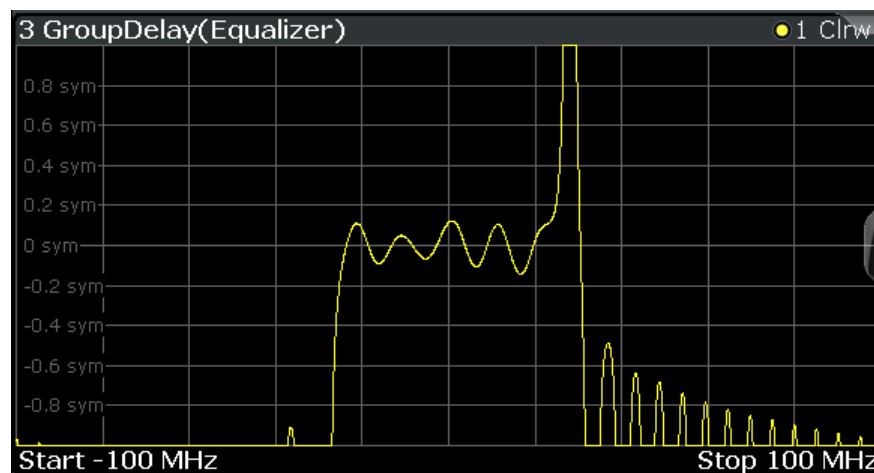

Available for source types:

- "Equalizer"

Remote commands:

```
LAY:ADD? '1',BEL,EQU
```

To define the required source type (see `LAYout:ADD[:WINDow]?` on page 545)

```
CALC:FEED 'XFR:DDEM:RAT'
```

To define the frequency response result type (see `CALCulate<n>:FEED` on page 554).

```
CALC:FORM GDEL
```


To define the group delay result type (see `CALCulate<n>:FORMat` on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see `TRACe<n>[:DATA]? TRACE<n>` and [Chapter 11.9.2.6, "Equalizer"](#), on page 568).

3.2.16 Frequency response magnitude

Magnitude of the frequency response of the current equalizer. Note that the frequency response of the equalizer is not a pure inverted function of the channel response, as both functions are calculated independently. The frequency response is calculated by determining an optimal EVM for the input signal.

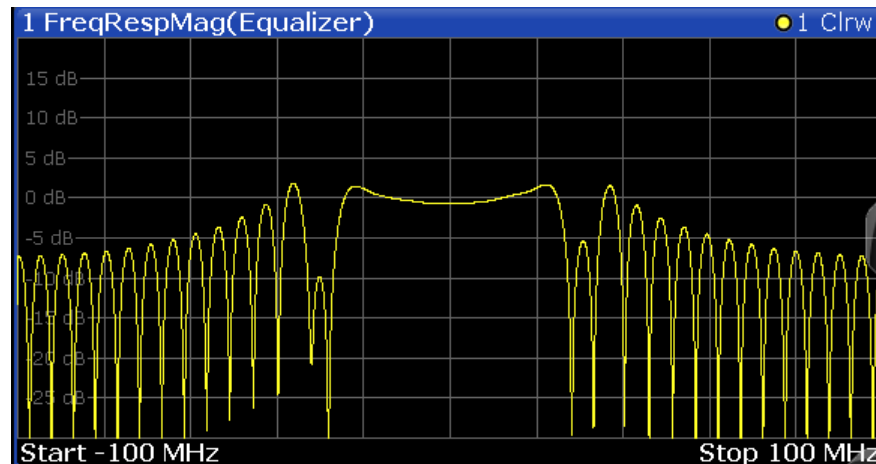

Available for source types:

- "Equalizer"

Remote commands:

```
LAY:ADD? '1',BEL,EQU
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FEED 'XFR:DDEM:RAT'
```

To define the frequency response result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:FORM MAGN
```

To define the magnitude result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.6, "Equalizer"](#), on page 568).

3.2.17 Frequency response phase

Phase of the frequency response of the current "equalizer".

Available for source types:

- "Equalizer"

Remote commands:

```
LAY:ADD? '1',BEL,EQU
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FEED 'XFR:DDEM:RAT'
```

To define the frequency response result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:FORM UPH
```


To define the unwrapped phase result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.6, "Equalizer"](#), on page 568).

3.2.18 Impulse response magnitude

The "Impulse Response Magnitude" shows the magnitude of the equalizer filter in the time domain.

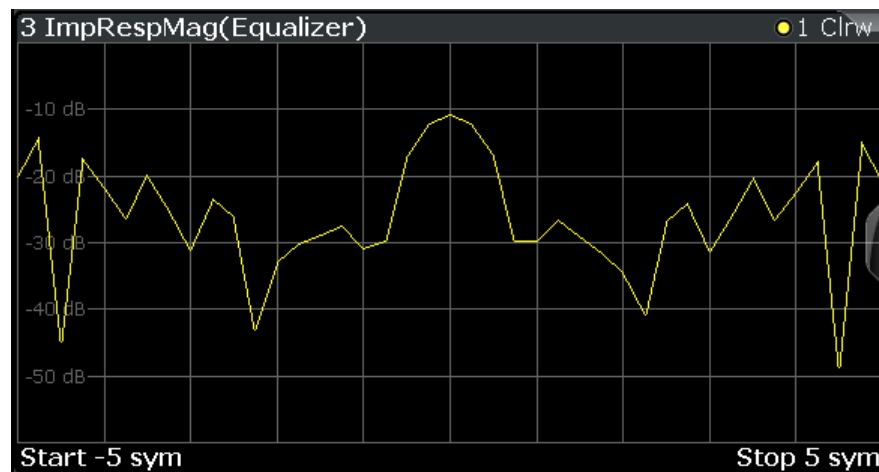

Available for source types:

- "Equalizer"

Remote commands:

```
LAY:ADD? '1',BEL,EQU
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FEED 'XTIM:DDEM:IMP'
```

To define the "Impulse Response" result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:FORM MAGN
```


To define the "Magnitude" result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.6, "Equalizer"](#), on page 568).

3.2.19 Impulse response phase

The "Impulse Response Phase" shows the phase of the equalizer coefficients in the time domain.

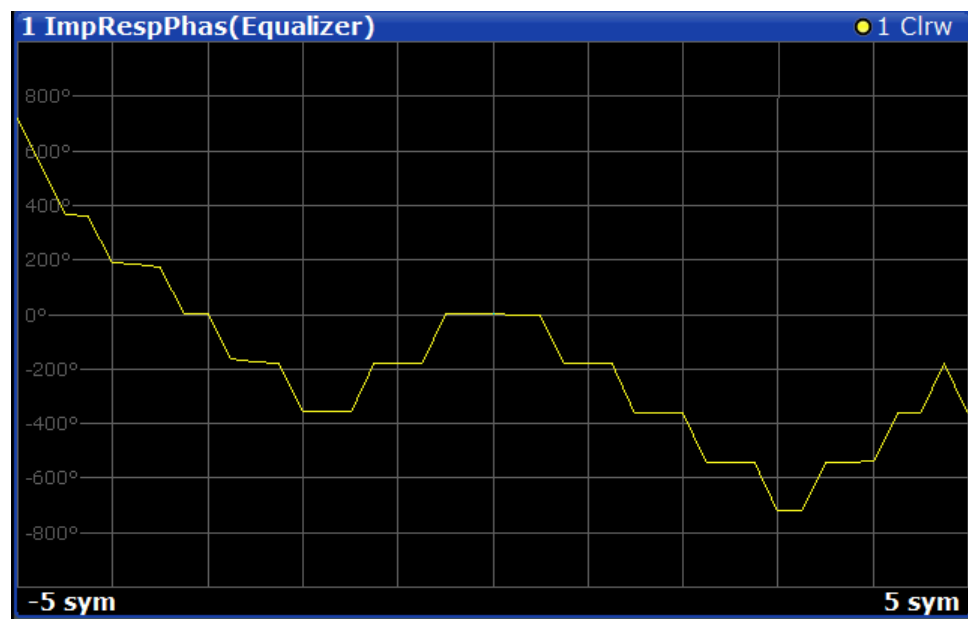

Available for source types:

- "Equalizer"

Remote commands:

```
LAY:ADD? '1',BEL,EQU
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FEED 'XTIM:DDEM:IMP'
```

To define the "Impulse Response" result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:FORM UPH
```

To define the "Phase" result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.6, "Equalizer"](#), on page 568).

3.2.20 Impulse response real/imag

The "Real/Imag" diagram of the impulse response is a stem diagram. It displays the filter characteristics in the time domain for both the I and the Q branches individually. Using this information the equalizer is uniquely characterized and can be recreated by other applications.



Available for source types:

- "Equalizer"

Remote commands:

```
LAY:ADD? '1',BEL,EQU
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FEED 'XTIM:DDEM:IMP'
```

To define the impulse response result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:FORM RIM
```

To define the real/imag result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.6, "Equalizer"](#), on page 568).

3.2.21 Magnitude absolute

Source type Capture Buffer:

"Magnitude absolute", that is: the actual signal amplitude, of the captured signal in the capture buffer.


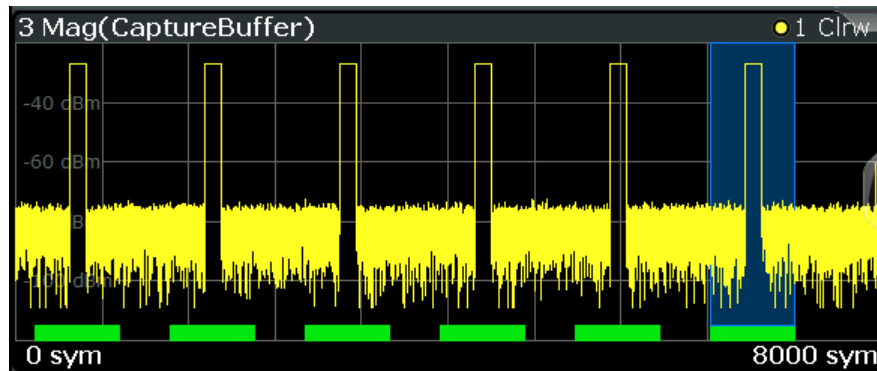


Figure 3-15: Magnitude Absolute result display for capture buffer data

For capture buffers containing more than 256,000 samples, the magnitude for a section of the capture buffer (max. 256 000 samples) is displayed. The section is selected such that it surrounds the currently selected result range. The currently displayed section is indicated in the [Magnitude overview \(capture buffer\)](#) using vertical blue lines.

To display the entire capture buffer with all sections in one diagram, use the [Magnitude overview \(capture buffer\)](#) result display.

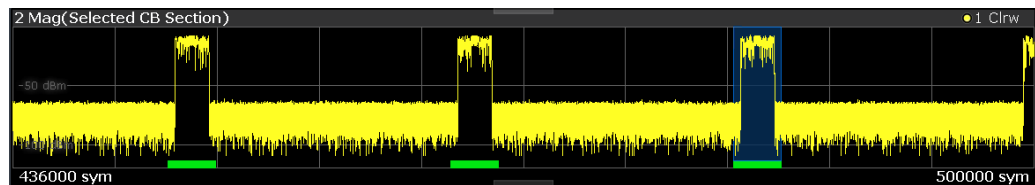

Note that trace modes that calculate results for several sweeps (Average, MinHold, MaxHold) are not available for the "Magnitude absolute" result display.

For more information on the capture buffer see [Chapter 4.8, "Capture buffer display"](#), on page 167.

Source type Meas & Ref Signal:

The actual signal amplitude is displayed:

$$Mag_{MEAS}(t) = |MEAS(t)|$$

with $t = n \cdot T_D$ and

T_D = the duration of one sampling period at the defined sample rate defined by the display points per symbol parameter (see ["Display Points/Sym"](#) on page 288)

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), and based on the "Meas and Ref" signal, the individual subframes are indicated by vertical green lines.

Remote commands:

```
LAY:ADD? '1',BEL,CBUF
```

To define the required source type (see [LAYout:ADD\[:WINDOW\]?](#) on page 545).

CALC:FORM MAGN

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

TRAC:DATA? TRACE1

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.1, "Capture buffer results"](#), on page 566).

To query the start of the result range:

[\[SENSe:\] DDEMod:SEARCh:MBURst:START\[:SYMBOLs\]?](#) on page 572

[\[SENSe:\] DDEMod:SEARCh:MBURst:START:SAMPles?](#) on page 572

3.2.22 Magnitude overview (capture buffer)

Magnitude of the source signal in the *entire* capture buffer; the actual signal amplitude is displayed:

$$Mag_{MEAS}(t) = |MEAS(t)|$$

with $t = n \cdot T_D$ and

T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see ["Display Points/Sym"](#) on page 288)

Note that for very large numbers of samples (>25 000), the samples are mapped to 25 000 trace points using an autopeak detector for display. Thus, this result display is not suitable to detect transient effects or analyze individual symbols closely. For these purposes, use the [Magnitude absolute](#) result display instead.

The "Magnitude Overview (Capture Buffer)" is only available for the source type:

- "Capture Buffer"

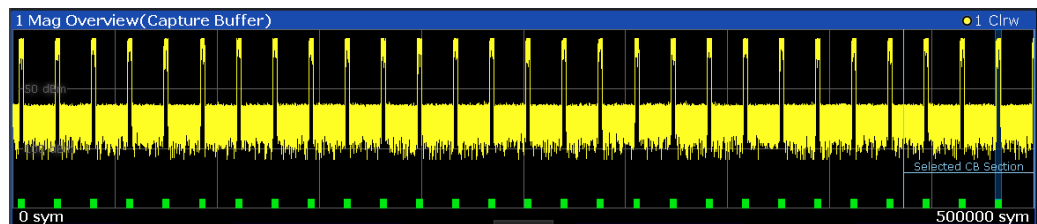


Figure 3-16: Magnitude Overview (Capture Buffer) result display

For more information on the capture buffer, see [Chapter 4.8, "Capture buffer display"](#), on page 167.

Restrictions

Note the following restrictions that apply to this result display:

- Only one trace is available
- Only the trace modes "Clear/Write" and "View" are available. See also [Chapter 6.1, "Trace settings"](#), on page 270.

Remote commands:

```
LAY:ADD? '1',BEL,CBUF
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM MOV
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.1, "Capture buffer results"](#), on page 566).

3.2.23 Magnitude relative

Magnitude of the source signal; the signal amplitude is scaled to the ideal reference signal

Available for source types:

- "Meas & Ref Signal"

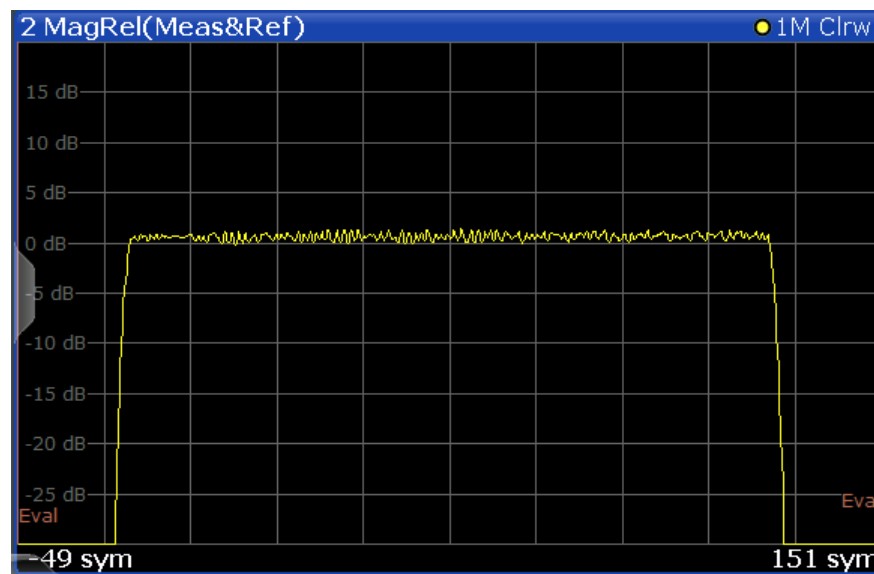


Figure 3-17: Magnitude Relative result display

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), and based on the "Meas and Ref" signal, the individual subframes are indicated by vertical green lines.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM MAGN
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
DISP:TRAC:Y:MODE REL
```

To define relative values (see [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:MODE](#) on page 559).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.24 Magnitude error

Displays the magnitude error of the measurement signal with respect to the reference signal (as a function of symbols over time)

$$MAG_ERR(t) = MAG_{MEAS}(t) - MAG_{REF}(t)$$

with $t = n \cdot T_D$ and T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see ["Display Points/Sym"](#) on page 288).

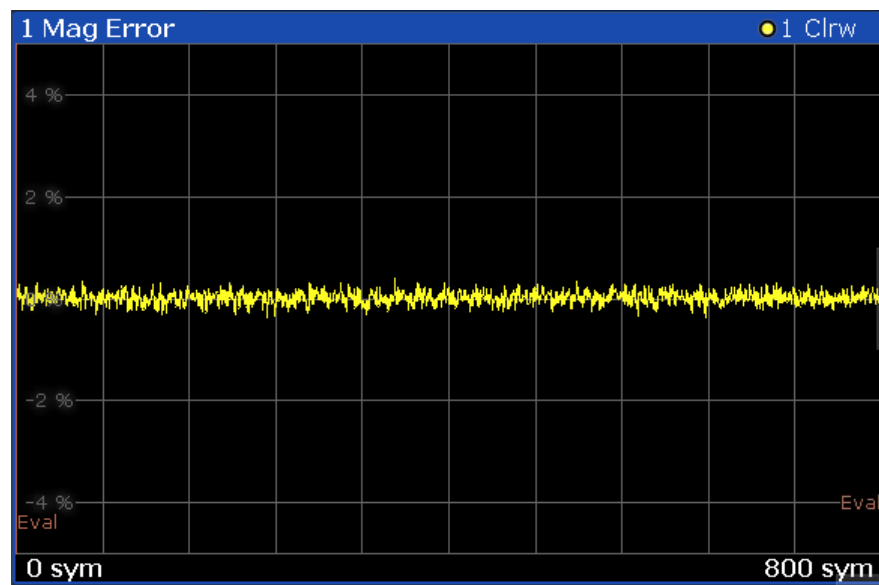


Figure 3-18: Magnitude Error result display

Available for source types:

- "Modulation Errors"

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the individual subframes are indicated by vertical green lines.

Remote commands:

```
LAY:ADD? '1',BEL,MERR
```

To define the required source type (see `LAYout:ADD[:WINDow]?` on page 545).

```
CALC:FORM MAGN
```

To define the result type (see `CALCulate<n>:FORMat` on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see `TRACe<n>[:DATA]?` `TRACE<n>` and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.25 Phase error

Displays the phase error of the measurement signal with respect to the reference signal as a function of symbols over time.

$$PHASE_ERR(t) = PHASE_{MEAS}(t) - PHASE_{REF}(t)$$

with $t = n \cdot T_D$ and T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see ["Display Points/Sym"](#) on page 288).

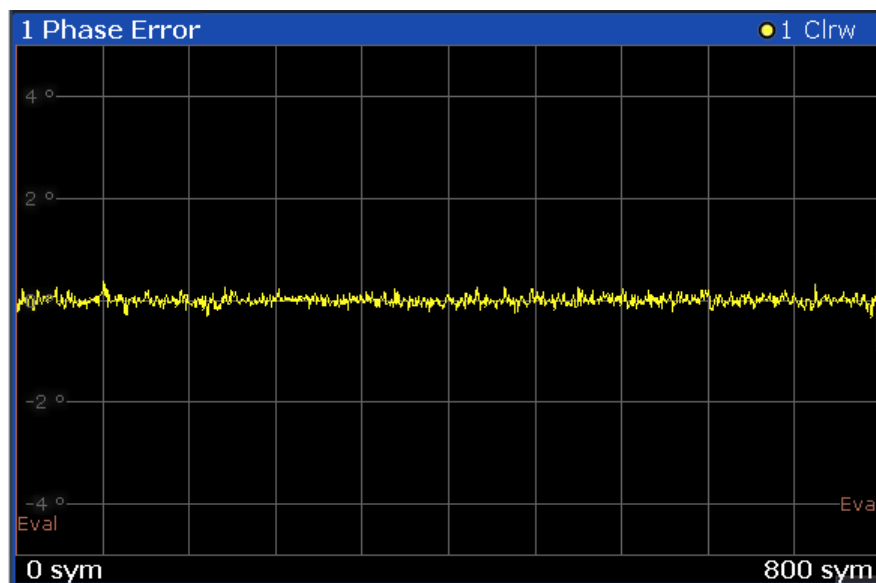


Figure 3-19: Phase Error result display

Available for source types:

- "Modulation Errors"

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the individual subframes are indicated by vertical green lines.

Remote commands:

```
LAY:ADD? '1',BEL,MERR
```

To define the required source type (see `LAYout:ADD[:WINDow]?` on page 545).

CALC:FORM PHAS

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

TRAC:DATA? TRACE1

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.26 Phase wrap

The phase or argument of the signal; the display is limited to the phase value range of $[-180^\circ, 180^\circ]$

$$Phase_{MEAS}(t) = \angle(MEAS(t))$$

with $t = n \cdot T_D$ and T_D = the duration of one sampling period at the sample rate defined by the display points per symbol parameter (see ["Display Points/Sym"](#) on page 288).

Available for source types:

- "Meas & Ref Signal"

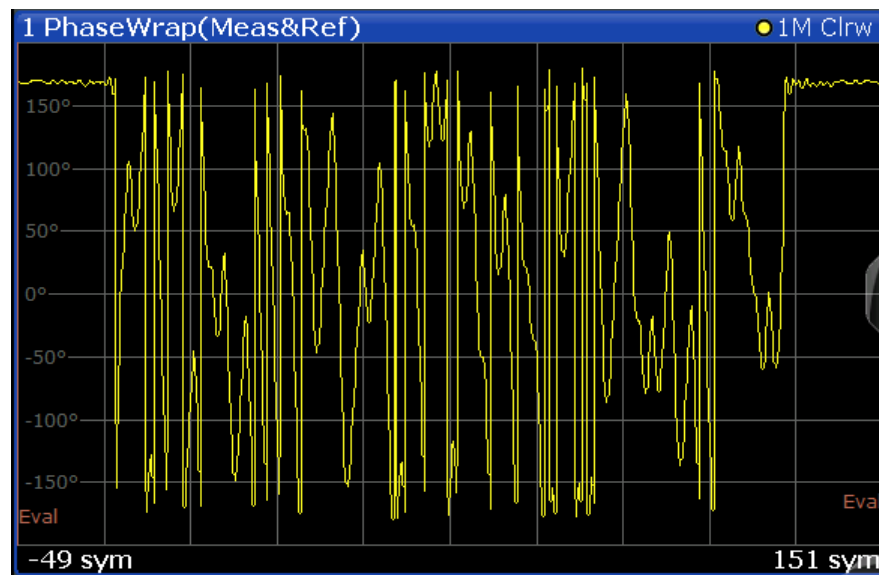


Figure 3-20: Phase Wrap result display

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the individual subframes are indicated by vertical green lines.

Remote commands:

LAY:ADD? '1', BEL, REF

To define the required source type (see [LAYout:ADD\[:WINDow\]](#) on page 545).

CALC:FORM PHASe

To define the result type (see `CALCulate<n>:FORMat` on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see `TRACe<n>[:DATA]? TRACE<n>` and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.27 Phase unwrap

The phase of the signal; the display is not limited to $[-180^\circ, 180^\circ]$.

Available for source types:

- "Meas & Ref Signal"

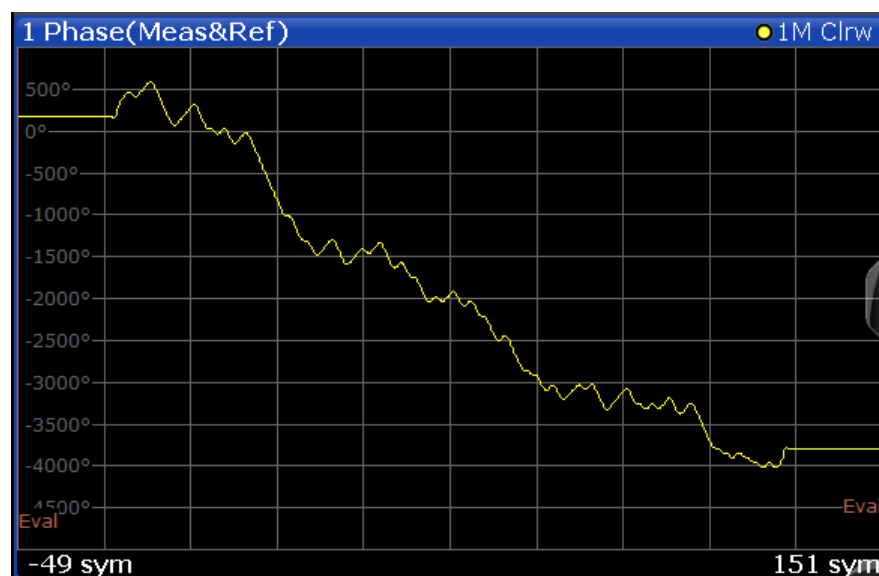


Figure 3-21: Phase Unwrap result display

For signals with a user-defined frame structure (see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the individual subframes are indicated by vertical green lines.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see `LAYout:ADD[:WINDow]` on page 545).

```
CALC:FORM UPHase
```

To define the result type (see `CALCulate<n>:FORMat` on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see `TRACe<n>[:DATA]? TRACE<n>` and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.28 Real/imag (I/Q)

Real and imaginary part of the measurement or reference signal in separate measurement diagrams; the x-axis (scaled in time units or symbols) is identical for both diagrams.

Available for source types:

- "Capture Buffer"
- "Meas & Ref Signal"
- "Error Vector"

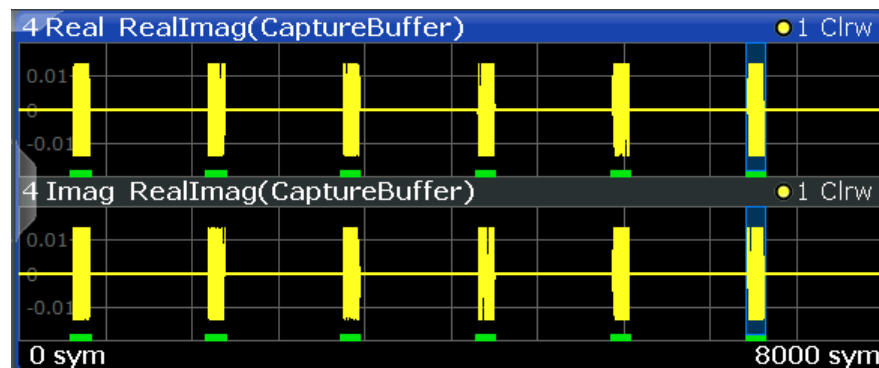


Figure 3-22: Real/Imag (I/Q) result display

Capture buffer display

Note that this result display is based on an individual capture buffer *range*. If more than 256 000 samples are captured, overlapping ranges with a size of 256 000 each are created. Only one range at a time can be displayed in the "Real/Imag" result display. For details see [Chapter 4.8, "Capture buffer display"](#), on page 167.

The scaling of the capture buffer depends on the input source:

- Scaling is relative to the current reference level for RF input.
- Scaling is relative to the full scale level for I/Q input.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM RIMag
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACE<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566).

3.2.29 Result summary

The "Modulation Accuracy" results in a table. For details on the parameters see [Chapter 3.4, "Common parameters in VSA"](#), on page 66.



"Freezing" the displayed values

You can freeze the contents of the "Result Summary" after a measurement to maintain the values on the display, while the measurement continues or is restarted. As for graphical displays, set the [Trace Mode](#) for the "Result Summary" to "View". The table is no longer updated. The "View" trace mode is indicated in the window title. To update the "Result Summary" as usual, set the trace mode back to "Clear Write".

Basis of evaluation

Most values that are displayed in the "Result Summary" are calculated over the "Evaluation Range" (see [Chapter 5.10, "Evaluation range configuration"](#), on page 265). They are evaluated according to the setting of the [Display Points/Sym](#) parameter. For example, if "Display Points/Symbol" is "1", only the symbol instants contribute to the result displayed in the "Result Summary".

Table 3-2: Results calculated over the evaluation range

| PSK, MSK, QAM | FSK |
|-------------------|-------------------|
| "EVM" | "Frequency Error" |
| "MER" | "Magnitude Error" |
| "Phase Error" | "Power" |
| "Magnitude Error" | |
| "Rho" | |
| "Power" | |

The following results that are based on internal estimation algorithms (see [Chapter 4.5, "Signal model, estimation and modulation errors"](#), on page 144) are calculated over the "Estimation range" (see also [Chapter 4.5.1.2, "Estimation"](#), on page 146).

Table 3-3: Results calculated over the estimation range

| PSK, MSK, QAM | FSK |
|---------------------------|-----------------------------|
| "Carrier Frequency Error" | "FSK Deviation Error" |
| "Symbol Rate Error" | |
| "I/Q Skew" | |
| "I/Q Offset" | "FSK Measurement Deviation" |
| "I/Q Imbalance" | "Carrier Frequency Error" |
| "Gain Imbalance" | "Carrier Frequency Drift" |
| "Quadrature Error" | |
| "Amplitude Droop" | |

Current value

In the "Current" column, the value evaluation for the current evaluation is displayed. For example, the "EVM Peak" value in the current sweep corresponds to the peak of the trace values within the evaluation range for the current sweep (as indicated by marker 1 in [Figure 3-23](#)).

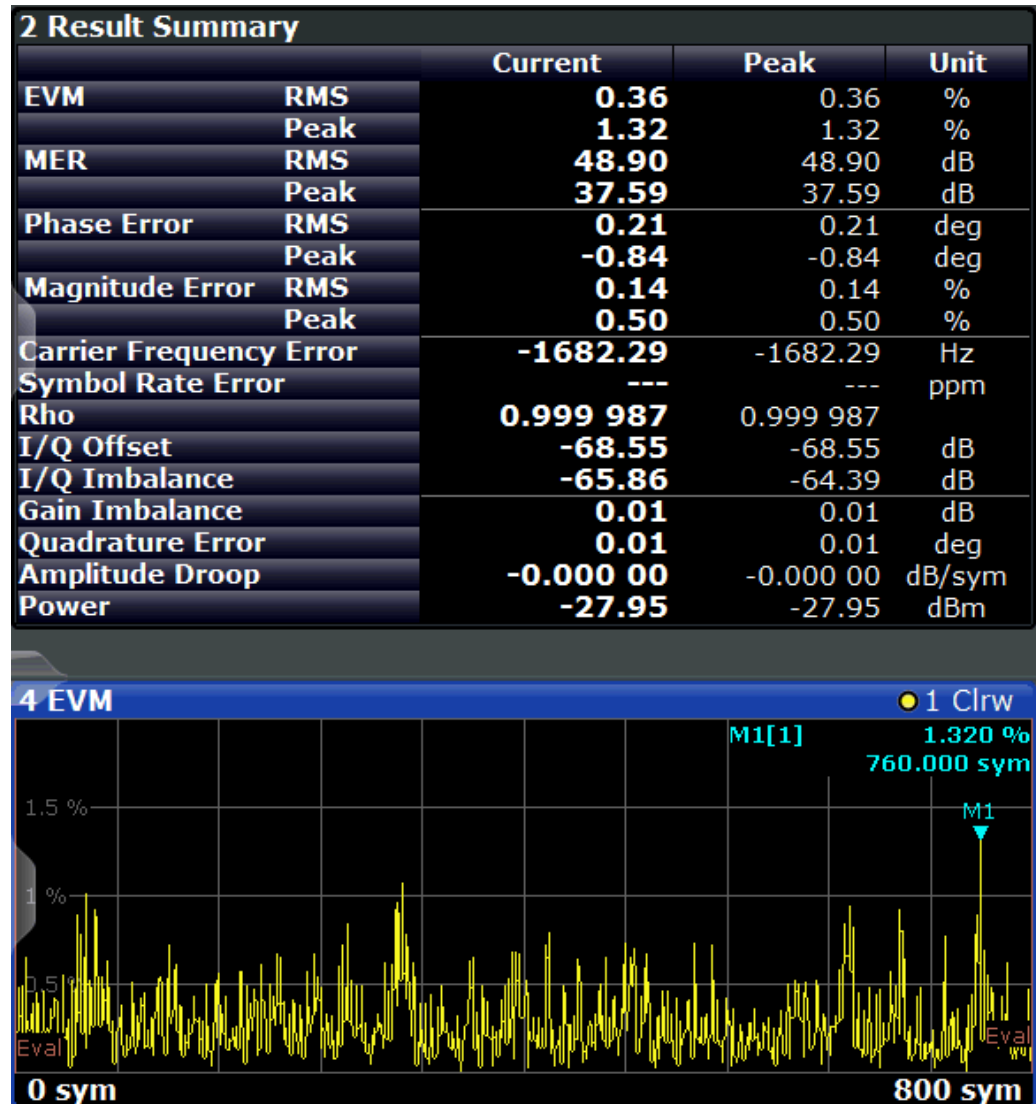


Figure 3-23: Example for Result Summary with current EVM peak value marked

If you want to compare the trace values to the results of the "Result Summary", make sure to match the displayed points per symbol of the trace and of the "Result Summary". Refer to ["Display Points/Sym"](#) on page 288 for details.

Mean value

In the "Mean" column, the linear mean of the values that are in the "Current" column is displayed. Note that if the values are in a logarithmic representation, e.g. the I/Q Offset, the linear values are averaged.

Peak value

In the "Peak" column, the maximum value that occurred during several evaluations is displayed. Note that when the value can be positive and negative, e.g. the phase error, the maximum absolute value (maintaining its sign) is displayed. The peak value of "Rho" is handled differently, since its minimum value represents the worst case. In that case, the minimum value is displayed.

Standard Deviation

The value for the standard deviation is calculated on the linear values and then converted to the displayed unit.

95-percentile

The 95-percentile value is based on the distribution of the current values. Since the phase error and the magnitude error can usually be assumed to be distributed around zero, the 95-Percentile for these values is calculated based on their absolute values. Again, the "Rho" value is handled differently. Here, the 5-Percentile is displayed, since the lowest rho value represents the worst case.

Remote commands:

```
LAY:ADD? '1',BEL, MACC
```

To define the required source type (see [LAYout:ADD\[:WINDOW\]?](#) on page 545).

```
CALC:FORM RSUM
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]](#) on page 564 and [Chapter 11.9.2.5, "Result summary"](#), on page 567).


```
CALC:MARK:FUNC:DDEM:STAT:<parameter>
```

To query individual parameter values (see [Chapter 11.9.4, "Retrieving parameter values"](#), on page 573).

Result Summary - Individual Results

The "Result Summary" can display either all or only a single modulation accuracy parameter. Only the most important parameters can be displayed individually, namely the parameters for which modulation accuracy limits can be defined (see ["Limit Value"](#) on page 284).

To select individual results for display, tap the "Result Summary" table header (only once - a double-tap maximizes the "Result Summary" window). A "Table Configuration" dialog box is displayed in which you can select the parameter to be displayed.

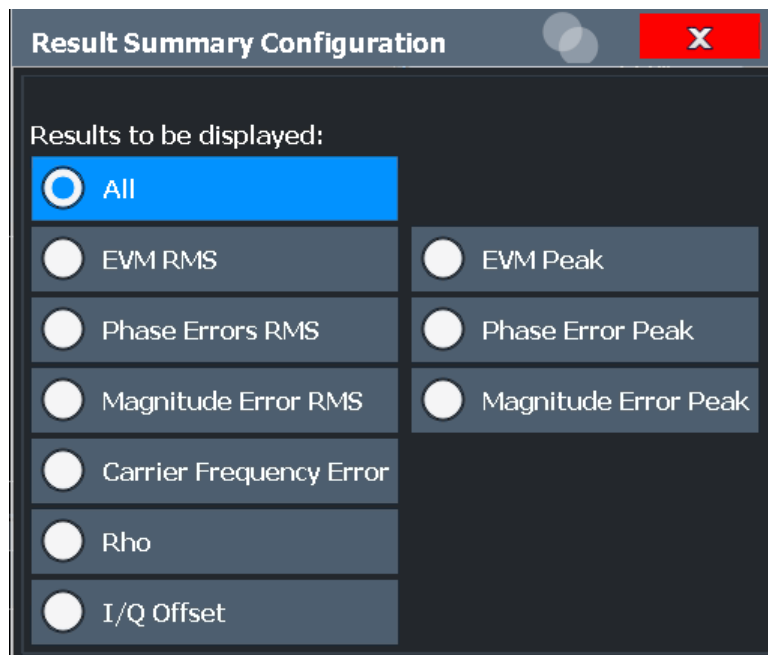

By default, all parameters are displayed. If you select a specific parameter, the "Result Summary" display is replaced by the individual result display.

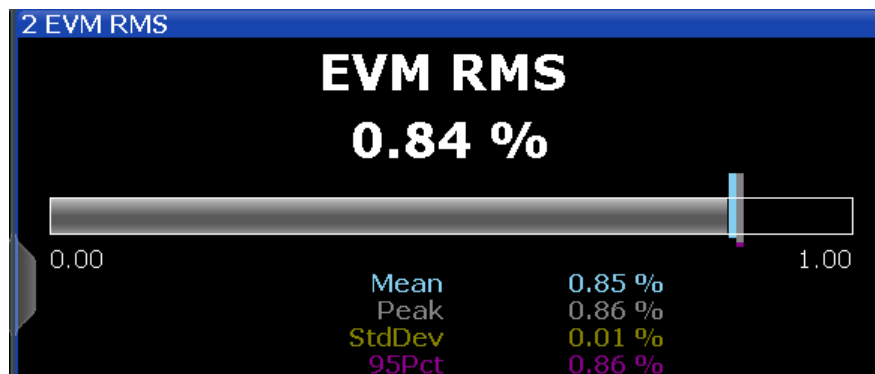


Figure 3-24: Result display for individual value in Result Summary

In addition to the current measurement value, the statistical results (see [Chapter 3.2.29, "Result summary"](#), on page 55) and the peak limit value (see ["Limit Value"](#) on page 284) for the selected parameter are displayed.

For details on the displayed results, see [Chapter 3.4, "Common parameters in VSA"](#), on page 66.

Remote command:


`DISPlay[:WINDow<n>]:ITEM[:LINE][:VALue]` on page 557

3.2.30 Spectrum (capture buffer + error)

This display combines two diagrams in one. The first trace displays the spectrum of the real/imaginary data in the capture buffer. The second trace displays the spectrum of

the real/imaginary data of the error. Optionally, the data source of the traces can be switched. Which source is currently displayed for which trace is indicated in the window title bar.

(See also [Figure 2-2](#)).

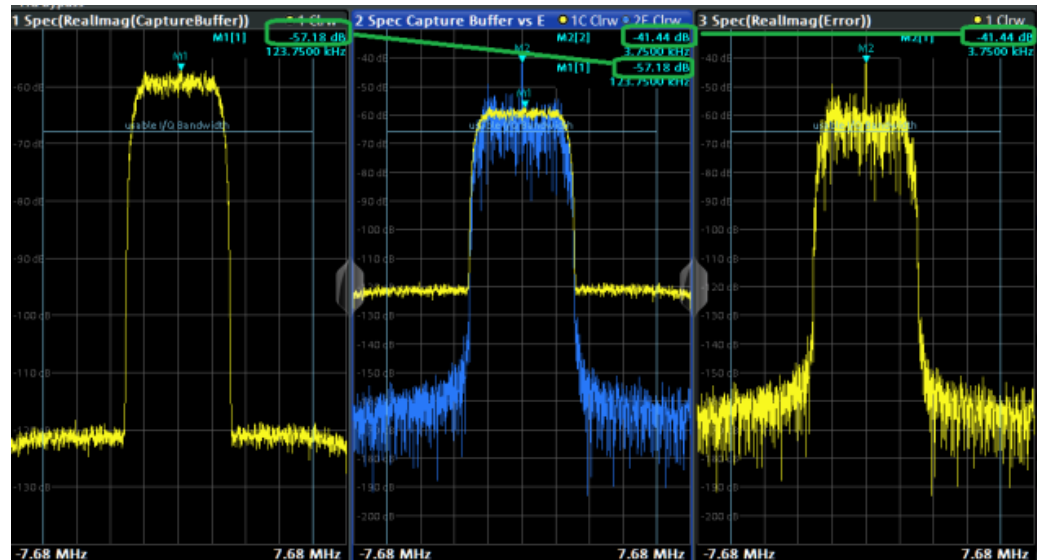

Carrier-in-carrier signals

For carrier-in-carrier measurements, this result display makes both carriers visible. The following example shows two superimposed QPSK signals: one with a symbol rate of 10 MHz (the analyzed signal, yellow), one with a symbol rate of 3 MHz, whose spectrum becomes visible in the error trace (blue).

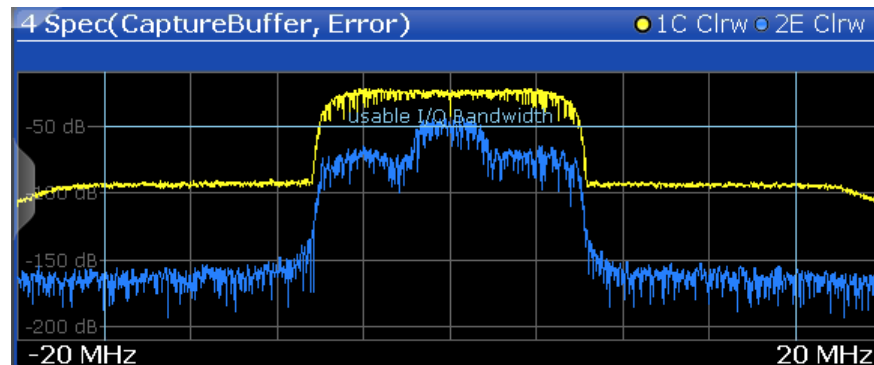


Figure 3-25: Example of a carrier-in-carrier signal in a multi source result display.

Similarly, the "Spectrum (Measurement + Error)" result display can be used to reveal carrier-in-carrier signals.

Remote commands:

```
LAY:ADD? '1',BEL, MCOM
```

To define the required source type (see [LAYout:ADD\[:WINDow\]? on page 545](#)).

```
CALC:FEED 'XTIM:DDEM:TCAP:ERR'
```

To define the result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:TRAC TCAP; CALC:TRAC2 ERR
```

To define trace1 to be based on the capture buffer data and trace 2 on the error (default, see [CALCulate<n>:TRACe<t>\[:VALue\]](#) on page 514).

```
TRAC:DATA? TRACE1
```

To query the trace results for capture buffer data (see [TRACe<n>\[:DATA\]?](#) [TRACe<n>](#) and [Chapter 11.9.2.4, "Symbols"](#), on page 567).


```
TRAC:DATA? TRACE2
```

To query the trace results for error data.

3.2.31 Spectrum (measurement + error)

This display combines two diagrams in one. The first trace displays the spectrum of the real/imaginary data from the measured signal. The second trace displays the spectrum of the real/imaginary data of the error. Optionally, the data source of the traces can be switched. Which source is currently displayed for which trace is indicated in the window title bar.

(See also [Figure 2-2](#)).

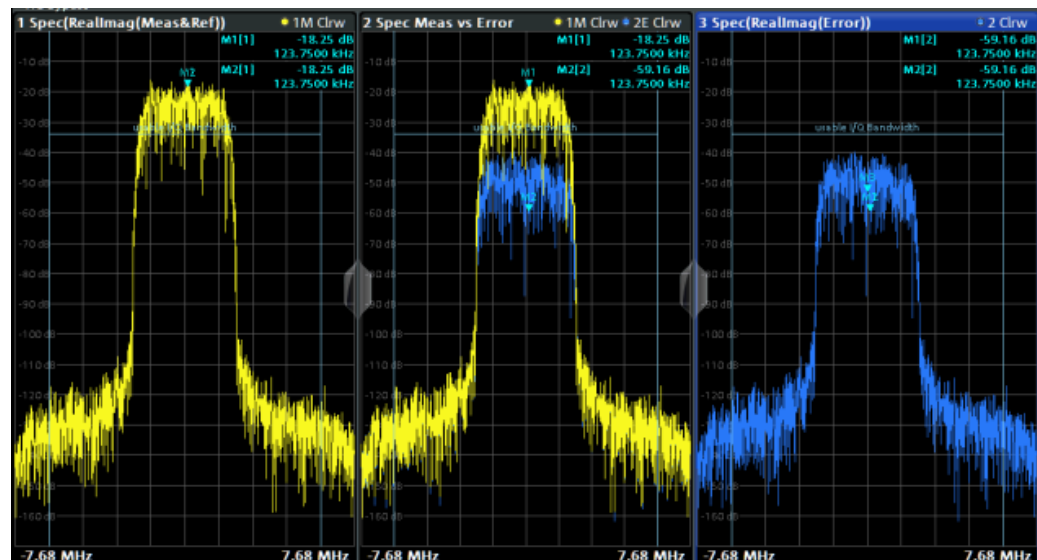

Remote commands:

```
LAY:ADD? '1', BEL, MCOM
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FEED 'XTIM:DDEM:MEAS:ERR'
```

To define the result type (see [CALCulate<n>:FEED](#) on page 554).

```
CALC:TRAC MEAS; CALC:TRAC2 ERR
```

To define trace1 to be based on the measurement data and trace 2 on the error (default, see [CALCulate<n>:TRACe<t>\[:VALue\]](#) on page 514).

```
TRAC:DATA? TRACE1
```

To query the trace results for measurement data (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.4, "Symbols"](#), on page 567).

```
TRAC:DATA? TRACE2
```

To query the trace results for error data.

3.2.32 Symbol table

Symbol numbers are displayed as a table. Each symbol is represented by an entry in the table. The symbols can be displayed in binary, octal, hexadecimal or decimal format (for individual tables, see ["Symbol format"](#) on page 252). You can configure the order of the transmitted bits to be most significant bit first (MSB, default) or least significant bit first (LSB), see ["Bit Ordering"](#) on page 262. Depending on the selected bit ordering, the symbols are displayed and must be interpreted as MSB first or LSB first.

Example:

| 4 Symbols | | | | (Hexadecimal) (LSB) | | | | | | | | | | | | | |
|-----------|---|---|---|---------------------|---|---|---|---|---|---|---|----|---|----|---|----|---|
| | + | 1 | + | 3 | + | 5 | + | 7 | + | 9 | + | 11 | + | 13 | + | 15 | ▲ |
| 0 | 3 | 3 | 0 | 3 | 0 | 3 | 3 | 0 | 3 | 0 | 2 | 1 | 2 | 1 | 2 | 1 | |
| 16 | 1 | 0 | 3 | 1 | 3 | 2 | 3 | 2 | 3 | 0 | 0 | 1 | 3 | 1 | 1 | 2 | |
| 32 | 1 | 3 | 3 | 2 | 1 | 1 | 0 | 1 | 3 | 3 | 2 | 1 | 0 | 0 | 1 | 0 | |
| 48 | 1 | 0 | 3 | 3 | 0 | 3 | 2 | 2 | 0 | 2 | 1 | 0 | 0 | 3 | 0 | 1 | |
| 64 | 3 | 3 | 2 | 0 | 1 | 0 | 3 | 2 | 3 | 0 | 1 | 0 | 0 | 2 | 1 | 1 | |
| 80 | 0 | 1 | 2 | 1 | 3 | 3 | 0 | 3 | 2 | 1 | 0 | 0 | 1 | 0 | 3 | 1 | |
| 96 | 0 | 3 | 2 | 3 | 3 | 0 | 1 | 2 | 3 | 0 | 1 | 2 | 3 | 3 | 0 | 3 | |
| 112 | 0 | 3 | 2 | 3 | 0 | 3 | 0 | 3 | 1 | 0 | 3 | 0 | 3 | 0 | 1 | 2 | |
| 128 | 1 | 3 | 0 | 1 | 2 | 1 | 2 | 3 | 0 | 3 | 1 | 2 | 3 | 3 | 0 | 1 | |
| 144 | 3 | 0 | 3 | 2 | 0 | 3 | 0 | 3 | 2 | 1 | 3 | 0 | 1 | 2 | 1 | . | |

Figure 3-26: Symbols result display in hexadecimal mode

The evaluation range is indicated by red brackets.

Any marked symbols are highlighted by a blue frame (also coupled markers in other windows, see ["Couple Windows"](#) on page 278). Deltamarkers on symbols are indicated by a dotted blue frame.

If a pattern search is active, a found pattern is indicated by a green background in the symbol table. If, during demodulation, individual symbols do not match the pattern after all, these symbols are indicated by red values.

If known data is loaded as a reference, symbols which do not match this data are also indicated by red values.

| 4 Symbols | | | | | | | | | | | | | | | | (Hexadecimal) | | | |
|-----------|---|---|---|---|---|---|---|---|---|---|---|----|---|----|---|---------------|--|--|--|
| | + | 1 | + | 3 | + | 5 | + | 7 | + | 9 | + | 11 | + | 13 | + | 15 | | | |
| 0 | 7 | 7 | 7 | 5 | 1 | 1 | 7 | 2 | 7 | 2 | 4 | 2 | 2 | 0 | 6 | 3 | | | |
| 16 | 4 | 1 | 3 | 6 | 6 | 6 | 3 | 2 | 0 | 7 | 3 | 6 | 0 | 7 | 7 | 7 | | | |
| 32 | 0 | 1 | 7 | 3 | 7 | 0 | 5 | 6 | 3 | 1 | 0 | 1 | 1 | 2 | 3 | 5 | | | |
| 48 | 5 | 0 | 7 | 4 | 7 | 6 | 3 | 3 | 0 | 5 | 2 | 2 | 1 | 7 | 7 | 1 | | | |
| 64 | 7 | 7 | 1 | 7 | 1 | 1 | 1 | 7 | 7 | 7 | 7 | 1 | 7 | 7 | 7 | 1 | | | |
| 80 | 7 | 7 | 1 | 7 | 1 | 1 | 1 | 6 | 1 | 5 | 5 | 2 | 7 | 0 | 4 | 6 | | | |
| 96 | 1 | 0 | 4 | 0 | 0 | 4 | 1 | 0 | 6 | 0 | 4 | 7 | 1 | 2 | 5 | | | | |

Figure 3-27: Symbol errors in the symbol table

Tip: If you assume that a signal has a pattern, but do not know it in advance, you can identify it using the symbol table. Measure the signal and check for a pattern in the symbol table. Then you can copy the symbols from the symbol table to the pattern definition for subsequent measurements (see "Import Symbols" on page 252).

Signals with two different modulation types

For signals with two different modulation types (requires option FSW-K70M), the color of the symbol field indicates the used **Modulation** and **Type**:

- **Green background:** Pattern modulation and pattern type (for pattern only)
- **Green frame:** Pattern modulation and data type (for meta data)
- **No highlighting:** Data modulation and data type (for payload data)

Remote commands:

To define the required source type (see `LAYout:ADD[:WINDow]?` on page 545):

```
LAY:ADD? '1',BEL, 'XTIM:DDEM:SYMB'
```

To define the symbol format:

`CALCulate<n>:FORMat` on page 555

To query the results (see `TRACe<n>[:DATA]` on page 564 and [Chapter 11.9.2.4, "Symbols"](#), on page 567):

Symbols:

```
TRAC1:DATA? or TRAC1:DATA? STR
```

Symbol errors:

```
TRAC1:DATA? MSTR
```

Pattern errors:

```
TRAC1:DATA? PSTR
```

3.2.33 Vector frequency

The instantaneous frequency of the source signal as an X/Y plot; all available samples (as defined by the display points per symbol parameter (see "Display Points/Sym" on page 288)) are drawn and connected.

Available for source types:

- "Meas & Ref Signal"

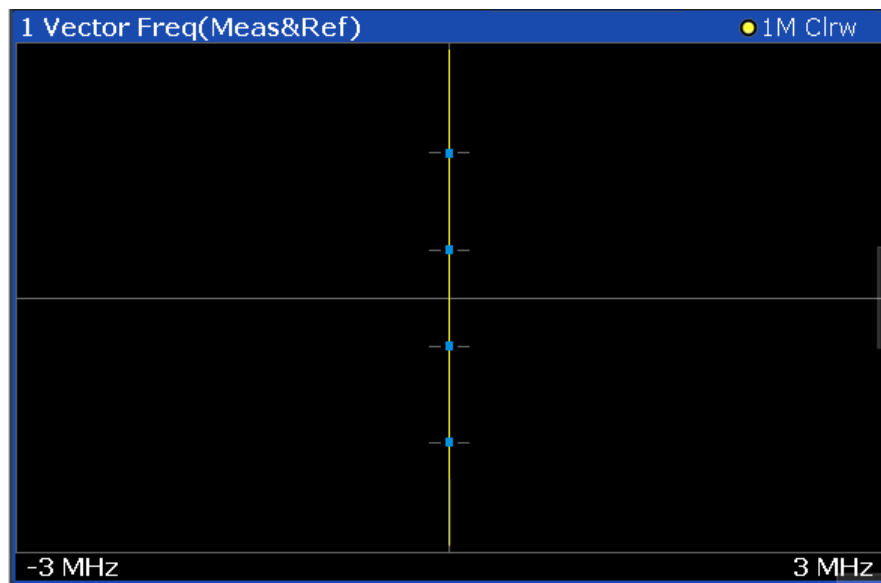


Figure 3-28: Vector Frequency result display

A special density trace mode is available for this diagram. The occurrence of each value within the current result range or evaluation range is indicated by color.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545)

```
CALC:FORM COVF
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555)

```
TRAC:DATA? TRACE1
```

To query the trace results (see [TRACe<n>\[:DATA\]? TRACE<n>](#) and [Chapter 11.9.2.3, "Polar diagrams"](#), on page 567)

3.2.34 Vector I/Q

The complex source signal as an X/Y plot; all available samples (as defined by the display points per symbol parameter, see "Display Points/Sym" on page 288) are drawn and connected.



The scaling of the capture buffer depends on the input source:

- Scaling is relative to the current reference level for RF input.
- Scaling is relative to the full scale level for I/Q input.

Available for source types:

- "Capture Buffer"
- "Meas & Ref Signal"
- "Error Vector"

Capture buffer display

Note that this result display is based on an individual capture buffer *range*. If more than 256 000 samples are captured, overlapping ranges with a size of 256 000 each are created. Only one range at a time can be displayed in the "Vector I/Q" result display. For details see [Chapter 4.8, "Capture buffer display"](#), on page 167.

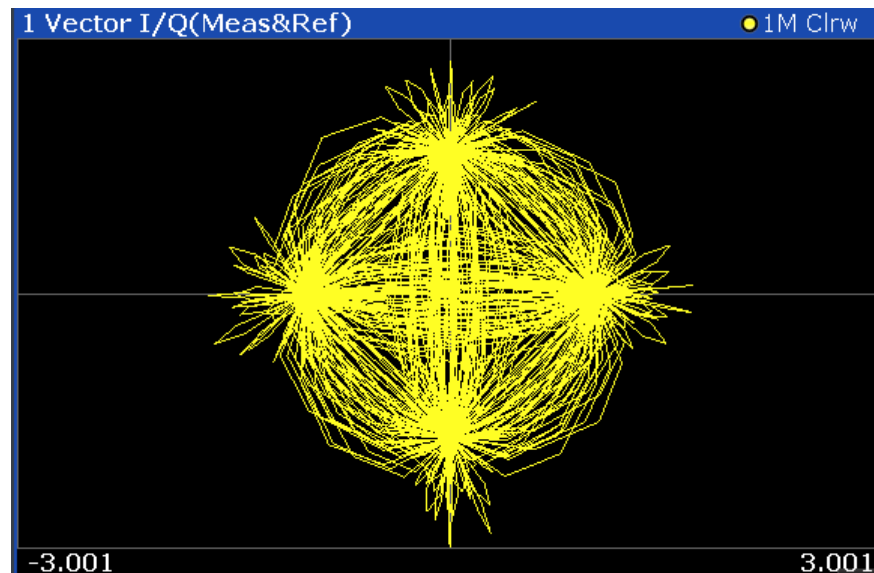


Figure 3-29: Vector I/Q result display

A special density trace mode is available for this diagram. The occurrence of each value within the current result range or evaluation range is indicated by color.

Remote commands:

```
LAY:ADD? '1',BEL,MEAS
```

To define the required source type (see [LAYout:ADD\[:WINDow\]?](#) on page 545).

```
CALC:FORM COMP
```

To define the result type (see [CALCulate<n>:FORMat](#) on page 555).


```
TRAC:DATA? TRACE1
```


To query the trace results (see [TRACe<n> \[:DATA \] ? TRACE<n>](#) and [Chapter 11.9.2.3, "Polar diagrams"](#), on page 567).

3.3 Predefined display configuration

Access: [MEAS] > "Predefined Display Config"

The R&S FSW VSA application allows you to configure the screen layout very flexibly according to your specific measurement requirements. To get started, some typical and useful display configurations are predefined. Select the required scenario and the display is configured suitably.

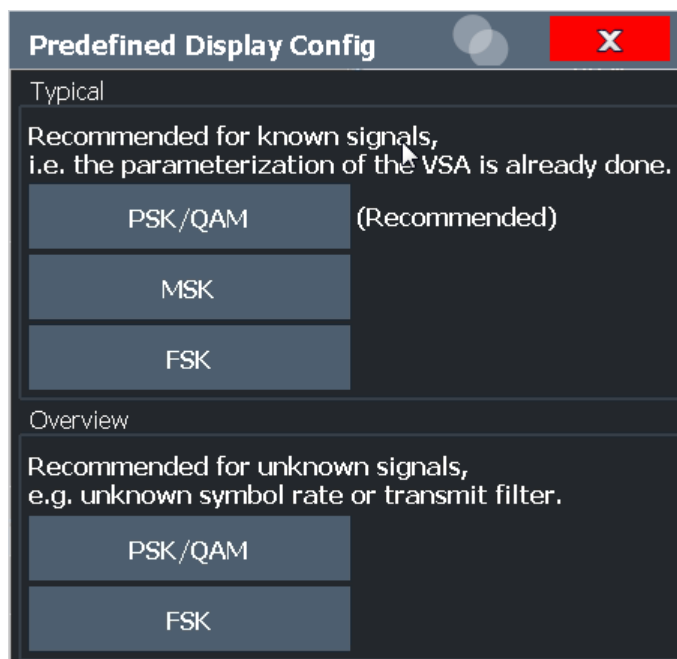

To store your personal typical screen layout, save your current measurement settings (including the screen layout) as a standard.

See ["To store settings as a standard file"](#) on page 293.

Typical

Provides several result displays for the most frequently required results when measuring a known signal using a specific modulation.

Overview

Provides useful result displays to determine the relevant signal characteristics of an unknown signal.

See also the application sheet [R&S®FSW-K70 Analyzing Unknown Signals](#) on the Rohde & Schwarz Internet site.

Remote command:

[\[SENSe:\] DDEMod:PRESet:CALC](#) on page 553

3.4 Common parameters in VSA

Depending on the modulation type you are using, different signal parameters are determined during vector signal analysis and displayed in the [Result summary](#).

Details concerning the calculation of individual parameters can be found in [Chapter 4.5, "Signal model, estimation and modulation errors"](#), on page 144 and [Chapter F, "Formulae"](#), on page 629.

Table 3-4: Parameters for PSK, QAM and MSK modulation

| Parameter | Description | SCPI parameter |
|--------------------------------|---|----------------|
| "EVM - RMS/Peak" | "Error Vector" Magnitude, normalized to mean reference power by default (see "Normalize EVM to" on page 260) | EVM |
| "MER - RMS/Peak" | Modulation Error Ratio (MER) | SNR |
| "Phase Error - RMS"/"Peak" | The phase difference between the measurement vector and the reference vector | PERR |
| "Magnitude Error - RMS"/"Peak" | The average (RMS) and peak magnitude error in %. The magnitude error is the difference of the measured magnitude to the magnitude of the reference signal. The magnitude error is normalized to the mean magnitude of the reference signal. | MERRor |
| "Carrier Frequency Error" | The mean carrier frequency offset in Hz | CFERror |
| "Symbol Rate Error" | Difference between the currently measured symbol rate and the defined symbol rate in ppm. (Only if compensation for SRE is activated, see "Compensate for... [(PSK, MSK, ASK, QAM)]" on page 257) | SRER |
| "I/Q Skew" | Constant time difference between the I and Q data, for example due to different cable lengths (Only if compensation for I/Q skew is activated, see "Compensate for... [(PSK, MSK, ASK, QAM)]" on page 257) | IQSK |
| "Rho" | | RHO |
| "I/Q Offset" | Offset in the original input | OOFset |
| "I/Q Imbalance" | Not for BPSK. | IQIMbalance |
| "Gain Imbalance" | Not for BPSK. | GIMBalance |
| "Quadrature Error" | Not for BPSK. | QERRor |
| "Amplitude Droop" | The decrease of the signal power over time in the transmitter | ADRoop |
| "Power" | The power of the measured signal | MPOWer |

Table 3-5: Parameters for FSK modulation only

| Parameter | Description | SCPI parameter |
|--------------------------------|---|----------------|
| "Frequency Error - RMS"/"Peak" | The average (RMS) and peak frequency error in %. The frequency error is the difference of the measured frequency and the reference frequency. The frequency error is normalized to the estimated FSK deviation. | FSK:DERror |
| "FSK Deviation Error" | The deviation error of FSK modulated signals in Hz, i.e. the difference of the measured FSK deviation and the user-defined FSK reference deviation. | FDError |
| "FSK Meas Deviation" | The estimated deviation of FSK modulated signals in Hz. | FSK:MDEviation |
| "FSK Ref Deviation" | The reference deviation you have set in Hz. | FSK:RDEviation |
| "Carrier Frequency Drift" | The mean carrier frequency drift in Hz per symbol. | FSK:CFDRift |

Remote command:

```
CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:<Parameter>?
```

4 Measurement basics

Some background knowledge on basic terms and principles used in VSA is provided here for a better understanding of the required configuration settings.

For information on the basic processing of I/Q data in the FSW, see the FSW I/Q Analyzer User Manual.

- [Filters and bandwidths during signal processing](#)..... 68
- [Sample rate, symbol rate and I/Q bandwidth](#)..... 75
- [Symbol mapping](#)..... 97
- [Overview of the demodulation process](#)..... 131
- [Signal model, estimation and modulation errors](#)..... 144
- [Measurement ranges](#)..... 161
- [Display points vs estimation points per symbol](#)..... 166
- [Capture buffer display](#)..... 167
- [Known data files - dependencies and restrictions](#)..... 169
- [Known data from PRBS generators](#)..... 170
- [Multi-modulation analysis \(FSW-K70M\)](#)..... 172
- [VSA in MSRA/MSRT operating mode](#)..... 178

4.1 Filters and bandwidths during signal processing

This section describes the used filters in vector signal analysis with an FSW, and the bandwidth after each filter.

The relevant filters for vector signal analysis are shown in [Figure 4-1](#).

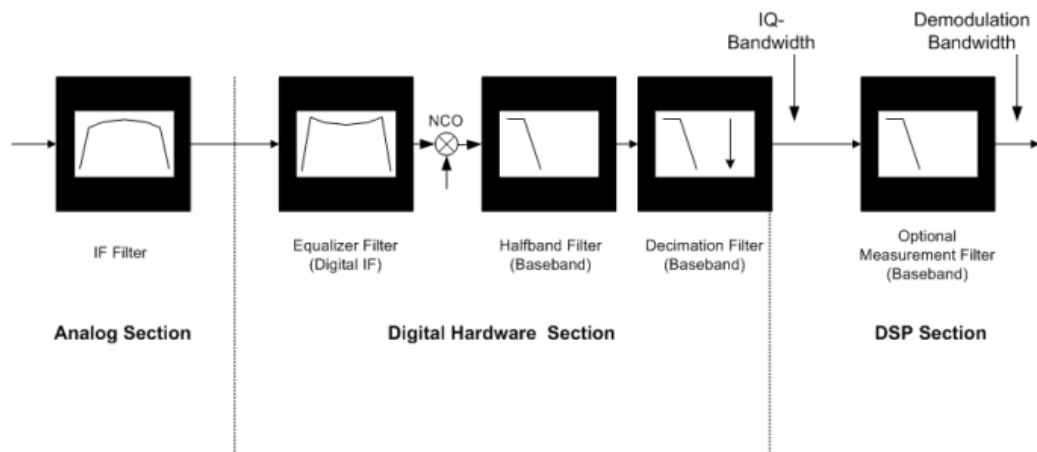


Figure 4-1: Block diagram of bandwidth-relevant filters for vector signal analysis

- After the IF Filter (only for RF input operation): bandwidth = 5 MHz, 17 MHz, 80 MHz, or 500 MHz, depending on the [Data acquisition](#) settings and the installed bandwidth options
- After the digital hardware section:

The phase and amplitude distortions of the IF filter have been compensated for. Usually, the I/Q data has a usable bandwidth of about:

$0.8 \cdot \text{sample rate}$

For details, refer to [Chapter 4.1.1, "I/Q bandwidth"](#), on page 69.

The I/Q data sample rate and bandwidth are automatically adjusted to the set symbol rate. For most modulated signals, even the smallest allowed value for the sample rate leads to a sufficient I/Q data bandwidth. The whole spectrum of the input signal is captured, but most adjacent channels and interferers are effectively suppressed. Only for very wide signals (FSK, no TX-filter used) it can be necessary to try higher values for the sample rate (see [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75), increasing the I/Q bandwidth. The I/Q data delivered to the DSP section has no considerable amplitude or phase distortion and a suitable bandwidth.



The "Signal Capture" dialog box ("Data Acquisition" tab) shows the sample rate and the usable I/Q bandwidth achieved for the current settings (see ["Usable I/Q Bandwidth"](#) on page 232).

- After the optional measurement filter:
Various measurement filters which have different bandwidths can filter the measurement signal and the reference signal.

The filters described above are the ones that directly affect the bandwidth of the captured I/Q data and the final measurement signal and reference signal. Note, however, that several other filters are also involved in the DSP section but are not mentioned above:

- Receive filter to prevent ISI (intersymbol-interference)
- Filters necessary for various estimators
- Others

4.1.1 I/Q bandwidth

The bandwidth of the I/Q data used as input for the vector signal analysis is filtered as described in [Chapter 4.1, "Filters and bandwidths during signal processing"](#), on page 68. Its flat, usable bandwidth (no considerable amplitude or phase distortion) depends on:

- The used sample rate, which depends on:
 - The defined "Symbol Rate" (see ["Symbol Rate"](#) on page 189)
 - The defined "Sample Rate" parameter (see ["Sample Rate"](#) on page 231)
- The type of input used (digital baseband input, RF input, etc.)

For details on the maximum usable bandwidth, see [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75.



The sample rate and the usable I/Q bandwidth achieved for the current settings is displayed in the "Signal Capture" dialog, see [Chapter 5.5.1, "Data acquisition"](#), on page 230.

4.1.2 Demodulation bandwidth (measurement bandwidth)

Some modulation systems do not use a receive filter. In these cases, take special care that no interference or adjacent channels occur within the demodulation bandwidth. Set the "Sample rate" parameter to a low value (see ["Sample Rate"](#) on page 231).



Typical communication systems demand special receive or measurement filters (e.g. root-raised cosine receive filter or EDGE measurement filter).

If no such filtering is performed, make sure that interfering signals or adjacent channels do not fall within the demodulation bandwidth.

4.1.3 Modulation and demodulation filters

For demodulation, the analyzer requires sample points at which only information of the current symbol and none of neighboring symbols is present (symbol points). These points are also called ISI-free points (ISI = intersymbol interference). If the transmitter does not provide an ISI-free signal after the transmit filter (**TX filter**), the analyzer can filter the input signal using a **receive filter** or **Rx filter**. If the transmitter uses an RRC (root-raised cosine) filter, the analyzer must also use an RRC filter to obtain ISI-free points.

In many PSK systems, RRC filters are used as transmit, receive and measurement filters. To determine the I/Q modulation error, the measurement signal must be compared with the corresponding ideal signal. Therefore, the analyzer calculates a **reference filter** by convolving the coefficient of the transmit filter ("**Tx filter**") and the "**Meas filter**" (see [Figure 4-2](#)).

When measuring unfiltered signals (e.g. to determine nonlinear signal distortions), no measurement filter is switched into the signal path and the **reference filter** is identical to the **transmit filter** (see [Figure 4-2](#)).

In the baseband block diagrams (see [Figure 4-2](#)), the system-theoretical transmitter and analyzer filters are shown for PSK and QAM demodulation. For the sake of clarity, RF stages, IF filters and the filter stages of the **digital hardware section** are not shown.

For a correct demodulation, the following filters have to be accurately specified for the analyzer:

- Transmit filter: filter characteristic of transmitter
- Measurement filter:
 - PSK, QAM, UserQAM, MSK:
The I and the Q part of the measurement and the reference signal are filtered with this filter.

– FSK:

The instantaneous frequency of the measurement reference signal is filtered.

In many applications, the measurement filter is identical to the receive filter.

The receive filter (also referred to as an *ISI filter*) is configured internally depending on the transmit filter. The goal is to produce intersymbol-interference-free points for the demodulation.

The reference filter generates the ideal transmitted signal (after meas filtering). The analyzer calculates the reference filter from the above filters (convolution operation **transmit filter * meas filter**).

Typical combinations of transmit and measurement filters are shown in [Table C-3](#); they can be set in the R&S FSW VSA application using "Meas filter = AUTO" (see ["Using the Transmit Filter as a Measurement Filter \(Auto\)"](#) on page 263). For some filters, a roll-off factor is required:

| Filter type | Required parameters |
|--------------------------|---------------------|
| RC (raised cosine) | Alpha |
| RRC (root-raised cosine) | Alpha |
| Gaussian | BT |

Typically the Alpha/BT value of the measurement filter is the same as the value of the transmission filter.

4.1.4 Measurement filters

The measurement filter can be used to filter the following two signals in the same way:

- The measurement signal (after coarse frequency, phase and timing synchronization have been achieved)
- The reference signal, i.e the I/Q symbols that have been determined in the demodulator and have already been filtered with the Transmit filter;

For FSK, the measurement filter filters the instantaneous frequency of the signal, not the I/Q signal.

For MSK, PSK, QAM and User QAM the measurement filter filters the real part and imaginary part of these signals (i.e. not the instantaneous frequency or magnitude of the signal).

The R&S FSW VSA application defines the error signal as the difference between the reference signal and the measurement signal. Thus, the measurement filter also shapes the spectrum of the error signal, which is used to calculate the EVM, for example.

In many applications, the measurement filter is the same as the RX filter. However, unlike the measurement filter, the RX filter is not relevant for the measurement, but is only required to create the reference signal optimally.

If possible, the RX filter and the transmit filter are chosen such that their combination results in an Inter-Symbol Interference (ISI) free system (see Figure 4-2 and Figure 4-3).

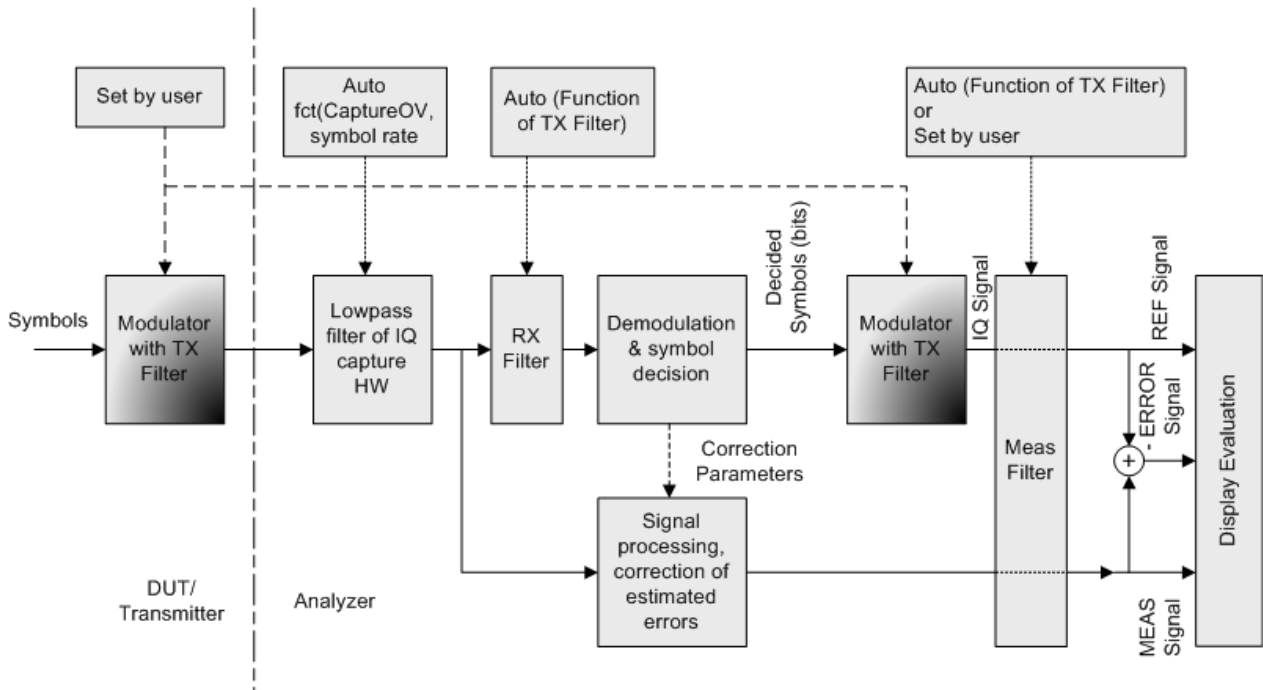


Figure 4-2: Measurement filter in the block diagram (MSK, PSK, QAM and UserQAM)

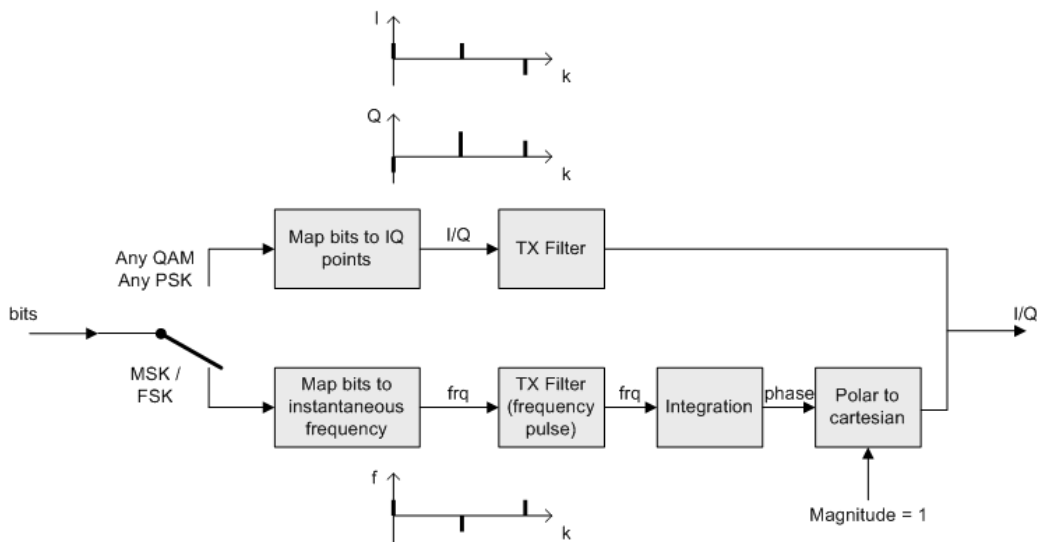


Figure 4-3: Modulator with Transmit filter in detail

As the measurement filters of the R&S FSW VSA application have low-pass characteristics, they suppress high frequency distortion components in the Meas/Ref/Error signal. The errors are weighted spectrally. Thus, turning off the measurement filter can have an influence on the numeric and graphical error values. However, to measure

non-linear distortions, which usually produce high frequency components, switch off the measurement filter.

Predefined measurement filters

The most frequently required measurement filters are provided by the R&S FSW VSA application (see [Chapter C.2, "Measurement filters"](#), on page 623).

The frequency response of the available standard-specific measurement filters is shown in [Chapter F.6.2, "Measurement filter"](#), on page 636.

4.1.5 Customized filters

The analytical filter types RC (raised cosine), RRC (root-raised cosine), GAUSSIAN, and the most important standard-specific filters, are already integrated in the R&S FSW VSA application. In addition, it is possible to use user-defined measurement and transmit filters. Customized filters are useful for the following purposes:

- Developing new networks and modulation methods for which no filters are defined yet
- Measuring transmitter characteristics with slightly modified (e.g. shortened) transmitter filters

An external program ("FILTWIZ") is offered to convert user-defined filters. This program generates filter files (*.vaf) which can be transferred to the analyzer with a USB device, for example. The program can be downloaded together with a detailed description as a precompiled MATLAB® file (MATLAB pcode) on the Internet, at <http://www.rohde-schwarz.com> (search term "FILTWIZ").

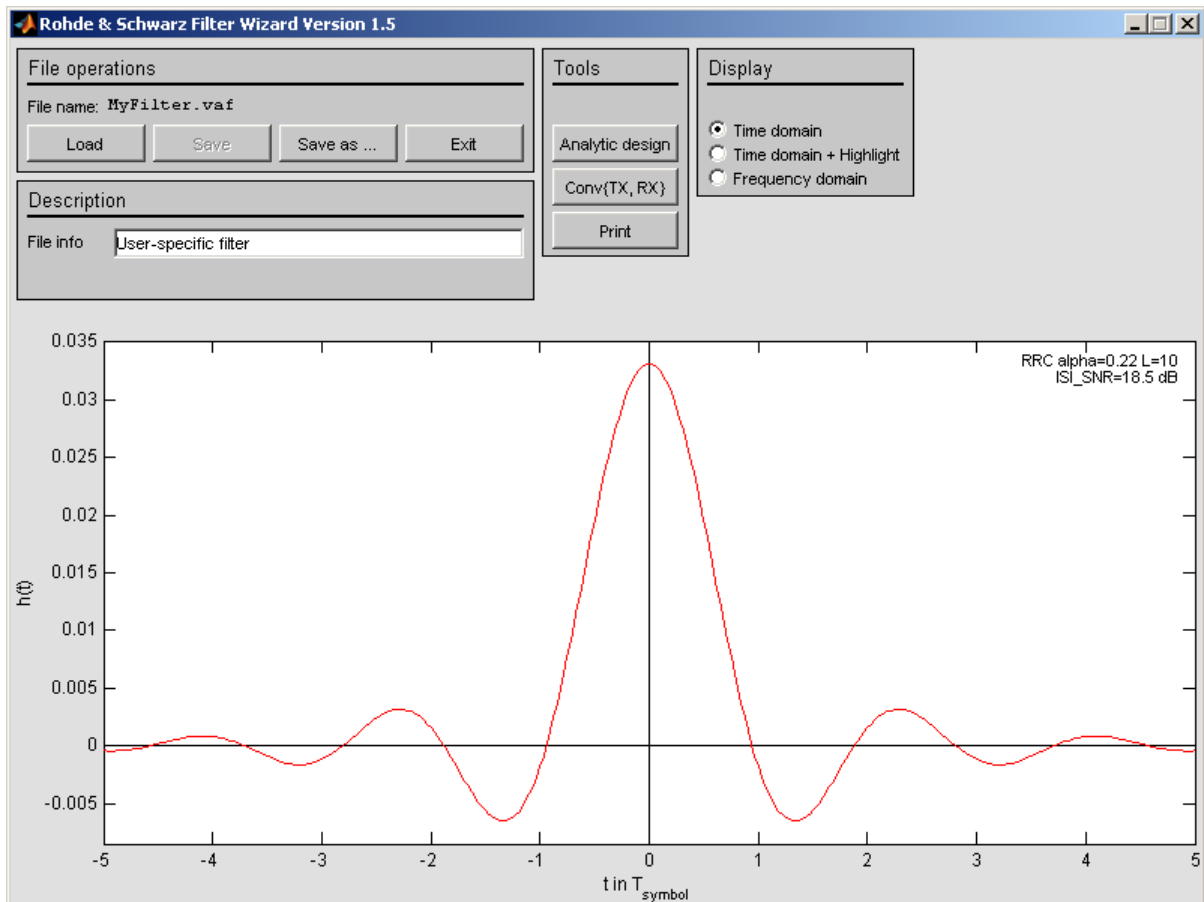


Figure 4-4: FILTWIZ - filter tool for VSA

It is possible to load customized transmit filters and customized measurement filters. If you select a customized transmit filter, the internal receive filter coefficients are calculated automatically right away.



Unlike the R&S FSW VSA application, the R&S FSQ-K70 required you to transfer a user-defined receive filter, as well.

If you upload a customized transmit filter and leave the measurement filter set to "automatic", the internally calculated receive filter is used as a measurement filter. Note that this filter is not necessarily suitable for your specific signal. The filter is optimized such that the intersymbol interference is low. Hence, you probably see a clear eye diagram and a "Vector I/Q" diagram with a recognizable constellation. However, a filter that has low intersymbol interference can lead to noise enhancement, which is commonly undesirable for a measurement filter.

To avoid noise enhancement, it is recommended that you do one of the following:

- Design your own measurement filter and upload it as a user filter.
- Select a suitable measurement filter from the list.

Transferring filter files to the FSW

You can transfer the (.vaf) filter files to the FSW using a USB memory device.

4.2 Sample rate, symbol rate and I/Q bandwidth

The "Symbol Rate" defined in the "Signal Description" settings determines how many symbols are captured and demodulated during a certain measurement time. However, for each symbol more than one sample can be captured, so that the sample rate can be higher than the symbol rate.

The "Sample Rate" parameter in the "Signal Capture" settings defines the **number of samples to capture per symbol**. (Do not confuse this number with the estimation points per symbol or display points per symbol, see [Chapter 4.7, "Display points vs estimation points per symbol"](#), on page 166). The resulting sample rate (depending on the "Symbol Rate") is indicated behind the parameter.



The number of samples to capture per symbol is commonly referred to as the **"Capture Oversampling"** value in Rohde & Schwarz signal and spectrum analyzers.

The resulting sample rate, also referred to as the user or output sample rate, is the rate at which the I/Q data is demodulated and analyzed. The sample rate also affects the demodulation (measurement) bandwidth. If the bandwidth is too narrow, the signal is not displayed completely. If the bandwidth is too wide, interference from outside the actual signal to be measured can distort the result. Thus, for signals with a large frequency spectrum (e.g. FSK modulated signals), a higher sample rate can be necessary.

(For further details, see [Chapter 4.1, "Filters and bandwidths during signal processing"](#), on page 68.)

For an indication of the required sample rate, view the "Real/Imag (I/Q)" display of the capture buffer with a "Spectrum" transformation. If the complete signal is displayed within the usable I/Q bandwidth, the selected value is suitable.

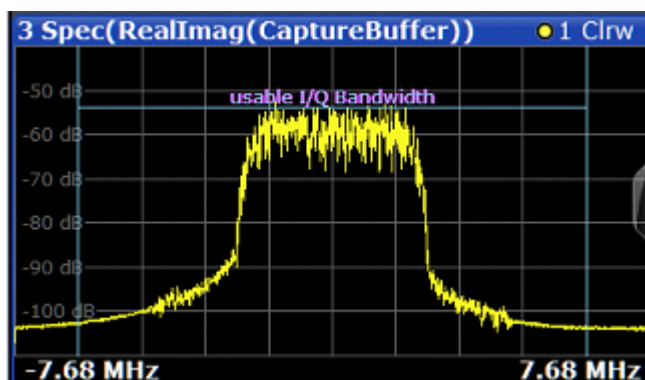


Figure 4-5: Determining the I/Q bandwidth: Real/Imag (I/Q) display of the capture buffer with a spectrum transformation

If the signal is cut off, increase the sample rate.

If the signal is too small, decrease the sample rate by changing one of the following settings:

- The "Symbol Rate" defined in the "Signal Description" settings
- The "Sample Rate" in the "Data Acquisition" settings

As described above, the sample rate defines the number of samples to capture per symbol. Thus, the maximum sample rate depends on the maximum number of symbols to be captured (the **symbol rate**) and vice versa.

The maximum sample rate for the FSW is 10 GHz (see below). Thus, the maximum symbol rate is:

Table 4-1: Maximum symbol rate depending on sample rate parameter

| Sample rate parameter | Max. symbol rate |
|-----------------------|------------------|
| 2* symbol rate | 5000 Msymbols |
| 4* symbol rate | 2500 Msymbols |
| 8* symbol rate | 1250 Msymbols |
| 16* symbol rate | 625 Msymbols |
| 32* symbol rate | 312.5 Msymbols |
| 64* symbol rate | 156.25 Msymbols |
| 128* symbol rate | 78.125 Msymbols |

4.2.1 Sample rate and maximum usable I/Q bandwidth for RF input

Definitions

- **Input sample rate (ISR):** the sample rate of the useful data provided by the device connected to the input of the FSW
- (User, Output) **Sample rate (SR):** the user-defined sample rate (e.g. in the "Data Acquisition" dialog box in the "I/Q Analyzer" application) which is used as the basis for analysis or output
- **Usable I/Q (analysis) bandwidth:** the bandwidth range in which the signal remains undistorted in regard to amplitude characteristic and group delay; this range can be used for accurate analysis by the FSW
- **Record length:** the number of I/Q samples to capture during the specified measurement time; calculated as the measurement time multiplied by the sample rate

For the I/Q data acquisition, digital decimation filters are used internally in the FSW. The passband of these digital filters determines the *maximum usable I/Q bandwidth*. In consequence, signals within the usable I/Q bandwidth (passband) remain unchanged, while signals outside the usable I/Q bandwidth (passband) are suppressed. Usually, the suppressed signals are noise, artifacts, and the second IF sideband. If frequencies of interest to you are also suppressed, try to increase the output sample rate, which increases the maximum usable I/Q bandwidth.

Bandwidth extension options

You can extend the maximum usable I/Q bandwidth provided by the FSW in the basic installation by adding options. These options can either be included in the initial installation (B-options) or updated later (U-options). The maximum bandwidth provided by the individual option is indicated by its number, for example, B40 extends the bandwidth to 40 MHz.

Note that the U-options as of U40 always require all lower-bandwidth options as a prerequisite, while the B-options already include them.

As a rule, the usable I/Q bandwidth is proportional to the output sample rate. Yet, when the I/Q bandwidth reaches the bandwidth of the analog IF filter (at very high output sample rates), the curve breaks.

- Available bandwidth extension options..... 77
- Relationship between sample rate, record length and usable I/Q bandwidth..... 78
- FSW without additional bandwidth extension options..... 80
- FSW with I/Q bandwidth extension option B40 or U40..... 81
- FSW with I/Q bandwidth extension option B80 or U80..... 81
- FSW with activated I/Q bandwidth extension option B160 or U160..... 81
- FSW with activated I/Q bandwidth extension option B320/U320..... 82
- FSW with activated I/Q bandwidth extension option B512..... 83
- FSW with activated I/Q bandwidth extension option B1200..... 85
- FSW with activated I/Q bandwidth extension option B2001..... 88
- FSW with activated I/Q bandwidth extension option B2000..... 91
- FSW with activated I/Q bandwidth extension option B5000..... 92
- FSW with activated I/Q bandwidth extension option B4001/B6001/B8001..... 93

4.2.1.1 Available bandwidth extension options

Table 4-2: Available bandwidth extension options

| Max. usable I/Q bandwidth | Required B-option | Required U-options |
|---------------------------|-------------------|--|
| 28 MHz | - | - |
| 40 MHz | B40 | U40 |
| 80 MHz | B80 | U40+U80 or B40+U80 |
| 160 MHz | B160 | U40+U80+U160 or B40+U80+U160 or B80+U160 |
| 320 MHz | B320 | U40+U80+U160+U320 or B40+U80+U160+U320 or B80+U160+U320 or B160+U320 |

| Max. usable I/Q bandwidth | Required B-option | Required U-options |
|---------------------------|-------------------|--|
| 512 MHz | B512 | U40+U80+U512 or B40+U80+U512 or B80+U512 or |
| 1200 MHz | B1200 | B40 + U80 + U1200 or B80 + U1200 |
| 2000 MHz | B2000 | U2000 |
| 2000 MHz | B2001 | U2001 |
| 4000 MHz | B4001 | U4001 |
| 5000 MHz | B5000 | U5000 |
| 6000 MHz | B6001 | U6001 |
| 8000 MHz | B8001 | U8001 |

4.2.1.2 Relationship between sample rate, record length and usable I/Q bandwidth

Up to the maximum bandwidth, the following rule applies:

$$\text{Usable I/Q bandwidth} = 0.8 * \text{Output sample rate}$$

Regarding the record length, the following rule applies:

$$\text{Record length} = \text{Measurement time} * \text{sample rate}$$

Maximum record length for RF input

The maximum record length, that is, the maximum number of samples that can be captured, depends on the sample rate.

For activated option B1200, see [Table 4-14](#).

For activated option B2001, see [Chapter 4.2.1.10, "FSW with activated I/Q bandwidth extension option B2001"](#), on page 88.

For activated option B2000, see [Chapter 4.2.1.11, "FSW with activated I/Q bandwidth extension option B2000"](#), on page 91.

For activated option B5000, see [Chapter 4.2.1.12, "FSW with activated I/Q bandwidth extension option B5000"](#), on page 92.

For activated option B4001/B6001/B8001, see [Chapter 4.2.1.13, "FSW with activated I/Q bandwidth extension option B4001/B6001/B8001"](#), on page 93.

Table 4-3: Maximum record length (without I/Q bandwidth extension options FSW-B160/-B320/-B512/-B1200/-B2001)

| Sample rate | Maximum record length |
|-----------------------------------|-----------------------|
| 100 Hz to 200 MHz | 440 Msamples |
| 200 MHz to 20 GHz (upsampling) | 220 Msamples |

The [Figure 4-6](#) shows the maximum usable I/Q bandwidths depending on the output sample rates.

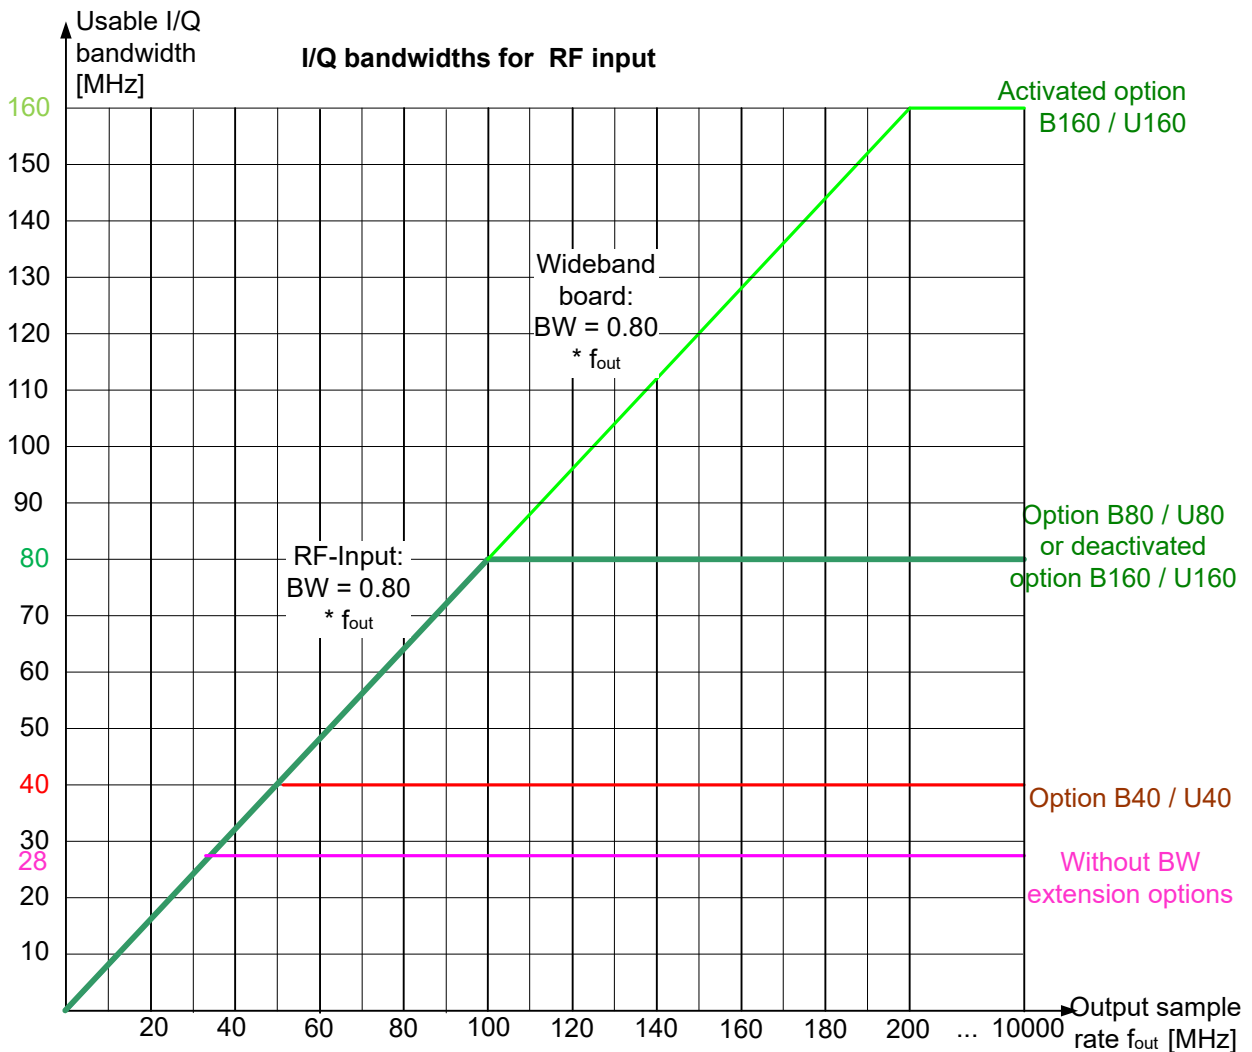


Figure 4-6: Relationship between maximum usable I/Q bandwidth and output sample rate with and without bandwidth extensions

Restricting the maximum bandwidth manually

By default, all installed bandwidth extension options are activated, allowing for the maximum bandwidth for measurements on the FSW. However, sometimes the maxi-

imum bandwidth is not necessary. For example, due to the correlation of both parameters, high sample rates automatically lead to an extended analysis bandwidth. However, while a high sample rate can be necessary (for example due to postprocessing in an OFDM system), the wide bandwidth is not necessarily required.

On the other hand, low sample rates lead to small usable I/Q bandwidths. To ensure the availability of the required bandwidth, the minimum required bandwidth for the specified sample rate can be selected (via remote command only).

Thus, if one of the bandwidth extension options is installed, the maximum bandwidth can be restricted manually to a value that can improve the measurement (see "[Maximum Bandwidth](#)" on page 231). In this case, the hardware of the "regular" RF path is used, rather than the hardware required by the bandwidth extension options.

The following improvements can be achieved:

- Longer measurement time for sample rates under 300 MHz
- Data processing becomes up to 10 times faster.
- Digital baseband output becomes available (with bandwidth extension options that do not support output).



General notes and restrictions

- The memory extension option FSW-B106 is only available together with the R&S FSW-B160 or B320 bandwidth extension options.
- The memory extension option FSW-B108 is only available together with the FSW-B1200/-B2001/-B800R options.
- The memory extension option FSW-B124 is only available together with the FSW-B4001/B6001/B8001 options.
- In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz.
- If digital baseband output is active, the sample rate is restricted to 200 MHz (max. 80 MHz usable I/Q bandwidth).

4.2.1.3 FSW without additional bandwidth extension options

Sample rate: 100 Hz - 20 GHz

Maximum I/Q bandwidth: 28 MHz

Table 4-4: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|------------------|-----------------------------------|
| 100 Hz to 28 MHz | Proportional up to maximum 28 MHz |
| 28 MHz to 20 GHz | 28 MHz |



MSRA operating mode

In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz.

4.2.1.4 FSW with I/Q bandwidth extension option B40 or U40

Sample rate: 100 Hz - 20 GHz

Maximum bandwidth: 40 MHz

Table 4-5: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|------------------|-----------------------------------|
| 100 Hz to 50 MHz | Proportional up to maximum 40 MHz |
| 50 MHz to 20 GHz | 40 MHz |



MSRA operating mode

In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz.

4.2.1.5 FSW with I/Q bandwidth extension option B80 or U80

Sample rate: 100 Hz - 20 GHz

Maximum bandwidth: 80 MHz

Table 4-6: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|-------------------|-----------------------------------|
| 100 Hz to 100 MHz | Proportional up to maximum 80 MHz |
| 100 MHz to 20 GHz | 80 MHz |



MSRA operating mode

In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz.

4.2.1.6 FSW with activated I/Q bandwidth extension option B160 or U160

Sample rate: 100 Hz - 20 GHz

Maximum bandwidth: 160 MHz

Table 4-7: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|-------------------|------------------------------------|
| 100 Hz to 200 MHz | Proportional up to maximum 160 MHz |
| 200 MHz to 20 GHz | 160 MHz |

Table 4-8: Maximum record length with activated I/Q bandwidth extension option B160 or U160

| Sample rate | Maximum record length |
|-------------------|-----------------------|
| 100 Hz to 200 MHz | 440 Msamples |
| | 220 Msamples |



Notes and restrictions for FSW-B160 or U160

- In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz.
- Digital baseband output is not available for an active FSW-B160 or U160 bandwidth extension. See "[Digital Baseband Output](#)" on page 215.

4.2.1.7 FSW with activated I/Q bandwidth extension option B320/U320

Table 4-9: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|-------------------|------------------------------------|
| 100 Hz to 400 MHz | Proportional up to maximum 320 MHz |
| 400 MHz to 20 GHz | 320 MHz |

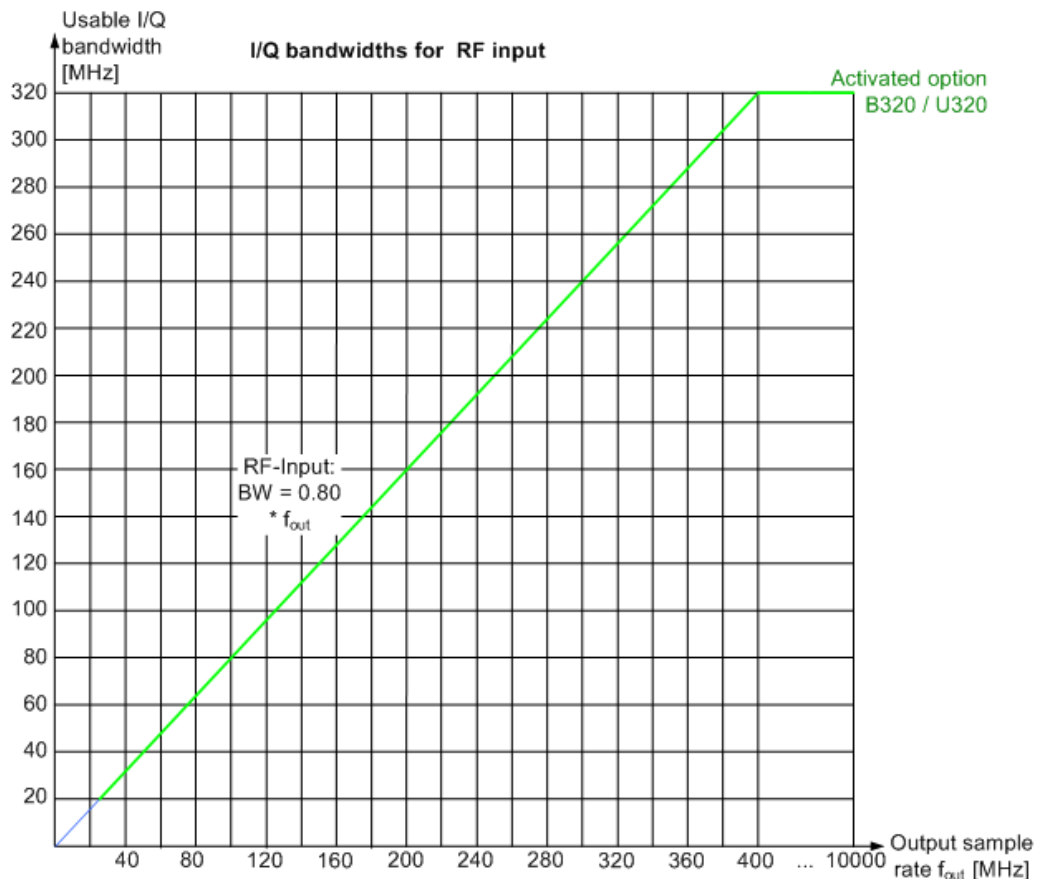


Figure 4-7: Relationship between maximum usable I/Q bandwidth and output sample rate for active FSW-B320

Table 4-10: Maximum record length with activated I/Q bandwidth extension option B320 or U320

| Sample rate | Maximum record length |
|--|---|
| 100 Hz to 200 MHz*) | 440 Msamples With FSW-B106 option: 1400 Msamples |
| 200 MHz to 468 MHz | 470 Msamples * sample rate / 1GHz With FSW-B106 option: 1400 Msamples * sample rate / 1GHz |
| 468 MHz to 20 GHz | 220 Msamples With FSW-B106 option: 700 Msamples |
| *) for sample rates up to 200 MHz the I/Q bandwidth extension B320 is not used | |

**Notes and restrictions for FSW-B320**

- In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz.
- Digital baseband output is not available for an active FSW-B320 bandwidth extension. See "[Digital Baseband Output](#)" on page 215.

4.2.1.8 FSW with activated I/Q bandwidth extension option B512

The bandwidth extension option FSW-B512 provides measurement bandwidths up to 512 MHz.

Table 4-11: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|-------------------|---|
| 100 Hz to 600 MHz | 0.8 * sample rate (up to maximum 512 MHz) |
| 600 MHz to 20 GHz | 512 MHz |

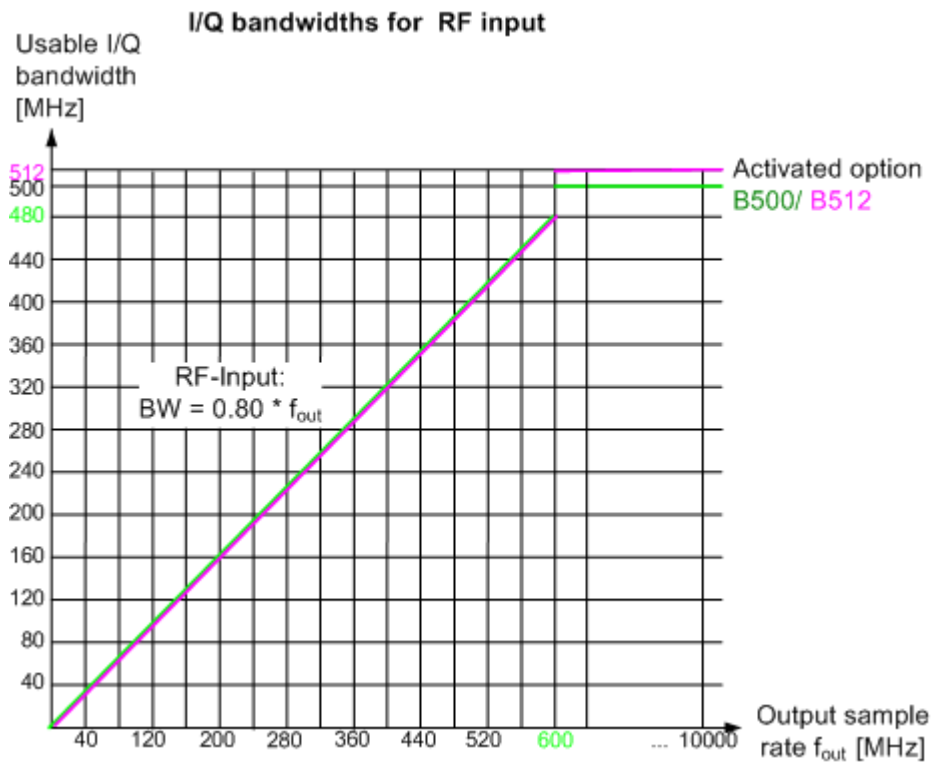


Figure 4-8: Relationship between maximum usable I/Q bandwidth and output sample rate for active FSW-B512

Table 4-12: Maximum record length with activated I/Q bandwidth extension option FSW-B512

| Sample rate | Maximum record length |
|------------------|-----------------------|
| 100 Hz to 20 GHz | 440 Msamples |



Notes and restrictions for FSW-B512

- In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz and a maximum record length of 220 Msamples.
- The memory extension options FSW-B106/-B108/-B124 are not available together with the -B512 option.



Bandwidths between 480 MHz and 512 MHz with FSW-B512 option

Note the irregular behavior of the relationship between the sample rate and the usable I/Q bandwidth for bandwidths between 480 MHz and 512 MHz with the -B512 options, depending on which setting you change.

For compatibility reasons, the common relationship is maintained for bandwidths ≤ 480 MHz:

$$\text{Usable I/Q bandwidth} = 0.8 * \text{output sample rate}$$

However, to make use of the maximum sample rate of 600 MHz at the maximum bandwidth of 512 MHz, there is an exception. If you **change the bandwidth** between 480 MHz and 500 MHz, the sample rate is adapted according to the relationship:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / (500/600)$$

Or

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8333$$

When using option R&S FSW-B512R, if you **change the bandwidth** between 500 MHz and 512 MHz, the sample rate is adapted according to the relationship:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / (512/600)$$

Or

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8533$$

On the other hand, if you **decrease the sample rate** under 600 MHz, the I/Q bandwidth is adapted according to the common relationship:

$$\text{Usable I/Q bandwidth} = 0.8 * \text{output sample rate}.$$

4.2.1.9 FSW with activated I/Q bandwidth extension option B1200

The bandwidth extension option FSW-B1200 provides measurement bandwidths up to 1200 MHz.

Table 4-13: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|---|---------------------------------|
| 100 Hz to 600 MHz | 0.8 * sample rate |
| 600 MHz | 0.8533 * sample rate (=512 MHz) |
| 600 MHz to 1500 MHz | 0.8 * sample rate *) |
| 1500 MHz to 20 GHz | 1200 MHz |
| *) Exception: for active digital I/Q 40G streaming output, a sample rate of 1200 MHz provides a maximum I/Q bandwidth of 1000 MHz | |

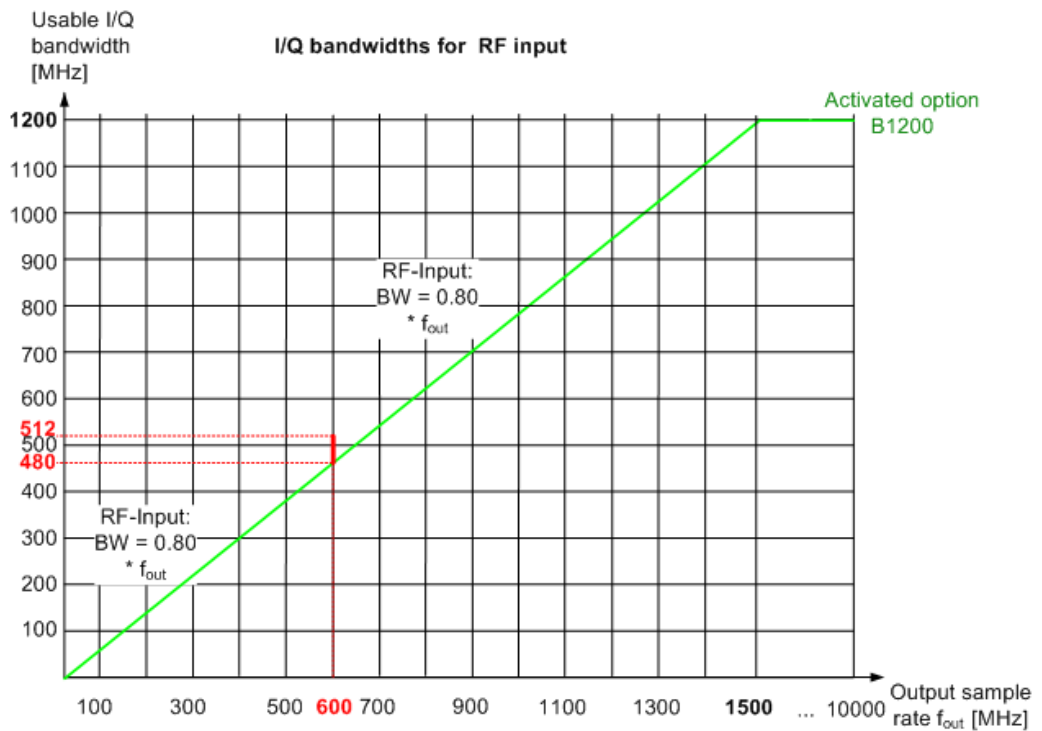


Figure 4-9: Relationship between maximum usable I/Q bandwidth and output sample rate for active FSW-B1200

Table 4-14: Maximum record length with activated I/Q bandwidth extension option FSW-B1200

| Sample rate | Maximum record length |
|---------------------|--|
| 100 Hz to 600 MHz | 440 Msamples With FSW-B108 option: max. 1800 Msamples |
| 600 MHz to 1250 MHz | 480 Msamples * (sample rate / 1250 MHz); max. 440 Msamples With FSW-B108 option: 990 Msamples * (sample rate / 1250 MHz); max. 900 Msamples |
| 1250 MHz to 20 GHz | max. 440 Msamples With FSW-B108 option: 900 Msamples * (sample rate / 1250 MHz); max. 900 Msamples |

**Notes and restrictions for FSW-B1200**

- The memory extension option FSW-B106 is not available together with the B1200 option.
- For an active FSW-B1200 bandwidth extension, the maximum output sample rate is 200 MHz. See "[Digital Baseband Output](#)" on page 215.
- Real-time measurements, and thus the entire MSRT operating mode, together with the FSW-B1200 bandwidth extension option, are only available with the R&S FSW-K800RE option.
In MSRT operating mode, the MSRT primary application is then restricted to a sample rate of 1000 MHz.
- In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz.
- When the FSW-B1200 option is active, only an external trigger (or no trigger) is available.



Irregular behavior in bandwidths between 480 MHz and R&S FSW512 MHz with FSW-B1200 option

Note that the B1200 bandwidth extension option has the same irregular behavior of the relationship between the sample rate and the usable I/Q bandwidth for bandwidths between 480 MHz and 512 MHz as the B512 option. The FSW uses the same hardware for both options up to 512 MHz.

For compatibility reasons, the common relationship is maintained for bandwidths ≤ 480 MHz:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8$$

However, to make use of the maximum sample rate of 600 MHz at the maximum bandwidth of 500 MHz, there is an exception. If you **change the bandwidth** between 480 MHz and 500 MHz, the sample rate is adapted according to the relationship:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / (500/600)$$

Or

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8333$$

If you **change the bandwidth** between 500 MHz and 512 MHz, the sample rate is adapted according to the relationship:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / (512/600)$$

Or

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8533$$

If you increase the bandwidth above 512 MHz, the common relationship is maintained again:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8$$

On the other hand, if you **set the sample rate** to **600 MHz**, the I/Q bandwidth is set to:

$$\text{Output sample rate} * 0.8533 = \mathbf{512\ MHz}$$

However, if you **decrease the sample rate** under 600 MHz or **increase the sample rate** above 600 MHz, the I/Q bandwidth is adapted according to the common relationship:

$$\text{Usable I/Q bandwidth} = 0.8 * \text{output sample rate.}$$

4.2.1.10 FSW with activated I/Q bandwidth extension option B2001

The (internal) bandwidth extension option FSW-B2001 provides measurement bandwidths up to 2 GHz, with no additional devices required.

Table 4-15: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|---|---------------------------------|
| 100 Hz to 600 MHz | 0.8 * sample rate |
| 600 MHz | 0.8533 * sample rate (=512 MHz) |
| *) Exception: for active digital I/Q 40G streaming output, a sample rate of 1200 MHz provides a maximum I/Q bandwidth of 1000 MHz | |

| Sample rate | Maximum I/Q bandwidth |
|---------------------|-----------------------|
| 600 MHz to 2500 MHz | 0.8 * sample rate *) |
| 2500 MHz to 20 GHz | 2000 MHz |

*) Exception: for active digital I/Q 40G streaming output, a sample rate of 1200 MHz provides a maximum I/Q bandwidth of 1000 MHz

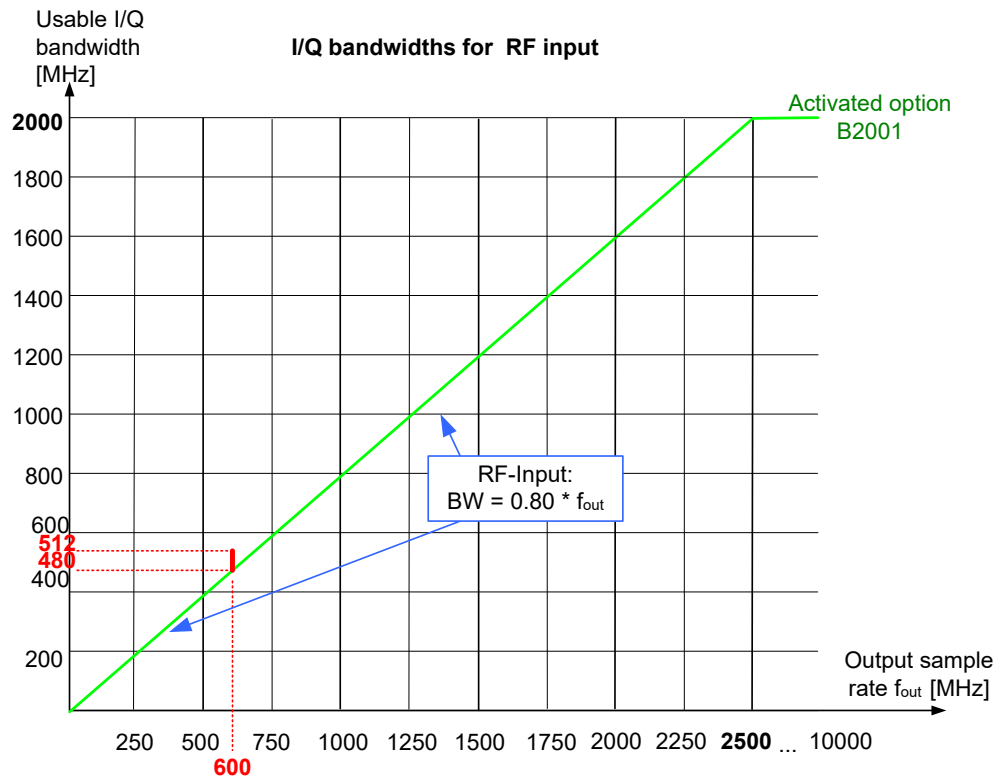


Figure 4-10: Relationship between maximum usable I/Q bandwidth and output sample rate for active FSW-B2001

Table 4-16: Maximum record length with activated I/Q bandwidth extension option FSW-B2001

| Sample rate | Maximum record length |
|---------------------|--|
| 100 Hz to 600 MHz | 440 Msamples With FSW-B108 option: max. 1800 Msamples |
| 600 MHz to 1250 MHz | 440 Msamples * (sample rate / 1250 MHz); max. 900 Msamples With FSW-B108 option: 900 Msamples * (sample rate / 1250 MHz); max. 900 Msamples |
| 1250 MHz to 20 GHz | 440 Msamples * (sample rate / 2500 MHz); max. 900 Msamples With FSW-B108 option: 900 Msamples * (sample rate / 1250 MHz); max. 900 Msamples |

**Notes and restrictions for FSW-B2001**

- The memory extension option FSW-B106 is not available together with the B2001 option.
- For an active FSW-B2001 bandwidth extension, the maximum output sample rate is 200 MHz. See "[Digital Baseband Output](#)" on page 215.
- Real-time measurements, and thus the entire MSRT operating mode, together with the FSW-B2001 bandwidth extension option, are only available with the R&S FSW-K800RE option.
In MSRT operating mode, the MSRT primary application is then restricted to a sample rate of 1000 MHz.
- In MSRA operating mode, the MSRA primary is restricted to a sample rate of 600 MHz.
- When the FSW-B2001 option is active, only an external trigger (or no trigger) is available.



Irregular behavior in bandwidths between 480 MHz and 512 MHz with FSW-B2001 option

Note that the B2001 bandwidth extension option has the same irregular behavior of the relationship between the sample rate and the usable I/Q bandwidth for bandwidths between 480 MHz and 512 MHz as the -B512 options. The FSW uses the same hardware for both options up to 512 MHz.

For compatibility reasons, the common relationship is maintained for bandwidths ≤ 480 MHz:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8$$

However, to make use of the maximum sample rate of 600 MHz at the maximum bandwidth of 500 MHz, there is an exception. If you **change the bandwidth** between 480 MHz and 500 MHz, the sample rate is adapted according to the relationship:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / (500/600)$$

Or

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8333$$

If you **change the bandwidth** between 500 MHz and 512 MHz, the sample rate is adapted according to the relationship:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / (512/600)$$

Or

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8533$$

If you increase the bandwidth above 512 MHz, the common relationship is maintained again:

$$\text{Output sample rate} = \text{usable I/Q bandwidth} / 0.8$$

On the other hand, if you **set the sample rate** to **600 MHz**, the I/Q bandwidth is set to:

$$\text{Output sample rate} * 0.8533 = \mathbf{512\ MHz}$$

However, if you **decrease the sample rate** under 600 MHz or **increase the sample rate** above 600 MHz, the I/Q bandwidth is adapted according to the common relationship:

$$\text{Usable I/Q bandwidth} = 0.8 * \text{output sample rate}.$$

4.2.1.11 FSW with activated I/Q bandwidth extension option B2000

The bandwidth extension option FSW-B2000 provides measurement bandwidths up to 2 GHz.

Table 4-17: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|------------------|----------------------------------|
| 10 kHz to 20 GHz | Proportional up to maximum 2 GHz |

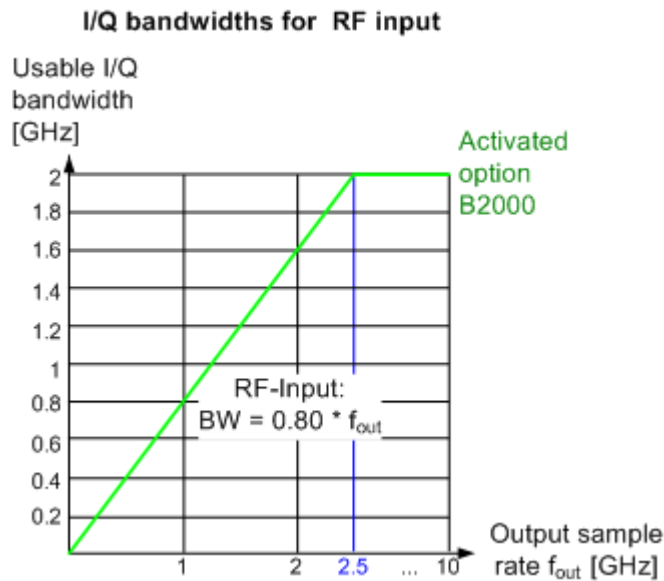


Figure 4-11: Relationship between maximum usable I/Q bandwidth and output sample rate for active FSW-B2000



Notes and restrictions for FSW-B2000

- The memory extension options FSW-B106/-B108/-B124 are not available together with the B2000 option.
- If the FSW-B2000 bandwidth extension option is active, MSRA operating mode is not available.
- Digital baseband output is not available for an active FSW-B2000 bandwidth extension. See "[Digital Baseband Output](#)" on page 215.
- The maximum memory size, and thus record length, available for a single input channel can be reduced by half in the following cases:
 - When using an external trigger in common B2000 mode, which uses another channel on the oscilloscope.
 - In power splitter mode, which uses two input channels on the oscilloscope.
 For details, see the oscilloscope's specifications document and documentation. For details on the power splitter mode, see the FSW I/Q Analyzer and I/Q Input user manual.

4.2.1.12 FSW with activated I/Q bandwidth extension option B5000

The bandwidth extension option FSW-B5000 provides measurement bandwidths up to 5 GHz.

Table 4-18: Maximum I/Q bandwidth

| Sample rate | Maximum I/Q bandwidth |
|------------------|----------------------------------|
| 10 kHz to 20 GHz | Proportional up to maximum 5 GHz |

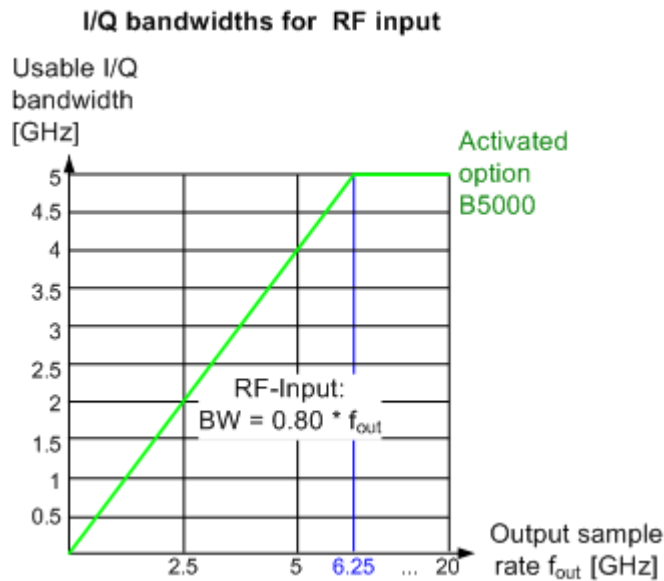


Figure 4-12: Relationship between maximum usable I/Q bandwidth and output sample rate for active FSW-B5000



Notes and restrictions for FSW-B5000

- The memory extension options FSW-B106/-B108/-B124 are not available together with the B5000 option.
- If the FSW-B5000 bandwidth extension option is active, MSRA operating mode is not available.
- Digital baseband output is not available for an active FSW-B5000 bandwidth extension. See "[Digital Baseband Output](#)" on page 215.
- The maximum memory size, and thus record length, available for a single input channel can be reduced by half in the following cases:
 - When using an external trigger in common B5000 mode, which uses another channel on the oscilloscope.
 - In power splitter mode, which uses two input channels on the oscilloscope.
 For details, see the oscilloscope's specifications document and documentation. For details on the power splitter mode, see the FSW I/Q Analyzer and I/Q Input user manual.

4.2.1.13 FSW with activated I/Q bandwidth extension option B4001/B6001/B8001

The (internal) bandwidth extension options FSW-B4001/B6001/B8001 provide measurement bandwidths up to 4 GHz, 6 GHz or 8 GHz, respectively, with no additional devices required. The B4001 option is activated automatically for bandwidths larger than 80 MHz, if installed. The B6001 and B8001 options are activated automatically for bandwidths larger than 80 MHz and center frequencies above 18 GHz, if installed.

The memory extension options FSW-B106/-B108 are not available together with the B4001/B6001/B8001 options.

Table 4-19: Maximum I/Q bandwidth

| Option | Sample rate | Maximum I/Q bandwidth |
|--------|---------------------|-----------------------|
| B4001 | 100 Hz to 5500 MHz | 0.8 * sample rate |
| | 5500 MHz to 20 GHz | 4400 MHz |
| B6001 | 100 Hz to 8000 MHz | 0.8 * sample rate |
| | 8000 MHz to 20 GHz | 6400 MHz |
| B8001 | 100 Hz to 10390 MHz | 0.8 * sample rate |
| | 10390 MHz to 20 GHz | 8312 MHz |

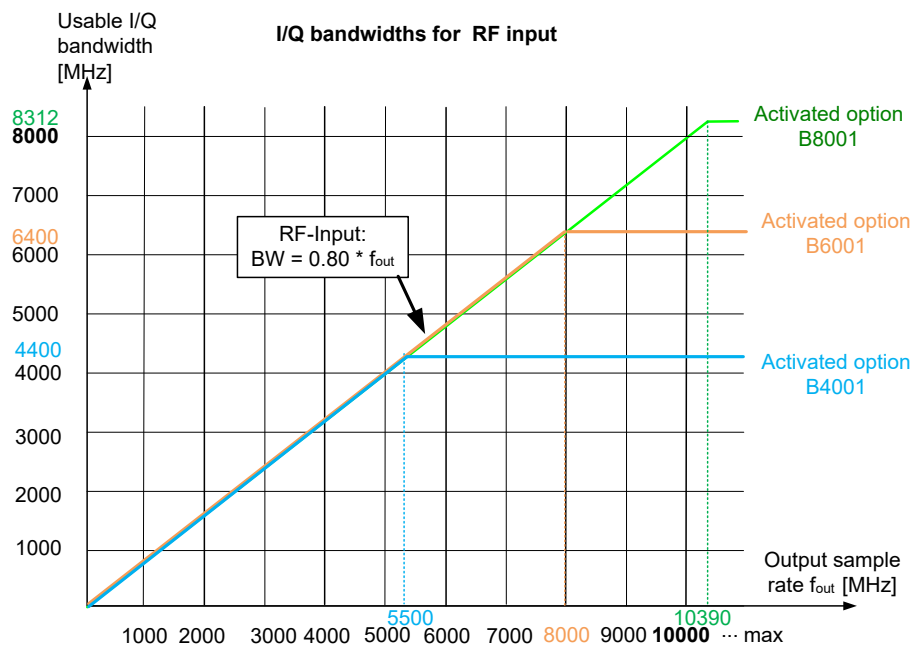


Figure 4-13: Relationship between maximum usable I/Q bandwidth and output sample rate for active FSW-B4001/B6001/B8001

Table 4-20: Maximum record length with activated I/Q bandwidth extension option FSW-B4001/B6001/B8001

| Sample rate | Maximum record length |
|-----------------------|---|
| 100 Hz to 100 MHz | 440 Msamples |
| 100 MHz to 20 GHz | 1039 Msamples |
| 100 MHz to 5.32 GHz | 1039 Msamples With FSW-B124 option: max. 5600 Msamples |
| 5.32 GHz to 10.64 GHz | 1039 Msamples With FSW-B124 option: max. 6440 Msamples |
| 10.64 GHz to 20 GHz | 1039 Msamples With FSW-B124 option: max. 2800 Msamples |

**Notes and restrictions for FSW-B4001/B6001/B8001**

- In MSRA operating mode, the MSRA primary is restricted to a sample rate of 200 MHz and a maximum bandwidth of 80 MHz.
- If a FSW-B4001/B6001/B8001 option is active, only an external trigger (or no trigger) is available.
- Real-time measurements, and thus the entire MSRT operating mode, are not available if any of the FSW-B4001/B6001/B8001 bandwidth extension options are installed.
- Digital baseband output is not available for an active FSW-B4001/B6001/B8001 bandwidth extension. See ["Digital Baseband Output"](#) on page 215.

4.2.2 Sample rates and bandwidths for digital I/Q data

Definitions

- **Clock rate:** the rate at which data is physically transmitted between the FSW and the connected device. Both instruments must be able to process data at this rate. The clock rate of the FSW at the output connector is 142.9 MHz. Using the Digital I/Q enhanced mode, a data transfer rate of up to 200 Msps is possible.
- **Input sample rate (ISR):** the sample rate of the useful data provided by the connected instrument to the digital input
- (User, Output) **Sample rate (SR):** the sample rate that is defined by the user (e.g. in the "Data Acquisition" dialog box in the "I/Q Analyzer" application). It is used as the basis for analysis or sent to the digital output.
- **Usable I/Q (Analysis) bandwidth:** the bandwidth range in which the signal remains unchanged by the digital decimation filter and thus remains undistorted. This range can be used for accurate analysis by the FSW.



Slow I/Q measurements

When captured data is transferred and further processed with a slower rate than the rate with which the signal was sampled, this is referred to as a *Slow I/Q measurement*. For example, assume that an analog signal is sampled by an oscilloscope with a sample rate of 10 GHz. This data is stored in a memory temporarily and then transferred to the FSW via the Digital I/Q Interface with a sample rate of 100 Msps. Then the input sample rate on the FSW must be set to 10 GHz so the signal is displayed correctly.



Digital I/Q enhanced mode

An enhanced mode for processing data from the "Digital I/Q" interface is available. This enhanced mode enables data transfer via the "Digital I/Q" interface with a data rate of up to 200 Msps (160 MHz bandwidth, compared to the previous 100 Msps/80 MHz bandwidth).

The "Digital I/Q" enhanced mode is automatically used if the following prerequisites are fulfilled:

- **Digital input:** The connected device must support data transfer rates up to 200 Msps.
- **Digital output:**
 - The FSW must supply the required bandwidth, i.e. a bandwidth extension option greater than 160 MHz must be installed and active.
 - The connected device must support data transfer rates up to 200 Msps.

Restrictions for digital in- and output

The following table describes the restrictions for digital in- and output:

Table 4-21: Restrictions for digital in- and output

| Parameter | Minimum | Maximum |
|---|--------------------------|-------------------------------|
| Record length | 2 complex samples | 200*1000*1000 complex samples |
| Input sample rate (ISR) | 100 Hz | 20 GHz |
| Sample Rate (SR) - Digital input | Max(100 Hz; ISR/8388608) | Min(20 GHz; 2*ISR) |
| Sample Rate (SR) - Digital output | 100 Hz | 200 MHz |
| Usable I/Q bandwidth (Digital input and filter active) | Min(0.8*SR; 0.8*ISR) | |

Bandwidths

Depending on the sample rate, the following bandwidths are available:

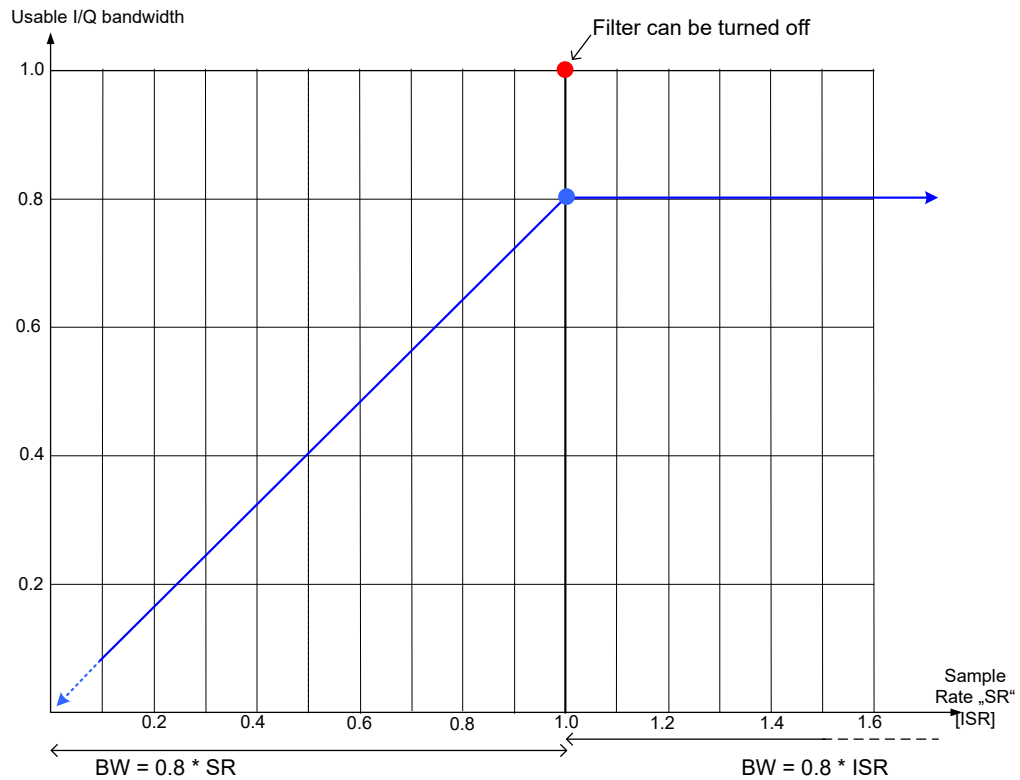


Figure 4-14: Bandwidths depending on sample rate for active digital input

4.3 Symbol mapping

Mapping or symbol mapping means that symbol numbers are assigned to constellation points or transitions in the I/Q plane (e.g. PSK and QAM).

In the analyzer, the mapping is required to decode the transmitted symbols from the sampled I/Q or frequency/time data records.

The mappings for all standards used in the analyzer and for all employed modulation modes are described in the following. Unless indicated otherwise, symbol numbers are specified in hexadecimal form (MSB at the left).

- Phase shift keying (PSK)..... 98
- Rotating PSK.....102
- Differential PSK.....105
- Rotating differential PSK modulation..... 106
- Offset QPSK.....108
- Shaped offset QPSK..... 109
- Frequency shift keying (FSK)..... 110
- Minimum shift keying (MSK).....115
- Quadrature amplitude modulation (QAM)..... 116

- [ASK](#)..... 128
- [APSK](#)..... 129
- [User-defined modulation](#)..... 130

4.3.1 Phase shift keying (PSK)

With this type of modulation, the information is represented by the absolute phase position of the received signal at the decision points. All transitions in the I/Q diagram are possible. The complex constellation diagram is shown. The symbol numbers are entered in the diagram according to the mapping rule.

BPSK (NATURAL, SMx)

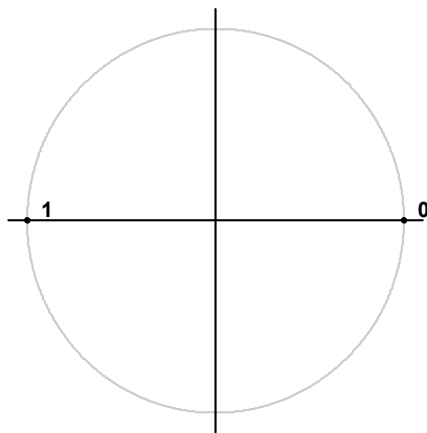


Figure 4-15: Constellation diagram for BPSK including the symbol mapping



BPSK (NATURAL) is the BPSK mapping used by supported R&S SMx signal generators when using PRBS algorithms. See "[Symbol mapping in accordance with the PRBS generator](#)" on page 172.

QPSK

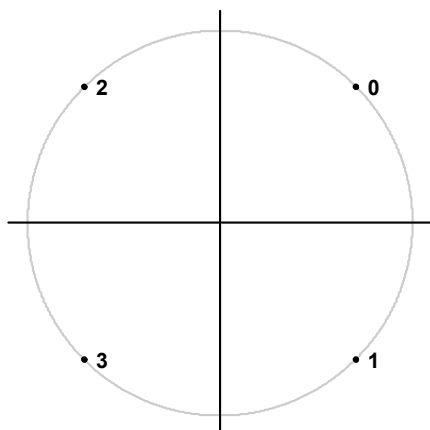


Figure 4-16: Constellation diagram for QPSK including the symbol mapping for CDMA2000 FWD, DVB-S2 and DVB-RCS2

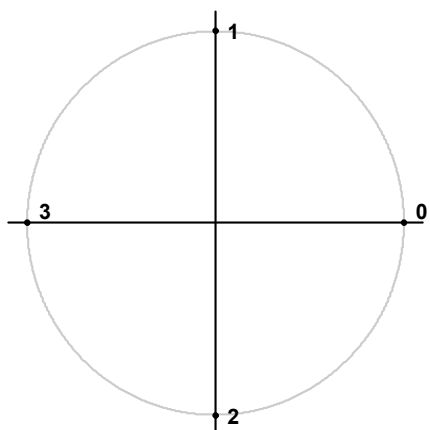


Figure 4-17: Constellation diagram for QPSK (GRAY) including the symbol mapping

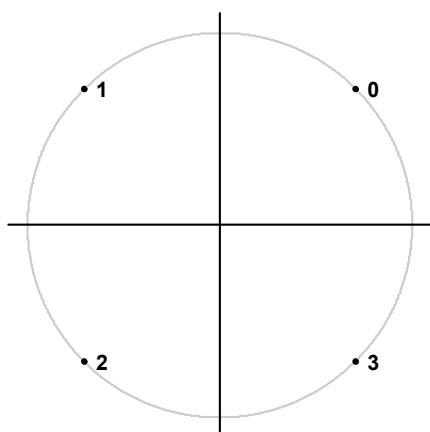


Figure 4-18: Constellation diagram for QPSK (NATURAL, SMx) including the symbol mapping



QPSK (NATURAL) is the QPSK mapping used by supported R&S SMx signal generators when using PRBS algorithms. See ["Symbol mapping in accordance with the PRBS generator"](#) on page 172.

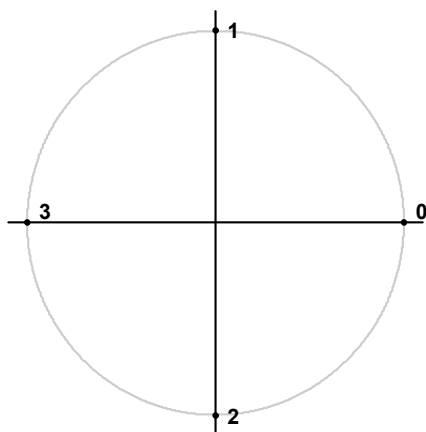


Figure 4-19: Constellation diagram for QPSK including the symbol mapping for WCDMA

8PSK

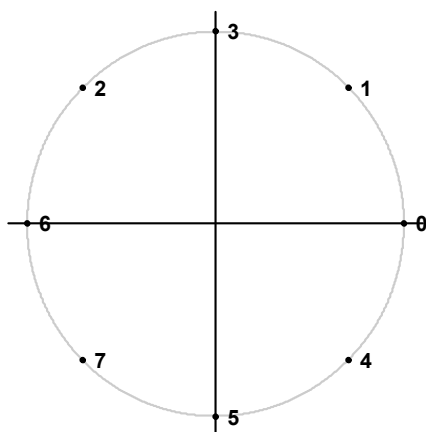


Figure 4-20: Constellation diagram for 8PSK (GRAY) including the symbol mapping

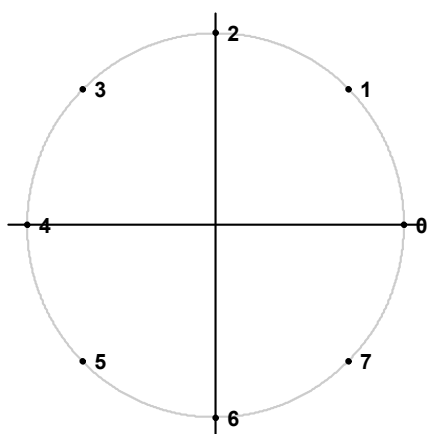


Figure 4-21: Constellation diagram for 8PSK (NATURAL, SMx) including the symbol mapping

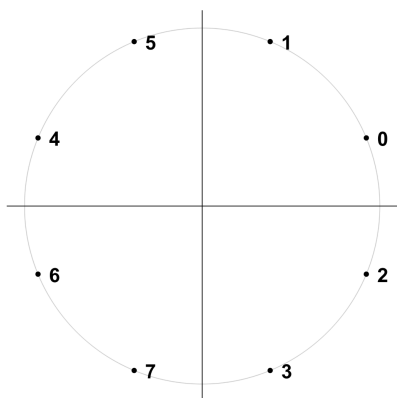


Figure 4-22: Constellation diagram for 8PSK including the symbol mapping for DVB-RCS2



8PSK (NATURAL) is the 8PSK mapping used by supported R&S SMx signal generators when using PRBS algorithms. See "[Symbol mapping in accordance with the PRBS generator](#)" on page 172.

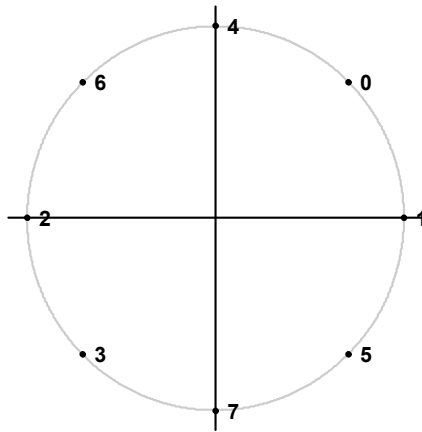


Figure 4-23: Constellation diagram for 8PSK including the symbol mapping for DVB-S2

4.3.2 Rotating PSK

A rotating PSK modulation is basically a PSK modulation in which additional phase shifts occur. These phase shifts depend on the symbol number, e.g. for a $\pi/4$ -QPSK, the third symbol has an additional phase offset of $(3-1)*\pi/4$. This offset has the same effect as a rotation of the basic system of coordinates by the offset angle after each symbol.

The method is highly important in practical applications because it prevents signal transitions through the zeros in the I/Q plane. This reduces the dynamic range of the modulated signal and the linearity requirements for the amplifier.

In practice, the method is used for $3\pi/8$ -8PSK, for example, and (in conjunction with phase-differential coding) for $\pi/4$ -DQPSK.

Symbol mapping

The logical constellation diagram for $3\pi/8$ -8PSK comprises 8 points that correspond to the modulation level (see [Figure 4-24](#)). A counter-clockwise offset (rotation) of $3\pi/8$ is inserted after each symbol transition.

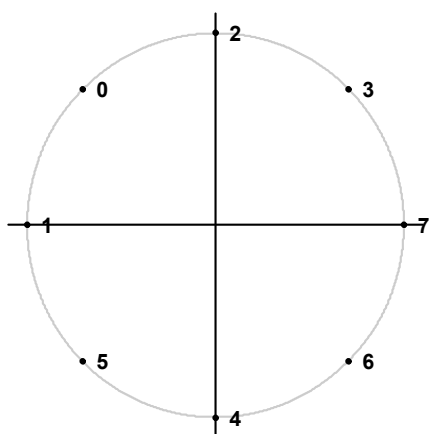


Figure 4-24: Constellation diagram for $3\pi/8$ 8PSK before rotation including the symbol mapping for EDGE

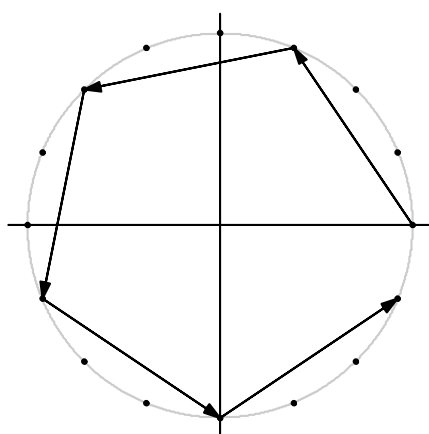


Figure 4-25: I/Q symbol stream after $3\pi/8$ rotation in I/Q plane if the symbol number "7" is transmitted six times in a row

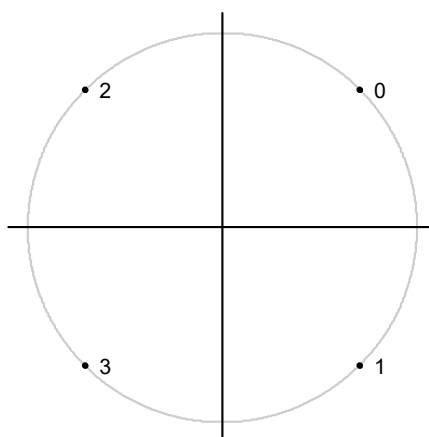


Figure 4-26: Constellation diagram for $3\pi/4$ QPSK including the symbol mapping for EDGE

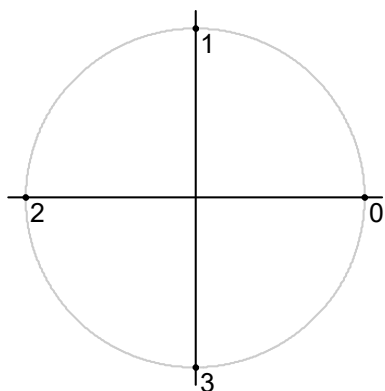


Figure 4-27: Constellation diagram for $\pi/4$ QPSK (Natural) including the symbol mapping

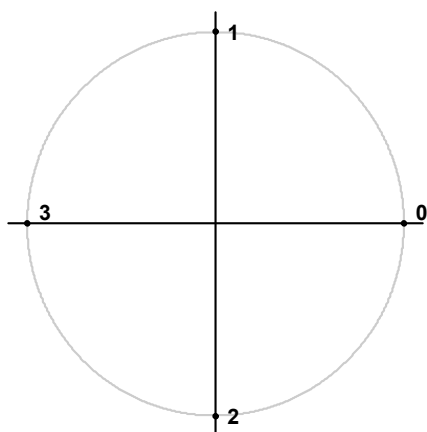


Figure 4-28: Constellation diagram for $\pi/4$ QPSK (GRAY) including the symbol mapping

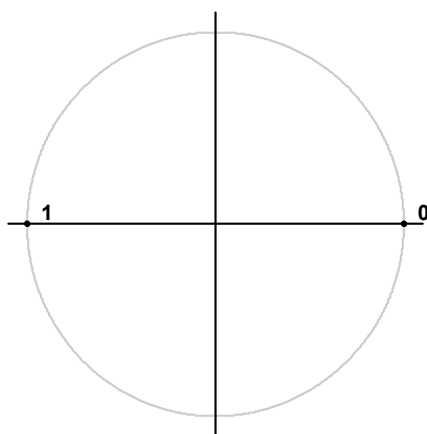


Figure 4-29: Constellation diagram for $\pi/2$ BPSK (Natural, DVB-RCS2) and $-\pi/2$ BPSK including the symbol mapping

4.3.3 Differential PSK

With differential PSK, the information is represented in the phase shift between two consecutive decision points. The absolute position of the complex sample value at the decision point does not carry information.

In the physical constellation diagram, the constellation points at the symbol decision points obtained after ISI-free demodulation are shown (as with common PSK methods). This diagram corresponds to the display on the analyzer. The position of the constellation points is standard-specific. For example, some QPSK standards define the constellation points on the diagonals, while other standards define the coordinate axes.

In [Table 4-22](#), the symbols are assigned to phase shifts. The QPSK (INMARSAT) mapping corresponds to simple QPSK with phase-differential coding.

Tables [Table 4-23](#) and [Table 4-24](#) show two types of differential 8PSK modulation.

Differential coding according to VDL is shown in [Table 4-25](#). It can be used for modulation types with 3 bits/symbol, e.g. 8PSK.

Other types of modulation using differential coding method are described in [Chapter 4.3.4, "Rotating differential PSK modulation"](#), on page 106.

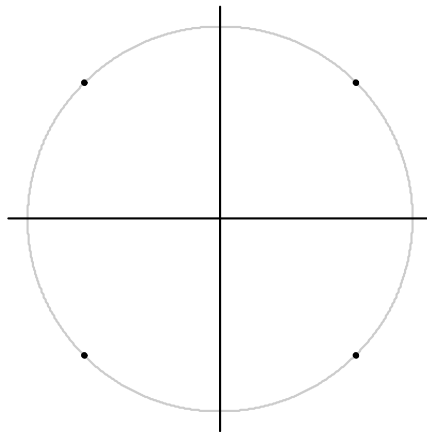


Figure 4-30: Constellation diagram for DQPSK (INMARSAT and NATURAL) including the symbol mapping

Table 4-22: DQPSK (INMARSAT)

| Logical symbol mapping | | | | |
|---|----|------|------|------|
| Modulation symbol (binary indication: MSB, LSB) | 00 | 01 | 10 | 11 |
| Phase shift | 0° | -90° | +90° | 180° |

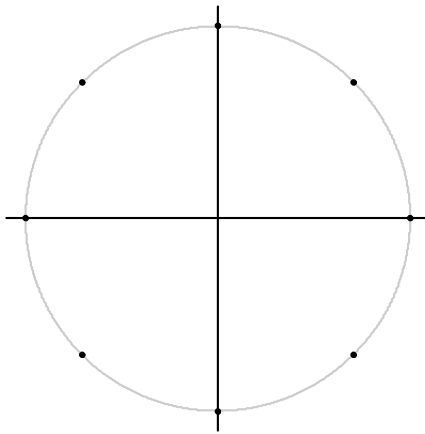


Figure 4-31: Constellation diagram for D8PSK including the symbol mapping for APCO25, APCO25 Phase 2, GRAY, NATURAL and TETRA

Table 4-23: D8PSK (NATURAL)

| Logical symbol mapping | | | | | | | | |
|---|-----|-----|-----|------|------|------|------|------|
| Modulation symbol (binary indication: MSB, LSB) | 000 | 001 | 010 | 011 | 100 | 101 | 110 | 111 |
| Phase shift | 0° | 45° | 90° | 135° | 180° | 225° | 270° | 315° |

Table 4-24: D8PSK (GRAY)

| Logical symbol mapping | | | | | | | | |
|---|-----|-----|------|-----|------|------|------|------|
| Modulation symbol (binary indication: MSB, LSB) | 000 | 001 | 010 | 011 | 100 | 101 | 110 | 111 |
| Phase shift | 0° | 45° | 135° | 90° | 270° | 315° | 225° | 180° |

Table 4-25: D8PSK (VDL)

| Logical symbol mapping | | | | | | | | |
|---|-----|-----|------|-----|------|------|------|------|
| Modulation symbol (binary indication: MSB, LSB) | 000 | 001 | 010 | 011 | 100 | 101 | 110 | 111 |
| Phase shift | 0° | 45° | 135° | 90° | 315° | 270° | 180° | 225° |

4.3.4 Rotating differential PSK modulation

Phase-differential modulation is frequently combined with an additional phase shift (e.g. $\pi/4$ DQPSK = $\pi/4$ phase shift modulation + differential modulated 4PSK).

The logical mapping diagram corresponds to the diagram for DPSK.

The physical constellation diagram shows the symbol decision points obtained after ISI-free demodulation.

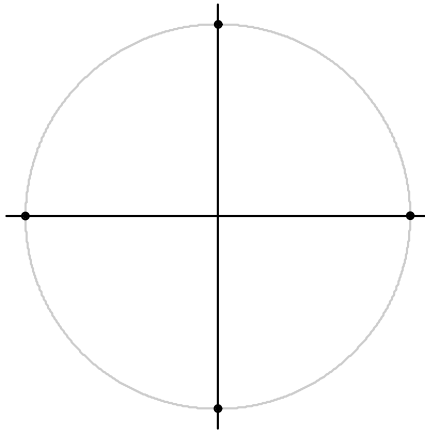


Figure 4-32: Constellation diagram for $\pi/4$ DQPSK including the symbol mapping for APCO25 Phase 2, NADC, NATURAL, PDC, PHS, TETRA and TETS; the $\pi/4$ rotation is already compensated for

Table 4-26: $\pi/4$ DQPSK (NADC, PDC, PHS, TETRA)

| Logical symbol mapping | | | | |
|---|--------------------|---------------------|----------------------|-----------------------|
| Modulation symbol (binary indication: MSB, LSB) | 00 | 01 | 10 | 11 |
| Phase shift | $0^\circ+45^\circ$ | $90^\circ+45^\circ$ | $-90^\circ+45^\circ$ | $-180^\circ+45^\circ$ |

Table 4-27: $\pi/4$ DQPSK (TETS)

| Logical symbol mapping | | | | |
|---|-----------------------|---------------------|----------------------|--------------------|
| Modulation symbol (binary indication: MSB, LSB) | 00 | 01 | 10 | 11 |
| Phase shift | $-180^\circ+45^\circ$ | $90^\circ+45^\circ$ | $-90^\circ+45^\circ$ | $0^\circ+45^\circ$ |

Table 4-28: $\pi/4$ DQPSK (NATURAL, SMx)

| Logical symbol mapping | | | | |
|---|--------------------|---------------------|-----------------------|----------------------|
| Modulation symbol (binary indication: MSB, LSB) | 00 | 01 | 10 | 11 |
| Phase shift | $0^\circ+45^\circ$ | $90^\circ+45^\circ$ | $-180^\circ+45^\circ$ | $-90^\circ+45^\circ$ |

Table 4-29: $\pi/4$ DQPSK (APCO25 and APCO25Phase2)

| Logical symbol mapping | | | | |
|---|--------------------|---------------------|----------------------|-----------------------|
| Modulation symbol (binary indication: MSB, LSB) | 00 | 01 | 10 | 11 |
| Phase shift | $0^\circ+45^\circ$ | $90^\circ+45^\circ$ | $-90^\circ+45^\circ$ | $-180^\circ+45^\circ$ |

Table 4-30: $\pi/2$ DBPSK


| Logical symbol mapping | | |
|---|--------------------|-----------------------|
| Modulation symbol (binary indication: MSB, LSB) | 0 | 1 |
| Phase shift | $0^\circ+90^\circ$ | $-180^\circ+90^\circ$ |

4.3.5 Offset QPSK

Offset QPSK differs from "normal" QPSK in the fact that the Q component is delayed by half a symbol period against the I component in the time domain. Hence, the symbol time instants of the I and the Q component do not coincide. The concept of Offset QPSK is illustrated in the diagrams below.

Derivation of OQPSK

Table 4-31: I/Q diagram and constellation diagram

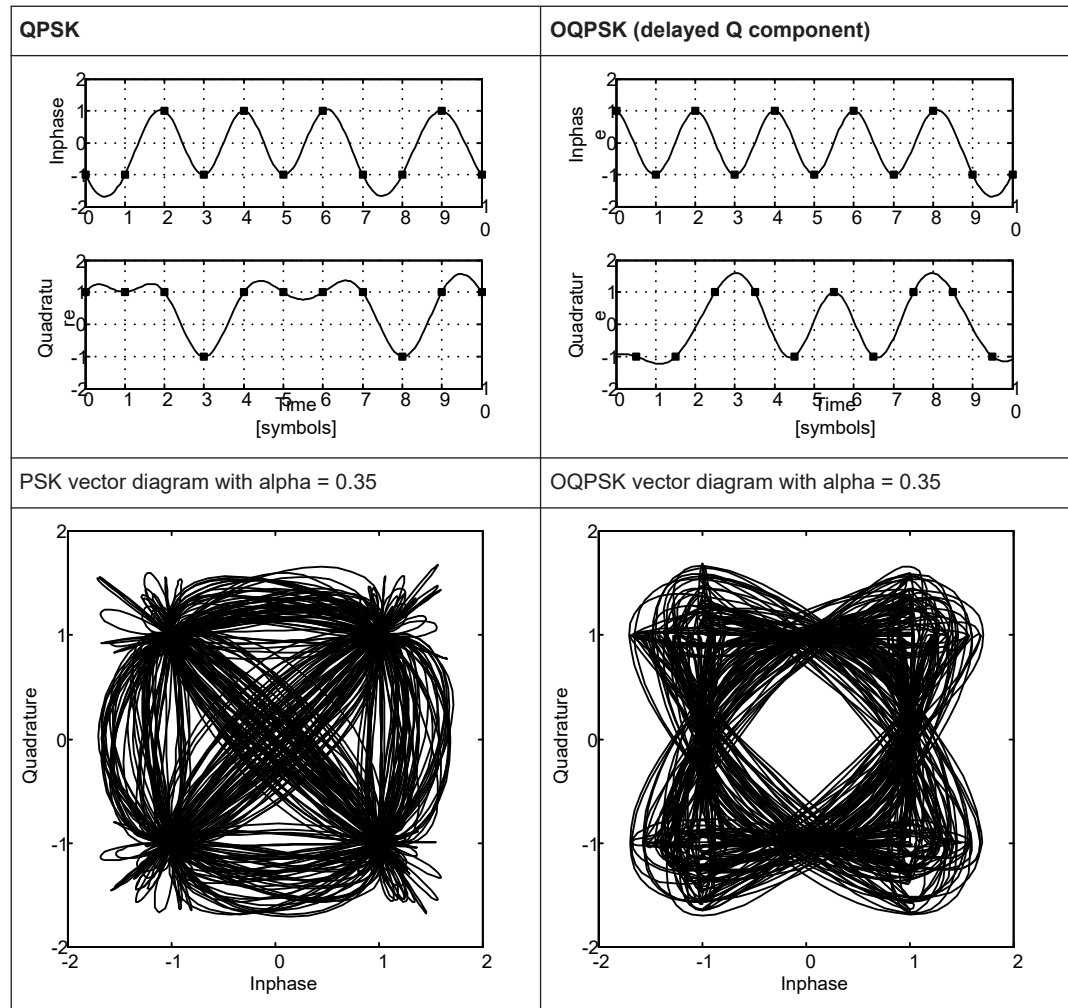

Offset QPSK reduces the dynamic range of the modulated signal (compared to "normal" QPSK) and, therefore, the demands on amplifier linearity by avoiding zero crossings.

A distinction is made in the analyzer display:

In the "Vector I/Q" result display of the measurement (or reference) signal, the time delay is not compensated for. The display corresponds to the physical diagram shown in (Table 4-31)

In the "Constellation I/Q" result display of the measurement (or reference) signal, the time delay is compensated for. The display corresponds to the logical mapping as in [Figure 4-33](#).

OQPSK

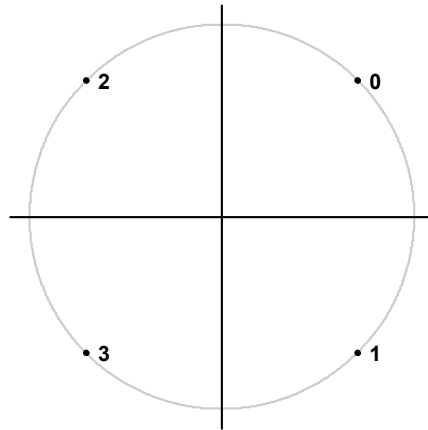


Figure 4-33: Constellation diagram for OQPSK (GRAY) including the symbol mapping

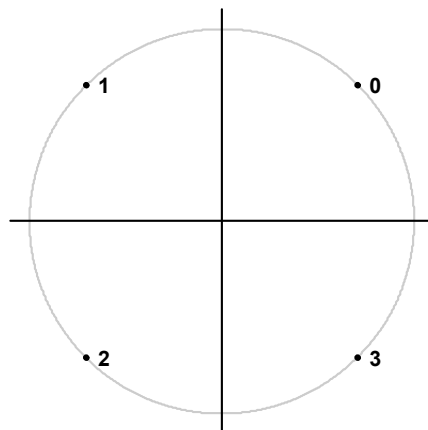


Figure 4-34: Constellation diagram for OQPSK (NATURAL, SMx) including the symbol mapping



OQPSK (NATURAL) is the OQPSK mapping used by supported R&S SMx signal generators when using PRBS algorithms. See ["Symbol mapping in accordance with the PRBS generator"](#) on page 172.

4.3.6 Shaped offset QPSK

Shaped Offset QPSK is a constant envelope modulation whose phase at any instant in time is either stationary or is moving at a rate of one-quarter of the bit rate. It can therefore also be interpreted as a ternary CPM.

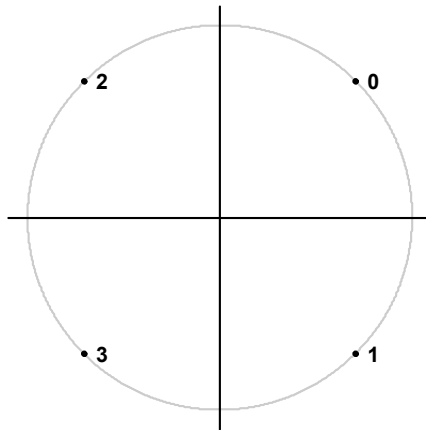


Figure 4-35: Constellation diagram for Shaped Offset QPSK including the symbol mapping

4.3.7 Frequency shift keying (FSK)

To illustrate symbol mappings for FSK modulations, the symbol numbers are marked in the logical mapping diagram versus the instantaneous frequency. An instantaneous frequency of zero in the baseband corresponds to the input frequency of the analyzer.

2FSK (NATURAL)

With 2FSK, the symbol decision is made by a simple frequency discriminator:

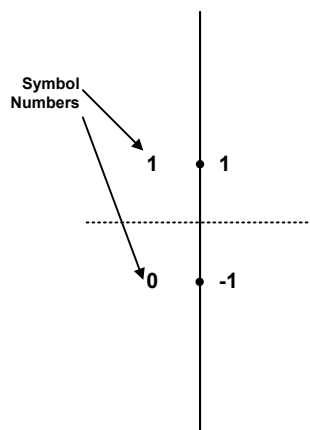


Figure 4-36: Constellation diagram for 2FSK (NATURAL, SMx) including the logical symbol mapping



2FSK (NATURAL) is the 2FSK mapping used by supported R&S SMx signal generators when using PRBS algorithms. See "[Symbol mapping in accordance with the PRBS generator](#)" on page 172.

4FSK

With 4FSK, the symbol decision is made by a frequency discriminator with 3 decision thresholds ($-2/3$; 0 ; $+2/3$) normalized to the FSK reference deviation.

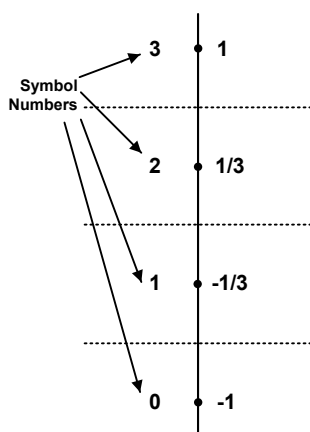


Figure 4-37: Constellation diagram for 4FSK (NATURAL, SMx) including the logical symbol mapping



4FSK (NATURAL) is the 4FSK mapping used by supported R&S SMx signal generators when using PRBS algorithms. See ["Symbol mapping in accordance with the PRBS generator"](#) on page 172.

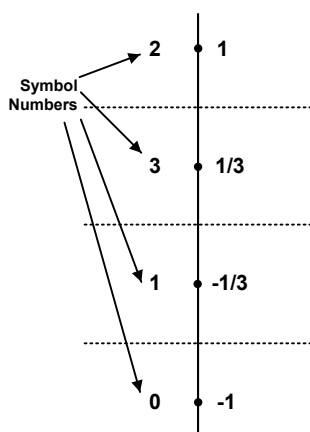


Figure 4-38: Constellation diagram for 4FSK (GRAY) including the logical symbol mapping

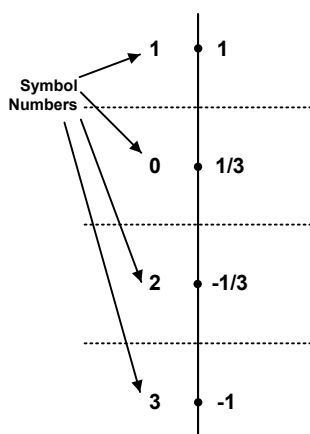


Figure 4-39: Constellation diagram for 4FSK for APCO C4FM and APCO Phase 2 including the logical symbol mapping

8FSK (NATURAL)

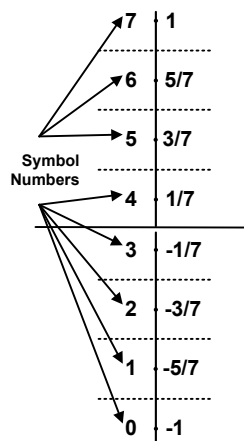


Figure 4-40: Constellation diagram for 8FSK (NATURAL) including the logical symbol mapping

16 FSK

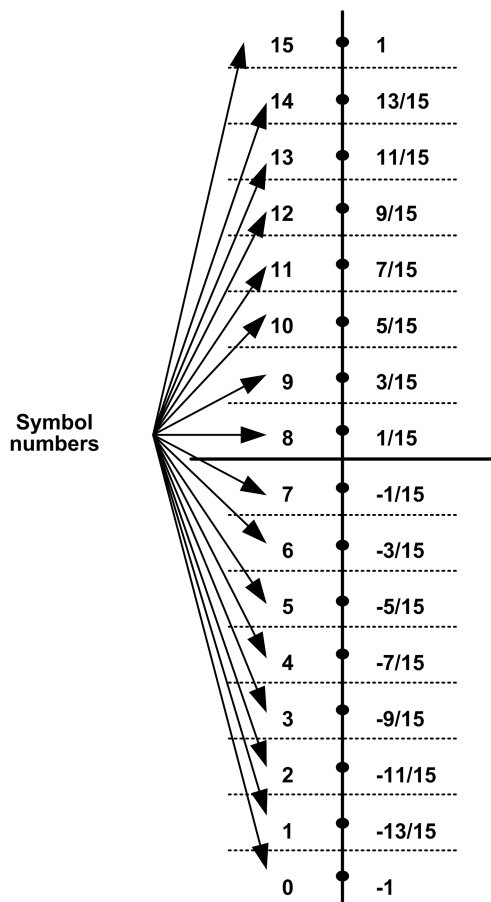


Figure 4-41: Constellation diagram for 16FSK including the logical symbol mapping

32FSK

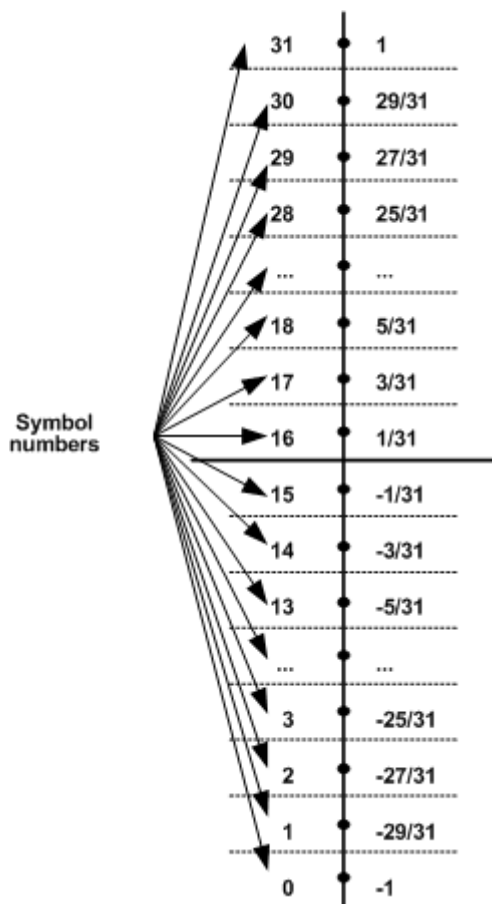


Figure 4-42: Constellation diagram for 32FSK including the logical symbol mapping

64FSK

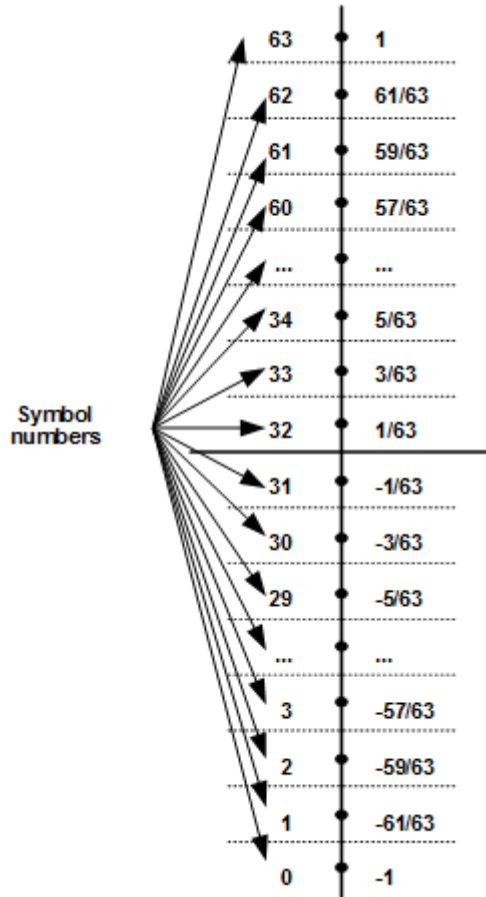


Figure 4-43: Constellation diagram for 64FSK including the logical symbol mapping

4.3.8 Minimum shift keying (MSK)

MSK modulation causes modulation-dependent phase shifts of $\pm 90^\circ$ which can be shown in a "Constellation I/Q" diagram. As with PSK, the phase positions are evaluated during demodulation.

Table 4-32: MSK (NATURAL)

| Logical symbol mapping | | |
|---|-------------|-------------|
| Modulation symbol (binary indication: MSB, LSB) | 0 | 1 |
| Phase shift | -90° | $+90^\circ$ |

Table 4-33: MSK (GSM)

| Logical symbol mapping | | |
|---|-------------|-------------|
| Modulation symbol (binary indication: MSB, LSB) | 0 | 1 |
| Phase shift | $+90^\circ$ | -90° |

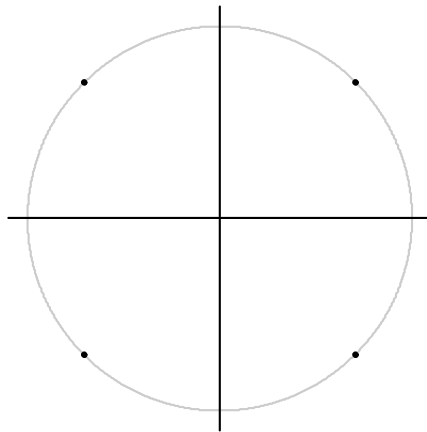


Figure 4-44: MSK (for GSM and NATURAL) and DMSK Constellation Diagram including the symbol mapping

Similar to PSK, differential coding can also be used with MSK. In this case, too, the information is represented by the transition of two consecutive symbols. The block diagram of the coder is shown below.

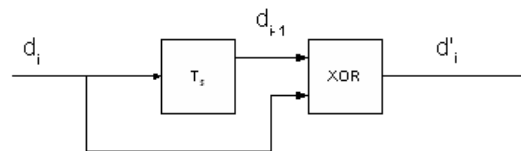


Figure 4-45: DMSK: differential encoder in the transmitter

d_i input symbol $\{0;1\}$ of differential encoder

d_{i-1} input symbol delayed by the symbol period T_s

d'_i output symbol $\{0;1\}$ of differential encoder

The logical symbol mapping is then performed on the XOR-coded bitstream d' .

4.3.9 Quadrature amplitude modulation (QAM)

With QAM, the information is represented by the signal amplitude and phase.

The symbols are arranged in a square constellation in the I/Q plane.




To ensure reliable demodulation, symbol numbers should be distributed evenly across the symbol alphabet.

As a rule of thumb, the **result length** should correspond to at least 8 times the modulation order. For example, with 64 QAM, a result length of at least $8 \cdot 64 = 512$ symbols should be used.

QAM Mappings

The following QAM mappings are obtained from the mapping of the first quadrant. The subsequent quadrants are always rotated by $\pi/2$ and supplemented by a (GRAY-coded) prefix for each quadrant.

Table 4-34: Derivation of QAM mappings

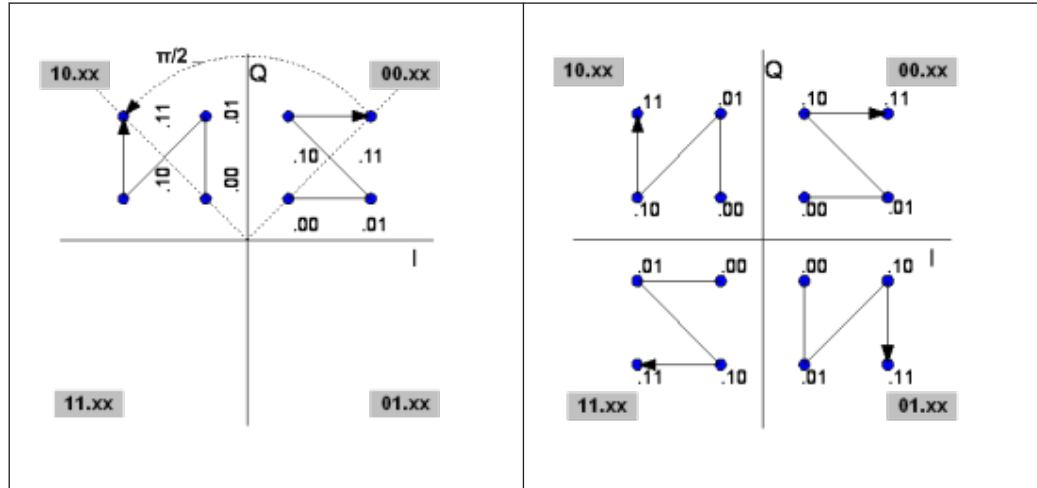

In the following diagrams, the symbol mappings are indicated in hexadecimal and binary form.

| | | | | | | | |
|-----|-----|-----|-----|--------|--------|--------|--------|
| • 0 | • 1 | • 3 | • 2 | • 0000 | • 0001 | • 0011 | • 0010 |
| • 4 | • 5 | • 7 | • 6 | • 0100 | • 0101 | • 0111 | • 0110 |
| • C | • D | • F | • E | • 1100 | • 1101 | • 1111 | • 1110 |
| • 8 | • 9 | • B | • A | • 1000 | • 1001 | • 1011 | • 1010 |

Figure 4-46: Constellation diagram for 16QAM (GRAY) including the logical symbol mapping (hexadecimal and binary)

| | | | | | | | |
|-----|-----|-----|-----|------|------|------|------|
| • B | • 9 | • 1 | • 3 | 1011 | 1001 | 0001 | 0011 |
| • A | • 8 | • 0 | • 2 | 1010 | 1000 | 0000 | 0010 |
| • E | • C | • 4 | • 6 | 1110 | 1100 | 0100 | 0110 |
| • F | • D | • 5 | • 7 | 1111 | 1101 | 0101 | 0111 |

Figure 4-47: Constellation diagram for 16QAM including the logical symbol mapping for EDGE (hexadecimal and binary)

| | | | | | | | |
|-----|-----|-----|-----|------|------|------|------|
| • B | • 9 | • 2 | • 3 | 1011 | 1001 | 0010 | 0011 |
| • A | • 8 | • 0 | • 1 | 1010 | 1000 | 0000 | 0001 |
| • D | • C | • 4 | • 6 | 1101 | 1100 | 0100 | 0110 |
| • F | • E | • 5 | • 7 | 1111 | 1110 | 0101 | 0111 |

Figure 4-48: Constellation diagram for 16QAM including the logical symbol mapping for DVB-C (hexadecimal and binary)



16QAM DVB-C is the 16QAM mapping used by supported R&S SMx signal generators when using PRBS algorithms. See "[Symbol mapping in accordance with the PRBS generator](#)" on page 172.

| | | | | | | | |
|-----|-----|-----|-----|------|------|------|------|
| • 7 | • 3 | • B | • F | 0111 | 0011 | 1011 | 1111 |
| • 6 | • 2 | • A | • E | 0110 | 0010 | 1010 | 1110 |
| • 4 | • 0 | • 8 | • C | 0100 | 0000 | 1000 | 1100 |
| • 5 | • 1 | • 9 | • D | 0101 | 0001 | 1001 | 1101 |

Figure 4-49: Constellation diagram for 16QAM including the logical symbol mapping for DVB-RCS2 (hexadecimal and binary)

| | | | | | | | | | | | |
|------|------|------|------|------|------|-------|-------|-------|-------|-------|-------|
| • 17 | • 13 | • 06 | • 02 | | | | | | | | |
| • 12 | • 15 | • 11 | • 04 | • 05 | • 07 | 10111 | 10011 | 00110 | 00010 | | |
| • 16 | • 14 | • 10 | • 00 | • 01 | • 03 | 10010 | 10101 | 10001 | 00100 | 00101 | 00111 |
| • 1B | • 19 | • 18 | • 08 | • 0C | • 0E | 10110 | 10100 | 10000 | 00000 | 00001 | 00011 |
| • 1F | • 1D | • 1C | • 09 | • 0D | • 0A | 11011 | 11001 | 11000 | 01000 | 01100 | 01110 |
| • 1A | • 1E | • 0B | • 0F | | | 11111 | 11101 | 11100 | 01001 | 01101 | 01010 |
| | | | | | | 11010 | 11110 | | 01011 | 01111 | |

Figure 4-50: Constellation diagram for 32QAM including the logical symbol mapping for DVB-C (hexadecimal and binary)



32QAM DVB-C is the 32QAM mapping used by supported R&S SMx signal generators when using PRBS algorithms. See "[Symbol mapping in accordance with the PRBS generator](#)" on page 172.

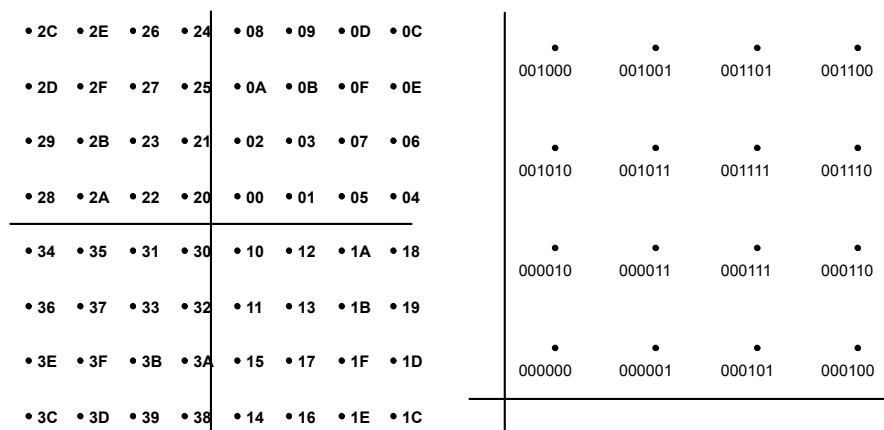


Figure 4-51: Constellation diagram for 64QAM including the logical symbol mapping for DVB-C (hexadecimal and binary); the binary form shows the upper right section of the diagram only.



64QAM DVB-C is the 64QAM mapping used by supported R&S SMx signal generators when using PRBS algorithms. See ["Symbol mapping in accordance with the PRBS generator"](#) on page 172.

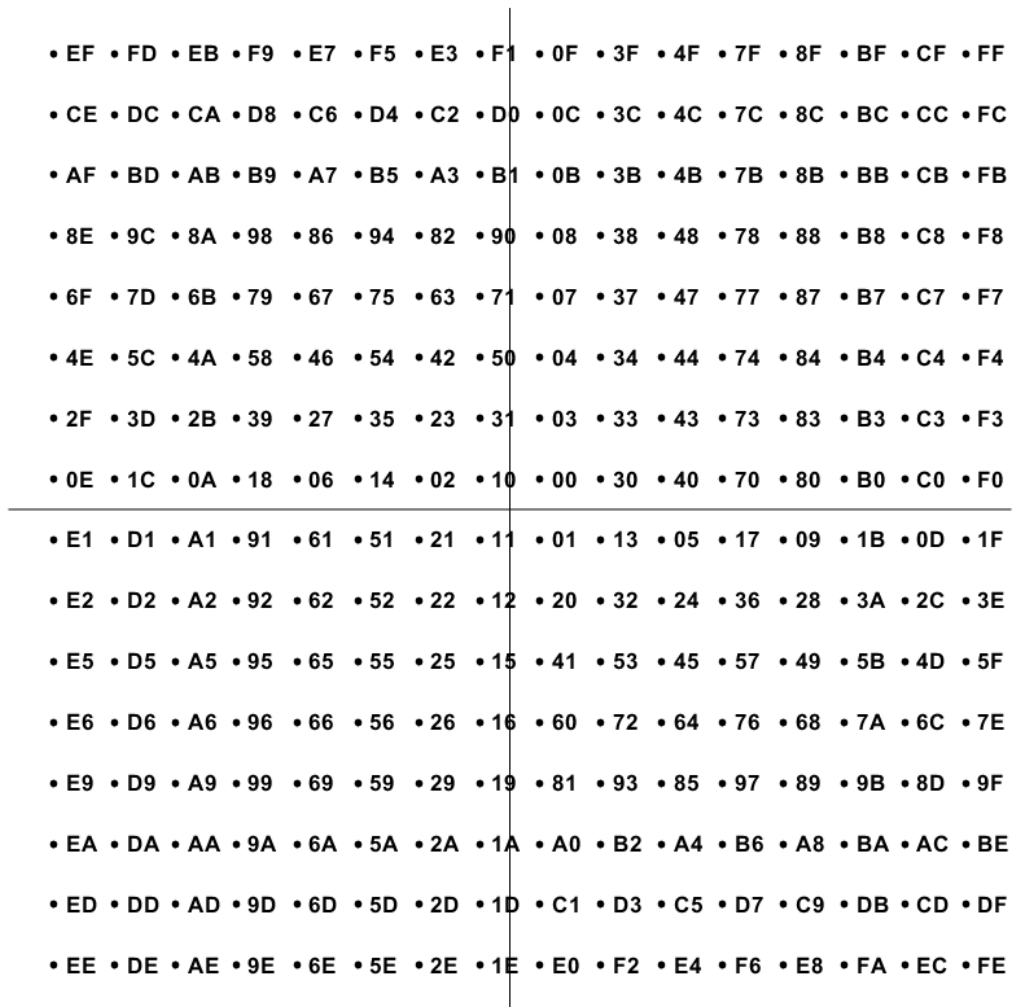


Figure 4-52: Constellation diagram for 64QAM including the logical symbol mapping for DOCSIS 3.0, North American Cable Downstream according to ITU-T J.83-B (hexadecimal)

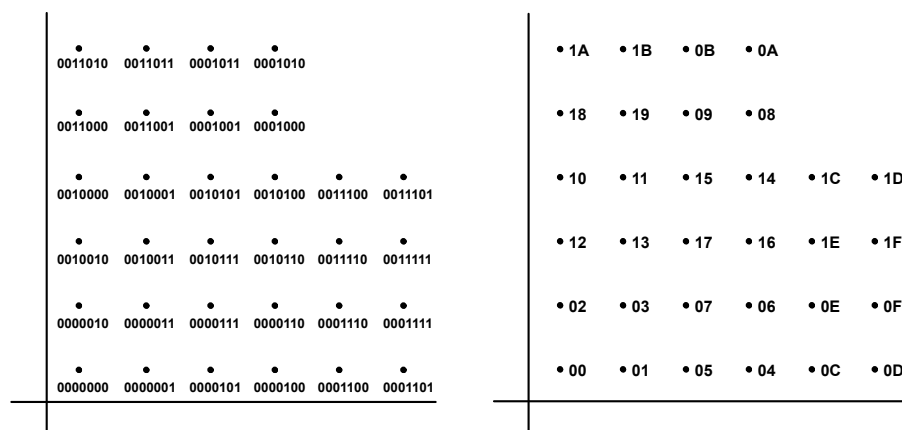


Figure 4-53: Constellation diagram for 128QAM (GRAY, SMx) including the logical symbol mapping (hexadecimal and binary); the figure shows the upper right sections of the diagram only



128QAM GRAY is the 128QAM mapping used by supported R&S SMx signal generators when using PRBS algorithms. See ["Symbol mapping in accordance with the PRBS generator"](#) on page 172.

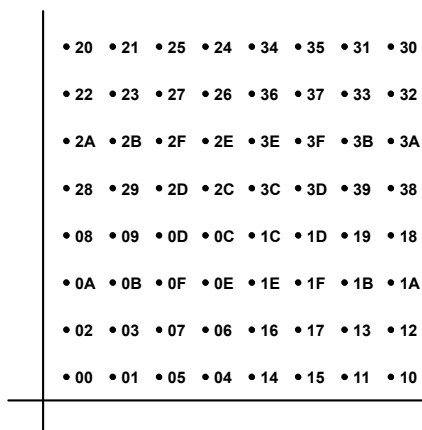


Figure 4-54: Constellation diagram for 256QAM (GRAY, SMx) including the logical symbol mapping (hexadecimal); the figure shows the upper right section of the diagram only



256QAM GRAY is the 256QAM mapping used by supported R&S SMx signal generators when using PRBS algorithms. See ["Symbol mapping in accordance with the PRBS generator"](#) on page 172.

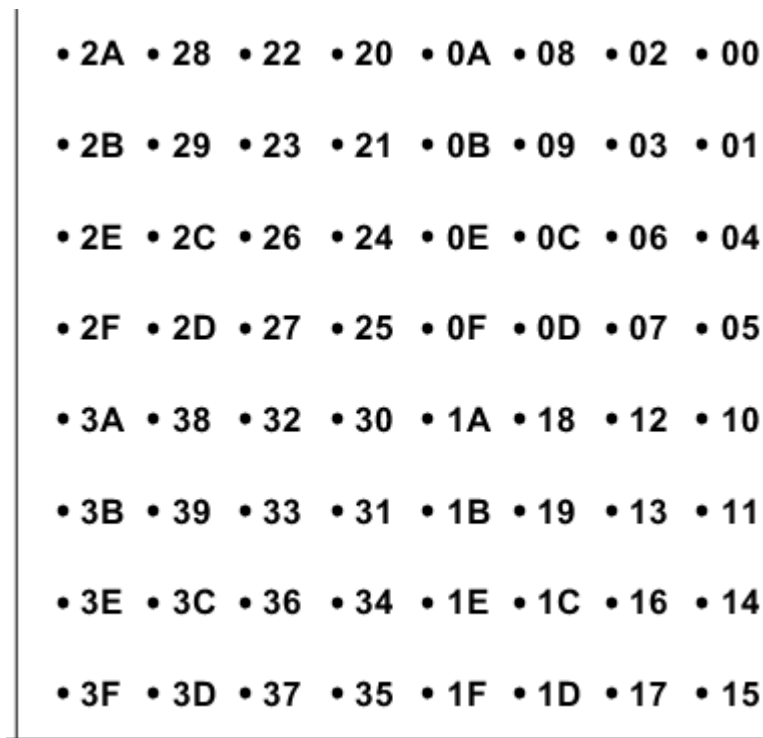


Figure 4-55: Constellation diagram for 256QAM DOCSIS 3.0, North American Cable Downstream according to ITU-T J.83-B, including the logical symbol mapping (hexadecimal)



Figure 4-56: Constellation diagram for 512QAM (NATURAL, SMx), including the logical symbol mapping (hexadecimal); the figure shows the upper right section of the diagram only

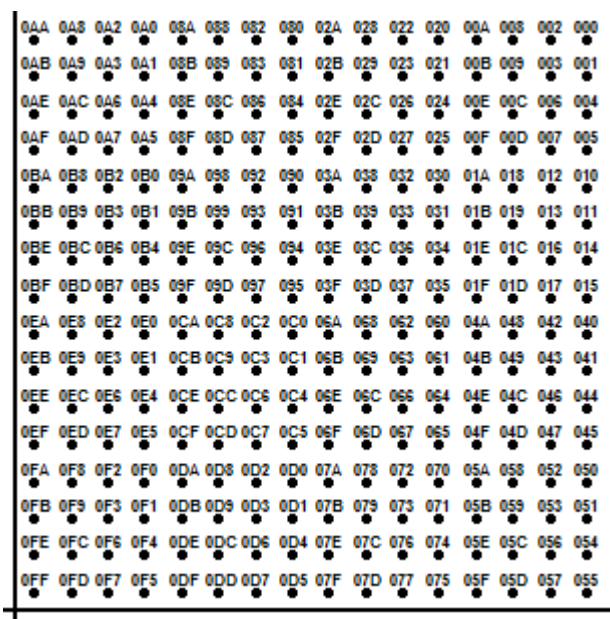


Figure 4-57: Constellation diagram for 1024QAM including the logical symbol mapping (hexadecimal); the figure shows the upper right section of the diagram only

• 080 • 081 • 085 • 084 • 094 • 095 • 091 • 090 • 0D0 • 0D1 • 0D5 • 0D4 • 0C4 • 0C5 • 0C1 • 0C0
 • 082 • 083 • 087 • 086 • 096 • 097 • 093 • 092 • 0D2 • 0D3 • 0D7 • 0D6 • 0C6 • 0C7 • 0C3 • 0C2
 • 08A • 08B • 08F • 08E • 09E • 09F • 09B • 09A • 0DA • 0DB • 0DF • 0DE • 0CE • 0CF • 0CB • 0CA
 • 088 • 089 • 08D • 08C • 09C • 09D • 099 • 098 • 0D8 • 0D9 • 0DD • 0DC • 0CC • 0CD • 0C9 • 0C8
 • 0A8 • 0A9 • 0AD • 0AC • 0BC • 0BD • 0B9 • 0B8 • 0F8 • 0F9 • 0FD • 0FC • 0EC • 0ED • 0E9 • 0E8
 • 0AA • 0AB • 0AF • 0AE • 0BE • 0BF • 0BB • 0BA • 0FA • 0FB • 0FF • 0FE • 0EE • 0EF • 0EB • 0EA
 • 0A2 • 0A3 • 0A7 • 0A6 • 0B6 • 0B7 • 0B3 • 0B2 • 0F2 • 0F3 • 0F7 • 0F6 • 0E6 • 0E7 • 0E3 • 0E2
 • 0A0 • 0A1 • 0A5 • 0A4 • 0B4 • 0B5 • 0B1 • 0B0 • 0F0 • 0F1 • 0F5 • 0F4 • 0E4 • 0E5 • 0E1 • 0E0
 • 020 • 021 • 025 • 024 • 034 • 035 • 031 • 030 • 070 • 071 • 075 • 074 • 064 • 065 • 061 • 060
 • 022 • 023 • 027 • 026 • 036 • 037 • 033 • 032 • 072 • 073 • 077 • 076 • 066 • 067 • 063 • 062
 • 02A • 02B • 02F • 02E • 03E • 03F • 03B • 03A • 07A • 07B • 07F • 07E • 06E • 06F • 06B • 06A
 • 028 • 029 • 02D • 02C • 03C • 03D • 039 • 038 • 078 • 079 • 07D • 07C • 06C • 06D • 069 • 068
 • 008 • 009 • 00D • 00C • 01C • 01D • 019 • 018 • 058 • 059 • 05D • 05C • 04C • 04D • 049 • 048
 • 00A • 00B • 00F • 00E • 01E • 01F • 01B • 01A • 05A • 05B • 05F • 05E • 04E • 04F • 04B • 04A
 • 002 • 003 • 007 • 006 • 016 • 017 • 013 • 012 • 052 • 053 • 057 • 056 • 046 • 047 • 043 • 042
 • 000 • 001 • 005 • 004 • 014 • 015 • 011 • 010 • 050 • 051 • 055 • 054 • 044 • 045 • 041 • 040

Figure 4-58: Constellation diagram for 1024QAM (GRAY, SMx) including the logical symbol mapping (hexadecimal); the figure shows the upper right section of the diagram only



1024QAM GRAY is the 1024QAM mapping used by supported R&S SMx signal generators when using PRBS algorithms. See "[Symbol mapping in accordance with the PRBS generator](#)" on page 172.

• 178 • 170 • 171 • 160 • 15A • 132 • 12A • 12B • 11A • 114 • 060 • 058 • 059 • 048 • 042 • 00A
 • 177 • 16E • 16F • 15F • 159 • 131 • 128 • 129 • 119 • 113 • 05F • 056 • 057 • 047 • 041 • 009
 • 176 • 16C • 16D • 15E • 158 • 130 • 126 • 127 • 118 • 112 • 05E • 054 • 055 • 046 • 040 • 008
 • 175 • 16A • 16B • 15D • 157 • 12F • 124 • 125 • 117 • 111 • 05D • 052 • 053 • 045 • 03F • 007
 • 174 • 168 • 169 • 15C • 156 • 12E • 122 • 123 • 116 • 110 • 05C • 050 • 051 • 044 • 03E • 006
 • 179 • 172 • 173 • 161 • 15B • 133 • 12C • 12D • 11B • 115 • 061 • 05A • 05B • 049 • 043 • 00B
 • 180 • 17A • 17B • 165 • 162 • 13A • 134 • 135 • 11F • 11C • 068 • 062 • 063 • 04D • 04A • 00D
 • 182 • 17E • 17F • 167 • 164 • 13C • 138 • 139 • 121 • 11E • 06A • 066 • 067 • 04F • 04C • 010
 • 181 • 17C • 17D • 166 • 163 • 13B • 136 • 137 • 120 • 11D • 069 • 064 • 065 • 04E • 04B • 00E • 00F • 00C • 005 • 000 • 001 • 002 • 003 • 004
 • 191 • 18D • 18E • 185 • 183 • 14B • 147 • 148 • 13F • 13D • 079 • 075 • 076 • 06D • 06B • 031 • 032 • 02F • 01B • 011 • 012 • 013 • 014 • 015
 • 192 • 18F • 190 • 186 • 184 • 14C • 149 • 14A • 140 • 13E • 07A • 077 • 078 • 06E • 06C • 033 • 034 • 030 • 01C • 016 • 017 • 018 • 019 • 01A
 • 19A • 195 • 196 • 18B • 188 • 154 • 14F • 150 • 145 • 142 • 082 • 07D • 07E • 073 • 070 • 03A • 03B • 036 • 02D • 022 • 023 • 024 • 025 • 026
 • 199 • 193 • 194 • 18A • 187 • 153 • 14D • 14E • 144 • 141 • 081 • 07B • 07C • 072 • 06F • 038 • 039 • 035 • 02C • 01D • 01E • 01F • 020 • 021
 • 19B • 197 • 198 • 18C • 189 • 155 • 151 • 152 • 146 • 143 • 083 • 07F • 080 • 074 • 071 • 03C • 03D • 037 • 02E • 027 • 028 • 029 • 02A • 02B
 • 1DC • 1D8 • 1D9 • 1D0 • 1CE • 1AA • 1A6 • 1A7 • 19E • 19C • 0EC • 0E8 • 0E9 • 0E0 • 0DE • 0A4 • 0A5 • 0A2 • 08E • 084 • 085 • 086 • 087 • 088
 • 1DD • 1DA • 1DB • 1D1 • 1CF • 1AB • 1A8 • 1A9 • 19F • 19D • 0ED • 0EA • 0EB • 0E1 • 0DF • 0A6 • 0A7 • 0A3 • 08F • 089 • 08A • 08B • 08C • 08D
 • 1E5 • 1E0 • 1E1 • 1D6 • 1D3 • 1B3 • 1AE • 1AF • 1A4 • 1A1 • 0F5 • 0F0 • 0F1 • 0E6 • 0E3 • 0AD • 0AE • 0A9 • 0A0 • 095 • 096 • 097 • 098 • 099
 • 1E4 • 1DE • 1DF • 1D5 • 1D2 • 1B2 • 1AC • 1AD • 1A3 • 1A0 • 0F4 • 0EE • 0EF • 0E5 • 0E2 • 0AB • 0AC • 0A8 • 09F • 090 • 091 • 092 • 093 • 094
 • 1E6 • 1E2 • 1E3 • 1D7 • 1D4 • 1B4 • 1B0 • 1B1 • 1A5 • 1A2 • 0F6 • 0F2 • 0F3 • 0E7 • 0E4 • 0AF • 0B0 • 0AA • 0A1 • 09A • 09B • 09C • 09D • 09E
 • 1F5 • 1F1 • 1F2 • 1E9 • 1E7 • 1C3 • 1BF • 1C0 • 1B7 • 1B5 • 105 • 101 • 102 • 0F9 • 0F7 • 0D1 • 0D2 • 0CF • 0BB • 0B1 • 0B2 • 0B3 • 0B4 • 0B5
 • 1F6 • 1F3 • 1F4 • 1EA • 1E8 • 1C4 • 1C1 • 1C2 • 1B8 • 1B6 • 106 • 103 • 104 • 0FA • 0F8 • 0D3 • 0D4 • 0D0 • 0BC • 0B6 • 0B7 • 0B8 • 0B9 • 0BA
 • 1FE • 1F9 • 1FA • 1EF • 1EC • 1CC • 1C7 • 1C8 • 1BD • 1BA • 10E • 109 • 10A • 0FF • 0FC • 0DA • 0DB • 0D6 • 0CD • 0C2 • 0C3 • 0C4 • 0C5 • 0C6
 • 1FD • 1F7 • 1F8 • 1EE • 1EB • 1CB • 1C5 • 1C6 • 1BC • 1B9 • 10D • 107 • 108 • 0FE • 0FB • 0D8 • 0D9 • 0D5 • 0CC • 0BD • 0BE • 0BF • 0C0 • 0C1
 • 1FF • 1FB • 1FC • 1F0 • 1ED • 1CD • 1C9 • 1CA • 1BE • 1BB • 10F • 10B • 10C • 100 • 0FD • 0DC • 0DD • 0D7 • 0CE • 0C7 • 0C8 • 0C9 • 0CA • 0CB

Figure 4-59: Constellation diagram for 2048QAM (NATURAL, SMx) including the logical symbol mapping (hexadecimal); the figure shows the upper right section of the diagram only

• 200 • 201 • 205 • 204 • 214 • 215 • 211 • 210 • 250 • 251 • 255 • 254 • 244 • 245 • 241 • 240 • 340 • 341 • 345 • 344 • 354 • 355 • 351 • 350 • 310 • 311 • 315 • 314 • 304 • 305 • 301 • 300
 • 202 • 203 • 207 • 206 • 216 • 217 • 213 • 212 • 252 • 253 • 257 • 256 • 246 • 247 • 243 • 242 • 342 • 343 • 347 • 346 • 356 • 357 • 353 • 352 • 312 • 313 • 317 • 316 • 306 • 307 • 303 • 302
 • 20A • 20B • 20F • 20E • 21E • 21F • 21B • 21A • 25A • 25B • 25F • 25E • 24E • 24F • 24B • 24A • 34A • 34B • 34F • 34E • 35E • 35F • 35B • 35A • 31A • 31B • 31F • 31E • 30E • 30F • 30B • 30A
 • 208 • 209 • 20D • 20C • 21C • 21D • 219 • 218 • 258 • 259 • 25D • 25C • 24C • 24D • 249 • 248 • 348 • 349 • 34D • 34C • 35C • 35D • 359 • 358 • 318 • 319 • 31D • 31C • 30C • 30D • 309 • 308
 • 228 • 229 • 22D • 22C • 23C • 23D • 239 • 238 • 278 • 279 • 27D • 27C • 26C • 26D • 269 • 268 • 368 • 369 • 36D • 36C • 37C • 37D • 379 • 378 • 338 • 339 • 33D • 33C • 32C • 32D • 329 • 328
 • 22A • 22B • 22F • 22E • 23E • 23F • 23B • 23A • 27A • 27B • 27F • 27E • 26E • 26F • 26B • 26A • 36A • 36B • 36F • 36E • 37E • 37F • 37B • 37A • 33A • 33B • 33F • 33E • 32E • 32F • 32B • 32A
 • 222 • 223 • 227 • 226 • 236 • 237 • 233 • 232 • 272 • 273 • 277 • 276 • 266 • 267 • 263 • 262 • 362 • 363 • 367 • 366 • 376 • 377 • 373 • 372 • 332 • 333 • 337 • 336 • 326 • 327 • 323 • 322
 • 220 • 221 • 225 • 224 • 234 • 235 • 231 • 230 • 270 • 271 • 275 • 274 • 264 • 265 • 261 • 260 • 360 • 361 • 365 • 364 • 374 • 375 • 371 • 370 • 330 • 331 • 335 • 334 • 324 • 325 • 321 • 320
 • 2A0 • 2A1 • 2A5 • 2A4 • 2B4 • 2B5 • 2B1 • 2B0 • 2F0 • 2F1 • 2F5 • 2F4 • 2E4 • 2E5 • 2E1 • 2E0 • 3E0 • 3E1 • 3E5 • 3E4 • 3F4 • 3F5 • 3F1 • 3F0 • 3B0 • 3B1 • 3B5 • 3B4 • 3A4 • 3A5 • 3A1 • 3A0
 • 2A2 • 2A3 • 2A7 • 2A6 • 2B6 • 2B7 • 2B3 • 2B2 • 2F2 • 2F3 • 2F7 • 2F6 • 2E6 • 2E7 • 2E3 • 2E2 • 3E2 • 3E3 • 3E7 • 3E6 • 3F6 • 3F7 • 3F3 • 3F2 • 3B2 • 3B3 • 3B7 • 3B6 • 3A6 • 3A7 • 3A3 • 3A2
 • 2AA • 2AB • 2AF • 2AE • 2BE • 2BF • 2BB • 2BA • 2FA • 2FB • 2FF • 2FE • 2EB • 2EF • 2EB • 2EA • 3EA • 3EB • 3EF • 3EB • 3FE • 3FF • 3FB • 3FA • 3BA • 3BB • 3BF • 3BE • 3AE • 3AF • 3AB • 3AA
 • 2A8 • 2A9 • 2AD • 2AC • 2BC • 2BD • 2B9 • 2B8 • 2F8 • 2F9 • 2FD • 2FC • 2EC • 2ED • 2E9 • 2E8 • 3E8 • 3E9 • 3ED • 3EC • 3FC • 3FD • 3F9 • 3F8 • 3B8 • 3B9 • 3BD • 3BC • 3AC • 3AD • 3A9 • 3A8
 • 288 • 289 • 28D • 28C • 29C • 29D • 299 • 298 • 2D8 • 2D9 • 2DD • 2DC • 2CC • 2CD • 2C9 • 2C8 • 3C8 • 3C9 • 3CD • 3CC • 3DC • 3DD • 3D9 • 3D8 • 398 • 399 • 39D • 39C • 38C • 38D • 389 • 388
 • 28A • 28B • 28F • 28E • 29E • 29F • 29B • 29A • 2DA • 2DB • 2DF • 2DE • 2CB • 2CF • 2CB • 2CA • 3CA • 3CB • 3CF • 3CB • 3DE • 3DF • 3DB • 3DA • 39A • 39B • 39F • 39E • 38E • 38F • 38B • 38A
 • 282 • 283 • 287 • 286 • 296 • 297 • 293 • 292 • 2D2 • 2D3 • 2D7 • 2D6 • 2C6 • 2C7 • 2C3 • 2C2 • 3C2 • 3C3 • 3C7 • 3C6 • 3D6 • 3D7 • 3D3 • 3D2 • 392 • 393 • 397 • 396 • 386 • 387 • 383 • 382
 • 280 • 281 • 285 • 284 • 294 • 295 • 291 • 290 • 2D0 • 2D1 • 2D5 • 2D4 • 2C4 • 2C5 • 2C1 • 2C0 • 3C0 • 3C1 • 3C5 • 3C4 • 3D4 • 3D5 • 3D1 • 3D0 • 390 • 391 • 395 • 394 • 384 • 385 • 381 • 380
 • 080 • 081 • 085 • 084 • 094 • 095 • 091 • 090 • 0D0 • 0D1 • 0D5 • 0D4 • 0C4 • 0C5 • 0C1 • 0C0 • 1C0 • 1C1 • 1C5 • 1C4 • 1D4 • 1D5 • 1D1 • 1D0 • 190 • 191 • 195 • 194 • 184 • 185 • 181 • 180
 • 082 • 083 • 087 • 086 • 096 • 097 • 093 • 092 • 0D2 • 0D3 • 0D7 • 0D6 • 0C6 • 0C7 • 0C3 • 0C2 • 1C2 • 1C3 • 1C7 • 1C6 • 1D6 • 1D7 • 1D3 • 1D2 • 192 • 193 • 197 • 196 • 186 • 187 • 183 • 182
 • 08A • 08B • 08F • 08E • 09E • 09F • 09B • 09A • 0DA • 0DB • 0DF • 0DE • 0CB • 0CF • 0CB • 0CA • 1CA • 1CB • 1CF • 1CB • 1DE • 1DF • 1DB • 1DA • 19A • 19B • 19F • 19E • 18E • 18F • 18B • 18A
 • 088 • 089 • 08D • 08C • 09C • 09D • 099 • 098 • 0D8 • 0D9 • 0DD • 0DC • 0CC • 0CD • 0C9 • 0C8 • 1C8 • 1C9 • 1CD • 1CC • 1DC • 1DD • 1D9 • 1D8 • 198 • 199 • 19D • 19C • 18C • 18D • 189 • 188
 • 0A8 • 0A9 • 0AD • 0AC • 0BC • 0BD • 0B9 • 0B8 • 0F8 • 0F9 • 0FD • 0FC • 0E0 • 0ED • 0E9 • 0E8 • 1E8 • 1E9 • 1ED • 1E0 • 1FC • 1FD • 1F9 • 1F8 • 1B8 • 1B9 • 1BD • 1B0 • 1AC • 1AD • 1A9 • 1A8
 • 0AA • 0AB • 0AF • 0AE • 0BE • 0BF • 0BB • 0BA • 0FA • 0FB • 0FF • 0FE • 0EB • 0EF • 0EB • 0EA • 1EA • 1EB • 1EF • 1EB • 1FE • 1FF • 1FB • 1FA • 1BA • 1BB • 1BF • 1BE • 1AE • 1AF • 1AB • 1AA
 • 0A2 • 0A3 • 0A7 • 0A6 • 0B6 • 0B7 • 0B3 • 0B2 • 0F2 • 0F3 • 0F7 • 0F6 • 0E6 • 0E7 • 0E3 • 0E2 • 1E2 • 1E3 • 1E7 • 1E6 • 1F6 • 1F7 • 1F3 • 1F2 • 1B2 • 1B3 • 1B7 • 1B6 • 1A6 • 1A7 • 1A3 • 1A2
 • 0A0 • 0A1 • 0A5 • 0A4 • 0B4 • 0B5 • 0B1 • 0B0 • 0F0 • 0F1 • 0F5 • 0F4 • 0E4 • 0E5 • 0E1 • 0E0 • 1E0 • 1E1 • 1E5 • 1E4 • 1F4 • 1F5 • 1F1 • 1F0 • 1B0 • 1B1 • 1B5 • 1B4 • 1A4 • 1A5 • 1A1 • 1A0
 • 020 • 021 • 025 • 024 • 034 • 035 • 031 • 030 • 070 • 071 • 075 • 074 • 064 • 065 • 061 • 060 • 160 • 161 • 165 • 164 • 174 • 175 • 171 • 170 • 130 • 131 • 135 • 134 • 124 • 125 • 121 • 120
 • 022 • 023 • 027 • 026 • 036 • 037 • 033 • 032 • 072 • 073 • 077 • 076 • 066 • 067 • 063 • 062 • 162 • 163 • 167 • 166 • 176 • 177 • 173 • 172 • 132 • 133 • 137 • 136 • 126 • 127 • 123 • 122
 • 02A • 02B • 02F • 02E • 03E • 03F • 03B • 03A • 07A • 07B • 07F • 07E • 06E • 06F • 06B • 06A • 16A • 16B • 16F • 16E • 17E • 17F • 17B • 17A • 13A • 13B • 13F • 13E • 12E • 12F • 12B • 12A
 • 028 • 029 • 02D • 02C • 03C • 03D • 039 • 038 • 078 • 079 • 07D • 07C • 06C • 06D • 069 • 068 • 168 • 169 • 16D • 16C • 17C • 17D • 179 • 178 • 138 • 139 • 13D • 13C • 12C • 12D • 129 • 128
 • 008 • 009 • 00D • 00C • 01C • 01D • 019 • 018 • 058 • 059 • 05D • 05C • 04C • 04D • 049 • 048 • 148 • 149 • 14D • 14C • 15C • 15D • 159 • 158 • 118 • 119 • 11D • 11C • 10C • 10D • 109 • 108
 • 00A • 00B • 00F • 00E • 01E • 01F • 01B • 01A • 05A • 05B • 05F • 05E • 04E • 04F • 04B • 04A • 14A • 14B • 14F • 14E • 15E • 15F • 15B • 15A • 11A • 11B • 11F • 11E • 10E • 10F • 10B • 10A
 • 002 • 003 • 007 • 006 • 016 • 017 • 013 • 012 • 052 • 053 • 057 • 056 • 046 • 047 • 043 • 042 • 142 • 143 • 147 • 146 • 156 • 157 • 153 • 152 • 112 • 113 • 117 • 116 • 106 • 107 • 103 • 102
 • 000 • 001 • 005 • 004 • 014 • 015 • 011 • 010 • 050 • 051 • 055 • 054 • 044 • 045 • 041 • 040 • 140 • 141 • 145 • 144 • 154 • 155 • 151 • 150 • 110 • 111 • 115 • 114 • 104 • 105 • 101 • 100

Figure 4-60: Constellation diagram for 4096QAM (GRAY, SMx) including the logical symbol mapping (hexadecimal); the figure shows the upper right section of the diagram only



4096QAM GRAY is the 4096QAM mapping used by supported R&S SMx signal generators when using PRBS algorithms. See ["Symbol mapping in accordance with the PRBS generator"](#) on page 172.

4.3.10 ASK

2ASK (OOK)

ASK stands for Amplitude Shift Keying, 2ASK (binary) is often also referred to as "On Off Keying" (OOK). With this type of modulation, the information is solely represented by the absolute amplitude of the received signal at the decision points.

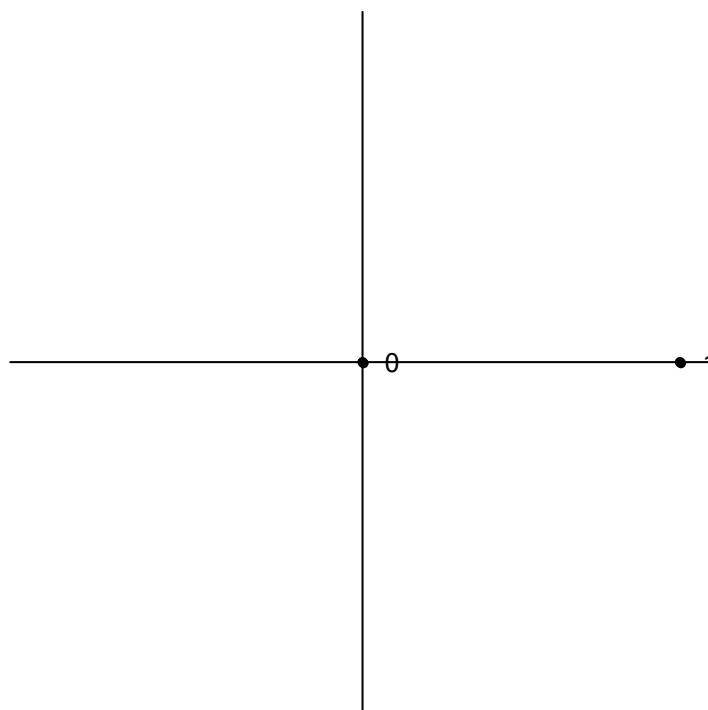


Figure 4-61: Constellation diagram for 2ASK

4ASK

4ASK is a 4-ary Amplitude Shift Keying mapping type. With this type of modulation, the information is solely represented by the absolute amplitude of the received signal at the decision points.

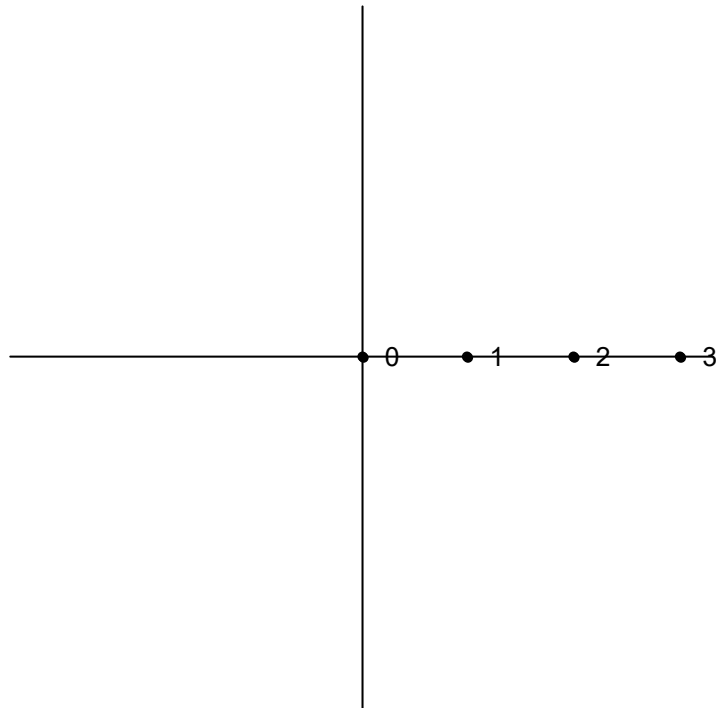


Figure 4-62: Constellation diagram for 4ASK

4.3.11 APSK

With Amplitude Phase Shift Keying (APSK) modulation, the information is represented by the signal amplitude and the signal phase.

16APSK

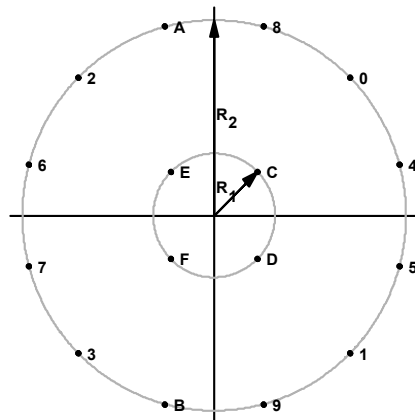


Figure 4-63: Constellation diagram for 16APSK including the logical symbol mapping for DVB-S2

For DVB-S2 16APSK mappings, the ratio of the outer circle radius to the inner circle radius ($\gamma = R_2/R_1$) depends on the utilized code rate and complies with [Figure 4-63](#).

Table 4-35: Optimum constellation radius ratio γ (linear channel) for 16APSK

| Code Rate | Modulation / coding spectral efficiency | γ |
|-----------|---|----------|
| 2/3 | 2.66 | 3.15 |
| 3/4 | 2.99 | 2.85 |
| 4/5 | 3.19 | 2.75 |
| 5/6 | 3.32 | 2.70 |
| 8/9 | 3.55 | 2.60 |
| 9/10 | 3.59 | 2.57 |

32APSK

For DVB-S2 32APSK mappings, the ratio of the middle circle radius to the inner circle radius is specified as $\gamma_1 = R_2/R_1$. The ratio of the outer circle radius to the inner circle radius is specified as γ_2 . Both ratios depend on the used code rate and comply with [Table 4-36](#).

Table 4-36: Optimum constellation radius ratios γ_1 and γ_2 (linear channel) for 32APSK

| Code Rate | Modulation / coding spectral efficiency | γ_1 | γ_2 |
|-----------|---|------------|------------|
| 2/3 | 3.74 | 2.84 | 5.27 |
| 3/4 | 3.99 | 2.72 | 4.87 |
| 4/5 | 4.15 | 2.64 | 4.64 |
| 5/6 | 4.43 | 2.54 | 4.33 |
| 8/9 | 4.49 | 2.53 | 4.30 |

4.3.12 User-defined modulation

In addition to the modulation types defined by the standards, modulation (including symbol mappings) can also be defined according to user requirements. In this case, the mapping is defined and stored in a specific format (*.vam file format) and then loaded to the R&S FSW VSA application. Modulation files in .vam format can be defined using a mapping wizard ("mapwiz"), an auxiliary tool provided by R&S via Internet free of charge. This tool is a precompiled MATLAB® file (MATLAB pcode). To download the tool together with a detailed description, see <http://www.rohde-schwarz.com> (search term "mapwiz").

4.4 Overview of the demodulation process

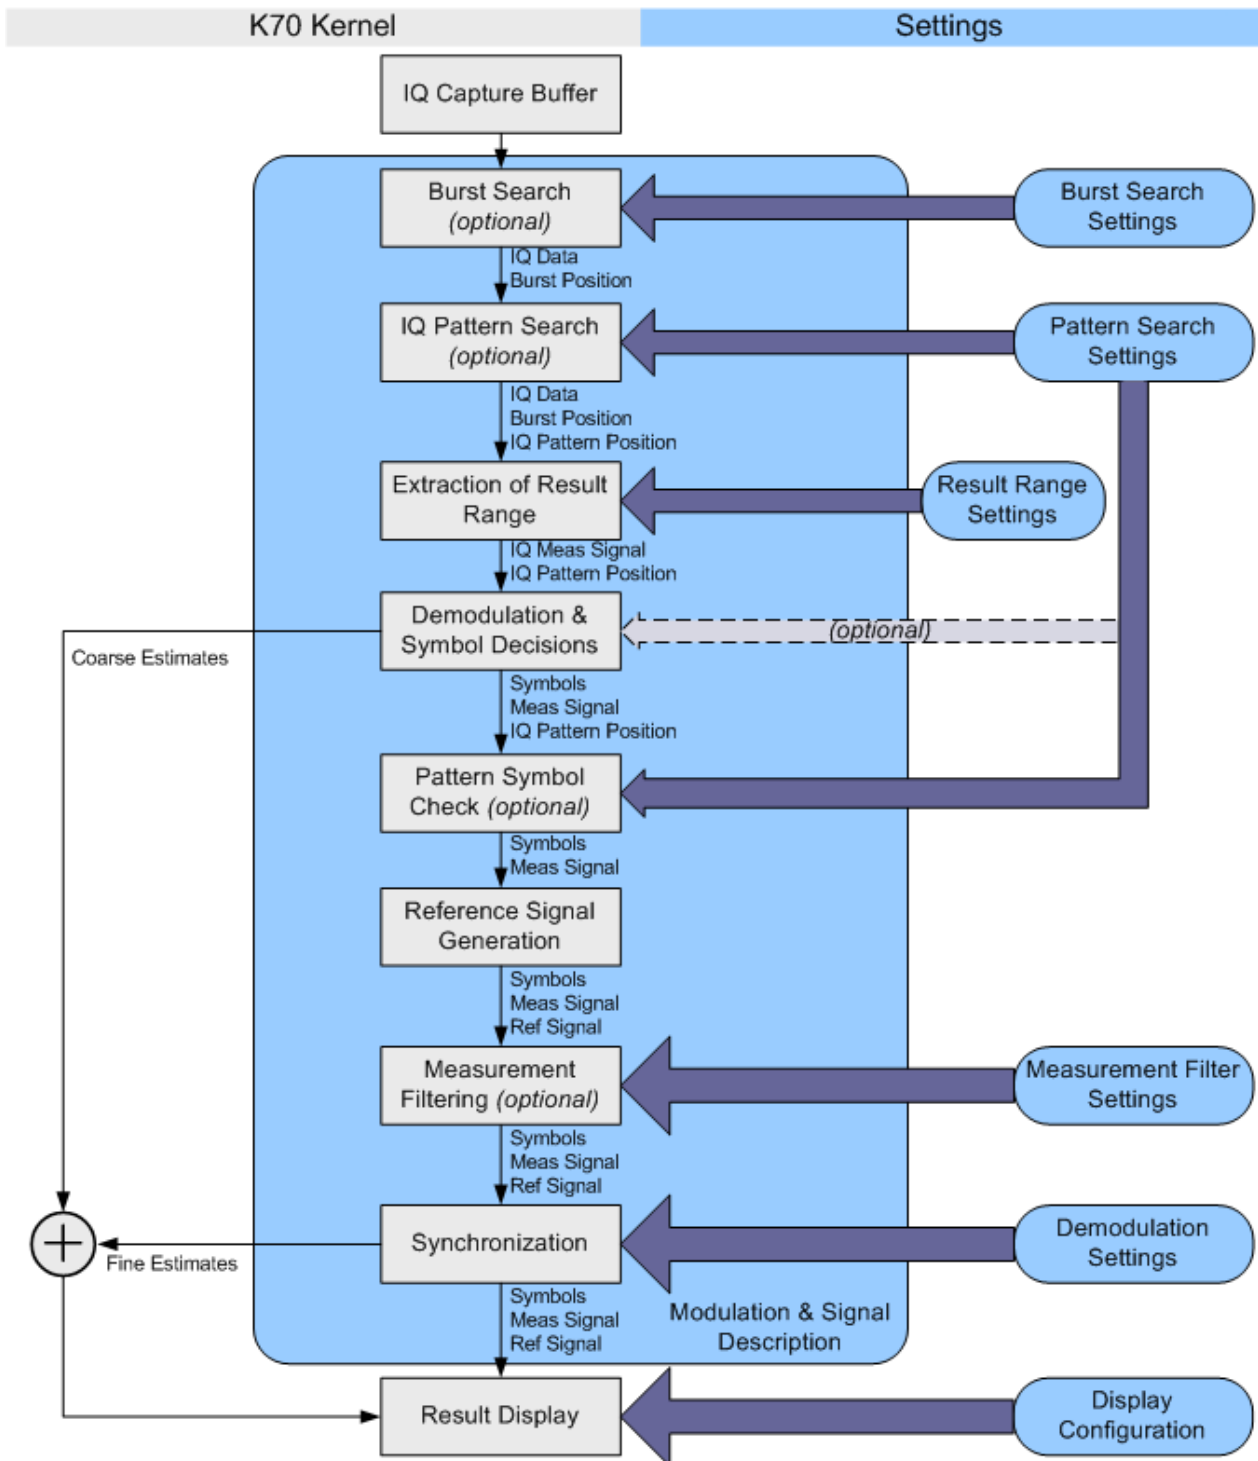


Figure 4-64: Demodulation stages of the vector signal analysis option

The [Figure 4-64](#) provides an overview of the demodulation stages of the vector signal analysis option. The function blocks of the signal processing kernel can be found at the left (in grey) and their appropriate settings at the right (in blue).

A more detailed description of the most important stages is given in the following sections.

Burst Search

In this stage, the capture buffer is searched for bursts that comply with the signal description. The search itself can be switched on or off via the "Burst Search" dialog (see ["Enabling Burst Searches"](#) on page 244). A list of the detected bursts is passed on to the next processing stage.

I/Q Pattern Search

The "I/Q Pattern Search" is performed on the capture buffer. The R&S FSW VSA application modulates the selected pattern according to the transmit filter (Tx filter) and the modulation scheme. Then, it searches the capture buffer for this I/Q pattern, i.e. the I/Q waveform of the pattern. It is assumed that patterns can only appear within bursts, i.e. the I/Q pattern search range is limited to the bursts detected by the burst search stage. If the burst search is switched off, the whole capture buffer is searched for the I/Q pattern. A list of all detected I/Q patterns is passed on to the next processing stage. It is important to note that the R&S FSW VSA application can only search for one pattern at a time.

The pattern search can be switched on or off via the "Pattern Search" dialog (see ["Enabling Pattern Searches"](#) on page 246).

Extraction of Result Range

The result range can be aligned to a burst, an I/Q pattern, or simply the start of the capture buffer (see ["Reference"](#) on page 254). Within this stage, the result range is cut from the capture buffer starting at a user-defined point, e.g. the start of a detected burst. The R&S FSW VSA application automatically takes filter settling times into account by making the internal buffers sufficiently longer than the selected result range.

Demodulation & Symbol Decisions

This stage operates on the extracted result range and aims at making the correct symbol decisions to generate the correct reference signal. Within this stage, a coarse synchronization of the carrier frequency offset, the carrier phase, the scaling and the timing takes place. Furthermore, an automatically selected internal receive filter (Rx filter) is used to remove the intersymbol interference as effectively as possible. The outputs of this stage are the (coarsely) synchronized measurement signal and the symbol decisions (bits). The symbol decisions are later used for the "Pattern Symbol Check" stage and for the "Reference Signal Generation" stage.

Pattern Symbol Check

The "I/Q Pattern Search" stage can only detect whether the similarity between the I/Q pattern and the capture buffer exceeds a certain threshold. Thus, it finds the most likely positions for a pattern.

Within this stage, the R&S FSW VSA application checks whether the pattern symbols (bits) really coincide with the symbol decisions at the pre-detected position. For example, if one out of 20 symbols does not coincide, the "I/Q Pattern Search" stage might detect this I/Q pattern, but the "Pattern Symbol Check" stage will decline it.

Note that this stage is only active if the pattern search is switched on.

If the I/Q pattern is not found, the error message "Pattern waveform not found" is displayed in the status bar

(See ["Message: Pattern Waveform Not Found"](#) on page 332).

If individual symbols do not match the pattern, these symbols are indicated by a red frame in the symbol table.

Reference Signal Generation

The ideal reference signal is generated based on the detected symbols and the specifications of the signal model, i.e. the modulation scheme and the transmit filter (Tx filter). Optionally, a predefined known data sequence or pattern can be used to generate the reference signal (see [Chapter 4.4.5, "Synchronization and the reference signal"](#), on page 140).

Measurement Filtering

Both the measurement signal and the reference signal are filtered with the specified measurement filter.

Synchronization

In this stage, the measurement signal and the reference signal are correlated. For PSK, QAM and MSK modulated signals, an estimation algorithm is used to obtain estimates for the following parameters:

- Signal amplitude
- Signal timing
- Carrier frequency error
- "Phase error"
- I/Q offset
- Gain imbalance
- Quadrature error
- Amplitude droop
- Symbol rate error (optionally)

For more information on synchronization, see

- [Chapter 4.4.5, "Synchronization and the reference signal"](#), on page 140

- [Chapter 4.5.1.2, "Estimation"](#), on page 146
- [Chapter 5.8.2, "Advanced demodulation \(synchronization\)"](#), on page 259

Result Display

The selected measurement results are displayed in the windows. Configuration of the windows can be performed via the result window configuration dialog (see [Chapter 6.5, "Display and window configuration"](#), on page 285).

- [Burst search](#)..... 134
- [I/Q pattern search](#)..... 135
- [Demodulation and symbol decisions](#)..... 136
- [Pattern symbol check](#)..... 139
- [Synchronization and the reference signal](#)..... 140
- [The equalizer](#)..... 142

4.4.1 Burst search

The burst search is performed only if it is switched on. Otherwise, this stage is skipped. If the signal is bursted, it is recommended that you switch the burst search on. This ensures that all internal estimators are operated in time ranges where the burst power ramping is up.

To eliminate amplitude variations caused by noise or the modulation itself, the instantaneous power of the whole capture buffer is calculated. Then a moving average filter is applied. The length of this filter is automatically determined with the help of the user settings.

The filtered power of the capture buffer is then compared to an automatically chosen threshold and the rising and falling edges of bursts are identified. With the help of the detected edges and some further processing, it is possible to decide whether the burst "candidates" comply with the user settings.

All bursts must have a length between ("Min Burst Length" – "Search Tolerance") and ("Max Burst Length" + "Search Tolerance") to be accepted. See ["Burst Settings"](#) on page 191 and [Chapter 5.6.1, "Burst search"](#), on page 243 for a more detailed description of these parameters.

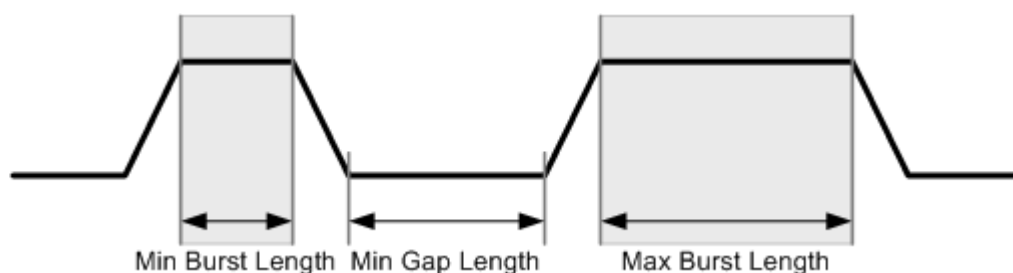



Figure 4-65: Burst Search parameters

 You can influence the robustness of the burst search directly by entering the correct minimum gap length, minimum burst length and maximum burst length (see "[Burst Settings](#)" on page 191 and "[Min Gap Length](#)" on page 245).

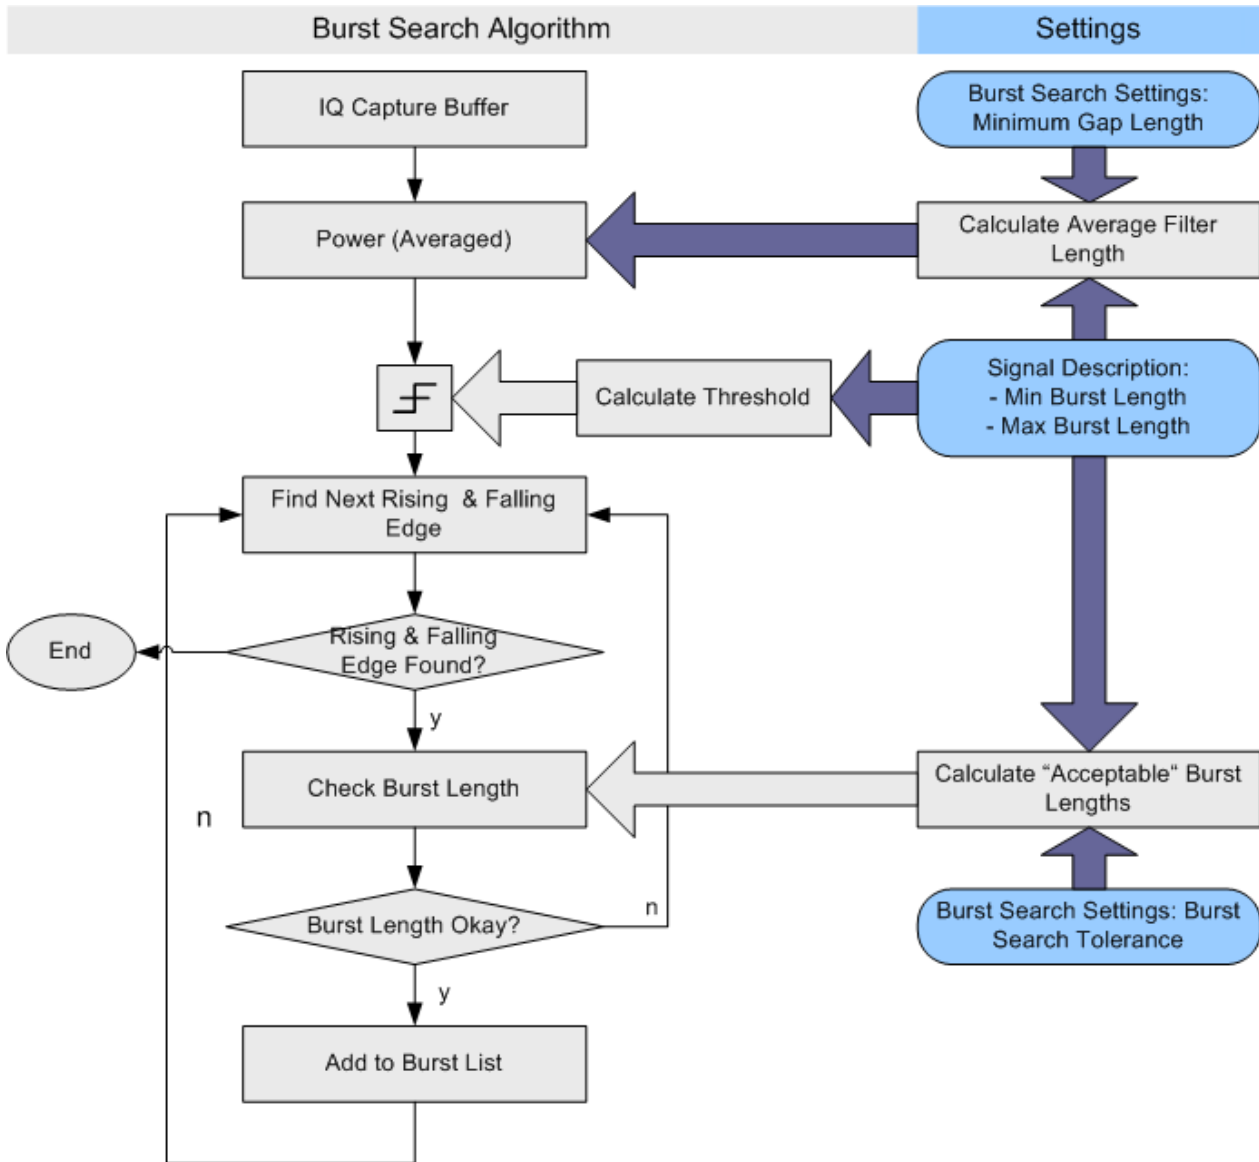


Figure 4-66: Burst search algorithm

4.4.2 I/Q pattern search

The I/Q pattern search is performed only if it is switched on. Otherwise, this stage is skipped. The main benefit of the I/Q pattern search is that it enables an alignment of the result range to the pattern. Furthermore, this stage can function as a filter, so only bursts with the correct pattern are demodulated. Switch the burst search and I/Q pat-

tern search on, and set the parameter "Meas Only If Pattern Symbols Correct" to true (see "[Meas only if Pattern Symbols Correct](#)" on page 247).

During the I/Q pattern search stage, the capture buffer is searched for an I/Q pattern by trying different time and frequency hypotheses. The I/Q pattern is generated internally, based on the specified symbol number of the pattern and the signal description (i.e. modulation scheme and transmit filter). The I/Q pattern search can also be referred to as the pattern waveform search. An I/Q pattern is considered detected if the correlation metric, i.e. the correlation value between the ideal I/Q pattern and capture buffer, exceeds a specified "I/Q Correlation Threshold" (see "[I/Q Correlation Threshold](#)" on page 246.)

If the burst search is switched on, the I/Q pattern search only searches the I/Q pattern in bursts previously detected by the burst search. Furthermore, it only finds the first I/Q pattern within each burst. If the burst search is switched off, the I/Q pattern search searches for the I/Q pattern in the entire capture buffer.

Predefined Patterns

Common standards usually have predefined pattern lists with standard-specific patterns. You select the patterns required for the current measurement from this list. You can also add patterns that are already available in the FSW or newly created patterns to the list.

4.4.3 Demodulation and symbol decisions

This stage operates on the result range and aims to make the correct symbol decisions. The algorithm is illustrated in [Figure 4-67](#) using the example of a QPSK modulation. After timing and scaling recovery, a frequency offset and phase offset estimator is employed.

After this coarse synchronization, the R&S FSW VSA application makes symbol decisions, i.e. recovers which symbols were transmitted by the device under test (DUT).

Typically, the employed estimators are "non-data-aided" (NDA) estimators. NDA means that they operate on an unknown data sequence. Since the local oscillators (LO) of the transmitter (device under test) and the receiver (FSW) are normally not coupled, their phase offset with respect to each other is unknown. The unknown transmission delay between DUT and FSW adds a further unknown phase offset.

Due to this unknown phase offset and the rotational symmetry of, e.g., a PSK constellation, the result of the demodulation can be ambiguous concerning the absolute phase position. For example, for non-differential QPSK modulation, the measurement signal, the reference signal and the decided I/Q symbols can have a constant phase offset of $\{0, \pi/2, \pi, \text{ or } 3\pi/2\}$. This offset can only be detected and eliminated if a pattern was successfully detected at symbol level (see also [Chapter 4.4.4, "Pattern symbol check"](#), on page 139).

If modulation types are used where the information is represented by the phase transition, e.g. differential PSK or MSK, the absolute phase position is not an issue. Thus, the ambiguity of the starting phase does not have an influence on the symbol decisions.

If the measurement signal contains a known pattern, it is also possible to use a "data-aided" (DA) estimator at this stage. DA means that the estimator operates on a known data sequence, i.e. the pattern. If the signal contains a pattern, it is possible to choose between the above-described non-data-aided estimator and the data-aided estimator with the setting "[Coarse Synchronization: Pattern](#)". If the data-aided estimator is employed, the phase ambiguity can be resolved at this stage.

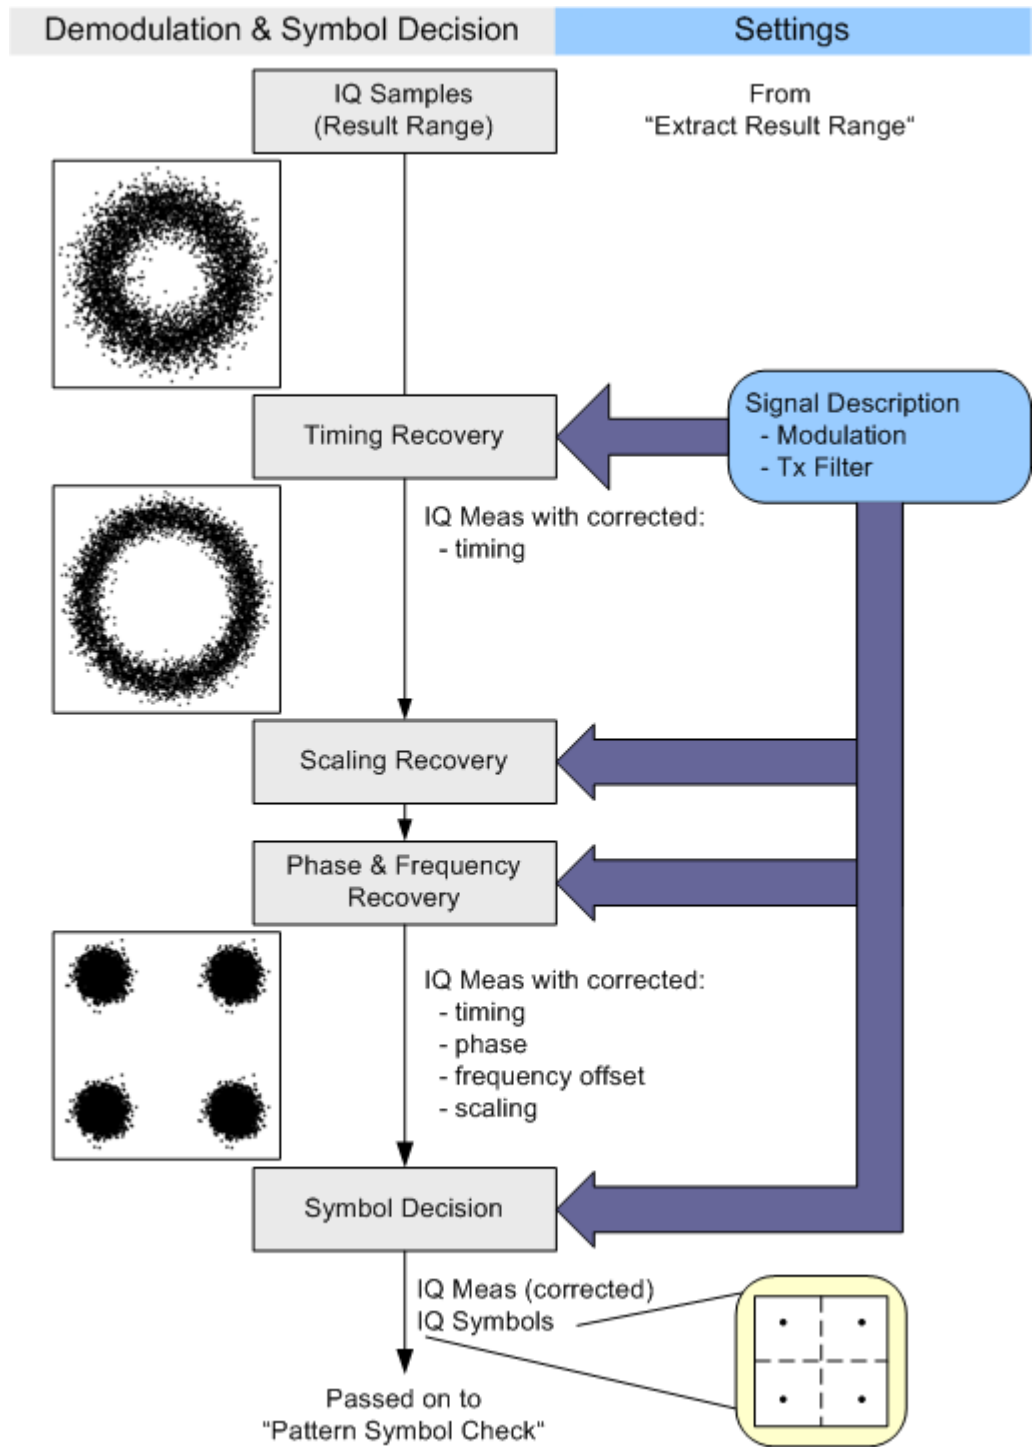


Figure 4-67: Demodulation and Symbol Decision algorithm

4.4.4 Pattern symbol check

This stage performs a bit-by-bit comparison between the selected pattern and the demodulated bits. It is important to note that this comparison is only performed at positions that the I/Q pattern search identified as possible pattern positions. The algorithm and a simple example are illustrated in [Figure 4-68](#).

First, the pattern candidate bits are extracted from the whole bitstream calculated by the "Demodulation & Symbol Decisions" stage. The symbol stream is cut at the position that the [I/Q pattern search](#) detected as the start of the pattern. The extracted sequence is then compared to the selected pattern.

If the demodulation was ambiguous regarding the absolute phase position, the extracted sequence must be compared to all possible rotated versions of the selected pattern. For example, for QPSK modulation, the rotational symmetry has the order four, i.e. there are four pattern hypotheses. If the extracted sequence coincides with one of the hypotheses, the pattern is declared as "found" and the absolute phase corresponding to the appropriate hypothesis is passed on. Both the symbol decisions and the I/Q measurement signal are then rotated with this pattern phase (for the whole result range), thus resolving the phase ambiguity.

For more information refer to:

- [Chapter 4.4.3, "Demodulation and symbol decisions"](#), on page 136
- [Chapter 4.4.2, "I/Q pattern search"](#), on page 135

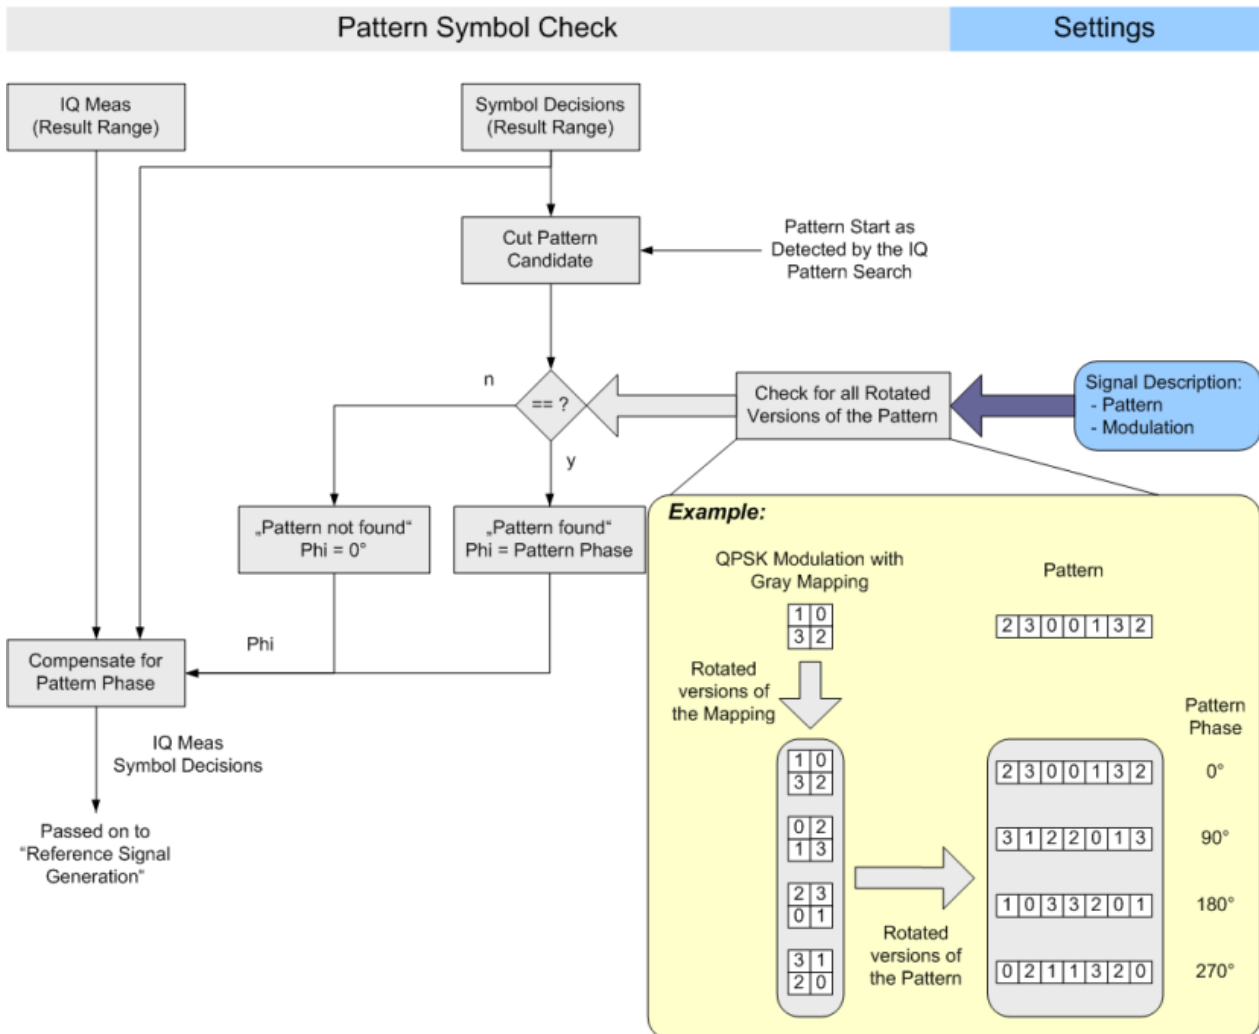


Figure 4-68: Pattern Symbol Check algorithm

4.4.5 Synchronization and the reference signal


The R&S FSW VSA application generates the ideal reference signal based on the detected symbols and the specifications of the signal model, that is: the modulation scheme, the transmit filter (Tx filter), and the transmitted symbols. In the fine synchronization stage, the measurement signal and the reference signal are correlated to obtain a more precisely synchronized measurement signal.

The results of the correlation are used to calculate various results, e.g. the EVM and BER. Various methods are available to determine the reference signal and perform fine synchronization.

Fine synchronization using detected data

By default, the reference signal is estimated from the detected data. However, if the signal has a poor transmission quality or a high noise level, false symbol decisions are

more frequent. False decisions can cause spikes in the EVM results and lead to a false reference signal.

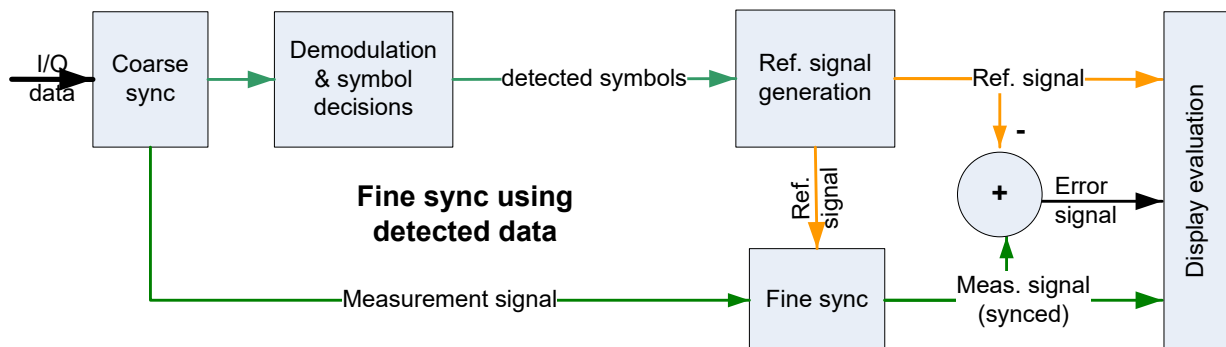


To improve the symbol decisions in poor signals, in particular when multiple detection errors occur, the reference signal can be estimated from a smaller area that includes a known symbol sequence in the input signal. In this case, the results for the limited reference area are more precise, at the cost of less accurate results outside this area. The reference area can be defined either using a pattern or using a known data sequence from a Known Data file. If no predefined data sequences are available for the signal, the detected data is used by default.

Fine synchronization using known data

If the data sequences to be expected in the signal are known in advance, they can be loaded to the R&S FSW VSA application and used for comparison with the measured signal. The reference signal is then defined as the data sequence from the file that most closely matches the measured data.

Additionally, you can define a maximum symbol error rate (SER) for the known sequence in reference to the measured data. If the SER of the known sequence exceeds this limit, the default synchronization using the detected data is performed.

Thus, assuming a perfect match exists in the known data, this sequence is the ideal reference signal, with no detection errors. The EVM is calculated correctly and fine synchronization is very precise.

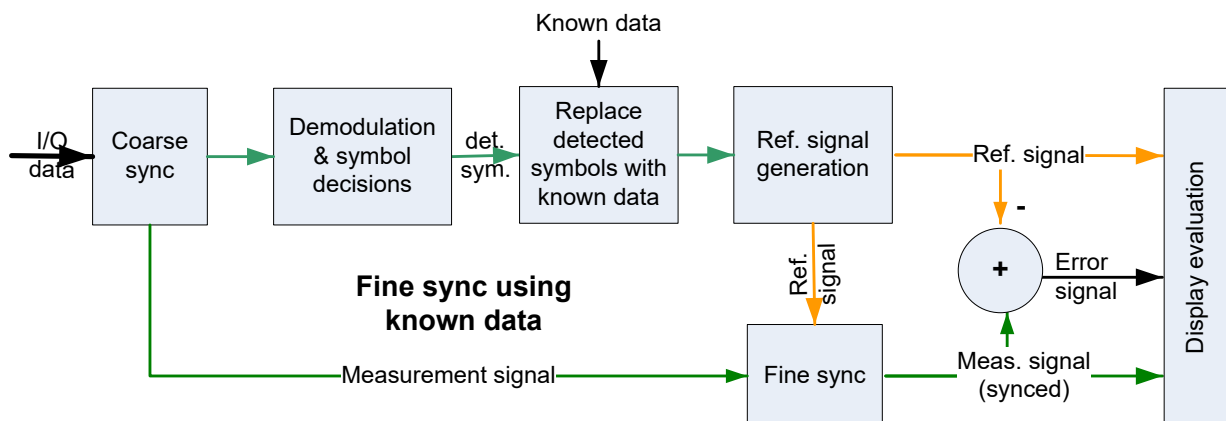


Fine synchronization using a pattern

Sometimes, the data sequence to be expected in the entire result range is not known in advance; however, a specific symbol pattern that always occurs is known. In this case, the reference signal can be estimated from the defined pattern where available, while all data outside the pattern is estimated using the detected symbols. Detection errors within the pattern are corrected. The EVM is calculated using the complete reference signal; it is correct only within the pattern.

Fine synchronization, on the other hand, is performed only within the pattern range, which is usually much shorter than the result range. The fewer the symbols on which synchronization is based, the less accurate it becomes.

To obtain correct results for all evaluated data, it is recommended that you reduce the result range to the length of the pattern.

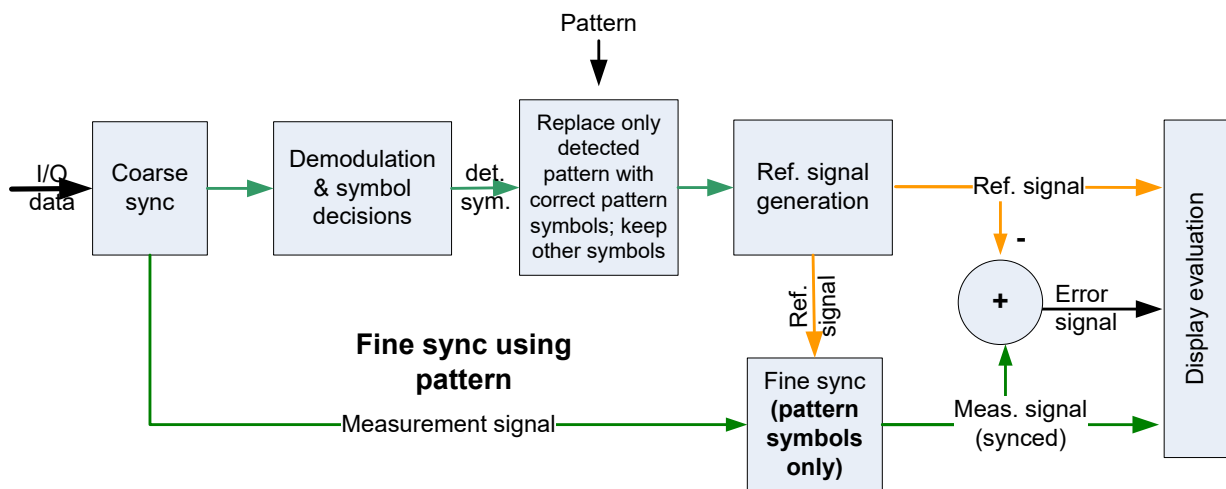

4.4.6 The equalizer

A possible source of high "modulation errors" of the DUT with PSK and QAM signals is a non-flat frequency response or ripple in frequency response within the modulation bandwidth.

The following components of the DUT can cause these effects:

- Analog filter sections
- Digital filter sections, if a shortened filter length is used
- Digital arithmetic sections, if a shortened bit-length is used

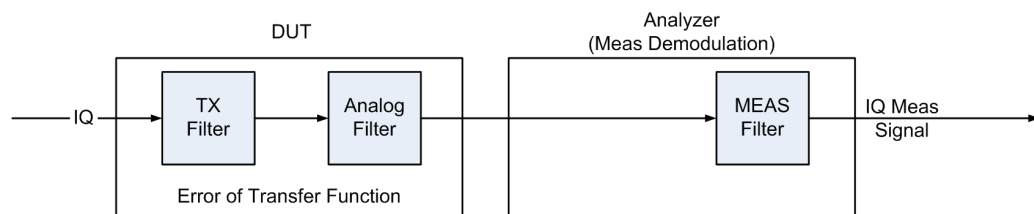


Figure 4-69: General processing in the modulation- and demodulation stages

To improve the modulation analysis results, an "equalizer" filter with a reverse frequency response characteristic can compensate less-distorted frequency responses (see Figure 4-70).

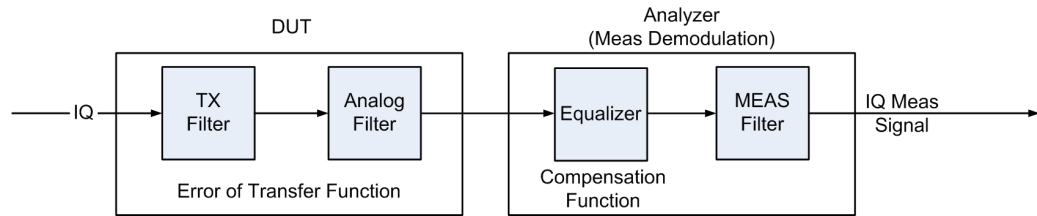


Figure 4-70: Compensation of the transfer function error by inserting an equalizer in the receive path

For small distortions, the reference signal can be determined correctly without pre-equalization. The "equalizer" can be calculated by comparing the reference signal and the measured signal. It is only applied to the measured signal, which is referred to as **normal equalizer mode**. Note that the resulting equalizer function is not simply the inverted distortion function.

For more complex distortions, the reference signal is possibly not determined correctly due to wrong symbol decisions. Despite the resulting imperfect equalizer calculation, the estimated equalizer is often good enough to improve the reference signal creation in the subsequent sweep. Thus, the new equalizer is improved successively. This processing mode of the equalizer is called **tracking mode**. After only a few sweeps, the results are sufficiently accurate and the learning phase is completed. Then the equalizer can be used without additional calculations as long as the input signal remains stable. If an unstable input has led to an unusable equalizer filter, reset the equalizer with "Reset".

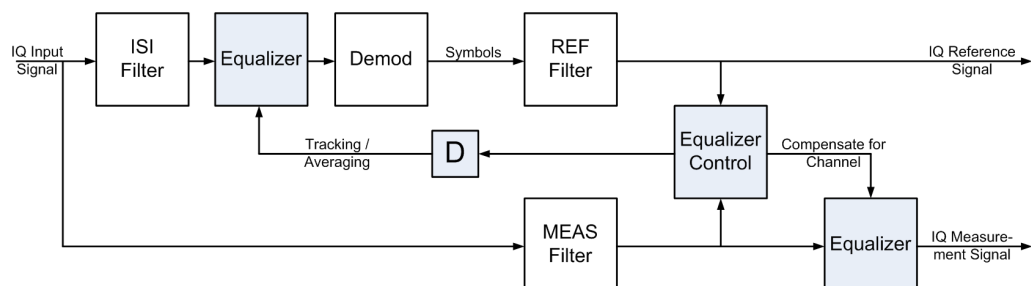


Figure 4-71: An equalizer filter can be activated in the reference and measurement signal path. The filter coefficients are determined in such a way that the error vector magnitude (EVM) is minimized.

If the result range used for equalizer calculation is too short, the equalizer can provide unstable impulse responses. For time-invariant channels, the estimation length can be extended using **Averaging mode**. In this case, the statistics from *all* previously determined reference signals and measurement signals are averaged to determine the current equalizer function. Thus, the results of previous sweeps are continuously considered to calculate the current equalizer values. Averaging is only restarted when the FSW is switched off or when the user manually resets the equalizer. Obviously, this method requires a stable input signal for the entire duration of the measurement, as otherwise previous results distort the current equalizer.

This process requires extended calculation time so that the measurement update rate of the FSW decreases distinctly. When the distortions are compensated sufficiently, this averaging process can be stopped. The current filter is **frozen**, that means it is no longer changed.

Keep in mind that in tracking and averaging mode, for sweep counts > 1, repeated analysis of past result ranges can lead to different results.

The "equalizer" algorithm is limited to PSK and QAM modulation schemes, as the optimization criterion of the algorithm is based on minimizing the mean square "error vector" magnitude. Thus it cannot be used for FSK modulation.

User-defined equalizers

Instead of tracking equalizer values repeatedly for different input signals, you can store existing values to a file and load them again later. Storing data is useful if signals from the same input source are measured frequently. In this case, you only have to calculate a filter once and can use the same equalizer filter again and again.

Filter length

The length of the "equalizer" can be defined in symbols. The longer the equalizer the higher the resolution in the frequency domain is and the more distortion can be compensated. The shorter the filter length, the less calculation time the equalizer requires during the tracking or averaging phase.

Estimation points per symbol

You can define how many sample points are used for the "equalizer" calculation at each symbol ("Estimation points per symbol", see [Chapter 4.7, "Display points vs estimation points per symbol"](#), on page 166). Typically, it is one point per symbol (= **symbol rate**) or a factor of 2.

Channel EVM

The equalizer not only compensates for distortions in the measurement signal, but also improves the accuracy of the estimated ideal reference signal. Thus, it is recommended that you enable the equalizer once you have analyzed the original input signal on the FSW. By default, the error results are calculated using the compensated values if the equalizer is enabled. However, to analyze the actual error values obtained from the distorted channel, you can disable the compensation for channel results.

4.5 Signal model, estimation and modulation errors

This section describes the signal and error models used within the R&S FSW VSA application. The estimation algorithms used to quantify specific modulation errors are then outlined. The descriptions vary depending on the modulation type.

- [PSK, QAM and MSK modulation](#)..... 145
- [FSK modulation](#)..... 156

4.5.1 PSK, QAM and MSK modulation

4.5.1.1 Error model

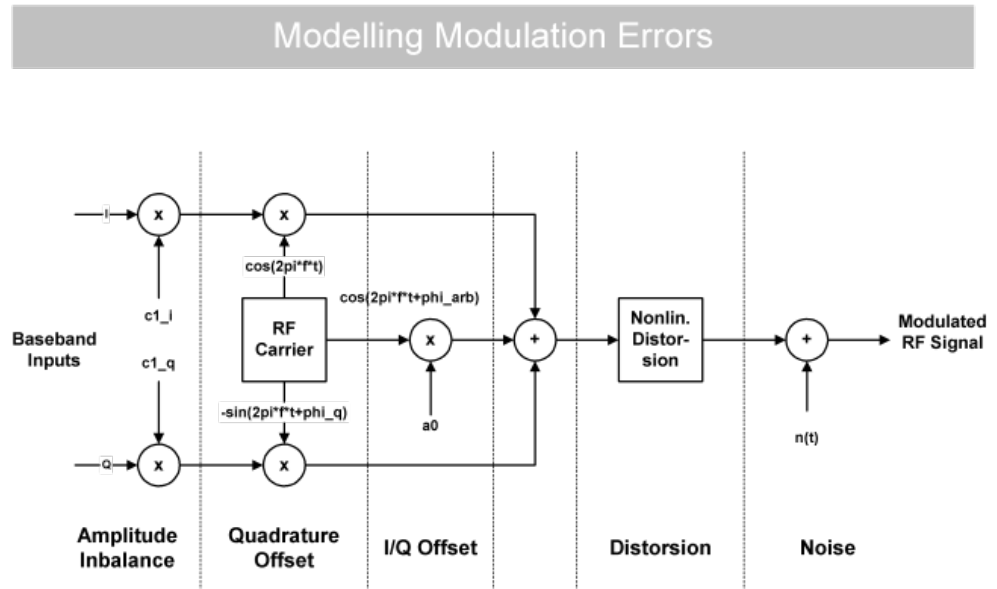


Figure 4-72: Modeling Modulation Errors

The measured signal model for PSK, QAM and MSK modulation is shown in Figure 4-72 and can be expressed as:

$$Meas(t) = (g_I \cdot REF_I(t - \tau_I) + c_I + j \cdot (g_Q \cdot REF_Q(t - \tau_Q) + c_Q) \cdot e^{j\vartheta}) e^{j \cdot (2\pi f_0 t + \varphi) - \alpha t} + n(t)$$

Where:

$REF_I(t)$ and $REF_Q(t)$: the inphase and quadrature component of the reference signal

g_I and g_Q : the effects of the gain imbalance

c_I and c_Q : the effects of an I/Q offset

ϑ : the quadrature error

α : the amplitude droop

f_0 : the carrier frequency offset

φ : the carrier phase offset

τ_I / τ_Q : the timing offset for the inphase / quadrature components

$n(t)$: a disturbing additive noise process of unknown power

4.5.1.2 Estimation

The R&S FSW VSA application includes two synchronization stages. The first stage has already been described in the context of the "Demodulation & Symbol Decisions" block (see [Chapter 4.4.3, "Demodulation and symbol decisions"](#), on page 136).

The second stage is realized within the "Synchronization" block. Here, the measurement signal is matched to the reference signal by minimizing the mean square of the error vector magnitude. To do so, the optimum parameter vector \hat{x} is determined:

$$\hat{x} = \arg \min_{\tilde{x}} \left\{ \sum_t |MEAS(t) - REF(t, \tilde{x})|^2 \right\}$$

The minimization takes place at the sample instants specified by the [Estimation Points/Sym](#) parameter, i.e.

$$t = n \cdot T_E$$

With T_E : the sampling period used for estimation

Then, the measurement signal is corrected with the determined parameter vector. Note that with a subset of the parameters, you can enable or disable correction (see [Chapter 5.8.1, "Demodulation - compensation and equalizer"](#), on page 255).

Estimation ranges

The "estimation ranges" are determined internally according to the signal description:

- For continuous signals, the estimation range corresponds to the entire result range, since it can then be assumed that the signal consists of valid modulated symbols at all time instants.
- For bursted signals, the estimation range corresponds to the overlapping area of the detected burst and the "Result Range". Furthermore, the Run-In/Run-Out ranges (see ["Burst Settings"](#) on page 191) are explicitly excluded from the estimation range.

In rare cases, the signal is specified as a "burst signal", but is so highly distorted that the burst search cannot detect a burst. In this case, the estimation range corresponds to the pattern. If an offset of the pattern relative to the burst start is specified, this range is also part of the estimation range.

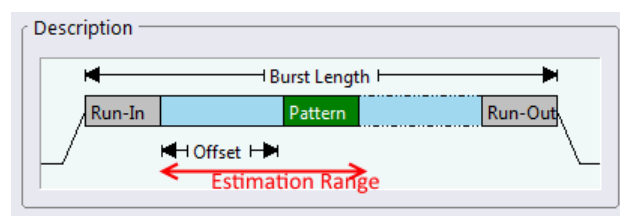


Figure 4-73: Estimation range for a bursted signal with a pattern offset

4.5.1.3 Modulation errors

Error vector (EV)

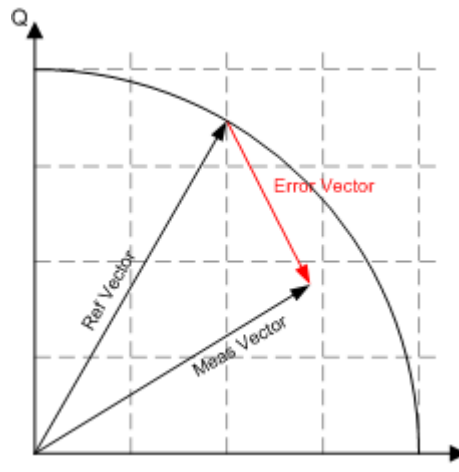


Figure 4-74: Modulation error: error vector

The "error vector" is the difference between the measurement signal vector (Meas vector) and the reference signal vector (Ref vector).

Error Vector Magnitude (EVM)

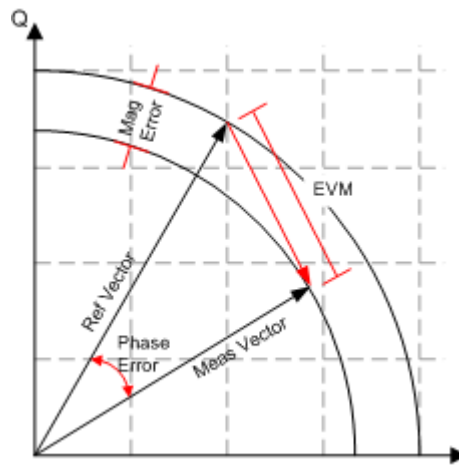


Figure 4-75: Modulation error: EVM, magnitude error, phase error

The magnitude of the error vector in the diagram is specified as the error vector magnitude (EVM). It is commonly normalized to the mean reference power, or alternatively to the maximum reference power or the mean or maximum constellation power (power at the symbol instants, see ["Normalize EVM to"](#) on page 260). Do not confuse the EVM with the magnitude error, see below.

Magnitude Error

The magnitude error is defined as the difference between the measurement vector magnitude and the reference vector magnitude (see [Figure 4-75](#)).

Phase Error

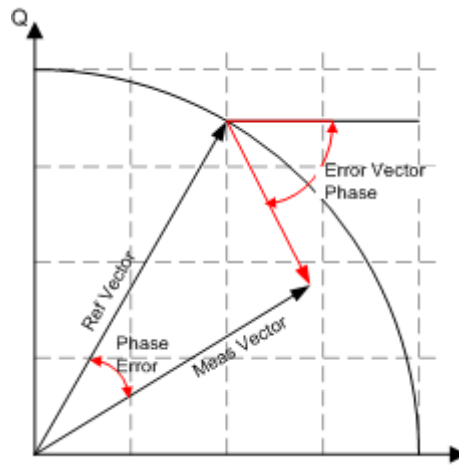


Figure 4-76: Modulation error: Phase error, error vector phase

The phase error is the phase difference between the measurement vector and the reference vector.

$$PHASE_ERR(t) = PHASE_{MEAS}(t) - PHASE_{REF}(t)$$

This measurement parameter is of great importance for MSK modulation measurements.

Do not confuse the phase error with the error vector phase. The error vector phase is the absolute phase of the error vector (see [Figure 4-76](#)).

The effects of the different "modulation errors" in the transmitter on the result display of the analyzer are described in the next topics. All diagrams show the equivalent, complex baseband signal.

Modulation Error Ratio (MER)

The modulation error ratio (MER) is closely related to EVM:

$$MER = -20 \cdot \log_{10}(EVM) \text{ dB}$$

Where the EVM is normalized to the mean reference power.

Symbol Rate Error (SRE)

The symbol rate error (SRE) describes the difference between the defined (reference) symbol rate and the currently measured symbol rate in relation to the reference symbol rate. The value is given in parts per million (ppm).

$$SRE = \frac{SR_{Meas} - SR_{Ref}}{SR_{Ref}}$$

The SRE is only calculated if compensation for SRE is activated (see [Chapter 5.8.1, "Demodulation - compensation and equalizer"](#), on page 255), and not for FSK modulation.

Example:

For a defined symbol rate of $SR_{Ref} = 1 \text{ MHz}$, and a measured symbol rate of $SR_{Meas} = 999.9 \text{ kHz}$, the symbol rate error is:

$$SRE = [(999.9 - 1000) / 1000] * 1\,000\,000 \text{ ppm} = -100 \text{ ppm}$$

I/Q Offset (Origin Offset)

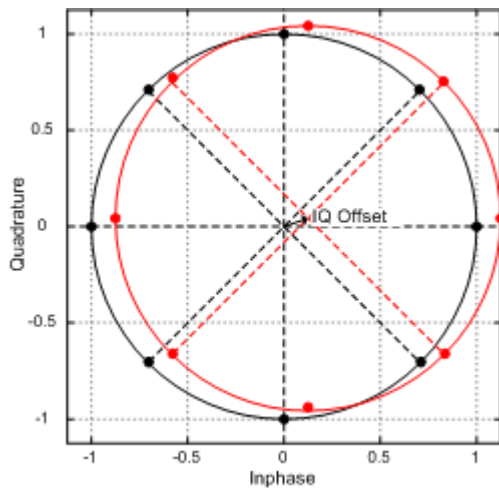


Figure 4-77: Effect of an I/Q or origin offset after demodulation and error compensation

The effect of an I/Q offset in the transmitter is shown in [Figure 4-77](#).

If the corresponding option is selected in the demodulation settings, the I/Q offset can be compensated for. In this case, the offset does not affect the EVM.

Example:

The following figures compare the results for a compensated I/Q offset of 2.5% and a non-compensated offset.



**Gain Imbalance**

Figure 4-78: Effect of gain imbalance

The gain difference in the I and Q channels during signal generation in the transmitter is referred to as gain imbalance. The effect of this error on the constellation diagram and the unit circle are shown in Figure 4-78. In the example, the gain in the I channel is slightly reduced which causes a distortion of coordinates in the I direction. The unit circle of the ideal constellation points has an elliptic shape.

If the corresponding option is selected in the demodulation settings, the gain imbalance can be compensated for. In this case, the imbalance does not affect the EVM.

Note that the gain imbalance is not estimated (and cannot be compensated for) in a BPSK signal.

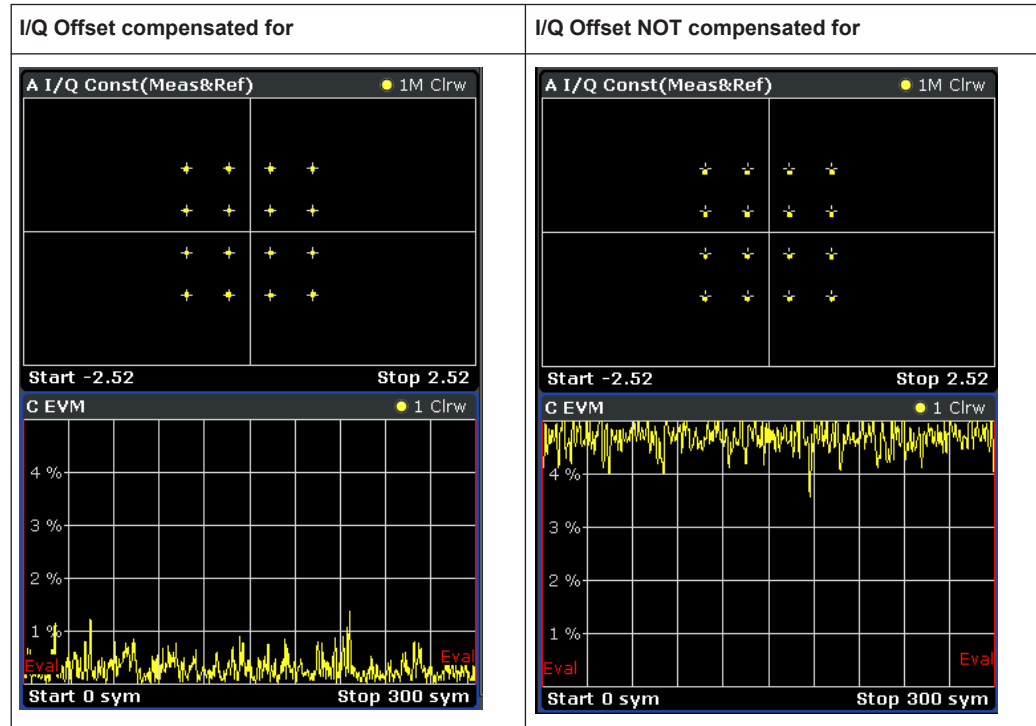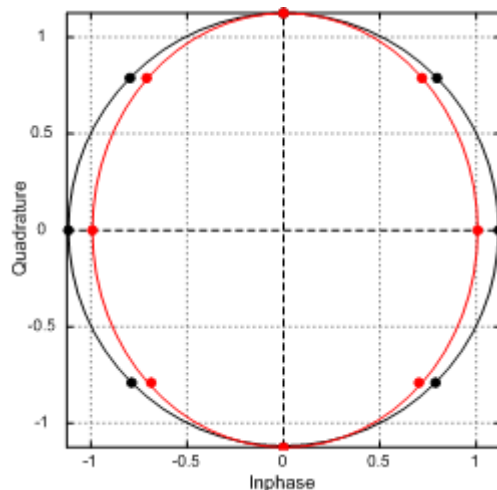

Preconditions for Gain Imbalance and Quadrature Error measurements

The distortions "gain imbalance" and "quadrature error" can only be measured without ambiguity, if the following two conditions are fulfilled:

- A pattern is detected
- The modulation is a non-differential, non-rotating QAM or PSK

Otherwise, only the measurement parameter "I/Q Imbalance", which is a combination of the gain imbalance and the quadrature error, is significant.

Quadrature Error

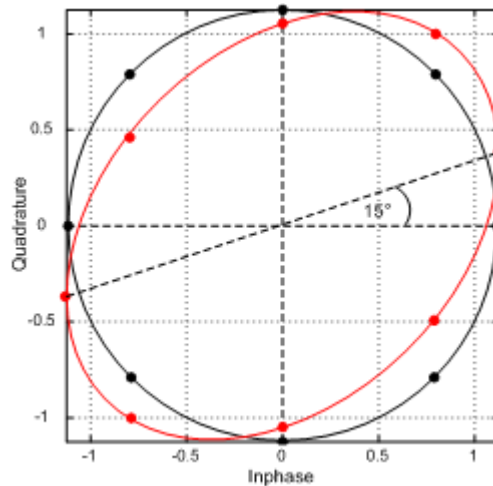


Figure 4-79: Effect of Quadrature Error

The quadrature error is another modulation error which is shown in [Figure 4-79](#).

In this diagram, the I and Q components of the modulated carrier are of identical amplitude but the phase between the two components deviates from 90° .

This error also distorts the coordinates. In the example in [Figure 4-79](#), the Q-axis is shifted.

Note that the quadrature error is not estimated (and cannot be compensated for) in a BPSK signal.

I/Q Imbalance

The effects of quadrature error and gain imbalance are combined to form the error parameter I/Q imbalance.

$$B_{[lin]} = \frac{|g_I - g_Q \cdot e^{j\theta}|}{|g_I + g_Q \cdot e^{j\theta}|}$$

Where g_I and g_Q are the gain of the inphase and the quadrature component and θ represents the quadrature error.


If the corresponding option is selected in the demodulation settings, the I/Q imbalance can be compensated for. In this case, the I/Q imbalance does not affect the EVM.

Note that the I/Q imbalance is not estimated (and cannot be compensated for) in a BPSK signal.

I/Q Skew

I/Q skew is a constant time difference between the I and the Q data, for example due to different cable lengths.

Table 4-37: Effects of I/Q skew

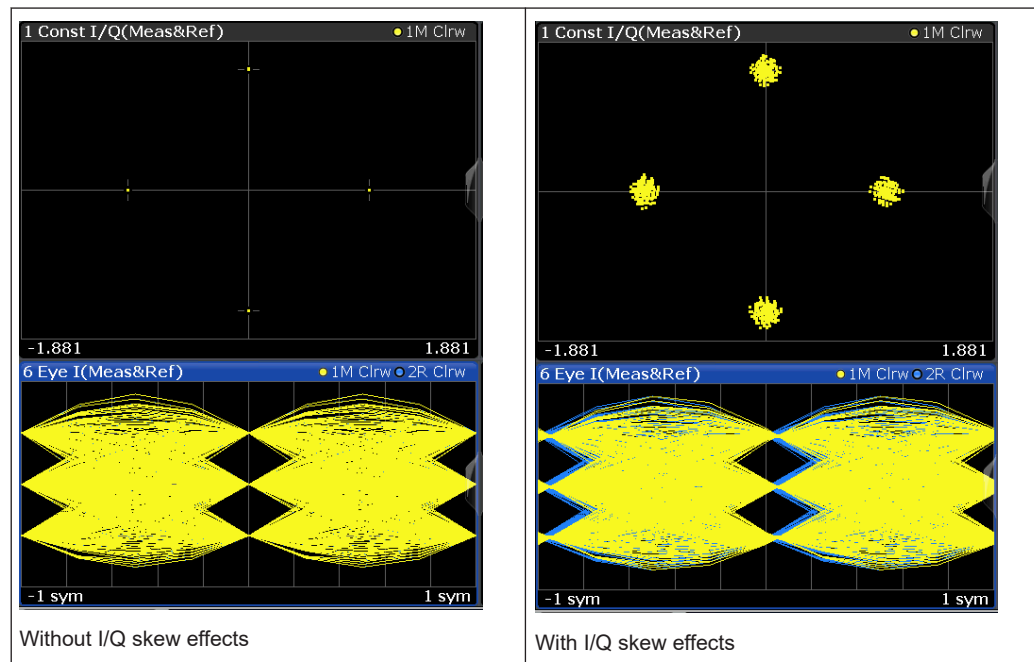

I/Q skew results depend on modulation

The I/Q skew estimation primarily targets signals with modulations that have a rotation symmetry of $\pi/2$, such as QPSK, 16QAM, or 64QAM. Phase ambiguities that are not a multiple of $\pi/2$ cannot be resolved. Thus, to measure I/Q skew for an 8PSK modulation, for example, it is essential to provide an absolute phase reference. You can provide this reference using a pattern.

Furthermore, I/Q skew cannot be determined for signals whose constellation points all have the same I or Q values, for example using BPSK modulation. In this case, no value is available for the I/Q skew result in the "Result Summary".

Amplitude Droop

The decrease of the signal power over time in the transmitter is referred to amplitude droop.

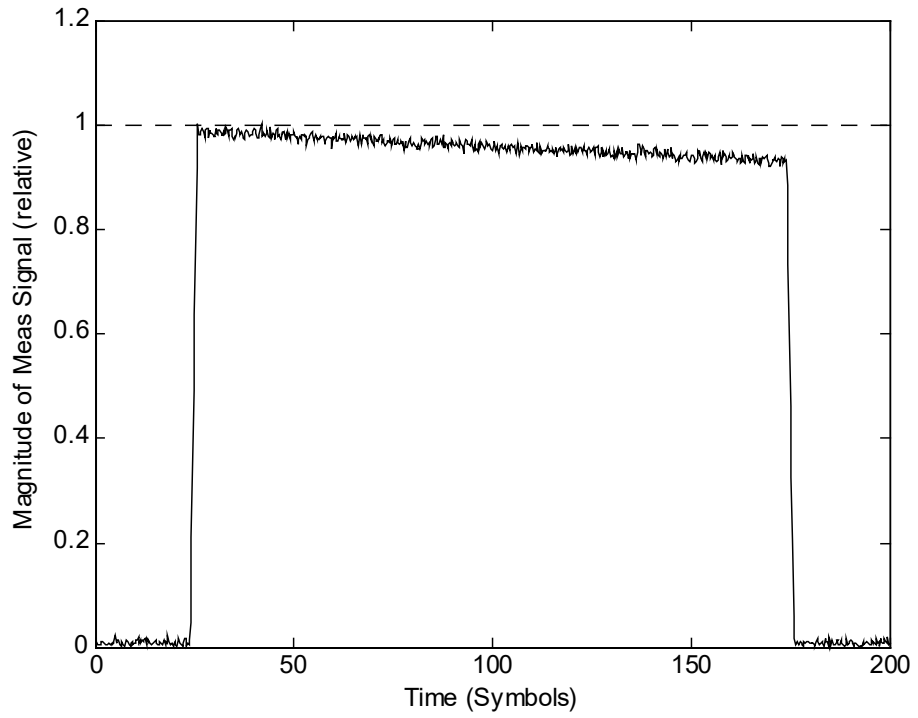


Figure 4-80: Effect of amplitude droop


Gain Distortion

Table 4-38: Effect of nonlinear amplitude distortions

| Nonlinear distortions: amplitude distortion (transmitter) | Amplitude distortion (analyzer) |
|---|---------------------------------|
| | |

The effect of nonlinear amplitude distortions on a 64QAM signal is illustrated in [Table 4-38](#) (only the first quadrant is shown). The transfer function is level-dependent: the highest effects occur at high input levels while low signal levels are hardly affected. The signal is scaled in the analyzer so that the average square magnitude of the error vector is minimized. The second column shows the signal after scaling.


Table 4-39: Amplitude transfer functions

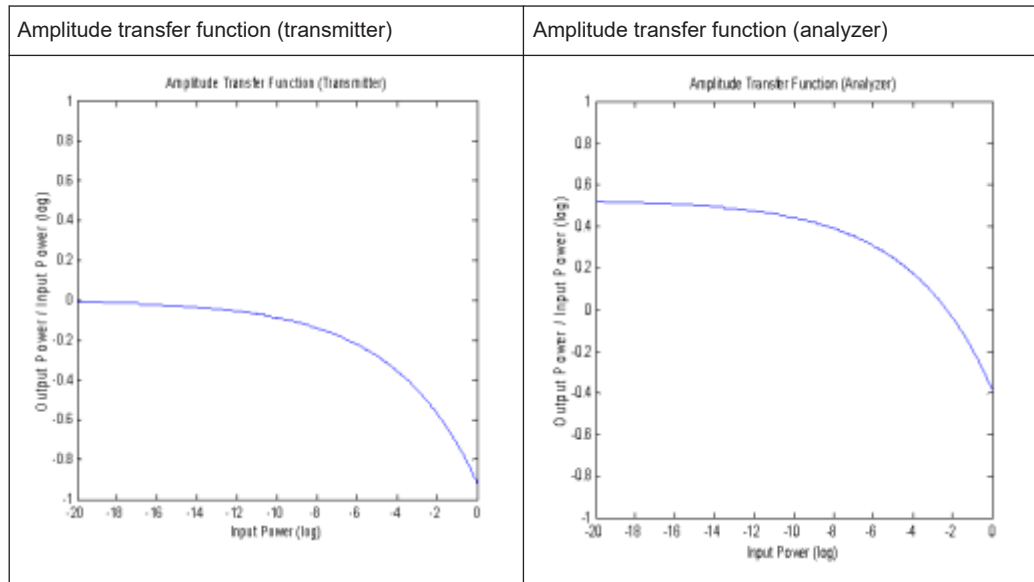

A logarithmic display of the amplitude transfer functions is shown in [Table 4-39](#). The analyzer trace is shifted against the transmitter trace by this scale factor.

Phase Distortion


Table 4-40: Effect of nonlinear phase distortions

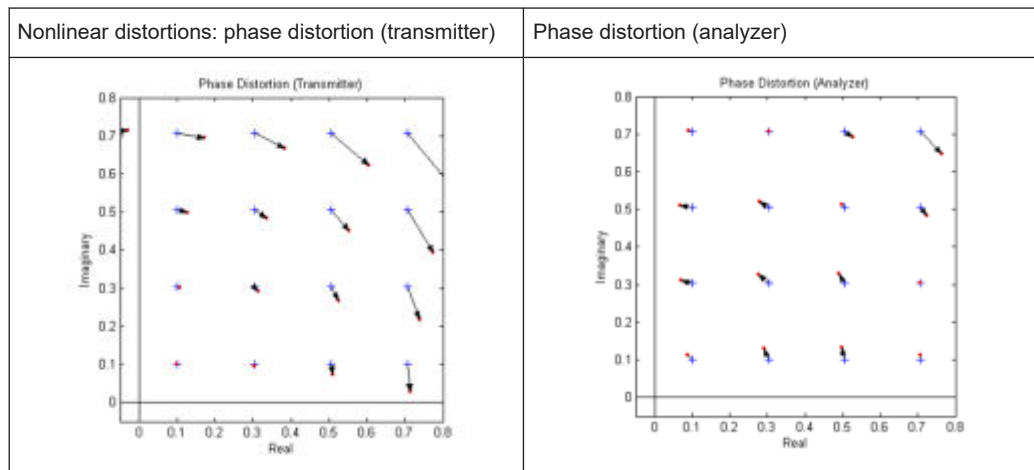

The effect of nonlinear phase distortions on a 64QAM signal is illustrated in [Table 4-40](#) (only the first quadrant is shown). The transfer function is level-dependent: the highest effects occur at high input levels while low signal levels are hardly affected. These effects are caused, for instance, by saturation in the transmitter output stages. The sig-

nal is scaled in the analyzer so that the average square magnitude of the error vector is minimized. The second column shows the signal after scaling.

Table 4-41: Phase transfer functions

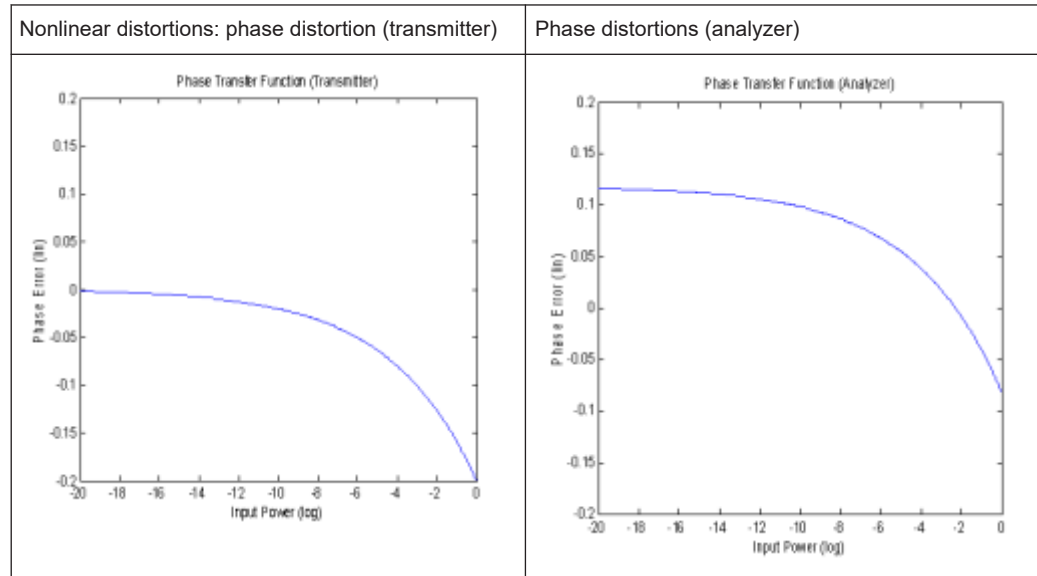

A logarithmic display of the phase transfer functions is shown in [Table 4-41](#). The analyzer trace is shifted by the phase described above compared to the transmitter trace.

Noise

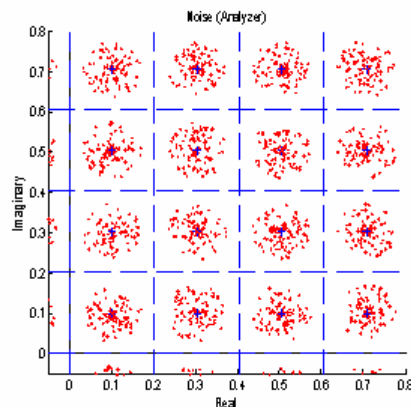


Figure 4-81: Additive noise

A 64QAM signal with additive noise is shown in [Figure 4-81](#) (only the first quadrant is shown). The symbol decision thresholds are also shown.

The noise signal forms a "cloud" around the ideal symbol point in the constellation diagram. If the symbol decision boundaries are exceeded, wrong symbol decisions are made, increasing the bit error rate.

Similar displays are obtained for incorrect transmitter filter settings. When an incorrect filter is selected, crosstalk occurs between neighboring symbol decision points instead

of the ISI-free points. The effect increases the more the filtering deviates from actual requirements.

The two effects described cannot be distinguished in the "Constellation I/Q" diagram but in statistical and spectral analyses of the error signal.

Channel (transmission) distortion

During transmission, disturbances in the transmission channel can cause distortions in the input signal at the FSW. Such influences are included in the EVM calculation. However, if the ideal (reference) signal can be estimated with sufficient accuracy by the FSW (e.g. using the equalizer), the channel distortions can be compensated for and deducted from the EVM.

4.5.2 FSK modulation

Signal Model

Frequency shift keying (FSK) involves the encoding of information in the frequency of a transmitted signal. As opposed to other modulation formats such as PSK and QAM, the FSK process is a non-linear transformation of the transmitted data into the transmitted waveform.

A sequence of symbols $\{s_i\}$ are modulated using a "frequency pulse" $g(t)$ to form the instantaneous frequency of the transmitted complex baseband waveform, denoted by $f_{REF}(t)$ and defined as:

$$f_{REF}(t) = h \cdot \sum_i s_i g(t - i \cdot T)$$

Where $f_{Symb} = 1/T$ is the symbol rate and h is a scaling factor, termed the modulation index. The transmitted (or reference) FSK signal is created by frequency modulation of the instantaneous frequency:

$$REF(t) = e^{j \cdot 2 \cdot \pi \cdot \int_{-\infty}^t f_{REF}(u) du} = e^{j \cdot \varphi_{REF}(t)}$$

Where $\varphi_{REF}(t)$ denotes the phase of the transmitted waveform. In the R&S FSW VSA application, a continuous-phase FSK signal is assumed, which is ensured by the integral in the expression for $REF(t)$. A graphical depiction of the reference waveform generation is shown below in [Figure 4-82](#).

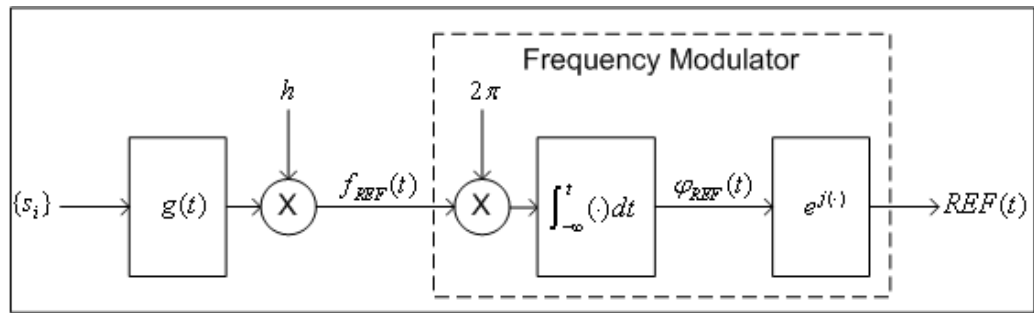


Figure 4-82: Reference complex baseband FSK signal generation

Reference Deviation

The transmitted symbols $\{s_i\}$ are assumed to be chosen from a finite and real-valued constellation of M values; $\{\zeta_1, \zeta_2, \dots, \zeta_M\}$. The maximum absolute constellation point is denoted by ζ_{MAX} . The maximum phase contribution of a data symbol is given by:

$$\phi_{MAX} = 2 \cdot \pi \cdot h \cdot \zeta_{MAX} \int_{-\infty}^{\infty} g(t) \cdot dt$$

The reference deviation of the FSK signal is defined as:

$$\Lambda_{REF} = \frac{\phi_{MAX}}{2 \cdot \pi \cdot T} = \frac{1}{T} h \cdot \zeta_{MAX} \int_{-\infty}^{\infty} g(t) \cdot dt$$

In the R&S FSW VSA application, the frequency pulse filter is normalized such that:

$$\int_{-\infty}^{\infty} g(t) \cdot dt = \frac{1}{2}$$

The constellation for M FSK is assumed to be $\{\pm 1, \pm 3, \dots, \pm(M-1)\}$, which implies $\zeta_{MAX} = M-1$. The expression for the [reference deviation](#) in terms of the modulation index is therefore given by:

$$\Lambda_{REF} = \frac{1}{2} \cdot h \cdot (M-1) \cdot f_{Symb}$$

The above formula provides the necessary calculation for measurement of an FSK signal with known symbol rate and modulation index.

Calculation examples:

The GSM standard describes the transmission of binary data using MSK (i.e. 2FSK) modulation with a modulation index of $h=1/2$ at a symbol rate of 270.8333 KHz. The reference deviation is therefore given by:

$$\Lambda_{REF} = \frac{1}{2} \cdot \left(\frac{1}{2}\right) \cdot (2-1) \cdot (270.8333 \text{ kHz}) = 67.7083 \text{ kHz}$$

The APCO Project 25 standard (phase 2) defines an H-CPM signal (i.e. 4FSK) with a modulation index of $h=1/3$ and a symbol rate of 6 KHz. The reference deviation is:

$$\Lambda_{REF} = \frac{1}{2} \cdot \left(\frac{1}{3}\right) \cdot (4 - 1) \cdot (6 \text{ kHz}) = 3 \text{ kHz}$$

4.5.2.1 Error model

The FSK measurement model used assumes that signal distortions in both the magnitude and phase/frequency are present, as well as additive noise. The measured signal model is expressed as:

$$MEAS(t) = A_{DIST}(t) \cdot e^{j\varphi_{DIST}(t)} + n(t)$$

With

- $n(t)$ is a disturbing additive noise process of unknown power
- $A_{DIST}(t)$ is the distorted magnitude model
- $\varphi^{DIST(t)}$ is the distorted phase model

The magnitude model is given by:

$$A_{DIST}(t) = K \cdot e^{-\alpha t}$$

With

- K is a constant scaling factor which can be interpreted as the system gain
- α is the amplitude droop in Nepers per second

The phase model is given by:

$$\varphi_{DIST}(t) = B \cdot \varphi_{REF}(t - \tau) + C \cdot t + \frac{1}{2} D \cdot t^2 + \phi$$

With

- B is a scaling factor which results in a reference deviation error
- C is a carrier frequency offset in radians per second
- D is a frequency drift in radians per second per second
- τ is a timing offset in seconds
- ϕ is a phase offset in radians

For the phase model above, an equivalent frequency distortion model can be expressed as:

$$f_{DIST}(t) = B \cdot f_{REF}(t - \tau) + f_0 + f_d \cdot t$$

With:

- B is the scaling factor which results in a reference deviation error
- $f_0 = C/(2 \cdot \pi)$ is a carrier frequency offset in Hz
- $f_d = D/(2 \cdot \pi)$ is a frequency drift in Hz per second

- τ is the timing offset in seconds

The measured signal model in terms of the instantaneous frequency and all distortion parameters is given by:

$$MEAS(t) = K \cdot e^{-\alpha \cdot t} \cdot e^{j\phi} \cdot e^{j \cdot 2 \cdot \pi \cdot \left[B \cdot \int_{-\infty}^t f_{REF}(u-\tau) du + f_0 \cdot t + \frac{1}{2} f_d \cdot t^2 \right]} + n(t)$$

4.5.2.2 Estimation

The estimation of the distortion parameters listed previously is performed separately for the magnitude and phase/frequency distortions, as illustrated in Figure 4-83. Note that the estimation of the timing offset is performed only on the frequency of the signal, as the reference magnitude is assumed to be constant over the estimation range. For details on the estimation range, see "Estimation ranges" on page 146.

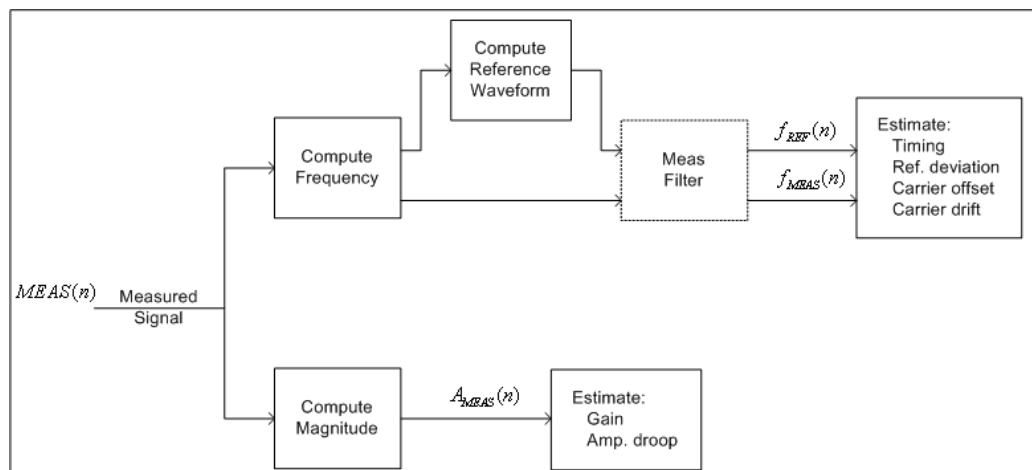


Figure 4-83: FSK Estimation Strategy

In Figure 4-83 $MEAS(n)$ denotes the sampled (complex baseband) measured signal waveform. The magnitude samples are denoted $A_{MEAS}(n)$, while the instantaneous frequency samples of the measured and reference signals are denoted by $f_{MEAS}(n)$ and $f_{REF}(n)$ respectively. The dashed outline of the "Meas Filter" block indicates that this operation is optionally (de-) activated based on the corresponding user settings (see "Type" on page 264).

For the estimation of the magnitude parameters, the following least-squares criterion is minimized regarding the model parameters K and α :

$$C_{MAG}(K, \alpha) = \sum_n \left| A_{MEAS}(n) - K \cdot e^{-\alpha \cdot n \cdot T_E} \right|^2$$

Where T_E denotes the sampling period used for estimation (see "Estimation Points/Sym" on page 260)

For estimation of the frequency parameters, the following least-squares criterion is minimized regarding the model parameters B , f_0 , f_d and τ .

$$C_{FREQ}(B, f_0, f_d, \tau) = \sum_n |f_{MEAS}(n) - [B \cdot f_{REF}(n; \tau) + f_0 + f_d \cdot n \cdot T_E]|^2$$

The term denotes the reference instantaneous frequency with a (possibly fractional) delay of samples.



For FSK modulation, the default sampling period used for estimation is the capture sampling period.

4.5.2.3 Modulation errors

A 2FSK signal is generated using a GMSK frequency pulse. Examples of carrier drift and reference deviation are shown in [Figure 4-84](#) and [Figure 4-85](#), respectively.

Carrier frequency drift

A carrier frequency drift is modeled as a linear change in the carrier frequency over time. The effect of carrier drift on the instantaneous frequency of an FSK signal is illustrated in [Figure 4-84](#).

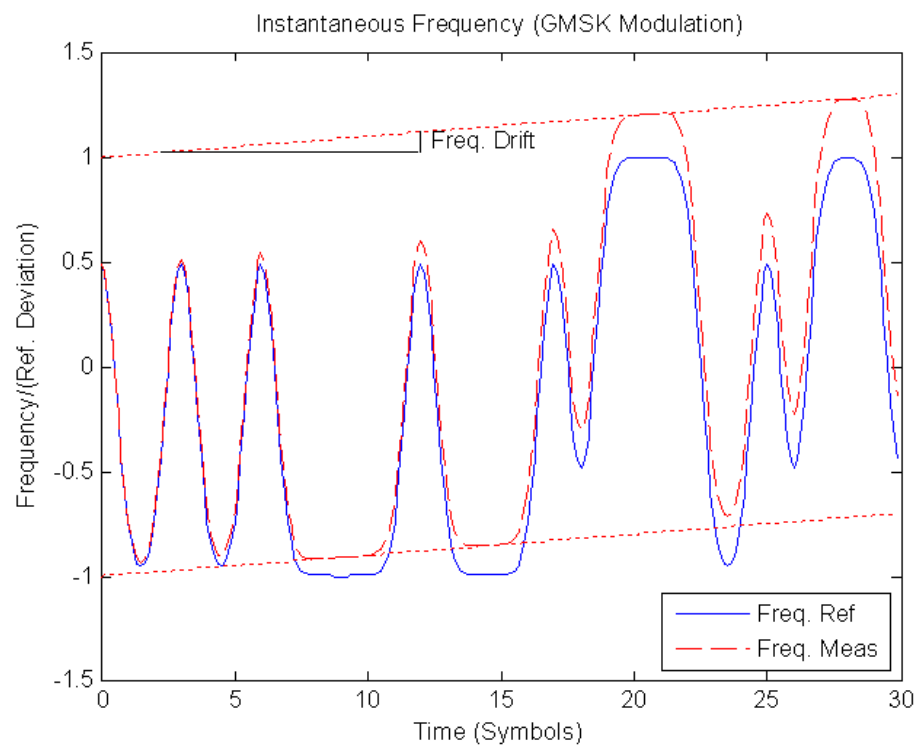


Figure 4-84: The reference and distorted instantaneous frequency of a GMSK signal with a carrier frequency drift

FSK deviation error

The FSK deviation error is the difference between the measured frequency deviation and the user-defined reference frequency deviation (see "FSK Ref Deviation (FSK only)" on page 189). The evidence of a deviation error in the instantaneous frequency of an FSK signal is demonstrated in Figure 4-85.

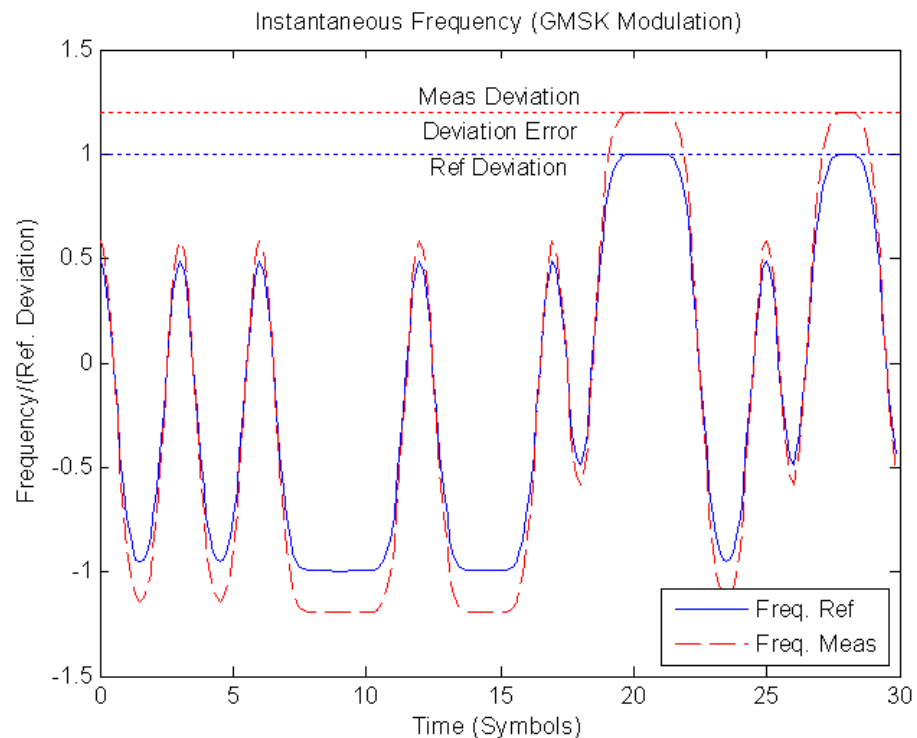


Figure 4-85: The reference and measured instantaneous frequency of a GMSK signal with reference deviation error

4.6 Measurement ranges

You must define three measurement ranges in the R&S FSW VSA application:

- **Capture Buffer Length**

The length of the capture buffer specifies how many data points are captured during a single VSA measurement.

To measure a bursted signal, define the capture length long enough to ensure that each capture buffer includes at least one entire burst.

The maximum capture buffer length is 50 Msymbols (for a sample rate of 4 * symbol rate) or 200 million samples.

If the optional 2 GHz / 5 GHz bandwidth extension (B2000/B5000) is active, the capture buffer is restricted to 256 000 samples.

- **Result Range**

The result range defines the symbols from the capture buffer that are to be demodulated and analyzed together.

For example, bursted signals have intervals between the bursts that are not of interest when analyzing peaks or overshoots. Thus, the result range usually coincides with the range of the capture buffer in which the burst is located.

The maximum result range length is 64 000 symbols (for a sample rate of 4 * symbol rate) or 256 000 samples.

- **Evaluation Range**

The evaluation range defines the symbols from the result range that are to be included in the evaluation of specific parameters, e.g. error vectors.

For example, you want to display the ramps of a burst and thus include them in the result range. However, they do not contribute to the "error vector"s or power levels. Thus, you do not include them in the evaluation range.

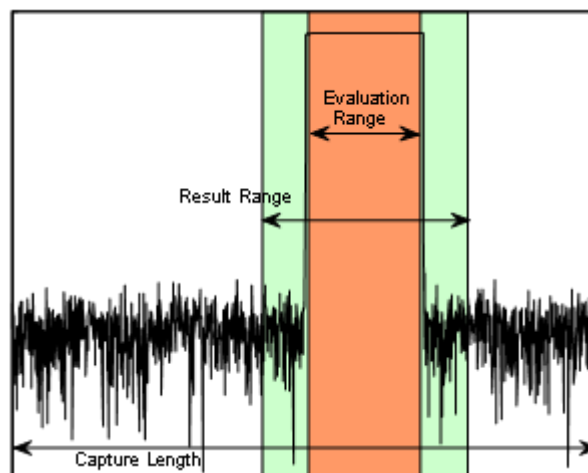


Figure 4-86: Schematic overview of Capture Length, Result Range, and Evaluation Range

The determined result and evaluation ranges are included in the result displays (where useful) to visualize the basis of the displayed values and traces.

4.6.1 Result range

The result range defines the symbols from the capture buffer that are to be demodulated and analyzed together.

Sometimes, the data in the capture buffer contains parts that are not relevant for the evaluation task at hand. Thus, you can exclude them from the result range (see [Chapter 5.7, "Result range configuration"](#), on page 253).

Result range display

The result ranges are indicated by green bars along the time axis of the capture buffer result diagrams.

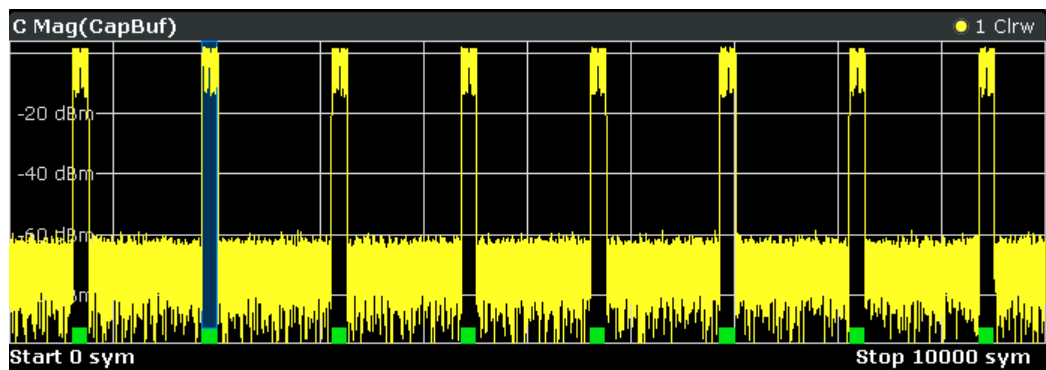


Figure 4-87: Result ranges for a burst signal

Result displays whose source is not the capture buffer are based on a single result range. Examples are the "EVM vs. Time" display or the data in the "Current" column of the "Result Summary". In this case, you can use the capture buffer display to navigate through the available result ranges ([Select Result Rng](#) function), and analyze the individual result ranges in separate windows. The currently displayed result range is indicated by a blue bar in the capture buffer display.

You can change the position of the result range quickly and easily by dragging the blue bar representing the result range to a different position in the capture buffer.

Continuous and discrete result ranges

Depending on the type of signal and your result range definition, the result ranges can be continuous or discrete. Bursted signals commonly have several discrete result ranges at the bursts. They can have intervals during the noise periods which should not be included in the results (see [Figure 4-87](#)).

Continuous signals, however, have result ranges that cover the entire or a specific part of the capture buffer without intervals.

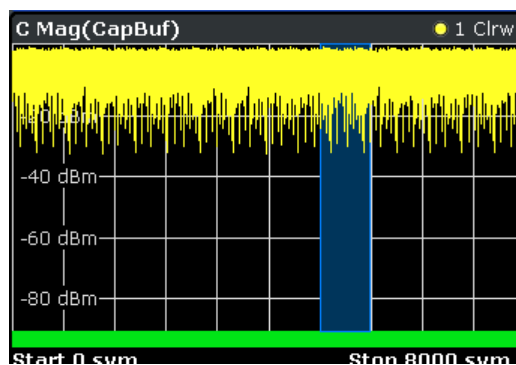


Figure 4-88: Result ranges for a continuous signal

Result Range Length

The result range length is defined by the number of symbols that are to be demodulated. All traces over time are displayed over the result range. For example, if you have a

burst of 100 symbols and you define the result length as 200 symbols, you can examine the burst ramps in detail. Select the alignment "Burst:Center".

The maximum result range length is 64 000 symbols (for a sample rate of 4 * symbol rate) or 256 000 samples.

Result Range Alignment

You can define an offset of the x-axis (in addition to the one defined for the signal structure). Define the number of the symbol which marks the beginning of the reference source used for alignment (burst, capture buffer or pattern, see "Offset" on page 254).

For example, align the result to the center of the pattern. Set the "Symbol Number at Pattern Start" to "0". Now you can easily find the pattern start in the EVM measurement simply by moving a marker to the symbol number "0".



When you define the "Symbol Number at <Reference> Start", remember to take the offset defined for the signal structure into consideration (see "Offset" on page 254). Assume an offset of the pattern in relation to the useful part of the burst in the signal description. Align the result to the pattern. In this case, the "Symbol Number at Pattern Start" refers to the first symbol of the useful part of the burst, not the first symbol of the pattern.

Run-In / Run-Out Time

The parameter "Run-In/-Out" can be used to influence the range over which the EVM is minimized. The (internal) synchronization range is the overlapping area of the result range and the burst excluding its "Run-In/-Out" areas. The "Run-In/-Out" areas can be used to exclude symbols from influencing the synchronization. Hence, this parameter also allows for demodulation of bursts with mixed modulations, e.g. Bluetooth.

Useful length

The burst excluding its Run-In/-Out areas is sometimes referred to as the "useful part". The minimum length of the useful part must be at least 10 symbols.

$$RR \text{ Length} - \text{Run-In} - \text{Run-Out} \geq 10$$

Remote commands:

A remote command is provided to determine the position of the current result range within the capture buffer:

`[SENSe:] DDEMod:SEARCH:MBURst:START[:SYMBOLs]? on page 572`

4.6.2 Evaluation range

In some scenarios, the result range contains symbols that are not supposed to be considered for the EVM or other calculated parameters that are displayed in the "Result Summary".

For example, you want to display the ramps of a burst and thus include them in the result range. However, they do not contribute to the "error vector"s or power levels. Thus, you do not include them in the evaluation range.

(See also [Chapter 9.3.5, "Setting the evaluation range"](#), on page 324.)

The evaluation range is always equal to or smaller than the result range and defines:

- The range over which traces that do not have a time axis are displayed, e.g. polar diagrams
- The range over which the following parameters are calculated for the "Result Summary":
 - "EVM"
 - "MER"
 - "Phase Error"
 - "Magnitude Error"
 - "Power"

Evaluation range display

In all displays over time, except for capture buffer displays, the evaluation range is indicated by red lines.

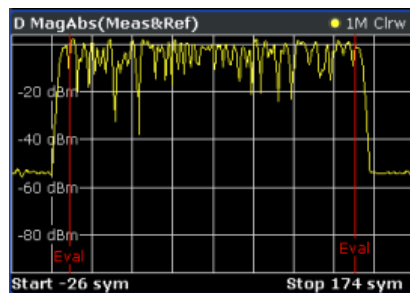


Figure 4-89: Evaluation lines in absolute magnitude diagram

In symbol tables, the evaluated symbols are indicated by red square brackets.

| D Symbol Table (Hexadecimal) | | | | | | | | | | |
|------------------------------|----|----|----|----|----|----|----|----|----|----|
| | + | 1 | + | 3 | + | 5 | + | 7 | + | 9 |
| 0 | 1E | 1E | 0E | 0E | 05 | 15 | 1E | 15 | 08 | 02 |
| 10 | 12 | 17 | 12 | 1D | 18 | 03 | 13 | 14 | 13 | 1A |
| 20 | 1D | 08 | 12 | 03 | 07 | 01 | 0F | 0D | 13 | 08 |
| 30 | 0E | 1E | 03 | 1F | 18 | 07 | 17 | 18 | 17 | 06 |
| 40 | 08 | 04 | 14 | 1D | 14 | 0F | 07 | 19 | 16 | 05 |
| 50 | 09 | 03 | 11 | 16 | 15 | 18 | 13 | 02 | 04 | 00 |
| 60 | 08 | 08 | 18 | 09 | 19 | 0A | 18 | 0D | 1D | 06 |
| 70 | 1C | 11 | 08 | 00 | 12 | 00 | 12 | 12 | 00 | 00 |
| 80 | 00 | 12 | 12 | 12 | 00 | 00 | 12 | 00 | 00 | 12 |
| 90 | 12 | 00 | 12 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 100 | 12 | 00 | 12 | 12 | 0A | 1A | 0F | 1B | 04 | .. |

In other result displays that are based on the evaluation range only, two red vertical lines are displayed in the diagram header to indicate a limited evaluation basis.

B Result Summary

4.7 Display points vs estimation points per symbol

Estimation points per symbol

During synchronization, the measurement signal is matched to the reference signal. Various signal parameters are calculated, as well as the optional "equalizer". You can define how many sample points are used for this calculation at each symbol. Typically, it is one point per symbol (= **symbol rate**) or all captured samples (= **sample rate**).

Display points per symbol

The number of points per symbol used for estimation can vary from the number of points used to display the results of the calculation. If more points per symbol are selected than the defined sample rate, the additional points are interpolated for the display. The more points are displayed per symbol, the more detailed the trace becomes, as illustrated in [Figure 4-90](#).

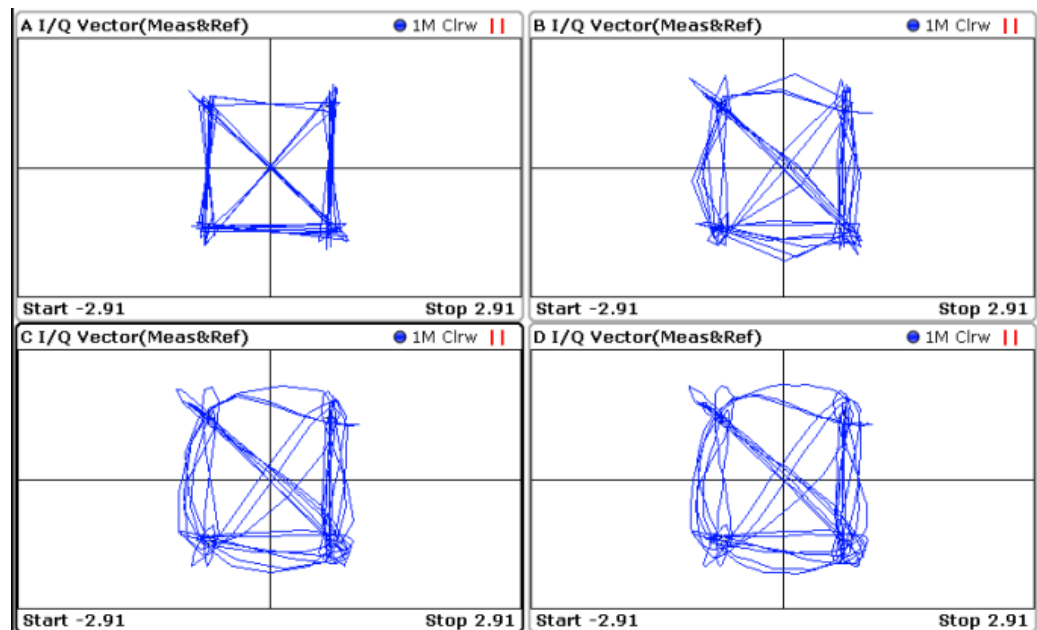


Figure 4-90: Result display with different numbers of display points per symbol

window A = 1
 window B = 2
 window C = 4
 window D = 16



The displayed points per symbol also determine how many values are returned when you query the trace data using a remote command (see [TRACe<n>\[:DATA\]](#) on page 564).

For results based on the **capture buffer**, one point is displayed for each sample taken, that is: the number of display points per symbol is always identical to the capture oversampling value. The capture oversampling is defined as the ratio between sample rate and symbol rate. The default capture oversampling is 4, that is: $\text{sample rate} = 4 * \text{symbol rate}$.

For the "Result Summary", the default number of display points corresponds to the estimation points per symbol. (By default, 1 for QAM and PSK modulated signals and the capture oversampling for MSK and FSK modulated signals.) This value controls which samples are considered for the peak and RMS values and the power result.

For most other result displays, the default number of displayed points per symbol is identical to the capture oversampling value.



For very large capture oversampling rates (≥ 64), a lower number of display points per symbol is used by default. That avoids prolonged display times and extremely large amounts of trace data.

4.8 Capture buffer display

Up to 200 million symbols can be captured and processed at a time.

Processing large numbers of samples

Generally, the capture buffer result displays show a trace point for each sample in the buffer. However, if more than 256 000 samples are captured, this is no longer possible. In this case, the captured samples are mapped to 25 000 display points using an auto-peak detector for display in the Magnitude Overview Absolute diagram. Thus, this overview is not suitable to detect transient effects or analyze individual symbols closely.

For all other result displays based on the capture buffer, only a section of the capture buffer with a size of 256 000 samples is displayed. Which section is displayed is indicated in the overview diagram using vertical blue lines. Sections are selected such that the defined **Result range** is displayed optimally. They are adapted automatically if you move the result range within the capture buffer by moving the blue lines in the overview. Any other result displays based on the capture buffer section are automatically updated.



Figure 4-91: Magnitude absolute display for a long capture buffer

Window 1 = Magnitude Overview of entire capture buffer (500000 symbols)

Window 2 = "Magnitude absolute" of selected capture buffer section (last 64000 symbols, purple frame)

Window 3 = "Magnitude absolute" of measured signal (result range, 3000 symbols, blue frame)

If the optional 2 GHz / 5 GHz bandwidth extension (B2000/B5000) is active, the capture buffer is restricted to 256 000 samples. Thus, all data is included in one single section.



The maximum number of *symbols* that can be captured depends on the specified number of samples per symbol. For example, for the default sample rate of 4 * symbol rate, the maximum number of symbols to be captured is 50 million (see also [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75).

Restrictions

If you change configuration settings, only the data in the currently selected capture buffer *section* is automatically re-evaluated. Thus, you can only move the position of the result range within the section. You must manually re-evaluate the entire capture buffer before you can move the result range outside the section again (see ["Refresh"](#) on page 241).

Trace modes that calculate results for several sweeps (Average, MinHold, MaxHold) are not available for result displays based on capture buffer *sections*.

For the Magnitude Overview Absolute result display, these trace modes are also not available. Furthermore, only one trace can be configured in the Magnitude Overview Absolute result display.

For other result displays, results based on the entire capture buffer (e.g. Average, MinHold, MaxHold traces, EVM) must be updated manually.

Remote commands:

Remote commands are provided to determine the first and last values currently displayed in a particular window:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:START?` on page 561

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:STOP?` on page 562

And to determine the position of the current result range within the capture buffer:

`[SENSe:]DDEMod:SEARCh:MBURst:START[:SYMBOLs]?` on page 572

4.9 Known data files - dependencies and restrictions

For various vector signal analysis functions the measured signal is compared to a defined ideal reference signal. The more precise the reference signal, the more precise the results become. In the best case, the possible data sequences within the signal to analyze are known in advance and can be used to compare the measured data to. This is similar to defining a pattern for the entire result range. Thus, a falsely estimated reference signal (due to false symbol decisions) is avoided and does not influence the error calculation.

You can load XML files containing the possible sequences to the R&S FSW VSA application and use them to compare the measured data to.

Alternatively, for data generated by a pseudo-random bit sequence (PRBS) generator, you can specify the algorithm used to generate the data, so the R&S FSW VSA application knows which sequences can occur. This function requires the FSW-K70P option. See [Chapter 4.10, "Known data from PRBS generators"](#), on page 170.

In particular, you can use known data for the following functions:

- Fine synchronization during the demodulation process (see [Figure 4-64](#) and "[Fine Synchronization](#)" on page 261)
- Calculation of the Bit Error Rate (BER), see [Chapter 3.2.1, "Bit error rate \(BER\)"](#), on page 25

For details on working with Known Data files, see [Chapter 8.2.4, "How to work with known data files"](#), on page 302



Auxiliary tool to create Known Data files

An auxiliary tool to create Known Data files from data that is already available in the R&S FSW VSA application is provided with the FSW free of charge.

See [Chapter 8.2.4.2, "How to create known data files"](#), on page 303.

The syntax for Known Data files is described in [Chapter E, "Known data file syntax description"](#), on page 627.

When you use Known Data files as a reference, some dependencies to other settings and restrictions for other functions apply.

Modulation Order

The "Modulation Order" selected in the "Modulation" settings in the R&S FSW VSA application must correspond to the modulation order value specified in the XML file (<ModulationOrder> element).

Demodulation

Demodulation using synchronization to the Known Data can increase the measurement duration, as each detected symbol must be compared to each possible sequence in the data file.

Result Length

The "Result Length" specified in the "Result Range" dialog box in the R&S FSW VSA application must be identical to the length of the specified symbol sequences in the XML file (<ResultLength> element).

Result Range Alignment

- **Burst signals**

Due to the uncertainty of the burst search, when you align the result range to a burst signal, the determined result range can start up to 2 symbols before or after the actual burst. However, an offset of only one symbol means that the synchronization process cannot detect any of the predefined symbol sequences in the Known Data file. To avoid synchronization failure, try one of the following:

- Align the result range to a pattern instead of the burst.
- Use a precise external trigger and align the result range to the capture buffer. The trigger timing must be very precise, otherwise the result range start can be incorrect again.

- **Continuous signals**

For continuous signals without a pattern, the result range is aligned randomly. Thus, a very large number of possible sequences must be predefined.

Use a precise external trigger and align the result range to the capture buffer. The trigger timing must be very precise, otherwise the result range start can be incorrect again.

4.10 Known data from PRBS generators

Known data files require all possible data sequences to be defined in a file. For data generated by a pseudo-random bit sequence (PRBS) generator, the number of possible sequences can be very large and defining them in a file can be very tedious.

However, if you can specify the algorithm used to generate the data, the R&S FSW VSA application can determine the possible sequences without a file. This function requires the FSW-K70P option.

PRBS data

PRBS generators deliver pseudo-random binary sequences of differing length and duration. They are also known as maximum length sequences. PRBS sequences are generated with the aid of ring shift registers with feedback points determined by the polynomial.

The pseudo-random sequence from a PRBS generator is uniquely defined by the register number and the feedback. The [Table 4-42](#) describes the standard PRBS generators supported by the R&S FSW VSA application, as specified in the ITU-T standard.

Table 4-42: Overview of PRBS generators

| PRBS type | Generator Polynomial (default) | Length in bits | Feedback from | Negate Feedback Path (default) |
|-----------|--------------------------------|------------------------|----------------------|--------------------------------|
| PRBS7 | 7; 6; 0 | $2^7 - 1 = 127$ | Registers 6, 0 | false |
| PRBS9 | 9; 4; 0 | $2^9 - 1 = 511$ | Registers 4, 0 | false |
| PRBS11 | 11; 2; 0 | $2^{11} - 1 = 2047$ | Registers 2, 0 | false |
| PRBS15 | 15; 1; 0 | $2^{15} - 1 = 32767$ | Registers 1, 0 | true |
| PRBS16 | 16; 5; 3; 2; 0 | $2^{16} - 1 = 65535$ | Registers 5, 3, 2, 0 | false |
| PRBS20 | 20; 3; 0 | $2^{20} - 1 = 1048575$ | Registers 3, 0 | false |
| PRBS21 | 21; 2; 0 | $2^{21} - 1 = 2097151$ | Registers 2, 0 | false |
| PRBS23 | 23; 5; 0 | $2^{23} - 1 = 8388607$ | Registers 5, 0 | true |
| PRBS31 | 31; 28; 0 | $2^{31} - 1$ | Registers 28, 0 | false |

Example:

[Figure 4-92](#) shows a 9-bit generator with feedback to registers 4 and 0 (output). The generated serial data is converted internally, e.g 2 bit/symbol if QPSK is used.

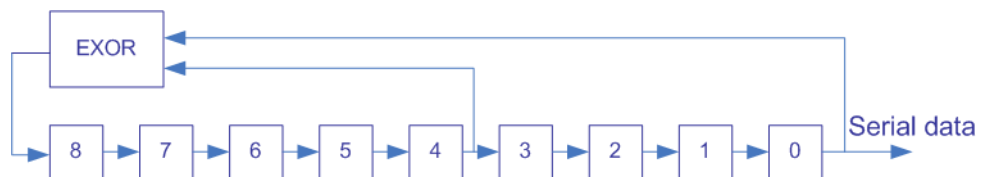


Figure 4-92: A 9-bit PRBS generator

Defining the used algorithm in the R&S FSW VSA application

If the PRBS data is generated in accordance with the ITU-T standard, it is sufficient to specify the type of the PRBS data. The R&S FSW VSA application then automatically determines the corresponding generator polynomial. You can also define the polynomial manually.

The type of the model defines the degree, complexity and number of terms in the polynomial model. In general, a polynomial of type N is defined as:

$$y = a_0 + a_1x + a_2x^2 + \dots + a_Nx^N$$

The required input for the polynomial in the R&S FSW VSA application is the coefficients a_0, \dots, a_N . These values also define the feedback positions in the algorithm.

To select a specific subset of polynomial coefficients, do one of the following:

- Define a range of coefficients (e.g. "0 - 5", in that case the application applies all coefficients in that range).
Note that the coefficients must be defined in descending order (e.g. 9;4;0 not 0;4;9)
- Define a set of individual coefficients only (e.g. "1;3;5;7", in that case the application applies those coefficients only). Use the "." key on the front panel for the ";" character.
- Define a combination of the methods mentioned above (e.g. "1;3;5-7")



If the manually defined polynomial does not define a valid PRBS algorithm, the default ITU-T standard generator polynomial for the selected type is used.



Symbol mapping in accordance with the PRBS generator

When using PRBS generators, you must specify the identical symbol mapping used by the R&S SMx signal generator in the signal description of the R&S FSW VSA application. In this case, select the `_SMx` mapping, which is used by the R&S SMBV and the R&S SMW signal generators, and possibly also other Rohde & Schwarz signal generators. See "[Modulation Mapping](#)" on page 189 for details.

4.11 Multi-modulation analysis (FSW-K70M)

In the default configuration, the R&S FSW VSA application assumes that the input signal uses the same modulation type for all symbols. Therefore, for signals modulated using two different modulations, one of the modulation types is not demodulated correctly. However, if the additional Multi-Modulation Analysis option (FSW-K70M) is installed, you can decode signals with two different modulation types.

The following conditions apply:

- PSK and QAM types only
- Not offset PSK
- For rotating PSK/QAM, the same additional phase shift must occur in both modulation ranges

Usually, you can easily identify a signal with two different modulations in the magnitude display:

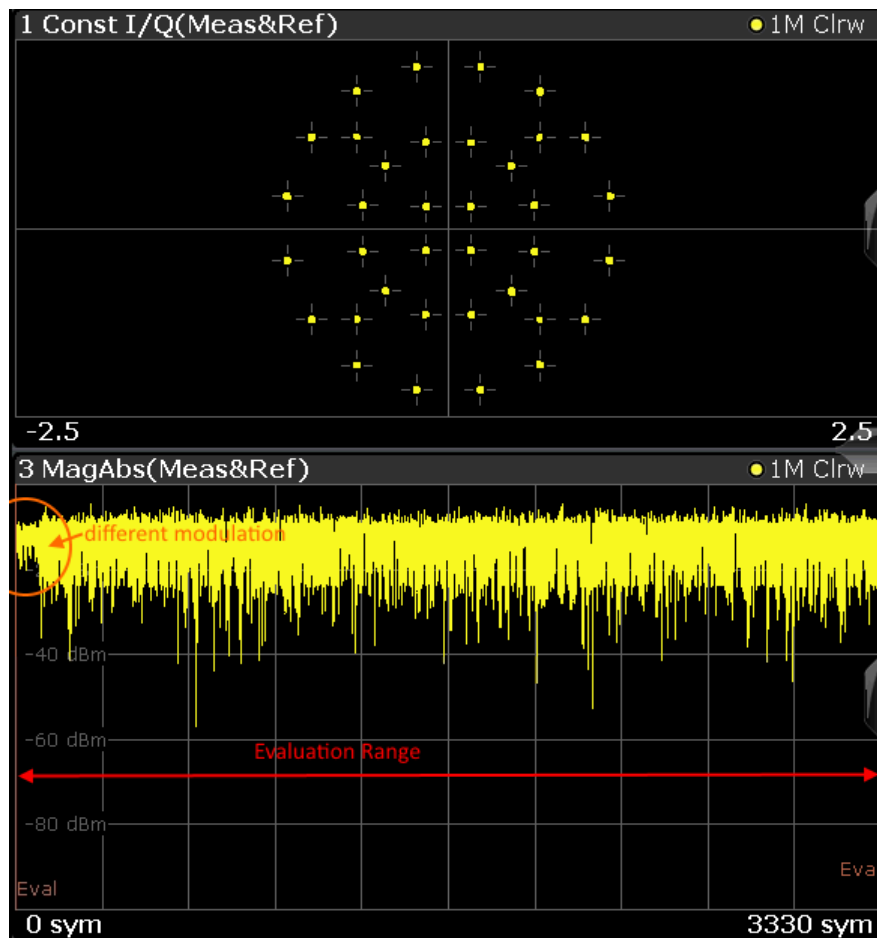


Figure 4-93: Signal with two different modulations

If the multi-modulation mode is active, the R&S FSW VSA application assumes that the loaded pattern symbols have the pattern modulation, and all other symbols have the modulation defined for the data symbols. If not, for example if unknown information is transmitted via header symbols that also have the pattern modulation, you must provide the frame structure of the signal manually (see below).

User-defined frame structure


To demodulate signals with two different modulation types, you can provide the frame structure of the signal with the used modulation type per frame yourself. Each frame is defined by a specified number of symbols. In addition to the modulation type, you must also define whether the frame contains known symbols (that is: a pattern), or unknown data.

By default, the power in all subframes is assumed to be identical. However, pilots are transmitted with higher power some times to ensure correct synchronization. Since the R&S FSW VSA application calculates the EVM and other parameters of the signal in reference to the reference power (see [Chapter 3.4, "Common parameters in VSA"](#), on page 66), it must consider deviating power for individual subframes. By default, a "boosting" factor of 1.000 - relative to the reference power - is defined. For subframes

with different gain values, define a different boosting factor to be applied to the reference power.

Only if the frame structure is configured correctly, the R&S FSW VSA application can demodulate the signal correctly and determine an accurate EVM and other modulation error results.

Basic frame structures can be configured quickly directly in the R&S FSW VSA application.

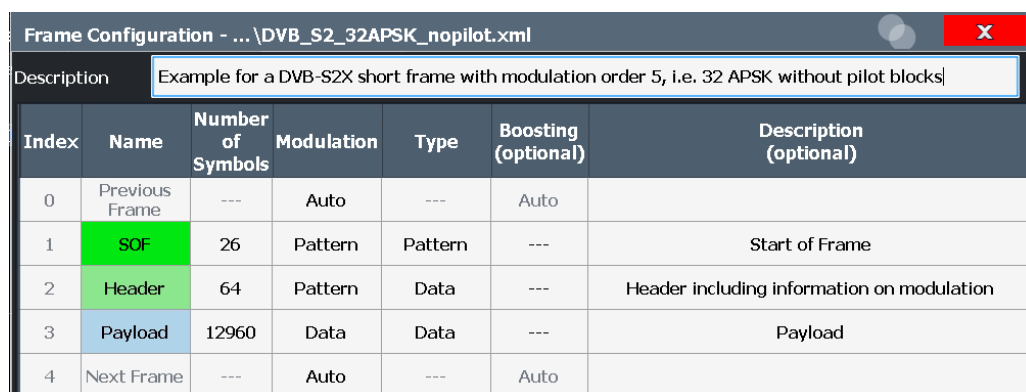

| Index | Name | Number of Symbols | Modulation | Type | Boosting (optional) | Description (optional) |
|-------|----------------|-------------------|------------|---------|---------------------|--|
| 0 | Previous Frame | --- | Auto | --- | Auto | |
| 1 | SOF | 26 | Pattern | Pattern | --- | Start of Frame |
| 2 | Header | 64 | Pattern | Data | --- | Header including information on modulation |
| 3 | Payload | 12960 | Data | Data | --- | Payload |
| 4 | Next Frame | --- | Auto | --- | Auto | |

Figure 4-94: Example of a basic frame structure consisting of a start-of-frame-pattern, a header with unknown data, and payload data

Complex frame structures are more easily defined in an XML file and imported to the R&S FSW VSA application.

| Frame Configuration - ... \DVB_S2_32APSK_pilots.xml | | | | | | |
|---|----------------|-------------------|------------|---------|---------------------|--|
| Description: Example for a DVB-S2X with pilots | | | | | | |
| Index | Name | Number of Symbols | Modulation | Type | Boosting (optional) | Description (optional) |
| 0 | Previous Frame | --- | Auto | --- | Auto | |
| 1 | SOF | 26 | Pattern | Pattern | --- | Start of Frame |
| 2 | Header | 64 | Pattern | Data | --- | Header including information on modulation |
| 3 | Payload | 1440 | Data | Data | --- | Payload |
| 4 | Pilots | 36 | Pattern | Data | --- | Inserted Pilots |
| 5 | Payload | 1440 | Data | Data | --- | Payload |
| 6 | Pilots | 36 | Pattern | Data | --- | Inserted Pilots |
| 7 | Payload | 1440 | Data | Data | --- | Payload |
| 8 | Pilots | 36 | Pattern | Data | --- | Inserted Pilots |
| 9 | Payload | 1440 | Data | Data | --- | Payload |
| 10 | Pilots | 36 | Pattern | Data | --- | Inserted Pilots |
| 11 | Payload | 1440 | Data | Data | --- | Payload |

Figure 4-95: Example of a complex frame structure consisting of a start-of-frame-pattern, a header with unknown data, and payload data with inserted pilots



The R&S FSW VSA application provides frequently used frame configurations for DVB-S2X in sample files. You can load one of the files for a sample configuration in the R&S FSW VSA application (see ["Load File"](#) on page 196).

Furthermore, you can use a tool provided with the R&S FSW VSA application firm-ware. It automates the configuration and provides the variety of different constellations that are used within DVB-S2(X). See [Chapter 5.2, "Configuration according to digital standards"](#), on page 184.

Result range and evaluation range for multi-modulation signals

The frame configuration implicitly also defines the result range (see also [Chapter 4.6.1, "Result range"](#), on page 162). By default, the result range length corresponds to the number of symbols in one entire frame. However, you can restrict it to fewer symbols, e.g. to an individual subframe. In result displays based on symbols, for example the EVM, the subframes are indicated by vertical green lines.

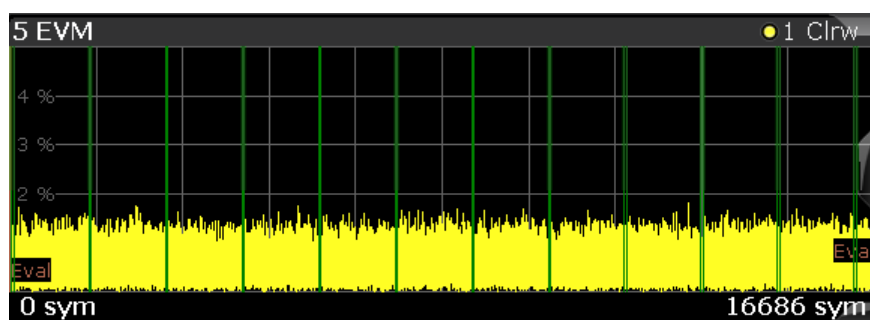


Figure 4-96: EVM with indicated subframes

Similarly, the evaluation range is set to the entire result range by default (see also [Chapter 4.6.2, "Evaluation range"](#), on page 164). However, you can also restrict the evaluation range to a subset of symbols, for example a specific subframe. In all displays over time, except for capture buffer displays, the evaluation range is indicated by vertical red lines. Drag the red evaluation range lines so they are aligned to the green subframe lines to restrict the result display to a single subframe.

Example:

In the following example, the evaluation range is set to the header subframe only (see [Example of a basic frame structure consisting of a start-of-frame-pattern, a header with unknown data, and payload data](#)). The Constellation diagram shows only the symbol points for the header.

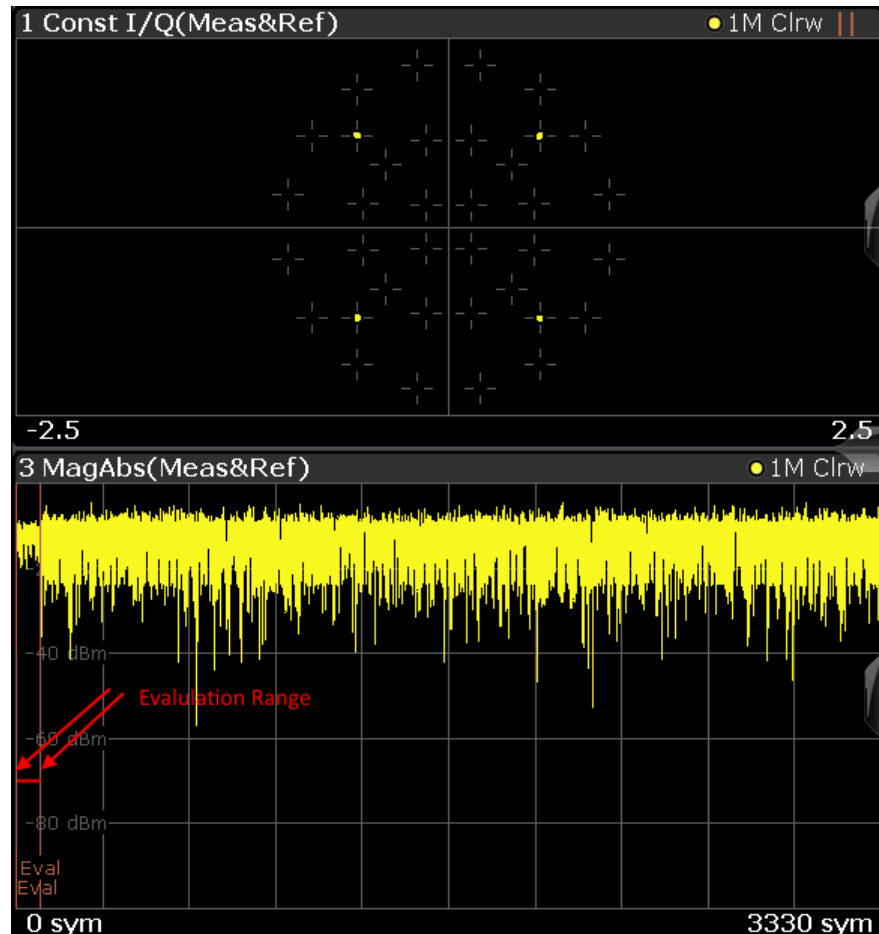


Figure 4-97: Evaluation range set to subframe only

In the symbol table, different modulation and data types are also displayed differently (see [Chapter 3.2.32, "Symbol table"](#), on page 61).

Typical applications for two-modulated signals

Some signal modulations provide additional information (metadata) on the subsequently transmitted data to allow for the receiver to demodulate the useful data correctly. Some examples for metadata are:

- Patterns indicating the frame start
- Header data describing the type, length, or structure of the useful data
- Pilots inserted within the useful data to improve synchronization for a long data package

Since this metadata is essential for accurate demodulation, it is important that the metadata is received correctly. However, the metadata has no inherent error protection like the useful data. Therefore, a very robust modulation type must be used to transmit the metadata. The useful data, on the other hand, can be modulated using a more efficient, but less robust, modulation.

4.12 VSA in MSRA/MSRT operating mode

The R&S FSW VSA application can also be used to analyze data in MSRA and MSRT operating mode. The main difference between the two modes is that in MSRA mode, an I/Q analyzer captures data, while in MSRT mode, a real-time measurement is performed to capture data.

In MSRA/MSRT operating mode, only the MSRA/MSRT primary actually captures data; the MSRA/MSRT applications receive an extract of the captured data for analysis, referred to as the **application data**. For the R&S FSW VSA application in MSRA/MSRT operating mode, the application data range is defined by the same settings used to define the signal capture in Signal and Spectrum Analyzer mode. In addition, a capture offset can be defined, i.e. an offset from the start of the captured data to the start of the application data for vector signal analysis. The "Capture Buffer" displays show the application data of the R&S FSW VSA application in MSRA/MSRT mode.

Data coverage for each active application

Generally, if a signal contains multiple data channels for multiple standards, separate applications are used to analyze each data channel. Thus, it is of interest to know which application is analyzing which data channel. The MSRA/MSRT primary display indicates the data covered by each application, restricted to the channel bandwidth used by the corresponding standard, by vertical blue lines labeled with the application name. The R&S FSW VSA application supports several standards, but the standard used by the currently analyzed data is not known. Thus, the "Symbol Rate" defined in the "Signal Description" settings is used to approximate the channel bandwidth.

Analysis interval

However, the individual result displays of the application need not analyze the complete data range. The data range that is actually analyzed by the individual result display is referred to as the **analysis interval**.

In the R&S FSW VSA application, the analysis interval is automatically determined according to the evaluation range or result range settings, as in Signal and Spectrum Analyzer mode. The currently used analysis interval (in seconds, related to capture buffer start) is indicated in the window header for each result display.



Exception: "Equalizer"


In the "Equalizer", displays do not indicate the analysis interval in MSRA/MSRT mode.

Analysis line

A frequent question when analyzing multi-standard signals is how each data channel is correlated (in time) to others. Thus, an analysis line has been introduced. The analysis line is a common time marker for all MSRA secondary applications. It can be positioned in any MSRA secondary application or the MSRA primary and is then adjusted in all other secondary applications. Thus, you can easily analyze the results at a specific time in the measurement in all secondary applications and determine correlations.

If the analysis interval of the secondary application contains the marked point in time, the line is indicated in all time-based result displays, such as time, symbol, slot or bit diagrams. By default, the analysis line is displayed. However, you can hide it from view manually. In all result displays, the "AL" label in the window title bar indicates whether the analysis line lies within the analysis interval or not:

- **orange "AL"**: the line lies within the interval
- **white "AL"**: the line lies within the interval, but is not displayed (hidden)
- **no "AL"**: the line lies outside the interval

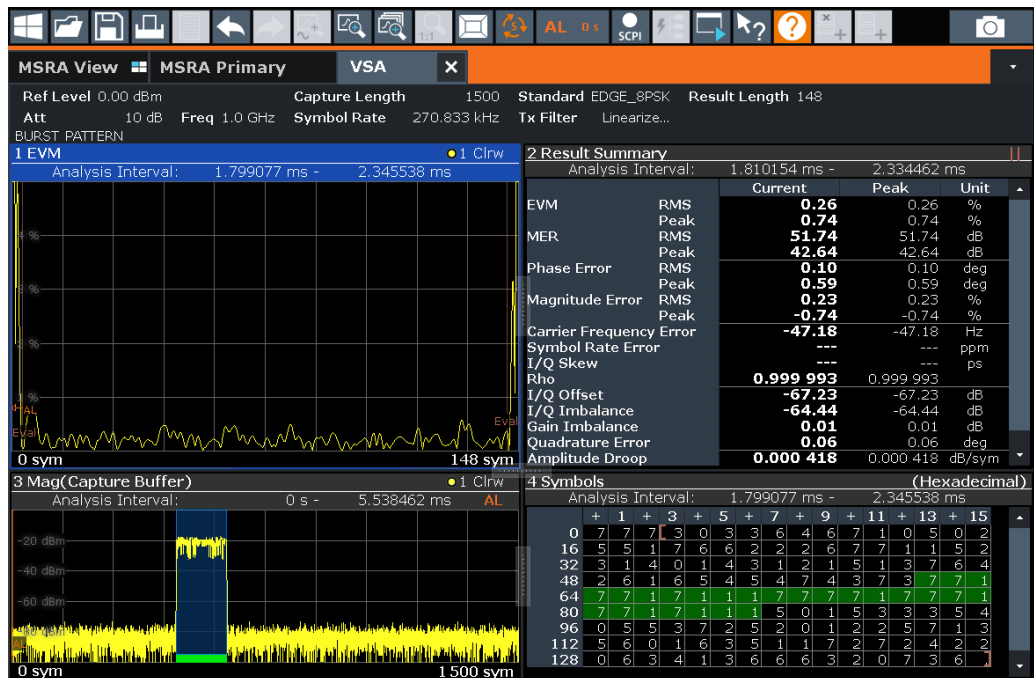

For details on the MSRA operating mode, see the FSW MSRA User Manual. For details on the MSRT operating mode, see the FSW Real-Time Spectrum Application and MSRT Operating Mode User Manual.

5 Configuration





Access: [Meas Config] > "Overview"

When you activate a measurement channel for the R&S FSW VSA application, a VSA measurement for the input signal is started automatically with the default configuration. The "VSA" menu is displayed and provides access to the most important configuration functions.

Importing and Exporting I/Q Data

The I/Q data to be evaluated in VSA cannot only be measured by the R&S FSW VSA application itself, it can also be imported to the application, provided it has the correct format. Furthermore, the evaluated I/Q data from the R&S FSW VSA application can be exported for further analysis in external applications.

The import and export functions are available in the "Save/Recall" menu which is displayed when you select the  "Save" or  "Open" icon in the toolbar.

For details on importing and exporting I/Q data, see the FSW User Manual.

| | |
|---|-----|
| • Configuration overview | 180 |
| • Configuration according to digital standards | 184 |
| • Signal description | 186 |
| • Input, output and frontend settings | 204 |
| • Signal capture | 230 |
| • Burst and pattern configuration | 243 |
| • Result range configuration | 253 |
| • Demodulation settings | 255 |
| • Measurement filter settings | 263 |
| • Evaluation range configuration | 265 |
| • Adjusting settings automatically | 266 |
| • Restoring factory settings for vector signal analysis | 268 |

5.1 Configuration overview



Access: "Meas Config" > "Overview"

As explained in [Chapter 2.1, "Introduction to vector signal analysis"](#), on page 15, the key task of the vector signal analysis application is to reconstruct the ideal signal. It tries to perform this reconstruction based on the knowledge about the DUT that you provide.

Using the R&S FSW VSA application you can perform vector signal analysis measurements using predefined standard setting files, or independently of digital standards using user-defined measurement settings. Such settings can be stored for recurrent use.

Thus, configuring VSA measurements requires one of the following tasks:

- Selecting an existing standard settings file and, if necessary, adapting the measurement settings to your specific requirements.


- Configuring the measurement settings and, if necessary, storing the settings in a file.

In this case, you must describe your signal manually:

- Whether you have a continuous or a bursted signal
- The modulation of your signal
- The symbol rate
- The transmit filter
- Whether your signal contains a known training sequence (pattern)
- Etc.

"Overview" window

Throughout the measurement channel configuration, an overview of the most important currently defined settings is provided in the "Overview".

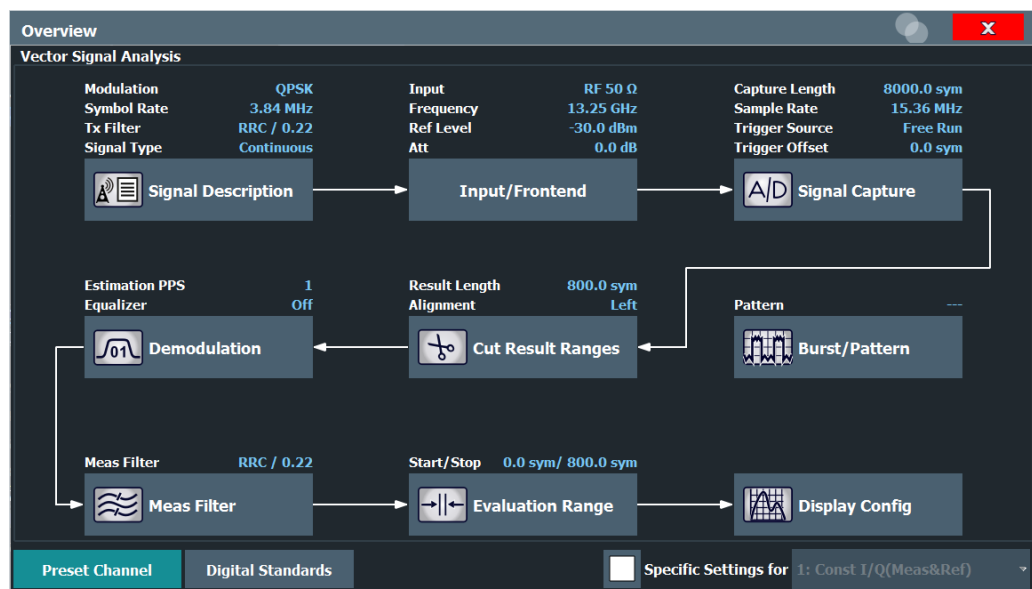

In addition to the main measurement settings, the "Overview" provides quick access to the main settings dialog boxes. The individual configuration steps are displayed in the order of the data flow. Once you have provided the signal description, the remaining settings are preconfigured accordingly. For example, the burst search is deactivated if you specify a continuous signal.

Thus, you can easily configure an entire measurement channel from input over processing to output and analysis by stepping through the dialog boxes as indicated in the "Overview". When you have covered all steps in the "Overview", you can be sure that you have not missed any important settings.

In particular, the "Overview" provides quick access to the following configuration dialog boxes (listed in the recommended order of processing):

1. Signal Description

This is the most important block for configuring the VSA measurement. Here you describe the structure of your signal, that is: its modulation, its transmit filter,

whether the signal is bursted or continuous, etc. Based on this description, the R&S FSW VSA application configures most remaining blocks automatically.
See [Chapter 5.3, "Signal description"](#), on page 186

2. Input and Frontend Settings

Includes major settings for the frontend of the analyzer, such as the center frequency.

See [Chapter 5.4, "Input, output and frontend settings"](#), on page 204

3. Signal Capture (including Triggering)

This block specifies how many I/Q data points to capture. With a higher number, you can cover a larger bandwidth.

See [Chapter 5.5, "Signal capture"](#), on page 230

4. Burst/Pattern Configuration

You can manually enable/disable the burst and pattern search here. However, based on your signal description, this block is automatically configured correctly. So there is usually no need to change the configuration manually.

See [Chapter 5.6, "Burst and pattern configuration"](#), on page 243

5. Result Range Definition

The result range specifies how many symbols to analyze together. For example, if the signal is bursted, the result range usually coincides with the burst length.

See [Chapter 5.7, "Result range configuration"](#), on page 253

6. Demodulation Settings

Includes advanced settings regarding the demodulation. For example, whether a potential I/Q offset is compensated for prior to result calculation.

See [Chapter 5.8, "Demodulation settings"](#), on page 255

7. Measurement Filter Settings

The type of measurement filter and its usage is specified here. It limits the measurement signal, the reference signal, and therefore also the error signal in bandwidth. By default, the R&S FSW VSA application selects a suitable measurement filter the transmit filter specified in the signal description.

See [Chapter 5.9, "Measurement filter settings"](#), on page 263

8. Evaluation Range Definition

The evaluation range is always equal to or smaller than the result range and defines:

- The range used by traces that do not have a time axis, e.g. polar diagrams
- The range over which the following parameters are calculated for the "Result Summary":
 - "EVM"
 - "MER"
 - "Phase Error"
 - "Magnitude Error"
 - "Power"

See [Chapter 5.10, "Evaluation range configuration"](#), on page 265

9. Display Configuration

Here you select which measurement results are displayed for vector signal analysis.

"Display Config" is only available in the general overview, not in the window-specific overview (see "Specific Settings for" on page 183).

See [Chapter 6.5, "Display and window configuration"](#), on page 285

10. Analysis

"Analysis" is only available in the window-specific overview, not in the general overview (see "Specific Settings for" on page 183).

Which functions are provided depends on the window type.

See [Chapter 6.5, "Display and window configuration"](#), on page 285

See [Chapter 6, "Analysis"](#), on page 270

To configure settings

- ▶ Select any button in the "Overview" to open the corresponding dialog box. Select a setting in the channel bar (at the top of the measurement channel tab) to change a specific setting.

For step-by-step instructions on configuring VSA measurements, see [Chapter 8, "How to perform vector signal analysis"](#), on page 292.

Preset Channel

Select "Preset Channel" in the lower left-hand corner of the "Overview" to restore all measurement settings *in the current channel* to their default values.

Note: Do not confuse "Preset Channel" with the [Preset] key, which restores the entire instrument to its default values and thus closes *all channels* on the FSW (except for the default channel)!

Remote command:

`SYSTem:PRESet:CHANnel[:EXEC]` on page 360

Specific Settings for

The channel can contain several windows for different results. Thus, the settings indicated in the "Overview" and configured in the dialog boxes vary depending on the selected window.

Select an active window from the "Specific Settings for" selection list that is displayed in the "Overview" and in all window-specific configuration dialog boxes.

Enable the "Specific Settings for" option.

The "Overview" and dialog boxes are updated to indicate the settings for the selected window.

The indicated data flow is updated for the selected data source.

If the "Specific Settings for" option is not enabled, the overview displays the default data flow and the general settings independently of the selected window.

Note: "Display Config" is only available in the general overview, not in the window-specific overview.

Digital Standards

Opens a file selection dialog to manage predefined measurement settings for conventional mobile radio standards. See [Chapter 5.2, "Configuration according to digital standards"](#), on page 184

5.2 Configuration according to digital standards

Access: "Meas Config" > "Overview" > "Digital Standards"

Various predefined settings files for common digital standards are provided for use with the R&S FSW VSA application. In addition, you can create your own settings files for user-specific measurements.

For an overview of predefined standards and settings, see [Chapter B, "Predefined standards and settings"](#), on page 613. For detailed instructions, see [Chapter 8.1, "How to perform VSA according to digital standards"](#), on page 292

| | |
|---|-----|
| Selecting Storage Location - Drive/ Path/ Files | 184 |
| New Folder | 184 |
| File Name | 184 |
| Comment | 185 |
| Load Standard | 185 |
| Save Standard | 185 |
| Delete Standard | 185 |
| Restore Standard Files | 185 |
| DVB-S2(X) Config | 185 |

Selecting Storage Location - Drive/ Path/ Files

Select the storage location of the file on the instrument or an external drive.

The default storage location for the standards files is:

C:\R_S\INSTR\USER\vsa\Standards.

Note: Saving instrument settings in secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the FSW base unit user manual.

New Folder

Creates a new folder in the file system with the specified name in which you can save the settings file.

File Name

Contains the name of the data file without the path or extension.

By default, the name of a user file consists of a base name followed by an underscore. Multiple files with the same base name are extended by three numbers, e.g. `limit_lines_005`.

File names must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "*", "?".

For details on the filename and location, see the "Data Management" topic in the FSW User Manual.

Comment

An optional description for the data file. A maximum of 60 characters can be displayed.

Remote command:

[\[SENSe:\] DDEMod:STANdard:COMMeNt](#) on page 361

Load Standard

Loads the selected measurement settings file.

Note: When you load a standard, the usage of a known data file, if available, is automatically deactivated.

Remote command:

[\[SENSe:\] DDEMod:PRESet\[:STANdard\]](#) on page 361

Save Standard

Saves the current measurement settings for a specific standard as a file with the defined name.

Remote command:

[\[SENSe:\] DDEMod:STANdard:SAVE](#) on page 362

Delete Standard

Deletes the selected standard. Standards predefined by Rohde & Schwarz can also be deleted. A confirmation query is displayed to avoid unintentional deletion of the standard.

Note: Restoring predefined standard files. The standards predefined by Rohde & Schwarz available at the time of delivery can be restored using the "Restore Standard Files" function (see ["Restore Standard Files"](#) on page 185).

Remote command:

[\[SENSe:\] DDEMod:STANdard:DELeTe](#) on page 361

Restore Standard Files

Restores the standards predefined by Rohde & Schwarz available at the time of delivery.

Note that this function overwrites customized standards that have the same name as predefined standards.

Remote command:

[\[SENSe:\] DDEMod:FACTory\[:VALue\]](#) on page 360

DVB-S2(X) Config

Access: [MEAS]

Starts a tool which automates the configuration and provides the variety of different constellations that are used within DVB-S2(X). This tool is provided with the R&S FSW VSA application firmware and stored on the instrument.

For details see the Rohde & Schwarz application note: [1EF93: Modulation Accuracy Measurements of DVB-S2 and DVB-S2X Signals](#)

5.3 Signal description

Access: "Overview" > "Signal Description"

or: [MEAS CONFIG] > "Signal Description"

The signal description provides information on the expected input signal, which optimizes burst and pattern detection and allows for the application to calculate an ideal reference signal. The signal description consists of information on the used modulation and on the signal's structure.

- [Modulation](#)..... 186
- [Signal structure](#)..... 190
- [Frame structure](#)..... 193
- [Known data](#)..... 201


5.3.1 Modulation

Access: "Overview" > "Signal Description" > "Modulation"

or: [MEAS CONFIG] > "Signal Description" > "Modulation"

The "Modulation" settings contain modulation and transmit filter settings.

The modulation settings vary depending on the selected modulation type; in particular, FSK modulation provides some additional settings.

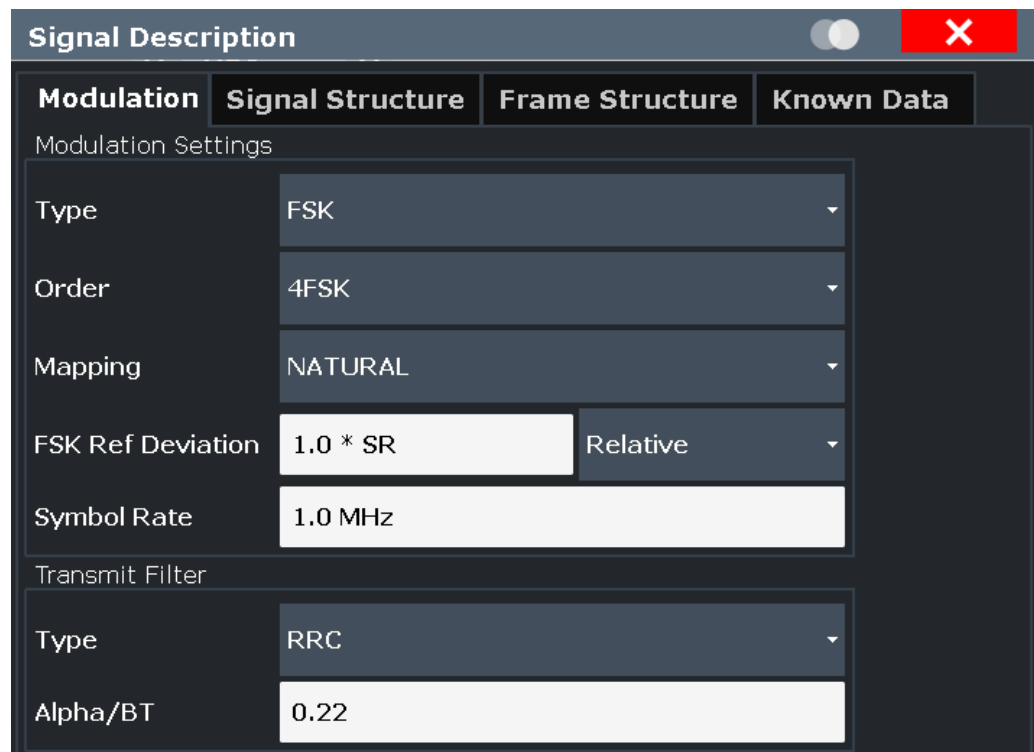

Signal Description

Modulation | Signal Structure | Frame Structure | Known Data

Modulation Settings

| | |
|-------------------|-------------------|
| Type | FSK |
| Order | 4FSK |
| Mapping | NATURAL |
| FSK Ref Deviation | 1.0 * SR Relative |
| Symbol Rate | 1.0 MHz |

Transmit Filter

| | |
|----------|------|
| Type | RRC |
| Alpha/BT | 0.22 |

Figure 5-1: Signal modulation settings for FSK modulation

| | |
|-----------------------------------|-----|
| Modulation Type..... | 187 |
| └ Load User Modulation..... | 188 |
| Modulation Order..... | 188 |
| FSK Ref Deviation (FSK only)..... | 189 |
| Modulation Mapping..... | 189 |
| Symbol Rate..... | 189 |
| Transmit Filter Type..... | 189 |
| └ Load User Filter..... | 190 |
| Alpha/BT..... | 190 |

Modulation Type

Defines the modulation type of the vector signal. The following types are available:

- PSK
- MSK
- QAM
- FSK
- ASK
- APSK
- User Modulation
 - Uses the selected user-defined modulation loaded from a file.
 - The currently loaded file is indicated in the channel bar.

For more information on these modulation types, see [Chapter 4.3, "Symbol mapping"](#), on page 97.

Remote command:

[SENSe:] DDEMod:FORMat on page 365

Load User Modulation ← Modulation Type

This function is only available if the modulation type "User Modulation" is selected.

Opens a file selection dialog box to select the file that contains the user-defined modulation (*.vam file).

For details on user-defined modulation files, see [Chapter 4.3.12, "User-defined modulation"](#), on page 130.

Remote command:

SENS:DDEM:FORM UQAM (see [SENSe:] DDEMod:FORMat on page 365)

[SENSe:] DDEMod:USER:NAME on page 371

Modulation Order

Depending on the [Modulation Type](#), various orders of modulation are available:

| Type | Available orders | | |
|------|--------------------|------------|------------|
| PSK | BPSK | 3Pi/4-QPSK | Pi/8-D8PSK |
| | QPSK | 8PSK | DQPSK |
| | Offset QPSK | 3Pi/8-8PSK | Pi/4-DQPSK |
| | Shaped Offset QPSK | D8PSK | Pi/4-QPSK |
| | Pi/2-BPSK | Pi/2-DBPSK | |
| MSK | MSK | DMSK | |
| QAM | 16QAM | Pi/4-16QAM | 32QAM |
| | -Pi/4-32QAM | 64QAM | 128QAM |
| | 256QAM | 512QAM | 1024QAM |
| | 2048QAM | 4096QAM | |
| FSK | 2FSK | 4FSK | 8FSK |
| | 16FSK | 32FSK | 64FSK |
| ASK | 2ASK | 4ASK | |
| APSK | 16APSK | 32APSK | |

Remote command:

PSK:

[SENSe:] DDEMod:PSK:FORMat on page 367

[SENSe:] DDEMod:PSK:NState on page 368

[SENSe:] DDEMod:QPSK:FORMat on page 369

MSK: [SENSe:] DDEMod:MSK:FORMat on page 367

QAM:

[SENSe:] DDEMod:QAM:FORMat on page 368

[SENSe:] DDEMod:QAM:NState on page 368

FSK: [SENSe:] DDEMod:FSK:NState on page 366

ASK: [\[SENSe:\]DDEMod:ASK:NState](#) on page 364

APSK: [\[SENSe:\]DDEMod:APSK:NState](#) on page 364

FSK Ref Deviation (FSK only)

The FSK Reference Deviation sets the deviation to the reference frequency.

For 2FSK, it indicates the distance from the reference frequency to the positive /negative deviation frequency and for 4FSK, the distance to the outer positive/negative deviation frequency.

To set the deviation as a multiple of the symbol rate ($x \cdot SR$), select "Relative" mode. To set the deviation as an absolute value in Hz, select "Absolute" mode.

Note that this parameter is available only for FSK modulated signals.

Remote command:

[CALCulate<n>:FSK:DEVIation:REFerence\[:VALue\]](#) on page 364

[CALCulate<n>:FSK:DEVIation:REFerence:RELative](#) on page 363

Modulation Mapping

The available mapping types depend on the [Modulation Type](#) and [Modulation Order](#).

Note: When using PRBS generators, select the SM_x mapping, which corresponds to the mapping used by R&S SM_x signal generators.

For more information on the modulation mapping, refer to [Chapter 4.3, "Symbol mapping"](#), on page 97

Remote command:

[\[SENSe:\]DDEMod:MAPPING\[:VALue\]](#) on page 367

[\[SENSe:\]DDEMod:MAPPING:CATalog?](#) on page 366

Symbol Rate

The symbol rate also determines the I/Q bandwidth of the data recording and demodulation. You can change the default rate by entering a value in Hz.

The minimum symbol rate is 25 Hz. The maximum symbol rate depends on the defined [Sample Rate](#) (see [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75).

Remote command:

[\[SENSe:\]DDEMod:SRATe](#) on page 370

Transmit Filter Type

Defines the type of transmit filter

An overview of available transmit filters is provided in [Chapter C.1, "Transmit filters"](#), on page 622.

For more information on transmit filters, see [Chapter 4.1.3, "Modulation and demodulation filters"](#), on page 70.

Remote command:

[\[SENSe:\]DDEMod:TFILter:NAME](#) on page 370

To define the name of the transmit filter to be used.

[\[SENSe:\]DDEMod:TFILter\[:STATe\]](#) on page 371

To switch off the transmit filter.

[\[SENSe:\] DDEMod:TFILter:USER](#) on page 371

To select a user-defined filter.

Load User Filter ← Transmit Filter Type

Opens a file-selection dialog box to select the user-defined transmit filter to be used.

Note: If a user-defined transmit filter is selected and the measurement filter is defined automatically (see ["Using the Transmit Filter as a Measurement Filter \(Auto\)"](#) on page 263), a Low-ISI measurement filter according to the selected user filter is calculated and used.

For details, see [Chapter 4.1.5, "Customized filters"](#), on page 73.

For detailed instructions on working with user-defined filters, see [Chapter 8.2.2, "How to select user-defined filters"](#), on page 296.

Remote command:

[\[SENSe:\] DDEMod:TFILter:USER](#) on page 371

[\[SENSe:\] DDEMod:TFILter:NAME](#) on page 370

Alpha/BT

Defines the roll-off factor (Alpha) or the filter bandwidth (BT).

The roll-off factor and filter bandwidth for transmit filter is available for RC, RRC, Gauss and GMSK filter.

Remote command:

[\[SENSe:\] DDEMod:TFILter:ALPHa](#) on page 370

5.3.2 Signal structure

Access: "Overview" > "Signal Description" > "Signal Structure"

or: [MEAS CONFIG] > "Signal Description" > "Signal Structure"

The "Signal Structure" settings describe the expected input signal and determine which settings are available for configuration. You can define a pattern to which the instrument can be synchronized, thus adapting the result range.

Activate "Description" to display a visualization of the currently defined signal structure at the bottom of the dialog box.

Signal Description
☐
✕

Modulation
Signal Structure
Frame Structure
Known Data

Signal Type

Continuous Signal
Burst Signal

Burst

| | | |
|-------------------|-----------|--------------|
| Min Length | 102 sym | = 26.563 µs |
| Max Length | 1 600 sym | = 416.667 µs |
| Run-In | 1 sym | = 260.417 ns |
| Run-Out | 1 sym | = 260.417 ns |

Pattern

Name

EDGE_HSR_QPSK_TSC0

Pattern Config

Offset

unknown

Description

| | |
|--------------------------------|-----|
| Signal Type..... | 191 |
| Burst Settings..... | 191 |
| └ Min Length / Max Length..... | 192 |
| └ Run-In..... | 192 |
| └ Run-Out..... | 192 |
| Pattern Settings..... | 192 |
| └ Name..... | 192 |
| └ Pattern Configuration..... | 192 |
| └ Offset..... | 192 |

Signal Type

Determines whether the signal is continuous or contains bursts.

Remote command:

[SENSE:] DDEMod: SIGNAL [:VALUE] on page 374

Burst Settings

For bursts, further settings are available.

Min Length / Max Length ← Burst Settings

Shortest and longest expected burst length in symbols (≤ 128000). The symbols are converted to seconds for reference.

Shortest and longest expected burst length in symbols (≤ 128000). The symbols are converted to seconds for reference.

Remote command:

`[SENSe:] DDEMod:SEARCh:BURSt:LENGth:MAXimum` on page 372

`[SENSe:] DDEMod:SEARCh:BURSt:LENGth[:MINimum]` on page 372

Run-In ← Burst Settings

The number of symbols before the signal is assumed to have valid modulated symbols.

The symbols are converted to seconds for reference.

Remote command:

`[SENSe:] DDEMod:SEARCh:BURSt:SKIP:RISing` on page 373

Run-Out ← Burst Settings

The number of symbols before the falling edge that do not necessarily need to have a valid modulation.

The symbols are converted to seconds for reference.

Remote command:

`[SENSe:] DDEMod:SEARCh:BURSt:SKIP:FALLing` on page 372

Pattern Settings

If the signal is expected to have a specific pattern, enable the "Pattern" option to define the pattern settings.

Note: The pattern search itself must be enabled separately in the "Pattern Search Settings", see ["Enabling Pattern Searches"](#) on page 246. By default, the pattern search is active if the signal description contains a pattern.

Name ← Pattern Settings

Specifies the pattern name from the list of defined patterns. You can also configure new patterns, see [Chapter 5.6.3, "Pattern configuration"](#), on page 247.

Remote command:

`[SENSe:] DDEMod:SIGNal:PATTern` on page 373

Pattern Configuration ← Pattern Settings

Displays the "Pattern Configuration" dialog box (see [Chapter 5.6.3, "Pattern configuration"](#), on page 247).

Offset ← Pattern Settings

The offset of the pattern is defined in relation to the start of the useful part of the burst (see ["Useful length"](#) on page 164). If the position of the pattern within the burst is known, it is recommended that you define the offset. That accelerates the pattern search and enhance the accuracy of the burst search.

Remote command:


`[SENSe:] DDEMod:STANdard:SYNC:OFFSet:STATe` on page 374

`[SENSe:] DDEMod:STANdard:SYNC:OFFSet[:VALue]` on page 374

5.3.3 Frame structure

Access: "Overview" > "Signal Description" > "Frame Structure"

This tab is only available if the additional Multi-Modulation Analysis option (FSW-K70M) is installed, and only for PSK and QAM types.

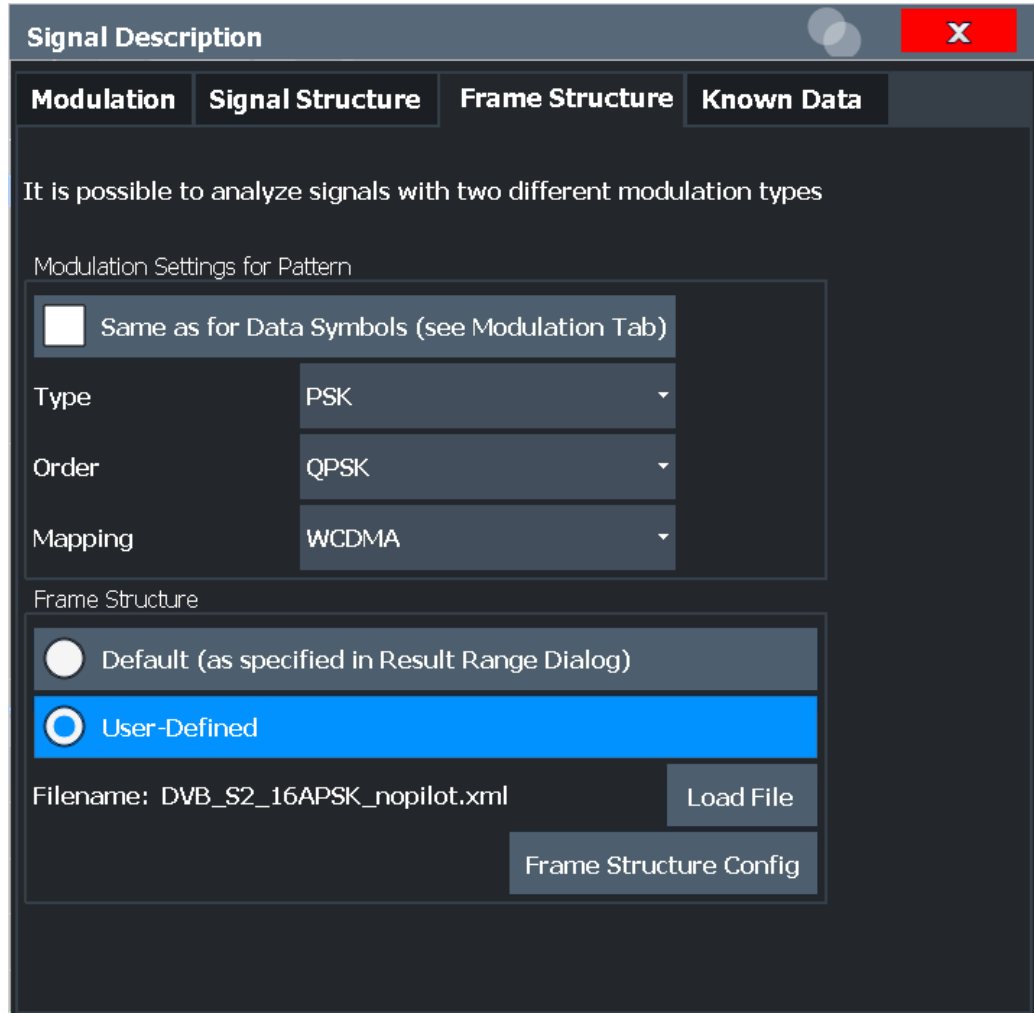

- [General frame structure settings](#)..... 193
- [Frame configuration](#)..... 196

5.3.3.1 General frame structure settings

The general frame structure settings determine whether more than one modulation is used and where the frame structure is configured.

| | |
|---|-----|
| Modulation Settings for Pattern: Same as for Data Symbols | 194 |
| Modulation Type | 194 |
| L Load User Modulation | 194 |
| Modulation Order | 194 |
| Modulation Mapping | 195 |

| | |
|-------------------------------|-----|
| Frame Structure..... | 195 |
| L Load File..... | 196 |
| L Frame Structure Config..... | 196 |

Modulation Settings for Pattern: Same as for Data Symbols

By default, the R&S FSW VSA application assumes that only one modulation type is used for both the pattern and the data symbols. In this case, the modulation configured in the [Modulation](#) tab is indicated for reference only, and no other settings are available.

If deactivated, the pattern symbols are demodulated using different settings than the data symbols. In this case, the data symbols are demodulated using the settings configured in the [Modulation](#) tab. The modulation settings for the pattern symbols are configured here.

Remote command:

[\[SENSe:\] DDEMod: PATTern \[: STATe\]](#) on page 386

Modulation Type

Defines the modulation type used for the pattern symbols. The following types are available:

- ASK
- APSK
- PSK
- QAM
- User Modulation
 - Uses the selected user-defined modulation loaded from a file.
 - The currently loaded file is indicated in the channel bar.

For more information on these modulation types, see [Chapter 4.3, "Symbol mapping"](#), on page 97.

Remote command:

[\[SENSe:\] DDEMod: PATTern: FORMat](#) on page 376

Load User Modulation ← Modulation Type

This function is only available if the modulation type "User Modulation" is selected for the pattern.

Opens a file selection dialog box to select the file that contains the user-defined modulation (*.vam file).

For details on user-defined modulation files, see [Chapter 4.3.12, "User-defined modulation"](#), on page 130.

Remote command:

[SENS:DDEM:PATT:FORM UQAM](#) (see [\[SENSe:\] DDEMod: PATTern: FORMat](#) on page 376)

[\[SENSe:\] DDEMod: PATTern: USER: NAME](#) on page 385

Modulation Order

Depending on the [Modulation Type](#) for the pattern symbols, various orders of modulation are available:

| Type | Available orders | | |
|------|------------------|------------|------------|
| PSK | BPSK | 3Pi/4-QPSK | Pi/8-D8PSK |
| | QPSK | 8PSK | DQPSK |
| | Pi/2-BPSK | 3Pi/8-8PSK | Pi/4-DQPSK |
| | Pi/2-DBPSK | D8PSK | Pi/4-QPSK |
| ASK | 2ASK | 4ASK | |
| APSK | 16APSK | 32APSK | |
| QAM | 16QAM | Pi/4-16QAM | 32QAM |
| | -Pi/4-32QAM | 64QAM | 128QAM |
| | 256QAM | 512QAM | 1024QAM |
| | 2048QAM | 4096QAM | |

Remote command:

PSK:

[\[SENSe:\] DDEMod: PATtern: PSK: FORMat](#) on page 383

[\[SENSe:\] DDEMod: PATtern: PSK: NSTate](#) on page 383

[\[SENSe:\] DDEMod: PATtern: QPSK: FORMat](#) on page 385

ASK:

[\[SENSe:\] DDEMod: PATtern: ASK: NSTate](#) on page 376

APSK:

[\[SENSe:\] DDEMod: PATtern: APSK: NSTate](#) on page 375

QAM:

[\[SENSe:\] DDEMod: PATtern: QAM: FORMat](#) on page 384

[\[SENSe:\] DDEMod: PATtern: QAM: NSTate](#) on page 384

Modulation Mapping

The available mapping types depend on the [Modulation Type](#) and [Modulation Order](#) of the pattern symbols.

For more information on the modulation mapping, refer to [Chapter 4.3, "Symbol mapping"](#), on page 97

Remote command:

[\[SENSe:\] DDEMod: PATtern: MAPPING\[:VALue\]](#) on page 383

[\[SENSe:\] DDEMod: PATtern: MAPPING: CATALOG?](#) on page 382

Frame Structure

Determines whether the frame structure of the signal is configured in reference to the result range or user-defined.

"Default" A single frame is assumed to correspond to the result range defined in the [Chapter 5.7, "Result range configuration"](#), on page 253.

"User-Defined" A frame is defined manually as a succession of subframes with specified characteristics. In this case, the result range is assumed to be a single frame as specified here. The [Chapter 5.7, "Result range configuration"](#), on page 253 settings are not available. The frame structure can be defined directly in the R&S FSW VSA application, or externally in an XML file which is loaded to the application. If no structure is configured or loaded yet, the result range definition is used (as for "Default").

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: MODE](#) on page 382

Load File ← Frame Structure

Loads a user-defined frame structure configuration from an XML file. The default storage location for such files is `C:\R_S\INSTR\USER\vsa\FrameRangeStructure`.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: LOAD](#) on page 382

Frame Structure Config ← Frame Structure

Opens the Frame Configuration dialog box to configure a user-defined frame structure in the R&S FSW VSA application.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT](#) on page 376

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: STRucture](#) on page 379

5.3.3.2 Frame configuration

A frame is defined manually as a succession of subframes with specified characteristics. The frame structure can be defined directly in the R&S FSW VSA application.

Frame Configuration - ... \DVB_S2_16APSK_nopilot.xml

Description

| Index | Name | Number of Symbols | Modulation | Type | Boosting (optional) | Description (optional) |
|-------|----------------|-------------------|------------|---------|---------------------|--|
| 0 | Previous Frame | --- | Auto | --- | Auto | |
| 1 | SOF | 26 | Pattern | Pattern | --- | Start of Frame |
| 2 | Header | 64 | Pattern | Data | --- | Header including information on modulation |
| 3 | Payload | 16200 | Data | Data | --- | Payload |
| 4 | Next Frame | --- | Auto | --- | Auto | |

Insert Above Insert Below Delete Row New Open Save Save As Apply Cancel



By default, at least three subframes are required: the main signal frame, plus one frame before ("previous frame"), and one after ("next frame") this frame. The previous and next frames are required to demodulate the first and last symbols in the main frame correctly. For these frames, only the modulation and boosting can be configured.

Description..... 197

Index..... 198

Name..... 198

Number of Symbols..... 198

Modulation..... 198

Type..... 199

Boosting (optional)..... 199

Description (optional)..... 200

Insert Above..... 200

Insert Below..... 200

Delete Row..... 200

New..... 200

Open..... 200

Save..... 200

Save As..... 200

Apply..... 200

Cancel..... 201

Description

Optional description for the overall frame configuration.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: TEXT](#) on page 381

Index

Successive number of the individual subframe or region of the signal.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: STRucture](#) on page 379

Name

Name of the subframe. Duplicate names are allowed.

The names for the subframes "Previous Frame" and "Next Frame" are not editable.

The color of the name field indicates the used [Modulation](#) and [Type](#):

- **Green:** Pattern modulation and pattern type
- **Light green:** Pattern modulation and data type
- **Blue:** Data modulation and data type

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: STRucture](#) on page 379

Number of Symbols

The number of symbols the subframe consists of. For pattern subframes, the number of symbols must correspond to the [Pattern configuration](#).

In result displays based on the result range, the individual subframes (defined by the number of symbols) are indicated by vertical green lines.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: STRucture](#) on page 379

Modulation

Determines which modulation type is used to demodulate the subframe. The modulation defined here determines the color of the [Name](#) field and the cell color in the "Symbol table".

You must also define the modulation for the previous (before the first subframe) and next (after the last subframe) frames.

| | |
|-----------|--|
| "Data" | The modulation type defined for data symbols in the Modulation tab is used. |
| "Pattern" | The modulation type defined for pattern symbols in the General frame structure settings tab is used. |

"Auto"

For previous and next frames only: the signal is assumed to be a succession of frames. In this case, the previous frame has the same modulation as the last subframe of the frame configuration. The next frame has the same modulation as the first subframe in the frame configuration.

| Index | Name | Number of Symbols | Modulation |
|-------|----------------|-------------------|------------|
| 0 | Previous Frame | --- | Data |
| 1 | Start Of Frame | 26 | Pattern |
| 2 | Header Symbols | 64 | Pattern |
| 3 | Data Symbols | 3240 | Data |
| 4 | Next Frame | --- | Pattern |

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: STRucture](#) on page 379

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: PREvious: MODulation](#) on page 378

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: NEXT: MODulation](#) on page 377

Type

Determines whether the demodulated data in the subframe is known or unknown by the R&S FSW VSA application. This is particularly of interest for the EVM calculation. If unknown data is compared to expected data, for example, the EVM is poor.

The data type defined here also determines the color of the [Name](#) field and the cell color in the "Symbol table".

"Pattern" The data is assumed to correspond with the pattern definition in the ["Pattern Settings"](#) on page 192. Not available for [Modulation](#) type: "Data". Only one subframe is allowed to be of type "Pattern".

"Data" The data is unknown. Used for data symbols or header information.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: STRucture](#) on page 379

Boosting (optional)

By default, the power in all subframes is assumed to be identical. However, pilots are often transmitted with higher power to ensure correct synchronization, for example. Since the R&S FSW VSA application calculates the EVM and other parameters of the signal in reference to the reference power (see [Chapter 3.4, "Common parameters in VSA"](#), on page 66), it must consider deviating power for individual subframes.

By default, a "boosting" factor of 1.000 - relative to the reference power - is defined. For subframes with different gain values, define a different boosting factor to be applied to the reference power.

The more accurate the boosting is defined, the more accurate the EVM and other results in the R&S FSW VSA application.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: STRucture](#) on page 379

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: PREVIOUS: BOOSTing](#) on page 378

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: NEXT: BOOSTing](#) on page 377

Description (optional)

Optional description for an individual subframe.

The descriptions for the subframes "Previous Frame" and "Next Frame" are not editable.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: STRucture](#) on page 379

Insert Above

Inserts a new subframe above the currently selected subframe.

Insert Below

Inserts a new subframe below the currently selected subframe.

Delete Row

Deletes the currently selected subframe.

New

Restores the default frame configuration with one data frame for the entire result length. Before any current settings are removed, you are asked if you want to save them.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT](#) on page 376

Open

Opens an existing frame configuration from an XML file. The default storage location for such files is C:\R_S\INSTR\USER\vsA\FRAMERangeStructure.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT](#) on page 376

Save

Saves the current frame configuration to the currently loaded file.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: SAVE](#) on page 378

Save As

Saves the current frame configuration to a new XML file. The default storage location for such files is C:\R_S\INSTR\USER\vsA\FRAMERangeStructure.

Remote command:

[\[SENSe:\] DDEMod: PATtern: FRAMe: EDIT: SAVE](#) on page 378

Apply

Uses the previously loaded frame configuration for the current measurement.

Cancel

Closes the "Frame Configuration" dialog box without saving any changes.

5.3.4 Known data

Access: "Overview" > "Signal Description" > "Known Data"

or: [MEAS CONFIG] > "Signal Description" > "Known Data"

The "Known Data" settings allow you to load a file that describes the possible data sequences in the input signal.

(See [Chapter 8.2.4, "How to work with known data files"](#), on page 302).

Additional information provided by the loaded file is displayed at the bottom of the dialog box. This information is not editable directly.

Signal Description [Close]

Modulation | **Signal Structure** | **Frame Structure** | **Known Data**

Known Data is needed for the BER measurement and can be used for fine synchronization (see "Demodulation" dialog)

Known Data

Source: XML File

Filename: MyKnownData.xml

Load Known Data File

Record Known Data File

Additional Information

| | |
|----------------------|-------------------------------------|
| Result Length: | 100 |
| Number of Sequences: | 1 |
| Modulation Order: | 4 |
| Base: | Hexadecimal |
| Comment: | Mod. Order = 4, Result Length = 100 |

**Auxiliary tool to create Known Data files**

An auxiliary tool to create Known Data files from data that is already available in the VSA application is provided on the instrument free of charge.

See ["To create a Known Data file using the recording tool for sequences"](#) on page 304.

Alternatively, for data generated by a pseudo-random bit sequence (PRBS) generator, you can specify the algorithm used to generate the data, so the R&S FSW VSA appli-

ation knows which sequences can occur. This function requires the FSW-K70P option. See [Chapter 4.10, "Known data from PRBS generators"](#), on page 170.

Signal Description

Modulation
Signal Structure
Frame Structure
Known Data

Known Data is needed for the BER measurement and can be used for fine synchronization (see "Demodulation" dialog)

Known Data

| | |
|----------------------------------|---|
| Source | PRBS |
| PRBS Type | 9 |
| Generator Polynomial | <input checked="" type="checkbox"/> Auto 9; 4; 0 |
| Negate Feedback Path | <input checked="" type="checkbox"/> Auto On Off |
| Pattern Symbols are Part of PRBS | <input checked="" type="checkbox"/> Auto On Off |

| | |
|---------------------------------------|-----|
| Known Data..... | 202 |
| Source..... | 203 |
| Load Data File..... | 203 |
| Record Known Data File..... | 203 |
| PRBS Type..... | 203 |
| Generator Polynomial..... | 203 |
| Negate Feedback Path..... | 203 |
| Pattern Symbols are Part of PRBS..... | 204 |

Known Data

Activates or deactivates the use of the loaded data file (if available), or the PRBS data, depending on the selected "[Source](#)" on page 203.

When deactivated, the additional information from the previously loaded data file is removed. Any references to the known data in the "Demodulation" dialog box are replaced by the default parameter values (see [Chapter 5.8.2, "Advanced demodulation \(synchronization\)"](#), on page 259).

Note: When a standard is loaded, the use of a Known Data file is automatically deactivated.

Remote command:

[SENSe:] DDEMod:KDATA:STATE on page 386

Source

Determines whether the known data is taken from a loaded file or a PRBS generator. If the PRBS generator is used, further settings are available.

This function requires the FSW-K70P option.

Remote command:

[SENSe:] DDEMod:KDATA:SOURCE on page 389

Load Data File

If **Known Data** is activated, this function displays a file selection dialog box to select the XML file that contains the known data. Once a file has been selected, any additional information provided by the file is displayed at the bottom of the dialog box.

Remote command:

[SENSe:] DDEMod:KDATA[:NAME] on page 387

Record Known Data File

Opens the auxiliary tool to create Known Data files from data that is already available in the R&S FSW VSA application.

See ["To create a Known Data file using the recording tool for sequences"](#) on page 304.

PRBS Type

Defines the type of the used PRBS model. The type of the model defines the degree, complexity and number of terms in the polynomial model. If the PRBS data is generated in accordance with the ITU-T standard, no further settings are required.

Remote command:

[SENSe:] DDEMod:KDATA:PRBS[:TYPE] on page 389

Generator Polynomial

Determines the coefficients of the polynomial and thus the feedback positions for the PRBS algorithm.

If the PRBS data is generated in accordance with the ITU-T standard, it is sufficient to specify the **PRBS Type**. By default, the R&S FSW VSA application automatically determines the corresponding generator polynomial.

If "Auto" is deactivated, specify the coefficients a_0, \dots, a_N of the polynomial manually.

Note that the coefficients must be defined in descending order (e.g. 9;4;0 not 0;4;9)

Remote command:

[SENSe:] DDEMod:KDATA:PRBS:POLYnomial:AUTO on page 388

[SENSe:] DDEMod:KDATA:PRBS:POLYnomial[:ORDER] on page 389

Negate Feedback Path

The feedback bit consists of the xor connected bits from the specified feedback positions. If "Negate Feedback Path" is enabled, this bit is inverted before it is fed into the last shift register. By default, this setting is defined automatically according to the standard for the used PRBS type.

Remote command:

[SENSe:] DDEMod:KDATA:PRBS:FEEDback[:STATe] on page 387

[SENSe:] DDEMod:KDATA:PRBS:FEEDback:AUTO on page 387

Pattern Symbols are Part of PRBS

Determines whether the pattern symbols are part of the PRBS sequence and are thus treated as data symbols.

If the pattern is part of the PRBS (default), the pattern consists of a valid PRBS sequence as specified in the dialog. In this case, the pattern symbols are treated as data symbols. Bit errors in the patterns are weighted as bit errors in the data sequence.

If the pattern is not part of the PRBS, the pattern does not consist of a valid PRBS sequence. In this case, bit errors in the pattern symbols are ignored.

In Auto mode, the pattern is assumed to be part of the PRBS sequence.

Note: If the result range consists only of pattern symbols, the BER result is empty, because no BER can be calculated.

For multi-modulation measurements, not only symbols with "Modulation" = "Pattern", "Type" = "Pattern" are excluded from the BER calculation. Also frames with "Modulation" = "Pattern" and "Type" = "Data".

Remote command:

[SENSe:] DDEMod:KDATA:PRBS:PATtern[:STATe] on page 388

[SENSe:] DDEMod:KDATA:PRBS:PATtern:AUTO on page 388

5.4 Input, output and frontend settings

Access: "Overview" > "Input/Frontend"

or: [INPUT/OUTPUT]

The FSW can evaluate signals from different input sources.

The frequency and amplitude settings represent the "frontend" of the measurement setup.

- [Input settings](#).....204
- [Output settings](#).....210
- [Digital I/Q output settings](#).....214
- [Digital I/Q 40G output settings](#).....216
- [Frequency settings](#).....217
- [Amplitude and vertical axis configuration](#).....219

5.4.1 Input settings

Access: "Overview" > "Input/Frontend" > "Input"

or: [INPUT/OUTPUT]

Some settings are also available in the "Amplitude" tab of the "Amplitude" dialog box.



Input from other sources

The R&S FSW VSA application application can also process input from the following optional sources:

- I/Q Input files
- External mixer
- External frontend
- "Digital Baseband" interface (FSW-B17)
- "Analog Baseband" interface (FSW-B71)
- Baseband oscilloscope input (FSW-B2071)
- 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000)
- Probes

For details, see the FSW I/Q Analyzer and I/Q Input User Manual.


- [Radio frequency input](#)..... 205
- [Settings for input from I/Q data files](#).....209

5.4.1.1 Radio frequency input

Access: "Overview" > "Input/Frontend" > "Input" > "Radio Frequency"

or: [INPUT/OUTPUT] > "Input Source Config" > "Input" > "Radio Frequency"

The default input source for the FSW is the radio frequency.

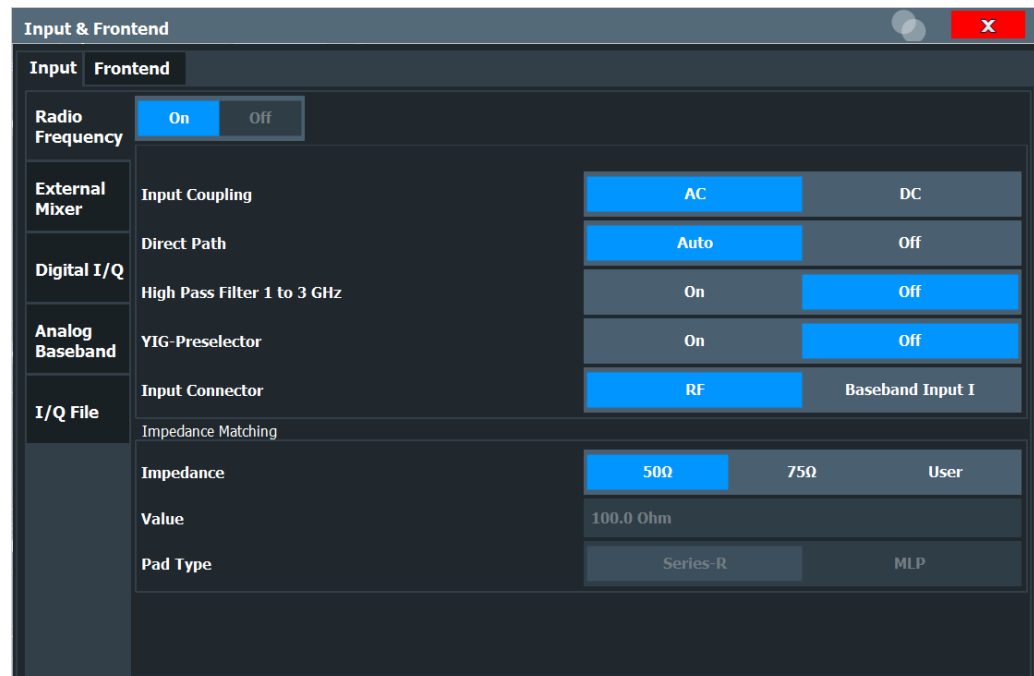



RF Input Protection

The RF input connector of the FSW must be protected against signal levels that exceed the ranges specified in the specifications document. Therefore, the FSW is equipped with an overload protection mechanism for DC and signal frequencies up to 30 MHz. This mechanism becomes active as soon as the power at the input mixer exceeds the specified limit. It ensures that the connection between RF input and input mixer is cut off.


When the overload protection is activated, an error message is displayed in the status bar ("INPUT OVLD"), and a message box informs you that the RF input was disconnected. Furthermore, a status bit (bit 3) in the `STAT:QUES:POW` status register is set. In this case, you must decrease the level at the RF input connector and then close the message box. Then measurement is possible again. Reactivating the RF input is also possible via the remote command `INPut:ATTenuation:PROTection:RESet`.

| | |
|---|-----|
| Radio Frequency State | 206 |
| Input Coupling | 206 |
| Direct Path | 207 |
| High Pass Filter 1 to 3 GHz | 207 |
| YIG-Preselector | 207 |
| Input Connector | 208 |
| Impedance | 208 |

Radio Frequency State

Activates input from the "RF Input" connector.

 For FSW85 models with two input connectors, you must define which input source is used for each measurement channel.

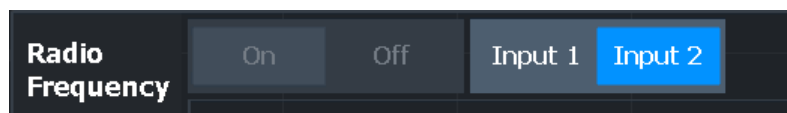

If an external frontend is active, select the connector the external frontend is connected to. You cannot use the other RF input connector simultaneously for the same channel. However, you can configure the use of the other RF input connector for another active channel at the same time.

"Input 1" 1.00 mm RF input connector for frequencies up to 85 GHz (90 GHz with option R&S FSW-B90G)

"Input 2" 1.85 mm RF input connector for frequencies up to 67 GHz

Remote command:

`INPut:SElect` on page 393

`INPut:TYPE` on page 394

Input Coupling

The RF input of the FSW can be coupled by alternating current (AC) or direct current (DC).

For an active external frontend, input coupling is always DC.

Not available for input from the optional "Analog Baseband" interface.

Not available for input from the optional "Digital Baseband" interface.

AC coupling blocks any DC voltage from the input signal. AC coupling is activated by default to prevent damage to the instrument. Very low frequencies in the input signal can be distorted.

However, some specifications require DC coupling. In this case, you must protect the instrument from damaging DC input voltages manually. For details, refer to the specifications document.

Remote command:

[INPut:COUPling](#) on page 390

Direct Path

Enables or disables the use of the direct path for small frequencies.

In spectrum analyzers, passive analog mixers are used for the first conversion of the input signal. In such mixers, the LO signal is coupled into the IF path due to its limited isolation. The coupled LO signal becomes visible at the RF frequency 0 Hz. This effect is referred to as LO feedthrough.

To avoid the LO feedthrough the spectrum analyzer provides an alternative signal path to the A/D converter, referred to as the *direct path*. By default, the direct path is selected automatically for RF frequencies close to zero. However, this behavior can be disabled. If "Direct Path" is set to "Off", the spectrum analyzer always uses the analog mixer path.

For an active external frontend, the direct path is always used automatically for frequencies close to zero.

"Auto" (Default) The direct path is used automatically for frequencies close to zero.

"Off" The analog mixer path is always used.

Remote command:

[INPut:DPATH](#) on page 391

High Pass Filter 1 to 3 GHz

Activates an additional internal highpass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the analyzer to measure the harmonics for a DUT, for example.

This function requires an additional hardware option.

Note: For RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG-preselector, if available.)

Remote command:

[INPut:FILTer:HPASs\[:STATe\]](#) on page 391

YIG-Preselector

Enables or disables the YIG-preselector.

This setting requires an additional option on the FSW.

An internal YIG-preselector at the input of the FSW ensures that image frequencies are rejected. However, image rejection is only possible for a restricted bandwidth. To use the maximum bandwidth for signal analysis you can disable the YIG-preselector at the input of the FSW, which can lead to image-frequency display.

Note: Note that the YIG-preselector is active only on frequencies greater than 8 GHz. Therefore, switching the YIG-preselector on or off has no effect if the frequency is below that value.

To use the optional 90 GHz frequency extension (FSW-B90G), the YIG-preselector must be disabled.

Note:

For the following measurements, the YIG-"Preselector" is off by default (if available).

- I/Q Analyzer
- All secondary applications in MSRA operating mode
- Real-time (and thus in all secondary applications in MSRT operating mode)
- Multicarrier "Group Delay"
- GSM
- VSA
- OFDM VSA

Remote command:

[INPut:FiLTeR:YIG\[:STATe\]](#) on page 392

Input Connector

Determines which connector the input data for the measurement is taken from.

For more information on the optional "Analog Baseband" interface, see the FSW I/Q Analyzer and I/Q Input user manual.

| | |
|--------------------|--|
| "RF" | (Default:) The "RF Input" connector |
| "RF Probe" | The "RF Input" connector with an adapter for a modular probe This setting is only available if a probe is connected to the "RF Input" connector. It is not available for an active external frontend. |
| "Baseband Input I" | The optional "Baseband Input I" connector This setting is only available if the optional "Analog Baseband" interface is installed and active for input. It is not available for the FSW67. For FSW85 models with two input connectors, this setting is only available for "Input 1". |

Remote command:

[INPut:CONNeCtor](#) on page 459

Impedance

The FSW has an internal impedance of 50 Ω. However, some applications use other impedance values. To match the impedance of an external application to the impedance of the FSW, an *impedance matching pad* can be inserted at the input. If the type and impedance value of the used matching pad is known to the FSW, it can convert the measured units accordingly so that the results are calculated correctly.

For an active external frontend, impedance is always 50 Ω.

This function is not available for input from the optional "Digital Baseband" interface. Not all settings are supported by all FSW applications.

The impedance conversion does not affect the level of the output signals (such as IF, video, demod, digital I/Q output).

| | |
|--------|--|
| "50Ω" | (Default:) no conversion takes place |
| "75Ω" | The 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the selected "Pad Type": "Series-R" (default) or "MLP" (Minimum Loss Pad) |
| "User" | The 50 Ω input impedance is transformed to a user-defined impedance value according to the selected "Pad Type": "Series-R" (default) or "MLP" (Minimum Loss Pad) |

Remote command:

[INPut : IMPedance](#) on page 392

[INPut : IMPedance : PTYPe](#) on page 392

For Analog Baseband input:


[INPut : IQ : IMPedance](#) on page 437

[INPut : IQ : IMPedance : PTYPe](#) on page 437

5.4.1.2 Settings for input from I/Q data files

Access: "Overview" > "Input/Frontend" > "Input Source" > "I/Q File"

Or: [INPUT/OUTPUT] > "Input Source Config" > "Input Source" > "I/Q File"

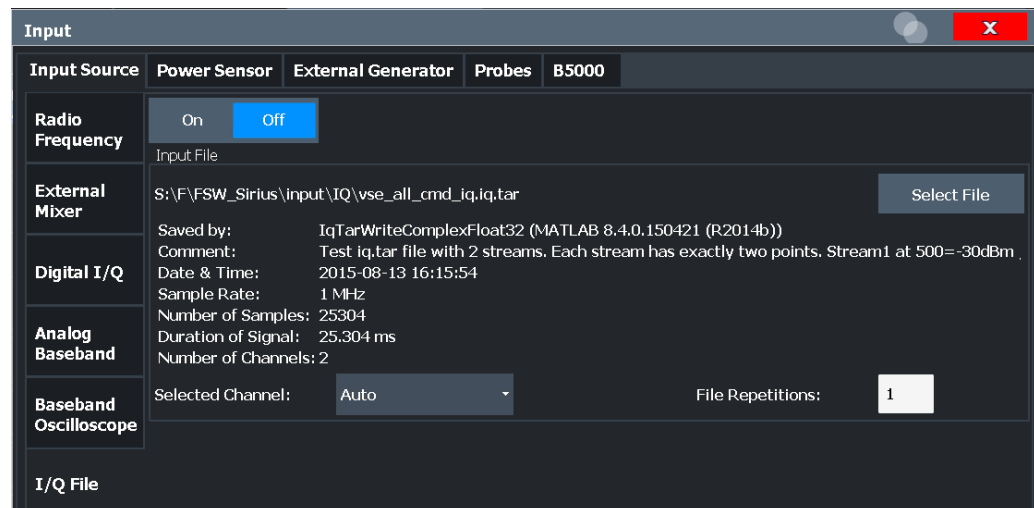

| | |
|--|-----|
| I/Q Input File State | 209 |
| Select I/Q data file | 210 |
| File Repetitions | 210 |

I/Q Input File State

Enables input from the selected I/Q input file.

If enabled, the application performs measurements on the data from this file. Thus, most measurement settings related to data acquisition (attenuation, center frequency, measurement bandwidth, sample rate) cannot be changed. The measurement time can only be decreased to perform measurements on an extract of the available data only.

Note: Even when the file input is disabled, the input file remains selected and can be enabled again quickly by changing the state.

Remote command:

[INPut:SElect](#) on page 393

Select I/Q data file

Opens a file selection dialog box to select an input file that contains I/Q data.

The I/Q data file must be in one of the following supported formats:

- .iq.tar
- .iqw
- .csv
- .mat
- .wv
- .aid

For details on formats, see the FSW I/Q Analyzer and I/Q Input user manual.

The file type is determined by the file extension. If no file extension is provided, the file type is assumed to be .iq.tar. For .mat files, Matlab® v4 is assumed.

Note: Only a single data stream or channel can be used as input, even if multiple streams or channels are stored in the file.

Note: For some file formats that do not provide the sample rate and measurement time or record length, you must define these parameters manually. Otherwise the traces are not visible in the result displays.

The default storage location for I/Q data files is C:\R_S\INSTR\USER.

Remote command:

[INPut:FILE:PATH](#) on page 394

File Repetitions

Determines how often the data stream is repeatedly copied in the I/Q data memory to create a longer record. If the available memory is not sufficient for the specified number of repetitions, the largest possible number of complete data streams is used.

Remote command:

[TRACe:IQ:FILE:REPetition:COUNT](#) on page 396


5.4.2 Output settings

Access: [INPUT/OUTPUT] > "OUTPUT Config"

The R&S FSW VSA application can provide output to special connectors for other devices.

For details on connectors, refer to the FSW Getting Started manual, "Front / Rear Panel View" chapters.

Output settings can be configured via [Input/Output] or in the "Outputs" dialog box.

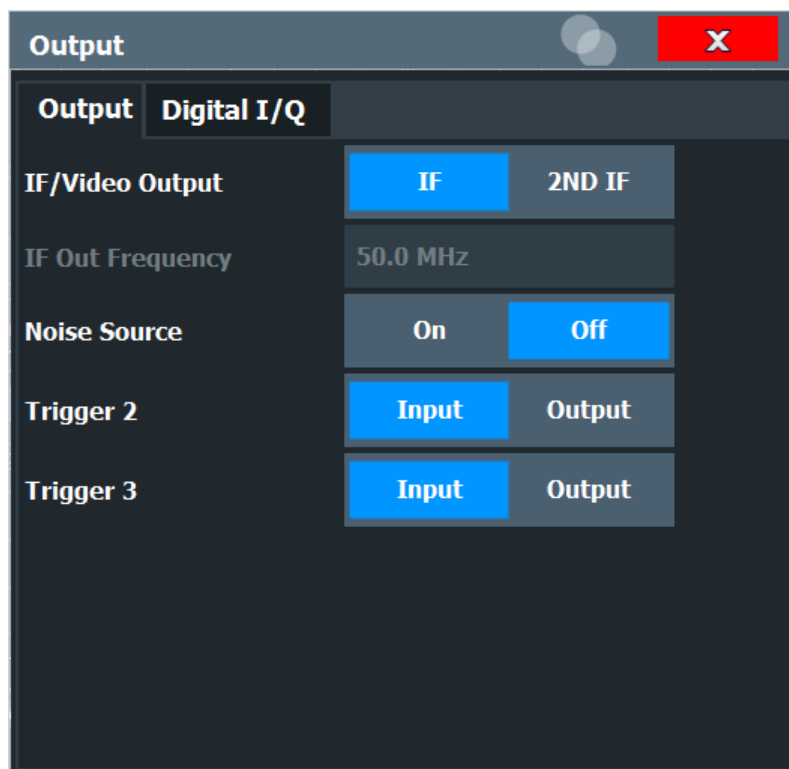

Data Output..... 211

Noise Source Control..... 212

Trigger 2/3..... 213

 L Output Type..... 213

 L Level..... 214

 L Pulse Length..... 214

 L Send Trigger..... 214

Data Output

Defines the type of signal available at one of the output connectors of the FSW.

For restrictions and additional information, see the FSW I/Q Analyzer and I/Q Input User Manual.

"IF" The measured IF value is provided at the IF/VIDEO/DEMODO output connector.
 For bandwidths up to 80 MHz, the IF output is provided at the specified "IF Out Frequency".
 If an optional bandwidth extension FSW-B160/-B320/-B512 is used, the measured IF value is available at the "IF WIDE OUTPUT" connector. The frequency at which this value is output is determined automatically. It is displayed as the "IF Wide Out Frequency". For details on the used frequencies, see the specifications document. This setting is not available for bandwidths larger than 512 MHz.

| | |
|----------|---|
| "2ND IF" | <p>The measured IF value is provided at the "IF OUT 2 GHz/ IF OUT 5 GHz" output connector, if available, at a frequency of 2 GHz and with a bandwidth of 2 GHz. The availability of this connector depends on the instrument model.</p> <p>This setting is not available if the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000) is active.</p> |
| "Video" | <p>The displayed video signal (i.e. the filtered and detected IF signal, 200mV) is available at the IF/VIDEO/DEMODO output connector.</p> <p>This setting is required to provide demodulated audio frequencies at the output. It is not available for frequency sweeps or I/Q measurements.</p> <p>The video output is a signal of 1 V. It can be used, for example, to control demodulated audio frequencies.</p> |

Remote command:

`OUTPut:IF[:SOURce]` on page 451

Noise Source Control

Enables or disables the 28 V voltage supply for an external noise source connected to the "Noise source control / Power sensor") connector. By switching the supply voltage for an external noise source on or off in the firmware, you can enable or disable the device as required.

External noise sources are useful when you are measuring power levels that fall below the noise floor of the FSW itself, for example when measuring the noise level of an amplifier.

In this case, you can first connect an external noise source (whose noise power level is known in advance) to the FSW and measure the total noise power. From this value, you can determine the noise power of the FSW. Then when you measure the power level of the actual DUT, you can deduct the known noise level from the total power to obtain the power level of the DUT.

Remote command:

`DIAGnostic:SERVice:NSource` on page 450

Trigger 2/3

The trigger input and output functionality depends on how the variable "Trigger Input/Output" connectors are used.

Note: Providing trigger signals as output is described in detail in the FSW User Manual.

| | |
|-------------|--|
| "Trigger 1" | "Trigger 1" is input only. |
| "Trigger 2" | Defines the usage of the variable "Trigger Input/Output" connector on the front panel (not available for FSW85 models with 2 RF input connectors) |
| "Trigger 3" | Defines the usage of the variable "Trigger 3 Input/Output" connector on the rear panel |
| "Input" | The signal at the connector is used as an external trigger source by the FSW. Trigger input parameters are available in the "Trigger" dialog box. |
| "Output" | The FSW sends a trigger signal to the output connector to be used by connected devices. Further trigger parameters are available for the connector. |

Remote command:

[OUTPut:TRIGger<tp>:DIRection](#) on page 453

Output Type ← Trigger 2/3

Type of signal to be sent to the output

| | |
|--------------------|--|
| "Device Triggered" | (Default) Sends a trigger when the FSW triggers. |
| "Trigger Armed" | Sends a (high level) trigger when the FSW is in "Ready for trigger" state. This state is indicated by a status bit in the <code>STATUS:OPERation</code> register (bit 5), as well as by a low-level signal at the "AUX" port (pin 9). |
| "User Defined" | Sends a trigger when you select "Send Trigger". In this case, further parameters are available for the output signal. |


Remote command:

[OUTPut:TRIGger<tp>:OTYPe](#) on page 454

Level ← Output Type ← Trigger 2/3

Defines whether a high (1) or low (0) constant signal is sent to the trigger output connector (for "Output Type": "User Defined").

The trigger pulse level is always opposite to the constant signal level defined here. For example, for "Level" = "High", a constant high signal is output to the connector until you select the [Send Trigger](#) function. Then, a low pulse is provided.

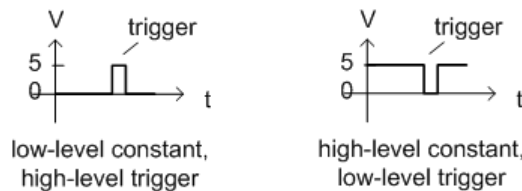

Remote command:

[OUTPut:TRIGger<tp>:LEVel](#) on page 453

Pulse Length ← Output Type ← Trigger 2/3

Defines the duration of the pulse (pulse width) sent as a trigger to the output connector.

Remote command:

[OUTPut:TRIGger<tp>:PULSe:LENGth](#) on page 454

Send Trigger ← Output Type ← Trigger 2/3

Sends a user-defined trigger to the output connector immediately.

Note that the trigger pulse level is always opposite to the constant signal level defined by the output [Level](#) setting. For example, for "Level" = "High", a constant high signal is output to the connector until you select the "Send Trigger" function. Then, a low pulse is sent.

Which pulse level is sent is indicated by a graphic on the button.

Remote command:

[OUTPut:TRIGger<tp>:PULSe:IMMediate](#) on page 454

5.4.3 Digital I/Q output settings


Access: "Overview" > "Output" > "Digital I/Q" tab

The optional "Digital Baseband" interface allows you to output I/Q data from any FSW application that processes I/Q data to an external device.

These settings are only available if the "Digital Baseband" interface option is installed on the FSW.



Digital I/Q output is available with bandwidth extension option FSW-B512, but not with R&S FSW-B512R (Real-Time).

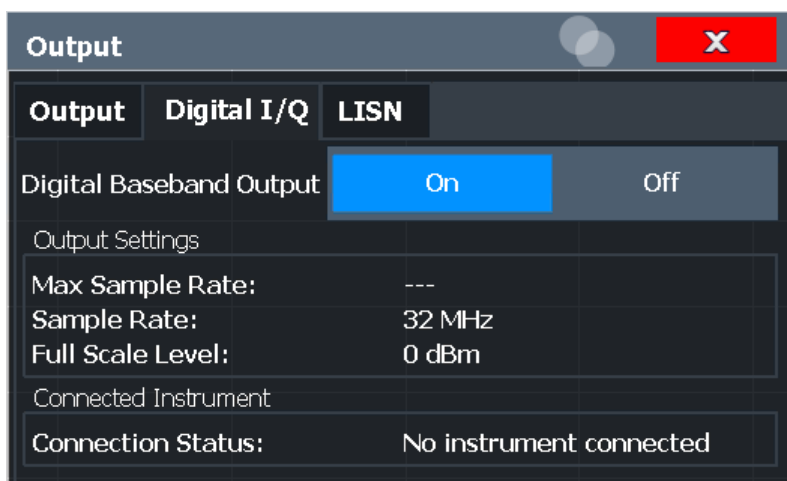

For details on digital I/Q output, see the FSW I/Q Analyzer User Manual.

| | |
|---|-----|
| Digital Baseband Output | 215 |
| Output Settings Information | 215 |
| Connected Instrument | 215 |

Digital Baseband Output

Enables or disables a digital output stream to the optional "Digital Baseband" interface, if available.

Note: If digital baseband output is active, the sample rate is restricted to 200 MHz (max. 160 MHz bandwidth).

The only data source that can be used for digital baseband output is RF input.

For details on digital I/Q output, see the FSW I/Q Analyzer User Manual.

Remote command:

`OUTPut:DIQ[:STATe]` on page 434

Output Settings Information

Displays information on the settings for output via the optional "Digital Baseband" interface.

The following information is displayed:

- Maximum sample rate that can be used to transfer data via the "Digital Baseband" interface (i.e. the maximum input sample rate that can be processed by the connected instrument)
- Sample rate currently used to transfer data via the "Digital Baseband" interface
- Level and unit that corresponds to an I/Q sample with the magnitude "1"

Remote command:

`OUTPut<up>:DIQ:CDEvice?` on page 434

Connected Instrument

Displays information on the instrument connected to the optional "Digital Baseband" interface, if available.

If an instrument is connected, the following information is displayed:

- Name and serial number of the instrument connected to the "Digital Baseband" interface
- Used port

Remote command:

[OUTPut<up>:DIQ:CDEvice?](#) on page 434


5.4.4 Digital I/Q 40G output settings

Access: "Overview" > "Output" > "Digital I/Q 40G" tab

The optional Digital I/Q 40G Streaming Output interface (FSW-B517/-B1017) allows you to output I/Q data to an external device at very high sample rates.

These settings are only available if one of the Digital I/Q 40G Streaming Output options is installed on the FSW.

For details see the FSW I/Q Analyzer and I/Q Input User Manual.

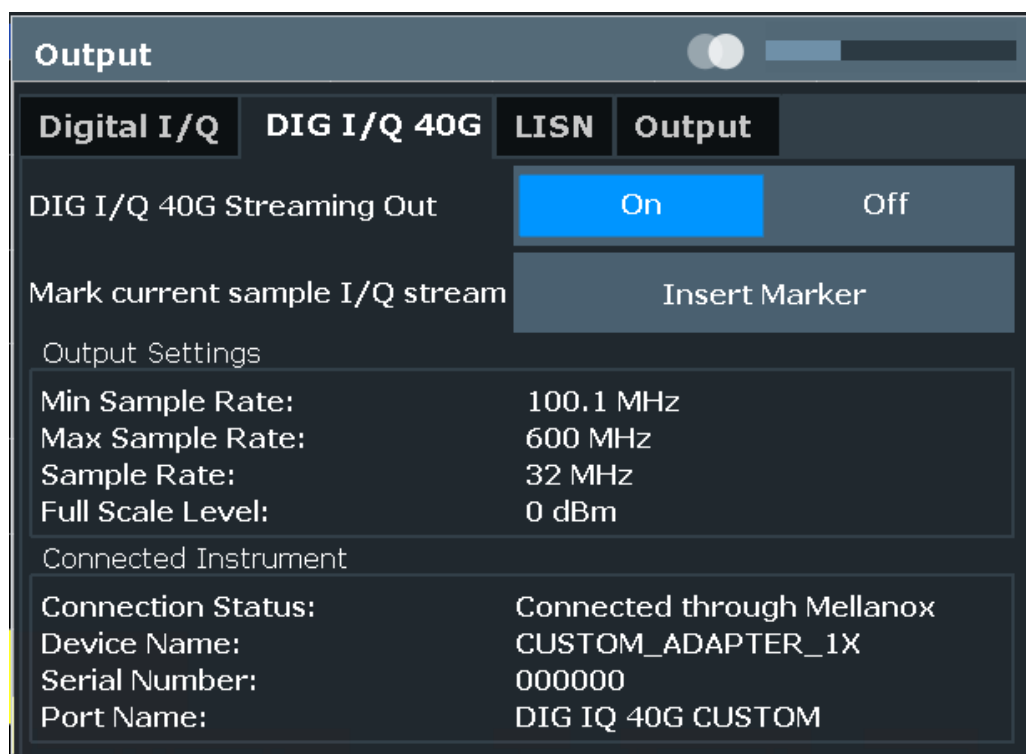

| | |
|---|-----|
| Digital I/Q 40G Streaming Out | 216 |
| Insert Marker | 217 |
| Output Settings Information | 217 |
| Connected Instrument | 217 |

Digital I/Q 40G Streaming Out

Enables or disables a digital output stream to the optional Digital I/Q 40G Streaming Output connector, if available.

Remote command:

[OUTPut: IQHS\[:STATe\]](#) on page 452

Insert Marker

Inserts marker information to the data stream during a running I/Q data output recording. Useful to mark a specific event during the measurement that you detect in the result window, for example. Then you can search for the marker information in the output data to analyze the effects at that time.

Tip: The "I/Q 40G Recording" window also provides an "Insert Marker" button that remains visible throughout the measurement, without having to open a dialog box. Thus, you can insert a marker at any time during the measurement.

For more information, see the FSW I/Q Analyzer and I/Q Input User Manual.

Remote command:

[OUTPut: IQHS:MARKer](#) on page 452

Output Settings Information

Displays information on the settings for output via the Digital I/Q 40G Streaming Output option (FSW-B517/-B1017).

The following information is displayed:

- Minimum sample rate that can be used to transfer data via the Digital I/Q 40G Streaming Output interface
- Maximum sample rate that can be used to transfer data via the Digital I/Q 40G Streaming Output interface (i.e. the maximum input sample rate that can be processed by the connected instrument)
- Sample rate currently used to transfer data via the Digital I/Q 40G Streaming Output interface
- Level and unit that corresponds to an I/Q sample with the magnitude "1" (Full scale level)

Remote command:

[OUTPut: IQHS:SRATe?](#) on page 452

Connected Instrument

Displays information on the instrument connected to the Digital I/Q 40G Streaming Output connector, if available.

If an instrument is connected, the following information is displayed:

- Name and serial number of the instrument connected to the QSFP+ connector
- Used port

Remote command:

[OUTPut: IQHS:CDEvice?](#) on page 451

5.4.5 Frequency settings

Access: [FREQ] > "Frequency Config"

| | |
|--------------------------------|-----|
| Center Frequency..... | 218 |
| Center Frequency Stepsize..... | 218 |
| Frequency Offset..... | 218 |

Center Frequency

Defines the center frequency of the signal in Hertz.

The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\max} - \text{span}_{\min}/2$$

f_{\max} and span_{\min} depend on the instrument and are specified in the specifications document.

Remote command:

[SENSe:] FREQuency:CENTer on page 455

Center Frequency Stepsize

Defines the step size when scrolling through center frequency values. The step size can be set to a predefined value, or it can be manually set to a user-defined value.

"Auto" The step size is set to the default value:

- using the rotary knob: 100 kHz
- using the arrow keys: 1 MHz

"Manual" Defines a user-defined step size for the center frequency. Enter the step size in the "Value" field.

Remote command:

[SENSe:] FREQuency:CENTer:STEP:AUTO on page 456

[SENSe:] FREQuency:CENTer:STEP on page 455

Frequency Offset

Shifts the displayed frequency range along the x-axis by the defined offset.

This parameter has no effect on the instrument's hardware, on the captured data, or on data processing. It is simply a manipulation of the final results in which absolute frequency values are displayed. Thus, the x-axis of a spectrum display is shifted by a constant offset if it shows absolute frequencies. However, if it shows frequencies relative to the signal's center frequency, it is not shifted.

A frequency offset can be used to correct the display of a signal that is slightly distorted by the measurement setup, for example.

The allowed values range from -1 THz to 1 THz. The default setting is 0 Hz.

Note: In MSRA/MSRT mode, this function is only available for the MSRA/MSRT primary.

Remote command:

[SENSe:] FREQuency: OFFSet on page 456

5.4.6 Amplitude and vertical axis configuration

Access: [AMPT] > "Amplitude Config"

Amplitude and scaling settings allow you to configure the vertical (y-) axis display and for some result displays also the horizontal (x-) axis.



Amplitude settings for analog baseband input

Amplitude settings for analog baseband input are described in the FSW I/Q Analyzer and I/Q Input User Manual.

- [Amplitude settings](#).....219
- [Scaling](#)..... 225
- [Units](#).....229

5.4.6.1 Amplitude settings

Access: [AMPT] > "Amplitude Config"

Amplitude settings affect the signal power or error levels.



Note that amplitude settings are not window-specific, as opposed to the scaling and unit settings.

| | |
|---|-----|
| Reference Level..... | 220 |
| └ Shifting the Display (Offset)..... | 221 |
| └ Unit..... | 221 |
| └ Setting the Reference Level Automatically (Auto Level)..... | 221 |
| Input Settings..... | 222 |
| └ Preamplifier..... | 222 |
| └ Input Coupling..... | 222 |
| Impedance..... | 223 |
| RF Attenuation..... | 223 |
| └ Attenuation Mode / Value..... | 223 |
| Optimization..... | 224 |
| Signal Path..... | 224 |
| Using Electronic Attenuation..... | 225 |

Reference Level

The reference level can also be used to scale power diagrams; the reference level is then used for the calculation of the maximum on the y-axis.

Since the hardware of the FSW is adapted according to this value, it is recommended that you set the reference level close above the expected maximum signal level. Thus you ensure an optimal measurement (no compression, good signal-to-noise ratio).

Note that for input from the External Mixer (R&S FSW-B21) the maximum reference level also depends on the conversion loss; see the FSW base unit user manual for details.

For an active external frontend, the reference level refers to the RF input at the external frontend, not the levels at the RF input of the FSW. The hardware is adjusted to the defined reference level optimally for input signals with a crest factor of 10 dB. Thus, the required reference level for an optimal measurement can differ depending on the crest factor of the input signal.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel`
on page 457

Shifting the Display (Offset) ← Reference Level

Defines an arithmetic level offset. This offset is added to the measured level. In some result displays, the scaling of the y-axis is changed accordingly.

Define an offset if the signal is attenuated or amplified before it is fed into the FSW so the application shows correct power results. All displayed power level results are shifted by this value.

The setting range is ± 200 dB in 0.01 dB steps.

Note, however, that the *internal* reference level (used to adjust the hardware settings to the expected signal) ignores any "Reference Level Offset". Thus, it is important to keep in mind the actual power level the FSW must handle. Do not rely on the displayed reference level (internal reference level = displayed reference level - offset).

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 458

Unit ← Reference Level

The FSW measures the signal voltage at the RF input.

In the default state, the level is displayed at a power level of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω , see "[Impedance](#)" on page 208), conversion to other units is possible.

The following units are available and directly convertible:

- dBm
- dBmV
- dB μ V

Remote command:

`INPut:IMPedance` on page 392
`CALCulate<n>:UNIT:POWer` on page 457

Setting the Reference Level Automatically (Auto Level) ← Reference Level

Automatically determines a reference level which ensures that no overload occurs at the FSW for the current input data. At the same time, the internal attenuators and the preamplifier (for analog baseband input: the full-scale level) are adjusted. As a result, the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the FSW.

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

When using the optional 2 GHz / 5 GHz bandwidth extension (B2000/B5000) or the optional Oscilloscope Baseband Input, the level measurement is performed on the connected oscilloscope. For B2000/B5000, y-axis scaling on the oscilloscope is limited to a minimum of 5 mV per division.

You can change the measurement time for the level measurement if necessary (see "Changing the Automatic Measurement Time (Meas Time Manual)" on page 267).

Remote command:

[SENSe:]ADJust:LEVel on page 508

Input Settings

Some input settings affect the measured amplitude of the signal, as well.

For information on other input settings, see [Chapter 5.4.1, "Input settings"](#), on page 204.

Preamplifier ← Input Settings

If the (optional) internal preamplifier hardware is installed on the FSW, a preamplifier can be activated for the RF input signal.

You can use a preamplifier to analyze signals from DUTs with low output power.

Note: If an optional external preamplifier is activated, the internal preamplifier is automatically disabled, and vice versa.

For an active external frontend, a preamplifier is not available.

This function is not available for input from the (optional) "Digital Baseband" interface.

For all FSW models except for FSW85, the following settings are available:

| | |
|---------|--|
| "Off" | Deactivates the preamplifier. |
| "15 dB" | The RF input signal is amplified by about 15 dB. |
| "30 dB" | The RF input signal is amplified by about 30 dB. |

For FSW85 models, the input signal is amplified by 30 dB if the preamplifier is activated.

Remote command:

INPut:GAIN:STATe on page 460

INPut:GAIN[:VALue] on page 460

Input Coupling ← Input Settings

The RF input of the FSW can be coupled by alternating current (AC) or direct current (DC).

For an active external frontend, input coupling is always DC.

Not available for input from the optional "Analog Baseband" interface.

Not available for input from the optional "Digital Baseband" interface.

AC coupling blocks any DC voltage from the input signal. AC coupling is activated by default to prevent damage to the instrument. Very low frequencies in the input signal can be distorted.

However, some specifications require DC coupling. In this case, you must protect the instrument from damaging DC input voltages manually. For details, refer to the specifications document.

Remote command:

[INPut:COUPling](#) on page 390

Impedance

The FSW has an internal impedance of 50 Ω . However, some applications use other impedance values. To match the impedance of an external application to the impedance of the FSW, an *impedance matching pad* can be inserted at the input. If the type and impedance value of the used matching pad is known to the FSW, it can convert the measured units accordingly so that the results are calculated correctly.

For an active external frontend, impedance is always 50 Ω .

This function is not available for input from the optional "Digital Baseband" interface. Not all settings are supported by all FSW applications.

The impedance conversion does not affect the level of the output signals (such as IF, video, demod, digital I/Q output).

| | |
|----------------|---|
| "50 Ω " | (Default:) no conversion takes place |
| "75 Ω " | The 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the selected "Pad Type": "Series-R" (default) or "MLP" (Minimum Loss Pad) |
| "User" | The 50 Ω input impedance is transformed to a user-defined impedance value according to the selected "Pad Type": "Series-R" (default) or "MLP" (Minimum Loss Pad) |

Remote command:

[INPut:IMPedance](#) on page 392

[INPut:IMPedance:PTYPe](#) on page 392

For Analog Baseband input:

[INPut:IQ:IMPedance](#) on page 437

[INPut:IQ:IMPedance:PTYPe](#) on page 437

RF Attenuation

Defines the mechanical attenuation for RF input.

This function is not available for input from the optional "Digital Baseband" interface.

Attenuation Mode / Value ← RF Attenuation

Defines the attenuation applied to the RF input of the FSW.

This function is not available for input from the optional "Digital Baseband" interface.

The RF attenuation can be set automatically as a function of the selected reference level (Auto mode). Automatic attenuation ensures that no overload occurs at the RF Input connector for the current reference level. It is the default setting.

Note: Using an external frontend. If an external frontend is active, you can configure the attenuation for the external frontend and the analyzer separately. When using an external frontend, only mechanical attenuation is available.

For more information, see the FSW User Manual.

By default and when no (optional) [electronic attenuation](#) is available, mechanical attenuation is applied.

This function is not available for input from the optional **"Digital Baseband" interface**.

In "Manual" mode, you can set the RF attenuation in 1 dB steps (down to 0 dB). Other entries are rounded to the next integer value. The range is specified in the specifications document. If the defined reference level cannot be set for the defined RF attenuation, the reference level is adjusted accordingly and the warning "limit reached" is displayed.

NOTICE! Risk of hardware damage due to high power levels. When decreasing the attenuation manually, ensure that the power level does not exceed the maximum level allowed at the RF input, as an overload can lead to hardware damage.

Remote command:

[INPut:ATTenuation](#) on page 461

[INPut:ATTenuation:AUTO](#) on page 461

Defining attenuation for the analyzer when using an external frontend:

[INPut:SANalyzer:ATTenuation:AUTO](#) on page 463

[INPut:SANalyzer:ATTenuation](#) on page 463

Optimization

Selects the priority for signal processing *after* the RF attenuation has been applied.

This function is only available under the following conditions:

- One of the following options that provide a separate wideband processing path in the FSW is installed:
 - Bandwidth extension R&S FSW-B160/-B320 Extension Board 1, Revision 2 or higher
 - Bandwidth extension R&S FSW-B512, B1200, B2001, B4001, B6001, or B8001
 - Real-time option R&S FSW-B160R
(Currently not supported for K161R, B512R and B800R/K800RE)
- An I/Q bandwidth that requires the wideband path is used.
- The optional "Digital Baseband" interface is not active.

"Low distortion"

(Default:) Optimized for low distortion by avoiding intermodulation

"Low noise"

Optimized for high sensitivity and low noise levels

If this setting is selected, "Low noise" is indicated in the channel information bar.

Remote command:

[INPut:ATTenuation:AUTO:MODE](#) on page 458

Signal Path

Selects the signal path for signal processing.

"Narrowband" (Default:) The narrowband signal path is used.

"Wideband" The wideband signal path is used. With this setting, the dynamic range for EVM measurements is increased.

This function is only available under the following conditions:

- Instrument models FSW50/67/85
- One of the following bandwidth extension options is installed:
 - R&S FSW-B1200
 - R&S FSW-B2001
 - R&S FSW-B800R
- An I/Q bandwidth between 80 MHz and 512 MHz is used.
- The center frequency is higher than 43.5 GHz.
- The optional "Digital Baseband" interface is not active.

Remote command:

[\[SENSe:\] IQ:WBANd](#) on page 464

Using Electronic Attenuation

If the (optional) Electronic Attenuation hardware is installed on the FSW, you can also activate an electronic attenuator.

In "Auto" mode, the settings are defined automatically; in "Manual" mode, you can define the mechanical and electronic attenuation separately.

For an active external frontend, electronic attenuation is not available.

This function is not available for input from the optional "Digital Baseband" interface.

Note: Electronic attenuation is not available for stop frequencies (or center frequencies in zero span) above 15 GHz.

In "Auto" mode, RF attenuation is provided by the electronic attenuator as much as possible to reduce the amount of mechanical switching required. Mechanical attenuation can provide a better signal-to-noise ratio, however.

When you switch off electronic attenuation, the RF attenuation is automatically set to the same mode (auto/manual) as the electronic attenuation was set to. Thus, the RF attenuation can be set to automatic mode, and the full attenuation is provided by the mechanical attenuator, if possible.

The electronic attenuation can be varied in 1 dB steps. If the electronic attenuation is on, the mechanical attenuation can be varied in 5 dB steps. Other entries are rounded to the next lower integer value.

For the FSW85, the mechanical attenuation can be varied only in 10 dB steps.

If the defined reference level cannot be set for the given attenuation, the reference level is adjusted accordingly and the warning "limit reached" is displayed in the status bar.

Remote command:

[INPut:EATT:STATe](#) on page 463

[INPut:EATT:AUTO](#) on page 462

[INPut:EATT](#) on page 462

5.4.6.2 Scaling

Access: [AMPT] > "Scale Config"

Depending on the type of display (time, spectrum or statistics), various scaling functions are available to adapt the result display to the current data.



Note that scaling settings are window-specific, as opposed to the amplitude settings.

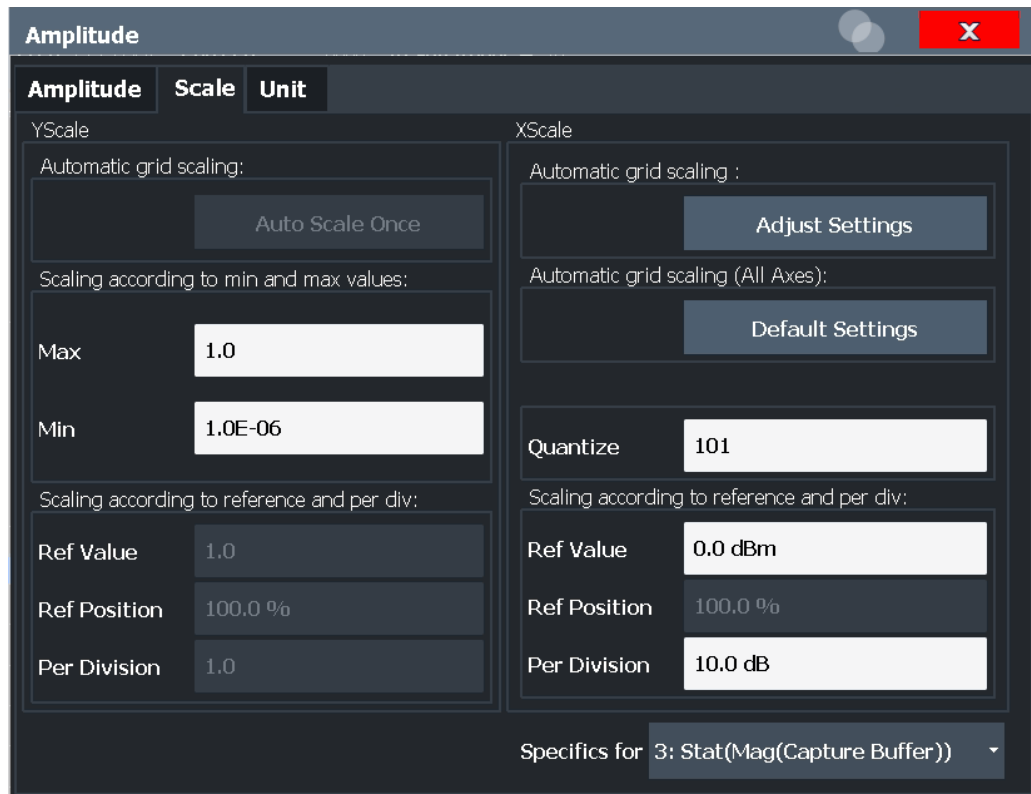


Figure 5-2: Scaling settings for statistical evaluation

For details on the different methods to configure the scaling see [Chapter 8.3.1, "How to change the display scaling"](#), on page 307.

A visualization of the diagram scaling with the current settings is displayed at the right side of the dialog box.

| | |
|---|-----|
| Auto Scale Once/Auto Scale Window | 227 |
| Defining Min and Max Values | 227 |
| Configuring a Reference Point and Divisions | 227 |
| L Y-Axis Reference Value | 227 |
| L Y-Axis Reference Position | 227 |
| L Range per Division | 228 |
| X-Axis Scaling | 228 |
| L Adjust Settings | 228 |
| L Default Settings | 228 |
| L Quantize | 228 |

| | |
|----------------------------------|-----|
| └ X-Axis Reference Value..... | 228 |
| └ X-Axis Reference Position..... | 228 |
| └ Range per Division..... | 229 |

Auto Scale Once/Auto Scale Window

If enabled, both the x-axis and y-axis are automatically adapted to the current measurement results (only once, not dynamically) in the selected window.

To adapt the range of all screens together, use the [Auto Scale All](#) function.

Remote command:

For statistics (result type transformation): `CALCulate<n>:STATistics:SCALE:AUTO ONCE` on page 465

For all other results: `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:AUTO ONCE` on page 505

Defining Min and Max Values

Indicates the current range borders according to the current settings (for information only).

For statistical evaluations only: defines the displayed range using minimum and maximum values.

Values in the range $1e^{-9} < value < 0.1$ are allowed. The y-axis unit is defined via the "[Y-Axis Unit](#)" on page 229 setting. The distance between max and min value must be at least one decade.

Remote command:

`CALCulate<n>:STATistics:SCALE:Y:UPPer` on page 466

`CALCulate<n>:STATistics:SCALE:Y:LOWer` on page 466

Configuring a Reference Point and Divisions

Defines the displayed range using a reference point and the size of the divisions.

For details on the different methods to configure the scaling see [Chapter 8.3.1, "How to change the display scaling"](#), on page 307.

Y-Axis Reference Value ← Configuring a Reference Point and Divisions

Defines a reference value on the y-axis in the current unit. The y-axis is adapted so that the reference value is displayed at the "[Y-Axis Reference Position](#)" on page 227.

For details on the different methods to configure the scaling see [Chapter 8.3.1, "How to change the display scaling"](#), on page 307.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:RVALue` on page 470

Y-Axis Reference Position ← Configuring a Reference Point and Divisions

Defines the position of the [Y-Axis Reference Value](#) on the y-axis. The position is defined as a percentage value, where 0 % refers to the bottom edge, 100 % refers to the top edge of the screen. The y-axis is adapted so that the reference value is displayed at the reference position.

For details on the different methods to configure the scaling see [Chapter 8.3.1, "How to change the display scaling"](#), on page 307.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition`
on page 469

Range per Division ← Configuring a Reference Point and Divisions

Defines the value range to be displayed per division. Since the display consists of 10 divisions by default, the displayed range is:

$$\text{Range} = 10 * \langle \text{Range per Division} \rangle$$

Note: If fewer divisions are displayed (e.g. because the window is reduced in height), the range per division is increased to display the same result range in the smaller window. In this case, the per division value does not correspond to the actual display.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision`
on page 469

X-Axis Scaling

For statistics, a histogram is displayed. For these diagrams, the x-axis can be configured, as well.

Adjust Settings ← X-Axis Scaling

Adjusts the x-axis scaling to the occurring statistical values.

Remote command:

`CALCulate<n>:STATistics:SCALE:AUTO ONCE` on page 465

Default Settings ← X-Axis Scaling

Resets the x- and y-axis scalings to their preset values for the current measurement window.

Remote command:

`CALCulate<n>:STATistics:PRESet` on page 465

Quantize ← X-Axis Scaling

Defines the number of bars to be displayed in the graph, i.e. the granularity of classifications.

Remote command:

`CALCulate<n>:STATistics:SCALE:X:BCOunt` on page 465

X-Axis Reference Value ← X-Axis Scaling

Defines a reference value on the x-axis in the current unit.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:RVALue` on page 468

X-Axis Reference Position ← X-Axis Scaling

Defines the position of the [X-Axis Reference Value](#) on the x-axis. The position is defined as a percentage value, where 0 % refers to the beginning (left side), 100 % refers to the end (right side) of the diagram. The x-axis is adapted so that the reference value is displayed at the reference position.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:RPOSition` on page 467

Range per Division ← X-Axis Scaling

Defines the value range to be displayed per division on the x-axis. Since the display consists of 10 divisions by default, the displayed range is:

$$\text{Range} = 10 * \langle \text{Range per Division} \rangle$$

Note: If fewer divisions are displayed (e.g. because the window is reduced in width), the range per division is increased to display the same result range in the smaller window. In this case, the per division value does not correspond to the actual display.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:PDIVision` on page 467

5.4.6.3 Units

Access: [AMPT] > "Unit Config"

You can configure the units for both axes of the diagrams.

| Amplitude | | |
|-------------|--------|------|
| Amplitude | Scale | Unit |
| X-Axis Unit | (none) | ▼ |
| Y-Axis Unit | (none) | ▼ |



Note that unit settings are window-specific, as opposed to the amplitude settings.

| | |
|-----------------------------------|-----|
| X-Axis Unit | 229 |
| Y-Axis Unit | 229 |

X-Axis Unit

Defines the unit of the x-axis in the current result diagram.

Remote command:

`CALCulate<n>:X:UNIT:TIME` on page 467

Y-Axis Unit

Defines the unit of the y-axis in the current result diagram.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing` on page 470

For phase diagrams: `CALCulate<n>:UNIT:ANGLE` on page 466

For statistics: `CALCulate<n>:STATistics:SCALe:Y:UNIT` on page 466

For "equalizer" group delay diagrams: `CALCulate<n>:Y:UNIT:TIME` on page 467

5.5 Signal capture

Access: "Overview" > "Signal Capture"

or: [MEAS CONFIG] > "Signal Capture"

The "Signal Capture" settings define how much, how and when data is captured from the input signal.


- [Data acquisition](#).....230
- [Trigger settings](#)..... 232
- [Sweep settings](#).....240

5.5.1 Data acquisition

Access: "Overview" > "Signal Capture" > "Data Acquisition"

or: [MEAS CONFIG] > "Signal Capture"

The "Data Acquisition" settings define how much and how data is captured from the input signal.

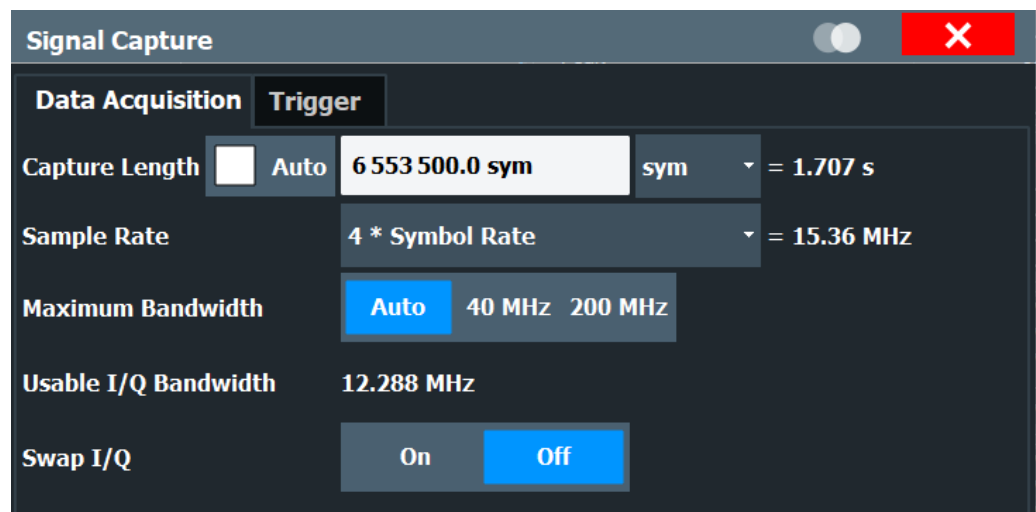

MSRA/MSRT operating mode

In MSRA/MSRT operating mode, only the MSRA/MSRT primary channel actually captures data from the input signal. The data acquisition settings for the VSA application in MSRA/MSRT mode define the **application data extract** and **analysis interval**.

For details on the MSRA operating mode, see the FSW MSRA User Manual. For details on the MSRT operating mode, see the FSW Real-Time Spectrum Application and MSRT Operating Mode User Manual.

| | |
|------------------------------|-----|
| Capture Length Settings..... | 231 |
| Sample Rate..... | 231 |
| Maximum Bandwidth..... | 231 |
| Usable I/Q Bandwidth..... | 232 |
| Swap I/Q..... | 232 |

Capture Length Settings

The capture length defines how many symbols are captured during each measurement.

Enable the "Auto" option to define the capture length automatically according to the burst and pattern length settings and the statistics count. Thus, a minimal capture length is used, which improves performance.

If the capture length is not defined automatically, enter the number of symbols or seconds to be captured and select the used unit. The defined number is converted to the alternative unit (seconds/symbols) for reference.

Up to 230 Msymbols can be captured and processed during each measurement.

Remote command:

[SENSe:] DDEMod:RLENgth:AUTO on page 471

[SENSe:] DDEMod:RLENgth[:VALue] on page 472

[SENSe:] DDEMod:RLENgth:SYMBols[:VALue] on page 472

Sample Rate

Defines the number of samples to capture per symbol. The sample rate in MHz is indicated for reference. This parameter affects the demodulation bandwidth and thus the usable I/Q bandwidth.

The maximum sample rate depends on the defined [Symbol Rate](#) (see [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75).

For details on selecting the suitable sample rate, see [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75.

Remote command:

[SENSe:] DDEMod:PRATe on page 471

Maximum Bandwidth

Defines the maximum bandwidth to be used by the FSW for I/Q data acquisition.

Which options are available depends on which bandwidth extension options are installed.

This setting is only available if a bandwidth extension option greater than 160 MHz is installed on the FSW. Otherwise the maximum bandwidth is determined automatically.

Note: This setting is not available for the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000).

"Auto" (Default:) All installed bandwidth extension options are enabled. The currently available maximum bandwidth is allowed.
(See ["Restricting the maximum bandwidth manually"](#) on page 79).
Note that using bandwidth extension options greater than 160 MHz may cause more spurious effects.

| | |
|------------|---|
| "80 MHz" | Restricts the analysis bandwidth to a maximum of 80 MHz. The bandwidth extension options greater than 160 MHz are disabled. |
| "160 MHz" | Restricts the analysis bandwidth to a maximum of 160 MHz. The bandwidth extension option for 320 MHz is disabled. (Not available or required if other bandwidth extension options larger than 320 MHz are installed.) |
| "512 MHz" | Restricts the analysis bandwidth to a maximum of 512 MHz. Larger bandwidth extension options are disabled. |
| "1200 MHz" | Restricts the analysis bandwidth to a maximum of 1200 MHz. Larger bandwidth extension options are disabled. |
| "4400 MHz" | Restricts the analysis bandwidth to a maximum of 4400 MHz. Larger bandwidth extension options are disabled. |

Remote command:

[TRACe:IQ:WBAND\[:STATe\]](#) on page 473

[TRACe:IQ:WBAND:MBWidth](#) on page 473

Usable I/Q Bandwidth

Shows the usable I/Q bandwidth which depends on the selected sample rate. For details see [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75.

This information is provided for reference only.

Note:

In diagrams in the frequency domain (Spectrum transformation, see ["Result Type Transformation"](#) on page 287) the usable I/Q bandwidth is indicated by vertical blue lines.

Remote command:

[TRACe:IQ:BWIDth](#) on page 473

Swap I/Q

Activates or deactivates the inverted I/Q modulation. If the I and Q parts of the signal from the DUT are interchanged, the FSW can do the same to compensate for it.

| | |
|-----|--|
| On | I and Q signals are interchanged Inverted sideband, $Q+j*I$ |
| Off | I and Q signals are not interchanged Normal sideband, $I+j*Q$ |

Remote command:

[\[SENSe:\]SWAPiq](#) on page 472

5.5.2 Trigger settings

Access: "Overview" > "Signal Capture" > "Trigger"

or: [TRIG] > "Trigger Config"

The trigger settings define the beginning of a measurement.

| Parameter | Value |
|---------------|-----------------------|
| Source | Ext Trigger 1 |
| Level | 1.4 V |
| Offset | -50.0 sym (unit: sym) |
| Hysteresis | 3.0 dB |
| Drop-Out Time | 0.0 s |
| Slope | Rising |
| Holdoff Time | 150.0 ns |



Trigger output is described in "[Trigger 2/3](#)" on page 213.

For step-by-step instructions on configuring triggered measurements, see the FSW User Manual.



MSRA/MSRT operating mode

In MSRA/MSRT operating mode, only the MSRA/MSRT primary channel actually captures data from the input signal. Thus, no trigger settings are available in the R&S FSW VSA application in MSRA/MSRT operating mode. However, a **capture offset** can be defined with a similar effect as a trigger offset. It defines an offset from the start of the captured data (from the MSRA/MSRT primary) to the start of the application data for vector signal analysis. (See [Capture Offset](#).)

For details on the MSRA operating mode, see the FSW MSRA User Manual.

For details on the MSRT operating mode, see the FSW Real-Time Spectrum Application and MSRT Operating Mode User Manual.

| | |
|-------------------------------|-----|
| Trigger Source..... | 234 |
| L Free Run..... | 234 |
| L External Trigger 1/2/3..... | 234 |
| L External Channel 3..... | 235 |
| L External Analog..... | 235 |
| L IF Power..... | 235 |
| L Baseband Power..... | 236 |
| L I/Q Power..... | 236 |
| L Digital I/Q..... | 236 |
| L RF Power..... | 237 |
| L Time..... | 237 |
| Trigger Level..... | 238 |

| | |
|--------------------------|-----|
| Trigger Offset..... | 238 |
| Hysteresis..... | 238 |
| Drop-Out Time..... | 238 |
| Coupling..... | 239 |
| Slope..... | 239 |
| Trigger Holdoff..... | 239 |
| Repetition Interval..... | 239 |
| Capture Offset..... | 240 |

Trigger Source

Defines the trigger source. If a trigger source other than "Free Run" is set, "TRG" is displayed in the channel bar and the trigger source is indicated.

Remote command:

[TRIGger \[:SEquence \] :SOURce](#) on page 479

Free Run ← Trigger Source

No trigger source is considered. Data acquisition is started manually or automatically and continues until stopped explicitly.

Remote command:

[TRIG:SOUR IMM](#), see [TRIGger \[:SEquence \] :SOURce](#) on page 479

External Trigger 1/2/3 ← Trigger Source

Data acquisition starts when the TTL signal fed into the specified input connector meets or exceeds the specified trigger level.

(See "[Trigger Level](#)" on page 238).

Note: "External Trigger 1" automatically selects the trigger signal from the "TRIGGER 1 INPUT" connector on the front panel.

If the optional 2 GHz / 5 GHz bandwidth extension (B2000/B5000) is active, only [External Channel 3](#) is supported.

If the optional 2 GHz / 5 GHz bandwidth extension (B2000/B5000) *and the power splitter mode* is active, only "[External Analog](#)" on page 235 is supported.

If the optional Oscilloscope Baseband Input is active, only "[External Analog](#)" on page 235 is supported.

For details, see the "Instrument Tour" chapter in the FSW Getting Started manual.

"External Trigger 1"

Trigger signal from the "TRIGGER 1 INPUT" connector.

"External Trigger 2"

Trigger signal from the "TRIGGER 2 INPUT / OUTPUT" connector.

For FSW85 models, "Trigger 2" is not available due to the second RF input connector on the front panel.

"External Trigger 3"

Trigger signal from the "TRIGGER 3 INPUT / OUTPUT" connector on the rear panel.

Note: in VSA, trigger output is not supported, thus the connector is always configured for input.

Remote command:

TRIG:SOUR EXT, TRIG:SOUR EXT2

TRIG:SOUR EXT3

See [TRIGger\[:SEquence\]:SOURce](#) on page 479

External Channel 3 ← Trigger Source

Data acquisition starts when the signal fed into the "Ch3" input connector on the oscilloscope meets or exceeds the specified trigger level.

Note: In previous firmware versions, the external trigger was connected to the "Ch2" input on the oscilloscope. As of firmware version FSW 2.30, the "Ch3" input on the oscilloscope must be used!

This trigger source is only available if the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000) is active (see FSW I/Q Analyzer and I/Q Input User Manual).

For details, see the FSW I/Q Analyzer and I/Q Input User Manual.

Note: Since the external trigger uses a second channel on the oscilloscope, the maximum memory size, and thus record length, available for the input channel 1 may be reduced by half. For details, see the oscilloscope's specifications document and documentation.

Remote command:

TRIG:SOUR EXT, see [TRIGger\[:SEquence\]:SOURce](#) on page 479

External Analog ← Trigger Source

Data acquisition starts when the signal fed into the EXT TRIGGER INPUT connector on the oscilloscope meets or exceeds the specified trigger level.

For details, see the FSW I/Q Analyzer and I/Q Input User Manual.

Remote command:

TRIG:SOUR EXT, see [TRIGger\[:SEquence\]:SOURce](#) on page 479

IF Power ← Trigger Source

The FSW starts capturing data as soon as the trigger level is exceeded around the third intermediate frequency.

For frequency sweeps, the third IF represents the start frequency. The trigger threshold depends on the defined trigger level, as well as on the RF attenuation and preamplification. A reference level offset, if defined, is also considered. The trigger bandwidth at the intermediate frequency depends on the RBW and sweep type. For details on available trigger levels and trigger bandwidths, see the instrument specifications document.

For measurements on a fixed frequency (e.g. zero span or I/Q measurements), the third IF represents the center frequency.

This trigger source is only available for RF input.

Available for input from the optional "Analog Baseband" interface.

Available for input from the optional "Digital Baseband" interface.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

When using the optional 2 GHz / 5 GHz bandwidth extension (R&S FSW-B2000/B5000) with an IF power trigger, the IF power trigger corresponds to a "width" trigger

on the oscilloscope, with a negative polarity and the range "longer". Thus, data acquisition starts when both of the following conditions apply to the signal fed into the CH1 input connector on the oscilloscope:

- The power level has remained below the specified trigger level for a duration longer than the drop-out time.
- The power level then rises above the specified trigger level.

For details, see "Basics on the 2 GHz / 5 GHz Bandwidth Extension" in the FSW I/Q Analyzer and I/Q Input User Manual.

For details on available trigger levels and trigger bandwidths, see the specifications document.

Remote command:

TRIG:SOUR IFP, see TRIGger[:SEquence]:SOURce on page 479

Baseband Power ← Trigger Source

Defines triggering on the baseband power for baseband input.

Available for input from the optional "Analog Baseband" interface.

Available for input from the optional "Digital Baseband" interface.

Remote command:

TRIG:SOUR BBP, see TRIGger[:SEquence]:SOURce on page 479

I/Q Power ← Trigger Source

Not available for the optional "Digital Baseband" interface.

Triggers the measurement when the magnitude of the sampled I/Q data exceeds the trigger threshold.

The trigger bandwidth corresponds to the "Usable I/Q Bandwidth" setting for data acquisition (see "Usable I/Q Bandwidth" on page 232).

Remote command:

TRIG:SOUR IQP, see TRIGger[:SEquence]:SOURce on page 479

Digital I/Q ← Trigger Source

For applications that process I/Q data, such as the I/Q Analyzer or optional applications, and only if the optional "Digital Baseband" interface is available:

Defines triggering of the measurement directly via the "LVDS" connector. In the selection list, specify which general-purpose bit ("GP0" to "GP5") provides the trigger data.

Note: If the Digital I/Q enhanced mode is used, i.e. the connected device supports transfer rates up to 200 Msps, only the general-purpose bits "GP0" and "GP1" are available as a Digital I/Q trigger source.

The following table describes the assignment of the general-purpose bits to the LVDS connector pins.

(For details on the LVDS connector, see the FSW I/Q Analyzer User Manual.)

Table 5-1: Assignment of general-purpose bits to LVDS connector pins

| Bit | LVDS pin |
|---|---------------------|
| GP0 | SDATA4_P - Trigger1 |
| GP1 | SDATA4_P - Trigger2 |
| GP2 *) | SDATA0_P - Reserve1 |
| GP3 *) | SDATA4_P - Reserve2 |
| GP4 *) | SDATA0_P - Marker1 |
| GP5 *) | SDATA4_P - Marker2 |
| *): not available for Digital I/Q enhanced mode | |

Remote command:

TRIG:SOUR GP0, see [TRIGger\[:SEquence\]:SOURce](#) on page 479

RF Power ← Trigger Source

Defines triggering of the measurement via signals which are outside the displayed measurement range.

For this purpose, the instrument uses a level detector at the first intermediate frequency.

The resulting trigger level at the RF input depends on the RF attenuation and preamplification. For details on available trigger levels, see the instrument's specifications document.

Note: If the input signal contains frequencies outside of this range (e.g. for fullspan measurements), the measurement can be aborted. A message indicating the allowed input frequencies is displayed in the status bar.

A "Trigger Offset", "Trigger Polarity" and "Trigger Holdoff" (to improve the trigger stability) can be defined for the RF trigger, but no "Hysteresis".

Not available for input from the optional "Analog Baseband" interface.

Not available for input from the optional "Digital Baseband" interface.

If the trigger source "RF Power" is selected and you enable baseband input, the trigger source is automatically switched to "Free Run".

Remote command:

TRIG:SOUR RFP, see [TRIGger\[:SEquence\]:SOURce](#) on page 479

Time ← Trigger Source

Triggers in a specified repetition interval.

See ["Repetition Interval"](#) on page 239.

If a B4001/B6001/B8001 bandwidth extension option is active, this trigger is not available for bandwidths ≥ 80 MHz.

Remote command:

TRIG:SOUR TIME, see [TRIGger\[:SEquence\]:SOURce](#) on page 479

Trigger Level

Defines the trigger level for the specified trigger source.

For details on supported trigger levels, see the instrument specifications document.

Remote command:

[TRIGger\[:SEquence\]:LEVel:IFPower](#) on page 478

[TRIGger\[:SEquence\]:LEVel:IQPower](#) on page 478

[TRIGger\[:SEquence\]:LEVel\[:EXTernal<port>\]](#) on page 477

For baseband input only:

[TRIGger\[:SEquence\]:LEVel:BBPower](#) on page 477

Trigger Offset

Defines the time offset between the trigger event and the start of the measurement.

Enter the time in seconds or in symbols.

| | |
|-------------|--|
| Offset > 0: | Start of the measurement is delayed |
| Offset < 0: | <p>Measurement starts earlier (pretrigger)</p> <p>Only possible for zero span (e.g. I/Q Analyzer application) and gated trigger switched off</p> <p>Maximum allowed range limited by the measurement time:</p> $\text{Pretrigger}_{\text{max}} = \text{measurement time}_{\text{max}}$ <p>When using the optional "Digital Baseband" interface, the maximum range is limited by the number of pretrigger samples. (See Table 4-21)</p> |

Remote command:

[TRIGger\[:SEquence\]:HOLDoFF\[:TIME\]](#) on page 476

Hysteresis

Defines the distance in dB to the trigger level that the trigger source must exceed before a trigger event occurs. Setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

This setting is only available for "IF Power" trigger sources. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

When using the optional 2 GHz / 5 GHz bandwidth extension (R&S FSW-B2000/B5000) with an IF power trigger, the hysteresis refers to the robust width trigger.

(For details see the FSW I/Q Analyzer and I/Q Input User Manual.)

Remote command:

[TRIGger\[:SEquence\]:IFPower:HYSteresis](#) on page 477

Drop-Out Time

Defines the time that the input signal must stay below the trigger level before triggering again.

Note: For input from the optional "Analog Baseband" interface using the baseband power trigger (BBP), the default drop out time is set to 100 ns. This avoids unintentional trigger events (as no hysteresis can be configured in this case).

When using the optional 2 GHz / 5 GHz bandwidth extension (R&S FSW-B2000/B5000) with an IF power trigger, the drop-out time defines the width of the robust width trigger. By default it is set to 1 μ s. For external triggers, no drop-out time is available when using the B2000/B5000 option.

(For details, see the FSW I/Q Analyzer and I/Q Input User Manual.)

Remote command:

[TRIGger\[:SEquence\]:DTIME](#) on page 476

Coupling

If the selected trigger source is "IF Power" or "External Channel 3", you can configure the coupling of the external trigger to the oscilloscope.

This setting is only available if the optional 2 GHz bandwidth extension is active.

"DC 50 Ω " Direct connection with 50 Ω termination, passes both DC and AC components of the trigger signal.

"DC 1 M Ω " Direct connection with 1 M Ω termination, passes both DC and AC components of the trigger signal.

"AC" Connection through capacitor, removes unwanted DC and very low-frequency components.

Remote command:

[TRIGger\[:SEquence\]:OSCilloscope:COUpling](#) on page 449

Slope

For all trigger sources except time, you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

When using the optional 2 GHz / 5 GHz bandwidth extension (R&S FSW-B2000/B5000) with an IF power trigger, only rising slopes can be detected.

(For details see the FSW I/Q Analyzer and I/Q Input User Manual.)

Remote command:

[TRIGger\[:SEquence\]:SLOPe](#) on page 478

Trigger Holdoff

Defines the minimum time (in seconds) that must pass between two trigger events. Trigger events that occur during the holdoff time are ignored.

Remote command:

[TRIGger\[:SEquence\]:IFPower:HOLDoFF](#) on page 476

Repetition Interval

Defines the repetition interval for a time trigger.

The shortest interval is 2 ms.

Set the repetition interval to the exact pulse period, burst length, frame length or other repetitive signal characteristic. If the required interval cannot be set with the available granularity, configure a multiple of the interval that can be set. Thus, the trigger remains synchronized to the signal.

Remote command:

[TRIGger\[:SEquence\]:TIME:RINTerval](#) on page 480

Capture Offset

This setting is only available for secondary applications in **MSRA/MSRT operating mode**. It has a similar effect as the trigger offset in other measurements: it defines the time offset between the capture buffer start and the start of the extracted secondary application data.

In MSRA mode, the offset must be a positive value, as the capture buffer starts at the trigger time = 0.

In MSRT mode, the offset can be negative if a pretrigger time is defined.

For details on the MSRA operating mode, see the FSW MSRA User Manual.

For details on the MSRT operating mode, see the FSW Real-Time Spectrum Application and MSRT Operating Mode User Manual.

Remote command:

[SENSe:]MSRA:CAPTure:OFFSet on page 541

MSRT mode:

[SENSe:]RTMS:CAPTure:OFFSet on page 543

5.5.3 Sweep settings

Access: [Sweep]

The sweep settings define how often data from the input signal is acquired and then evaluated.

| | |
|----------------------------------|-----|
| Continuous Sweep / Run Cont..... | 240 |
| Single Sweep / Run Single..... | 241 |
| Continue Single Sweep..... | 241 |
| Refresh..... | 241 |
| Refresh (MSRA/MSRT only)..... | 242 |
| Statistic Count..... | 242 |
| Select Result Rng..... | 242 |

Continuous Sweep / Run Cont

After triggering, starts the measurement and repeats it continuously until stopped. This is the default setting.

While the measurement is running, "Continuous Sweep" and [RUN CONT] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

Note: Sequencer. If the Sequencer is active, "Continuous Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in continuous sweep mode is swept repeatedly.

If the Sequencer is active in MSRT mode, the "Continuous Sweep" function does not start data capturing. It merely affects trace averaging over multiple sequences. In this case, trace averaging is performed.

Furthermore, [RUN CONT] controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see the FSW User Manual.

Remote command:

`INITiate<n>:CONTinuous` on page 510

Single Sweep / Run Single

After triggering, starts the number of evaluations set in "Statistics Count". The measurement stops after the defined number of evaluations has been performed.

While the measurement is running, "Single Sweep" and [RUN SINGLE] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Note: Sequencer. If the Sequencer is active, "Single Sweep" only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel in single sweep mode only once.

If the Sequencer is active in MSRT mode, the "Single Sweep" function does not start data capturing. It merely affects trace averaging over multiple sequences. In this case, no trace averaging is performed.

Furthermore, [RUN SINGLE] controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel is updated.

For details on the Sequencer, see the FSW User Manual.

Remote command:

`INITiate<n>[:IMMediate]` on page 510

Continue Single Sweep

After triggering, repeats the number of evaluations set in "Statistics Count", without deleting the trace of the last measurement.

While the measurement is running, "Continue Single Sweep" and [RUN SINGLE] are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Remote command:

`INITiate<n>:CONMeas` on page 509

Refresh

Repeats the evaluation of the data currently in the capture buffer without capturing new data.

This is useful for long capture buffers that are split into sections for result displays. In this case, only the data in the currently selected capture buffer *section* is automatically refreshed after configuration changes. To update the entire capture buffer, you must refresh the evaluation manually using this function. See also [Chapter 4.8, "Capture buffer display"](#), on page 167.

Remote command:

`INITiate:REFMeas` on page 511

Refresh (MSRA/MSRT only)

This function is only available if the Sequencer is deactivated and only for **MSRA/MSRT secondary applications**.

The data in the capture buffer is re-evaluated by the currently active secondary application only. The results for any other secondary applications remain unchanged.

This is useful, for example, after evaluation changes have been made or if a new sweep was performed from another secondary application. In this case, only that secondary application is updated automatically after data acquisition.


Note: To update all active secondary applications at once, use the "Refresh All" function in the "Sequencer" menu.

Remote command:

`INITiate<n>:REFresh` on page 511

Statistic Count

Defines the number of measurements to be considered for statistical evaluations. The behavior depends on the active sweep mode.

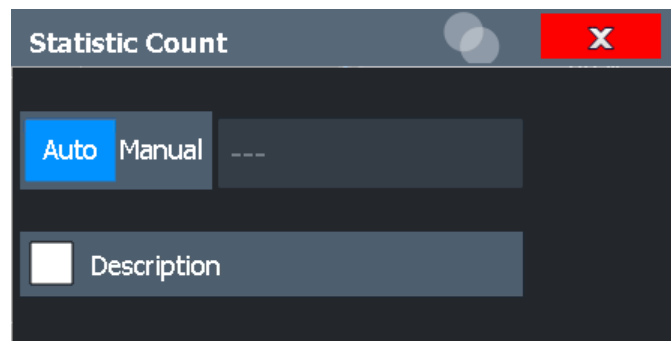

Activate "Description" to display a visualization of the behavior of the current settings.

Note: If the "Statistic Count" is set to 1, trace averaging is not performed; Max Hold and Min Hold, however, remain active, unlike in the Spectrum application.

| | |
|----------|--|
| "Auto" | In single sweep mode: captures the I/Q data once and evaluates it In continuous sweep mode: captures I/Q data continuously; for each evaluation, the average is calculated over the last 10 capture sets (moving average) |
| "Manual" | In single sweep mode: captures I/Q data until the defined number of evaluations have been performed In continuous sweep mode: captures I/Q data continuously; if trace averaging is selected, the average is calculated over the defined number of capture sets (moving average); |

Remote command:

`[SENSe:] SWEEp:COUNT` on page 481

Select Result Rng

Access: [SWEEP]

Selects the result range from the capture buffer that you want to evaluate.

This function is available in single sweep mode only.

Result displays based on the capture buffer display the results over all result ranges that have been captured in the signal capturing process and are in the FSW's memory. Some result displays are based on an individual result range, e.g. to analyze a particular burst. By selecting a different range number, you can move through the result ranges in the display.

Which ranges are available depends on the number of result ranges you have captured previously.

For very long captures, only the data in the currently selected capture buffer *section* is automatically re-evaluated when you change configuration settings. Thus, you can only move the position of the result range within the section. You must manually re-evaluate the entire capture buffer before you can move the result range outside the section again.

(See "Refresh" on page 241).

For more information, refer also to [Chapter 4.6, "Measurement ranges"](#), on page 161.

Remote command:

[SENSe:] DDEMod:SEARCH:MBURst:CALC on page 481

5.6 Burst and pattern configuration

Access: "Overview" > "Burst/Pattern"

or: [MEAS CONFIG] > "Burst/Pattern Search"

Information on known patterns and bursts in the captured signal improve the accuracy of the determined ideal reference signal, and calculation of the signal parameters becomes quicker.


For details on burst and patterns see [Chapter 4.4, "Overview of the demodulation process"](#), on page 131.

5.6.1 Burst search

Access: "Overview" > "Burst/Pattern" > "Burst Search"

or: [MEAS CONFIG] > "Burst/Pattern Search" > "Burst Search" tab

The "Burst Search" settings define when a burst is detected in the evaluated signal.

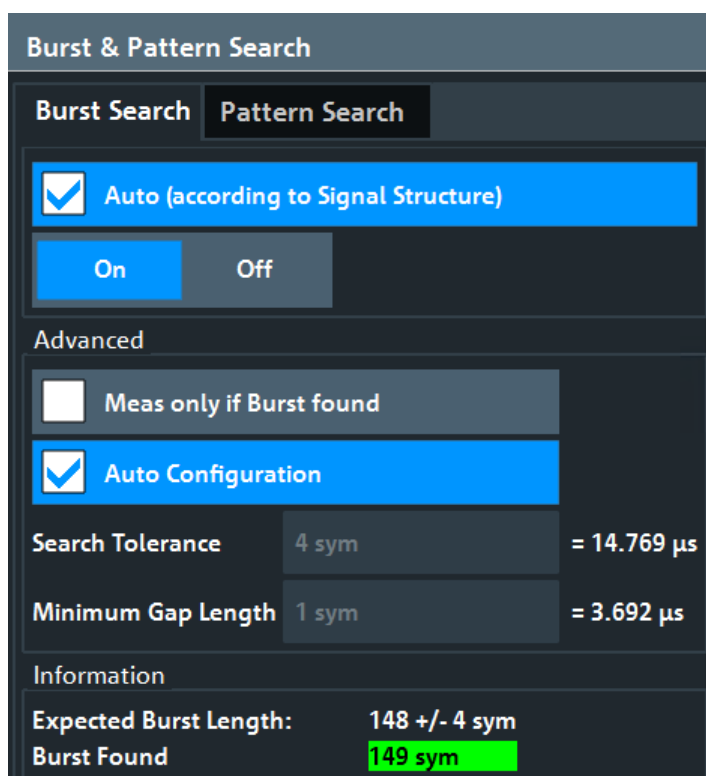

| | |
|--|-----|
| Enabling Burst Searches..... | 244 |
| Measuring only if burst was found..... | 244 |
| Burst Configuration..... | 244 |
| L Search Tolerance..... | 245 |
| L Min Gap Length..... | 245 |
| Expected Burst Length / Burst Found..... | 245 |

Enabling Burst Searches

Enables or disables burst searches. If "Auto" is selected, burst search is enabled only if the signal structure defines a bursted signal (in the "Signal Structure" tab of the "Modulation & Signal Description" dialog box, see "Signal Type" on page 191).

Remote command:

[SENSe:] DDEMod: SEARCh: BURSt: AUTO on page 483

Measuring only if burst was found

If enabled, measurement results are only displayed (and are only averaged) if a valid burst has been found. When measuring bursted signals that are averaged over several measurements, it is recommended that you enable this option so that erroneous measurements do not affect the result of averaging.

Remote command:

[SENSe:] DDEMod: SEARCh: BURSt: MODE on page 484

Burst Configuration

The conditions under which a burst is detected in the captured data can be configured either manually or automatically according to the defined signal structure settings (see "Burst Settings" on page 191).

Remote command:

[\[SENSe:\] DDEMod:SEARCh:BURSt:CONFIgure:AUTO](#) on page 483

Search Tolerance ← Burst Configuration

Defines the number of symbols that may differ from the burst length without influencing the burst detection. A search tolerance of 5, for example, with a minimum and maximum burst length of 100, will detect bursts that are 95 to 100 symbols long. (The minimum and maximum burst length is defined in the [Signal structures](#) settings)

Note: Due to the fact that the VSA does not have knowledge of the ramp length, there is an uncertainty in the burst search algorithm. Thus, setting this parameter to "0" will result in a failed burst search for most signals.

Remote command:

[\[SENSe:\] DDEMod:SEARCh:BURSt:TOLerance](#) on page 484

Min Gap Length ← Burst Configuration

Represents the minimum distance (in symbols) between adjacent bursts. The default value is 1 symbol in order to make sure that the burst search finds bursts that are very close to each other. However, in case the "capture buffer" does not contain very close bursts, it is recommended that you increase the value. This makes the burst search faster and also more robust for highly distorted signals.

Note that this parameter only influences the robustness of the burst search. It should not be used to explicitly exclude certain bursts from the measurement. For example, setting the minimum gap length to 100 symbols does not ensure that the burst search does not find bursts that have a very small gap.

Remote command:

[\[SENSe:\] DDEMod:SEARCh:BURSt:GLENgth\[:MINimum\]](#) on page 483

Expected Burst Length / Burst Found

These fields are for information only and indicate the expected burst length as defined in the [Burst Settings](#), and if a burst is detected, its length.

Remote command:

[CALCulate<n>:DDEM:BURSt:LENgth?](#) on page 574


[CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:LENgth?](#) on page 569

5.6.2 Pattern search

Access: "Overview" > "Burst/Pattern" > "Pattern Search"

or: [MEAS CONFIG] > "Burst/Pattern Search" > "Pattern Search" tab

The "Pattern Search" settings define when a pattern is detected in the evaluated signal.

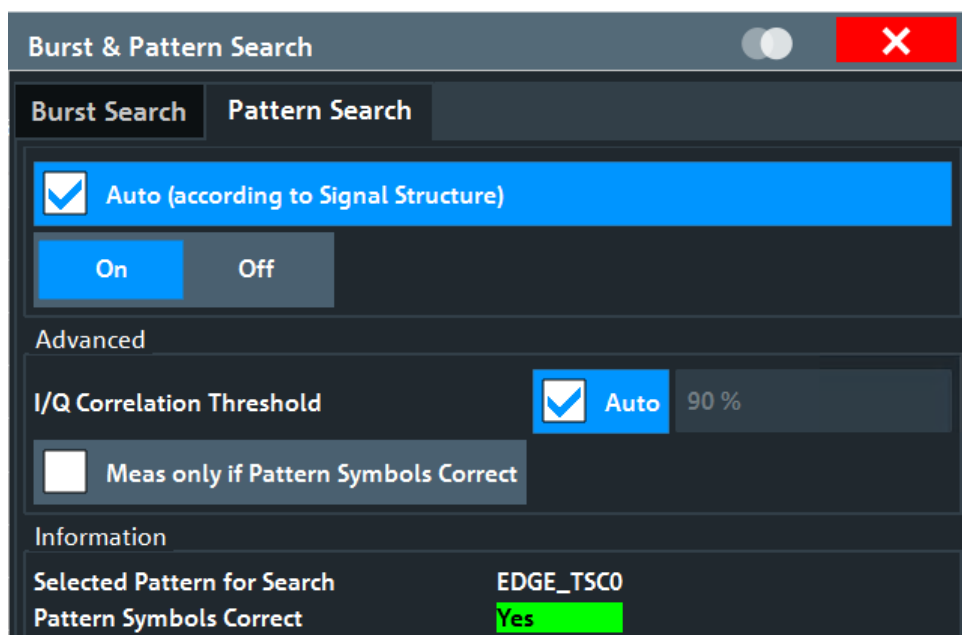

| | |
|---|-----|
| Enabling Pattern Searches..... | 246 |
| I/Q Correlation Threshold..... | 246 |
| Meas only if Pattern Symbols Correct..... | 247 |
| Selected Pattern for Search..... | 247 |
| Pattern Symbols Correct..... | 247 |

Enabling Pattern Searches

Enables or disables pattern searches. If "Auto" is selected, pattern search is enabled only if the signal structure defines a pattern in the signal (in the "Signal Structure" tab of the "Modulation & Signal Description" dialog box, see ["Pattern Settings"](#) on page 192).

Remote command:

[SENSe:] DDEMod: SEARCh: SYNC: STATE on page 486

[SENSe:] DDEMod: SEARCh: SYNC: AUTO on page 485

I/Q Correlation Threshold

The I/Q correlation threshold decides whether a match is accepted or not during a pattern search (see also [Chapter 4.4.2, "I/Q pattern search"](#), on page 135). If the parameter is set to 100%, only I/Q patterns that match totally with the input signal are found. This is only the case for infinite SNR.

If the threshold "Auto" option is enabled, the default value of 90% is used. As long as the pattern is found, there is no need to change this parameter. However, if the pattern is very short (approximately < 10 symbols) or if the signal is highly distorted, tuning this parameter helps the pattern search to succeed. To define a threshold manually, disable the "Auto" option.

Remote command:

[SENSe:] DDEMod: SEARCh: SYNC: IQCThreshold on page 485

[SENSe:] DDEMod: SEARCh: PATTeRn: CONFIgure: AUTO on page 485

Actual correlation:

[CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:CONFidence?](#)
on page 570

Meas only if Pattern Symbols Correct

If enabled, measurement results are only displayed (and are only averaged) if a valid pattern has been found. When measuring signals that contain a pattern and are averaged over several measurements, it is recommended that you enable this option so that erroneous measurements do not affect the result of averaging.

Remote command:

[\[SENSe:\] DDEMod:SEARch:SYNC:MODE](#) on page 485

Selected Pattern for Search

Indicates which of the patterns that are assigned to the current standard is selected and will be searched for.

The selected pattern is indicated for information only and cannot be edited here, only in the "Signal Structure" settings, see "[Name](#)" on page 192).

Remote command:

[\[SENSe:\] DDEMod:SEARch:SYNC:SELEct](#) on page 486

Pattern Symbols Correct

Indicates whether a correct pattern was found in the currently captured data.


Remote command:

[CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:CORRect?](#)
on page 571

5.6.3 Pattern configuration

Access: "Meas Config" > "Pattern Config"

For common signal standards, the patterns to be searched for in the captured signal are predefined in the VSA application. In addition, new patterns can be defined and assigned to a signal standard manually.

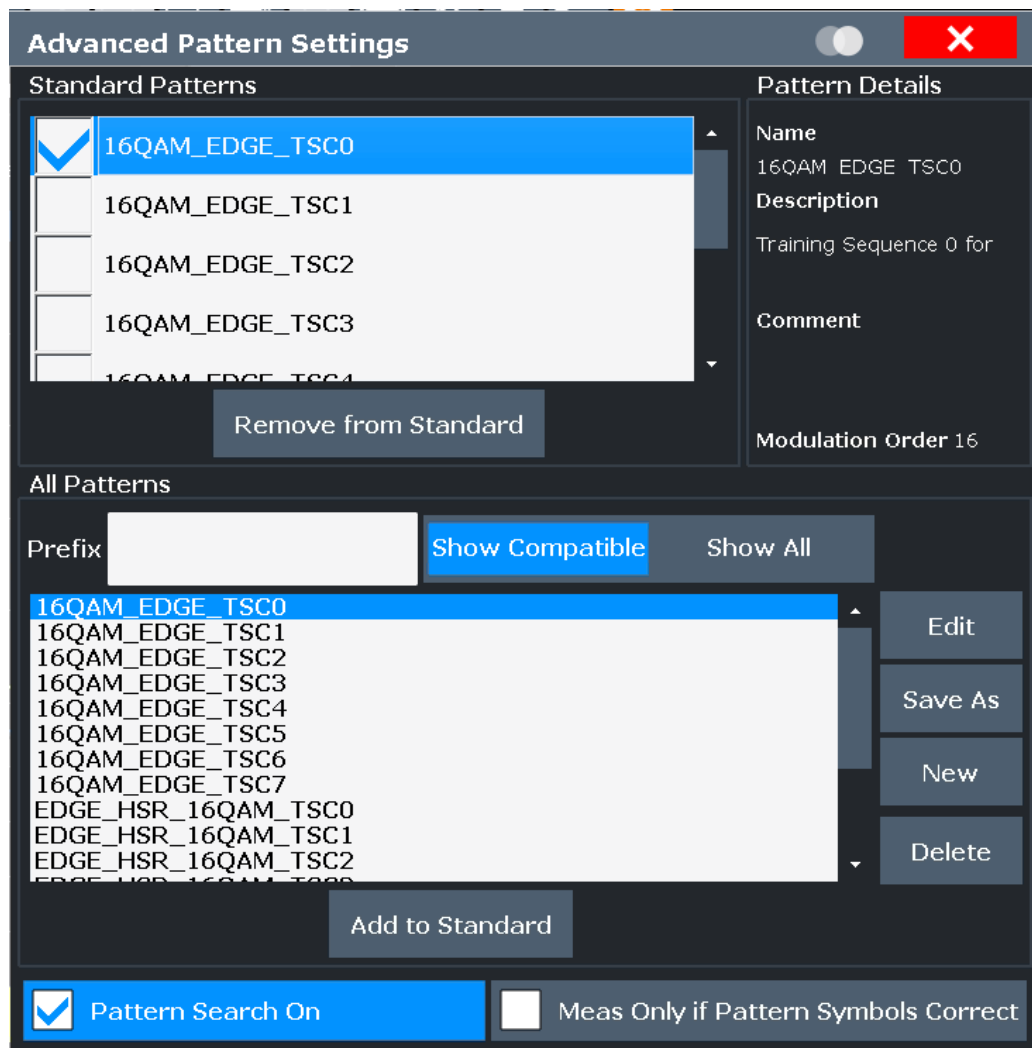

| | |
|--|-----|
| Standard Patterns - selecting an assigned pattern..... | 248 |
| Removing patterns from a standard..... | 249 |
| Adding patterns to a standard..... | 249 |
| Displaying available patterns..... | 249 |
| L Prefix..... | 249 |
| L Show Compatible/ Show All..... | 249 |
| Edit..... | 249 |
| Save As..... | 249 |
| New..... | 250 |
| Delete..... | 250 |
| Pattern details..... | 250 |
| Pattern Search On..... | 250 |
| Meas only if Pattern Symbols Correct..... | 250 |

Standard Patterns - selecting an assigned pattern

The "Standard Patterns" are the patterns assigned to the currently selected standard. You can add existing patterns to the standard or remove patterns already assigned to the standard. The highlighted pattern is currently selected for pattern search.

Remote command:

[\[SENSe:\] DDEMod:SEARCh:SYNC:SElect](#) on page 486

Removing patterns from a standard

Removes the assignment of the selected patterns to the standard. The patterns are removed from the "Standard Patterns" list, but not deleted.

Remote command:

[\[SENSe:\] DDEMod:SEARCh:SYNC:PATtern:REMove](#) on page 489

Adding patterns to a standard

Adds the selected patterns in the list of available patterns ("All Patterns") to the list of assigned patterns ("Standard Patterns").

For details see ["To add a predefined pattern to a standard"](#) on page 298.

Remote command:

[\[SENSe:\] DDEMod:SEARCh:SYNC:PATtern:ADD](#) on page 489

Displaying available patterns

The "All Patterns" list contains the patterns available in the VSA application.

You can assign available patterns to the selected standard, edit existing or define new patterns.

For details on managing standard patterns, see [Chapter 8.2.3.3, "How to manage patterns"](#), on page 301

The list can be filtered using the following functions:

Prefix ← Displaying available patterns

Shows only patterns that contain the specified prefix.

Show Compatible/ Show All ← Displaying available patterns

Shows only patterns that are compatible to the selected modulation mode or all patterns (regardless of the selected standard).

Edit

Opens the "Edit Pattern" dialog box to edit the pattern definition. See [Chapter 5.6.4, "Pattern definition"](#), on page 250.

For details on defining a pattern, see [Example "Defining a pattern"](#) on page 300.

Remote command:

[\[SENSe:\] DDEMod:SEARCh:SYNC:NAME](#) on page 488

[\[SENSe:\] DDEMod:SEARCh:SYNC:COMment](#) on page 487

[\[SENSe:\] DDEMod:SEARCh:SYNC:DATA](#) on page 488

[\[SENSe:\] DDEMod:SEARCh:SYNC:TEXT](#) on page 489

Save As

Saves a copy of an existing pattern under a new name.

Remote command:

[\[SENSe:\] DDEMod:SEARCh:SYNC:COPY](#) on page 487

New

Opens the "Pattern" dialog box to create a new pattern definition. See [Chapter 5.6.4, "Pattern definition"](#), on page 250.

For details on defining a pattern, see [Example "Defining a pattern"](#) on page 300.

Remote command:

[\[SENSe:\] DDEMod: SEARCh: SYNC: NAME](#) on page 488

[\[SENSe:\] DDEMod: SEARCh: SYNC: COMMeNt](#) on page 487

[\[SENSe:\] DDEMod: SEARCh: SYNC: DATA](#) on page 488

[\[SENSe:\] DDEMod: SEARCh: SYNC: TEXT](#) on page 489

Delete

Deletes the selected patterns. Any existing assignments to other standards are removed.

Remote command:

[\[SENSe:\] DDEMod: SEARCh: SYNC: DELeTe](#) on page 488

Pattern details

Pattern details for the currently focused pattern are displayed at the upper right-hand side of the dialog box. You can refer to these details, for example, when you want to add a new pattern to the standard and want to make sure you have selected the correct one.

Pattern Search On

If enabled, the VSA application searches for the selected pattern. This setting is identical to the setting in the "Pattern Search" dialog box (see ["Enabling Pattern Searches"](#) on page 246).

Remote command:

[\[SENSe:\] DDEMod: SEARCh: SYNC: STATe](#) on page 486

Meas only if Pattern Symbols Correct

If enabled, measurement results are only displayed (and are only averaged) if a valid pattern has been found. When measuring signals that contain a pattern and are averaged over several measurements, it is recommended that you enable this option so that erroneous measurements do not affect the result of averaging.


Remote command:

[\[SENSe:\] DDEMod: SEARCh: SYNC: MODE](#) on page 485

5.6.4 Pattern definition

Access: "Meas Config" > "Pattern Config" > "New"

New patterns can be defined and then assigned to a standard.

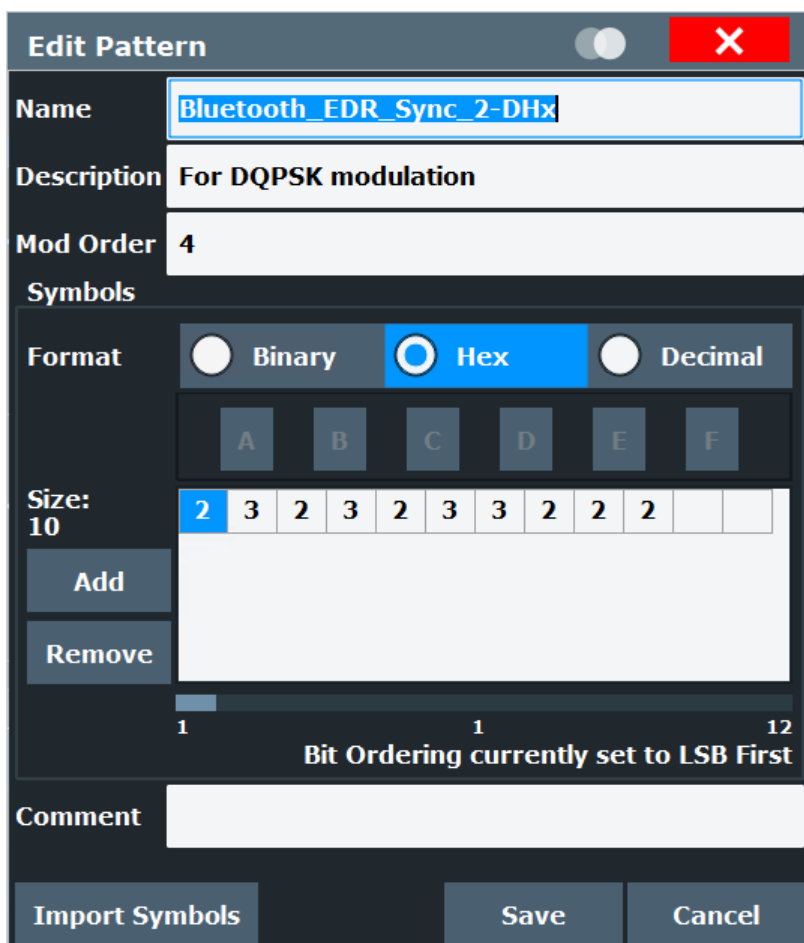

For details on defining a pattern, see [Example"Defining a pattern"](#) on page 300.

| | |
|--|-----|
| Name | 251 |
| Description | 251 |
| Mod. order | 252 |
| Symbols | 252 |
| L Symbol format | 252 |
| L Adding symbols | 252 |
| L Removing symbols | 252 |
| Comment | 252 |
| Import Symbols | 252 |

Name

Pattern name that will be displayed in selection list

Remote command:

[SENSe:] DDEMod: SEARCh: SYNC: NAME on page 488

Description

Optional description of the pattern which is displayed in the pattern details

Remote command:

[SENSe:] DDEMod: SEARCh: SYNC: TEXT on page 489

Mod. order

The order of modulation, e.g. 8 for an 8-PSK.

Remote command:

[SENSe:] DDEMod: SEARCh: SYNC: NSTate on page 488

Symbols

The pattern definition is a symbol table consisting of one or more symbols. The number of symbols is indicated as the "Size" to the left of the symbol table.

A scrollbar beneath the input area allows you to scroll through the table for long patterns. The numbers beneath the scrollbar indicate the sequential number of the following symbols, from left to right:

- the first symbol
- the currently selected symbol
- the last symbol

Whether the symbols are interpreted as LSB first or MSB first depends on the [Bit Ordering](#) setting, see [Chapter 5.8.2, "Advanced demodulation \(synchronization\)"](#), on page 259. By default, they are displayed as MSB first.

Remote command:

[SENSe:] DDEMod: SEARCh: SYNC: DATA on page 488

Symbol format ← Symbols

Defines the format in which each symbol is defined: hexadecimal, decimal or binary

Adding symbols ← Symbols

Adds a new symbol in the symbol table to the left of the currently selected symbol.

Removing symbols ← Symbols

Removes the currently selected symbol in the symbol table.

Comment

Optional comment for the pattern, displayed in the pattern details (kept for compatibility with FSQ)


Remote command:

[SENSe:] DDEMod: SEARCh: SYNC: COMMENT on page 487

Import Symbols

Symbols from a displayed [Symbol table](#) can be imported as a pattern. Select the number of symbols (starting from the first one) to be used as a pattern. By default, the entire [Result Length](#) is used.

This function is only available in single measurement mode and only if the [Symbol table](#) is currently displayed.

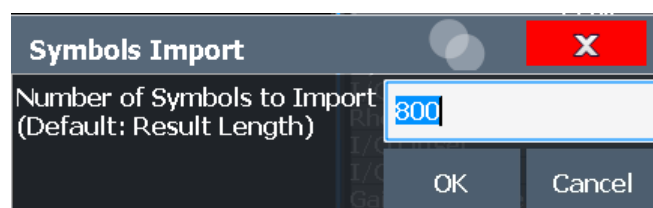

Tip: If you do not know the pattern in advance, measure the signal and identify the pattern in the symbol table. Then align the result range to the pattern by defining an offset. The [Symbol table](#) is aligned to the result range, and thus starts with the pattern. Now use the "Import Symbols" function to define the pattern for subsequent measurements.

5.7 Result range configuration

Access: "Overview" > "Cut Result Ranges"

or: [MEAS CONFIG] > "Range Settings" > "Result Range" tab

The result range determines which part of the capture buffer, burst or pattern is displayed. For more information, see [Chapter 4.6, "Measurement ranges"](#), on page 161.

For multi-modulation analysis (requires option FSW-K70M, see [Chapter 4.11, "Multi-modulation analysis \(FSW-K70M\)"](#), on page 172), the result length is set to the total number of symbols in the frame structure configuration by default (see [Chapter 5.3.3.2, "Frame configuration"](#), on page 196). The number can be decreased to exclude symbols at the beginning or end of the frame. The alignment and offset of the result range are automatically taken from the frame structure configuration and cannot be edited.

Activate "Visualization" to display a visualization of the currently defined signal structure at the bottom of the dialog box.

| | |
|--|-----|
| Result Length | 254 |
| ↳ According to Frame Structure File | 254 |
| Reference | 254 |
| Alignment | 254 |
| Offset | 254 |
| Symbol Number at <Reference> Start | 255 |

Result Length

Defines the number of symbols that are to be demodulated. All traces over time are displayed over the result range.

Remote command:

[\[SENSe:\] DDEMod:TIME](#) on page 492

According to Frame Structure File ← Result Length

The result length is determined by the total number of symbols in the frame structure configuration.

This setting is only available if the additional Multi-Modulation Analysis option (FSW-K70M) is installed.

Remote command:

[\[SENSe:\] DDEMod:TIME:AUTO](#) on page 492

Reference

Defines the reference for the result range alignment.

The result of the current setting is displayed in the visualization area of the dialog box.

| | |
|---------------------|----------------------|
| "Capture" | The capture buffer |
| "Burst" | The detected burst |
| "Pattern Wave-form" | The detected pattern |

Remote command:

[CALCulate<n>:TRACe<t>:ADJust\[:VALue\]](#) on page 491

Alignment

Defines the type of alignment of the result range to the reference source. The result of the current setting is displayed in the visualization area of the dialog box.

Remote command:

[CALCulate<n>:TRACe<t>:ADJust:ALIGnment\[:DEFault\]](#) on page 490

Offset

Defines the offset of the result range to the alignment reference. The result of the current setting is displayed in the visualization area of the dialog box.

Note: Note the following restrictions to this parameter:

- An offset < 0 is not possible if you align the result range to the left border of the capture buffer.
- An offset that moves the pattern outside the result range is not allowed. For example, if you align the result to the left border of the pattern, only offsets ≤ 0 are allowed. Otherwise, you would never be able to find the pattern within the result range.

Remote command:

[CALCulate<n>:TRACe<t>:ADJust:ALIGnment:OFFSet](#) on page 490

Symbol Number at <Reference> Start

Defines the number of the symbol which marks the beginning of the alignment reference source (burst, capture buffer or pattern). The result of the current setting is displayed in the visualization area of the dialog box.

In effect, this setting defines an offset of the x-axis (in addition to the one defined for the signal structure, see "Offset" on page 192).

Note: When you define the "Symbol Number at <Reference> Start" remember to take the offset defined for the signal structure into consideration (see "Offset" on page 192). The "Symbol Number at Pattern Start" refers to the first symbol of the pattern offset, not the first symbol of the pattern.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:VOFFset` on page 491

5.8 Demodulation settings

Access: "Overview" > "Demodulation"

Or: [MEAS CONFIG] > "Demod/Meas Filter" > "Demodulation" tab

During demodulation of the vector signal, some undesired effects that can occur during transmission can be compensated for. Furthermore, you can influence the synchronization process.

- [Demodulation - compensation and equalizer](#).....255
- [Advanced demodulation \(synchronization\)](#)..... 259

5.8.1 Demodulation - compensation and equalizer

Access: "Overview" > "Demodulation" > "Demodulation"

Or: [MEAS CONFIG] > "Demod/Meas Filter" > "Demodulation" tab



Note that compensation for all the listed distortions can result in lower EVM values.

Demodulation settings depend on the used modulation.

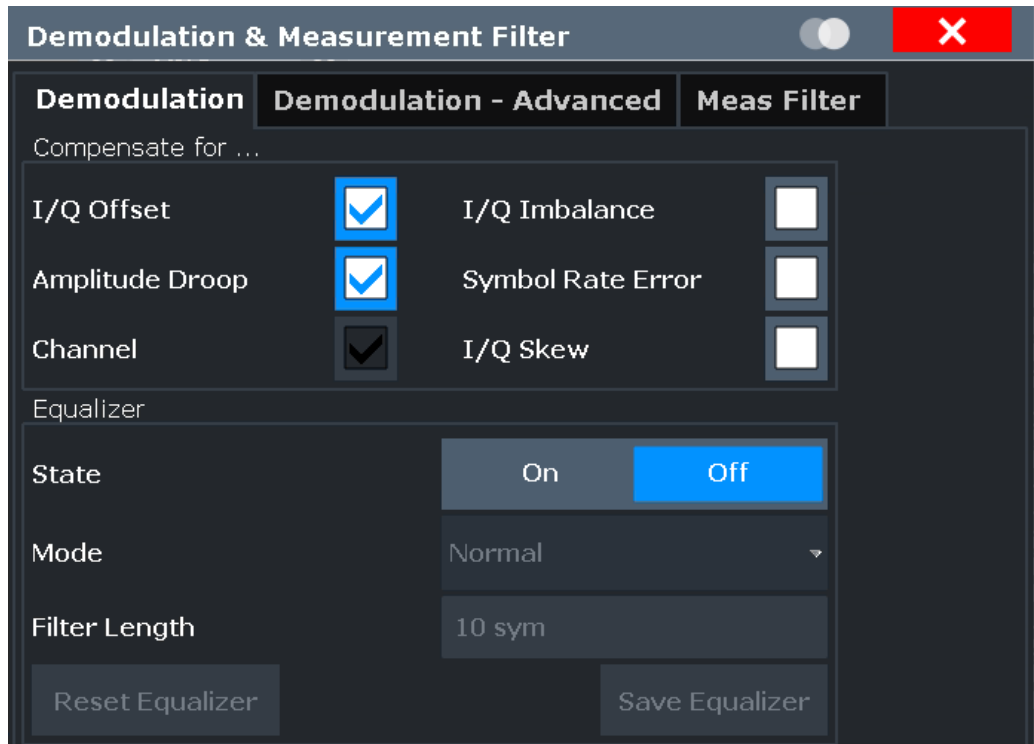


Figure 5-3: Demodulation settings for PSK, MSK and QAM modulation

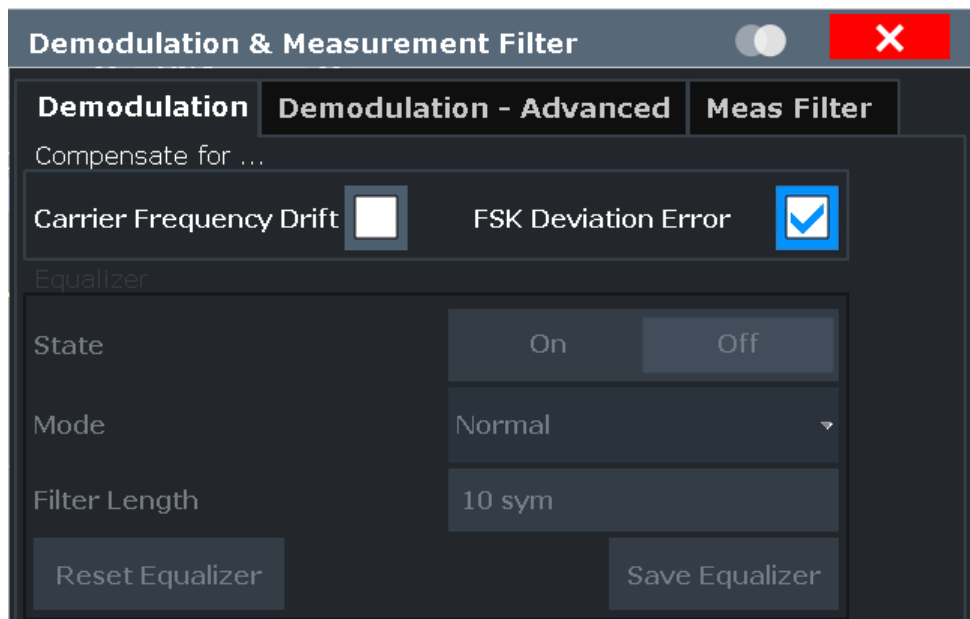


Figure 5-4: Demodulation settings for FSK modulation

| | |
|---|-----|
| Compensate for... [(PSK, MSK, ASK, QAM)]..... | 257 |
| Compensate for... [(FSK)]..... | 257 |
| Equalizer Settings..... | 257 |
| └ State..... | 258 |

| | |
|----------------------------|-----|
| L Mode..... | 258 |
| L Filter Length..... | 258 |
| L Reset Equalizer..... | 258 |
| L Save/Load Equalizer..... | 259 |

Compensate for... [(PSK, MSK, ASK, QAM)]

If enabled, compensation for various effects is considered during demodulation. Thus, these distortions are not shown in the calculated error values.

Note: Note that compensation for all the listed distortions can result in lower EVM values.

- "I/Q Offset" (default: on)
- "I/Q Imbalance"
- "Amplitude Droop" (default: on)
- "Symbol Rate Error" (required to display the SRE in the "Result Summary")
- "Channel" (default: on)

Note that channel distortion can only be determined if the "Equalizer" is on (see ["State"](#) on page 258). Thus, compensation can only be disabled if the equalizer is on.

By default, channel compensation is enabled to improve accuracy of the error results. If compensation is disabled, the EVM is calculated from the original input signal with channel distortions.

- "I/Q Skew" (PSK/ QAM/ Offset QPSK only, see also ["I/Q skew results depend on modulation"](#) on page 152)

For details on these effects see [Chapter 4.5.1.3, "Modulation errors"](#), on page 147.

Remote command:

[\[SENSe:\] DDEMod:NORMAlize:IQOFFset](#) on page 500

[\[SENSe:\] DDEMod:NORMAlize:IQIMbalance](#) on page 500

[\[SENSe:\] DDEMod:NORMAlize:IQSKew](#) on page 501

[\[SENSe:\] DDEMod:NORMAlize:ADRoop](#) on page 499

[\[SENSe:\] DDEMod:NORMAlize:SRERror](#) on page 501

[\[SENSe:\] DDEMod:NORMAlize:CHANnel](#) on page 499

Compensate for... [(FSK)]

If enabled, compensation for various effects is considered during demodulation. Thus, these distortions are not shown in the calculated error values.

- "Carrier Frequency Drift"
- "FSK Deviation Error"

For details on these effects see [Chapter 4.5.2.3, "Modulation errors"](#), on page 160.

Remote command:

[\[SENSe:\] DDEMod:NORMAlize:CFDRift](#) on page 499

[\[SENSe:\] DDEMod:NORMAlize:FDERror](#) on page 500

Equalizer Settings

The "Equalizer" can compensate for a distorted transmission of the input signal or improve accuracy in estimating the reference signal.

For details see [Chapter 4.4.6, "The equalizer"](#), on page 142.

State ← Equalizer Settings

Activates or deactivates the "Equalizer" to compensate for a distorted channel.

Note: for FSK modulated signals, the "Equalizer" is not available.

Remote command:

[\[SENSe:\] DDEMod:EQUalizer\[:STATe\]](#) on page 497

Mode ← Equalizer Settings

Defines the operating mode of the "Equalizer".

| | |
|-------------|--|
| "Normal" | Determines the filter values from the difference between the ideal (reference) signal and the measured signal. Normal mode is sufficient for small distortions and performance remains high. |
| "Tracking" | The results of the equalizer in the previous sweep are considered to calculate the new filter until adequate results are obtained. This "learning" effect allows for powerful removal of larger distortions within a minimum of sweeps. During the tracking phase, calculation of the equalizer requires additional processing time. |
| "Freeze" | The filter is no longer changed, the current "equalizer" values are used for subsequent sweeps. |
| "User" | A user-defined "equalizer" loaded from a file is used. |
| "Averaging" | The results of the equalizer in all previous sweeps (since the instrument was switched on or the equalizer was reset) are considered to calculate the new filter. To start a new averaging process, select Reset Equalizer . Calculation of the equalizer requires additional processing time. |

Remote command:

[\[SENSe:\] DDEMod:EQUalizer:MODE](#) on page 496

Filter Length ← Equalizer Settings

Defines the length of the "equalizer" in symbols. The longer the equalizer, the more accurate the filter becomes and the more distortion can be compensated. However, longer filters require extended calculation time. The shorter the filter length, the less calculation time is required during the equalizer's tracking or averaging phase.

Remote command:

[\[SENSe:\] DDEMod:EQUalizer:LENGth](#) on page 496

Reset Equalizer ← Equalizer Settings

Deletes the data of the currently selected "equalizer". After deletion, averaging and tracking starts anew.

Resetting is useful in the rare case that calculation takes a wrong symbol decision into consideration and distorts the signal such that the original signal can no longer be determined.

This function is only available if the "equalizer" is active and in "Tracking" or "Averaging" mode (see ["Mode"](#) on page 258).


Remote command:

[\[SENSe:\] DDEMod:EQUalizer:RESet](#) on page 497

Save/Load Equalizer ← Equalizer Settings

Saves the current equalizer results to a file, or loads a user-defined equalizer.

To load a file, the "equalizer" **Mode** must be set to **USER**.

To save the file, the measurement must be stopped and the configuration must be valid (no  icon displayed in the tab label for the R&S FSW VSA application).

The file can be stored in the following formats:

- **.vae**: to be used as an equalizer file in VSA applications
- **.fres**: to be used as a user-defined frequency response correction file in any other application that supports it

Remote command:

[SENSe:] DDEMod:EQUalizer:SAVE on page 497

[SENSe:] DDEMod:EQUalizer:LOAD on page 496


[SENSe:] DDEMod:EQUalizer:FILE:FORMat on page 495

5.8.2 Advanced demodulation (synchronization)

Access: "Overview" > "Demodulation" > "Demodulation - Advanced"

Or: [MEAS CONFIG] > "Demod/Meas Filter" > "Demodulation - Advanced" tab

You can influence the synchronization process and calculation of error values during demodulation.

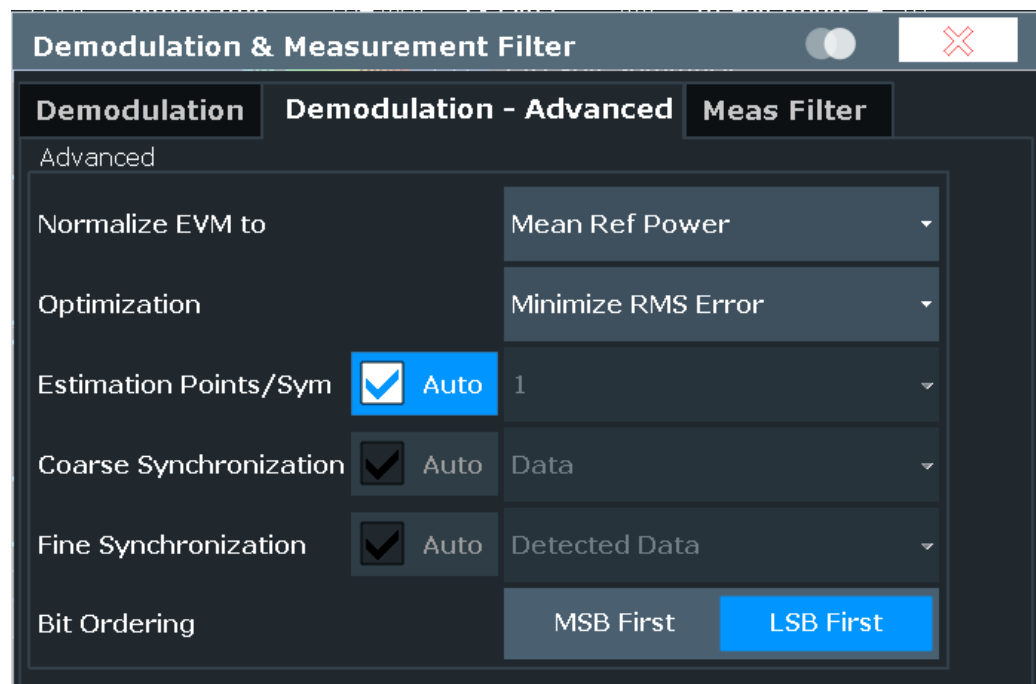

| | |
|-----------------------------|-----|
| Normalize EVM to..... | 260 |
| Optimization..... | 260 |
| Estimation Points/Sym..... | 260 |
| Coarse Synchronization..... | 261 |
| Fine Synchronization..... | 261 |

| | |
|-------------------|-----|
| Bit Ordering..... | 262 |
| If SER ≤..... | 262 |
| Offset EVM..... | 262 |

Normalize EVM to

Normalizes the EVM to the specified power value.

This setting is not available for MSK or FSK modulation.

- **Max Ref Power**
Maximum power of the reference signal at the symbol instants.
- **Mean Ref Power**
mean power of the reference signal at the symbol instants.
- **Mean Constellation Power**
Mean expected power of the measurement signal at the symbol instants
- **Max Constellation Power**
The maximum expected power of the measurement signal at the symbol instants

Remote command:

[SENSe:]DDEMod:ECALc[:MODE] on page 494

Optimization

Determines the method used to calculate the result parameters. The required method depends on the used standard and is set according to the selected standard by default.

"Minimize RMS Error" Optimizes calculation such that the RMS of the "error vector" is minimal.

"Minimize EVM" Optimizes calculation such that EVM is minimal.

Remote command:

[SENSe:]DDEMod:OPTimization on page 501

Estimation Points/Sym

During synchronization, the measurement signal is matched to the reference signal and various signal parameters are calculated. You can define how many sample points are used for this calculation at each symbol.

For more information on estimation points per symbol, see [Chapter 4.7, "Display points vs estimation points per symbol"](#), on page 166.

You can set the estimation points manually or let the VSA application decide how many estimation points to use.

If automatic mode is enabled, the VSA application uses the following settings, depending on the modulation type:

| Modulation | Est. Points |
|-------------|----------------------|
| PSK, QAM | 1 |
| Offset QPSK | 2 |
| FSK, MSK | Capture Oversampling |

For manual mode, the following settings are available:

- "1" The estimation algorithm takes only the symbol time instants into account.
- "2" Two points per symbol instant are used (required for Offset QPSK)
- "Capture Oversampling"
The number of samples per symbol defined in the signal capture settings is used (see "Sample Rate" on page 231), i.e. all sample time instants are weighted equally.

Remote command:

[SENSe:] DDEMod: EPRate: AUTO on page 494

[SENSe:] DDEMod: EPRate [:VALue] on page 495

Coarse Synchronization

It is not only possible to check whether the pattern is part of the signal, but also to use the pattern for synchronization, to obtain the correct reference signal.

For details on synchronization see [Chapter 4.4, "Overview of the demodulation process"](#), on page 131.

If "Auto" mode is selected, the detected data is used. In manual mode you can select one of the following settings:

- "Data" (Default): the detected data is used for synchronization, i.e. unknown symbols
- Use this setting if:
- No pattern is available
 - The pattern is short
 - The pattern does not have suitable synchronization properties, e.g. a pattern that consists of only one repeated symbol
- "Pattern" Known symbols from a defined pattern are used for synchronization. Depending on the signal, using the pattern can speed up your measurement considerably and make it more robust against high carrier frequency offsets.
- Make sure that the pattern is suitable for synchronization, e.g. a GSM pattern.

Remote command:

[SENSe:] DDEMod: SEARCh: PATTern: SYNC: AUTO on page 502

[SENSe:] DDEMod: SEARCh: PATTern: SYNC [:STATe] on page 502

Fine Synchronization

In addition to the coarse synchronization used for symbol decisions, a fine synchronization is available to calculate various results from the reference signal, e.g. the EVM. However, when the signal is known to have a poor transmission quality or has a high noise level, false symbol decisions are more frequent, which can cause spikes in the EVM results. In this case, you can restrict the synchronization to a known symbol sequence or pattern, if available.

For details on synchronization see [Chapter 4.4.5, "Synchronization and the reference signal"](#), on page 140.

If "Auto" mode is selected and a Known Data file has been loaded and activated for use, the known data sequences are used. Otherwise, the detected data is used.

Note: You can define a maximum symbol error rate (SER) for the known data in reference to the evaluated data. If the SER of the known data exceeds this limit, the default synchronization using the detected data is performed (see "If SER ≤" on page 262).

| | |
|-----------------|---|
| "Detected Data" | (Default) The reference signal is estimated from the detected symbols. |
| "Known Data" | The reference signal is defined as the data sequence from the loaded Known Data file that most closely matches the measured data. |
| "Pattern" | The reference signal is estimated from the defined pattern. Note: particularly (but not only) for shaped offset QPSK modulated signals, it is not recommended that you use a pattern that is significantly shorter than the result range for fine synchronization. Imprecise synchronization can be the result. |

Remote command:

[SENSe:] DDEMod:FSYNc:AUTO on page 498
 [SENSe:] DDEMod:FSYNc[:MODE] on page 498
 [SENSe:] DDEMod:FSYNc:REsult? on page 498

Bit Ordering

Determines how the bits in the symbols are ordered in all symbol displays.

| | |
|-------|--|
| "LSB" | Least significant bit first (used in Bluetooth specification, for example) |
| "MSB" | Most significant bit first (default) |

Remote command:

[SENSe:] DDEMod:BORDering on page 493

If SER ≤

This setting is only available if "Known Data" is selected for "Fine Synchronization". You can define a maximum symbol error rate for the known data in reference to the evaluated data. Thus, if a wrong file was mistakenly loaded or the file proves to be unsuitable, it is not used for synchronization. Otherwise the results would be strongly distorted. If the SER of the known data exceeds this limit, the default synchronization using the detected data is performed.

Remote command:

[SENSe:] DDEMod:FSYNc:LEVel on page 498

Offset EVM

The "Offset EVM" is only available for (shaped or normal) Offset QPSK modulated signals.

Unlike QPSK modulation, the Q component of Offset QPSK modulation is delayed by half a symbol period against the I component in the time domain. The symbol time instants of the I and the Q component therefore do not coincide.

The "Offset EVM" controls the calculation of all results that are based on the "error vector". It affects the "EVM", "Real/Imag" and "Vector I/Q" result displays as well as the EVM results in the "Result Summary" (EVM and MER).

You can configure the way the VSA application calculates the "error vector" results.

If "Offset EVM" is disabled, the VSA application subtracts the measured signal from the reference signal to calculate the error vector. This method results in the fact that the error vector contains two symbol instants per symbol period: one that corresponds to the I component and one that corresponds to the Q component.

If "Offset EVM" is enabled, however, the VSA application compensates the delay of the Q component with respect to the I component in the measurement signal as well as the reference signal **before** calculating the error vector. That means that the error vector contains only one symbol instant per symbol period.

Remote command:

[SENSe:] DDEMod:ECALc:OFFSet on page 494


5.9 Measurement filter settings

Access: "Overview" > "Meas Filter"

or: [MEAS CONFIG] > "Demod/Meas Filter" > "Meas Filter" tab

The measurement filter can be used to filter both the measured signal and the reference signal, and thus the "error vector". You can configure the measurement filter to be used.

For more information on measurement filters, see [Chapter 4.1.4, "Measurement filters"](#), on page 71.

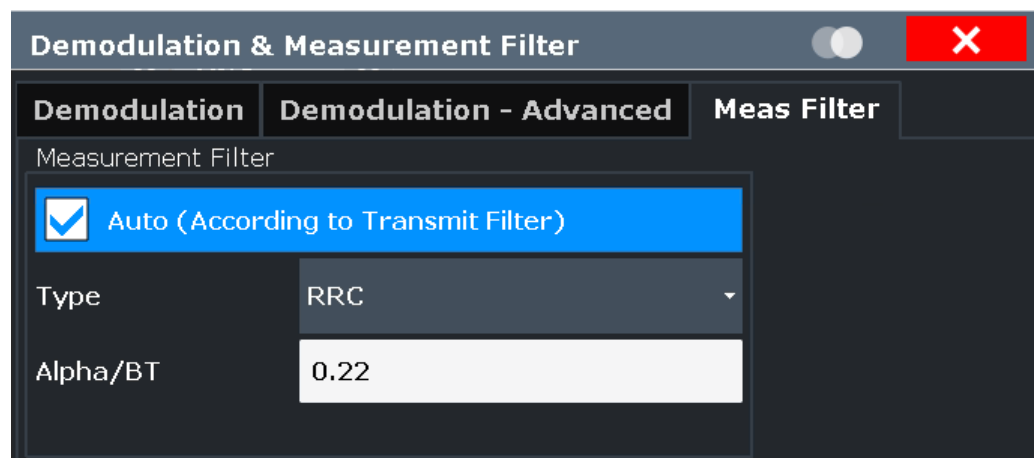

| | |
|---|-----|
| Using the Transmit Filter as a Measurement Filter (Auto)..... | 263 |
| Type..... | 264 |
| └ Load User Filter..... | 264 |
| └ Alpha/BT..... | 264 |

Using the Transmit Filter as a Measurement Filter (Auto)

If the "Auto" option is enabled, the measurement filter is defined automatically depending on the transmit filter specified in the "Modulation" settings (see ["Transmit Filter Type"](#) on page 189).

Note: If a user-defined transmit filter is selected and the measurement filter is defined automatically, a Low-ISI measurement filter according to the selected user filter is calculated and used.

Remote command:

[SENSe:] DDEMod:MFILter:AUTO on page 503

Type

Defines the measurement filter type, if the [Using the Transmit Filter as a Measurement Filter \(Auto\)](#) setting is not enabled.

| | |
|-----------------------|---|
| "<Predefined Filter>" | The selected predefined filter is used. An overview of available measurement filters is provided in Chapter C.2, "Measurement filters" , on page 623. (For SOQPSK modulated signals, no low-ISI measurement filter is available. If selected, the used filter does not provide low-ISI results! |
| "User" | User-defined filter. Define the filter using the Load User Filter function or the [SENSe:] DDEMod:MFILter:USER command. For more information on user-defined filters, see Chapter 4.1.5, "Customized filters" , on page 73. |
| "None" | No measurement filter is used. |

Remote command:

[SENSe:] DDEMod:MFILter[:STATe] on page 503

To turn off the measurement filter.

[SENSe:] DDEMod:MFILter:USER on page 503

To use a user-defined filter.

[SENSe:] DDEMod:MFILter:NAME on page 503

To define the name of the measurement filter.

Load User Filter ← Type

Opens a file-selection dialog box to select the user-defined measurement filter to be used.

This setting is only available if "User" is selected as the "Filter Type".

Remote command:

[SENSe:] DDEMod:MFILter:USER on page 503

Alpha/BT ← Type

Defines the roll-off factor (Alpha) or the filter bandwidth (BT).

The roll-off factor or filter bandwidth are available for RC, RRC and Gauss filters.

If the measurement mode is automatically selected according to the transmit filter, this setting is identical to the "Alpha/BT" value in the modulation settings (see ["Alpha/BT"](#) on page 190).

Remote command:

Measurement filter: [SENSe:] DDEMod:MFILter:ALPHa on page 502

Transmit filter: [SENSe:] DDEMod:TFILter:ALPHa on page 370

5.10 Evaluation range configuration

Access: "Overview" > "Evaluation Range"

or: [MEAS CONFIG] > "Range Settings" > "Evaluation Range" tab

The evaluation range defines which range of the result is to be evaluated - either the entire result range or only a specified part of it. The calculated length of the specified range is indicated beneath the entries.

Enable "Visualization" to display a preview of the evaluation range (in relation to the result range) with the current settings at the bottom of the dialog box. The green bar below the trace indicates the defined result range, indented red lines indicate defined start and stop symbols (see "Evaluation range display" on page 165). The visualization is not editable directly.

Result Range Alignment and Evaluation Range

Result Range | **Evaluation Range**

Evaluation Range

Entire Result Range: 0.0 sym ... 148.0 sym

Start: 3.0 sym

Stop: 144.75 sym

Length 142.0 sym = 36.979 µs

Visualization

Diagram showing Result Range (0.0 to 148.0) and Pattern (3.0 to 144.75) with corresponding start and stop symbols.

For details on the evaluation range, see [Chapter 4.6, "Measurement ranges"](#), on page 161.

For an example on setting the evaluation range, see [Chapter 9.3.5, "Setting the evaluation range"](#), on page 324.

| | |
|--|-----|
| Evaluating the Entire Result Range | 266 |
| Start / Stop | 266 |

Evaluating the Entire Result Range

If enabled, the entire result range is evaluated.

If disabled, you can define a specific part of the result range to be evaluated.

Remote command:

`CALCulate<n>:ELIN<ri>:STATe` on page 504

Start / Stop

Defines the symbol in the result range at which evaluation is started and stopped. The start and stop symbols themselves are included in the evaluation range.

Note: Note that the start and stop values are defined with respect to the x-axis including an optional offset defined via the [Symbol Number at <Reference> Start](#) parameter.

Remote command:

`CALCulate<n>:ELIN<ri>[:VALue]` on page 505

5.11 Adjusting settings automatically

Access: [AUTO SET]

Some settings can be adjusted by the FSW automatically according to the current measurement settings. To do so, a measurement is performed. The duration of this measurement can be defined automatically or manually.

To activate the automatic adjustment of a setting, select the corresponding function in the [AUTO SET] menu or in the configuration dialog box for the setting, where available.

**Adjusting settings automatically during triggered measurements**

When you select an auto adjust function a measurement is performed to determine the optimal settings. If you select an auto adjust function for a triggered measurement, you are asked how the FSW should behave:

- (default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger. The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level is adjusted as follows for IF Power and RF Power triggers:
Trigger Level = Reference Level - 15 dB

Remote command:

`[SENSe:]ADJust:CONFigure:TRIGger` on page 508

| | |
|--|-----|
| Setting the Reference Level Automatically (Auto Level) | 267 |
| Resetting the Automatic Measurement Time (Meas Time Auto) | 267 |
| Changing the Automatic Measurement Time (Meas Time Manual) | 267 |
| Upper Level Hysteresis | 267 |

| | |
|--|-----|
| Lower Level Hysteresis..... | 268 |
| Auto Scale Once/Auto Scale Window..... | 268 |
| Auto Scale All..... | 268 |

Setting the Reference Level Automatically (Auto Level)

Automatically determines a reference level which ensures that no overload occurs at the FSW for the current input data. At the same time, the internal attenuators and the preamplifier (for analog baseband input: the full-scale level) are adjusted. As a result, the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the FSW.

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

When using the optional 2 GHz / 5 GHz bandwidth extension (B2000/B5000) or the optional Oscilloscope Baseband Input, the level measurement is performed on the connected oscilloscope. For B2000/B5000, y-axis scaling on the oscilloscope is limited to a minimum of 5 mV per division.

You can change the measurement time for the level measurement if necessary (see "Changing the Automatic Measurement Time (Meas Time Manual)" on page 267).

Remote command:

[SENSe:]ADJust:LEVel on page 508

Resetting the Automatic Measurement Time (Meas Time Auto)

Resets the measurement duration for automatic settings to the default value.

Remote command:

[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE on page 506

Changing the Automatic Measurement Time (Meas Time Manual)

This function allows you to change the measurement duration for automatic setting adjustments. Enter the value in seconds.

Note: The maximum measurement duration depends on the currently selected measurement and the installed (optional) hardware. Thus, the measurement duration actually used to determine the automatic settings can be shorter than the value you define here.

Remote command:

[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE on page 506

[SENSe:]ADJust:CONFigure:LEVel:DURation on page 506

Upper Level Hysteresis

When the reference level is adjusted automatically using the [Auto Level](#) function, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold that the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

`[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer` on page 507

Lower Level Hysteresis

When the reference level is adjusted automatically using the [Auto Level](#) function, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold that the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

`[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer` on page 507

Auto Scale Once/Auto Scale Window

If enabled, both the x-axis and y-axis are automatically adapted to the current measurement results (only once, not dynamically) in the selected window.

To adapt the range of all screens together, use the [Auto Scale All](#) function.

Remote command:

For statistics (result type transformation): `CALCulate<n>:STATistics:SCALE:AUTO ONCE` on page 465

For all other results: `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:AUTO ONCE` on page 505

Auto Scale All

Adapts the x-axis and y-axis to the current measurement values (only once, not dynamically) in all measurement windows.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:AUTO:ALL` on page 506

5.12 Restoring factory settings for vector signal analysis

Access: [Meas]

Apart from the "Preset Channel" function (see "[Preset Channel](#)" on page 183), the following functions are available to restore factory settings to the VSA application:

| | |
|--|-----|
| Restore Factory Settings | 268 |
| ↳ Restore Standard Files | 268 |
| ↳ Restore Pattern Files | 269 |

Restore Factory Settings

Opens a submenu that allows you to restore all standards and pattern settings on the instrument to the values predefined by Rohde & Schwarz available at the time of delivery.

Restore Standard Files ← Restore Factory Settings

Restores the standards predefined by Rohde & Schwarz available at the time of delivery.

Note that this function overwrites customized standards that have the same name as predefined standards.

Remote command:

`[SENSe:]DDEMod:FACTory[:VALue]` on page 360

Restore Pattern Files ← Restore Factory Settings

Restores the pattern files predefined by Rohde&Schwarz available at the time of delivery.

Remote command:

`[SENSe:]DDEMod:FACTory[:VALue]` on page 360

6 Analysis

Access: "Overview" > "Analysis"

General result analysis settings concerning the trace, markers, windows etc. can be configured. They are identical to the analysis functions in the base unit except for the special window functions.



Window-specific configuration

The settings in the "Analysis" dialog box are specific to the selected window. Thus, the "Analysis" button is only available in the "Overview" if the "Specifics for" option is enabled. To configure the settings for a different VSA window, select the window outside the displayed dialog box, or select the window from the "Specifics for" selection list in the dialog box.

- [Trace settings](#).....270
- [Trace export settings](#).....275
- [Markers](#).....277
- [Limit and display lines](#).....281
- [Display and window configuration](#).....285
- [Analysis in MSRA/MSRT mode](#).....289

6.1 Trace settings


Access: "Overview" > "Analysis" > "Traces"

or: [TRACE] > "Trace Config"

The trace settings determine how the measured data is analyzed and displayed in the window. Depending on the result display, between 1 and 6 traces can be displayed.



Trace data can also be exported to an ASCII file for further analysis. For details, see [Chapter 6.2, "Trace export settings"](#), on page 275.

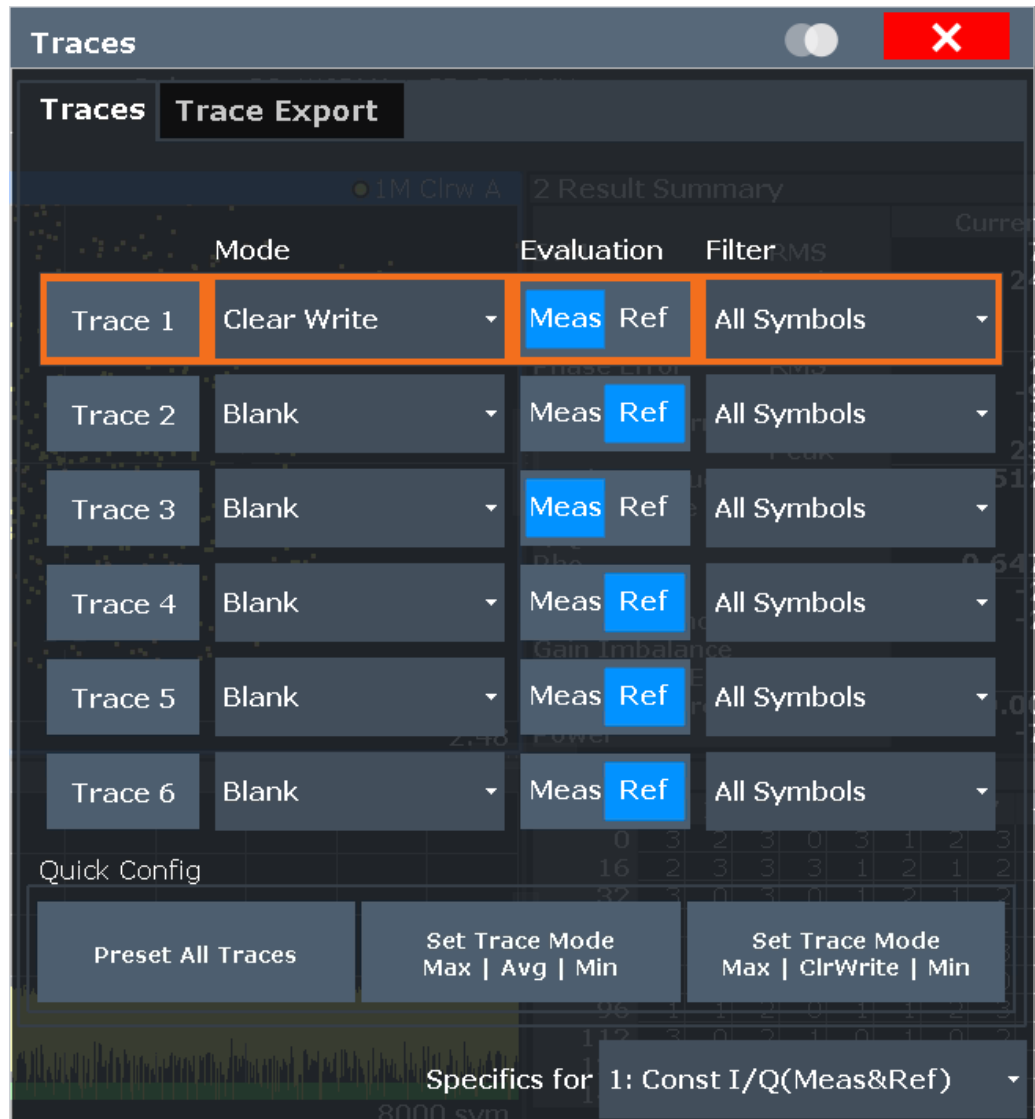

| | |
|--|-----|
| Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6..... | 271 |
| Trace Mode..... | 272 |
| Evaluation..... | 273 |
| Filter (I/Q Constellation, K70M only)..... | 273 |
| Predefined Trace Settings - Quick Config..... | 274 |
| Trace 1/ Trace 2/ Trace 3/ Trace 4 (Softkeys)..... | 274 |

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the corresponding trace for configuration. The currently selected trace is highlighted orange.

For the Magnitude Overview Absolute result display, only one trace is available.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATE]` on page 516

Selected via numeric suffix of `TRACe<t>` commands

Trace Mode

Defines the update mode for subsequent traces.

The available trace modes depend on the selected result display. Not all evaluations support all trace modes.

For the "Magnitude Overview Absolute" result display, only the trace modes "Clear/Write" and "View" are available. For the "Magnitude Absolute (Selected CB)" result display, the trace modes "Average", "MinHold", "MaxHold" are not available.

| | |
|----------------|---|
| "Clear/ Write" | <p>Overwrite mode (default): the trace is overwritten by each measurement.</p> <p>All available detectors can be selected.</p> |
| "Max Hold" | <p>The maximum value is determined over several measurements and displayed. The FSW saves the measurement result in the trace memory only if the new value is greater than the previous one.</p> |
| "Min Hold" | <p>The minimum value is determined from several measurements and displayed. The FSW saves the measurement result in the trace memory only if the new value is lower than the previous one.</p> |
| "Average" | <p>The average is formed over several measurements.</p> <p>The Statistic Count determines the number of averaging procedures.</p> |
| "View" | <p>The current contents of the trace memory are frozen and displayed.</p> <p>Note: If a trace is frozen, you can change the measurement settings, apart from scaling settings, without impact on the displayed trace. The fact that the displayed trace no longer matches the current measurement settings is indicated by a yellow asterisk ✨ on the tab label. If you change any parameters that affect the scaling of the diagram axes, the FSW automatically adapts the trace data to the changed display range. Thus, you can zoom into the diagram after the measurement to show details of the trace.</p> <p>If you change the trace mode to "View" for a density trace, the density coloring is removed. The result is identical to freezing the "Clear/Write" trace.</p> <p>For "View" trace mode, the Filter (I/Q Constellation, K70M only) and the Evaluation cannot be changed. They remain set to the value that was most recently set.</p> |
| "Blank" | <p>Removes the selected trace from the display.</p> |

"Density"

The occurrence of each value within the current result range or evaluation range is indicated by color.

This trace mode is only available for constellation, vector, and eye diagrams.

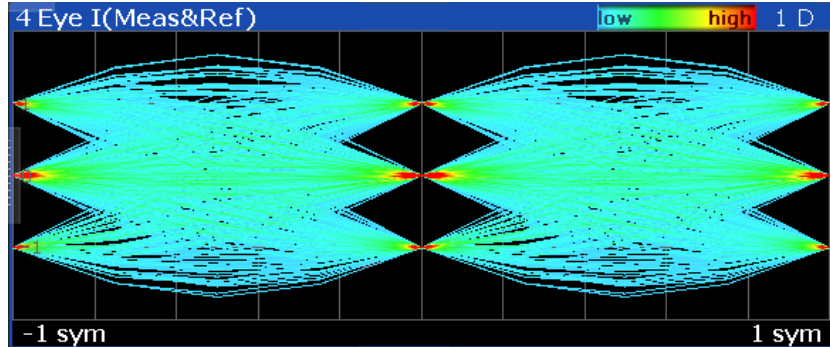


Figure 6-1: Example: eye diagram with density trace

Note that you cannot "freeze" the density trace using the "View" trace mode.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE` on page 515

Evaluation

Defines whether the trace displays the evaluation of the measured signal or the reference signal (if "Meas & Ref Signal" is used as the evaluation data source, see "Signal Source" on page 286).

For multi-source results, the data source for each trace can be defined as "Error" or "Capture Buffer"/"Measurement" (depending on the result type, see "Multi Source" on page 23).


For **Trace Mode**: "View", the data source to be evaluated cannot be changed. It remains set to the value that was most recently set.

Remote command:

`CALCulate<n>:TRACe<t>[:VALue]` on page 514

Filter (I/Q Constellation, K70M only)

For multi-modulation analysis, the I/Q constellation diagram can display different colored traces for different symbol types.

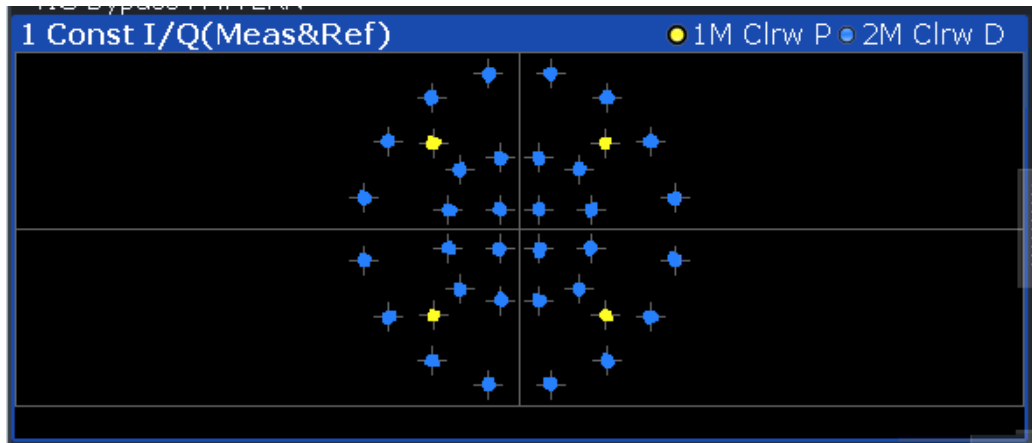

Note: For **Trace Mode**: "View", the filter setting cannot be changed. It remains set to the value that was most recently set.

"All symbols" Trace consists of constellation points for all symbols

"Only pattern" Trace consists of only pattern symbols

"Only data" Trace consists of only data symbols

Remote command:

[CALCulate<n>:TRACe<t>:SYMBols](#) on page 515

Predefined Trace Settings - Quick Config

Commonly required trace settings have been predefined and can be applied very quickly by selecting the appropriate button.

| Function | Trace Settings | |
|--|----------------|-------------|
| Preset All Traces | Trace 1: | Clear Write |
| | Traces 2-6: | Blank |
| Set Trace Mode Max Avg Min | Trace 1: | Max Hold |
| | Trace 2: | Average |
| | Trace 3: | Min Hold |
| | Traces 4-6: | Blank |
| Set Trace Mode Max ClrWrite Min | Trace 1: | Max Hold |
| | Trace 2: | Clear Write |
| | Trace 3: | Min Hold |
| | Traces 4-6: | Blank |

Remote command:

[DISPlay\[:WINDow<n>\] \[:SUBWindow<w>\]:TRACe<t>:PRESet](#) on page 517

Trace 1/ Trace 2/ Trace 3/ Trace 4 (Softkeys)

Displays the "Traces" settings and focuses the "Mode" list for the selected trace.

For the Magnitude Overview Absolute result display, only one trace is available.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe]` on page 516


6.2 Trace export settings

Access: "Overview" > "Analysis" > "Traces" > "Trace Export"

or: [TRACE] > "Trace Export Config"

The captured (trace) data can also be exported to an ASCII file. The format of these files can be configured.

For step-by-step instructions on how to export a trace, see [Chapter 8.3.4, "How to export the trace data to a file"](#), on page 312.

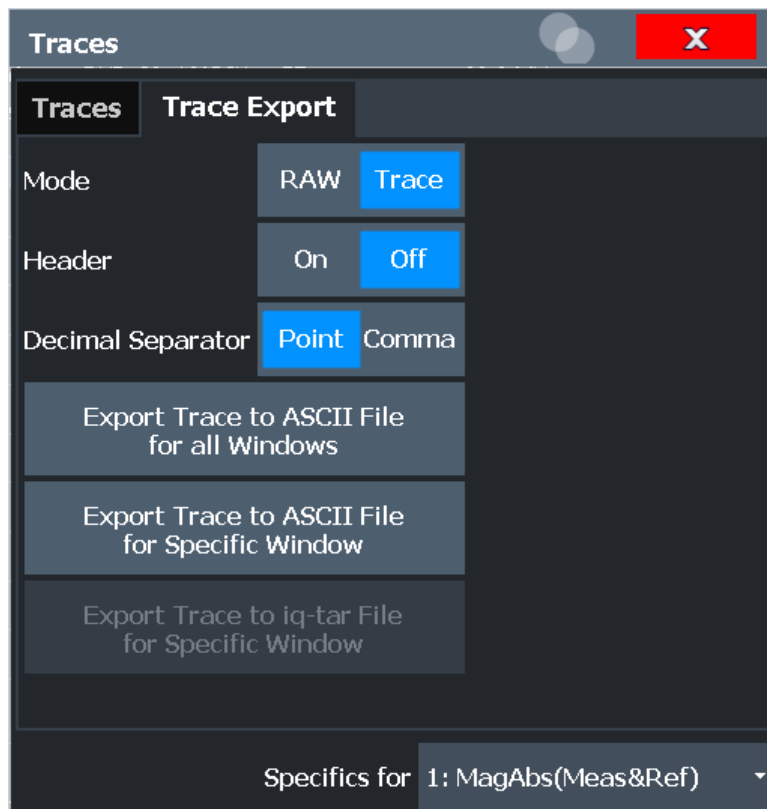

| | |
|--|-----|
| Data Export Mode..... | 275 |
| Header..... | 276 |
| Decimal Separator..... | 276 |
| Export Trace to ASCII File..... | 276 |
| Export Trace to iq-tar File for Specific Window..... | 276 |

Data Export Mode

Defines whether raw I/Q data (as captured) or trace data (evaluated) is stored.

Remote command:

`FORMat:DEXPort:MODE` on page 563

Header

If enabled, a header with scaling information etc. is included in the file.

Remote command:

`FORMat:DEXPort:HEADer` on page 563

Decimal Separator

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

`FORMat:DEXPort:DSEParator` on page 562

Export Trace to ASCII File

Opens a file selection dialog box and saves the traces of the captured data in ASCII format to the specified file and directory.

Either the traces for the selected window only (see "Specific Settings for" on page 183) are exported, or the traces of all windows are exported, one after the other.

For details on the file format, see Chapter D, "ASCII file export format for VSA data", on page 625.

Remote command:

`MMEMory:STORe<n>:TRACe` on page 564

Export Trace to iq-tar File for Specific Window

This function is only available for result types that provide I/Q data based on the "error vector", such as the "Vector I/Q" or Real/Imag displays. If activated, the I/Q data for the displayed trace in the selected window is stored to a file in `iq.tar` format.

See the FSW I/Q Analyzer and I/Q Input User Manual for details.

This function is useful to analyze carrier in carrier measurements, for example. In this case, one carrier signal is "hidden" behind another. To analyze the hidden signal, you must first determine the error vector between the measured signal and the reference signal. Then you can export the error vector trace to an `iq.tar` file, which you then load into the capture buffer.

Note: The trace values do not have a unit. However, in the `iq.tar` file the values are stored in the unit Volt. The trace values are multiplied by a scaling factor according to the following equation before they are stored:

I/Q values = trace values · scaling factor

where:

$$\sqrt{\frac{P_{lin}}{1000}} \cdot InputImpedance [\Omega]$$

$$P_{lin} = 10^{(RefLevel[dBm]/10)}$$

Remote command:

`MMEMory:STORe<n>:IQ:TRACe` on page 563

6.3 Markers

Access: "Overview" > "Analysis" > "Marker"

or: [MKR]

Markers help you analyze your measurement results by determining particular values in the diagram. Thus you can extract numeric values from a graphical display.


- [Individual marker settings](#)..... 277
- [Marker search settings](#).....279
- [Marker positioning functions](#)..... 280

6.3.1 Individual marker settings

Access: "Overview" > "Analysis" > "Marker" > "Markers"

or: [MKR] > "Marker Config"

In VSA evaluations, up to 5 markers can be activated in each diagram at any time.

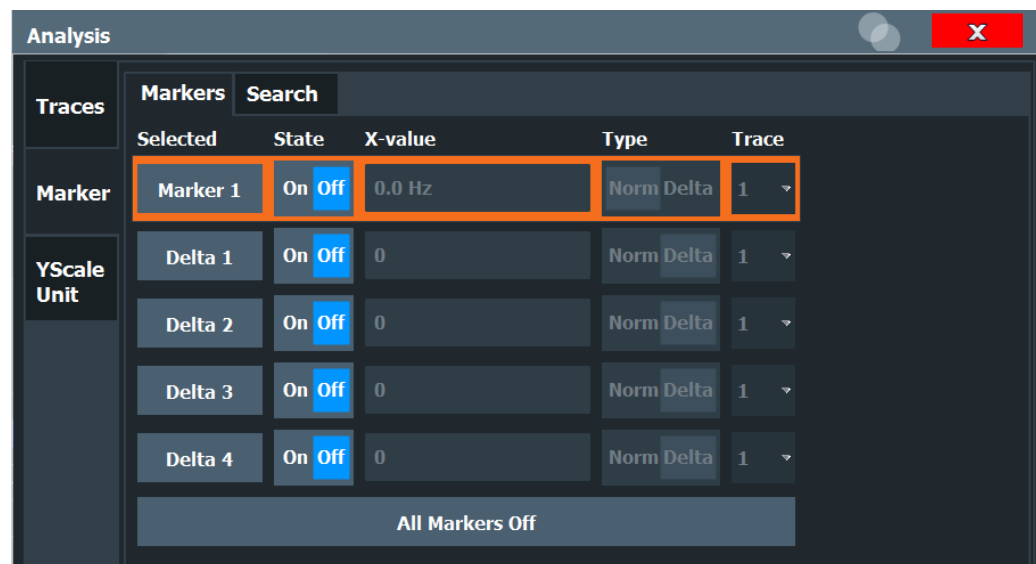

| | |
|---|-----|
| Selected Marker | 277 |
| Marker State | 278 |
| X-value | 278 |
| Marker Type | 278 |
| Assigning the Marker to a Trace | 278 |
| All Markers Off | 278 |
| Couple Windows | 278 |

Selected Marker

Marker name. The marker which is currently selected for editing is highlighted orange.

Remote command:

Marker selected via suffix <m> in remote commands.

Marker State

Activates or deactivates the marker in the diagram.

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 518

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 521

X-value

Defines the position of the marker on the x-axis.

Remote command:

[CALCulate<n>:DELTAmarker<m>:X](#) on page 520

[CALCulate<n>:MARKer<m>:X](#) on page 519

Marker Type

Toggles the marker type.

The type for marker 1 is always "Normal", the type for delta marker 1 is always "Delta". These types cannot be changed.

Note: If normal marker 1 is the active marker, switching the "Mkr Type" activates an additional delta marker 1. For any other marker, switching the marker type does not activate an additional marker, it only switches the type of the selected marker.

"Normal" A normal marker indicates the absolute value at the defined position in the diagram.

"Delta" A delta marker defines the value of the marker relative to the specified reference marker (marker 1 by default).

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 518

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 521

Assigning the Marker to a Trace

The "Trace" setting assigns the selected marker to an active trace. The trace determines which value the marker shows at the marker position. If the marker was previously assigned to a different trace, the marker remains on the previous frequency or time, but indicates the value of the new trace.

If a trace is turned off, the assigned markers and marker functions are also deactivated.

Remote command:

[CALCulate<n>:MARKer<m>:TRACe](#) on page 519

All Markers Off

Deactivates all markers in one step.

Remote command:

[CALCulate<n>:MARKer<m>:AOFF](#) on page 518

Couple Windows

If enabled, markers in all diagrams with the same x-axis (time or symbols) have coupled x-values (except for "Capture Buffer" display). That means, if you move the marker in one diagram, it is moved in all coupled diagrams.


Remote command:

[CALCulate<n>:MARKer<m>:LINK](#) on page 518

6.3.2 Marker search settings

Access: [MKR TO] > "Search Config"

Several functions are available to set the marker to a specific position very quickly and easily. To determine the required marker position, searches can be performed. The search results can be influenced by special settings.

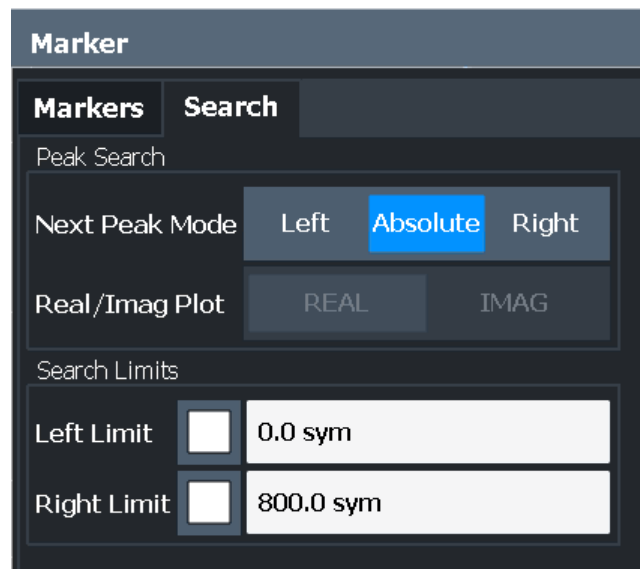

| | |
|--|-----|
| Search Mode for Next Peak | 279 |
| Real / Imag Plot | 279 |
| Search Limits (Left / Right) | 280 |

Search Mode for Next Peak

Selects the search mode for the next peak search.

| | |
|------------|---|
| "Left" | Determines the next maximum/minimum to the left of the current peak. |
| "Absolute" | Determines the next maximum/minimum to either side of the current peak. |
| "Right" | Determines the next maximum/minimum to the right of the current peak. |

Remote command:

[Chapter 11.7.2.2, "Marker search and positioning settings"](#), on page 522

Real / Imag Plot

Defines whether marker search functions are performed on the real or imaginary trace of the "Real/Imag" measurement.

Remote command:

[CALCulate<n>:MARKer<m>:SEARch](#) on page 527

Search Limits (Left / Right)

If activated, limit lines are defined and displayed for the search. Only results within the limited search range are considered.

Remote command:

[CALCulate<n>:MARKer<m>:X:SLIMits\[:STATe\]](#) on page 529

[CALCulate<n>:MARKer<m>:X:SLIMits:LEFT](#) on page 527

[CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT](#) on page 528

6.3.3 Marker positioning functions

The following functions set the currently selected marker to the result of a peak search.

Access: [MKR ->]

| | |
|---|-----|
| Peak Search | 280 |
| Search Next Peak | 280 |
| Max Peak | 280 |
| Search Minimum | 280 |
| Search Next Minimum | 281 |
| Selected Result Rng | 281 |

Peak Search

Sets the selected marker/delta marker to the maximum of the trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 526

[CALCulate<n>:DELTamarker<m>:MAXimum\[:PEAK\]](#) on page 523

Search Next Peak

Sets the selected marker/delta marker to the next (lower) maximum of the assigned trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) on page 525

[CALCulate<n>:MARKer<m>:MAXimum:RIGHT](#) on page 525

[CALCulate<n>:MARKer<m>:MAXimum:LEFT](#) on page 525

[CALCulate<n>:DELTamarker<m>:MAXimum:NEXT](#) on page 523

[CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT](#) on page 523

[CALCulate<n>:DELTamarker<m>:MAXimum:LEFT](#) on page 523

Max |Peak|

Sets the active marker/delta marker to the largest absolute peak value (maximum or minimum) of the selected trace.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum:APEak](#) on page 525

Search Minimum

Sets the selected marker/delta marker to the minimum of the trace. If no marker is active, marker 1 is activated.

Remote command:

`CALCulate<n>:MARKer<m>:MINimum[:PEAK]` on page 527

`CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]` on page 524

Search Next Minimum

Sets the selected marker/delta marker to the next (higher) minimum of the selected trace. If no marker is active, marker 1 is activated.

Remote command:

`CALCulate<n>:MARKer<m>:MINimum:NEXT` on page 526

`CALCulate<n>:MARKer<m>:MINimum:LEFT` on page 526

`CALCulate<n>:MARKer<m>:MINimum:RIGHT` on page 527


`CALCulate<n>:DELTamarker<m>:MINimum:NEXT` on page 524

`CALCulate<n>:DELTamarker<m>:MINimum:LEFT` on page 524

`CALCulate<n>:DELTamarker<m>:MINimum:RIGHT` on page 525

Selected Result Rng

Sets a marker to the start symbol of the currently selected result range. This function is useful to determine the start position of the selected result range within the capture buffer.

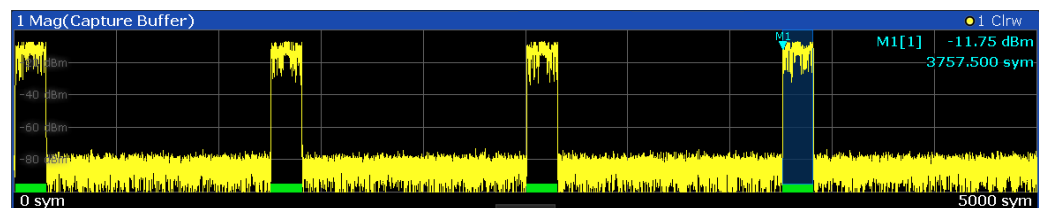

This function is only available in result diagrams based on the capture buffer.

Remote command:

`CALCulate<n>:MARKer<m>:MBURst:START` on page 526

`CALCulate<n>:DELTamarker<m>:MBURst:START` on page 524

6.4 Limit and display lines

Access: [LINES] > "Lines/Limits"

The results of a "modulation accuracy" measurement can be checked for violation of defined limits automatically (see "Modulation Accuracy" on page 22).

For eye diagrams, display lines allow you to measure the size of the eye in the diagram.

6.4.1 Display lines for eye diagrams

For eye diagrams (see Chapter 3.2, "Result types in VSA", on page 23), display lines allow you to measure the size of the eye in the diagram. For other result displays, lines are not available.

Access: [LINES] > "Lines/Limits"

For a detailed description on the use of display lines in eye diagrams, see [Chapter 8.3.2, "How to measure the size of an eye"](#), on page 310.

| | |
|---------------------------------------|-----|
| Vertical Line | 282 |
| Horizontal Line | 282 |

Vertical Line

Displays an absolute or relative vertical line in an eye diagram (see [Chapter 3.2, "Result types in VSA"](#), on page 23). A relative line is only available if an absolute vertical line is already displayed.

The position of the lines can be defined numerically or by dragging the line to a new position in the diagram.

The absolute x-value of the eye diagram at the position of the first line is indicated in the diagram. The relative x-value of the eye diagram at the position of the second line, in relation to the x-value at the first line, is also indicated. The unit of the vertical lines depends on the unit of the x-axis in the diagram.

If you position the lines at the left and right edges of the eye, the relative line value represents the width of the eye.

See also [Chapter 8.3.2, "How to measure the size of an eye"](#), on page 310.

Remote command:

[CALCulate<n>:TLABs:STATe](#) on page 531

[CALCulate<n>:TLABs\[:VALue\]](#) on page 532

[CALCulate<n>:TLRel:STATe](#) on page 532

[CALCulate<n>:TLRel\[:VALue\]](#) on page 533

Horizontal Line

Displays an absolute or relative horizontal line in an eye diagram (see [Chapter 3.2, "Result types in VSA"](#), on page 23). A relative line is only available if an absolute horizontal line is already displayed.

The position of the lines can be defined numerically or by dragging the line to a new position in the diagram.

The absolute y-value of the eye diagram at the position of the first line is indicated in the diagram. The relative y-value of the eye diagram at the position of the second line, in relation to the y-value at the first line, is also indicated. The unit of the vertical lines depends on the unit of the y-axis in the diagram.

If you position the lines at the top and the bottom of the eye, the relative line value represents the height of the eye.

See also [Chapter 8.3.2, "How to measure the size of an eye"](#), on page 310.

Remote command:

[CALCulate<n>:DLABs:STATe](#) on page 529

[CALCulate<n>:DLABs\[:VALue\]](#) on page 530

[CALCulate<n>:DLRel:STATe](#) on page 530

[CALCulate<n>:DLRel\[:VALue\]](#) on page 531

6.4.2 Modulation accuracy limit lines

Access: [LINES] > "ModAcc Limits Config"

The results of a "modulation accuracy" measurement can be checked for violation of defined limits automatically (see "Modulation Accuracy" on page 22).

| | Current | Mean | Peak | Limit Value | Check |
|-------------------------|---------|------|------|-------------|--------------------------|
| Frequency Error RMS | | | | 1.5 % | <input type="checkbox"/> |
| Frequency Error Peak | | | | 2.5 % | <input type="checkbox"/> |
| Magnitude Error RMS | | | | 1.5 % | <input type="checkbox"/> |
| Magnitude Error Peak | | | | 2.5 % | <input type="checkbox"/> |
| FSK Deviation Error | | | | 1.0 kHz | <input type="checkbox"/> |
| Carrier Frequency Error | | | | 1.0 kHz | <input type="checkbox"/> |

Note: Limits for Current and Peak are always equal!

For details on working with limits, see [Chapter 8.3.3, "How to check limits for modulation accuracy"](#), on page 311.

| | |
|---|-----|
| Checking Modulation Accuracy Limits | 283 |
| Set to Default | 284 |
| Current/Mean/Peak | 284 |
| ↳ Limit Value | 284 |
| ↳ Check | 285 |

Checking Modulation Accuracy Limits

Activates or deactivates evaluation of "modulation accuracy" limits in the "Result Summary".

For details on working with limits, see [Chapter 8.3.3, "How to check limits for modulation accuracy"](#), on page 311.

Remote command:

[CALCulate<n>:LIMit:MACCuracy:STATe](#) on page 534

Set to Default

Restores the default limits and deactivates all checks.

Remote command:

[CALCulate<n>:LIMit:MACCuracy:DEFault](#) on page 534

Current/Mean/Peak

Defines and activates the limits for the currently measured value, the mean and the peak value on separate tabs. Note that the limits for the current and peak values are always the same.

For details on working with limits, see [Chapter 8.3.3, "How to check limits for modulation accuracy"](#), on page 311.

Limit Value ← Current/Mean/Peak

Define the limit with which the currently measured, mean or peak value is to be compared. A different limit value can be defined for each result type. Depending on the modulation type, different result types are available.

| Result type | Remote command |
|-----------------------------|--|
| PSK, MSK, QAM: | |
| "EVM RMS" | CALCulate<n>:LIMit:MACCuracy:EVM:RCURrent:VALue on page 536 |
| "EVM Peak" | CALCulate<n>:LIMit:MACCuracy:EVM:PCURrent:VALue on page 536 |
| "Phase Err Rms" | CALCulate<n>:LIMit:MACCuracy:PERRor:RCURrent:VALue on page 538 |
| "Phase Err Peak" | CALCulate<n>:LIMit:MACCuracy:PERRor:PCURrent:VALue on page 538 |
| "Magnitude Err Rms" | CALCulate<n>:LIMit:MACCuracy:MERRor:RCURrent:VALue on page 538 |
| "Magnitude Err Peak" | CALCulate<n>:LIMit:MACCuracy:MERRor:PCURrent:VALue on page 538 |
| "Carr Freq Err" | CALCulate<n>:LIMit:MACCuracy:CFERRor:CURRent:VALue on page 536 |
| "Rho" | CALCulate<n>:LIMit:MACCuracy:RHO:CURRent:VALue on page 539 |
| "IQ Offset" | CALCulate<n>:LIMit:MACCuracy:OOFfset:CURRent:VALue on page 538 |
| FSK modulation only: | |
| "Freq Err Rms" | CALCulate<n>:LIMit:MACCuracy:FERRor:RCURrent:VALue on page 537 |
| "Freq Err Peak" | CALCulate<n>:LIMit:MACCuracy:FERRor:PCURrent:VALue on page 537 |
| "Magnitude Err Rms" | CALCulate<n>:LIMit:MACCuracy:MERRor:RCURrent:VALue on page 538 |

| Result type | Remote command |
|----------------------|--|
| "Magnitude Err Peak" | <code>CALCulate<n>:LIMit:MACCuracy:MERRor:PCURrent:VALue</code> on page 538 |
| "FSK Dev Err" | <code>CALCulate<n>:LIMit:MACCuracy:FERRor:PCURrent:VALue</code> on page 537 |
| "Carr Freq Err" | <code>CALCulate<n>:LIMit:MACCuracy:CFERRor:CURRent:VALue</code> on page 536 |

For details on working with limits, see [Chapter 8.3.3, "How to check limits for modulation accuracy"](#), on page 311.

Check ← Current/Mean/Peak

Considers the defined limit value in the limit check, if checking is activated.

For details on working with limits, see [Chapter 8.3.3, "How to check limits for modulation accuracy"](#), on page 311.

Remote command:

`CALCulate<n>:LIMit:MACCuracy:<ResultType>:<LimitType>:STATe`
on page 535

6.5 Display and window configuration

The captured I/Q data can be evaluated using various different methods without having to start a new measurement.



To get started, some typical and useful display configurations are predefined. Select the required scenario and the display is configured suitably.

See [Chapter 3.3, "Predefined display configuration"](#), on page 65

As opposed to the FSW I/Q Analyzer application or other applications, in VSA configuring the result display requires two steps:

1. **Display Configuration:** In the first step, you select the data source for the evaluation and the window placement in the SmartGrid.

The SmartGrid mode is activated automatically when you select "Display Config" from the main VSA menu or "Display Config" in the Overview. Note, however, that this button is only displayed in the general "Overview", not for window-specific configuration ("Specifics for" must be disabled).

The default evaluation for the selected data source is displayed in the window. You can display up to 16 result displays simultaneously in separate windows. The VSA evaluation methods are described in [Chapter 3, "Measurements and result displays"](#), on page 19.

For details on working with the SmartGrid, see the FSW Getting Started manual.

2. **(Result) Window Configuration:** In a second step, you can select a different evaluation method (result type) for the window, based on the data source selected in the "Display Configuration".


6.5.1 Result window configuration

Access: "Overview" > "Display Config"

For each result window you can select a different evaluation method (result type), based on the data source selected in the "Display Configuration". Further window settings are available for some result types.



Some settings are only displayed after you select "More" in the dialog box. To hide these settings, select "Less".

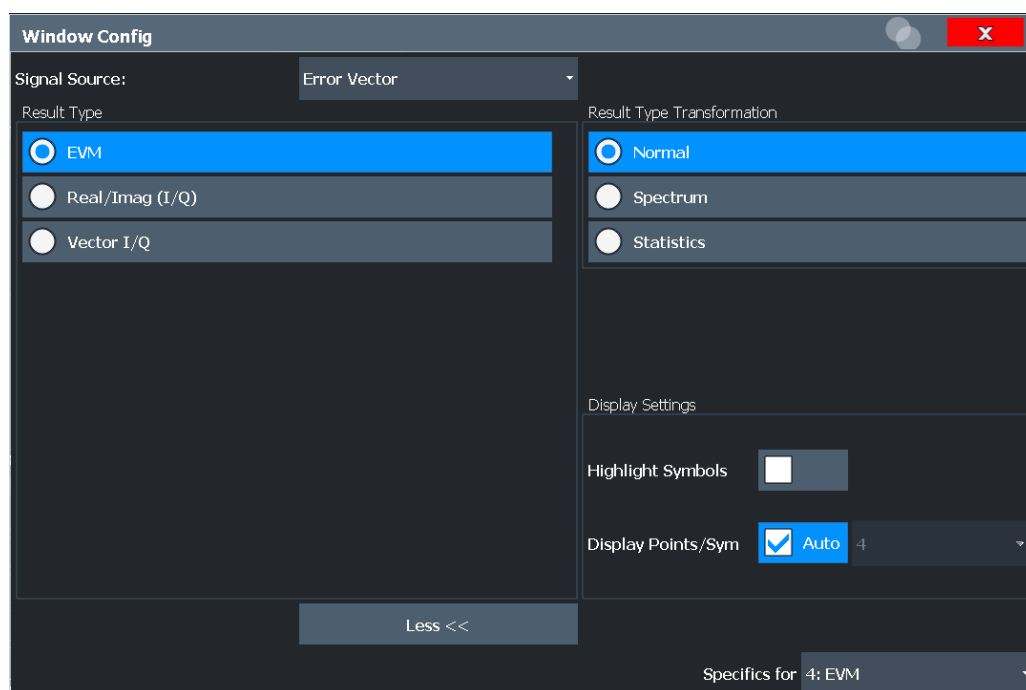

| | |
|---------------------------------|-----|
| Signal Source..... | 286 |
| Result Type..... | 287 |
| └ Symbol format..... | 287 |
| Result Type Transformation..... | 287 |
| Highlight Symbols..... | 287 |
| Display Points/Sym..... | 288 |
| Oversampling..... | 288 |

Signal Source

Data source as selected in the "Display Configuration" (see [Chapter 3, "Measurements and result displays"](#), on page 19). If you change the signal source setting here, the default result type for the new data source is activated for the current window.

Remote command:

[LAYout:ADD\[:WINDow\]?](#) on page 545

[CALCulate<n>:FORMat](#) on page 555

Result Type

The result type defines the evaluation method used in the current window.

The available result types in VSA are described in [Chapter 3.2, "Result types in VSA"](#), on page 23.

Remote command:

[CALCulate<n>:FORMat](#) on page 555

Symbol format ← Result Type

Defines the format in which each symbol is defined: hexadecimal, decimal or binary

Result Type Transformation

For certain result types, it is not only possible to see the common "over time" representation of the measurement. You can also display the spectrum or the statistics (in form of a histogram), which are the transformations of the results.

These settings are not available for symbol evaluation, i.e. the following signal sources:

- Symbols
- "Modulation Accuracy"
- "Equalizer"

"Normal" Evaluation in time domain
X-axis displays time values.

"Spectrum" Evaluation in frequency domain
X-axis displays frequency values. The usable I/Q bandwidth is indicated in the display.

"Statistics" Statistical evaluation (histogram)
X-axis displays former y-values. Y-axis displays statistical information:

- Trace 1: the probability of occurrence of a certain value is plotted against the value
- Trace 2: the cumulated probability of occurrence is plotted against the value.

Remote command:

[CALCulate<n>:DDEM:SPECTrum\[:STATe\]](#) on page 553

[CALCulate<n>:STATistics:CCDF\[:STATe\]](#) on page 556

Highlight Symbols

If enabled, the symbol instants are highlighted as squares in the window for measured and reference signals in time (normal) display, and error displays.

Only evaluations that are based on symbols (e.g. constellations or traces, not eye diagrams) support this function.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:SYMBOL](#) on page 559

Display Points/Sym

Defines the number of display points that are displayed per symbol. If more points per symbol are selected than the defined [Sample Rate](#), the additional points are interpolated for the display. The more points are displayed per symbol, the more detailed the trace becomes.

For more information, see [Chapter 4.7, "Display points vs estimation points per symbol"](#), on page 166.

Note: If the capture buffer is used as the signal source, the [Sample Rate](#) defines the number of displayed points per symbol; the "Display Points/Sym" parameter is not available.

If "Auto" is enabled, optimal number of points, depending on the result display, is used - usually, the [Sample Rate](#) value.

Alternatively, select the number of points to be displayed per symbol manually. The available values depend on the source type.

"1" Only the symbol time instants are displayed.

"2, 4, 8, 16,
32" More points are displayed than symbols.

"Capture Oversampling"

The number of samples per symbol defined in the signal capture settings are displayed (see ["Sample Rate"](#) on page 231).

For very large numbers of capture points (≥ 64), use a lower number of display points per symbol to avoid prolonged display times and extremely large amounts of trace data.

Remote command:

[DISPlay\[:WINDow<n>\]:PRATe\[:VALue\]](#) on page 558

[DISPlay\[:WINDow<n>\]:PRATe:AUTO](#) on page 558

Oversampling

Defines the sample basis for statistical evaluation. This setting is only available for the result type transformation "Statistics".



Figure 6-2: Statistics measurement: window 1: measured signal (symbols highlighted); window 3: statistics for symbol instants only; window 4: statistics for all trace points;

- "Symbols only" Statistics are calculated for symbol instants only.
See window 3 in [Figure 6-2](#).
- "Infinite" Statistics are calculated for all trace points (symbol instants and intermediate times).
See window 4 in [Figure 6-2](#).
- "Auto" Oversampling is automatically set to "Symbols only" (Statistics are calculated for symbol instants only).

Remote command:

`CALCulate<n>:STATistics:MODE` on page 557

6.6 Analysis in MSRA/MSRT mode

The data that was captured by the MSRA/MSRT primary can be analyzed in the VSA application.


The analysis settings and functions available in MSRA/MSRT mode are those described for common Signal and Spectrum Analyzer mode.

Analysis line settings

In addition, an analysis line can be positioned. The analysis line is a common time marker for all MSRA/MSRT applications.

AL 10.0 ms

To hide or show and position the analysis line, a dialog box is available. To display the "Analysis Line" dialog box, tap the "AL" icon in the toolbar (only available in MSRA/MSRT mode). The current position of the analysis line is indicated on the icon.

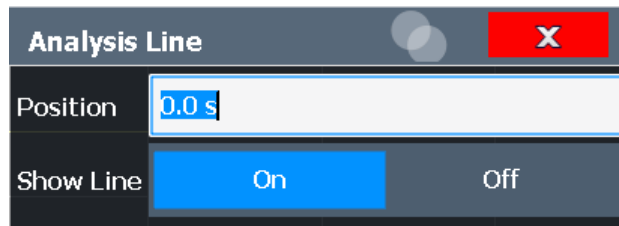

| | |
|----------------|-----|
| Position..... | 290 |
| Show Line..... | 290 |

Position

Defines the position of the analysis line in the time domain. The position must lie within the measurement time of the multistandard measurement.

Remote command:

[CALCulate<n>:MSRA:ALINE\[:VALUE\]](#) on page 540

[CALCulate<n>:RTMS:ALINE\[:VALUE\]](#) on page 542

Show Line

Hides or displays the analysis line in the time-based windows. By default, the line is displayed.

Note: The window title bar always shows whether the currently defined line position lies within the analysis interval of the active secondary application, even if the analysis line display is disabled.

Remote command:

[CALCulate<n>:MSRA:ALINE:SHOW](#) on page 539

[CALCulate<n>:RTMS:ALINE:SHOW](#) on page 541

7 I/Q data import and export

Baseband signals mostly occur as so-called complex baseband signals, i.e. a signal representation that consists of two channels; the inphase (I) and the quadrature (Q) channel. Such signals are referred to as I/Q signals. The complete modulation information and even distortion that originates from the RF, IF or baseband domains can be analyzed in the I/Q baseband.

Importing and exporting I/Q signals is useful for various applications:



- Generating and saving I/Q signals in an RF or baseband signal generator or in external software tools to analyze them with the FSW later.
The FSW supports various I/Q data formats for import.
For details on formats, see the FSW I/Q Analyzer and I/Q Input user manual.
- Capturing and saving I/Q signals with the FSW to analyze them with the FSW or an external software tool later
As opposed to storing trace data, which can be averaged or restricted to peak values, I/Q data is stored as it was captured, without further processing. Multi-channel data is not supported.
The data is stored as complex values in 32-bit floating-point format.
The file type is determined by the file extension. If no file extension is provided, the file type is assumed to be `.iq.tar`. For `.mat` files, Matlab® v4 is assumed.
For a detailed description, see the FSW I/Q Analyzer and I/Q Input User Manual.

For example, you can capture I/Q data using the I/Q Analyzer application, if available, and then analyze that data later using the R&S FSW VSA application.



An application note on converting Rohde & Schwarz I/Q data files is available from the Rohde & Schwarz website:

[1EF85: Converting R&S I/Q data files](#)

The import and export functions are available in the "Save/Recall" menu which is displayed when you select the  "Save" or  "Open" icon in the toolbar.

See the FSW I/Q Analyzer and I/Q Input User Manual.



Export only in MSRA mode

In MSRA mode, I/Q data can only be exported to other applications; I/Q data cannot be imported to the MSRA primary or any MSRA secondary applications.

8 How to perform vector signal analysis

Using the VSA option you can perform vector signal analysis measurements using predefined standard setting files, or independently of digital standards using user-defined measurement settings. Such settings can be stored for recurrent use.

Thus, configuring VSA measurements requires one of the following tasks:

- Selecting an existing standard settings file and, if necessary, adapting the measurement settings to your specific requirements.
- Configuring the measurement settings and, if necessary, storing the settings in a file.
- [How to perform VSA according to digital standards](#).....292
- [How to perform customized VSA measurements](#)..... 294
- [How to analyze the measured data](#).....306

8.1 How to perform VSA according to digital standards

To perform vector signal analysis as specified in digital standards, various predefined settings files for common digital standards are provided for use with the VSA option. In addition, you can create your own settings files for user-specific measurements.

For an overview of predefined standards and settings see [Chapter B, "Predefined standards and settings"](#), on page 613.

This section provides instructions for the following tasks:

- ["To perform a measurement according to a standard"](#) on page 292
- ["To load predefined settings files"](#) on page 293
- ["To store settings as a standard file"](#) on page 293
- ["To delete standard files"](#) on page 293
- ["To restore standard files"](#) on page 293

To perform a measurement according to a standard

1. Press [MODE] and select the "VSA" application.
2. Press [MEAS] and select "Digital Standards".
3. Select the required settings file and then "Load" (see ["To load predefined settings files"](#) on page 293).

The instrument is adjusted to the stored settings for the selected standard and a measurement is started immediately.

4. Press [RUN SINGLE] to stop the continuous measurement mode and start a defined number of measurements.

The measured data is stored in the capture buffer and can be analyzed (see [Chapter 8.3, "How to analyze the measured data"](#), on page 306).

To load predefined settings files

1. In the "Meas" menu, select "Digital Standards".
2. In the file selection dialog box, select the standard whose settings you want to load.
To change the path, press the arrow icons at the right end of the "Path" field and select the required folder from the file system.
3. Press "Load".
The dialog box is closed and the instrument is adjusted to the stored settings for the selected standard.

To store settings as a standard file

1. Configure the measurement as required (see [Chapter 8.2, "How to perform customized VSA measurements"](#), on page 294).
2. In the "Meas" menu, select "Digital Standards".
3. In the "File Name" field, enter the name of the standard for which you want to store settings.
To change the path, press the arrow icons at the right end of the "Path" field and select the required folder from the file system.
To insert a new folder, select "New Folder" and enter a name in the "New Folder" dialog box.
4. Press "Save".
The dialog box is closed and the current measurement settings are stored in a standard file.

To delete standard files

1. In the "Meas" menu, select "Digital Standards".
2. In the "Manage VSA Standards" file selection dialog box, select the standard whose settings file you want to delete. You can also delete standards predefined by Rohde & Schwarz.
To change the path, press the arrow icons at the right end of the "Path" field and select the required folder from the file system.
3. Press "Delete".
4. Confirm the message to avoid unintentionally deleting a standard.
The standard file is removed from the folder.

To restore standard files

1. To restore the predefined standard files, do one of the following:
 - In the "Meas" menu, select "Digital Standards".
The "Manage VSA Standards" file selection dialog box is displayed.
 - In the "Meas" menu, select "Restore Factory Settings".

2. Select "Restore Standard Files".

The standards predefined by Rohde & Schwarz available at the time of delivery are restored to the `Standards` folder.

8.2 How to perform customized VSA measurements

In addition to performing vector signal analysis strictly according to specific digital standards, you can configure the analysis settings for customized tasks. The general process for a typical VSA measurement is described here.

1. Press [MODE] and select the "VSA" application.
2. Select "Overview" to display the "Overview" for VSA.
3. Select "Signal Description" and configure the expected signal characteristics.
If the input data is largely known in advance, define files with the known data to compare the measured data to (see [Chapter 8.2.4, "How to work with known data files"](#), on page 302). This can improve demodulation significantly.
Note: Make sure that the input signal contains an adequate number of uncorrelated (random!) bits to ensure correct demodulation.
4. Select "Input/Frontend" to define the input signal's center frequency, amplitude and other basic settings.
5. Select "Signal Capture" and define how much and which data to capture:
(In MSRA/MSRT mode, define the application data instead, see [Chapter 4.12, "VSA in MSRA/MSRT operating mode"](#), on page 178).
 - "Capture length": the duration or number of symbols to capture
 - "Sample rate": how many points to capture for each symbol
6. Optionally, select the "Trigger" tab and define a trigger for data acquisition, for example an external trigger to start capturing data only when a useful signal is transmitted.
(In MSRA/MSRT mode, define a "Capture Offset" instead, see [Chapter 4.12, "VSA in MSRA/MSRT operating mode"](#), on page 178).
7. For bursted signals, select "Burst/Pattern" and define the criteria to detect the individual bursts within the input signal (see [Chapter 8.2.3, "How to perform pattern searches"](#), on page 297).
8. Select "Cut Result Ranges" and define which of the captured data to demodulate (see [Chapter 8.2.1, "How to define the result range"](#), on page 295).
9. Select "Demodulation" to configure and optimize the synchronization process.
10. Select "Meas filter" to select a different or user-defined measurement filter to improve the accuracy of the error vector (see [Chapter 8.2.2, "How to select user-defined filters"](#), on page 296).

11. Select "Evaluation Range" to define which part of the demodulated data to evaluate and display.
12. Press [RUN SINGLE] to stop the continuous sweep and start a new sweep with the new configuration.

The measured data is stored in the capture buffer and can be analyzed (see [Chapter 8.3, "How to analyze the measured data"](#), on page 306)

8.2.1 How to define the result range

You can define which part of the source signal is analyzed ("Result Range") with reference to the captured data, a detected burst or a detected pattern.

(For details on the functions see [Chapter 5.7, "Result range configuration"](#), on page 253.)

1. In the "Overview", select "Range Settings".
2. Select the "Result Range" tab.
3. Define the "Result Length", i.e. the number of symbols from the result to analyze. Note that when you use known data files as a reference, the "Result Length" specified here must be identical to the length of the specified symbol sequences in the xml file (<ResultLength> element). See [Chapter 4.9, "Known data files - dependencies and restrictions"](#), on page 169.
4. Define the "Reference" for the result range, i.e. the source to align the result to. The reference can be the captured data, a detected burst or a detected pattern.
5. Define the "Alignment" of the result range to the reference source, i.e. whether the result starts at the beginning of the reference source, ends with the reference source, or is centered with the reference source.
6. Optionally, define an offset of the result range to the reference source, e.g. to ignore the first few symbols of the captured data.
7. Optionally, define the number of the symbol which marks the beginning of the reference source to change the scaling of the x-axis. This offset is added to the one defined for the signal description.

Example: Defining the result range

In [Figure 8-1](#), a result range is defined for the first 100 symbols of the capture buffer, starting at the second symbol, which has the symbol number 1 (the capture buffer starts at symbol number 1, the first displayed symbol is the second symbol due to the offset: $1+1=2$).

Result Range Alignment and Evaluation Range

Result Range | **Evaluation Range**

Length

Result Length = 208.333 μs

Result Range Alignment

Reference Capture Burst Pattern Waveform

Alignment Left Center Right

Offset

Symbol Number at Capture Start

Visualization

Capture Buffer: 8000 sym

Result Range

1 2.0 802.0

Figure 8-1: Example: Defining the Result Range



The result range is indicated by a green bar along the time axis in "Capture Buffer" result displays, see [Chapter 4.6, "Measurement ranges"](#), on page 161.

8.2.2 How to select user-defined filters

The most frequently required measurement and TX filters required for vector signal analysis according to digital standards are provided by the FSW VSA application. However, you can also load user-defined filters.

To load a user measurement filter

1. In the "Overview", select "Meas Filter".

2. In the "Meas Filter" tab of the "Demodulation & Measurement Filter" dialog box, select "Type": *User*.
3. Select "Load User Filter".
4. Load your `.vaf` file from the USB stick.

To load a user transmit (TX) filter

1. In the "Overview", select "Signal Description".
2. In the "Modulation" tab of the "Signal Description" dialog box, select "Transmit Filter Type": *User*.
3. Select "Load User Filter".
4. Load your `.vaf` file from the USB stick.

8.2.3 How to perform pattern searches

To configure a pattern search

1. In the "Overview", select "Signal Description".
2. Select the "Signal Structure" tab.
3. Select the "Burst Signal" signal type.
4. Enable the "Pattern" option.
5. From the "Name" selection list, select a pattern to assign to the currently defined standard.
6. If the pattern you require is not available, continue with ["To add a predefined pattern to a standard"](#) on page 298 or [Chapter 8.2.3.2, "How to define a new pattern"](#), on page 298.
7. Optionally, select the "Offset" option and enter the number of symbols in the signal to ignore during the pattern search.
8. Close the "Signal Description" dialog box.
9. In the "Overview" dialog box, select "Burst / Pattern" and switch to the "Pattern Search" tab.
10. Select "On" to enable the search.
To enable a search only if a pattern is part of the signal description, enable the "Auto" option.
Whether a pattern was detected or not is indicated in the "Information" area.
11. If necessary, adapt the I/Q correlation threshold. If patterns are not detected, reduce the threshold; if false patterns are detected, increase the threshold.

12. Optionally, enable the "Meas only if pattern symbols correct" option. In this case, measurement results are only displayed if a valid pattern has been detected.
13. Close the dialog box.

The selected pattern is used for a pattern search in the next measurement.

8.2.3.1 How to assign patterns to a standard

Only patterns that are assigned to the currently selected VSA standard are available for the pattern search.

To add a predefined pattern to a standard

1. In the "Overview", select "Signal Description" and switch to the "Signal Structure" tab.
2. Select "Pattern Config" to display the "Advanced Pattern Settings" dialog box.
3. In the list of "All Patterns", select the required pattern.
If the required pattern is not displayed, see ["To change the display for the list of patterns"](#) on page 301.
4. Select "Add to Standard".
The selected pattern is inserted in the list of "Standard Patterns".
5. Select the pattern to use for the pattern search from the list of "Standard Patterns".

To remove a predefined pattern from a standard

1. In the "Overview", select "Signal Description" and switch to the "Signal Structure" tab.
2. Select "Pattern Config" to display the "Advanced Pattern Settings" dialog box.
3. Select the pattern from the list of "Standard Patterns".
4. Select "Remove from Standard".
The pattern is removed from the list of "Standard Patterns" and is no longer assigned to the current standard, but is still available for assignment from the list of "All Patterns".

8.2.3.2 How to define a new pattern

1. Select [MEAS CONFIG] > "Pattern Config".
The "Advanced Pattern Settings" dialog box is displayed.
2. Select "New".
The pattern definition dialog box is displayed.
3. Define the following pattern settings:

| Setting | Description |
|------------------|--|
| Name | Pattern name displayed in selection list |
| Description | Optional description of the pattern which is displayed in the pattern details |
| Modulation order | Number of values each symbol can represent, e.g. 8 for 8-PSK |
| Comment | Optional comment for the pattern, displayed in the pattern details (kept for compatibility with FSQ) |

4. Define the format used to define the individual symbols of the pattern.
5. Define the symbols of the pattern.
 - a) Select the symbol field you want to define.
If necessary, add a new symbol field by selecting "Add".
 - b) Enter a value using the keyboard. Depending on the "Modulation Order" $\langle n \rangle$, the value can be in the range 0 to $\langle n \rangle - 1$.
 - c) Select the next symbol field, or insert a new one, and continue to define the other symbols. To scroll through the fields for long patterns, use the scrollbar beneath the input area. The number beneath the scrollbar at the right end indicates the sequential number of the last symbol field, the number in the center indicates the sequential number of the currently selected symbol field.
To remove a symbol field, select it and press "Remove".
6. Select "Save" to save the pattern under the specified name. The pattern is stored on the instrument as an XML file named $\langle \text{Name} \rangle . \text{xml}$ under
`C:\Program Files (x86)\Rohde-Schwarz\FSW\<version>\vsa\`
`Pattern.`



If you copy this file to another location, you can restore the pattern later, e.g. after deletion.

Example: Defining a pattern

New Pattern

Name: TETRA_SA

Description: Special Continuous Downlink Burst

Mod Order: 4

Symbols

Bit Numbering: MSB First LSB First

Format: Binary Hex Decimal

Size: 10

| | A | B | C | D | E | F |
|----|---|---|---|---|---|---|
| 1 | 3 | 1 | 0 | 0 | 3 | 2 |
| 2 | 2 | 3 | 1 | 1 | | |
| 3 | | | | | | |
| 4 | | | | | | |
| 5 | | | | | | |
| 6 | | | | | | |
| 7 | | | | | | |
| 8 | | | | | | |
| 9 | | | | | | |
| 10 | | | | | | |
| 11 | | | | | | |
| 12 | | | | | | |

Comment:

Buttons: Import Symbols, Save, Cancel

Figure 8-2: Pattern definition

If you assume that a signal has a pattern, but do not know it in advance, you can determine it using the [Symbol table](#). Measure the signal and check for a pattern in the symbol table. Then you can copy the symbols from the symbol table to the pattern definition for subsequent measurements (see ["Import Symbols"](#) on page 252).

How to Copy a Pattern from the Symbol Table

1. In the "Overview", select "Display Config".
2. Add a "Symbols Table" to the display.
3. Exit the SmartGrid mode.
4. Select Run Single to perform a single measurement.
5. Analyze the symbol table and find the pattern.

6. In the "Overview", select "Cut Result Ranges".
7. Define an offset for the result range alignment so that the result range starts with the first pattern symbol.
8. Select [MEAS CONFIG] > "Pattern Config".
The "Advanced Pattern Settings" dialog box is displayed.
9. Select "New".
The pattern definition dialog box is displayed.
10. Define the following pattern settings:

| Setting | Description |
|------------------|--|
| Name | Pattern name displayed in selection list |
| Description | Optional description of the pattern which is displayed in the pattern details |
| Modulation order | Number of values each symbol can represent, e.g. 8 for 8-PSK |
| Comment | Optional comment for the pattern, displayed in the pattern details (kept for compatibility with FSQ) |

11. Define the format used to define the individual symbols of the pattern.
12. Select "Import Symbols".
13. Select the number of symbols the detected pattern in the symbol table consists of.
14. Select "OK".
The symbols from the symbol table are copied to the pattern definition dialog box.
15. Select "Save" to save the pattern under the specified name. The pattern is stored on the instrument as an XML file named <Name>.xml under
C:\Program Files (x86)\Rohde-Schwarz\FSW\<version>\vsa\
Pattern.

8.2.3.3 How to manage patterns

To change the display for the list of patterns

1. In the "Overview", select "Signal Description" and switch to the "Signal Structure" tab.
2. Select "Pattern Config" to display the "Advanced Pattern Settings" dialog box.
3. To display all available patterns, select "Show All".
To display all patterns that are compatible to the defined standard, select "Show Compatible".
To display only patterns that contain a specific prefix, enter the "Prefix" in the edit field.

To edit a predefined pattern

1. In the "Overview", select "Signal Description" and switch to the "Signal Structure" tab.
2. Select "Pattern Config" to display the "Advanced Pattern Settings" dialog box.
3. Select the pattern from the list of "All Patterns".
4. Press "Edit Pattern".
5. Change the settings as required as described in [Chapter 8.2.3.2, "How to define a new pattern"](#), on page 298.

To delete a predefined pattern

1. In the "Overview", select "Signal Description" and switch to the "Signal Structure" tab.
2. Select "Pattern Config" to display the "Advanced Pattern Settings" dialog box.
3. Select the pattern from the list of "All Patterns".
4. Press "Delete Pattern".

The pattern is removed from the lists of available and assigned patterns and can no longer be assigned to any standard. Any existing assignments to other standards are removed, as well.

To restore predefined patterns

Default patterns provided by Rohde&Schwarz can be restored.

1. Press [MEAS].
2. Select "Restore Factory Settings".
3. Select "Restore Pattern Files".

The patterns as defined by Rohde & Schwarz at the time of delivery are restored.



Restoring user-defined patterns

User-defined patterns can only be restored if you have a copy of the pattern file created during creation. In this case, copy the file named <Patternname>.xml back to C:\Program Files (x86)\Rohde-Schwarz\FSW\<version>/vsa/standards. After a preset or after performing certain operations (e.g. changing the modulation settings), the pattern is included in the list of "All Patterns" again.

8.2.4 How to work with known data files

You can load XML files containing the possible sequences to the VSA application and use them to compare the measured data to. In particular, you can use known data for the following functions:

- Fine synchronization during the demodulation process (see [Figure 4-64](#) and "[Fine Synchronization](#)" on page 261)
- Calculation of the Bit Error Rate (BER), see [Chapter 3.2.1, "Bit error rate \(BER\)"](#), on page 25

8.2.4.1 How to load known data files

Known Data files are loaded in the "Modulation & Signal Description" settings.

To load an existing Known Data file

1. In the "Overview", select "Signal Description".
2. Switch to the "Known Data" tab.
3. Activate the usage of a Known Data file by enabling the "Known Data" option.
4. Select the "Source": "XML file".
The "Load Data File" function is enabled.
5. Select "Load Data File".
A file selection dialog box is displayed.
6. Select the XML file which contains the possible data sequences of the input signal.
The file must comply with the syntax described in [Chapter E, "Known data file syntax description"](#), on page 627.

The header information of the XML file is displayed in the dialog box.

Once a Known Data file has been loaded, the Bit Error Rate result display becomes available.

If the "Fine Synchronization" setting in the "Demodulation" dialog box is set to "Auto" mode, the known data is also used for synchronization. Otherwise it can be selected manually. Defining a maximum symbol error rate for the known data in reference to the analyzed data avoids using a falsely selected or unsuitable file for synchronization (see also "[If SER ≤](#)" on page 262).

8.2.4.2 How to create known data files

You must create the Known Data files yourself according to the possible data sequences of the input signal. Use any xml editing tool you like, following the rules described in [Chapter E, "Known data file syntax description"](#), on page 627. Before loading the file to the VSA application, make sure that the syntax of your file is valid.



Auxiliary tool to create Known Data files

An auxiliary tool to create Known Data files from data that is already available in the R&S FSW VSA application is provided on the instrument free of charge.

You can copy this tool to a PC and work with it locally, as well.

To create a Known Data file using the recording tool for sequences

1. Import or input data for which stable demodulation results are available to the VSA application. If necessary, adapt the demodulation settings until you obtain the requested results.


Tip: Considerations for the measurement to be recorded.

- Be careful when you use an external reference during recording. If there is no pattern within the signal, the recording can miss phase ambiguities.
- Be careful when you use a trigger during recording. In this case, you need to make sure that only one measurement is performed within the capture buffer. (The recording tool only records the first result range within the capture buffer.)

2. Start the "R&S Recording Tool for Sequences" from the Windows task bar on the FSW, or execute the file

C:\Program Files (x86)\Rohde-Schwarz\FSW\\RecordingToolforSequences.EXE on the instrument.

The "R&S Recording Tool for Sequences" window is displayed.

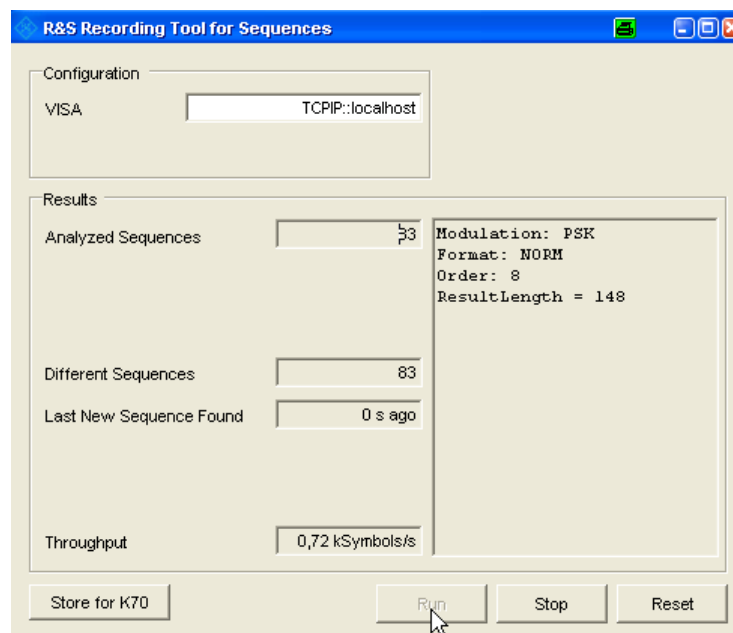

3. Define the VISA resource string to connect to the instrument:
 - If you start the tool directly from the instrument: enter `TCPIP::localhost` (default).
 - If you start the tool from a computer: enter the TCPIP address or name of the computer in the VISA resource string (e.g. `TCPIP::123.4.5.6`).
4. Start a measurement in the R&S FSW VSA application.
5. In the tool window, select "Run".
The tool records the demodulated data sequences and provides the following result information:

- **Analyzed Sequences:** number of data sequences analyzed since the tool was started
- **Different Sequences:** number of unique sequences detected in the measured data
- **Last New Sequence Found:** time that has passed since the most recent unique sequence was detected
- **Throughput:** current data processing speed of the tool

Note that while the tool is running, the FSW is set to remote mode, i.e. the manual interface is not available. As soon as the tool is closed, the remote mode is automatically deactivated.

- When all known possible sequences have been detected, or when a significantly large amount of time has passed to assume that no more sequences will be detected, stop the tool by selecting "Stop".
- If the results are acceptable, select "Store for K70" to store a valid XML file with the recorded data sequences on the instrument.
A file selection dialog box is displayed in which you can select the storage location and file name.
You can also add an optional comment to the file.
 - Otherwise, reset the tool to start a new recording, possibly after changing the demodulation settings or input data.
- Close the tool window to return to normal operation of the VSA application.

The created XML file can now be loaded in the VSA application as described in [Chapter 8.2.4.1, "How to load known data files"](#), on page 303.

8.2.5 How to work with PRBS as known data

Known data files require all possible data sequences to be defined in a file. For data generated by a pseudo-random bit sequence (PRBS) generator, the number of possible sequences can be very large and defining them in a file can be very tedious.

However, if you can specify the algorithm used to generate the data, the R&S FSW VSA application can determine the possible sequences without a file. This function requires the FSW-K70P option.

To define a PRBS algorithm as known data

- In the "Overview", select "Signal Description".
- Switch to the "Known Data" tab.
- Activate the usage of Known Data by enabling the "Known Data" option.
- Select the "Source": "PRBS".
Further settings for the PRBS algorithm are displayed.
- Select the "PRBS Type" of the algorithm used to generate the random data.

The other algorithm settings are defined automatically according to the ITU-T standard. Unless your polynomial deviates from the standard, no further settings are required.

6. Switch to the "Modulation" tab.
7. Select "Mapping": "SMx" to use the same mapping in the R&S FSW VSA application as the PRBS signal generator.

Once a polynomial has been specified, the Bit Error Rate result display becomes available.

If the "Fine Synchronization" setting in the "Demodulation" dialog box is set to "Auto" mode, the known data is also used for synchronization. Otherwise it can be selected manually. Defining a maximum symbol error rate for the known data in reference to the analyzed data avoids using a falsely selected or unsuitable file for synchronization (see also "If SER ≤" on page 262).

8.3 How to analyze the measured data

Once the data has been stored in the capture buffer, the results can be analyzed in numerous ways. The following tasks are meant to make you familiar with the most common VSA application features. For a description of all analysis functions and settings, see [Chapter 6, "Analysis"](#), on page 270.

1. Press [MEAS CONFIG] to display the VSA menu.
2. Select "Display Config" in the "Overview" or the "Display Config" softkey and select the data sources for evaluation that are of interest to you (see [Chapter 6.5, "Display and window configuration"](#), on page 285).
Arrange them on the display to suit your preferences.
For each data source, a window with the default result type for that data source is displayed.
3. Exit the SmartGrid mode.
4. Select "Window Config" to change the result types and other display settings for the selected window. To change the settings in other windows, select a different window from the "Specifics for" list in the "Window Config" dialog box.
5. Select "Overview" to display the "Overview".
Enable the "Specifics for" option to access the analysis functions for the selected window.
6. Select "Analysis" in the "Overview" to configure special analysis settings for the individual result displays, for example:
 - Configure markers and delta markers to determine deviations and offsets within the results, e.g. when comparing errors or peaks.
 - Configure the trace to display the average over a series of measurements. If necessary, increase the "Statistics Count" defined in the "Sweep" menu.

7. Press [SWEEP] and select "Selected Result Rng" to select a specific burst to evaluate.

The result displays are updated to show the results for the selected burst.

Tip: You can use a capture buffer display to navigate through the available result ranges, and analyze the individual result ranges in another window. The currently displayed result range is indicated by a blue bar in the capture buffer display.

8. Optionally, zoom into a diagram to enlarge an area of the displayed data.
9. Optionally, change the display scaling for diagrams (see [Chapter 8.3.1, "How to change the display scaling"](#), on page 307).
10. Optionally, check the "modulation accuracy" against specified limits (see [Chapter 8.3.3, "How to check limits for modulation accuracy"](#), on page 311).
11. Optionally, export the trace data of the measured signal to a file (see [Chapter 8.3.4, "How to export the trace data to a file"](#), on page 312).

8.3.1 How to change the display scaling

Depending on the type of display (time, spectrum or statistics), various scaling functions are available to adapt the result display to the current data.

8.3.1.1 How to scale time and spectrum diagrams

The range of the displayed y-axis for time and spectral diagrams can be defined in the following ways:

- manually, by defining the range size, reference values and positions
- automatically, according to the current results

To define the scaling manually using a reference point

With this method, you define a reference value and a position at which this value is to be displayed on the y-axis.

1. Focus the result window.
2. Select "AMPT > YScale Config > Y-Axis Reference Value".
3. Enter a reference value for the y-axis in the current unit.
4. Select "AMPT > YScale Config > Y-Axis Reference Position" .
5. Enter the position to display this value on the y-axis. The position is a percentage of the entire length, where 100 % refers to the top edge.
6. Select "AMPT > YScale Config > Y-Axis Range".

Example:

If you want to analyze errors greater than 95%, you can define the y-axis range as 5 % and position the y-axis to start at 95%. To do so, enter the reference value 95 % and the reference position 0%.

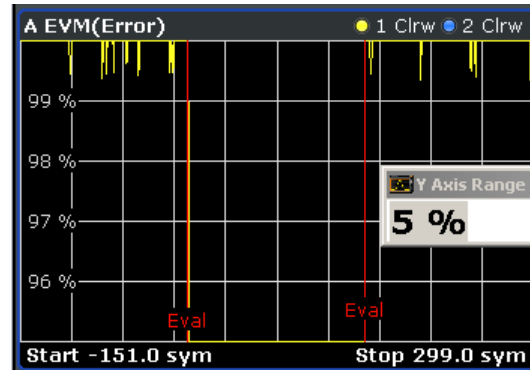


Figure 8-3: Defining the y-axis scaling using a reference point

To define the scaling automatically

1. Focus the result window.
2. Select "AMPT > Y-Axis Auto Scale".

The y-axis is adapted to display the current results optimally (only once, not dynamically).

8.3.1.2 How to scale statistics diagrams

Statistic diagrams show the distribution (i.e. probabilities of occurrence) of the values as a set of bars. You can define the number of bars to be displayed, i.e. the granularity of classifications. Additionally, you can specify whether absolute or percentage values are displayed. For statistics measurements, both the x-axis and the y-axis can be scaled to optimize the display.

The range of the displayed x-axis for statistics diagrams can be defined in the following ways:

- manually, by defining reference values and positions
- automatically, according to the current results

The range of the displayed y-axis can be defined in the following ways:

- manually, by defining the minimum and maximum values to be displayed
- automatically, according to the current results

After changing the scaling, you can restore the default settings.

To define the number of bars

1. Focus the result window.
2. Select "AMPT > XScale Config > X-Axis Quantize".

3. Enter the number of bars to display.

The diagram is adapted to display the specified number of bars.

To define the x-axis scaling manually using a reference point and divisions

With this method, you define a reference value on the x-axis to be displayed at the "Ref Position" of the y-axis. (The reference value is determined internally according to the displayed data and cannot be changed. The beginning of the diagram is at the position 0%, the end is at 100%.) Additionally, you define the range to be displayed in each of the 10 divisions of the display, which determines the total range to be displayed on the x-axis.

1. Focus the result window.
2. Select "AMPT > Scale Config > Reference Value".
3. Enter a reference value on the x axis in the current unit.
4. Define the range to display per division (total range/10).

The x-axis is adapted so that it displays the defined range, with the reference value at the specified position.

Example:

If you want to analyze the probabilities of occurrence for errors greater than 95 %, enter the reference value 95 %.

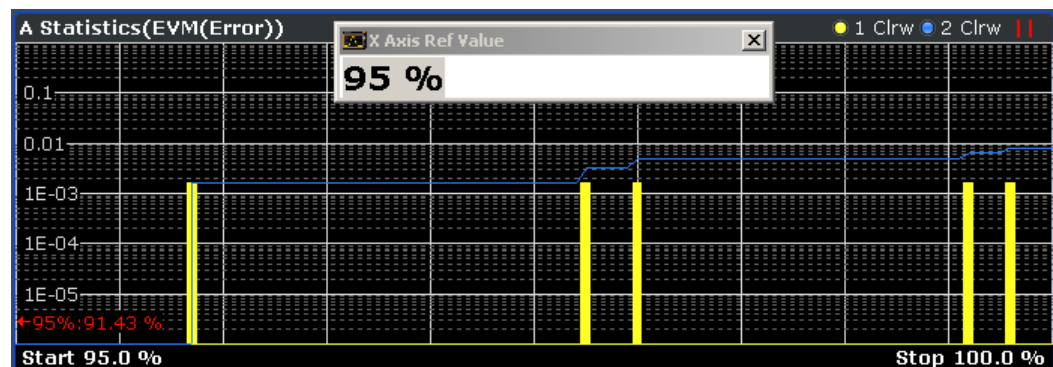


Figure 8-4: Defining the x-axis scaling using a reference point

To define the x-axis scaling automatically

1. Focus the result window.
2. Select "AMPT > XScale Config > Auto Scale".

The x-axis is adapted to display the current results optimally (only once, not dynamically).

To define the y-axis range manually

With this method, you define the upper and lower limits of the displayed probability range. Values on the y-axis are normalized which means that the maximum value is 1.0. If the y-axis has logarithmic scale, the distance between max and min value must be at least one decade.

1. Focus the result window.
2. Select "AMPT > YScale Config > Y-Axis Min Value".
3. Enter the lower limit in the current unit.
4. Select "AMPT > YScale Config > Y-Axis Max Value".
5. Enter the upper limit in the current unit.

The y-axis is adapted to display the specified range. Probabilities of occurrence located outside the display area are applied to the bars at the left or right borders of the display.

8.3.2 How to measure the size of an eye

Display lines are available for eye diagrams, which allow you to determine the size of the eye.

1. Configure a window with "Meas & Ref" as the "Source".
2. Select "Window Config" for the window and select an eye diagram as the result type.
3. Select [Lines] > "Vertical Line Absolute".
4. Move the line to the left edge of the eye.
5. Select [Lines] > "Vertical Line Rel".
6. Move the line to the right edge of the eye.

The relative position of the line is indicated in the diagram, which corresponds to the width of the eye (see [Figure 8-5](#)).

7. Select [Lines] > "Horizontal Line Absolute".
8. Move the line to the top of the eye.
9. Select [Lines] > "Horizontal Line Rel".
10. Move the line to the bottom of the eye.

The relative position of the line is indicated in the diagram, which corresponds to the height of the eye (see [Figure 8-5](#)).

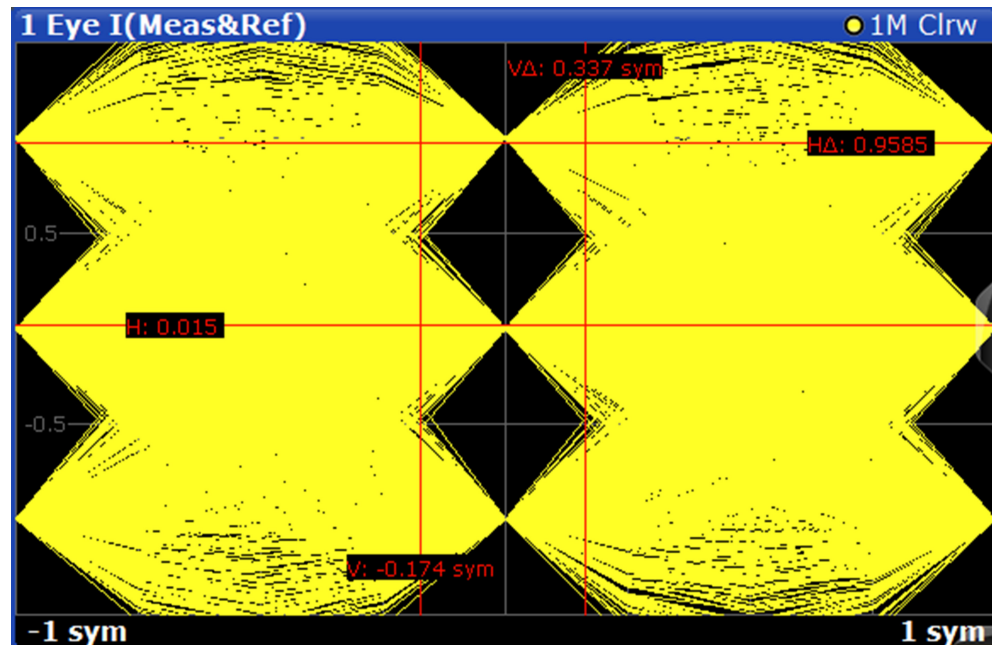


Figure 8-5: Size of an eye, calculated using display lines

8.3.3 How to check limits for modulation accuracy

The results of a "modulation accuracy" measurement can be checked for violation of defined limits automatically. If limit check is activated and the measured values exceed the limits, those values are indicated in red in the "Result Summary" table. If limit check is activated and no values exceed the limits, the checked values are indicated in green.

| B Result Summary | | | | | | | |
|-------------------------|------|-----------|-----------|-----------|-------------|-----------|--------|
| | | Current | Mean | Peak | StdDev | 95%ile | Unit |
| *EVM | RMS | 100.00* | 100.00 | 100.00 | 0.00 | 100.00 | % |
| | Peak | 100.00 | 100.00 | 100.00 | 0.00 | 100.00 | % |
| Phase Error | RMS | 0.00 | 0.00 | 0.00 | 0.00 | 0.00 | deg |
| | Peak | 0.00 | 0.00 | 0.00 | 0.00 | 0.00 | deg |
| Carrier Frequency Error | | -0.00 | -0.00 | -0.00 | 0.00 | -0.00 | Hz |
| Rho | | 1.000 000 | 1.000 000 | 1.000 000 | 0.000 000 | 1.000 000 | |
| IQ Offset | | --- | --- | --- | --- | --- | dB |
| Gain Imbalance | | 0.00 | 0.00 | 0.00 | -193.01 | 0.00 | dB |
| Quadrature Error | | 0.00 | 0.00 | 0.00 | 0.00 | 0.00 | deg |
| Amplitude Droop | | 0.000 000 | 0.000 000 | 0.000 000 | -193.010300 | 0.000 000 | dB/sym |
| Power | | -200.00 | -200.00 | -200.00 | -200.00 | -200.00 | dBm |

For details on the limit check functions and settings, see [Chapter 6.4.2, "Modulation accuracy limit lines"](#), on page 283.

To define a limit check

1. Configure a window with "Modulation Accuracy" as the "Source" (see [Chapter 6.5, "Display and window configuration"](#), on page 285).
2. Press [Lines].

3. Press "ModAcc Limits Config" in the "Limits" menu.
4. In the "Current" tab, define limits that the current value should not exceed for any or all of the result types.
Note: the limits for the current value are automatically also defined for the peak value and vice versa. However, you can enable the limit check individually for current or peak values.
5. Enable the "Check" option for each result type to include in the limit check.
6. If necessary, define limits and enable the limit check for the mean values of the different result types on the "Mean" tab.
7. If necessary, enable the limit check for the peak values of the different result types on the "Peak" tab.
8. To reset the limits to their default values, press "Set to Default".
9. Enable the "Limit Checking On" option, or press "ModAcc Limits On" in the "Limits" menu.

The limit check is performed immediately on the current "modulation accuracy" measurement results and for all subsequent measurements until it is disabled. The results of the limit check are indicated by red or green values in the "Result Summary".

8.3.4 How to export the trace data to a file

The measured data can be stored to an ASCII file, either as raw data (directly from the capture buffer) or as displayed in the diagrams (evaluated trace data). Optionally, a header can be included with additional information on the used measurement settings.

1. Press [Trace] and select "Trace Export Config".
2. Define which type of data to export (raw or trace). By default, trace data is exported.
3. Optionally, enable the header information to include.
4. To export the traces in **all windows**, select "Export Trace to ASCII File for all Windows".
To export the traces only for **the currently selected window**, select "Export Trace to ASCII File for Specific Window". To export the data from another window, select it from the "Specifics for" list, then export again.
In either case, **all** traces of the selected windows are exported.
5. Define a file name and storage location and select "OK".

The data is stored in a file and can be analyzed in an external application.

9 Measurement examples

Some sample measurements for the digital GSM and EDGE standards provide a quick introduction to typical vector analyzer measurements. The individual measurements are in logical order and are meant to familiarize you gradually with the measurements required of general vector signal analysis.

The following equipment is required in addition to the FSW with option R&S FSW-K70:

- 1 test transmitter (GSM-compatible for Measurement 2), preferably R&S SMW200A (1412.0000.02), with the digital standard option GSM/EDGE (order number 1413.3684.02)
- 1 RF cable with 2 male N connectors
- 2 power cables

Transmitter operation is only described as far as required for performing the measurements. For more details on the measurements, refer to the test transmitter documentation.

9.1 Connecting the transmitter and analyzer

To perform measurements with the R&S FSW-K70, you require a test transmitter to emulate a DUT. For [Measurement example 2: burst GSM EDGE signals](#), the test transmitter needs to be GSM-compatible.

Connect the RF output of the R&S SMW200A with the RF input of the FSW.

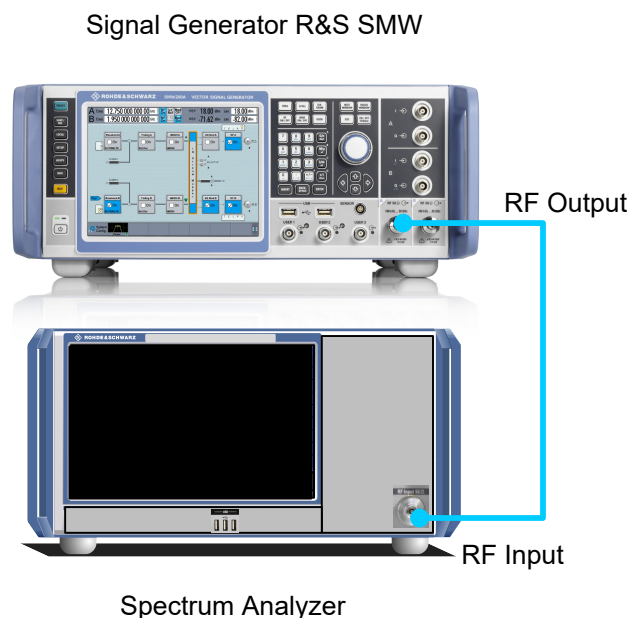


Figure 9-1: Connection to a test transmitter (for example R&S SMW200A)

9.2 Measurement example 1: continuous QPSK signal

In this measurement example, a continuous QPSK (Quadrature Phase Shift Keying) signal is measured and evaluated. QPSK is used in several standards such as DVB-S2, APCO25, WCDMA, CDMA2000. For the description (characterization) of a continuous QPSK signal, the following parameters are the most important:

- Carrier Frequency
- Level
- Symbol Rate
- Transmit Filter

9.2.1 Transmitter settings

This section summarizes the necessary transmitter settings. It contains a list of the parameters and step-by-step instructions for the R&S SMW200A. If you are interested in a more detailed description or background information, refer to the user manual of the R&S SMW200A, which can be downloaded from the Rohde&Schwarz website: <http://www.rohde-schwarz.com/downloads/manuals/smw200A.html>.

| | |
|-------------|---------------------------------------|
| Frequency | 1 GHz |
| Level | 0 dBm |
| Modulation | QPSK |
| Symbol Rate | 1 Msym/s |
| Filter | Root Raised Cosine with Roll-Off 0.35 |

To define the settings for the R&S SMW200A

1. Press [PRESET] to start from a defined state.
2. Press [FREQ] and enter *1 GHz*.
3. Press [LEVEL] and enter *0 dBm*.
4. Press [DIAGRAM].
5. Select the "Baseband A" block.
6. Select "Custom Digital Mod...".
7. In the "General" tab, define the following settings:

Measurement example 1: continuous QPSK signal

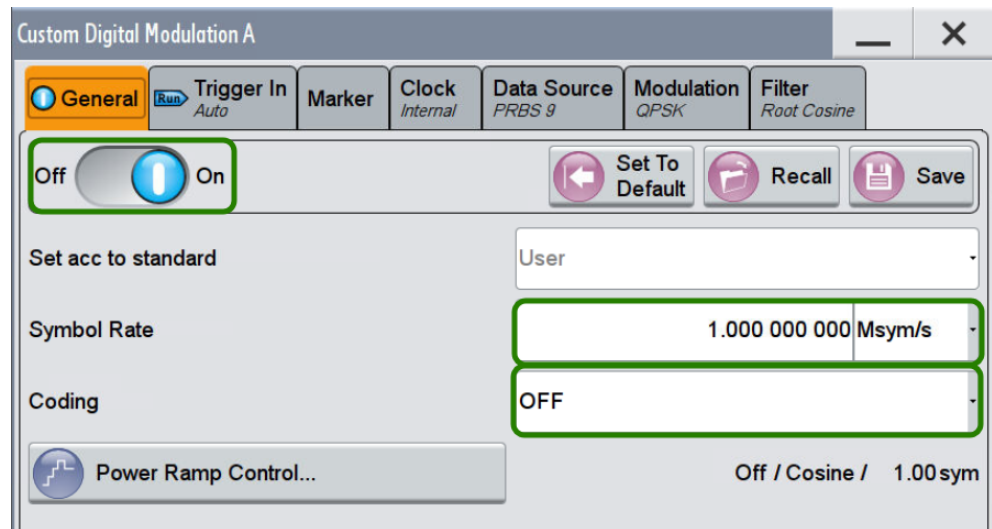


Figure 9-2: R&S SMW200A: Custom Digital Modulation Dialog

- a) Toggle the "State" to "On".
 - b) Enter the "Symbol Rate": 1 MHz.
 - c) Set the "Coding" to "Off".
8. In the "Modulation" tab, select "Modulation Type": "PSK" > "QPSK".
 9. In the "Filter" tab, select the "Filter": "Root Cosine".
 10. Press [RF ON/OFF] to switch the RF transmission on.

9.2.2 Analyzer settings

This section helps you get your first valid measurement. It starts with step-by-step instructions and continues with a more detailed description of further functionality.

| | |
|-------------|---------------------------------------|
| Frequency | 1 GHz |
| Ref Level | 4 dBm |
| Modulation | QPSK |
| Symbol Rate | 1 MHz |
| Tx Filter | Root Raised Cosine with Alpha BT 0.35 |

To define the settings on the FSW

1. Press [PRESET] to start from a defined state.
2. Press [FREQ] and enter 1 GHz.
3. Press [AMPT], and enter 4 dBm as the reference level. This value corresponds approximately to the peak envelope power of the signal.
4. Start the VSA application by pressing [MODE] and then selecting "VSA".

Measurement example 1: continuous QPSK signal

5. Select "Overview" to display the "Overview" for VSA.
6. Select "Signal Description" and configure the expected signal characteristics.
 - a) In the "Modulation Settings" section, ensure that the "Type" is "PSK" and that the "Order" is "QPSK". The "Mapping" defines the mapping of the bits to the QPSK symbols. It is relevant if you are interested in a bit stream measurement but does not affect the other measurement results. Hence, you do not need to change it here.
 - b) Enter the "Symbol Rate" 1 MHz.
 - c) In the "Transmit Filter" section, select "RRC" as "Type" and enter the "Alpha/BT" value 0.35.
7. Close all open dialog boxes. By default, four measurement windows showing different measurement results are displayed.

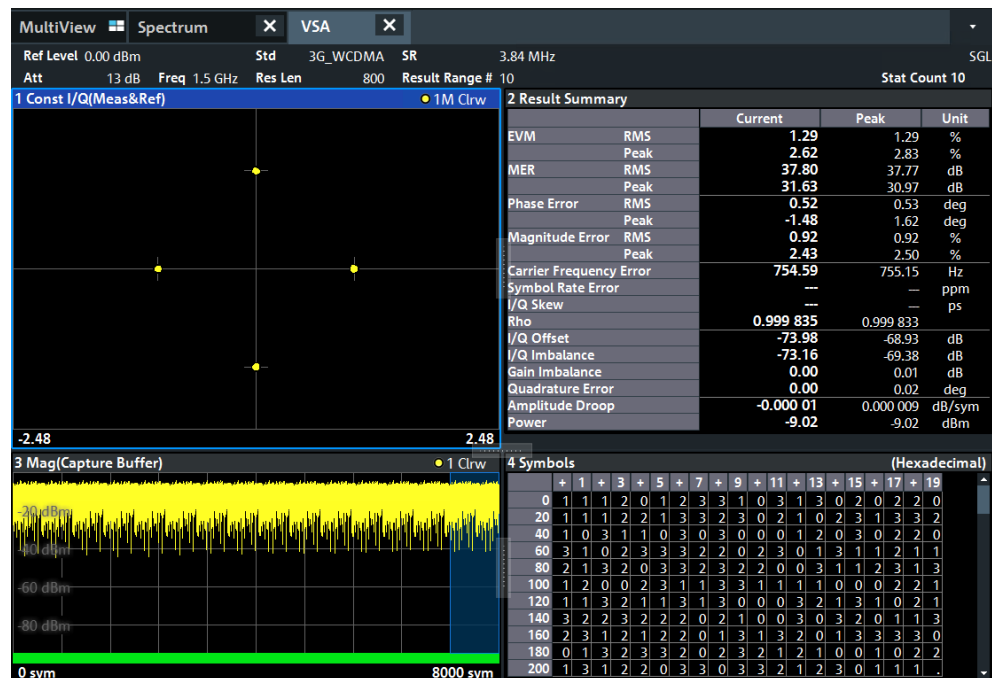


Figure 9-3: Default window layout for Measurement Example 1

9.2.3 Changing the display configuration

1. To change the window layout, i.e. the display configuration, do one of the following:
 - Select "Display Config" in the main VSA menu.
 - Select the "Display Configuration" block in the "Overview" (only if "Specifics for" option is disabled).



Measurement example 1: continuous QPSK signal

Select the "SmartGrid" icon from the toolbar.

2. Replace window 1 by an eye diagram of the inphase component of the measurement signal.
 - a) Select the "Meas & Ref" data source from the SmartGrid selection bar and drag it over window 1.




Close the SmartGrid mode by selecting the "Close" icon at the top-right corner of the toolbar.

- c) Select "Window Config".
 - d) Select the result type: "Eye Diagram Real (I)".
3. Close the dialog to look at your new display configuration.

9.2.4 Navigating through the capture buffer


In this measurement example, you can navigate through the capture buffer, i.e. control which part of the capture buffer is currently analyzed. (Note: In the Spectrum application, this functionality is referred to as "gating".)

1. In the measurement display, take a closer look at window 3 (magnitude of the capture buffer). The green bar shows how far the current measurement has already proceeded, i.e. how much of the signal has been evaluated.

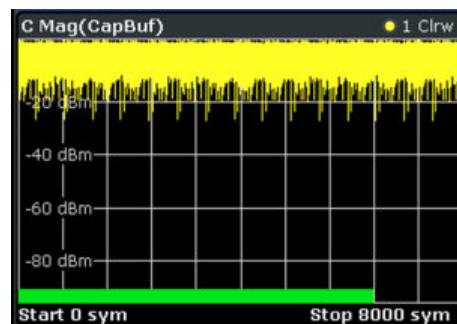


2. Press [Run Single].
Since the signal you are currently analyzing is continuous (as opposed to containing bursts), the entire capture buffer is analyzed, and hence is marked with the green bar. The last evaluated result range (i.e. the currently evaluated result range at the time the measurement stopped) is highlighted in blue.

Measurement example 1: continuous QPSK signal

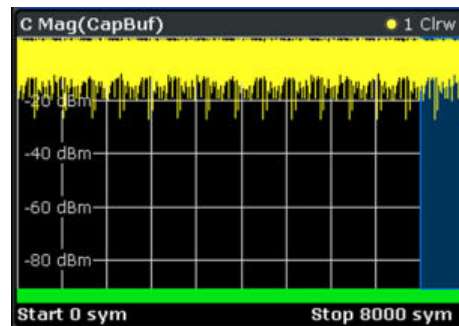

- To go back to a previously evaluated result range within the same capture buffer, press [SWEEP] and then "Select Result Rng". By selecting different result ranges (for example using the rotary knob), you can move the highlighted blue area through the capture buffer and choose your currently demodulated result range.

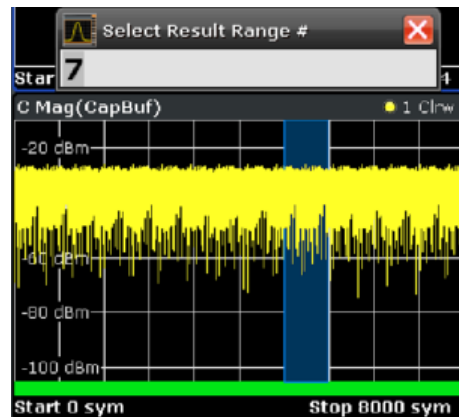

The results for this range are displayed in the "Current" column in the Result Summary, in the eye diagram and in the symbol table.

Note: Generally, all Clear/Write traces and the are affected by this selection.

9.2.5 Averaging several evaluations

By default, all measurement windows are displayed with a single trace, which is the Clear/Write trace. This trace displays the result of the current evaluation, i.e. the highlighted blue area from the example in [Chapter 9.2.4, "Navigating through the capture buffer"](#), on page 317. However, for most real-world measurement tasks, you need to obtain a result that is averaged over a certain number of evaluations, or a worst-case result of a certain number of evaluations. This section explains how to achieve those results.

To evaluate EVM vs. Time

- Configure window 1 such that it displays the EVM versus time measurement (Source: "Error Vector", Result Type: "EVM", see [Chapter 9.2.3, "Changing the display configuration"](#), on page 316). Select the window to set the focus on it.

Measurement example 2: burst GSM EDGE signals

2. To display the trace averaged over several measurements, or the maximum hold trace over several measurements, press [TRACE].
3. Add further traces by pressing [TRACE] and then either using "Trace 2/3..." or "Trace Config".
Set the second trace to "Average" and the third trace to "Max Hold".
Note that the configured traces appear in the window title.

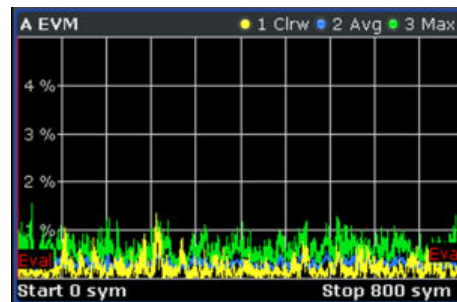


Figure 9-4: Several traces in one window

4. Press [Run Single] again.
The current capture buffer is evaluated for this trace setup. In the channel information bar, you can see the number of completed evaluations ("Stat Count").



5. To change the number of evaluations, press [SWEEP] and select "Statistic Count Config".
Select "Manual" and enter the desired number of evaluations, e.g. 12. When you press [Run Single], the R&S FSW VSA application captures I/Q data until 12 evaluations are completed.

9.3 Measurement example 2: burst GSM EDGE signals

In this measurement example a burst GSM EDGE signal will be measured and evaluated. The goal of this section is to familiarize you with the VSA application features that are relevant specifically for the analysis of burst signals.

9.3.1 Transmitter settings

This section summarizes the necessary transmitter settings. It contains a list of the parameters and step-by-step instructions for the R&S SMW200A. If you are interested in a more detailed description or background information, refer to the user manual of

Measurement example 2: burst GSM EDGE signals

the R&S SMW200A, which can be downloaded from the Rohde & Schwarz website:
<http://www.rohde-schwarz.com/downloads/manuals/smw200A.html>.

| | |
|-----------|--|
| Frequency | 1 GHz |
| Level | 0 dBm |
| Standard | GSM EDGE Burst with normal symbol rate |

To define the settings for the R&S SMW200A

1. Press [PRESET] to start from a defined state.
2. Press [FREQ] and enter *1 GHz*.
3. Press [LEVEL] and enter *0 dBm*.
4. To define the standard:
 - a) Select the "Baseband A" block.
 - b) Under "TSMA standards", select "GSM/EDGE...".
5. To configure the burst type in the "GSM/EDGE A" dialog box:
 - a) In the "Framed (Single) Configuration" tab, highlight the first slot in the frame diagram.


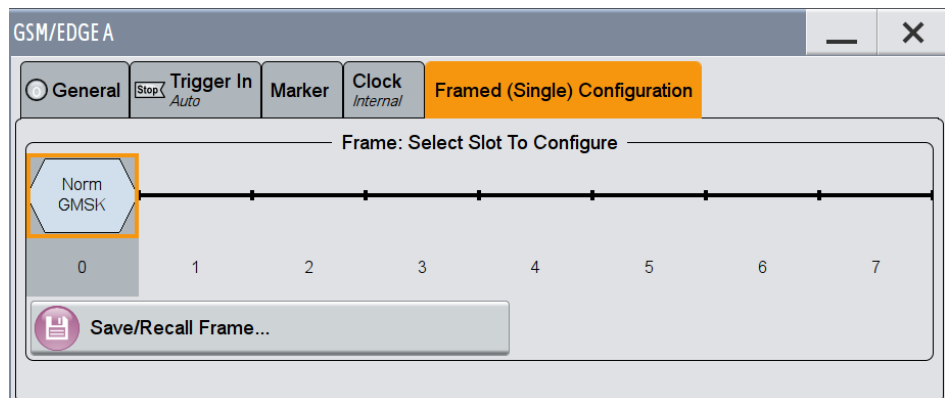


Figure 9-5: R&S SMW200A: GSM/EDGE frame configuration settings

Measurement example 2: burst GSM EDGE signals

- b) In the "GSM/EDGE A: Burst@Slot0" dialog box, select the "Burst Type": "Normal (8PSK / EDGE)".

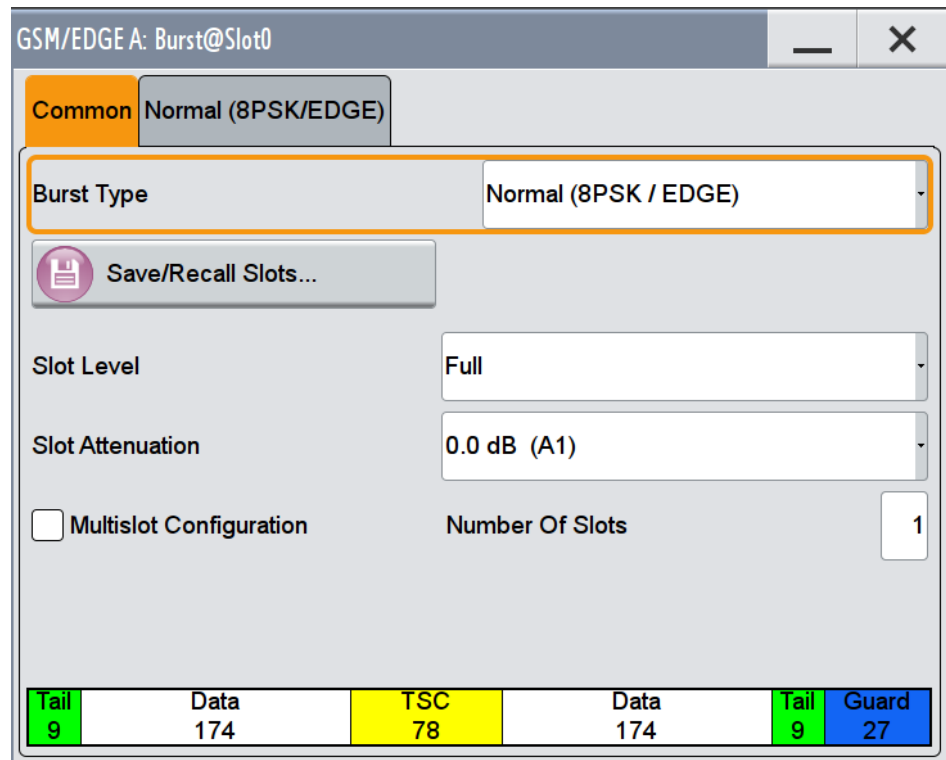

- c) Close the "GSM/EDGE: Burst@Slot0" dialog box.
6. In the "General" tab, toggle the "State" to "On" to switch the modulation on.
 7. Close the "GSM/EDGE A" dialog box.
 8. Select the "RF A" signal output to switch the RF transmission on.

9.3.2 Analyzer settings

This section helps you get your first valid measurement with a burst signal. It starts with step-by-step instructions and continues with a more detailed description of further functionality.

| | |
|-----------|---------------|
| Frequency | 1 GHz |
| Ref Level | 4 dBm |
| Standard | GSM 8PSK EDGE |

To define the settings on the FSW

1. Press [PRESET] to start from a defined state.
2. Press [FREQ] and enter *1 GHz*.

Measurement example 2: burst GSM EDGE signals

3. Press [AMPT], and enter 4 dBm as the reference level. This corresponds approximately to the peak envelope power of the signal.
4. Start the VSA application by pressing [MODE] and then selecting "VSA".
5. Select "Overview" to display the "Overview" for VSA.
6. Press [MEAS], then select "Digital Standards".
7. From the file selection list, select the GSM folder and then the file EDGE_8PSK. Select "Load".

Predefined settings corresponding to the selected standard are loaded. The VSA application should show good measurement results.

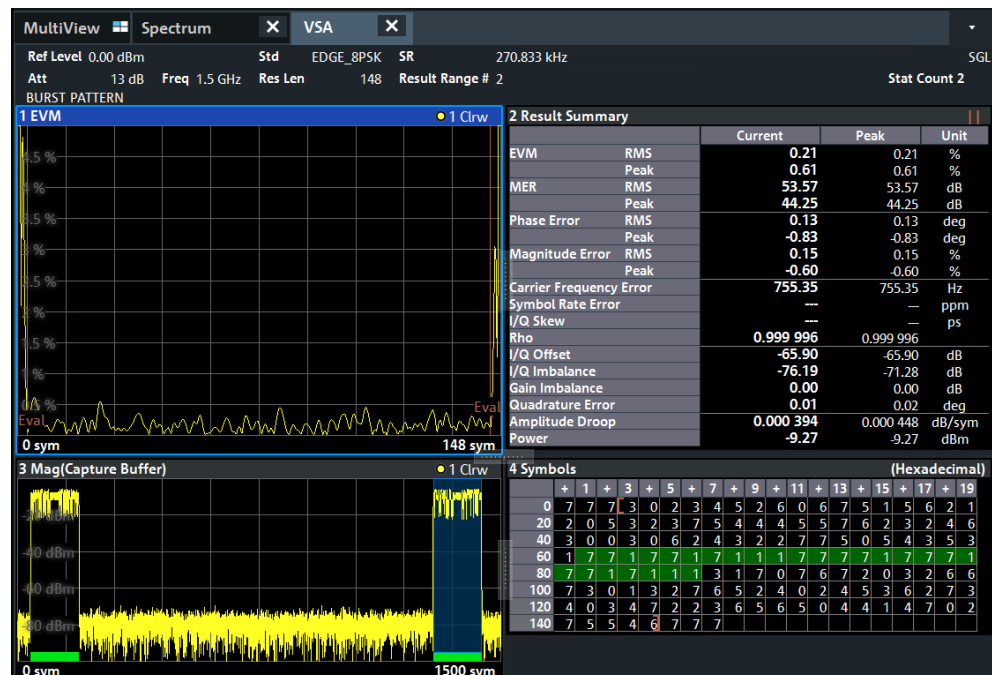


Figure 9-6: Default display configuration for GSM 8PSK EDGE



8. In window 3, you see the currently evaluated burst marked with a green bar. To include more bursts in the display, you need to increase the capture length.
 - a) Press [MEAS CONFIG] and then "Overview".
 - b) Select "Signal Capture".
 - c) Increase the "Capture Length", e.g. to 10000 symbols.

You see that more bursts are now contained in the capture buffer. They are all marked with a green bar, meaning that they are all evaluated.

9.3.3 Navigating through the capture buffer

This example describes how to navigate through the capture buffer for a continuous signal. This navigation feature is especially important for bursted signals. Therefore, we provide a further navigation example for the GSM EDGE signal.

Measurement example 2: burst GSM EDGE signals

1. To see more details in the capture buffer, close window 4.
 - a) Press "Display Config", or "Display Configuration" in the "Overview".
 - b) Select the  "Delete" icon for window 4.
 - c) 

Close the SmartGrid mode by selecting the "Close" icon at the top-right corner of the toolbar.
2. Increase the capture length to 10 000 symbols to capture multiple bursts within the capture buffer.
 - a) Select [MEAS CONFIG] > "Signal Capture".
 - b) Define "Capture Length" = 10000 symbols.
3. Press [Run Single].
4. In the "EVM vs. Time" display (window 1), add a maximum hold trace by pressing [TRACE] and then selecting "Trace Config" (see [Chapter 9.2.5, "Averaging several evaluations"](#), on page 318).
5. Use the "Select Result Rng" function in the "Sweep" menu to navigate through your capture buffer. Thus, you can determine which peak was caused by which burst.



Figure 9-7: Navigation through the capture buffer

9.3.4 Evaluating the rising and falling edges

The "Result Length" is the number of symbols that are to be demodulated and analyzed together. In most common applications, only the parts of the capture buffer containing the bursts need to be analyzed. Hence, for bursted signals the "Result Length" usually coincides with the burst length. However, there are certain scenarios where the rising and falling edge of a burst are also of interest, e.g. checking the power ramping

Measurement example 2: burst GSM EDGE signals

of the device under test. For this measurement task, it is useful to choose a "Result Length" that exceeds the burst length.

1. To include the rising and falling edges of the bursts in the EVM vs Time display (window 1), you need to increase the "Result Length".
In the "Overview", select "Cut Result Range" and increase the "Result Length" to 200 symbols.
2. To evaluate the rising and falling edges further, display the absolute magnitude values of the measured signal in window 4 (Source: "Meas&Ref Signal", Result type: "Magnitude Absolute", see [Chapter 9.2.3, "Changing the display configuration"](#), on page 316).
3. Press [Run Single].

The rising and falling edges of the burst in the selected result range are displayed in window 4. You could now add an average trace to evaluate the rising and falling edges further.

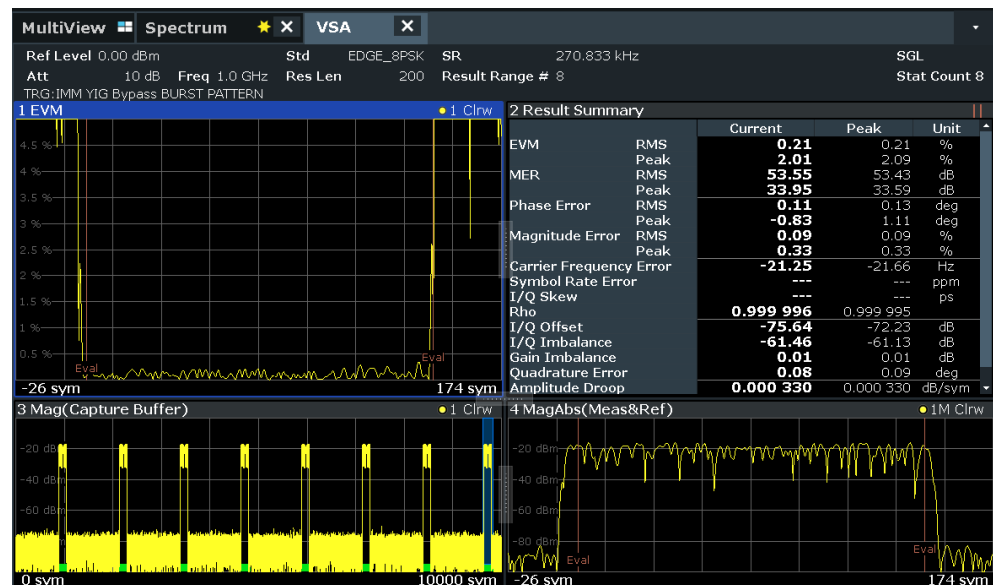


Figure 9-8: Result range that exceeds the burst length

9.3.5 Setting the evaluation range

In some scenarios, such as in [Evaluating the rising and falling edges](#), the result range contains symbols that are not supposed to be considered for the EVM or other calculated parameters that are displayed in the "Result Summary". Thus, you would not include them in the evaluation range.

To change the evaluated data

1. Start from the configuration described in [Chapter 9.3.4, "Evaluating the rising and falling edges"](#), on page 323.

Measurement example 2: burst GSM EDGE signals

2. Display the I/Q constellation diagram of the signal in window 1 (Source: "Meas&Ref Signal", Result type: "Constellation I/Q", see [Chapter 9.2.3, "Changing the display configuration"](#), on page 316).

A clear 8PSK constellation is displayed.

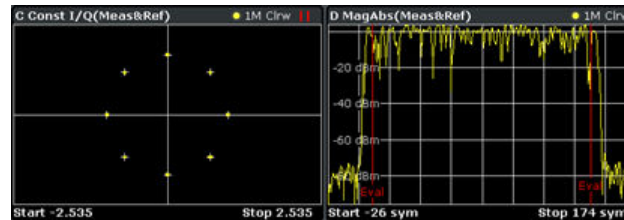


Figure 9-9: Evaluation lines properly adjusted

3. To understand the effect of an incorrectly set evaluation range, change the evaluation range to include the entire result range.
 - a) In the "Overview", select "Evaluation Range".
 - b) Enable the "Entire Result Range" option.

The displayed constellation diagram is no longer clear, it contains additional points. This is because the constellation diagram now displays symbol instants that are beyond the burst.


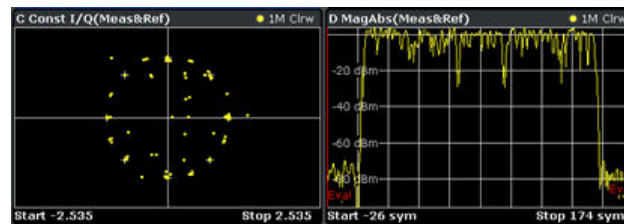


Figure 9-10: Evaluation lines not properly adjusted

 

All measurement windows that consider the evaluation range are marked with two small red lines in the title bar.

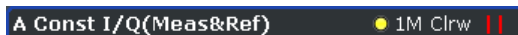

9.3.6 Comparing the measurement signal to the reference signal

You have seen that it is possible to add different traces such as maximum hold or average to each window. When evaluating the measurement signal, it is also possible to display the ideal reference signal as an additional trace. This can be a significant help when troubleshooting, since it allows for an immediate comparison.

1. Start from the configuration described in [Chapter 9.3.4, "Evaluating the rising and falling edges"](#), on page 323.
2. Select window 4 to set the focus on it.

Measurement example 2: burst GSM EDGE signals



3. Press [TRACE] and then "Trace 2".
4. Select "Clear Write" as the "Trace Mode" and "Evaluation: Ref" to a second trace to your result display. This trace is the ideal reference signal that you can compare to the measurement signal (see [Figure 9-11](#)).
5. To view the traces in more detail, enlarge the window using "Split/Maximize" () . Then zoom into the display using the  icon in the toolbar (see the dotted rectangle in [Figure 9-11](#)).



Figure 9-11: Zooming

Now you can compare the measured and the ideal reference signal.

10 Troubleshooting the measurement

If the results do not meet your expectations, the following tips help you troubleshoot the measurement.




To query all errors that have occurred during a measurement in remote operation, use the `SYSTem:ERRor:EXTended? ALL` command.


- [Flow chart for troubleshooting](#).....327
- [Explanation of status bar messages](#)..... 329
- [Frequently asked questions](#)..... 338

10.1 Flow chart for troubleshooting

If you experience a concrete measurement problem, try solving it with the help of the flow chart.

Troubleshooting Overview

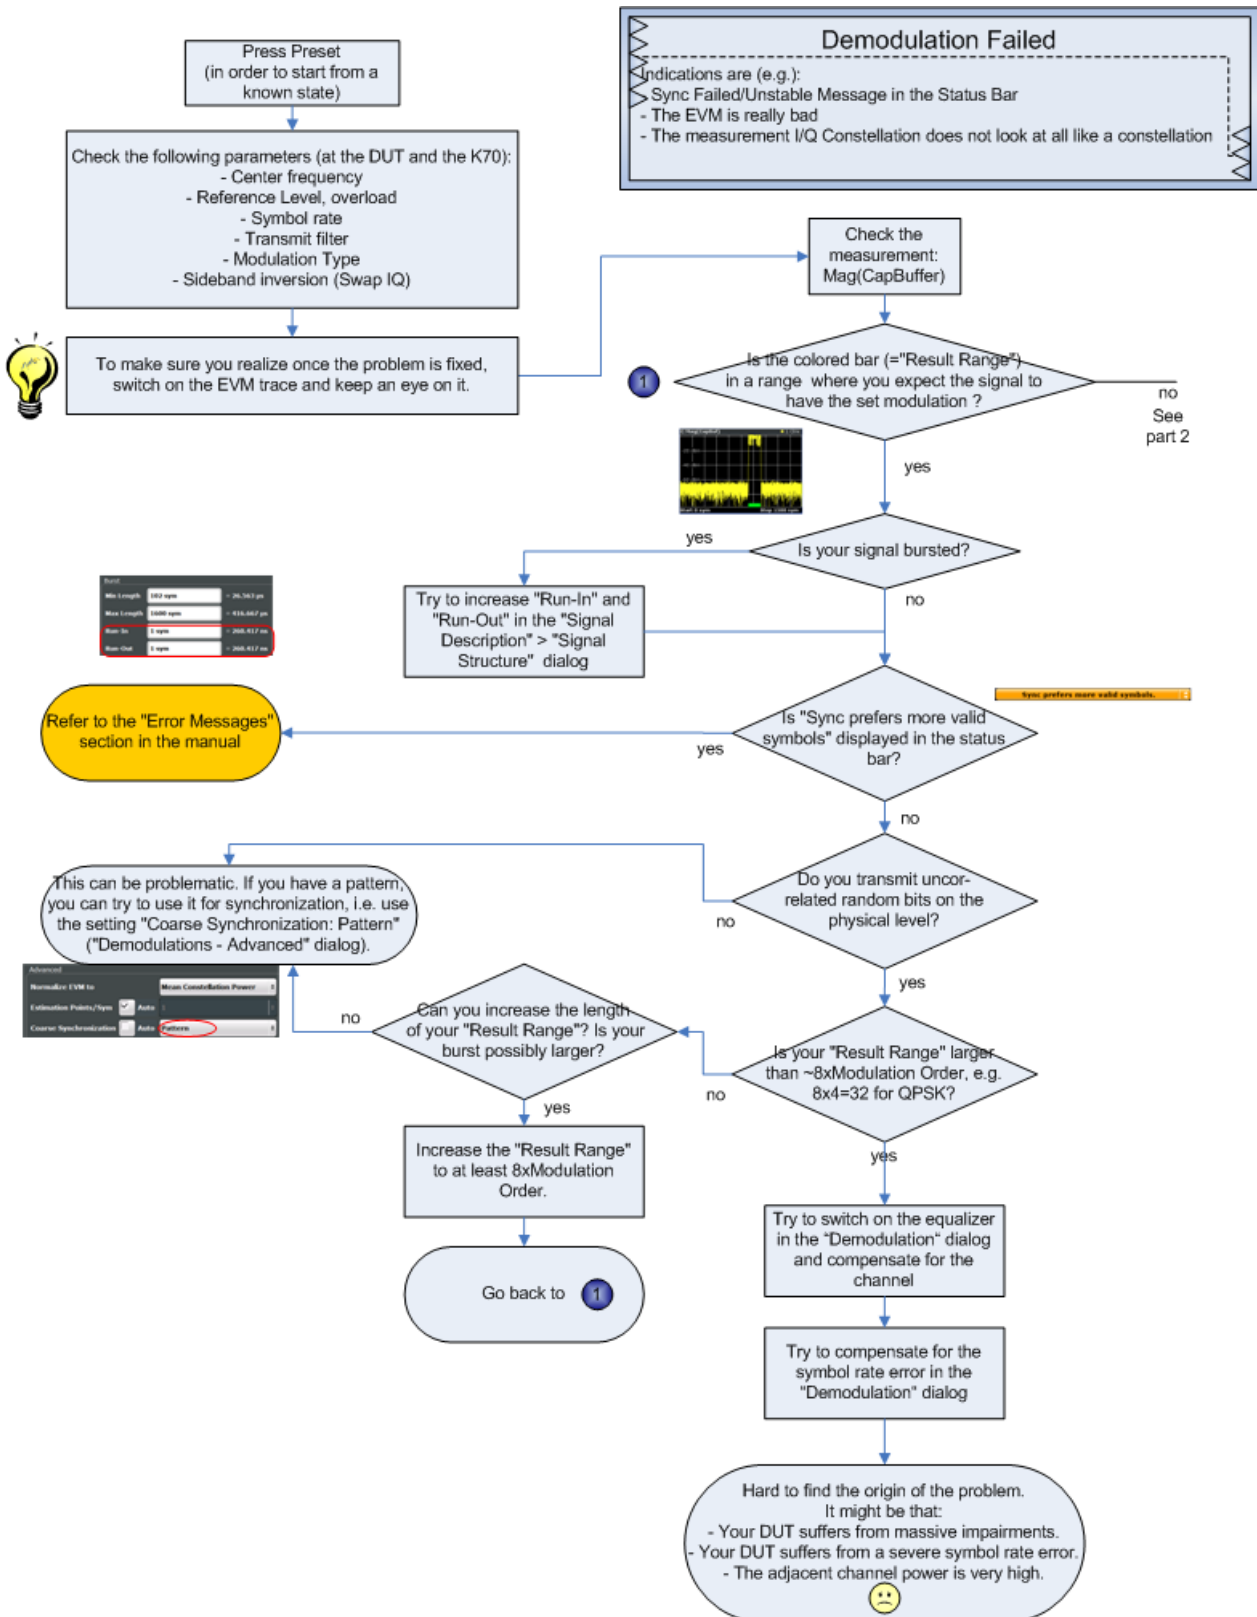

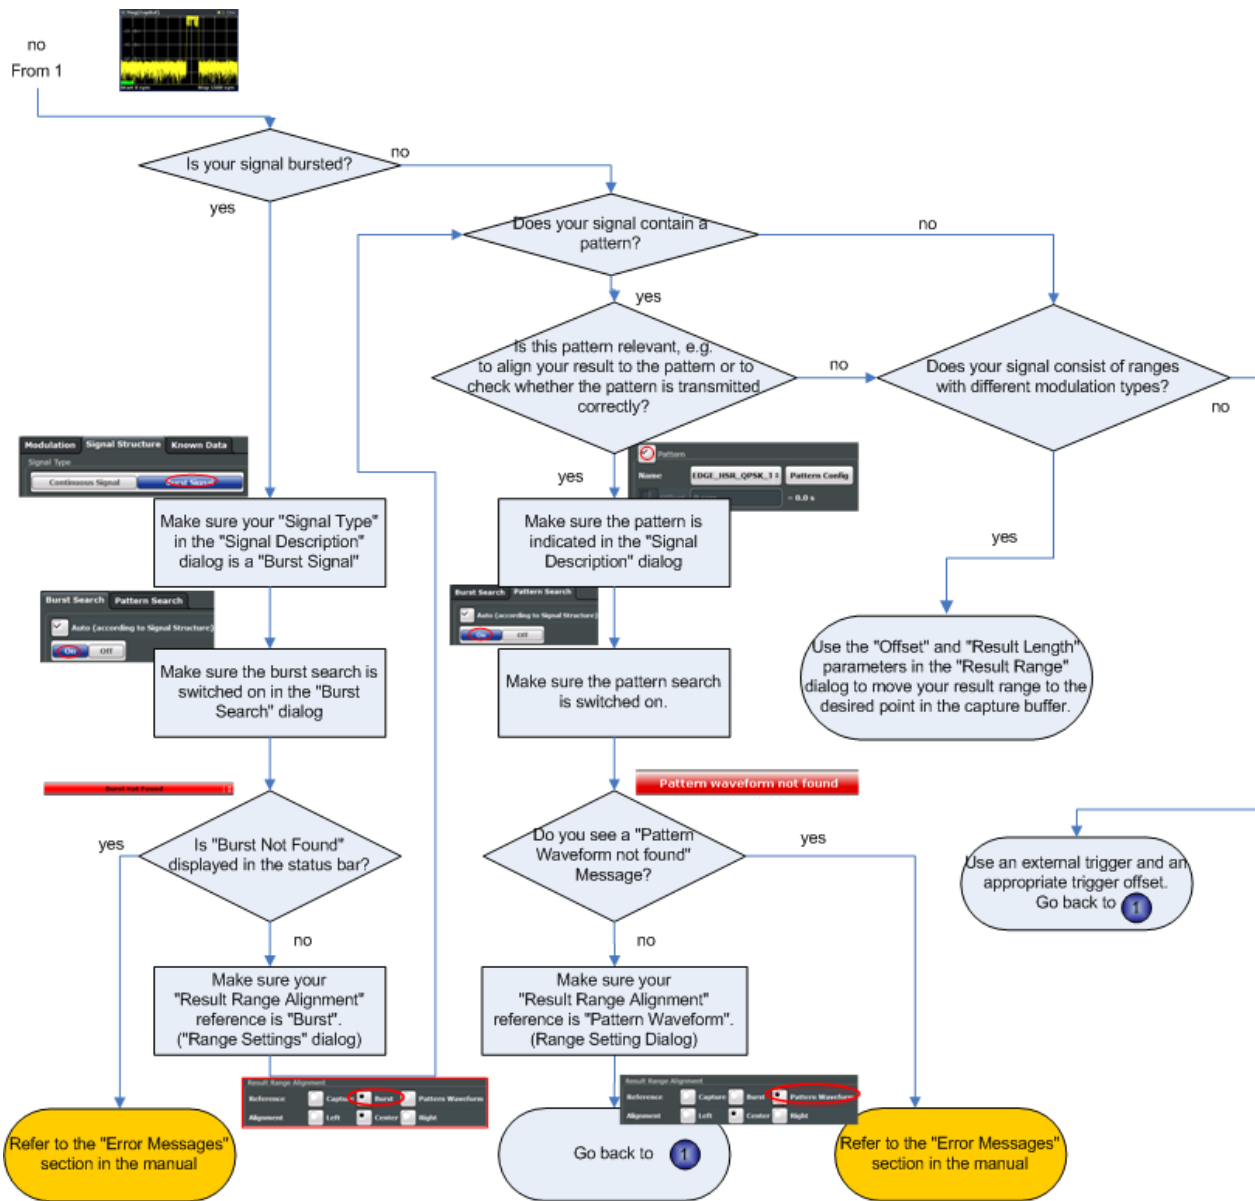

10.2 Explanation of status bar messages

The following section describes error messages and warnings displayed in the status bar by the application firmware, and possible causes.

| | |
|---|-----|
| Message: Burst Not Found..... | 330 |
| Message: Pattern Waveform Not Found..... | 332 |
| Message: Pattern Symbols Incorrect..... | 333 |
| Message: Result Alignment Failed..... | 333 |
| Message: Sync failed. Check for all zero signal..... | 334 |
| Message: All zero signal. Transmit uncorrelated random data bits..... | 334 |
| Message: Pattern Search On, But No Pattern Selected..... | 334 |

| | |
|--|-----|
| Message: Pattern Not (Entirely) Within Result Range..... | 334 |
| Message: Short Pattern: Pattern Search Might Fail..... | 335 |
| Message: Sync Prefers More Valid Symbols..... | 335 |
| Message: Sync Prefers Longer Pattern..... | 337 |
| Message: Result Ranges Overlap..... | 337 |
| Message: Symbol rate exceeds usable I/Q bandwidth..... | 337 |
| Message: Data Sequences have Incorrect # Symbols..... | 337 |
| Message: [...] The Polynomial is Patched to the Default..... | 337 |

Message: Burst Not Found

The "Burst Not Found" error message can have several causes:

- **Burst search is active, but the signal is not bursted**

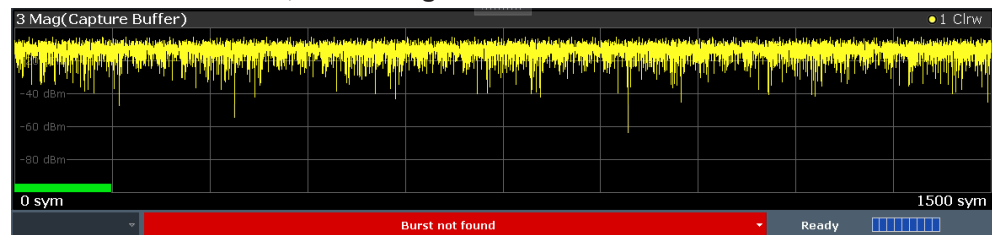


Figure 10-1: Example for active burst search with continuous signal

Solution: Select "Continuous Signal" as the signal type.

For more information, see

- "Signal Type" on page 191.

- **Signal is bursted, but bursts have not been captured completely**

The burst search can only find bursts that start and end within the capture buffer. It ignores bursts that are cut off.



Figure 10-2: Example for incomplete burst capture

Solution: Change the trigger settings and/or enlarge the capture length.

For more information, see

- Chapter 5.5, "Signal capture", on page 230

- **The settings do not match the signal**

To allow you to select certain bursts, the burst search only searches for bursts that have a length between "Min Length" and "Max Length" (plus a tolerance that you can set in the "Burst Search" Dialog). In case the burst is, e.g. shorter than the "Burst Min Length", the burst search fails.

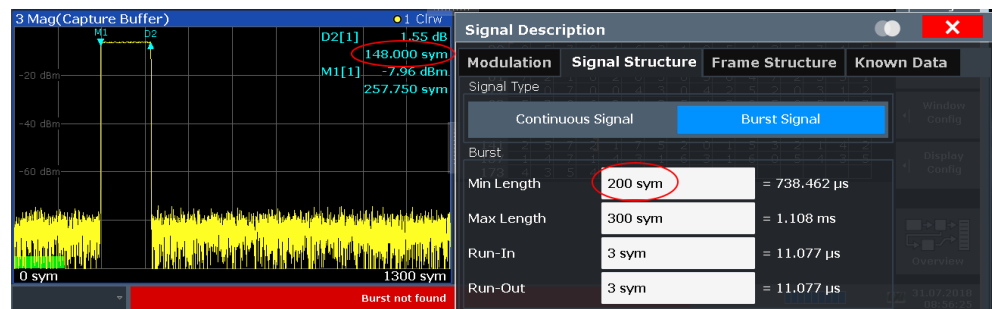


Figure 10-3: Example for a failed burst search due to a burst that is too short

Solution: try one of the following:

- Switch on the "Magnitude (Capture Buffer)" result display. Move a marker to the start of the burst. Move a delta marker to the end of the burst and compare the burst length to the settings in the "Signal Description" dialog.
- Increase the search tolerance in the "Burst Search" dialog. Keep an eye on the green/red field. If the burst search succeeds, you can see the length of the found bursts.
- Set the minimum burst length to 50 and the maximum burst length to 5000.

For more information, see:

- ["Burst Settings"](#) on page 191
- ["Burst Configuration"](#) on page 244

- **The signal is highly distorted and/or has modulation noise**

One possibility to enhance the robustness of the burst search is to increase the minimum gap length. If the bursts within your capture buffer are not closely spaced, it makes sense to increase the value of this parameter.

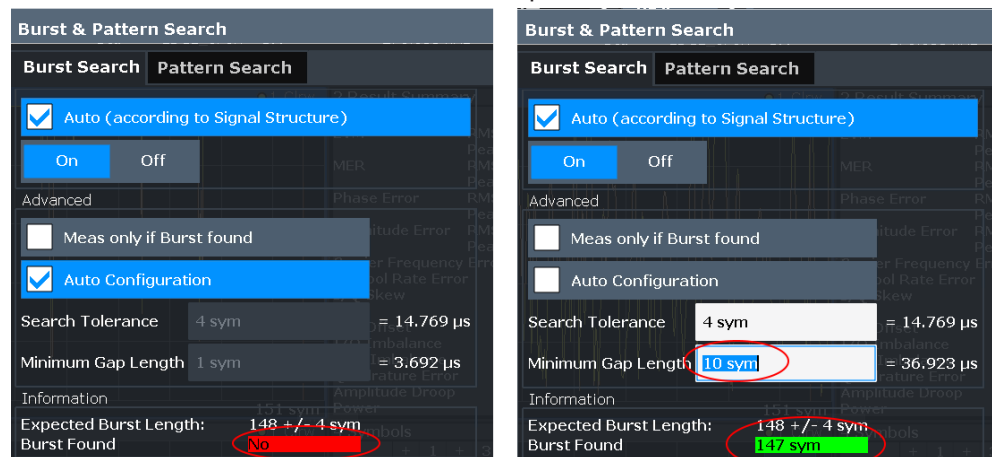


Figure 10-4: Example for adjusting the minimum gap length

For more information, see ["Min Gap Length"](#) on page 245

- **The pattern search is switched on, fails and the alignment is with reference to the pattern.**

If the pattern search is enabled and the pattern (not the burst) is used as the reference for alignment, but no pattern is detected, the result range starts at the beginning of the capture buffer. Hence, if the burst does not start right at the beginning of the capture buffer, you see a "Burst Not Found" Message.

Solution:

- Refer to ["Message: Pattern Waveform Not Found"](#) on page 332
- Switch the pattern search off.
- Choose "Burst" as the reference for the result range alignment.

Message: Pattern Waveform Not Found

The "Pattern waveform not found" error message can have several causes:

- **The pattern is too short/ the SNR is too low**
Solution: decrease the I/Q correlation threshold in the "Pattern Search" dialog box (see ["I/Q Correlation Threshold"](#) on page 246)

- **The burst search has failed**

If burst and pattern search are active, the application looks for patterns only within the found bursts. Hence, in case the burst search fails, the pattern search also fails.

Solution: Try one of the following:

- Make sure that the burst search is successful.
- Deactivate the burst search but keep the pattern search active.

For more information, see

- ["Message: Burst Not Found"](#) on page 330
- [Chapter 5.6.1, "Burst search"](#), on page 243

- **The offset of the pattern within the burst is incorrectly set**

You can set a pattern offset to speed up the pattern search. The offset of the pattern is the offset of the pattern start from the start of the useful part of the burst. However, if the entered offset is not correct (within about 4 symbols of tolerance), the pattern is not found.

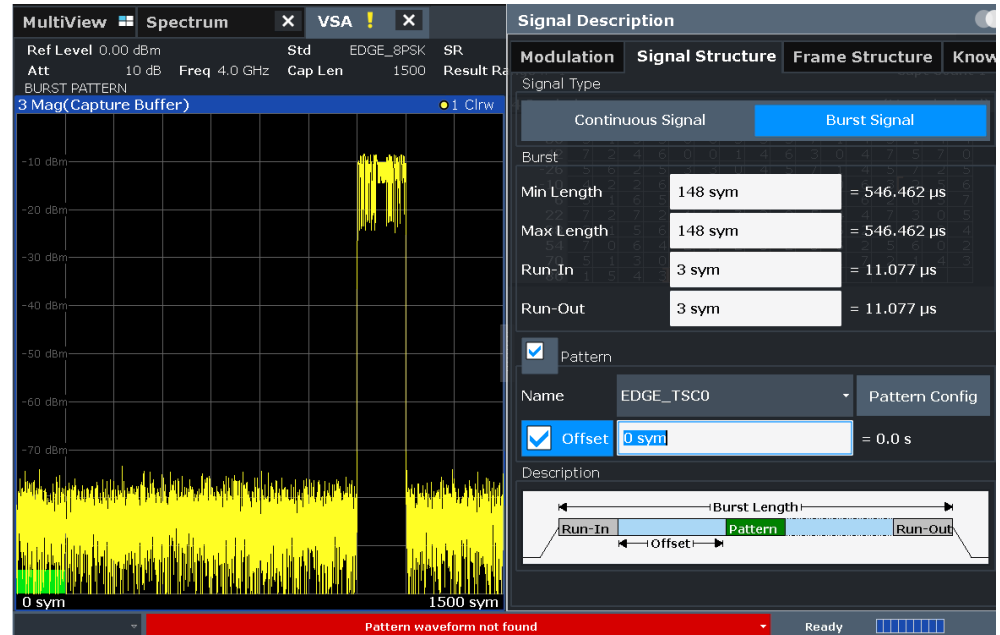


Figure 10-5: GSM EDGE burst; Pattern is actually located in the middle of the burst. The correct value for "Offset" here would be 58.

Solution: Try one of the following:

- Remove the offset ('unknown').

- Enter the correct offset (within about 4 symbols of tolerance).

For more information, see

- "Offset" on page 192

- The specified pattern does not coincide with the pattern in your signal:
In the R&S FSQ-K70 it is possible to search for multiple patterns at the same time. For example, in a GSM measurement, the capture buffer can be checked for all TSCs simultaneously. This is not possible in the R&S FSW-K70.

Solution:

Make sure that the correct pattern is specified in the "Signal Description" dialog.

For more information, see

- Chapter 5.3, "Signal description", on page 186

Message: Pattern Symbols Incorrect

This message can only appear if the pattern waveform has already been found. It indicates that the measured signal contains a pattern that is similar (but not identical) to the pattern specified in the signal description dialog. Technically speaking, the correlation of the signal with the pattern waveform gives a value above the specified I/Q correlation threshold specified in the pattern search dialog. However, not all symbols match the pattern specified in the signal description dialog.

Solution:

Make sure that the correct pattern is specified in the "Signal Description" dialog.

Message: Result Alignment Failed

The result range alignment is not possible for the particular capture buffer. The result range needs I/Q data that has not been captured.

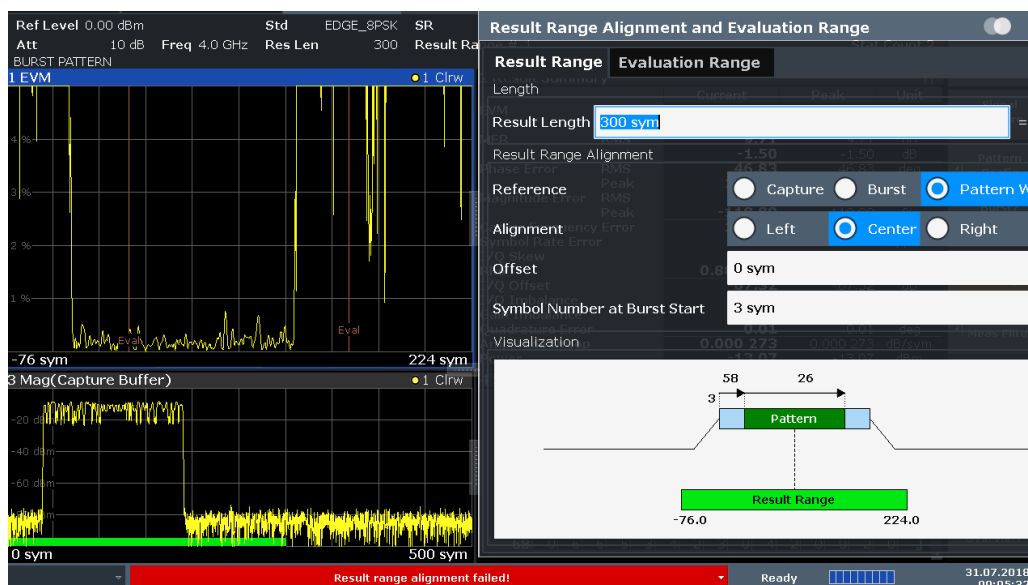


Figure 10-6: Example for failed alignment

In this screenshot, the alignment of the long result range to the burst center is not possible. There are not enough samples in the capture buffer before the burst starts. In this scenario, change the trigger settings so that the burst is in the middle of the capture buffer.

Solution: Change the trigger settings and/or increase the capture length.

For more information, see:

- [Chapter 5.5, "Signal capture"](#), on page 230

Message: Sync failed. Check for all zero signal.

A prerequisite for correct synchronization is a random data sequence of an adequate size.

Solution: Make sure that the input signal contains an adequate number of uncorrelated (random!) bits. (Not 0 0 0 0 0, 1 1 1 1 1, or 01 01 01 01 01, for example.)

For QAM modulation, the result length (the data on which synchronization is based) should correspond to at least 8 times the modulation order (see ["Result Length"](#) on page 254).

Message: All zero signal. Transmit uncorrelated random data bits.

See ["Message: Sync failed. Check for all zero signal."](#) on page 334.

Message: Pattern Search On, But No Pattern Selected

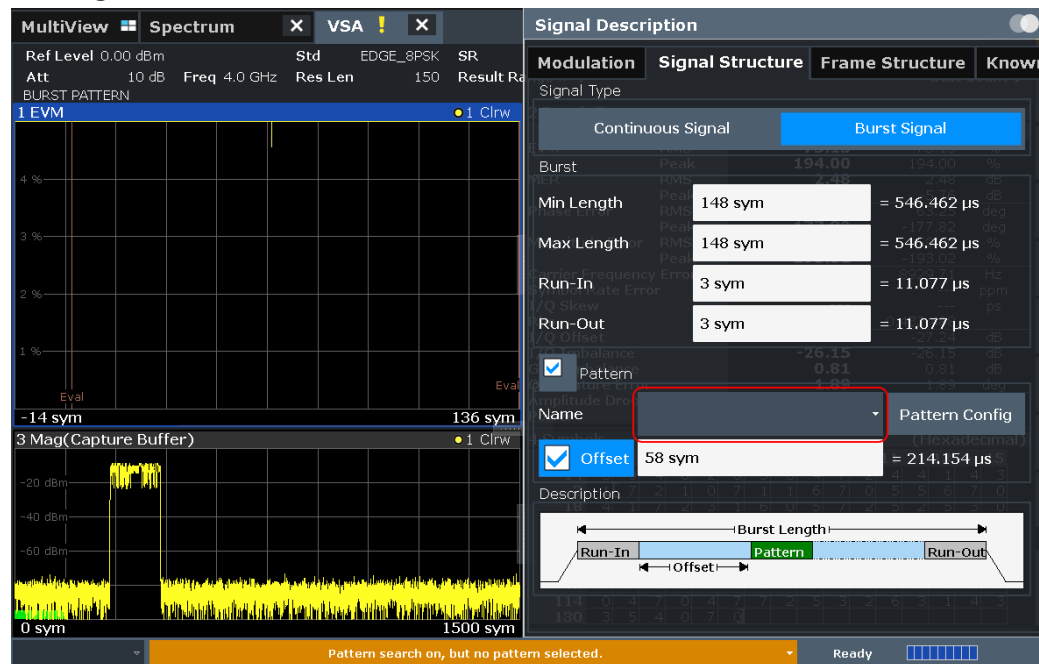


Figure 10-7: The red circle shows the place where you can specify a pattern

Solution: Select an existing pattern (or create a new pattern) that you expect to be within the signal.

For more information, see

- ["Pattern Settings"](#) on page 192
- [Chapter 8.2.3, "How to perform pattern searches"](#), on page 297

Message: Pattern Not (Entirely) Within Result Range

A pattern can only be found if it is entirely within the result range. Therefore, this error message always occurs with a "Pattern Waveform Not Found" error.

Solution: Choose the pattern as reference of your result range alignment. Then, the pattern is always part of your result range and the pattern search can succeed.

For more information, see

- [Chapter 5.7, "Result range configuration"](#), on page 253
- [Chapter 8.2.1, "How to define the result range"](#), on page 295

Message: Short Pattern: Pattern Search Might Fail

The FSW performs the pattern search in two stages.

- Stage 1 involves the generation of an I/Q pattern waveform by modulating the pattern symbol sequence. The I/Q pattern is then correlated with the measured signal. At positions where the correlation metric exceeds the "I/Q Correlation Threshold" the I/Q pattern is found.
- Stage 2 demodulates the measured signal at the I/Q pattern location and the transmitted symbols are checked for correctness against the pattern symbol sequence.

For a very short pattern, i.e. a pattern length in the order of the inter-symbol interference (ISI) duration, various issues can arise:

- False positive
The I/Q pattern is found at positions where the transmitted symbols differ from the pattern symbols.
Solution: Try one of the following:
 - Activate "Meas only if Pattern Symbols Correct".
 - Increase the "I/Q Correlation Threshold" (see [Chapter 5.6.2, "Pattern search"](#), on page 245).
- False negative
The I/Q pattern search misses a position where transmitted symbols match the pattern symbols.
Solution:
 - Decrease the "I/Q Correlation Threshold" (see [Chapter 5.6.2, "Pattern search"](#), on page 245).

For bursted signals, the pattern search finds only the first occurrence of the I/Q pattern within each burst. If a false positive occurs in this situation, using "Meas only if pattern symbols correct" does not provide a satisfactory solution.

In this case do the following:

- Increase the "I/Q Correlation Threshold".
- Specify the expected position of the pattern within the burst by adjusting the "Offset" parameter.

Message: Sync Prefers More Valid Symbols

Note: Note that this message does not necessarily indicate a problem. Its purpose is to inform you that you can possibly get a more stable demodulation and/or better measurement results by improving your setup.

The R&S FSW VSA application performs synchronization in two stages: coarse synchronization that precedes the reference signal generation, and fine synchronization based on the reference signal.

- The coarse synchronization stage is either data-aided (i.e. based on a known pattern) or non-data-aided (i.e. based on the unknown data symbols). The default is a non-data-aided coarse synchronization. If a pattern is part of the signal, you can switch to data-aided synchronization.
- The fine synchronization stage is always data-aided.

"Sync Prefers More Valid Symbols" indicates that one of the synchronization stages has too few symbols to ensure that the synchronization is robust.

The message is provided in the following cases:

- Coarse Synchronization = Non-Data-Aided (User Pattern for Sync = Off):
Estimation range shorter than 40 symbols
(see [Chapter 4.5.1.2, "Estimation"](#), on page 146)
- Fine Synchronization:
Estimation range shorter than 10 symbols
(see [Chapter 4.5.1.2, "Estimation"](#), on page 146)

Solution:

- If the signal contains a pattern, set "Coarse Synchronization: Pattern".
(see ["Coarse Synchronization"](#) on page 261).

Example: measurement of a GSM EDGE pattern that has a length of 26 symbols.

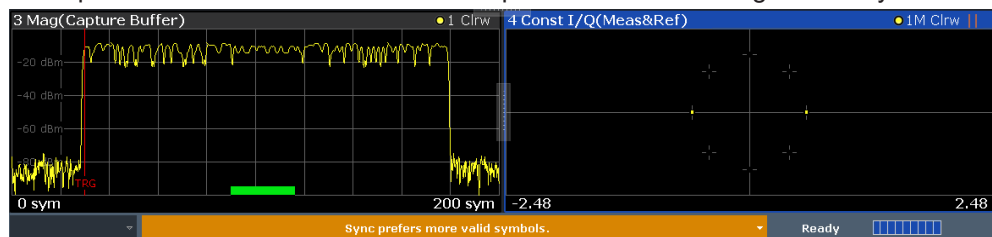


Figure 10-8: User Pattern for Sync = Off

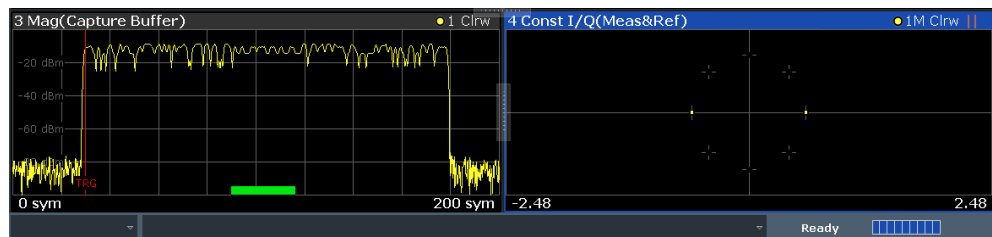


Figure 10-9: User Pattern for Sync = On

- Choose a longer "Result Range".
- If the signal is bursted and the bursts are short:
 - Make sure your "Result Range" comprises the entire burst.
 - Make sure that "Run-In/Out" is not chosen too large, since the "Run-In/Out" ranges are excluded from the synchronization.
- If the signal is bursted and contains a pattern:
Only switch off the burst search if absolutely necessary. If you need to switch it off, align your "Result Range" to the pattern, make sure it does not exceed the burst ramps and choose "Continuous Signal" as the "Signal Type" in the "Signal Description" dialog.

For more information, see

- [Chapter 4.4, "Overview of the demodulation process"](#), on page 131

Message: Sync Prefers Longer Pattern

This message can only occur if the coarse synchronization is data-aided, i.e. is based on a known pattern. In case the pattern is very short, pattern-based coarse synchronization can be unstable. If demodulation is stable, e.g. you get a reasonable EVM, there is no need to change anything. Otherwise, you have two options:

- Switch to the non-pattern-based mode by setting the parameter "Coarse Synchronization: Data" (see ["Coarse Synchronization"](#) on page 261)
- If possible, use a longer pattern.

For more information, see

- [Chapter 4.4, "Overview of the demodulation process"](#), on page 131

Message: Result Ranges Overlap

This message does not indicate an error. It is merely displayed to inform you that the defined result ranges in the capture buffer overlap. Thus, some captured data is evaluated more than once. For example, the same peak value can be listed several times if it is included in several result ranges, and averaging is performed on (partially) duplicate values. However, a negative influence on the measurement results is not to be expected.

Message: Symbol rate exceeds usable I/Q bandwidth

The occupied bandwidth of a signal mostly depends on its symbol rate (see also [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75). If the available usable I/Q bandwidth is too small, part of the signal is not captured. Thus, the demodulation is distorted.

Solution:

- Decrease the symbol rate (see ["Symbol Rate"](#) on page 189)
- Decrease the sample rate (see ["Sample Rate"](#) on page 231)
- Install additional bandwidth extension options

Message: Data Sequences have Incorrect # Symbols

The length of the data sequences taken from a known data file does not correspond with the specified result range length (see ["Result Length"](#) on page 254). Specify the correct number of symbols as the result length.

Tip: the result length of the data sequences in the known data file is indicated in the "Signal Description" dialog box, in the "Known Data" tab (see [Chapter 5.3.4, "Known data"](#), on page 201).

Message: [...] The Polynomial is Patched to the Default.

You can define the polynomial used for PRBS data manually. To comply with the ITU-T standard, the defined coefficients must comply with specific rules. If the manually entered polynomial does not define a known PRBS model, the default for the selected PRBS type is used. The broken rule is indicated in the message.

10.3 Frequently asked questions

- [Issues with graphical results](#)..... 338
- [Issues with numeric results](#)..... 343
- [Synchronization and demodulation problems](#)..... 347
- [Other measurement issues](#)..... 348


10.3.1 Issues with graphical results

- [Problem: The measurement window does not show average results](#)..... 338
- [Question: Why do not the symbols in the Symbol Table match the symbols sent by my IRIG-106 conform device?](#)..... 339
- [Question: The y-axis unit for the spectrum of the measurement signal can be chosen to be "dB". What level is it relative to?](#)..... 339
- [Problem: The PSK/QAM signal shows spikes in the Frequency Error result display](#).. 340
- [Problem: The Constellation I/Q measurement result display has a different number of constellation points in the R&S FSQ-K70 and the R&S FSW-K70](#)..... 340
- [Problem: The Constellation I/Q result display and the Vector I/Q result display look different](#)..... 341
- [Problem: The spectrum is not displayed in the logarithmic domain](#)..... 342
- [Problem: The trace of the measurement signal is visible in the measurement window; the trace of the reference signal is not](#)..... 342
- [Problem: The trace is not entirely visible within the measurement window](#)..... 343

Problem: The measurement window does not show average results

Solution:

- 1. Select the measurement window.
- 2. Press [TRACE].
- 3. Press "Trace Config".
- 4. Select a second trace and choose the preferred "Trace Mode", e.g. "Max Hold" or "Average".

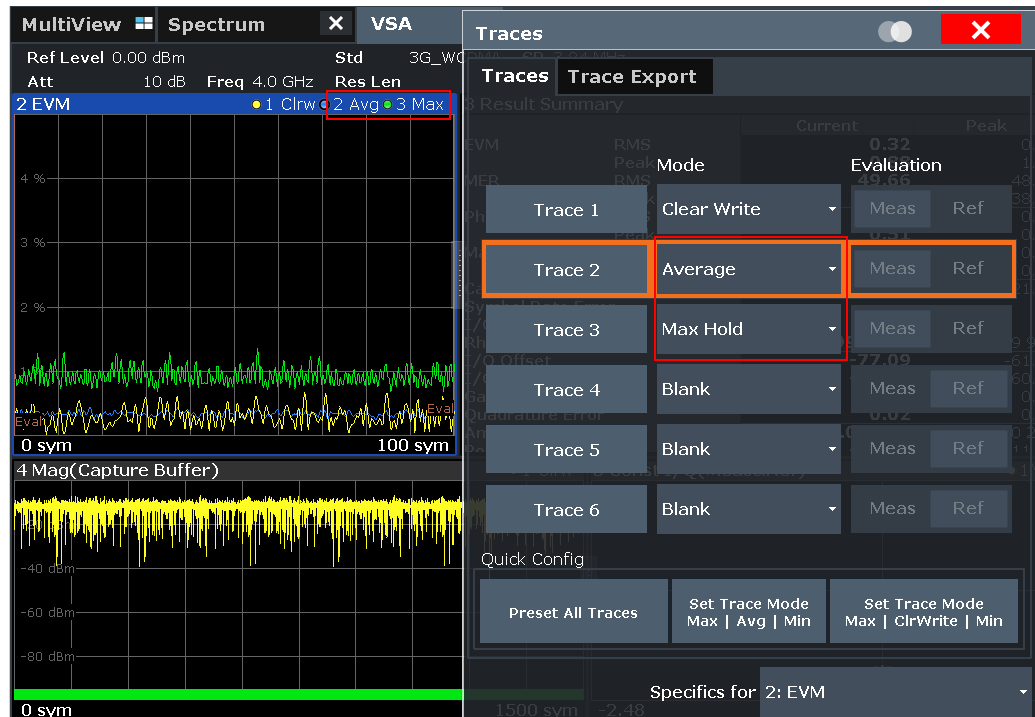

Question: Why do not the symbols in the Symbol Table match the symbols sent by my IRIG-106 conform device?


The predefined standard file for shaped offset QPSK (SOQPSK) was implemented according to the IRIG-106 standard, however without the differential precoding. Thus, the bit values of the symbols are not decoded according to the standard in the "Symbol Table". All other result displays show appropriate results.

Question: The y-axis unit for the spectrum of the measurement signal can be chosen to be "dB". What level is it relative to?

Answer:

"Spectrum (Reallmag, Meas&Ref)" calculates the FFT of the "Reallmag(Meas&Ref)" result. "Reallmag(Meas&Ref)" has the unit "none". In this case, "none" means that the measured signal has been scaled such that it matches the ideal corresponding reference signal as well as possible. The reference signal in turn is scaled such that $\max(\text{abs}(\text{at symbol instants})) = 1.0$.

Problem: The PSK/QAM signal shows spikes in the Frequency Error result display

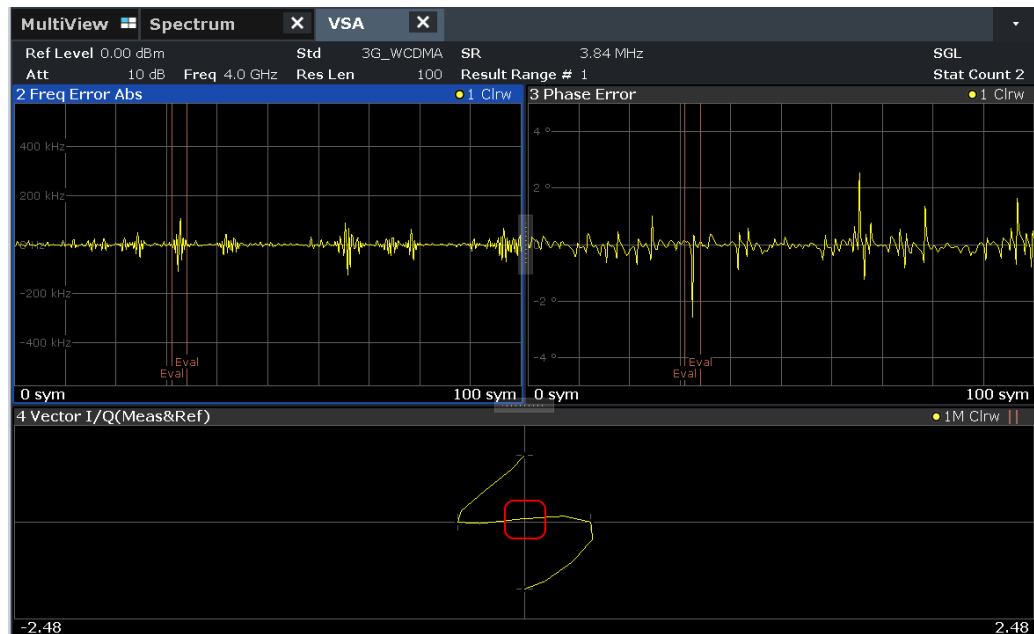

Solution:

These spikes are usually uncritical and are caused by zero-transitions in the I/Q Plane.

Problem: The Constellation I/Q measurement result display has a different number of constellation points in the R&S FSQ-K70 and the R&S FSW-K70

Reason:

In the FSQ-K70, the "Constellation I/Q" measurement displays the symbol instants of the "Vector I/Q" measurement. Hence, this is a rotated constellation, e.g. for a $\pi/4$ -DQPSK, 8 points are displayed.

In the R&S FSW-K70, the "Constellation I/Q" diagram shows the de-rotated constellation (i.e. for a $\pi/4$ -DQPSK, 4 instead of 8 points are displayed). The inter-symbol interference has been removed.


Note: The "I/Q Constellation (Rotated)" result display displays the rotated constellation, as the R&S FSQ-K70 does.

For details on the "Constellation I/Q" diagram in the R&S FSW-K70, see [Chapter 3.2.5, "Constellation I/Q"](#), on page 29.

Table 10-1: Constellation I/Q and Vector I/Q for pi/4-DQPSK modulation

| | |
|------------------------|------------------------|
| | |
| <p>R&S FSW-K70</p> | <p>R&S FSW-K70</p> |

Problem: The Constellation I/Q result display and the Vector I/Q result display look different

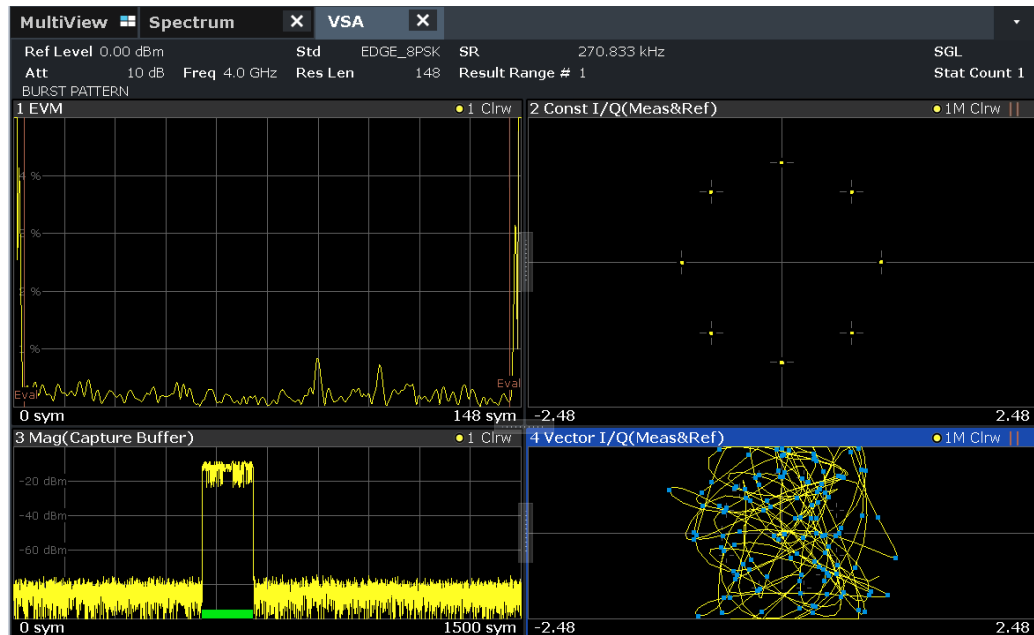

Reason:

- The "Vector I/Q" diagram shows the measurement signal after the measurement filter and synchronization.
- The "Constellation I/Q" diagram shows the de-rotated constellation (i.e. for a $\pi/4$ -DQPSK, 4 instead of 8 points are displayed). The inter-symbol interference has been removed.

In case the measurement filter does not remove the inter-symbol interference, the windows show measurements that are significantly different.

Problem: The spectrum is not displayed in the logarithmic domain


Solution:

- 1. Select the measurement window.
- 2. Press [AMPT].
- 3. Press "Unit".
- 4. Press "Y-Axis Unit".
- 5. Select dB.

Problem: The trace of the measurement signal is visible in the measurement window; the trace of the reference signal is not

Solution:

- 1. Select the measurement window.
- 2. Press [TRACE].
- 3. Press "Trace Config".
- 4. Select a second trace, choose "Clear Write" as "Trace Mode" and toggle to "Ref" in the "Evaluation" column.

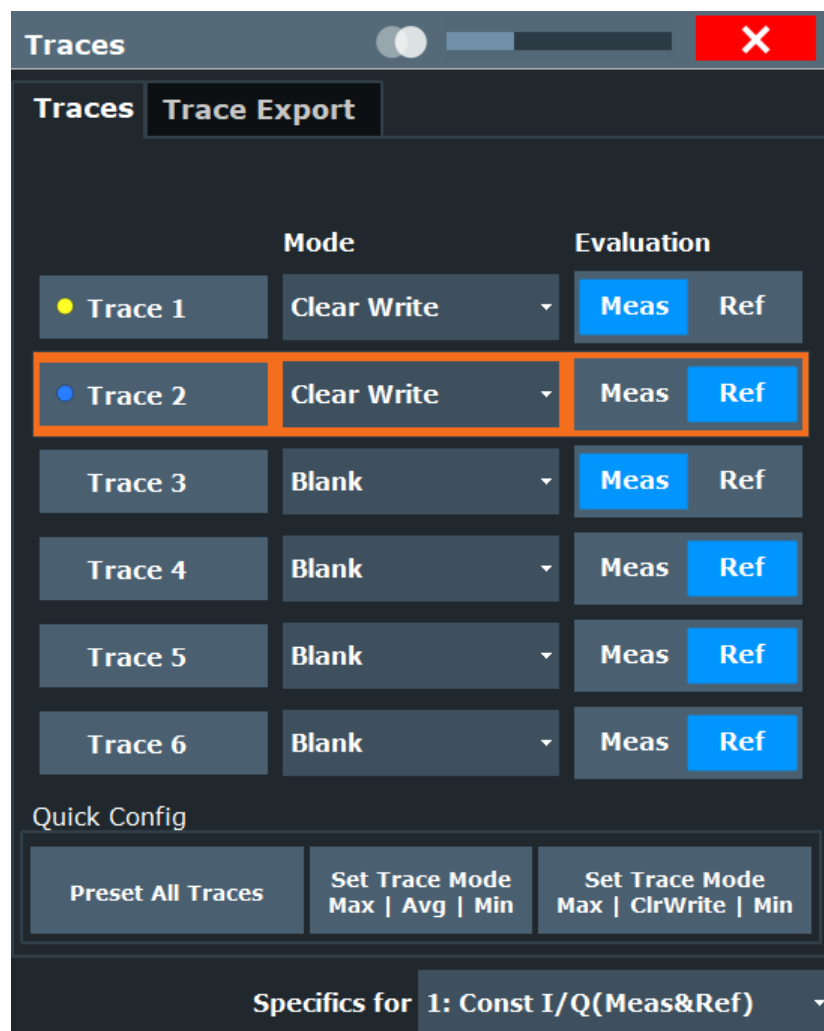

Problem: The trace is not entirely visible within the measurement window

Solution:

- 1. Select the measurement window.
- 2. Press [AUTO].
- 3. Press "Y-Axis Auto Scale".

10.3.2 Issues with numeric results

| | |
|---|-----|
| Problem: The I/Q skew estimate is not displayed as expected, even though I activated the compensation in the Demodulation settings..... | 343 |
| Question: How do I calculate the differential EVM (DEV M) for Bluetooth?..... | 343 |
| Question: Why does not my BER measurement provide results?..... | 344 |
| Question: How long do I need to measure to get a reliable BER?..... | 344 |
| Question: Why do the EVM results for my FSK-modulated signal look wrong?..... | 344 |
| Question: How can I get the demodulated symbols of all my GSM bursts in the capture buffer in remote control?..... | 344 |
| Question: Why is not the FSK Deviation Error in R&S FSW-K70 identical to the FSK DEV ERROR in R&S FSQ-K70?..... | 345 |
| Problem: The EVM trace looks okay, but the EVM in the Result Summary is significantly different..... | 345 |
| Question: Why cannot I select the capture oversampling value as the number of display points per symbol for my EVM trace?..... | 347 |

Problem: The I/Q skew estimate is not displayed as expected, even though I activated the compensation in the Demodulation settings**Possible reasons:**

- Phase ambiguities that are not a multiple of $\pi/2$ cannot be resolved. Thus, to measure I/Q skew for an 8PSK modulation, for example, it is essential to provide an absolute phase reference. You can provide this reference using a pattern.
- If you are providing the I/Q skew by a signal generator, make sure that the constellation in your generator matches the constellation in the R&S FSW VSA application, including the absolute phase.
- I/Q skew cannot be determined for signals whose constellation points all have the same I or Q values, for example using BPSK modulation. In this case, no value is available for the I/Q skew result in the "Result Summary".

Question: How do I calculate the differential EVM (DEV M) for Bluetooth?

The following sample MATLAB® script shows you how to calculate the DEV M according to the instructions in "Bluetooth Spec. v2.0 Appendix C".

Note: "h_FSW" refers to the corresponding VISA object.

```
fprintf(h_FSW, 'DDEM:PRES ' 'Bluetooth_2-DH1 '*OPC?');
query(h_FSW, 'INIT:IMM; *OPC?');

% Query the Meas and the Ref Trace
I_Meas = str2num(query(h_FSW, 'TRAC4:DATA? TRACE1R'));
Q_Meas = str2num(query(h_FSW, 'TRAC4:DATA? TRACE1I'));
I_Ref = str2num(query(h_FSW, 'TRAC4:DATA? TRACE2R'));
Q_Ref = str2num(query(h_FSW, 'TRAC4:DATA? TRACE2I'));
```

```

% Calculate differential EVM according to Bluetooth Spec. v2.0 Appendix C
Zk = I_Meas + 1j*Q_Meas;
Sk = I_Ref + 1j*Q_Ref;

% Q: received signal is compensated for the ideal phase changes between
% symbols by multiplying it with the complex conjugate of the reference
% symbol sequence
Qk = Zk .* conj(Sk);

%DEVM
RMS_DEVM = sqrt(sum(abs(diff(Qk)).^2) / sum(abs(Qk).^2));

DEVM_k = sqrt(abs(diff(Qk)).^2) / (sum(abs(Qk).^2)/length(Qk));
Peak_DEVM = max(DEVM_k);

% 99%-percentile of DEVM
DEVM_99 = prctile(DEVM_k,99);

```

Question: Why does not my BER measurement provide results?

As a prerequisite for the BER measurement, the R&S FSW VSA application must know which bit sequences can occur. You can provide this data in a known data file (see [Chapter 8.2.4, "How to work with known data files"](#), on page 302). If the measurement fails despite a loaded known data file, check the following issues:

- If you used an external reference during recording and there is no pattern within the signal, possibly the recording missed some phase ambiguities.
- If you used a trigger during recording and more than one measurement was performed within the capture buffer, possibly the required sequence was not recorded. The recording tool only records the first result range within the capture buffer.

Question: How long do I need to measure to get a reliable BER?

Answer:

As a rule of thumb, 100 bit errors should occur. For example, for an expected BER of 10^{-7} , 10^9 bits should be processed.

Question: Why do the EVM results for my FSK-modulated signal look wrong?

Answer:

For an FSK-modulated signal, the signal processing differs to an PSK/QAM/MSK-modulated signal. The estimation model does not minimize the EVM but the error of the instantaneous frequency (see [Chapter 4.5.2.1, "Error model"](#), on page 158). Therefore, the measurement value that corresponds to the EVM value for FSK is the "Frequency Error (Absolute/Relative)". (Source type: "Modulation Error"; Result type: "Frequency Error (Absolute/Relative)")

Question: How can I get the demodulated symbols of all my GSM bursts in the capture buffer in remote control?

Answer:

Use the following remote commands:


```
:SENSe1:DDEMod:PRESet 'GSM_NB'
```

Load the GSM standard.

```
:SENSe1:DDEMod:RLENgth 10000 SYM
```

Enlarge the capture buffer length such that all the bursts you want to demodulate can be seen within the capture buffer.

```
:INITiate1:CONTinuous OFF
```

Go to single sweep mode.

```
:SENSe1:SWEep:COUNT 0
```

Set the "Statistic Count" to "Auto" mode.

```
:INITiate1:IMMediate
```

Do single sweep.

```
:SENSe1:SWEep:COUNT:CURRent?
```

Query the number of demodulated bursts within the capture buffer.

```
For n = 1:NumberOfBursts
    :SENSe1:DDEMod:SEARch:MBURst:CALC n
    :TRACe4? TRACe1 'Query the result symbols in window D
End
```

Step through all bursts and query the demodulated symbols.

Question: Why is not the FSK Deviation Error in R&S FSW-K70 identical to the FSK DEV ERROR in R&S FSQ-K70?

Solution:

The FSK deviation error in the R&S FSW-K70 is calculated as the difference between the measured frequency deviation and the reference frequency deviation as entered by the user (see ["FSK Ref Deviation \(FSK only\)"](#) on page 189). What is referred to as the "FSK DEV ERROR" in the R&S FSQ-K70, is calculated differently (see the R&S FSQ-K70 Software Manual) and is comparable to the "Freq Err RMS" in the R&S FSW-K70. However, while the "FSK DEV ERROR" in the R&S FSQ-K70 is given in Hz, the "Freq Err RMS" in the R&S FSW-K70 is given in percent, i.e. relative to the "FSK Meas Deviation".

Problem: The EVM trace looks okay, but the EVM in the Result Summary is significantly different

Solution:

- Make sure that the position of the "Evaluation Lines" is reasonable. The "Result Summary" only evaluates sample instants that are within the evaluation lines. Hence, in the case the "Result Range" covers the burst ramps, it is important to adjust the "Evaluation Range" appropriately.

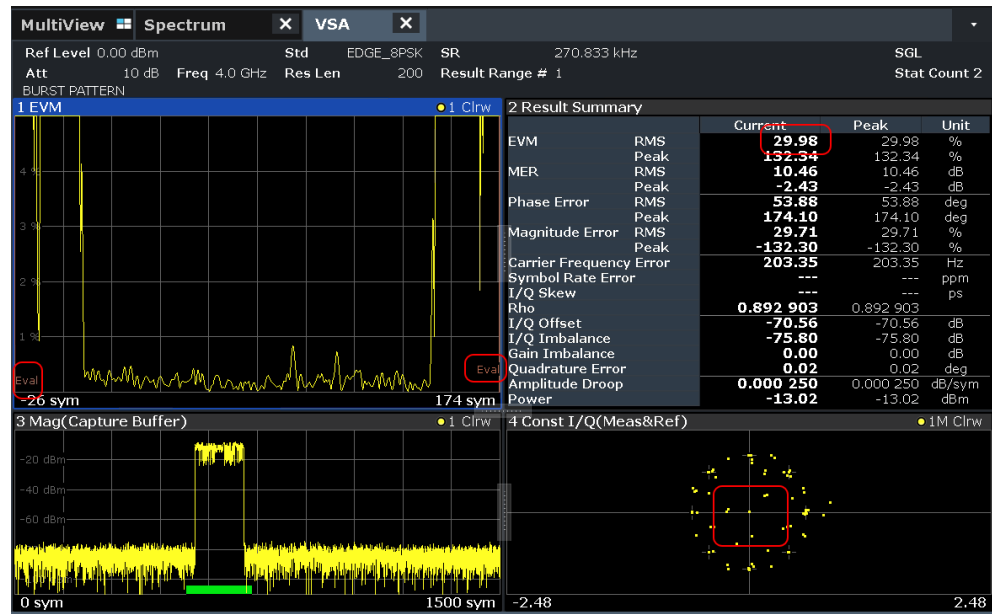


Figure 10-10: Problem: EVM in Result Summary does not correspond with trace display


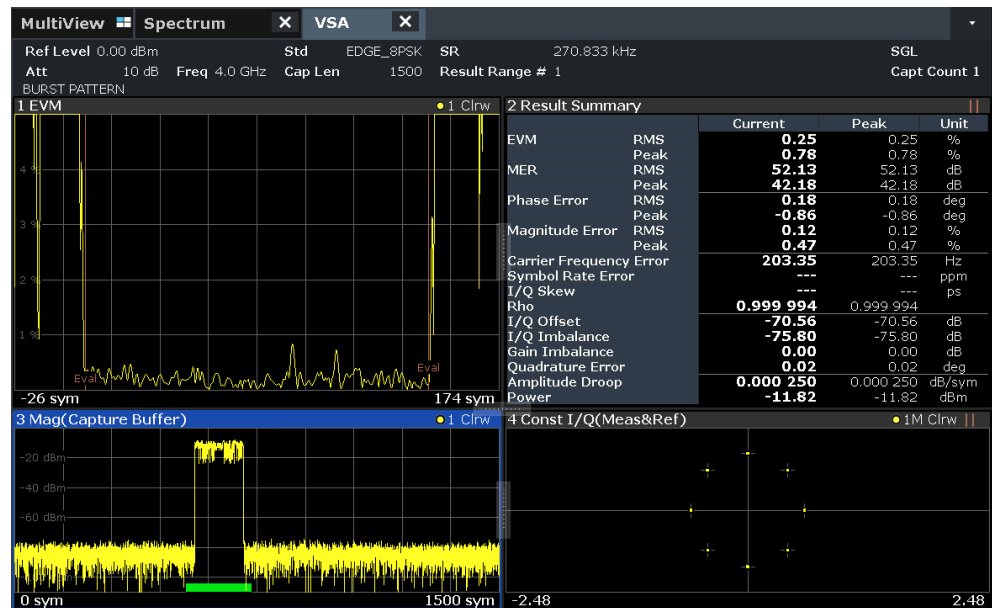


Figure 10-11: Solution: Result Summary with correct evaluation range setting

- Make sure that the same samples are evaluated. By default, the EVM trace displays all sample instants, e.g. if the sample rate is 4 * symbol rate, the EVM trace shows 4 samples per symbol. The "Result Summary" does not automatically evaluate all sample instants. For example, for a PSK modulation, by default only symbol instants contribute to the EVM result.

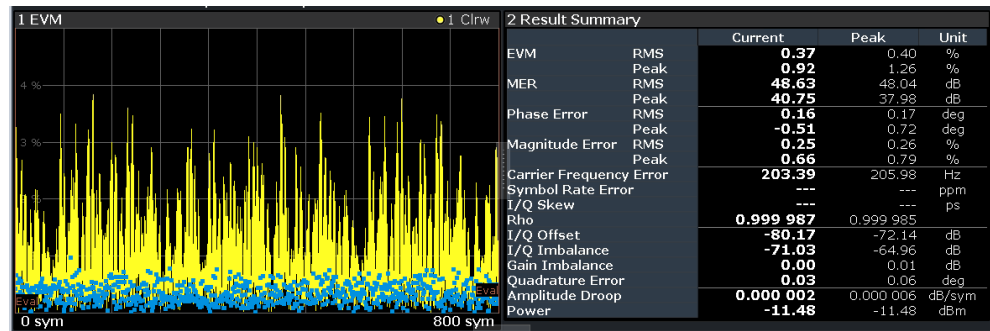

Question: Why cannot I select the capture oversampling value as the number of display points per symbol for my EVM trace?

For very large numbers of capture points (≥ 64), a lower number of display points per symbol must be used to avoid prolonged display times and extremely large amounts of trace data.

10.3.3 Synchronization and demodulation problems

Question: Why does the pattern search fail for my IRIG-106 conform signal?..... 347

Problem: The MSK/FSK signal demodulates on the R&S FSQ-K70, but not on the R&S FSW-K70 or: Why do I have to choose different transmit filters in the R&S FSQ-K70 and the R&S FSW-K70?..... 347

Question: How can I demodulate an FSK modulated signal using the "Manchester" code?..... 348

Problem: Synchronization seems to fail for all zero/all one/ 0 1 0 1 0 1... bit sequence..... 348

Problem: Synchronization fails despite correct settings..... 348

Question: Why does the pattern search fail for my IRIG-106 conform signal?

The predefined standard file for shaped offset QPSK (SOQPSK) was implemented according to the IRIG-106 standard, however without the differential precoding. Thus, the bit values of the symbols are not decoded according to the standard, and in particular, a specified pattern is possibly not detected.

Problem: The MSK/FSK signal demodulates on the R&S FSQ-K70, but not on the R&S FSW-K70 or: Why do I have to choose different transmit filters in the R&S FSQ-K70 and the R&S FSW-K70?

When generating an MSK/FSK reference signal, the R&S FSQ-K70 automatically replaces the Dirac pulses generated by the frequency mapper with square pulses with the length of one symbol. In the R&S FSW-K70, however, this "replacement" is part of the transmit filter routine. Thus, the R&S FSQ and the R&S FSW require different transmit filters for measuring the same FSK/MSK signal.

Example:

- If your transmit filter for the R&S FSQ-K70 was "NONE", you need to choose "Rectangular" as the transmit filter type in the R&S FSW.
- If your transmit filter for the R&S FSQ-K70 was "GAUSS", you need to choose "GMSK" as the transmit filter type in the R&S FSW.

Question: How can I demodulate an FSK modulated signal using the "Manchester" code?

The R&S FSW VSA application does not provide a specific configuration setting to support this code. However, if you configure FSK modulation and use twice the usual symbol rate, the signal is demodulated correctly. Remember to consider the double symbol rate when evaluating the results, however! Only the [Symbol table](#) and the bit-stream results returned by the `TRACe<n>[:DATA]` command are not interpreted correctly and must be demodulated manually (for example using a script).

Problem: Synchronization seems to fail for all zero/all one/ 0 1 0 1 0 1... bit sequence

See ["Problem: Synchronization fails despite correct settings"](#) on page 348.

Problem: Synchronization fails despite correct settings

A prerequisite for correct synchronization is a random data sequence of an adequate size.

Solution:

Make sure that the input signal contains an adequate number of uncorrelated (random!) bits. (Not 0 0 0 0 0, 1 1 1 1 1, or 01 01 01 01 01, for example.)

For QAM modulation, the result length (the data on which synchronization is based) should correspond to at least 8 times the modulation order (see ["Result Length"](#) on page 254).

For more solutions, see [Chapter 10.1, "Flow chart for troubleshooting"](#), on page 327.

10.3.4 Other measurement issues

[Problem: Measurement using PRBS does not work](#)..... 348

[Question: What is the advantage of transmitting bits that are generated with a PRBS23 over transmitting bits that are generated with a PRBS9?](#)..... 348

Problem: Measurement using PRBS does not work**Possible Solution:**

Check the settings on the signal generator:

- "Custom Digital Modulation" > "Data Source": "PRBS"
- "Custom Digital Modulation" > "Data Source" > "PRBS Type"
- "Custom Digital Modulation" > "General" > "Coding": Off

Check the settings in the R&S FSW VSA application:

- "Signal Description" > "Known Data" > "Source": "PRBS"
- "Signal Description" > "Known Data" > "PRBS Type": same as on signal generator
- "Signal Description" > "Known Data" > "Generator Polynomial": "Auto"
- "Signal Description" > "Known Data" > "Negate Feedback Path": "Auto"
- "Signal Description" > "Modulation" > "Mapping" > "SMx" (to use the same mapping in the R&S FSW VSA application as the Rohde & Schwarz signal generator)

Question: What is the advantage of transmitting bits that are generated with a PRBS23 over transmitting bits that are generated with a PRBS9?

Answer:

For a reliable test, all constellation symbols should be occupied. This is not the case for a PRBS9 and a high-order QAM, for example.



Figure 10-12: Constellation diagram for 1024QAM modulation and PRBS9

For low-order PRBS, the spectrum of the signal is not flat.

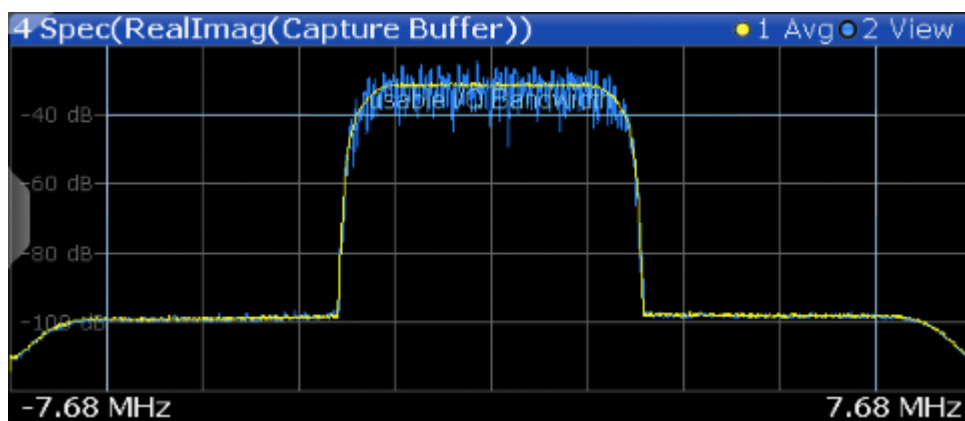


Figure 10-13: Spectrum for PRBS 9 (blue) and PRBS23 (yellow)

11 Remote commands for VSA

The following commands are required to perform measurements in VSA in a remote environment.

It is assumed that the FSW has already been set up for remote control in a network as described in the FSW User Manual.



Note that basic tasks that are also performed in the base unit in the same way are not described here. For a description of such tasks, see the FSW User Manual.

In particular, this includes:

- Managing Settings and Results, i.e. storing and loading settings and result data
- Basic instrument configuration, e.g. checking the system configuration, customizing the screen layout, or configuring networks and remote operation
- Using the common status registers



SCPI Recorder - automating tasks with remote command scripts

The R&S FSW VSA application also supports the SCPI Recorder functionality.

Using the SCPI Recorder functions, you can create a SCPI script directly on the instrument and then export the script for use on the controller. You can also edit or write a script manually, using a suitable editor on the controller. For manual creation, the instrument supports you by showing the corresponding command syntax for the current setting value.

For details see the "Network and Remote Operation" chapter in the FSW User Manual.

Commands for emulated R&S FSE instruments

The FSW supports a subset of the GPIB commands of R&S FSE instruments for vector signal analysis (VSA).

See the FSW User Manual, "Emulating Other Instruments' Commands".

The following tasks specific to VSA are described here:

| | |
|--|-----|
| • Introduction | 351 |
| • Common suffixes | 355 |
| • Activating vector signal analysis | 356 |
| • Digital standards | 360 |
| • Configuring VSA | 362 |
| • Performing a measurement | 508 |
| • Analysis | 513 |
| • Configuring the result display | 543 |
| • Retrieving results | 559 |
| • Importing and exporting I/Q data and results | 589 |
| • Status reporting system | 591 |
| • Deprecated commands | 602 |
| • Programming examples | 603 |

11.1 Introduction

Commands are program messages that a controller (e.g. a PC) sends to the instrument or software. They operate its functions ('setting commands' or 'events') and request information ('query commands'). Some commands can only be used in one way, others work in two ways (setting and query). If not indicated otherwise, the commands can be used for settings and queries.

The syntax of a SCPI command consists of a header and, usually, one or more parameters. To use a command as a query, you have to append a question mark after the last header element, even if the command contains a parameter.

A header contains one or more keywords, separated by a colon. Header and parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). If there is more than one parameter for a command, they are separated by a comma from one another.

Only the most important characteristics that you need to know when working with SCPI commands are described here. For a more complete description, refer to the user manual of the FSW.



Remote command examples

Note that some remote command examples mentioned in this general introduction are possibly not supported by this particular application.

11.1.1 Conventions used in descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**
If not specified otherwise, commands can be used both for setting and for querying parameters.
If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- **Parameter usage**
If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.
Parameters required only for setting are indicated as **Setting parameters**.
Parameters required only to refine a query are indicated as **Query parameters**.
Parameters that are only returned as the result of a query are indicated as **Return values**.
- **Conformity**
Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the FSW follow the SCPI syntax rules.
- **Asynchronous commands**
A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.
- **Reset values (*RST)**

Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as *RST values, if available.

- **Default unit**
The default unit is used for numeric values if no other unit is provided with the parameter.
- **Manual operation**
If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

11.1.2 Long and short form

The keywords have a long and a short form. You can use either the long or the short form, but no other abbreviations of the keywords.

The short form is emphasized in uppercase letters. Note however, that this emphasis only serves the purpose to distinguish the short from the long form in the manual. For the instrument, the case does not matter.

Example:

SENSe:FREQUency:CENTer is the same as SENS:FREQ:CENT.

11.1.3 Numeric suffixes

Some keywords have a numeric suffix if the command can be applied to multiple instances of an object. In that case, the suffix selects a particular instance (e.g. a measurement window).

Numeric suffixes are indicated by angular brackets (<n>) next to the keyword.

If you do not quote a suffix for keywords that support one, a 1 is assumed.

Example:

DISPlay[:WINDow<1...4>]:ZOOM:STATe enables the zoom in a particular measurement window, selected by the suffix at WINDow.

DISPlay:WINDow4:ZOOM:STATe ON refers to window 4.

11.1.4 Optional keywords

Some keywords are optional and are only part of the syntax because of SCPI compliance. You can include them in the header or not.



If an optional keyword has a numeric suffix and you need to use the suffix, you have to include the optional keyword. Otherwise, the suffix of the missing keyword is assumed to be the value 1.

Optional keywords are emphasized with square brackets.

Example:

Without a numeric suffix in the optional keyword:

```
[SENSe:]FREQuency:CENTer is the same as FREQuency:CENTer
```

With a numeric suffix in the optional keyword:

```
DISPlay[:WINDow<1...4>]:ZOOM:STATe
```

DISPlay:ZOOM:STATe ON enables the zoom in window 1 (no suffix).

DISPlay:WINDow4:ZOOM:STATe ON enables the zoom in window 4.

11.1.5 Alternative keywords

A vertical stroke indicates alternatives for a specific keyword. You can use both keywords to the same effect.

Example:

```
[SENSe:]BANDwidth|BWIDth[:RESolution]
```

In the short form without optional keywords, BAND 1MHZ would have the same effect as BWID 1MHZ.

11.1.6 SCPI parameters

Many commands feature one or more parameters.

If a command supports more than one parameter, they are separated by a comma.

Example:

```
LAYout:ADD:WINDow Spectrum,LEFT,MTABLE
```

Parameters can have different forms of values.

- [Numeric values](#)..... 353
- [Boolean](#)..... 354
- [Character data](#)..... 355
- [Character strings](#)..... 355
- [Block data](#)..... 355

11.1.6.1 Numeric values

Numeric values can be entered in any form, i.e. with sign, decimal point or exponent. For physical quantities, you can also add the unit. If the unit is missing, the command uses the basic unit.

Example:

With unit: SENSe:FREQuency:CENTer 1GHZ

Without unit: SENSe:FREQuency:CENTer 1E9 would also set a frequency of 1 GHz.

Values exceeding the resolution of the instrument are rounded up or down.

If the number you have entered is not supported (e.g. for discrete steps), the command returns an error.

Instead of a number, you can also set numeric values with a text parameter in special cases.

- **MIN/MAX**
Defines the minimum or maximum numeric value that is supported.
- **DEF**
Defines the default value.
- **UP/DOWN**
Increases or decreases the numeric value by one step. The step size depends on the setting. Sometimes, you can customize the step size with a corresponding command.

Querying numeric values

When you query numeric values, the system returns a number. For physical quantities, it applies the basic unit (e.g. Hz for frequencies). The number of digits after the decimal point depends on the type of numeric value.

Example:

Setting: `SENSe:FREQuency:CENTer 1GHZ`

Query: `SENSe:FREQuency:CENTer?` would return `1E9`

Sometimes, numeric values are returned as text.

- **INF/NINF**
Infinity or negative infinity. Represents the numeric values `9.9E37` or `-9.9E37`.
- **NAN**
Not a number. Represents the numeric value `9.91E37`. NAN is returned if errors occur.

11.1.6.2 Boolean

Boolean parameters represent two states. The "on" state (logically true) is represented by "ON" or the numeric value 1. The "off" state (logically untrue) is represented by "OFF" or the numeric value 0.

Querying Boolean parameters

When you query Boolean parameters, the system returns either the value 1 ("ON") or the value 0 ("OFF").

Example:

Setting: `DISPlay:WINDow:ZOOM:STATe ON`

Query: `DISPlay:WINDow:ZOOM:STATe?` would return `1`

11.1.6.3 Character data

Character data follows the syntactic rules of keywords. You can enter text using a short or a long form. For more information, see [Chapter 11.1.2, "Long and short form"](#), on page 352.

Querying text parameters

When you query text parameters, the system returns its short form.

Example:

Setting: `SENSe:BANDwidth:RESolution:TYPE NORMAl`

Query: `SENSe:BANDwidth:RESolution:TYPE?` would return `NORM`

11.1.6.4 Character strings

Strings are alphanumeric characters. They have to be in straight quotation marks. You can use a single quotation mark (') or a double quotation mark (").

Example:

`INSTRument:DELeTe 'Spectrum'`

11.1.6.5 Block data

Block data is a format which is suitable for the transmission of large amounts of data.

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. The data bytes follow. During the transmission of these data bytes, all end or other control signs are ignored until all bytes are transmitted. #0 specifies a data block of indefinite length. The use of the indefinite format requires an `NL^END` message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

11.2 Common suffixes

In the R&S FSW VSA application, the following common suffixes are used in remote commands:

Table 11-1: Common suffixes used in remote commands in the R&S FSW VSA application

| Suffix | Value range | Description |
|--------|-------------|--|
| <m> | 1 to 4 | Marker |
| <n> | 1 to 16 | Window (in the currently selected channel) |

| Suffix | Value range | Description |
|--------|-------------|-------------|
| <t> | 1 to 6 | Trace |
| | 1 to 8 | Limit line |

11.3 Activating vector signal analysis

Vector signal analysis requires a special application on the FSW. A measurement is started immediately with the default settings.

| | |
|--|-----|
| INSTrument:CREate:DUPLicate | 356 |
| INSTrument:CREate[:NEW] | 356 |
| INSTrument:CREate:REPLace | 357 |
| INSTrument:DELeTe | 357 |
| INSTrument:LIST? | 357 |
| INSTrument:REName | 359 |
| INSTrument[:SELeCt] | 359 |
| SYSTem:PRESet:CHANnel[:EXEC] | 360 |

INSTrument:CREate:DUPLicate

Duplicates the currently selected channel, i.e. creates a new channel of the same type and with the identical measurement settings. The name of the new channel is the same as the copied channel, extended by a consecutive number (e.g. "IQAnalyzer" -> "IQAnalyzer 2").

The channel to be duplicated must be selected first using the `INST:SEL` command.

Is not available if the MSRA/MSRT primary channel is selected.

Example:

```
INST:SEL 'IQAnalyzer'
```

```
INST:CRE:DUPL
```

Duplicates the channel named 'IQAnalyzer' and creates a new channel named 'IQAnalyzer2'.

Usage: Event

INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>

Adds a measurement channel. You can configure up to 10 measurement channels at the same time (depending on available memory).

Parameters:

<ChannelType> Channel type of the new channel.
For a list of available channel types, see [INSTrument:LIST?](#) on page 357.

<ChannelName> String containing the name of the channel.
Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.

Example: `INST:CRE SAN, 'Spectrum 2'`
Adds a spectrum display named "Spectrum 2".

INSTrument:CREate:REPLace <ChannelName1>, <ChannelType>, <ChannelName2>

Replaces a channel with another one.

Setting parameters:

<ChannelName1> String containing the name of the channel you want to replace.

<ChannelType> Channel type of the new channel.
For a list of available channel types, see [INSTrument:LIST?](#) on page 357.

<ChannelName2> String containing the name of the new channel.
Note: If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see [INSTrument:LIST?](#) on page 357).
Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "*", "?".

Example: `INST:CRE:REPL 'IQAnalyzer2', IQ, 'IQAnalyzer'`
Replaces the channel named "IQAnalyzer2" by a new channel of type "IQ Analyzer" named "IQAnalyzer".

Usage: Setting only

INSTrument:DELeTe <ChannelName>

Deletes a channel.

If you delete the last channel, the default "Spectrum" channel is activated.

Setting parameters:

<ChannelName> String containing the name of the channel you want to delete.
A channel must exist to delete it.

Example: `INST:DEL 'IQAnalyzer4'`
Deletes the channel with the name 'IQAnalyzer4'.

Usage: Setting only

INSTrument:LIST?

Queries all active channels. The query is useful to obtain the names of the existing channels, which are required to replace or delete the channels.

Return values:

<ChannelType>
<ChannelName>

For each channel, the command returns the channel type and channel name (see tables below).

Tip: to change the channel name, use the `INST:REName` command.

Example:

`INST:LIST?`

Result for 3 channels:

```
'ADEM', 'Analog Demod', 'IQ', 'IQ Analyzer', 'IQ', 'IQ Analyzer2'
```

Usage:

Query only

Table 11-2: Available channel types and default channel names in Signal and Spectrum Analyzer mode

| Application | <ChannelType> parameter | Default Channel name*) |
|--|-------------------------|------------------------|
| Spectrum | SANALYZER | Spectrum |
| 1xEV-DO BTS (FSW-K84) | BDO | 1xEV-DO BTS |
| 1xEV-DO MS (FSW-K85) | MDO | 1xEV-DO MS |
| 3GPP FDD BTS (FSW-K72) | BWCD | 3G FDD BTS |
| 3GPP FDD UE (FSW-K73) | MWCD | 3G FDD UE |
| 802.11ad (FSW-K95) | WIGIG | 802.11ad |
| 802.11ay (FSW-K97) | EDMG | 802.11ay EDMG |
| Amplifier Measurements (FSW-K18) | AMPLifier | Amplifier |
| AM/FM/PM Modulation Analysis (FSW-K7) | ADEM | Analog Demod |
| Avionics (FSW-K15) | AVIonics | Avionics |
| Bluetooth (FSW-K8) | BTO | Bluetooth |
| cdma2000 BTS (FSW-K82) | BC2K | CDMA2000 BTS |
| cdma2000 MS (FSW-K83) | MC2K | CDMA2000 MS |
| DOCSIS 3.1 (FSW-K192/193) | DOCSis | DOCSIS 3.1 |
| Fast Spur Search (FSW-K50) | SPUR | Spurious |
| GSM (FSW-K10) | GSM | GSM |
| HRP UWB (FSW-K149) | UWB | HRP UWB |
| I/Q Analyzer | IQ | IQ Analyzer |
| LTE (FSW-K10x) | LTE | LTE |
| Multi-Carrier "Group Delay" (FSW-K17) | MCGD | MC "Group Delay" |
| NB-IoT (FSW-K106) | NIOT | NB-IoT |
| Noise (FSW-K30) | NOISE | Noise |
| *) If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel. | | |

| Application | <ChannelType> parameter | Default Channel name*) |
|--|-------------------------|------------------------|
| 5G NR (FSW-K144) | NR5G | 5G NR |
| OFDM VSA (FSW-K96) | OFDMVSA | OFDM VSA |
| OneWeb (FSW-K201) | OWEB | OneWeb |
| Phase Noise (FSW-K40) | PNOISE | Phase Noise |
| Pulse (FSW-K6) | PULSE | Pulse |
| "Real-Time Spectrum" | RTIM | "Real-Time Spectrum" |
| TD-SCDMA BTS (FSW-K76) | BTDS | TD-SCDMA BTS |
| TD-SCDMA UE (FSW-K77) | MTDS | TD-SCDMA UE |
| Transient Analysis (FSW-K60) | TA | Transient Analysis |
| Verizon 5GTF Measurement Application (V5GTF, FSW-K118) | V5GT | V5GT |
| VSA (FSW-K70) | DDEM | VSA |
| WLAN (FSW-K91) | WLAN | WLAN |

*) If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.

INSTrument:REName <ChannelName1>, <ChannelName2>

Renames a channel.

Setting parameters:

<ChannelName1> String containing the name of the channel you want to rename.

<ChannelName2> String containing the new channel name.
 Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.
 Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "*", "?".

Example: `INST:REN 'IQAnalyzer2', 'IQAnalyzer3'`
 Renames the channel with the name 'IQAnalyzer2' to 'IQAnalyzer3'.

Usage: Setting only

INSTrument[:SElect] <ChannelType>

Selects the application (channel type) for the current channel.

See also `INSTrument:CREate[:NEW]` on page 356.

For a list of available channel types see `INSTrument:LIST?` on page 357.

Parameters:

<ChannelType> **VSA**
 VSA, R&S FSW-K70

SYSTem:PRESet:CHANnel[:EXEC]

Restores the default instrument settings in the current channel.

Use `INST:SEL` to select the channel.

Example:

```
INST:SEL 'Spectrum2'
```

Selects the channel for "Spectrum2".

```
SYST:PRESet:CHAN:EXEC
```

Restores the factory default settings to the "Spectrum2" channel.

Usage: Event

Manual operation: See ["Preset Channel"](#) on page 183

11.4 Digital standards

Various predefined settings files for common digital standards are provided for use with the VSA application. In addition, you can create your own settings files for user-specific measurements.

Manual configuration of digital standards is described in [Chapter 5.2, "Configuration according to digital standards"](#), on page 184.

| | |
|--|-----|
| [SENSe:]DDEMod:FACTory[:VALue] | 360 |
| [SENSe:]DDEMod:PRESet[:STANdard] | 361 |
| [SENSe:]DDEMod:STANdard:COMMeNt | 361 |
| [SENSe:]DDEMod:STANdard:DELeTe | 361 |
| [SENSe:]DDEMod:STANdard:PRESet[:VALue] | 361 |
| [SENSe:]DDEMod:STANdard:SAVE | 362 |

[SENSe:]DDEMod:FACTory[:VALue] <Factory>

Restores the factory settings of standards or patterns for the VSA application.

Setting parameters:

<Factory> ALL | STANdard | PATTeRn

ALL

Restores both standards and patterns.

```
*RST:            ALL
```

Example:

```
:SENS:DDEM:FACT GST
```

Usage: Setting only

Manual operation: See ["Restore Standard Files"](#) on page 185
 See ["Restore Pattern Files"](#) on page 269

[SENSe:]DDEMod:PRESet[:STANdard] <Standard>

Selects an automatic setting of all modulation parameters according to a standardized transmission method or a user-defined transmission method. The standardized transmission methods are available in the instrument as predefined standards.

Parameters:

<Standard> Specifies the file name that contains the transmission method without the extension. For user-defined standards, the file path must be included. Default standards predefined by Rohde&Schwarz do not require a path definition. A list of predefined standards (including short forms) is provided in the annex (see [Chapter B, "Predefined standards and settings"](#), on page 613).

Example:

```
DDEM:PRES 'TETRA_NDDOWN'
```

Switches the predefined digital standard "TETRA_DiscontinuousDownlink" on.

```
DDEM:PRES 'C:\R_S\Instr\usr\standards\USER_GSM'
```

Switches the user-defined digital standard "USER_GSM" on.

Example:

See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See ["Load Standard"](#) on page 185

[SENSe:]DDEMod:STANdard:COMMeNt <Comment>

Enters the comment for a new standard. The comment is stored with the standard and is only displayed in the selection menu (manual operation). In remote control, the string is deleted after the standard has been stored, allowing a new comment to be entered for the next standard. In this case a blank string is returned when for the query.

Parameters:

<Comment>

Manual operation: See ["Comment"](#) on page 185

[SENSe:]DDEMod:STANdard:DELeTe <FileName>

Deletes a specified digital standard file in the vector signal analysis.

Setting parameters:

<FileName> File name including the path for the digital standard file

Example:

```
SENS:DDEM:STAN:DEL 'C:\path\standardname'
```

Usage:

Setting only

Manual operation: See ["Delete Standard"](#) on page 185

[SENSe:]DDEMod:STANdard:PRESet[:VALue]

Restores the default settings of the currently selected standard.

Usage: Event

[SENSe:]DDEMod:STANdard:SAVE <FileName>

Stores the current settings of the vector signal analysis as a new user-defined digital standard. If the name of the digital standard is already in use, an error message is output and a new name has to be selected. It is recommended that you define a comment before storing the standard.

Setting parameters:

<FileName> The path and file name to which the settings are stored.

Example:

```
DDEM:STAN:COMM 'GSM_AccessBurst with Pattern'
Defines a comment for the settings.
DDEM:STAN:SAVE 'C:
\R_S\Instr\usr\standards\USER_GSM'
Stores the settings in the user-defined digital standard
"USER_GSM".
```

Example:

See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Usage: Setting only

Manual operation: See ["Save Standard"](#) on page 185

11.5 Configuring VSA

| | |
|---|-----|
| • Signal description | 362 |
| • Input, output and frontend settings | 390 |
| • Signal capture | 470 |
| • Triggering measurements | 474 |
| • Configuring sweeps | 481 |
| • Configuring bursts and patterns | 482 |
| • Defining the result range | 490 |
| • Demodulation settings | 492 |
| • Measurement filter settings | 502 |
| • Defining the evaluation range | 504 |
| • Adjusting settings automatically | 505 |

11.5.1 Signal description

The signal description provides information on the expected input signal, which optimizes pattern and burst detection and the calculation of the ideal reference signal.

Manual configuration of the signal description is described in [Chapter 5.3, "Signal description"](#), on page 186.

| | |
|-------------------------|-----|
| • Modulation..... | 363 |
| • Signal structure..... | 371 |
| • Frame structure..... | 374 |
| • Known data..... | 386 |

11.5.1.1 Modulation

The modulation settings vary depending on the selected modulation type; in particular, FSK modulation provides some additional settings.

| | |
|--|-----|
| CALCulate<n>:FSK:DEVIation:REFerence:RELative..... | 363 |
| CALCulate<n>:FSK:DEVIation:REFerence[:VALue]..... | 364 |
| [SENSe:]DDEMod:APSK:NSTate..... | 364 |
| [SENSe:]DDEMod:ASK:NSTate..... | 364 |
| [SENSe:]DDEMod:FILTer:ALPHa..... | 365 |
| [SENSe:]DDEMod:FILTer[:STATe]..... | 365 |
| [SENSe:]DDEMod:FORMat..... | 365 |
| [SENSe:]DDEMod:FSK:NSTate..... | 366 |
| [SENSe:]DDEMod:MAPPing:CATalog?..... | 366 |
| [SENSe:]DDEMod:MAPPing[:VALue]..... | 367 |
| [SENSe:]DDEMod:MSK:FORMat..... | 367 |
| [SENSe:]DDEMod:PSK:FORMat..... | 367 |
| [SENSe:]DDEMod:PSK:NSTate..... | 368 |
| [SENSe:]DDEMod:QAM:FORMat..... | 368 |
| [SENSe:]DDEMod:QAM:NSTate..... | 368 |
| [SENSe:]DDEMod:QPSK:FORMat..... | 369 |
| [SENSe:]DDEMod:SRATe..... | 370 |
| [SENSe:]DDEMod:TFILTer:ALPHa..... | 370 |
| [SENSe:]DDEMod:TFILTer:NAME..... | 370 |
| [SENSe:]DDEMod:TFILTer[:STATe]..... | 371 |
| [SENSe:]DDEMod:TFILTer:USER..... | 371 |
| [SENSe:]DDEMod:USER:NAME..... | 371 |

CALCulate<n>:FSK:DEVIation:REFerence:RELative <FSKRefDev>

Defines the deviation to the reference frequency for FSK modulation as a multiple of the symbol rate.

Suffix:

<n> 1..n
 Window

Parameters:

<FSKRefDev> Range: 0.1 to 60
 *RST: 1
 Default unit: none

Manual operation: See "FSK Ref Deviation (FSK only)" on page 189

CALCulate<n>:FSK:DEVIation:REFerence[:VALue] <FSKRefDevAbsRes>

Defines the deviation to the reference frequency for FSK modulation as an absolute value in Hz.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<FSKRefDevAbsRes>Range: 10.0 to 256e9
 *RST: 100e9
 Default unit: HZ

Manual operation: See "[FSK Ref Deviation \(FSK only\)](#)" on page 189

[SENSe:]DDEMod:APSK:NState <APSKNstate>

Defines the specific demodulation mode for APSK.

Parameters:

<APSKNstate> 16 | 32
16
 16APSK
32
 32APSK
 *RST: 16

Example:

DDEM:FORM APSK
 Switch APSK demodulation on.
 DDEMd:APSK:NST 32
 Switch 32APSK demodulation on.

Manual operation: See "[Modulation Order](#)" on page 188

[SENSe:]DDEMod:ASK:NState <ASKNstate>

This command defines the specific demodulation mode for ASK.

Parameters:

<ASKNstate> 2 | 4
2
 OOK
4
 4ASK
 *RST: 2

Example:

DDEM:FORM ASK
 Switch ASK demodulation on.
 DDEMd:ASK:NST 2
 Switch OOK demodulation on.

Manual operation: See "Modulation Order" on page 188

[SENSe:]DDEMod:FILTer:ALPHa <MeasFilterAlphaBT>

Determines the filter characteristic (ALPHA/BT).

Parameters:

<MeasFilterAlphaBT> Range: 0.03 to 1.0
 Increment: 0.01
 *RST: 0.22

Example: DDEM:FILT:ALPH 0.5
 Sets ALPHA/BT to 0.5

[SENSe:]DDEMod:FILTer[:STATe] <State>

Defines whether the input signal that is evaluated is filtered by the measurement filter. This command has no effect on the transmit filter.

Parameters:

<State> **ON | 1**
 [SENSe:]DDEMod:MFILTer:AUTO is activated.
OFF | 0
 The input signal is not filtered. [SENSe:]DDEMod:MFILTer:AUTO is deactivated.

[SENSe:]DDEMod:FORMat <Group>

Selects the digital demodulation mode.

Parameters:

<Group> MSK | PSK | QAM | QPSK | FSK | ASK | APSK | UQAM
QPSK
 Quad Phase Shift Key
PSK
 Phase Shift Key
MSK
 Minimum Shift Key
QAM
 Quadrature Amplitude Modulation
FSK
 Frequency Shift Key
ASK
 Amplitude Shift Keying
APSK
 Amplitude Phase Shift Keying

UQAM

User-defined modulation (loaded from file, see [\[SENSe:\]DDEMod:USER:NAME](#) on page 371)

- Example:** SENS:DDEM:FORM QAM
- Example:** See [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.
- Example:** See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.
- Manual operation:** See ["Modulation Type"](#) on page 187
See ["Load User Modulation"](#) on page 188

[SENSe:]DDEMod:FSK:NState <FSKNstate>

Defines the demodulation of the FSK modulation scheme.

Parameters:

<FSKNstate> 2 | 4 | 8 | 16
2
 2FSK
4
 4FSK
8
 8FSK
16
 16FSK
 *RST: 2

Manual operation: See ["Modulation Order"](#) on page 188

[SENSe:]DDEMod:MAPPING:CATalog?

Queries the names of all mappings that are available for the current modulation type and order. A mapping describes the assignment of constellation points to symbols.

Return values:

<Mappings> <list>
 A comma-separated list of strings, with one string for each mapping name.

Example: :SENSe:DDEMod:MAPPING:CATalog?
 Result:
 'CDMA2K_FWD', 'DVB_S2', 'GRAY', 'NATURAL', 'WCDMA'

Example: See [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.

Usage: Query only

Manual operation: See ["Modulation Mapping"](#) on page 189

[SENSe:]DDEMod:MAPPING[:VALue] <Mapping>

Selects the mapping for digital demodulation. The mapping describes the assignment of constellation points to symbols.

When using PRBS generators, select the `_SMx` mapping, which corresponds to the mapping used by R&S SMx signal generators.

Parameters:

<Mapping> To obtain a list of available symbol mappings for the current modulation type use the `[SENSe:]DDEMod:MAPPING:CATalog??` query.

Example: `SENS:DDEM:MAPP 'GSM'`
Sets mapping to GSM.

Example: See [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Modulation Mapping"](#) on page 189

[SENSe:]DDEMod:MSK:FORMat <MSKformat>

Defines the specific demodulation order for MSK.

Parameters:

<MSKformat> TYPE1 | TYPE2 | NORMal | DIFFerential
TYPE1 | NORMal
Demodulation order MSK is used.
TYPE2 | DIFFerential
Demodulation order DMSK is used.

Manual operation: See ["Modulation Order"](#) on page 188

[SENSe:]DDEMod:PSK:FORMat <PSKformat>

Together with `DDEMod:PSK:NST`, this command defines the demodulation order for PSK (see also `[SENSe:]DDEMod:PSK:NSTate` on page 368). Depending on the demodulation format and state, the following orders are available:

| NSTATE | <PSKformat> | Order |
|--------|-------------|------------|
| 2 | NORMal | BPSK |
| 2 | NPI2 | Pi/2-BPSK |
| 2 | MNPI2 | -Pi/2-BPSK |
| 2 | DPI2 | Pi/2-DBPSK |
| 8 | NORMal | 8PSK |

| NSTATE | <PSKformat> | Order |
|--------|--------------|-------------------|
| 8 | DIFFerential | D8PSK |
| 8 | N3Pi8 | 3pi/8-8PSK (EDGE) |
| 8 | PI8D8PSK | Pi/8-D8PSK |

Parameters:

<PSKformat> NORMAl | DIFFerential | N3Pi8 | PI8D8psk | NPI2 | DPI2 | MNPi2

Manual operation: See "[Modulation Order](#)" on page 188

[SENSe:]DDEMod:PSK:NState <PSKNstate>

Together with DDEMod:PSK:FORMat, this command defines the demodulation order for PSK (see also [[SENSe:\]DDEMod:PSK:FORMat](#) on page 367).

Parameters:

<PSKNstate> 2 | 8
 *RST: 2

Manual operation: See "[Modulation Order](#)" on page 188

[SENSe:]DDEMod:QAM:FORMat <QAMformat>

Defines the specific demodulation order for QAM.

Parameters:

<QAMformat> NORMAl | DIFFerential | NPI4 | MNPi4

NORMAl
Demodulation order QAM is used.

DIFFerential
Demodulation order DQAM is used.

NPI4
Demodulation order $\pi/4$ -16QAM is used.

MNPi4
Demodulation order $-\pi/4$ -32QAM is used.

Manual operation: See "[Modulation Order](#)" on page 188

[SENSe:]DDEMod:QAM:NState <QAMNState>

Defines the demodulation order for QAM.

| <QAMNState> | Order |
|-------------|------------|
| 16 | 16QAM |
| 16 | Pi/4-16QAM |

| <QAMNState> | Order |
|-------------|------------|
| 32 | 32QAM |
| 32 | Pi/4-32QAM |
| 64 | 64QAM |
| 128 | 128QAM |
| 256 | 256QAM |
| 512 | 512QAM |
| 1024 | 1024QAM |

Parameters:

<QAMNState>

Manual operation: See "[Modulation Order](#)" on page 188**[SENSe:]DDEMod:QPSK:FORMat <QPSKformat>**

Defines the demodulation order for QPSK.

Parameters:

<QPSKformat> NORMAL | DIFFerential | NPI4 | DPI4 | OFFSet | SOFFset | N3PI4

NORMAL

Demodulation order QPSK is used.

DIFFerential

Demodulation order DQPSK is used.

NPI4Demodulation order $\pi/4$ QPSK is used.**DPI4**Demodulation order $\pi/4$ DQPSK is used.**OFFSet**

Demodulation order OQPSK is used.

N3PI4Demodulation order $3\pi/4$ QPSK is used.**SOFFset**

Shaped Offset QPSK

Example:

DDEM:FORM QPSK

Switches QPSK demodulation on.

DDEM:QPSK:FORM DPI4

Switches $\pi/4$ DQPSK demodulation order on.**Example:**See [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.**Example:**See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Modulation Order"](#) on page 188

[SENSe:]DDEMod:SRATe <SymbolRate>

Defines the symbol rate.

The minimum symbol rate is 25 Hz. The maximum symbol rate depends on the defined [Sample Rate](#) (see [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75).

Parameters:

<SymbolRate> Range: 25 to 250e6
 Default unit: HZ

Example: See [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Symbol Rate"](#) on page 189

[SENSe:]DDEMod:TFILter:ALPHa <Alpha>

Determines the TX filter characteristic (ALPHA/BT).

Parameters:

<Alpha> Range: 0.03 to 1.0
 Increment: 0.01
 *RST: 0.22

Example: See [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.

Manual operation: See ["Alpha/BT"](#) on page 190
 See ["Alpha/BT"](#) on page 264

[SENSe:]DDEMod:TFILter:NAME <Name>

Selects a transmit filter and automatically switches it on.

For more information on transmit filters, refer to [Chapter C.1, "Transmit filters"](#), on page 622.

Parameters:

<Name> string
 Name of the Transmit filter; an overview of available transmit filters is provided in [Chapter C.1, "Transmit filters"](#), on page 622.

Example: See [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.

Manual operation: See ["Transmit Filter Type"](#) on page 189
 See ["Load User Filter"](#) on page 190

[SENSe:]DDEMod:TFILter[:STATe] <State>

Use this command to switch the transmit filter off. To switch a transmit filter on, use the [\[SENSe:\]DDEMod:TFILter:NAME](#) command.

Parameters:

| | |
|---------|---|
| <State> | OFF 0 Switches the transmit filter off. |
| | ON 1 Switches the transmit filter specified by [SENSe:]DDEMod:TFILter:NAME on. However, this command is not necessary, as the [SENSe:]DDEMod:TFILter:NAME command automatically switches the filter on. |
| *RST: | ON |

Manual operation: See ["Transmit Filter Type"](#) on page 189

[SENSe:]DDEMod:TFILter:USER <FilterName>

Selects a user-defined transmit filter file.

Parameters:

| | |
|--------------|---------------------------------------|
| <FilterName> | The name of the transmit filter file. |
|--------------|---------------------------------------|

Manual operation: See ["Transmit Filter Type"](#) on page 189
See ["Load User Filter"](#) on page 190

[SENSe:]DDEMod:USER:NAME <FileName>

Selects the file that contains the user-defined modulation to be loaded.

Parameters:

| | |
|------------|--|
| <FileName> | Path and file name of the *.vam file The default storage location for user-defined modulations is C:\R_S\INSTR\USER\vsa\Constellation. |
|------------|--|

Example:

```
SENS:DDEM:FORM UQAM
Define the use of a user-defined modulation
SENS:DDEM:USER:NAME 'D:\MyModulation.vam'
Select the file name to be loaded
```

Manual operation: See ["Load User Modulation"](#) on page 188

11.5.1.2 Signal structure

The signal structure commands describe the expected input signal and determine which settings are available for configuration. You can define a pattern to which the instrument can be synchronized, thus adapting the result range.

| | |
|--|-----|
| [SENSe:]DDEMod:SEARch:BURSt:LENGth:MAXimum | 372 |
| [SENSe:]DDEMod:SEARch:BURSt:LENGth[:MINimum] | 372 |
| [SENSe:]DDEMod:SEARch:BURSt:SKIP:FALLing | 372 |

| | |
|--|-----|
| [SENSe:]DDEMod:SEARch:BURSt:SKIP:RISing..... | 373 |
| [SENSe:]DDEMod:SEARch:SYNC:CATalog..... | 373 |
| [SENSe:]DDEMod:SIGNal:PATtern..... | 373 |
| [SENSe:]DDEMod:SIGNal[:VALue]..... | 374 |
| [SENSe:]DDEMod:STANdard:SYNC:OFFSet:STATe..... | 374 |
| [SENSe:]DDEMod:STANdard:SYNC:OFFSet[:VALue]..... | 374 |

[SENSe:]DDEMod:SEARch:BURSt:LENGth:MAXimum <MaxLength>

Parameters:

<MaxLength> Range: 0 to 128000
 *RST: 1600
 Default unit: SYM

Manual operation: See "[Min Length / Max Length](#)" on page 192

[SENSe:]DDEMod:SEARch:BURSt:LENGth[:MINimum] <UsefulLength>

Defines the minimum useful length of a burst. Only those bursts will be recognized that exceed this length. The default unit is symbols. The value can also be given in seconds.

Note the difference to manual operation:

<Min_length>_{Manual} = <Min_Useful_Length> + <Run-In> + <Run-Out>

Setting parameters:

<UsefulLength> numeric value
 Range: 10 to 32000
 *RST: 100
 Default unit: Sym

Manual operation: See "[Min Length / Max Length](#)" on page 192

[SENSe:]DDEMod:SEARch:BURSt:SKIP:FALLing <RunOut>

Defines the length of the falling burst edge which is not considered when evaluating the result.

Parameters:

<RunOut> Range: 1
 Default unit: SYM

Example:

DDEM:SEAR:BURS:SKIP:FALL 5US
 5 us of the rising burst edge are not considered

Manual operation: See "[Run-Out](#)" on page 192

[SENSe:]DDEMod:SEARch:BURSt:SKIP:RISing <RunIn>**Parameters:**

<RunIn> Range: 0 to 31990
 *RST: 1
 Default unit: SYM

Example: DDEM:SEAR:BURSt:SKIP:RIS 5US
 5 us of the rising burst edge are not considered

Manual operation: See ["Run-In"](#) on page 192

[SENSe:]DDEMod:SEARch:SYNC:CATalog <Patterns>

Reads the names of all patterns stored on the hard disk. The file names are returned as a comma-separated list of strings, one for each file name (without the file extension).

Parameters:

<Patterns> CURRent | ALL
CURRent
 Only patterns that belong to the current standard
ALL
 All patterns
 *RST: ALL

Example: :DDEM:SEAR:SYNC:CAT? CURR
 Result:
 'GSM_AB0', 'GSM_AB1', 'GSM_AB2', 'GSM_TSC1'

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

[SENSe:]DDEMod:SIGNal:PATTern <State>

Specifies whether the signal contains a pattern or not.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 The signal does not contain a pattern.
ON | 1
 The signal contains a pattern.
 *RST: 0

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Name"](#) on page 192

[SENSe:]DDEMod:SIGNal[:VALue] <SignalType>

Parameters:

<SignalType> CONTInuous | BURSted

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Signal Type"](#) on page 191

[SENSe:]DDEMod:STANdard:SYNC:OFFSet:STATe <State>

(de)activates the pattern offset.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 0

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Offset"](#) on page 192

[SENSe:]DDEMod:STANdard:SYNC:OFFSet[:VALue] <Offset>

Defines a number of symbols which are ignored before the comparison with the pattern starts.

Parameters:

<Offset> Range: 0 to 15000

*RST: 0

Default unit: SYMB

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Offset"](#) on page 192

11.5.1.3 Frame structure

The following commands are only available if the additional Multi-Modulation Analysis option (FSW-K70M) is installed, and only for PSK and QAM types.

Useful commands for multi-modulation analysis described elsewhere:

- [\[SENSe:\]DDEMod:TIME:AUTO](#) on page 492

Remote commands exclusive to frame structure configuration:

| | |
|--|-----|
| [SENSe:]DDEMod:PATtern:APSK:NSTate..... | 375 |
| [SENSe:]DDEMod:PATtern:ASK:NSTate..... | 376 |
| [SENSe:]DDEMod:PATtern:FORMat..... | 376 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT..... | 376 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:NEXT:BOOSting..... | 377 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:NEXT:MODulation..... | 377 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:PREVIOUS:BOOSting..... | 378 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:PREVIOUS:MODulation..... | 378 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:SAVE..... | 378 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:STRUcture..... | 379 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:TEXT..... | 381 |
| [SENSe:]DDEMod:PATtern:FRAMe:LOAD..... | 382 |
| [SENSe:]DDEMod:PATtern:FRAMe:MODE..... | 382 |
| [SENSe:]DDEMod:PATtern:MAPPing:CATalog?..... | 382 |
| [SENSe:]DDEMod:PATtern:MAPPing[:VALue]..... | 383 |
| [SENSe:]DDEMod:PATtern:PSK:FORMat..... | 383 |
| [SENSe:]DDEMod:PATtern:PSK:NSTate..... | 383 |
| [SENSe:]DDEMod:PATtern:QAM:FORMat..... | 384 |
| [SENSe:]DDEMod:PATtern:QAM:NSTate..... | 384 |
| [SENSe:]DDEMod:PATtern:QPSK:FORMat..... | 385 |
| [SENSe:]DDEMod:PATtern:USER:NAME..... | 385 |
| [SENSe:]DDEMod:PATtern[:STATe]..... | 386 |

[SENSe:]DDEMod:PATtern:APSK:NSTate <APSKNstate>

Defines the demodulation order for APSK for the pattern (see also [SENSe:]DDEMod:PATtern:FORMat on page 376).

Depending on the demodulation state, the following orders are available:

| <APSKNstate> | Order |
|--------------|--------|
| 16 | 16APSK |
| 32 | 32APSK |

Parameters:

<APSKNstate> 16 | 32
*RST: 16

Example:

```
DDEM:PATT:FORM APSK
Switch APSK demodulation on.
DDEM:PATT:APSK:NST 16
Switch 16APSK demodulation on.
```

Manual operation: See "Modulation Order" on page 194

[SENSe:]DDEMod:PATtern:ASK:NState <ASKNstate>

Defines the demodulation order for ASK for the pattern (see also [\[SENSe:\]DDEMod:PATtern:FORMat](#) on page 376).

Depending on the demodulation state, the following orders are available:

| <ASKNstate> | Order |
|-------------|-------|
| 2 | 2ASK |
| 4 | 4ASK |

Parameters:

<ASKNstate> 2 | 4
 *RST: 2

Example:

```
DDEM:PATT:FORM ASK
Switch ASK demodulation on.
DDEM:PATT:ASK:NST 2
Switch 2ASK demodulation on.
```

Manual operation: See "[Modulation Order](#)" on page 194

[SENSe:]DDEMod:PATtern:FORMat <Group>

Selects the pattern demodulation mode. Some modes can only be queried as they are not supported for the two modulations feature, but could be set when 'Same as Data Symbols' is selected.

Parameters:

<Group> MSK | PSK | QAM | QPSK | FSK | ASK | APSK | UQAM

Example:

```
SENS:DDEM:PATtern:FORM QAM
```

Manual operation: See "[Modulation Type](#)" on page 194
 See "[Load User Modulation](#)" on page 194

[SENSe:]DDEMod:PATtern:FRAMe:EDIT <FileName>

Specifies an xml file for a user-defined frame structure configuration. The default storage location for such files is C:\R_S\INSTR\USER\vsa\FrameRangeStructure.

If the specified file already exists, it is loaded for subsequent editing. Note that this command is a prerequisite to editing the frame structure of an existing file (using [\[SENSe:\]DDEMod:PATtern:FRAMe:EDIT:STRUcture](#) or any other command starting with [\[SENS:\]DDEM:PATT:FRAM:EDIT](#)). It does not load the file for use in the current measurement (see [\[SENSe:\]DDEMod:PATtern:FRAMe:LOAD](#) on page 382). Therefore, you can edit a frame structure while simultaneously performing a measurement with another frame structure configuration.

If the file does not yet exist, a new frame structure is created and will be stored to the specified file when the `[SENSe:]DDEMod:PATtern:FRAMe:EDIT:SAVE` command is executed.

Parameters:

<FileName> string
Path and file name of the xml file containing the frame structure configuration.

Example:

```
SENS:DDEM:PATT:FRAM:MODE USER
SENS:DDEM:PATT:FRAM:EDIT 'D:
\MyFrameStructure.xml'
```

Manual operation: See ["Frame Structure Config"](#) on page 196
See ["New"](#) on page 200
See ["Open"](#) on page 200

[SENSe:]DDEMod:PATtern:FRAMe:EDIT:NEXT:BOOSTing <Boosting>

Determines which boosting is used to demodulate the frame next to the last configured subframe.

Parameters:

<Boosting> Range: 0.1 to 60
*RST: 1.000

Example:

```
SENS:DDEM:PATT:FRAM:EDIT:NEXT:BOOS 2
```

Sets boosting for the next frame to 2.

Manual operation: See ["Boosting \(optional\)"](#) on page 199

[SENSe:]DDEMod:PATtern:FRAMe:EDIT:NEXT:MODulation <Modulation>

Determines which modulation type is used to demodulate the frame after to the last configured subframe.

Parameters:

<Modulation> AUTO | DATA | PATtern

Data

The modulation type defined for data symbols is used (see [\[SENSe:\]DDEMod:MAPPING\[:VALue\]](#) on page 367)

Pattern

The modulation type defined for pattern symbols is used (see [\[SENSe:\]DDEMod:PATtern:MAPPING\[:VALue\]](#) on page 383).

Auto

The nextt frame uses the same modulation as the first subframe of the frame configuration.

*RST: PATT

Example: SENS : DDEM : PATT : MAPP : VAL ' QPSK '
 SENS : DDEM : PATT : FRAM : EDIT : NEXT : MOD PATT
 The next frame uses the same modulation as the pattern:
 QPSK.

Manual operation: See "[Modulation](#)" on page 198

[SENSe:]DDEMod:PATtern:FRAMe:EDIT:PREVious:BOOSting <Boosting>

Determines which boosting is used to demodulate the frame previous to the first configured subframe.

Parameters:

<Boosting> Range: 0.1 to 60
 *RST: 1.000

Example: SENS : DDEM : PATT : FRAM : EDIT : PREV : BOOS 2
 Sets boosting for the previous frame to 2.

Manual operation: See "[Boosting \(optional\)](#)" on page 199

[SENSe:]DDEMod:PATtern:FRAMe:EDIT:PREVious:MODulation <Modulation>

Determines which modulation type is used to demodulate the frame previous to the first configured subframe.

Parameters:

<Modulation> AUTO | DATA | PATtern

Data

The modulation type defined for data symbols is used (see [\[SENSe:\]DDEMod:MAPPING\[:VALue\]](#) on page 367)

Pattern

The modulation type defined for pattern symbols is used (see [\[SENSe:\]DDEMod:PATtern:MAPPING\[:VALue\]](#) on page 383).

Auto

The previous frame uses the same modulation as the last subframe of the frame configuration.

*RST: DATA

Example: SENS : DDEM : MAPP : VAL ' 16QAM '
 SENS : DDEM : PATT : FRAM : EDIT : PREV : MOD DATA
 The previous frame uses the same modulation as the data:
 16QAM.

Manual operation: See "[Modulation](#)" on page 198

[SENSe:]DDEMod:PATtern:FRAMe:EDIT:SAVE [<FileName>]

Stores the current frame structure configuration to the specified file.

If no path is provided it is saved to the file selected previously by [\[SENSe:\]DDEMod:PATtern:FRAMe:EDIT](#) on page 376.

Setting parameters:

<FileName> string
Optional parameter: Path and file name of the xml file.

Example:

```
SENS:DDEM:PATT:FRAM:MODE USER
SENS:DDEM:PATT:FRAM:EDIT 'D:\MyFrameStructure.xml'
SENSe1:DDEMod:PATtern:FRAMe:EDIT:PREVIOUS:MODulation PATT
SENSe1:DDEMod:PATtern:FRAMe:EDIT:PREVIOUS:BOOSting 2
SENSe1:DDEMod:PATtern:FRAMe:EDIT:NEXT:MODulation DATA
SENSe1:DDEMod:PATtern:FRAMe:EDIT:NEXT:BOOSting 3
SENSe1:DDEMod:PATtern:FRAMe:EDIT:STRucture 'One', 10, PATTERN,
PATTERN, 1, 'Range One', 'Two', 20, PATTERN, DATA, 5,
'Range Two', 'Three', 30, DATA, DATA, 0.5, 'Range Three'
SENS:DDEM:PATT:FRAM:EDIT:SAVE 'D:\MyFrameStructureEdited.xml'
```

Usage: Setting only

Manual operation: See ["Save"](#) on page 200
See ["Save As"](#) on page 200

[SENSe:]DDEMod:PATtern:FRAMe:EDIT:STRucture {<Name>, <NOFSymbols>, <Modulation>, <Type>, <Boosting>, <Description>}...

Defines the frame structure for a previously loaded file. For each subframe, *all* parameters must be defined.

Note that the file must be loaded *for editing* before the structure can be defined using this command (see [\[SENSe:\]DDEMod:PATtern:FRAMe:EDIT](#) on page 376). Loading the file for use in the current measurement is not sufficient (see [\[SENSe:\]DDEMod:PATtern:FRAMe:LOAD](#) on page 382). Therefore, you can edit a frame structure while simultaneously performing a measurement with another frame structure configuration.

The configuration is only stored by a subsequent [\[SENSe:\]DDEMod:PATtern:FRAMe:EDIT:SAVE](#) command.

The modulation for the "previous frame" and "next frame" are defined by separate commands (see [\[SENS:\]DDEM:PATT:FRAM:PREV:...](#) and [\[SENS:\]DDEM:PATT:FRAM:NEXT:...](#)).

Parameters:

<Name> string
Name of the subframe. Duplicate names are allowed.

| | |
|---------------|---|
| <NOFSymbols> | integer The number of symbols the subframe consists of. For pattern subframes, the number of symbols must correspond to the number of symbols defined using [SENSe:]DDEMod:SEARCH:SYNC:DATA on page 488. |
| <Modulation> | DATA PATTErn Determines which modulation type is used to demodulate the subframe. The modulation for the "previous frame" and "next frame" are defined by separate commands (see [SENSe:]DDEMod:PATTErn:FRAME:EDIT:PREVIOUS:MODulation on page 378 and [SENSe:]DDEMod:PATTErn:FRAME:EDIT:NEXT:MODulation on page 377). DATA The modulation type defined for data symbols is used (see [SENSe:]DDEMod:MAPPING[:VALUE] on page 367). PATTErn The modulation type defined for patterns is used (see [SENSe:]DDEMod:PATTErn:MAPPING[:VALUE] on page 383). |
| <Type> | DATA PATTErn Determines whether the demodulated data in the subframe is known or unknown by the R&S FSW VSA application. PATTErn The data is assumed to correspond with the pattern definition (see [SENSe:]DDEMod:SEARCH:SYNC:DATA on page 488). Not available for modulation type: "DATA". Only one subframe is allowed to be of type "PATTErn". DATA The data is unknown. Used for data symbols or header information. |
| <Boosting> | numeric value For subframes with gain values different to the data symbols, define a different boosting factor to be applied to the reference power. Range: 0.1 to 60 *RST: 1.000 |
| <Description> | string Description for an individual subframe. Use an empty string ("") to leave out the description. |

Example:

```

SENS:DDEM:PATT:FRAM:MODE USER
DDEM:PATT:FRAM:EDIT 'D:\MyFrameStructure.xml'
DDEM:PATT:FRAM:EDIT:STR 'Start of Frame', 26,
PATTERN, PATTERN, 1, 'Start of Frame Pattern',
'Header Symbols', 64, PATTERN, DATA, 5, 'Block
with header symbols that contains the frame
information', 'Data Symbols', 3240, DATA, DATA,
0.5, 'Block with 32APSK data symbols'
DDEM:PATT:FRAM:EDIT:SAVE

```

Manual operation: See ["Frame Structure Config"](#) on page 196
 See ["Index"](#) on page 198
 See ["Name"](#) on page 198
 See ["Number of Symbols"](#) on page 198
 See ["Modulation"](#) on page 198
 See ["Type"](#) on page 199
 See ["Boosting \(optional\)"](#) on page 199
 See ["Description \(optional\)"](#) on page 200

The example defines the following frame structure:

| Name | No. of symbols | Modulation | Type | Boosting | Description |
|------------------|----------------|------------|---------|----------|---|
| 'Start of Frame' | 26 | PATTERN | PATTERN | 1 | 'Start of Frame Pattern' |
| 'Header Symbols' | 64 | PATTERN | DATA | 5 | 'Block with header symbols that contains the frame information' |
| 'Data Symbols' | 3240 | DATA | DATA | 0.5 | 'Block with 32APSK data symbols' |

[SENSe:]DDEMod:PATtern:FRAMe:EDIT:TEXT <FileName>

Defines the description for the frame structure in a previously loaded file.

Note that the file must be loaded *for editing* before the description can be defined using this command (see [\[SENSe:\]DDEMod:PATtern:FRAMe:EDIT](#) on page 376).

Parameters:

<FileName> string

Example:

```

SENS:DDEM:PATT:FRAM:MODE USER
SENS:DDEM:PATT:FRAM:EDIT 'D:\MyFrameStructure.xml'
SENSe:DDEMod:PATtern:FRAMe:EDIT:TEXT
'description for the frame structure'

```

Manual operation: See ["Description"](#) on page 197

[SENSe:]DDEMod:PATtern:FRAMe:LOAD <FileName>

Loads a user-defined frame structure configuration to be used by the measurement from an xml file. The default storage location for such files is
C:\R_S\INSTR\USER\vsa\FramRangeStructure.

Parameters:

<FileName> string
Path and file name of the xml file.
The default storage location for frame structures is
C:\R_S\INSTR\USER\vsa\FramRange_Structure.

Example:

```
DDEM:PATT:FRAM:MODE USER
SENS:DDEM:PATT:FRAM:LOAD 'D:
\MyFrameStructure.xml'
```

Manual operation: See "[Load File](#)" on page 196

[SENSe:]DDEMod:PATtern:FRAMe:MODE <FrameMode>

Determines whether the frame structure of the signal is configured in reference to the result range or user-defined.

Parameters:

<FrameMode> Default | USER

Default

A single frame is assumed to correspond to the result range defined by [\[SENSe:\]DDEMod:TIME](#) on page 492.

User-Defined

A frame is defined manually as a succession of subframes with specified characteristics. In this case, the result range is assumed to be a single frame as specified by [\[SENSe:\]DDEMod:PATtern:FRAMe:EDIT:STRucture](#) on page 379. If no structure is configured or loaded yet, the result range definition is used (as for "Default").

Example:

```
DDEM:PATT:FRAM:MODE DEF
The default result range is used.
```

Manual operation: See "[Frame Structure](#)" on page 195

[SENSe:]DDEMod:PATtern:MAPPing:CATalog?

Queries the names of all mappings that are available for the pattern for the current modulation type and order. A mapping describes the assignment of constellation points to symbols.

Return values:

<Mappings> <list>
A comma-separated list of strings, with one string for each mapping name.

Example: `SENS:DDEM:PATT:MAPP:CAT?`

Result:
'CDMA2K_FWD', 'DVB_S2', 'GRAY', 'NATURAL', 'SMx', 'WCDMA'

Usage: Query only

Manual operation: See "[Modulation Mapping](#)" on page 195

[SENSe:]DDEMod:PATtern:MAPPing[:VALue] <Mapping>

Selects the mapping for pattern demodulation.

Parameters:

<Mapping> To obtain a list of available symbol mappings for the current modulation type use the `[SENSe:]DDEMod:PATtern:MAPPing:CATalog??` query.

Example: `DDEM:PATT:MAPP 'GSM'`
Sets mapping to GSM.

Manual operation: See "[Modulation Mapping](#)" on page 195

[SENSe:]DDEMod:PATtern:PSK:FORMat <PSKformat>

Together with `DDEMod:PATT:PSK:NST`, this command defines the demodulation order for PSK for the pattern (see also `[SENSe:]DDEMod:PATtern:PSK:NSTate` on page 383).

| NSTATE | <PSKformat> | Order |
|--------|--------------|-------|
| 2 | NORMAL | BPSK |
| 8 | NORMAL | 8PSK |
| 8 | DIFFerential | D8PSK |

Parameters:

<PSKformat> NORMAL | DIFFerential
*RST: NORMAL

Manual operation: See "[Modulation Order](#)" on page 194

[SENSe:]DDEMod:PATtern:PSK:NSTate <PSKNstate>

Together with `DDEMod:PATT:PSK:FORMat`, this command defines the demodulation order for PSK for the pattern (see also `[SENSe:]DDEMod:PATtern:PSK:FORMat` on page 383).

Depending on the demodulation format and state, the following orders are available:

| <PSKNSTATE> | FORMat | Order |
|-------------|--------------|-------|
| 2 | any | BPSK |
| 8 | NORMal | 8PSK |
| 8 | DIFFerential | D8PSK |

Parameters:

<PSKNstate> 2 | 8

Example:

```
DDEM:PATT:FORM PSK
Switch PSK demodulation on.
DDEM:PATT:PSK:FORM DIFF
DDEMd:PATT:PSK:NST 8
Switch D8PSK demodulation on.
```

Manual operation: See "[Modulation Order](#)" on page 194

[SENSe:]DDEMod:PATtern:QAM:FORMat <QAMformat>

Defines the specific demodulation order for QAM for the pattern.

Parameters:

<QAMformat> NORMal | DIFFerential

NORMal

Demodulation order QAM is used.

DIFFerential

Demodulation order DQAM is used.

Example:

```
DDEM:PATT:FORM QAM
Switches QAM demodulation on.
DDEM:PATT:QAM:FORM DQAM
Switches DQAM on.
```

Manual operation: See "[Modulation Order](#)" on page 194

[SENSe:]DDEMod:PATtern:QAM:NSTate <QAMNState>

Defines the demodulation order for QAM for the pattern.

| <QAMNState> | Order |
|-------------|------------|
| 16 | 16QAM |
| 16 | Pi/4-16QAM |
| 32 | 32QAM |
| 32 | Pi/4-32QAM |
| 64 | 64QAM |
| 128 | 128QAM |
| 256 | 256QAM |

| <QAMNState> | Order |
|-------------|---------|
| 512 | 512QAM |
| 1024 | 1024QAM |

Parameters:

<QAMNState>

Example:

```
DDEM:PATT:FORM QAM
Selects QAM demodulation for the pattern.
DDEM:PATT:QAM:NST 64
Selects 64QAM demodulation for the pattern.
```

Manual operation: See "[Modulation Order](#)" on page 194

[SENSe:]DDEMod:PATtern:QPSK:FORMat <QPSKformat>

Defines the demodulation order for QPSK for the pattern.

Parameters:

<QPSKformat> NORMAL | DIFFerential

NORMAL

Demodulation order QPSK is used.

DIFFerential

Demodulation order DQPSK is used.

Example:

```
DDEM:PATT:FORM QPSK
Selects QPSK demodulation for the pattern.
```

Manual operation: See "[Modulation Order](#)" on page 194

[SENSe:]DDEMod:PATtern:USER:NAME <Name>

Selects the file that contains a user-defined modulation.

For details on user-defined modulation files see [Chapter 4.3.12, "User-defined modulation"](#), on page 130.

The default storage location for user-defined modulations is

```
C:\R_S\INSTR\USER\vsa\Constellation.
```

Parameters:

<Name> string

Path and file name of the *.vam file.

Example:

```
SENS:DDEM:PATT:FORM UQAM
SENS:DDEM:PATT:USER:NAME 'D:\MyModulation.vam'
```

Manual operation: See "[Load User Modulation](#)" on page 194

[SENSe:]DDEMod:PATtern[:STATe] <State>

Determines whether the pattern uses a different modulation type than the data symbols.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

The pattern uses the same modulation as the data symbols, defined by [SENSe:]DDEMod:MAPPING[:VALue] on page 367.

ON | 1

The pattern uses a different modulation, configured by [SENSe:]DDEMod:PATtern:MAPPING[:VALue] on page 383.

*RST: 0

Example:

SENS:DDEM:PATT:STAT ON

The pattern uses a different modulation than the data symbols.

Manual operation: See "Modulation Settings for Pattern: Same as for Data Symbols" on page 194

11.5.1.4 Known data

The following commands are required to provide known data to the R&S FSW VSA application.

| | |
|---|-----|
| [SENSe:]DDEMod:KDATA:STATe..... | 386 |
| [SENSe:]DDEMod:KDATA[:NAME]..... | 387 |
| [SENSe:]DDEMod:KDATA:PRBS:FEEDback:AUTO..... | 387 |
| [SENSe:]DDEMod:KDATA:PRBS:FEEDback[:STATe]..... | 387 |
| [SENSe:]DDEMod:KDATA:PRBS:PATtern:AUTO..... | 388 |
| [SENSe:]DDEMod:KDATA:PRBS:PATtern[:STATe]..... | 388 |
| [SENSe:]DDEMod:KDATA:PRBS:POLYnomial:AUTO..... | 388 |
| [SENSe:]DDEMod:KDATA:PRBS:POLYnomial[:ORDER]..... | 389 |
| [SENSe:]DDEMod:KDATA:PRBS[:TYPE]..... | 389 |
| [SENSe:]DDEMod:KDATA:SOURce..... | 389 |

[SENSe:]DDEMod:KDATA:STATe <State>

Selects the Known Data state. The use of known data is a prerequisite for the BER measurement and can also be used for the fine sync.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 0

Example:
 DDEM:KDAT:STAT ON
 DDEM:KDAT 'C:\TEMP\KNOWNDATA'

Manual operation: See "[Known Data](#)" on page 202

[SENSe:]DDEMod:KDATa[:NAME] <FileName>

Selects the Known Data file. Note that known data must be activated ([\[SENSe:\]DDEMod:KDATa:STATe](#)) before you can select a file.

Parameters:
 <FileName>

Example:
 DDEM:KDAT:STAT ON
 DDEM:KDAT 'C:\TEMP\KNOWNDATA'

Manual operation: See "[Load Data File](#)" on page 203

[SENSe:]DDEMod:KDATa:PRBS:FEEDback:AUTO <State>

Determines how the feedback value is calculated.

Parameters:
 <State>

ON | OFF | 0 | 1

OFF | 0

The setting defined by [\[SENSe:\]DDEMod:KDATa:PRBS:FEEDback\[:STATe\]](#) on page 387 is used for all PRBS types.

ON | 1

The feedback value is negated or not, depending on the standard for the used PRBS type.

*RST: 1

Example:
 DDEM:KDAT:PRBS:FEED:AUTO ON

Manual operation: See "[Negate Feedback Path](#)" on page 203

[SENSe:]DDEMod:KDATa:PRBS:FEEDback[:STATe] <State>

Determines how the feedback bit is calculated.

Parameters:
 <State>

ON | OFF | 0 | 1

OFF | 0

The xor connected bit from the specified feedback positions is fed into the last shift register.

ON | 1

The xor connected bit from the specified feedback positions is inverted before it is fed into the last shift register.

*RST: 0

Example:
 DDEM:KDAT:PRBS:FEED:STAT ON

Manual operation: See ["Negate Feedback Path"](#) on page 203

[SENSe:]DDEMod:KDATa:PRBS:PATTeRn:AUTO <State>

If enabled, the R&S FSW VSA application assumes the pattern is part of the PRBS sequence.

If disabled, configure the setting using the [\[SENSe:\]DDEMod:KDATa:PRBS:PATTeRn\[:STATe\]](#) command.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 1

Example: SENS:DDEM:KDAT:PRBS:PATT:AUTO ON

Manual operation: See ["Pattern Symbols are Part of PRBS"](#) on page 204

[SENSe:]DDEMod:KDATa:PRBS:PATTeRn[:STATe] <State>

Determines whether the pattern symbols are part of the PRBS sequence and are thus treated as data symbols.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 The pattern is not part of the PRBS
ON | 1
 The pattern is part of the PRBS
 *RST: 1

Example: SENS:DDEM:KDAT:PRBS:PATT:STAT ON

Manual operation: See ["Pattern Symbols are Part of PRBS"](#) on page 204

[SENSe:]DDEMod:KDATa:PRBS:POLYnomial:AUTO <State>

Determines the coefficients of the polynomial and thus the feedback positions for the PRBS algorithm.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 The coefficients a_0, \dots, a_N of the polynomial must be defined manually using [\[SENSe:\]DDEMod:KDATa:PRBS:POLYnomial\[:ORDeR\]](#) on page 389.

ON | 1

Polynomial is defined automatically according to the PRBS type specified by [SENSe:]DDEMod:KDATa:PRBS[:TYPE] on page 389.

*RST: 1

Example: SENS:DDEM:KDAT:PRBS:POLY:AUTO OFF

Manual operation: See "[Generator Polynomial](#)" on page 203

[SENSe:]DDEMod:KDATa:PRBS:POLYnomial[:ORDer] <PRBSPolyOrder>

Determines the coefficients of the polynomial and thus the feedback positions for the PRBS algorithm.

Parameters:

<PRBSPolyOrder> list of polynomial coefficients, separated by semi-colons (;) in descending order

*RST: 9;4;0

Example: SENS:DDEM:KDAT:PRBS:POLY:AUTO OFF

Example: DDEM:KDAT:PRBS:POLY:ORD 9;4;0;

Manual operation: See "[Generator Polynomial](#)" on page 203

[SENSe:]DDEMod:KDATa:PRBS[:TYPE] <PRBSType>

Defines the type of the used PRBS model. The type of the model defines the degree, complexity and number of terms in the polynomial model. If the PRBS data is generated in accordance with the ITU-T standard, no further settings are required.

Parameters:

<PRBSType> 7 | 9 | 11 | 15 | 16 | 20 | 21 | 23 | 31

*RST: 9

Example: DDEM:KDAT:PRBS:TYPE 11

Manual operation: See "[PRBS Type](#)" on page 203

[SENSe:]DDEMod:KDATa:SOURce <SourceFilePRBS>

Gets/selects the Known Data source

Parameters:

<SourceFilePRBS> FILE | PRBS

Manual operation: See "[Source](#)" on page 203

11.5.2 Input, output and frontend settings

The FSW can analyze signals from different input sources. The frequency and amplitude settings represent the "frontend" of the measurement setup.

Manual configuration of the input and frontend is described in [Chapter 5.4, "Input, output and frontend settings"](#), on page 204.

| | |
|--|-----|
| • RF input..... | 390 |
| • Configuring file input..... | 394 |
| • Using external mixers..... | 396 |
| • Remote commands for external frontend control..... | 410 |
| • Configuring digital I/Q input and output..... | 432 |
| • Configuring input via the optional Analog Baseband interface..... | 436 |
| • Setting up probes..... | 439 |
| • Configuring the 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000)..... | 444 |
| • Output settings..... | 450 |
| • Digital I/Q 40G streaming output commands..... | 451 |
| • Configuring the trigger output..... | 452 |
| • Frequency..... | 455 |
| • Amplitude settings..... | 456 |
| • Scaling and units..... | 464 |

11.5.2.1 RF input

| | |
|---|-----|
| INPut:ATTenuation:PROTection:RESet..... | 390 |
| INPut:COUPling..... | 390 |
| INPut:DPATH..... | 391 |
| INPut:FILTer:HPASs[:STATe]..... | 391 |
| INPut:FILTer:YIG[:STATe]..... | 392 |
| INPut:IMPedance..... | 392 |
| INPut:IMPedance:PTYPe..... | 392 |
| INPut:SELEct..... | 393 |
| INPut:TYPE..... | 394 |

INPut:ATTenuation:PROTection:RESet

Resets the attenuator and reconnects the RF input with the input mixer for the FSW after an overload condition occurred and the protection mechanism intervened. The error status bit (bit 3 in the `STAT:QUES:POW` status register) and the `INPUT OVL D` message in the status bar are cleared.

(For details on the status register see the FSW base unit user manual).

The command works only if the overload condition has been eliminated first.

Example: `INP:ATT:PROT:RES`

INPut:COUPling <CouplingType>

Selects the coupling type of the RF input.

The command is not available for measurements with the optional "Digital Baseband" interface.

If an external frontend is active, the coupling is automatically set to AC.

Parameters:

<CouplingType> AC | DC
AC
 AC coupling
DC
 DC coupling
 *RST: AC

Example: INP:COUP DC

Manual operation: See ["Input Coupling"](#) on page 206

INPut:DPATH <DirectPath>

Enables or disables the use of the direct path for frequencies close to 0 Hz.

If an external frontend is active, the direct path is always used.

Parameters:

<DirectPath> AUTO | OFF
AUTO | 1
 (Default) the direct path is used automatically for frequencies close to 0 Hz.
OFF | 0
 The analog mixer path is always used.

Example: INP:DPAT OFF

Manual operation: See ["Direct Path"](#) on page 207

INPut:FILTer:HPASs[:STATe] <State>

Activates an additional internal high-pass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the FSW to measure the harmonics for a DUT, for example.

Requires an additional high-pass filter hardware option.

(Note: for RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG-preselector, if available.)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

*RST: 0

Example: INP:FILT:HPAS ON
Turns on the filter.

Manual operation: See "[High Pass Filter 1 to 3 GHz](#)" on page 207

INPut:FILTer:YIG[:STATe] <State>

Enables or disables the YIG filter.

Parameters:

<State> ON | OFF | 0 | 1

Example: INP:FILT:YIG OFF
Deactivates the YIG-preselector.

Manual operation: See "[YIG-Preselector](#)" on page 207

INPut:IMPedance <Impedance>

Selects the nominal input impedance of the RF input. In some applications, only 50 Ω are supported.

The command is not available for measurements with the optional "Digital Baseband" interface.

Parameters:

<Impedance> 50 | 75

numeric value

User-defined impedance from 50 Ohm to 100000000 Ohm (=100 MOhm)

User-defined values are only available for the Spectrum application, the I/Q Analyzer, and some optional applications. (In MSRA mode, primary only)

*RST: 50 Ω
Default unit: OHM

Example: INP:IMP 75

Manual operation: See "[Impedance](#)" on page 208
See "[Unit](#)" on page 221

INPut:IMPedance:PTYPe <PadType>

Defines the type of matching pad used for impedance conversion for RF input.

Parameters:

<PadType> SRESistor | MLPad

SRESistor
Series-R

MLPad

Minimum Loss Pad

*RST: SRESistor

Example:

```
INP:IMP 100
INP:IMP:PTYP MLP
```

Manual operation: See "[Impedance](#)" on page 208

INPut:SElect <Source>

Selects the signal source for measurements, i.e. it defines which connector is used to input data to the FSW.

If no additional input options are installed, only RF input or file input is supported.

For FSW85 models with two RF input connectors, you must select the input connector to configure first using [INPut:TYPE](#).

Tip: The I/Q data to be analyzed for VSA cannot only be measured by the R&S FSW VSA application itself, it can also be imported to the application, provided it has the correct format. Furthermore, the analyzed I/Q data from the R&S FSW VSA application can be exported for further analysis in external applications.

For details, see the FSW I/Q Analyzer and I/Q Input User Manual.

Parameters:

<Source>

RF

Radio Frequency ("RF INPUT" connector)

FIQ

I/Q data file

Not available for Input2.

DIQ

Digital IQ data (only available with optional "Digital Baseband" interface)

For details on I/Q input see the FSW I/Q Analyzer User Manual.

Not available for Input2.

AIQ

Analog Baseband signal (only available with optional "Analog Baseband" interface)

Not available for Input2.

*RST: RF

Example:

```
INP:TYPE INP1
```

For FSW85 models with two RF input connectors: selects the 1.00 mm RF input connector for configuration.

```
INP:SEL RF
```

Manual operation: See "[Radio Frequency State](#)" on page 206
See "[I/Q Input File State](#)" on page 209

INPut:TYPE <Input>

The command selects the input path.

Parameters:

<Input>

INPUT1

Selects RF input 1.

1 mm [RF Input] connector

INPUT2

Selects RF input 2.

For FSW85 models with two RF input connectors:

1.85 mm [RF2 Input] connector

For all other models: not available

*RST: INPUT1

Example:

```
//Select input path
INP:TYPE INPUT1
```

Manual operation: See "Radio Frequency State" on page 206

11.5.2.2 Configuring file input

The following commands are required to define input from a file.

Useful commands for configuring file input described elsewhere:

- [INPut:SElect](#) on page 393

Remote commands exclusive to configuring input from files:

| | |
|--|-----|
| INPut:FILE:PATH | 394 |
| MMEMory:LOAD:IQ:STReam | 395 |
| MMEMory:LOAD:IQ:STReam:AUTO | 395 |
| MMEMory:LOAD:IQ:STReam:LIST? | 396 |
| TRACe:IQ:FILE:REPetition:COUNT | 396 |

INPut:FILE:PATH <FileName>[, <AnalysisBW>]

Selects the I/Q data file to be used as input for further measurements.

The I/Q data file must be in one of the following supported formats:

- .iq.tar
- .iqw
- .csv
- .mat
- .wv
- .aid

Only a single data stream or channel can be used as input, even if multiple streams or channels are stored in the file.

For some file formats that do not provide the sample rate and measurement time or record length, you must define these parameters manually. Otherwise the traces are not visible in the result displays.

Parameters:

<FileName> String containing the path and name of the source file.
The file type is determined by the file extension. If no file extension is provided, the file type is assumed to be `.iq.tar`.
For `.mat` files, Matlab® v4 is assumed.

<AnalysisBW> Optionally: The analysis bandwidth to be used by the measurement. The bandwidth must be smaller than or equal to the bandwidth of the data that was stored in the file.
Default unit: HZ

Example:

```
INP:FILE:PATH 'C:\R_S\Instr\user\data.iq.tar'
```

Uses I/Q data from the specified file as input.

Example:

```
//Load an IQW file
INP:SEL:FIQ
INP:FILE:PATH 'C:\R_S\Instr\user\data.iqw'
//Define the sample rate
TRAC:IQ:SRAT 10MHz
//Define the measurement time
SENSe:SWEep:TIME 0.001001
//Start the measurement
INIT:IMM
```

Manual operation: See "[Select I/Q data file](#)" on page 210

MMEMory:LOAD:IQ:STReam <Channel>

Only available for files that contain more than one data stream from multiple channels: selects the data stream to be used as input for the currently selected channel.

Automatic mode (`MMEMory:LOAD:IQ:STReam:AUTO`) is set to OFF.

Parameters:

<Channel> String containing the channel name.

Example:

```
MMEM:LOAD:IQ:STR?
//Result: 'Channel1','Channel2'
MMEM:LOAD:IQ:STR 'Channel2'
```

MMEMory:LOAD:IQ:STReam:AUTO <State>

Only available for files that contain more than one data stream from multiple channels: automatically defines which data stream in the file is used as input for the channel.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

The data stream specified by `MMEMoRY:LOAD:IQ:STReam` is used as input for the channel.

ON | 1

The first data stream in the file is used as input for the channel. Applications that support multiple data streams use the first data stream in the file for the first input stream, the second for the second stream etc.

*RST: 1

MMEMoRY:LOAD:IQ:STReam:LIST?

Returns the available channels in the currently loaded input file.

Example: `MMEM:LOAD:IQ:STR?`
`//Result: 'Channel1','Channel2'`

Usage: Query only

TRACe:IQ:FILE:REPetition:COUNT <RepetitionCount>

Determines how often the data stream is repeatedly copied in the I/Q data memory. If the available memory is not sufficient for the specified number of repetitions, the largest possible number of complete data streams is used.

Parameters:

<RepetitionCount> integer

Example: `TRAC:IQ:FILE:REP:COUN 3`

Manual operation: See "[File Repetitions](#)" on page 210

11.5.2.3 Using external mixers

The commands required to work with external mixers in a remote environment are described here. Note that these commands require the FSW to have an external mixer option installed and an external mixer to be connected to the FSW.

In MSRA/MSRT mode, external mixers are not supported.

For details on working with external mixers see the FSW User Manual.

- [Basic settings](#)..... 396
- [Mixer settings](#)..... 398
- [Conversion loss table settings](#)..... 404
- [Programming example: working with an external mixer](#)..... 408

Basic settings

The basic settings concern general usage of an external mixer.

| | |
|----------------------------------|-----|
| [SENSe:]MIXer<x>[:STATe]..... | 397 |
| [SENSe:]MIXer<x>:BIAS:HIGH..... | 397 |
| [SENSe:]MIXer<x>:BIAS[:LOW]..... | 397 |
| [SENSe:]MIXer<x>:LOPower..... | 398 |

[SENSe:]MIXer<x>[:STATe] <State>

Activates or deactivates the use of a connected external mixer as input for the measurement. This command is only available if the optional External Mixer is installed and an external mixer is connected.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<State> ON | OFF | 1 | 0
 *RST: 0

Example: MIX ON

[SENSe:]MIXer<x>:BIAS:HIGH <BiasSetting>

Defines the bias current for the high (last) range.

Is only available if the external mixer is active (see [SENSe:]MIXer<x>[:STATe] on page 397).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<BiasSetting> *RST: 0.0 A
 Default unit: A

[SENSe:]MIXer<x>:BIAS[:LOW] <BiasSetting>

Defines the bias current for the low (first) range.

Is only available if the external mixer is active (see [SENSe:]MIXer<x>[:STATe] on page 397).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<BiasSetting> *RST: 0.0 A
 Default unit: A

[SENSe:]MIXer<x>:LOPower <Level>

Specifies the LO level of the external mixer's LO port.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Level> Range: 13.0 dBm to 17.0 dBm
 Increment: 0.1 dB
 *RST: 15.5 dBm
 Default unit: DBM

Example: MIX:LOP 16.0dBm

Mixer settings

The following commands are required to configure the band and specific mixer settings.

| | |
|---|-----|
| [SENSe:]MIXer<x>:FREQUENCY:HANdOver..... | 398 |
| [SENSe:]MIXer<x>:FREQUENCY:STARt..... | 399 |
| [SENSe:]MIXer<x>:FREQUENCY:STOP..... | 399 |
| [SENSe:]MIXer<x>:HARMonic:BAND:PRESet..... | 399 |
| [SENSe:]MIXer<x>:HARMonic:BAND..... | 399 |
| [SENSe:]MIXer<x>:HARMonic:HIGH:STATe..... | 400 |
| [SENSe:]MIXer<x>:HARMonic:HIGH[:VALue]..... | 400 |
| [SENSe:]MIXer<x>:HARMonic:TYPE..... | 401 |
| [SENSe:]MIXer<x>:HARMonic[:LOW]..... | 401 |
| [SENSe:]MIXer<x>:IF?..... | 401 |
| [SENSe:]MIXer<x>:LOSS:HIGH..... | 402 |
| [SENSe:]MIXer<x>:LOSS:TABLE:HIGH..... | 402 |
| [SENSe:]MIXer<x>:LOSS:TABLE[:LOW]..... | 402 |
| [SENSe:]MIXer<x>:LOSS[:LOW]..... | 403 |
| [SENSe:]MIXer<x>:PORTs..... | 403 |
| [SENSe:]MIXer<x>:RFOVerrange[:STATe]..... | 403 |

[SENSe:]MIXer<x>:FREQUENCY:HANdOver <Frequency>

Defines the frequency at which the mixer switches from one range to the next (if two different ranges are selected). The handover frequency for each band can be selected freely within the overlapping frequency range.

Is only available if the external mixer is active (see [SENSe:]MIXer<x>[:STATe] on page 397).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Frequency> Default unit: HZ

Example: MIX ON
 Activates the external mixer.
 MIX:FREQ:HAND 78.0299GHz
 Sets the handover frequency to 78.0299 GHz.

[SENSe:]MIXer<x>:FREQuency:STARt

Sets or queries the frequency at which the external mixer band starts.

Suffix:

<x> 1..n
 irrelevant

Example: MIX:FREQ:STAR?
 Queries the start frequency of the band.

[SENSe:]MIXer<x>:FREQuency:STOP

Sets or queries the frequency at which the external mixer band stops.

Suffix:

<x> 1..n
 irrelevant

Example: MIX:FREQ:STOP?
 Queries the stop frequency of the band.

[SENSe:]MIXer<x>:HARMonic:BAND:PRESet

Restores the preset frequency ranges for the selected standard waveguide band.

Note: Changes to the band and mixer settings are maintained even after using the [PRESET] function. Use this command to restore the predefined band ranges.

Suffix:

<x> 1..n
 irrelevant

Example: MIX:HARM:BAND:PRES
 Presets the selected waveguide band.

[SENSe:]MIXer<x>:HARMonic:BAND <Band>

Selects the external mixer band. The query returns the currently selected band.

Is only available if the external mixer is active (see [SENSe:]MIXer<x>[:STATe] on page 397).

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Band> KA | Q | U | V | E | W | F | D | G | Y | J | USER
 Standard waveguide band or user-defined band.

Table 11-3: Frequency ranges for pre-defined bands

| Band | Frequency start [GHz] | Frequency stop [GHz] |
|-----------|-----------------------|----------------------|
| KA (A) *) | 26.5 | 40.0 |
| Q | 33.0 | 50.0 |
| U | 40.0 | 60.0 |
| V | 50.0 | 75.0 |
| E | 60.0 | 90.0 |
| W | 75.0 | 110.0 |
| F | 90.0 | 140.0 |
| D | 110.0 | 170.0 |
| G | 140.0 | 220.0 |
| J | 220.0 | 325.0 |
| Y | 325.0 | 500.0 |
| USER | 32.18 (default) | 68.22 (default) |

*) The band formerly referred to as "A" is now named "KA".

[SENSe:]MIXer<x>:HARMonic:HIGH:STATe <State>

Specifies whether a second (high) harmonic is to be used to cover the band's frequency range.

Suffix:

<x> 1..n

Parameters:

<State> ON | OFF
 *RST: ON

Example: MIX:HARM:HIGH:STAT ON

[SENSe:]MIXer<x>:HARMonic:HIGH[:VALue] <HarmOrder>

Specifies the harmonic order to be used for the high (second) range.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<HarmOrder> Range: 2 to 128 (USER band); for other bands: see band definition

Example:

```
MIX:HARM:HIGH:STAT ON
MIX:HARM:HIGH 3
```

[SENSe:]MIXer<x>:HARMonic:TYPE <OddEven>

Specifies whether the harmonic order to be used should be odd, even, or both.

Which harmonics are supported depends on the mixer type.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<OddEven> ODD | EVEN | EODD
 ODD | EVEN | EODD
*RST: EVEN

Example:

```
MIX:HARM:TYPE ODD
```

[SENSe:]MIXer<x>:HARMonic[:LOW] <HarmOrder>

Specifies the harmonic order to be used for the low (first) range.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<HarmOrder> Range: 2 to 128 (USER band); for other bands: see band definition
*RST: 2 (for band F)

Example:

```
MIX:HARM 3
```

[SENSe:]MIXer<x>:IF?

Queries the intermediate frequency currently used by the external mixer.

Suffix:

<x> 1..n
 irrelevant

Example:

```
MIX:IF?
```

Example:

See "[Programming example: working with an external mixer](#)" on page 408.

Usage:

Query only

[SENSe:]MIXer<x>:LOSS:HIGH <Average>

Defines the average conversion loss to be used for the entire high (second) range.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<Average> Range: 0 to 100
 *RST: 24.0 dB
 Default unit: dB

Example: MIX:LOSS:HIGH 20dB

[SENSe:]MIXer<x>:LOSS:TABLE:HIGH <FileName>

Defines the conversion loss table to be used for the high (second) range.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<FileName> String containing the path and name of the file, or the serial number of the external mixer whose file is required. The FSW automatically selects the correct cvl file for the current IF. As an alternative, you can also select a user-defined conversion loss table (.acl file).

Example:

```
MIX:LOSS:TABL:HIGH '101567'
MIX:LOSS:TABL:HIGH?
//Result for installed B5000, bw<= 4.4 GHz: 101567_B5000_2G8.B5G:
//'101567_MAG_6_B5000_2G8.B5G'
//Result for installed B5000, bw> 4.4 GHz: 101567_B5000_2G8.B5G:
//'101567_MAG_6_B5000_3G5.B5G'
//Result for installed B2001 and bw> 80 MHz:
//'101567_MAG_6_B1200_B2001.B2G'
//Result for installed B2001 and bw<= 80 MHz:
//'101567_MAG_6.ACL'
```

[SENSe:]MIXer<x>:LOSS:TABLE[:LOW] <FileName>

Defines the file name of the conversion loss table to be used for the low (first) range.

Suffix:

<x> 1..n
 irrelevant

Parameters:

<FileName> String containing the path and name of the file, or the serial number of the external mixer whose file is required. The FSW automatically selects the correct cvl file for the current IF. As an alternative, you can also select a user-defined conversion loss table (.acl file).

Example:

```
MIX:LOSS:TABL '101567'
MIX:LOSS:TABL?
//Result:
'101567_MAG_6_B5000_3G5.B5G'
```

[SENSe:]MIXer<x>:LOSS[:LOW] <Average>

Defines the average conversion loss to be used for the entire low (first) range.

Suffix:

<x> 1..n
irrelevant

Parameters:

<Average> Range: 0 to 100
*RST: 24.0 dB
Default unit: dB

Example:

```
MIX:LOSS 20dB
```

[SENSe:]MIXer<x>:PORTs <PortType>

Selects the mixer type.

Suffix:

<x> 1..n
irrelevant

Parameters:

<PortType> **2 | 3**
2
Two-port mixer.
3
Three-port mixer.
*RST: 2

Example:

```
MIX:PORT 3
```

[SENSe:]MIXer<x>:RFOVerrange[:STATe] <State>

If enabled, the band limits are extended beyond "RF Start" and "RF Stop" due to the capabilities of the used harmonics.

Suffix:

<x> 1..n
irrelevant

Parameters:

<State> ON | OFF | 1 | 0
*RST: 0

Conversion loss table settings

The following settings are required to configure and manage conversion loss tables.

| | |
|--------------------------------------|-----|
| [SENSe:]CORRection:CVL:BAND..... | 404 |
| [SENSe:]CORRection:CVL:BIAS..... | 404 |
| [SENSe:]CORRection:CVL:CATalog?..... | 405 |
| [SENSe:]CORRection:CVL:CLEar..... | 405 |
| [SENSe:]CORRection:CVL:COMMeNt..... | 405 |
| [SENSe:]CORRection:CVL:DATA..... | 406 |
| [SENSe:]CORRection:CVL:HARMonic..... | 406 |
| [SENSe:]CORRection:CVL:MIXer..... | 406 |
| [SENSe:]CORRection:CVL:PORTs..... | 407 |
| [SENSe:]CORRection:CVL:SElect..... | 407 |
| [SENSe:]CORRection:CVL:SNUMber..... | 407 |

[SENSe:]CORRection:CVL:BAND <Band>

Defines the waveguide band for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [SENSe:]CORRection:CVL:SElect on page 407).

Is only available with option B21 (External Mixer) installed.

Parameters:

<Band> K | KA | Q | U | V | E | W | F | D | G | Y | J | USER
Standard waveguide band or user-defined band.
For a definition of the frequency range for the pre-defined bands, see [Table 11-3](#).
*RST: F (90 GHz - 140 GHz)

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:BAND KA
Sets the band to KA (26.5 GHz - 40 GHz).
```

[SENSe:]CORRection:CVL:BIAS <BiasSetting>

Defines the bias setting to be used with the conversion loss table.

Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SElect](#) on page 407).

Is only available with option B21 (External Mixer) installed.

Parameters:

<BiasSetting> *RST: 0.0 A
 Default unit: A

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:BIAS 3A
```

[SENSe:]CORRection:CVL:CATalog?

Queries all available conversion loss tables saved in the C:\R_S\INSTR\USER\cv1\ directory on the instrument.

Is only available with option B21 (External Mixer) installed.

Return values:

<Files> 'string'
 Comma-separated list of strings containing the file names.

Example:

```
CORR:CVL:CAT?
```

Usage:

```
Query only
```

[SENSe:]CORRection:CVL:CLEar

Deletes the selected conversion loss table. Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SElect](#) on page 407).

Is only available with option B21 (External Mixer) installed.

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:CLE
```

[SENSe:]CORRection:CVL:COMment <Text>

Defines a comment for the conversion loss table. Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SElect](#) on page 407).

Is only available with option B21 (External Mixer) installed.

Parameters:

<Text>

Example: CORR:CVL:SEL 'LOSS_TAB_4'
 Selects the conversion loss table.
 CORR:CVL:COMM 'Conversion loss table for
 FS_Z60'

[SENSe:]CORRection:CVL:DATA {<Freq>, <Level>}...

Defines the reference values of the selected conversion loss tables. The values are entered as a set of frequency/level pairs. You can define a maximum of 500 frequency/level pairs. Before this command can be performed, you must select the conversion loss table (see [\[SENSe:\]CORRection:CVL:SELEct](#) on page 407).

Is only available with option B21 (External Mixer) installed.

Parameters:

<Freq> The frequencies have to be sent in ascending order.
 Default unit: HZ

<Level> Default unit: DB

Example: CORR:CVL:SEL 'LOSS_TAB_4'
 Selects the conversion loss table.
 CORR:CVL:DATA 1MHZ, -30DB, 2MHZ, -40DB

[SENSe:]CORRection:CVL:HARMonic <HarmOrder>

Defines the harmonic order for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SELEct](#) on page 407).

Is only available with option B21 (External Mixer) installed.

Parameters:

<HarmOrder> Range: 2 to 65

Example: CORR:CVL:SEL 'LOSS_TAB_4'
 Selects the conversion loss table.
 CORR:CVL:HARM 3

[SENSe:]CORRection:CVL:MIXer <Type>

Defines the mixer name in the conversion loss table. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SELEct](#) on page 407).

Is only available with option B21 (External Mixer) installed.

Parameters:

<Type> string
Name of mixer with a maximum of 16 characters

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:MIX 'FS_Z60'
```

[SENSe:]CORRection:CVL:PORTs <PortType>

Defines the mixer type in the conversion loss table. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SElect](#) on page 407).

Is only available with option B21 (External Mixer) installed.

Parameters:

<PortType> 2 | 3
*RST: 2

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
Selects the conversion loss table.
CORR:CVL:PORT 3
```

[SENSe:]CORRection:CVL:SElect <FileName>

Selects the conversion loss table with the specified file name. If <file_name> is not available, a new conversion loss table is created.

Is only available with option B21 (External Mixer) installed.

Parameters:

<FileName> String containing the path and name of the file.

Example:

```
CORR:CVL:SEL 'LOSS_TAB_4'
```

[SENSe:]CORRection:CVL:SNUMber <SerialNo>

Defines the serial number of the mixer for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see [\[SENSe:\]CORRection:CVL:SElect](#) on page 407).

Is only available with option B21 (External Mixer) installed.

Parameters:

<SerialNo> Serial number with a maximum of 16 characters

Example: CORR:CVL:SEL 'LOSS_TAB_4'
 Selects the conversion loss table.
 CORR:CVL:MIX '123.4567'

Programming example: working with an external mixer

This example demonstrates how to work with an external mixer in a remote environment. It is performed in the Spectrum application in the default layout configuration. Note that without a real input signal and connected mixer, this measurement will not return useful results.

```
//-----Preparing the instrument -----
//Reset the instrument
*RST
//Activate the use of the connected external mixer.
SENS:MIX ON
//----- Configuring basic mixer behavior -----
//Set the LO level of the mixer's LO port to 15 dBm.
SENS:MIX:LOP 15dBm
//Set the bias current to -1 mA .
SENS:MIX:BIAS:LOW -1mA
//----- Configuring the mixer and band settings -----
//Use band "V" to full possible range extent for assigned harmonic (6).
SENS:MIX:HARM:BAND V
SENS:MIX:RFOV ON
//Query the possible range
SENS:MIX:FREQ:STAR?
//Result: 4748000000 (47.48 GHz)
SENS:MIX:FREQ:STOP?
//Result: 13802000000 (138.02 GHz)
//Use a 3-port mixer type
SENS:MIX:PORT 3
//Split the frequency range into two ranges;
//range 1 covers 47.48 GHz GHz to 80 GHz; harmonic 6, average conv. loss of 20 dB
//range 2 covers 80 GHz to 138.02 GHz; harmonic 8, average conv.loss of 30 dB
SENS:MIX:HARM:TYPE EVEN
SENS:MIX:HARM:HIGH:STAT ON
SENS:MIX:FREQ:HAND 80GHz
SENS:MIX:HARM:LOW 6
SENS:MIX:LOSS:LOW 20dB
SENS:MIX:HARM:HIGH 8
SENS:MIX:LOSS:HIGH 30dB
//----- Activating automatic signal identification functions -----
//Activate both automatic signal identification functions.
SENS:MIX:SIGN ALL
//Use auto ID threshold of 8 dB.
SENS:MIX:THR 8dB

//-----Performing the Measurement-----
//Select single sweep mode.
```



```

INIT:CONT OFF
//Initiate a basic frequency sweep and wait until the sweep has finished.
INIT;*WAI
//-----Retrieving Results-----
//Return the trace data for the input signal without distortions
//(default screen configuration)
TRAC:DATA? TRACE3

```

Configuring a conversion loss table for a user-defined band

```

//-----Preparing the instrument -----
//Reset the instrument
*RST
//Activate the use of the connected external mixer.
SENS:MIX ON
//-----Configuring a new conversion loss table -----
//Define cvl table for range 1 of band as described in previous example
// (extended V band)
SENS:CORR:CVL:SEL 'UserTable'
SENS:CORR:CVL:COMM 'User-defined conversion loss table for USER band'
SENS:CORR:CVL:BAND USER
SENS:CORR:CVL:HARM 6
SENS:CORR:CVL:BIAS -1mA
SENS:CORR:CVL:MIX 'FS_Z60'
SENS:CORR:CVL:SNUM '123.4567'
SENS:CORR:CVL:PORT 3
//Conversion loss is linear from 55 GHz to 75 GHz
SENS:CORR:CVL:DATA 55GHZ,-20DB,75GHZ,-30DB
//----- Configuring the mixer and band settings -----
//Use user-defined band and assign new cvl table.
SENS:MIX:HARM:BAND USER
//Define band by two ranges;
//range 1 covers 47.48 GHz to 80 GHz; harmonic 6, cvl table 'UserTable'
//range 2 covers 80 GHz to 138.02 GHz; harmonic 8, average conv.loss of 30 dB
SENS:MIX:HARM:TYPE EVEN
SENS:MIX:HARM:HIGH:STAT ON
SENS:MIX:FREQ:HAND 80GHz
SENS:MIX:HARM:LOW 6
SENS:MIX:LOSS:TABL:LOW 'UserTable'
SENS:MIX:HARM:HIGH 8

SENS:MIX:LOSS:HIGH 30dB
//Query the possible range
SENS:MIX:FREQ:STAR?
//Result: 47480000000 (47.48 GHz)
SENS:MIX:FREQ:STOP?
//Result: 138020000000 (138.02 GHz)

//-----Performing the Measurement-----

```

```
//Select single sweep mode.
INIT:CONT OFF
//Initiate a basic frequency sweep and wait until the sweep has finished.
INIT;*WAI
//-----Retrieving Results-----
//Return the trace data (default screen configuration)
TRAC:DATA? TRACel
```

11.5.2.4 Remote commands for external frontend control

The following commands are available and required only if the external frontend control option (R&S FSW-K553) is installed.

Further commands for external frontend control described elsewhere:

- `INPut:SElect RF`; see `INPut:SElect` on page 393
- `[SENSe:]FREQuency:CENTer` on page 455
- `DISPlay[:WINDow<n>] [:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 457
- `INPut:ATTenuation:AUTO` on page 461
- `INPut:ATTenuation` on page 461
- `INPut:SANalyzer:ATTenuation` on page 463
- `INPut:SANalyzer:ATTenuation:AUTO` on page 463
- `Commands for initial configuration`.....410
- `Commands for test, alignment, and diagnosis`.....419
- `Commands for external devices`.....420
- `Format of selftest result file`.....425
- `Programming example: Configuring an external frontend`.....429
- `Programming example 2: Configuring an external frontend with a connected amplifier`.....430

Commands for initial configuration

The following commands are required when you initially set up an external frontend.

| | |
|--|-----|
| <code>[SENSe:]EFRontend:CONNection[:STATe]</code> | 411 |
| <code>[SENSe:]EFRontend:CONNection:CONFig</code> | 411 |
| <code>[SENSe:]EFRontend:CONNection:CSTate?</code> | 412 |
| <code>[SENSe:]EFRontend:FREQuency:BAND:COUNT?</code> | 412 |
| <code>[SENSe:]EFRontend:FREQuency:BAND:LOWer?</code> | 412 |
| <code>[SENSe:]EFRontend:FREQuency:BAND:UPPer?</code> | 413 |
| <code>[SENSe:]EFRontend:FREQuency:BCONfig:AUTO</code> | 413 |
| <code>[SENSe:]EFRontend:FREQuency:BCONfig:LIST?</code> | 414 |
| <code>[SENSe:]EFRontend:FREQuency:BCONfig:SElect</code> | 414 |
| <code>[SENSe:]EFRontend:FREQuency:IFRequency:SIDeband?</code> | 415 |
| <code>[SENSe:]EFRontend:FREQuency:IFRequency[:VALue]?</code> | 415 |
| <code>[SENSe:]EFRontend:FREQuency:LOSCillator:INPut:FREQuency?</code> | 415 |
| <code>[SENSe:]EFRontend:FREQuency:LOSCillator:MODE</code> | 416 |
| <code>[SENSe:]EFRontend:FREQuency:LOSCillator:OUTPut:FREQuency?</code> | 416 |

| | |
|---|-----|
| [SENSe:]EFRontend:FREQUENCY:LOSCillator:OUTPut:STATe..... | 416 |
| [SENSe:]EFRontend:FREQUENCY:REFerence..... | 417 |
| [SENSe:]EFRontend:FREQUENCY:REFerence:LIST?..... | 417 |
| [SENSe:]EFRontend:IDN?..... | 417 |
| [SENSe:]EFRontend:NETWork..... | 418 |
| [SENSe:]EFRontend[:STATe]..... | 418 |

[SENSe:]EFRontend:CONNECTION[:STATe] <State>

Queries the external frontend connection state in the firmware.

Note: to query the physical connection state of the external frontend, use [SENSe:]EFRontend:CONNECTION:CSTate? on page 412.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

The connection to the frontend is deactivated temporarily. The frontend is thus available for use elsewhere, for example by a signal generator. The measurement settings on the FSW remain untouched.

ON | 1

Frontend connection enabled.

The frontend is reserved for exclusive use by the FSW.

*RST: 0

Example:

```
//Global activation of external frontend
EFR ON
//Configure frontend
EFR:CONN:CONF "FE44S", "123.456.789"
//Activate exclusive use of frontend by FSW.
EFR:CONN ON
```

[SENSe:]EFRontend:CONNECTION:CONFIg <Type>, <IPAddress>[, <DeviceID>, <SymbolicName>]

Configures the connection to the external frontend.

Parameters:

<Type> | "FE44S" | "FE50DTR" | "FE170SR" | "FE110SR"

String in double quotes containing the type of frontend to be connected.

<IPAddress> string in double quotes

The IP address or computer name of the frontend connected to the FSW via LAN. The IP address and computer name are indicated on the electronic ink display on the side panel of the frontend.

<DeviceID> string in double quotes
 Unique device ID consisting of <type>-<serialnumber>
 Not required or relevant for the FSW.

<SymbolicName> string in double quotes
 Symbolic name of the external frontend.
 Not required or relevant for the FSW.

Example:

```
//Global activation of external frontend
EFR ON
//Configure frontend
EFR:CONN:CONF "FE44S", "123.456.789"
//Activate exclusive use of frontend by FSW.
EFR:CONN ON
```

[SENSe:]EFRontend:CONNECTION:CState?

Queries the status of the physical connection to the external frontend.

Return values:

<State> ON | OFF | 0 | 1
OFF | 0
 Frontend not connected; connection error
ON | 1
 Frontend connected

Usage: Query only

[SENSe:]EFRontend:FREQUENCY:BAND:COUNT?

Queries the number of frequency bands provided by the selected frontend.

Return values:

<NoBands> integer
 Number of frequency bands

Example:

```
//Query number of frequency bands
EFR:FREQ:BAND:COUN?
//Result: 2
```

Usage: Query only

[SENSe:]EFRontend:FREQUENCY:BAND:LOWer?

Queries the start of the frequency range supported by the selected frontend frequency band.

Suffix:
 1..n
 Band for multi-band frontends
 Use [\[SENSe:\]EFRontend:FREQuency:BAND:COUNT?](#) on page 412 to determine the number of available bands.

Return values:
 <StartFreq> Start frequency of the specified band

Example:

```
//Query start frequency of second band
EFR:FREQ:BAND2:LOW?
//Result: 24000000000
```

Usage: Query only

[SENSe:]EFRontend:FREQuency:BAND:UPPer?

Queries the end of the frequency range supported by the selected frontend frequency band.

Suffix:
 1..n
 Band for multi-band frontends
 Use [\[SENSe:\]EFRontend:FREQuency:BAND:COUNT?](#) on page 412 to determine the number of available bands.

Return values:
 <StopFreq> End frequency of the specified band

Example:

```
//Query end frequency of second band
EFR:FREQ:BAND2:UPP?
//Result: 44000000000
```

Usage: Query only

[SENSe:]EFRontend:FREQuency:BCONfig:AUTO <State>

Determines whether the frequency band of the external frontend is configured automatically or manually.

Parameters:
 <State> ON | OFF | 0 | 1
OFF | 0
 Uses the frequency band configured by [\[SENSe:\]EFRontend:FREQuency:BCONfig:SElect](#) on page 414.

ON | 1
 Configures the frequency band automatically
 Currently, auto mode always applies the "IF Low" range.

*RST: 1

Example: //Configures the use of the IF high band manually.
 EFR:FREQ:BCON:AUTO 0
 EFR:FREQ:BCON:SEL "IF HIGH"

[SENSe:]EFRontend:FREQuency:BCONfig:LIST?

Returns the intermediate frequency (output) range of the external frontend.

Return values:

<BandConfigs> string

"IF LOW"
 (Not for R&S FE170SR/R&S FE110SR frontends.)
 A higher intermediate frequency is used on the external frontend, resulting in a higher input frequency at the FSW.

"IF HIGH"
 (Not for R&S FE170SR/R&S FE110SR frontends.)
 A lower intermediate frequency is used on the external frontend, resulting in a lower input frequency at the FSW.

"Spur Optimized"
 The selected IF range avoids unwanted spurious effects.

"EVM Optimized"
 The selected IF range provides an optimal EVM result.

Example: EFR:FREQ:BCON:LIST?
 //Result: "IF HIGH", "IF LOW"
 EFR:FREQ:BCON:SEL "IF HIGH"

Usage: Query only

[SENSe:]EFRontend:FREQuency:BCONfig:SELEct <BandConfig>

Defines the intermediate frequency (output) range of the external frontend.

Parameters:

<BandConfig>

"IF HIGH"
 (R&S FE44S/ R&S FE50DTR)
 A higher intermediate frequency is used on the external frontend, resulting in a higher input frequency at the FSW.

"IF LOW"
 (R&S FE44S/ R&S FE50DTR)
 A lower intermediate frequency is used on the external frontend, resulting in a lower input frequency at the FSW.

"Spur Optimized"
 (R&S FE170SR/R&S FE110SR only)
 The selected IF range avoids unwanted spurious effects.

"EVM Optimized"
 (R&S FE170SR/R&S FE110SR only)
 The selected IF range provides an optimal EVM result.

"Shared LO"

(R&S FE170SR/R&S FE110SR only)

Ensures that multiple external frontends (R&S FE170SR/
R&S FE170ST or R&S FE110SR/R&S FE110ST) use the same
LO frequencies for upconversion and downconversion.

Example: `EFR:FREQ:BCON:LIST?`
`//Result: "IF HIGH", "IF LOW"`
`EFR:FREQ:BCON:SEL "IF HIGH"`

[SENSe:]EFRontend:FREQUENCY:IFrequency:SIDeband?

Queries the currently used sideband for frequency conversion.

Return values:

<Sideband> "USB" | "LSB"
"USB"
 Upper sideband
"LSB"
 Lower sideband

Example: `EFR:FREQ:IFR?`
`EFR:FREQ:IFR:SID?`

Usage: Query only

[SENSe:]EFRontend:FREQUENCY:IFrequency[:VALue]?

Queries the currently used intermediate frequency (IF) for frequency conversion.

Return values:

<IFFrequency> numeric

Example: `EFR:FREQ:IFR?`

Usage: Query only

[SENSe:]EFRontend:FREQUENCY:LOSCillator:INPut:FREQUENCY?

Queries the frequency of the LO input for `[SENSe:]EFRontend:FREQUENCY:LOSCillator:MODE EXT`.

Return values:

<LOInFreq> Default unit: Hz

Example: The external frontend uses the external LO provided at the "LO IN" connector.

`EFR:FREQ:LOSC:MODE EXT`

Query the frequency that the external LO must be provided at.

`EFR:FREQ:LOSC:INP:FREQ?`

`//Result: 10615000000`

Usage: Query only

[SENSe:]EFRontend:FREQUENCY:LOSCillator:MODE <Type>

Determines whether the external frontend uses its internal LO or an external LO.

Parameters:

<Type> EXTernal | INTernal

EXTernal

Uses the external LO provided at the LO input connector of the external frontend. Query the frequency at which the LO must be input to the external frontend using [\[SENSe:\]EFRontend:FREQUENCY:LOSCillator:INPut:FREQUENCY?](#) on page 415.

INTernal

Uses the internal LO.

*RST: EXTernal

Example:

```
EFR:FREQ:LOSC:MODE EXT
EFR:FREQ:LOSC:INP:FREQ?
//Result: 10615000000
```

[SENSe:]EFRontend:FREQUENCY:LOSCillator:OUTPut:FREQUENCY?

Queries the frequency of the LO output for [\[SENSe:\]EFRontend:FREQUENCY:LOSCillator:OUTPut:STATe ON](#).

Return values:

<LOOutFreq> Default unit: Hz

Example:

The external frontend uses the internal LO and provides it as output to the "LO OUT" connector.

```
EFR:FREQ:LOSC:MODE INT
EFR:FREQ:LOSC:OUTP:STAT ON
Query the frequency of the LO output.
EFR:FREQ:LOSC:OUTP:FREQ?
//Result: 10615000000
```

Usage:

Query only

[SENSe:]EFRontend:FREQUENCY:LOSCillator:OUTPut:STATe <State>

Enables or disables output of the LO by the external frontend. The output frequency is returned by [\[SENSe:\]EFRontend:FREQUENCY:LOSCillator:OUTPut:FREQUENCY?](#) on page 416.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on


```
*RST: 0
```

Example: The external frontend provides the LO as output at the "LO OUT" connector.

```
EFR:FREQ:LOSC:OUTP:STAT ON
Query the frequency of the LO output.
EFR:FREQ:LOSC:OUTP:FREQ?
//Result: 10615000000
```

[SENSe:]EFRontend:FREQuency:REFerence <Frequency>

Sets the reference frequency that is used for frequency conversion on the frontend. Depending on the connected type of frontend, different values are available. To determine which reference levels are available, use [SENSe:]EFRontend:FREQuency:REFerence:LIST? on page 417.

Parameters:

<Frequency> Default unit: HZ

Example:

```
//Query the available reference levels
EFR:FREQ:REF:LIST?
//Result: 100000000,640000000,1000000000
//Use 640 MHz reference
EFR:FREQ:REF 640000000
```

[SENSe:]EFRontend:FREQuency:REFerence:LIST?

Queries the available reference signals for the connected frontend type.

Return values:

<References> 100000000 | 640000000 | 1000000000

Example:

```
//Query the available reference levels
EFR:FREQ:REF:LIST?
//Result: 100000000,640000000,1000000000
//Use 640 MHz reference
EFR:FREQ:REF 640000000
```

Usage:

Query only

[SENSe:]EFRontend:IDN?

Queries the device identification information (*IDN?) of the frontend.

Return values:

<DevInfo> string without quotes
Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>

Example:

```
EFR:IDN?
//Result: Rohde&Schwarz,FE44S,
1234.5678K00/123456,0.8.0
```

Usage: Query only

[SENSe:]EFRontend:NETWork <IPAddress>, <Subnet>, <DHCP State>

Sets or queries the network information for the frontend.

This information is also indicated on the electronic paper display on the side panel of the device.

Beware that if you change the network setting to DHCP = ON, the connection is aborted and you must re-establish a connection to the frontend (see [SENSe:]EFRontend:CONNECTION[:STATe] on page 411).

Parameters:

| | |
|--------------|---|
| <IPAddress> | string in double quotes IP address of the frontend |
| <Subnet> | string in double quotes Subnet mask of the frontend |
| <DHCP State> | ON OFF 0 1 Indicates whether a DHCP server is used. OFF 0 DHCP off ON 1 DHCP on *RST: 0 |

Example: `EFR:NETW?`
`//Result: "123.456.78.90", "255.255.255.0", ON`

[SENSe:]EFRontend[:STATe] <State>

Enables or disables the general use of an external frontend for the application.

Parameters:

| | |
|---------|--|
| <State> | ON OFF 0 1 OFF 0 The frontend is disconnected. The application adapts the measurement settings to the common settings supported by the FSW. ON 1 The FSW allows you to configure and connect an external frontend for the application. The application adapts the available measurement settings to the connected frontend. The channel bar indicates "Inp: ExtFe". *RST: 0 |
|---------|--|

Example: `EFR ON`

Commands for test, alignment, and diagnosis

The following commands are required to test and optimize the connection after it has initially been set up.

| | |
|---|-----|
| [SENSe:]EFRontend:ALIGnment<ch>:FILE..... | 419 |
| [SENSe:]EFRontend:ALIGnment<ch>:STATe..... | 419 |
| [SENSe:]EFRontend:FWUPdate..... | 420 |
| [SENSe:]EFRontend<fe>:SELftest?..... | 420 |
| [SENSe:]EFRontend<fe>:SELftest:RESult?..... | 420 |

[SENSe:]EFRontend:ALIGnment<ch>:FILE <File>

Selects or queries the touchstone file that contains correction data to compensate for signal losses in the cable occurring at different IF signal frequencies.

Suffix:

<ch> 1..n
 Currently irrelevant

Parameters:

<File> string in double quotes
 Path and file name of the correction data file. The file must be in s2p format.
 If the specified file is not found or does not have the correct format, an error message is returned (-256, "File name not found", -150, "String data error").

Example: EFR:ALIG:FILE "FE44S.s2p"

[SENSe:]EFRontend:ALIGnment<ch>:STATe <State>

Activates correction of the IF signal due to cable loss from the frontend to the analyzer. Specify the file with correction data using [SENSe:]EFRontend:ALIGnment<ch>:FILE on page 419.

Suffix:

<ch> 1..n
 Currently irrelevant

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 0

[SENSe:]EFRontend:FWUPdate

Updates the firmware on the external frontend. Note that this process can take some time.

Usage: Event

[SENSe:]EFRontend<fe>:SELFtest?

Performs a selftest on the frontend to compare the current performance and characteristic values with the specified values for the frontend.

As a result, the success is returned.

Suffix:

<fe> 1
Connected frontend

Return values:

<Result> 0
No error
>0
Error
*RST: 0

Example: EFR:SELF?
//Result: 0

Usage: Query only

[SENSe:]EFRontend<fe>:SELFtest:RESult?

Queries the results of the selftest on the frontend.

Suffix:

<fe> 1
Connected frontend

Return values:

<Result> string containing xml data in double quotes

Example: EFR:SELF:RES?

Usage: Query only

Commands for external devices

You can insert additional external devices in the signal path between the DUT and the external frontend, such as preamplifiers or filters. The external frontend must then consider the additional gain or correction values.

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:FILE.....421
[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:STATE.....421
[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:VALid?.....422

| | |
|--|-----|
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:LIST? | 422 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:REFresh | 422 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:FREQuency:MAXimum? | 423 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:FREQuency:MINimum? | 423 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:GAIN? | 424 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:NAME? | 424 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:TYPE? | 424 |

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:FILE <File>

Defines the correction file to compensate for signal losses by the external devices occurring at different IF signal frequencies.

To query whether the loaded file is valid or not, use [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:VALid? on page 422.

Suffix:

| | |
|------|-------------------------|
| <ch> | 1..n For future use. |
| <di> | 1..n irrelevant |

Parameters:

<File>

Example:

```
SENS:EFR:CHAN:EXTD:CORR:FILE 'ExtDev_Corr.s2p'
SENS:EFR:CHAN:EXTD:CORR:STAT ON
SENS:EFR:CHAN:EXTD:CORR:FILE:VAL?
```

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:STATe <State>

Enables or disables the use of a correction file for the connected external devices. The file is defined by [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:FILE on page 421.

Suffix:

| | |
|------|-------------------------|
| <ch> | 1..n For future use. |
| <di> | 1..n irrelevant |

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 0

Example:

```
SENS:EFR:CHAN:EXTD:CORR:FILE 'ExtDev_Corr.s2p'
SENS:EFR:CHAN:EXTD:CORR:STAT ON
```

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:VALid?

Queries whether the loaded correction file for an external device is valid or not.

Suffix:

| | |
|------|-------------------------|
| <ch> | 1..n For future use. |
| <di> | 1..n irrelevant |

Return values:

| | |
|----------|---|
| <Result> | ON OFF 0 1 OFF 0 File is valid. ON 1 File is not valid. |
|----------|---|

Example:

```
SENS:EFR:CHAN:EXTD:CORR:STAT ON
SENS:EFR:CHAN:EXTD:CORR:FILE 'ExtDev_Corr.s2p'
SENS:EFR:CHAN:EXTD:CORR:VAL?
```

Usage: Query only

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:LIST?

Queries the names of all detected connected devices at the external frontend.

Suffix:

| | |
|------|-------------------------|
| <ch> | 1..n For future use. |
| <di> | 1..n irrelevant |

Return values:

<Devices> Comma-separated list of the names of the devices.

Example:

```
:SENSe1:EFRontend1:CHANnel1:EXTDevice1:LIST?
//Result:
//"fe170_z50","fe170_z01"
```

Usage: Query only

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:REFResh

Scans the ports of the external frontend and refreshes the display with detected information on connected devices. This function is useful after connecting a new device to the frontend.

Suffix:

| | |
|------|-------------------------|
| <ch> | 1..n For future use. |
|------|-------------------------|

<di> 1..n
irrelevant

Example: SENSE1:EFRontend1:CHANnel:EXTDevice1:REFresh

Usage: Event

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:FREQuency:MAXimum?

Queries the upper limit of the supported frequency range of the connected device.

Suffix:

<ch> 1..n
For future use.

<di> 1..n
Connected external device

Return values:

<RFFrequency> numeric value
Maximum frequency
Default unit: Hz

Example: SENS:EFR:EXTD1:FREQ:MAX?
//Result:
1700000000000

Usage: Query only

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:FREQuency:MINimum?

Queries the lower limit of the supported frequency range of the connected device.

Suffix:

<ch> 1..n
For future use.

<di> 1..n
Connected external device

Return values:

<RFFrequency> numeric value
Minimum frequency
Default unit: Hz

Example: SENS:EFR:EXTD1:FREQ:MIN?
//Result:
1100000000000

Usage: Query only

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:GAIN?

Queries the gain provided by a connected external amplifier.

Suffix:

| | |
|------|-----------------------------------|
| <ch> | 1..n For future use. |
| <di> | 1..n Connected external device |

Return values:

| | |
|--------|-----------------------------------|
| <Gain> | numeric value Default unit: dB |
|--------|-----------------------------------|

Example: SENSe1:EFRontend1:CHANnel1:EXTDevice1:GAIN?
 //Result:
 //10

Usage: Query only

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:NAME?

Queries the name of the external device for reference.

Suffix:

| | |
|------|-----------------------------------|
| <ch> | 1..n For future use. |
| <di> | 1..n Connected external device |

Return values:

| | |
|--------|--------|
| <Type> | string |
|--------|--------|

Example: SENS:EFR:CHAN:EXTD1:NAME?
 //Result:
 //'fe170_z50'

Usage: Query only

[SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:TYPE?

Queries the type of the detected device for reference.

Suffix:

| | |
|------|-----------------------------------|
| <ch> | 1..n For future use. |
| <di> | 1..n Connected external device |

Return values:

| | |
|--------|------------------------|
| <Type> | 'Amplifier' 'Filter' |
|--------|------------------------|

Example: SENSe1:EFrontend1:CHANnel1:EXTDevice1:TYPE?
 //Result:
 //'Filter'

Usage: Query only

Format of selftest result file

As a result of the selftest, an XML file with test details is created. It contains the following information in the specified order. Mandatory elements and attributes are indicated in bold font.

| Element | Attributes | Description |
|---------------------------------|--------------------------------|--|
| <Sequence> | | Main element |
| | Name | ="Selftest" |
| | Description | Optional description of the test process |
| | FirmwareVersion | Firmware version of the controlling instrument (FSW) |
| | FrontendLibrary-Version | Version of the <code>control.dll</code> with the format <code>x.y.z</code> |
| | FrontendServerVersion | Version of the RRH server with the format <code>x.y.z</code> (FE44A only) |
| | Date | Date the selftest was performed, with the format <code>dd/mm/yyyy</code> |
| | Time | Time the selftest was performed, with the format <code>hh:mm:ss</code> |
| | State | Test result state, combined result of all <SequenceCategory> s: "PASSED"/ "FAILED" |
| | Version | For internal use. |
| | Comment | Optional comment on the test process |
| <SequenceCategory> | | Set of test steps |
| | Name | Name of the test sequence, e.g. "Frontend voltages" |
| | Description | Optional description of the test sequence |
| | State | Test sequence result state, combined result of all <SequenceStep> s: "PASSED"/ "FAILED" |
| | Version | For internal use. |
| | Comment | Optional comment on the test sequence |
| <SequenceStep> | | Subelement of <SequenceCategory> for an individual test step |
| | Name | Name of the individual test step, e.g. FE1_3V3 |
| | Description | Optional description of the test step |
| | LimitLow | Optional: lower limit to be checked |
| | LimitHigh | Optional: upper limit to be checked |
| | MeasValue | Optional: measured value |

| Element | Attributes | Description |
|---------|------------|--|
| | Unit | Optional: unit of the measured value |
| | State | Test step result state: "PASSED"/ "FAILED" |
| | Version | For internal use. |
| | Comment | Optional comment on the test step |

Example for selftest result xml file

```
<?xml version="1.0" encoding="UTF-8"?>
<Sequence xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:noNamespaceSchemaLocation="SelfTest_Schema.xsd">
  <Name>DeviceCheck</Name>
  <FirmwareVersion>1.50-21.1.1.0 Beta</FirmwareVersion>
  <FrontendLibraryVersion>0.8.0</FrontendLibraryVersion>
  <Date>15/01/2021</Date>
  <Time>08:51:35</Time>
  <State>FAILED</State>
  <Version>1.0.0</Version>
  <SequenceCategory>
    <Name>Frontend Voltages</Name>
    <Description>test description</Description>
    <State>FAILED</State>
    <Version>1.0.0</Version>
    <Type>Diagnose</Type>
    <SequenceStep>
      <Name>FE1_3V3</Name>
      <LimitLow>3.000</LimitLow>
      <LimitHigh>3.600</LimitHigh>
      <MeasValue>3.311</MeasValue>
      <State>PASSED</State>
      <Version>1.0.0</Version>
    </SequenceStep>
    <SequenceStep>
      <Name>FE1_5V</Name>
      <LimitLow>4.250</LimitLow>
      <LimitHigh>5.750</LimitHigh>
      <MeasValue>5.027</MeasValue>
      <State>PASSED</State>
      <Version>1.0.0</Version>
    </SequenceStep>
    <SequenceStep>
      <Name>FE1_6V5</Name>
      <LimitLow>6.000</LimitLow>
      <LimitHigh>7.000</LimitHigh>
      <MeasValue>5.893</MeasValue>
      <State>FAILED</State>
      <Version>1.0.0</Version>
    </SequenceStep>
  </SequenceCategory>
</Sequence>
```

```

<SequenceStep>
  <Name>FE1_M3V3</Name>
  <LimitLow>-3.600</LimitLow>
  <LimitHigh>-3.000</LimitHigh>
  <MeasValue>3.347</MeasValue>
  <State>FAILED</State>
  <Version>1.0.0</Version>
</SequenceStep>
</SequenceCategory>
<SequenceCategory>
  <Name>Frontend Temperature</Name>
  <Description>test description</Description>
  <State>PASSED</State>
  <Version>1.0.0</Version>
  <Type>Diagnose</Type>
  <SequenceStep>
    <Name>TEMP_FE1</Name>
    <LimitLow>0.000</LimitLow>
    <LimitHigh>60.000</LimitHigh>
    <MeasValue>39.300</MeasValue>
    <State>PASSED</State>
    <Version>1.0.0</Version>
  </SequenceStep>
</SequenceCategory>
<SequenceCategory>
  <Name>Synthesizer Voltage</Name>
  <Description>test description</Description>
  <State>PASSED</State>
  <Version>1.0.0</Version>
  <Type>Diagnose</Type>
  <SequenceStep>
    <Name>SYNTH_3V4</Name>
    <LimitLow>3.200</LimitLow>
    <LimitHigh>3.910</LimitHigh>
    <MeasValue>3.576</MeasValue>
    <State>PASSED</State>
    <Version>1.0.0</Version>
  </SequenceStep>
  <SequenceStep>
    <Name>SYNTH_5V4_SYN</Name>
    <LimitLow>4.860</LimitLow>
    <LimitHigh>5.940</LimitHigh>
    <MeasValue>5.405</MeasValue>
    <State>PASSED</State>
    <Version>1.0.0</Version>
  </SequenceStep>
  <SequenceStep>
    <Name>SYNTH_5V4_YIG</Name>
    <LimitLow>4.860</LimitLow>
    <LimitHigh>5.940</LimitHigh>

```

```

    <MeasValue>5.438</MeasValue>
    <State>PASSED</State>
    <Version>1.0.0</Version>
  </SequenceStep>
</SequenceStep>
<SequenceStep>
  <Name>SYNTH_M5V</Name>
  <LimitLow>-5.500</LimitLow>
  <LimitHigh>-4.500</LimitHigh>
  <MeasValue>-4.948</MeasValue>
  <State>PASSED</State>
  <Version>1.0.0</Version>
</SequenceStep>
</SequenceStep>
<SequenceStep>
  <Name>SYNTH_REF5V</Name>
  <LimitLow>4.500</LimitLow>
  <LimitHigh>5.500</LimitHigh>
  <MeasValue>5.031</MeasValue>
  <State>PASSED</State>
  <Version>1.0.0</Version>
</SequenceStep>
</SequenceCategory>
<SequenceCategory>
  <Name>Supply Voltage</Name>
  <Description>test description</Description>
  <State>PASSED</State>
  <Version>1.0.0</Version>
  <Type>Diagnose</Type>
  <SequenceStep>
    <Name>SUPPLY_12V</Name>
    <LimitLow>10.800</LimitLow>
    <LimitHigh>13.200</LimitHigh>
    <MeasValue>11.909</MeasValue>
    <State>PASSED</State>
    <Version>1.0.0</Version>
  </SequenceStep>
  <SequenceStep>
    <Name>SUPPLY_3V3D</Name>
    <LimitLow>2.970</LimitLow>
    <LimitHigh>3.630</LimitHigh>
    <MeasValue>3.318</MeasValue>
    <State>PASSED</State>
    <Version>1.0.0</Version>
  </SequenceStep>
  <SequenceStep>
    <Name>SUPPLY_4V</Name>
    <LimitLow>3.650</LimitLow>
    <LimitHigh>4.460</LimitHigh>
    <MeasValue>4.053</MeasValue>
    <State>PASSED</State>
    <Version>1.0.0</Version>
  </SequenceStep>

```

```

</SequenceStep>
<SequenceStep>
  <Name>SUPPLY_6V</Name>
  <LimitLow>5.400</LimitLow>
  <LimitHigh>6.600</LimitHigh>
  <MeasValue>6.076</MeasValue>
  <State>PASSED</State>
  <Version>1.0.0</Version>
</SequenceStep>
<SequenceStep>
  <Name>SUPPLY_M5V</Name>
  <LimitLow>-6.050</LimitLow>
  <LimitHigh>-4.950</LimitHigh>
  <MeasValue>-5.507</MeasValue>
  <State>PASSED</State>
  <Version>1.0.0</Version>
</SequenceStep>
</SequenceCategory>
</Sequence>

```

Programming example: Configuring an external frontend

The following example describes how to configure RF frontend settings in remote operation.

```

// Prepare the instrument
// Preset
*RST
// Create new IQ-Analyzer channel
:INST:SEL IQ
// Enable 640MHz Reference
:ROSC:O640 ON

//Enable general use of external frontend
SENSe:EFRontend:STATe ON
//Configure connection to ext. FE named "FE44S-1000826"
SENSe:EFRontend:CONNECTION:CONFig "FE44S","FE44S-1000826"
//Activate exclusive use of frontend by FSW.
SENSe:EFRontend:CONNECTION:STATe ON

//For demonstration purposes only: assign a static IP address
SENSe:EFRontend:NETWork "123.456.7.8", "255.255.255.00", OFF

// Query information about the connected RF frontend.
SENSe:EFRontend:CONNECTION:CSTATe?
// Response: 1 (connected)
SENSe:EFRontend:IDN?
////Result: Rohde&Schwarz,FE44S,1234.5678K00/123456,0.8.0

// Specify frontend settings
//Query available intermediate frequency bands

```

```

SENSe:EFRontend:FREQuency:BCONfig:LIST?
//Result: "IF HIGH", "IF LOW"
//Use high IF
SENSe:EFRontend:FREQuency:BCONfig:SElect "IF HIGH"
//Query used intermediate frequency
SENSe:EFRontend:FREQuency:IFRequency?
//Result: 8.595000000

//Query available reference frequencies
SENSe:EFRontend:FREQuency:REFeRence:LIST?
//Result: 10000000,640000000,1000000000
//Use 640 MHz reference
SENSe:EFRontend:FREQuency:REFeRence 640000000

// Query ranges of the operating frequency band.
SENSe:EFRontend:FREQuency:BAND1:LOWer?
// Response in Hz: "24000000000" (= 24 GHz)
SENSe:EFRontend:FREQuency:BAND1:UPPer?
// Response in Hz: "44000000000" (= 44 GHz)

// Add cable correction data by loading an *.s2p file.
SENSe:EFRontend:ALIGnment:FILE "C:\R_S\Instr\user\external_frontends\FE44S\
touchstonefiles\if_default_cable_1347_7552_00.s2p"
SENSe:EFRontend:ALIGnment:STATe ON

//Update FW version on frontend (only available if external frontend firmware
//is incompatible to FSW firmware)
SENSe:EFRontend:FWUPdate
//Perform a selftest on the frontend and query results
SENSe:EFRontend:SELFtest?
//Result: 0 (no errors)
SENSe:EFRontend:SELFtest:RESult?
//Result: "<?xml version="1.0" encoding="UTF-8"?>
//<Sequence xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
//xsi:noNamespaceSchemaLocation="
//<Name>DeviceCheck</Name>
//<FirmwareVersion>1.50-21.1.1.0 Beta</FirmwareVersion>
//..."

```

Programming example 2: Configuring an external frontend with a connected amplifier

The following example demonstrates how to configure an R&S FE170SR external frontend with a connected amplifier.

Some commands may not be necessary as they reflect the default settings; however, they are included to demonstrate the command usage.

```

// Prepare the instrument
// Preset
*RST
// Create new IQ-Analyzer channel

```

```

:INST:SEL IQ
// Enable 640MHz Reference
:ROSC:O640 ON

//Enable general use of external frontend
SENSE:EFRontend:STATe ON
//Configure connection to ext. FE named "FE170SR-123456"
SENSE:EFRontend:CONNection:CONFig "FE170SR","FE170SR-123456"
//Activate exclusive use of frontend by FSW.
SENSE:EFRontend:CONNection:STATe ON

// Query information about the connected RF frontend.
SENSE:EFRontend:CONNection:CSTATe?
// Response: 1 (connected)
SENSE:EFRontend:IDN?
////Result: Rohde&Schwarz,FE170SR,1234.5678K00/123456,0.8.0

// Specify frontend settings
//Query available intermediate frequency bands
SENSE:EFRontend:FREQuency:BCONfig:LIST?
//Result: "Spur Optimized","EVM Optimized"
//Use spur optimized
SENSE:EFRontend:FREQuency:BCONfig:SElect "Spur Optimized"
//Query used intermediate frequency
SENSE:EFRontend:FREQuency:IFREquency?
//Result: 9940000000

//Query available reference frequencies
SENSE:EFRontend:FREQuency:REFerence:LIST?
//Result: 10000000,640000000,1000000000
//Use 1 GHz reference
SENSE:EFRontend:FREQuency:REFerence 1000000000

// Query ranges of the operating frequency band.
SENSE:EFRontend:FREQuency:BAND1:LOWer?
// Response in Hz: "110000000000" (= 110 GHz)
SENSE:EFRontend:FREQuency:BAND1:UPPer?
// Response in Hz: "170000000000" (= 170 GHz)

// Add cable correction data by loading an *.s2p file.
SENSE:EFRontend:ALIGNment:FILE "C:\R_S\Instr\user\external_frontends\FE170SR\
touchstonefiles\if_default_cable_1348_3850_00.s2p"
SENSE:EFRontend:ALIGNment:STATe ON

//Configure external amplifier named "fe170_z50" connected to frontend
//Refresh and query the list of detected external devices
SENSE:EFRontend:EXTDevice:REFresh
SENSE:EFRontend:EXTDevice:LIST?
//Result:
//"fe170_z50"
//Query the type of the external device
SENSE:EFRontend:EXTDevice:TYPE?

```

```

//Result:
//'Amplifier'
//Query the supported frequency range of the amplifier
SENSe:EFRontend:EXTDevicel:FREQuency:MINimum?
//Result:
//110000000000
SENSe:EFRontend:EXTDevicel:FREQuency:MAXimum?
//Result:
//170000000000
//Query the gain of the amplifier
SENSe:EFRontend:EXTDevicel:GAIN?
//Result:
//10
//Only for demonstration purposes:
//Load and enable a correction file for the amplifier.
//The correction file is automatically considered if the IX cable is used to connect
//the external device to the frontend.
SENSe:EFRontend:EXTDevicel:CORRection:FILE 'C:\temp\ExtDev_Corr.s2p'
SENSe:EFRontend:EXTDevicel:CORRection:STATE ON
//Check if the loaded file is valid
SENSe:EFRontend:EXTDevicel:CORRection:VALid?

```

11.5.2.5 Configuring digital I/Q input and output

Useful commands for digital I/Q data described elsewhere:

- `INP:SEL DIQ` (see `INPut:SElect` on page 393)
- `TRIGger[:SEquence]:LEVel:BBPower` on page 477

Remote commands exclusive to digital I/Q data input and output

| | |
|--|-----|
| <code>INPut:DIQ:CDEvice</code> | 432 |
| <code>INPut:DIQ:RANGe:COUPling</code> | 433 |
| <code>INPut:DIQ:RANGe[:UPPer]</code> | 433 |
| <code>INPut:DIQ:RANGe[:UPPer]:AUTO</code> | 433 |
| <code>INPut:DIQ:RANGe[:UPPer]:UNIT</code> | 433 |
| <code>INPut:DIQ:SRATe</code> | 434 |
| <code>INPut:DIQ:SRATe:AUTO</code> | 434 |
| <code>OUTPut:DIQ[:STATe]</code> | 434 |
| <code>OUTPut<up>:DIQ:CDEvice?</code> | 434 |

`INPut:DIQ:CDEvice`

Queries the current configuration and the status of the digital I/Q input from the optional "Digital Baseband" interface.

For details see the section "Interface Status Information" for the optional "Digital Baseband" interface in the FSW I/Q Analyzer User Manual.

Return values:

<Value>

Example: INP:DIQ:CDEV?
 Result:
 1, SMW200A, 101190, BBMM 1 OUT,
 1000000000, 2000000000, Passed, Passed, 1, 1. #QNAN

INPut:DIQ:RANGe:COUPling <State>

If enabled, the reference level for digital input is adjusted to the full scale level automatically if the full scale level changes.

Is only available if the optional "Digital Baseband" interface is installed.

Parameters:

<State> ON | OFF | 1 | 0
 *RST: 0

INPut:DIQ:RANGe[:UPPer] <Level>

Defines or queries the "Full Scale Level", i.e. the level that corresponds to an I/Q sample with the magnitude "1".

Is only available if the optional "Digital Baseband" interface is installed.

Parameters:

<Level> Range: 1 μ V to 7.071 V
 *RST: 1 V
 Default unit: DBM

INPut:DIQ:RANGe[:UPPer]:AUTO <State>

If enabled, the digital input full scale level is automatically set to the value provided by the connected device (if available).

Is only available if the optional "Digital Baseband" interface is installed.

Parameters:

<State> ON | OFF | 1 | 0
 *RST: 0

INPut:DIQ:RANGe[:UPPer]:UNIT <Level>

Defines the unit of the full scale level. The availability of units depends on the measurement application you are using.

Is only available if the optional "Digital Baseband" interface is installed.

Parameters:

<Level> DBM | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere
 *RST: Volt

INPut:DIQ:SRATe <SampleRate>

Specifies or queries the sample rate of the input signal from the optional "Digital Baseband" interface.

Note: the final user sample rate of the FSW can differ and is defined using `SENS:DEM:PRAT` (see `[SENSe:]DDEMod:PRATe` on page 471).

Parameters:

<SampleRate> Range: 1 Hz to 20 GHz
 *RST: 32 MHz
 Default unit: HZ

Example: INP:DIQ:SRAT 200 MHz

INPut:DIQ:SRATe:AUTO <State>

If enabled, the sample rate of the digital I/Q input signal is set automatically by the connected device.

Is only available if the optional "Digital Baseband" interface is installed.

Parameters:

<State> ON | OFF | 1 | 0
 *RST: 0

OUTPut:DIQ[:STATe] <State>

Turns continuous output of I/Q data to the optional "Digital Baseband" interface on and off.

Using the digital input and digital output simultaneously is not possible.

If digital baseband output is active, the sample rate is restricted to 100 MHz (200 MHz if enhanced mode is possible; max. 160 MHz bandwidth).

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on

Example: OUTP:DIQ ON

Manual operation: See "[Digital Baseband Output](#)" on page 215

OUTPut<up>:DIQ:CDEvice?

Queries the current configuration and the status of the digital I/Q data output to the optional "Digital Baseband" interface.

Suffix:

<up>

Return values:

| | |
|--------------------------|---|
| <ConnState> | Defines whether a device is connected or not. 0 No device is connected. 1 A device is connected. |
| <DeviceName> | Device ID of the connected device |
| <SerialNumber> | Serial number of the connected device |
| <PortName> | Port name used by the connected device |
| <SampleRate> | Current data transfer rate of the connected device in Hz |
| <MaxTransferRate> | Maximum data transfer rate of the connected device in Hz |
| <ConnProtState> | State of the connection protocol which is used to identify the connected device. Not Started Has to be Started Started Passed Failed Done |
| <PRBSTestState> | State of the PRBS test. Not Started Has to be Started Started Passed Failed Done |
| <NotUsed> | to be ignored |
| <Placeholder> | for future use; currently "0" |
| Example: | OUTP:DIQ:CDEV? Result: 1,SMW200A,101190,CODER 1 IN, 0,200000000,Passed,Done,0,0 |
| Usage: | Query only |
| Manual operation: | See "Output Settings Information" on page 215 See "Connected Instrument" on page 215 |

11.5.2.6 Configuring input via the optional Analog Baseband interface

The following commands are required to control the optional "Analog Baseband" interface in a remote environment. They are only available if this option is installed.

For more information on the "Analog Baseband" interface, see the FSW I/Q Analyzer User Manual.

Useful commands for Analog Baseband data described elsewhere:

- `INP:SEL AIQ` (see `INPut:SElect` on page 393)
- `[SENSe:]FREQuency:CENTer` on page 455
- `[SENSe:]SWAPiq` on page 472

Commands for the Analog Baseband calibration signal are described in the FSW User Manual.

Remote commands exclusive to Analog Baseband data input and output

| | |
|---|-----|
| <code>INPut:IQ:BALanced[:STATe]</code> | 436 |
| <code>INPut:IQ:FULLscale:AUTO</code> | 436 |
| <code>INPut:IQ:FULLscale[:LEVel]</code> | 437 |
| <code>INPut:IQ:IMPedance</code> | 437 |
| <code>INPut:IQ:IMPedance:PTYPE</code> | 437 |
| <code>INPut:IQ:TYPE</code> | 438 |
| <code>CALibration:AIQ:HATiming[:STATe]</code> | 438 |

`INPut:IQ:BALanced[:STATe]` <State>

Defines whether the input is provided as a differential signal via all 4 Analog Baseband connectors or as a plain I/Q signal via 2 single-ended lines.

Parameters:

<State> ON | OFF | 1 | 0
 ON | 1
 Differential
 OFF | 0
 Single ended
 *RST: 1

Example: `INP:IQ:BAL OFF`

`INPut:IQ:FULLscale:AUTO` <State>

Defines whether the full scale level (i.e. the maximum input power on the Baseband Input connector) is defined automatically according to the reference level, or manually.

Parameters:

<State> **ON | 1**
 Automatic definition

OFF | 0

Manual definition according to `INPut:IQ:FULLscale[:LEVel]` on page 437

*RST: 1

Example: `INP:IQ:FULL:AUTO OFF`

INPut:IQ:FULLscale[:LEVel] <PeakVoltage>

Defines the peak voltage at the Baseband Input connector if the full scale level is set to manual mode (see `INPut:IQ:FULLscale:AUTO` on page 436).

Parameters:

<PeakVoltage> 0.25 V | 0.5 V | 1 V | 2 V

Peak voltage level at the connector.

For probes, the possible full scale values are adapted according to the probe's attenuation and maximum allowed power.

*RST: 1V

Default unit: V

Example: `INP:IQ:FULL 0.5V`

INPut:IQ:IMPedance <Impedance>

Selects the nominal input impedance of the analog baseband input.

Not available for input from the optional "Digital Baseband" interface.

For input from the RF input, use the `INPut:IMPedance` command.

Parameters:

<Impedance> 50 | 75

numeric value

User-defined impedance from 50 Ohm to 100000000 Ohm (=100 MOhm)

User-defined values are only available for:

Spectrum application

I/Q Analyzer

*RST: 50

Default unit: OHM

Example: `INP:IQ:IMP 75`

Manual operation: See "[Impedance](#)" on page 208

INPut:IQ:IMPedance:PTYPe <PadType>

Defines the type of matching pad used for impedance conversion for analog baseband input.

For RF input, use the `INPut:IMPedance:PTYPe` command.

Parameters:

<PadType> SRESistor | MLPad
SRESistor
 Series-R
MLPad
 Minimum Loss Pad
 *RST: SRESistor

Example:

```
INP:IQ:IMP 100
INP:IQ:IMP:PTYP MLP
```

Manual operation: See "[Impedance](#)" on page 208

INPut:IQ:TYPE <DataType>

Defines the format of the input signal.

Parameters:

<DataType> IQ | I | Q
IQ
 The input signal is filtered and resampled to the sample rate of the application. Two input channels are required for each input signal, one for the in-phase component, and one for the quadrature component.
I
 The in-phase component of the input signal is filtered and resampled to the sample rate of the application. If the center frequency is not 0, the in-phase component of the input signal is down-converted first (Low IF I).
Q
 The quadrature component of the input signal is filtered and resampled to the sample rate of the application. If the center frequency is not 0, the quadrature component of the input signal is down-converted first (Low IF Q).
 *RST: IQ

Example:

```
INP:IQ:TYPE Q
```

CALibration:AIQ:HATiming[:STATE] <State>

Activates a mode with enhanced timing accuracy between analog baseband, RF and external trigger signals.

For more information, see the FSW I/Q Analyzer and I/Q Input User Manual.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: CAL:AIQ:HAT:STAT ON**11.5.2.7 Setting up probes**

Modular probes can be connected to the RF input connector of the FSW.

For details see the FSW User Manual.

| | |
|-----------------------------------|-----|
| [SENSe:]PROBe<pb>:ID:PARTnumber? | 439 |
| [SENSe:]PROBe<pb>:ID:SRNumber? | 439 |
| [SENSe:]PROBe<pb>:SETup:ATTRatio | 440 |
| [SENSe:]PROBe<pb>:SETup:CMOOffset | 440 |
| [SENSe:]PROBe<pb>:SETup:DMOOffset | 441 |
| [SENSe:]PROBe<pb>:SETup:MODE | 441 |
| [SENSe:]PROBe<pb>:SETup:NAME? | 441 |
| [SENSe:]PROBe<pb>:SETup:NMOOffset | 442 |
| [SENSe:]PROBe<pb>:SETup:PMODE | 442 |
| [SENSe:]PROBe<pb>:SETup:PMOOffset | 443 |
| [SENSe:]PROBe<pb>:SETup:STATe? | 443 |
| [SENSe:]PROBe<pb>:SETup:TYPE? | 444 |

[SENSe:]PROBe<pb>:ID:PARTnumber?

Queries the R&S part number of the probe.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Return values:

<PartNumber>

Example: //Query part number
 PROB3:ID:PART?

Usage: Query only

[SENSe:]PROBe<pb>:ID:SRNumber?

Queries the serial number of the probe.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Return values:

<SerialNo>

Example:

```
//Query serial number
PROB3:ID:SRN?
```

Usage:

Query only

[SENSe:]PROBe<pb>:SETup:ATTRatio <AttenuationRatio>

Defines the attenuation applied to the input at the probe. This setting is only available for modular probes.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Parameters:

<AttenuationRatio> **10**
 Attenuation by 20 dB (ratio= 10:1)
2
 Attenuation by 6 dB (ratio= 2:1)
 *RST: 10
 Default unit: DB

[SENSe:]PROBe<pb>:SETup:CMOffset <CMOffset>

Sets the common mode offset. The setting is only available if a differential probe in CM-mode is connected to the FSW.

If the probe is disconnected, the common mode offset of the probe is reset to 0.0 V.

Note that if the offset for DM-mode or CM-mode is changed, the offsets for the P-mode and N-mode are adapted accordingly, and vice versa.

For details see the FSW User Manual.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Parameters:

<CMOffset> Offset of the mean voltage between the positive and negative input terminal vs. ground
 Range: -16 V to +16 V
 Default unit: V

[SENSe:]PROBE<pb>:SETup:DMOffset <DMOffset>

Sets the DM-mode offset. The setting is only available if a modular probe in DM-mode is connected to the FSW.

If the probe is disconnected, the DM-mode offset of the probe is reset to 0.0 V.

Note that if the offset for DM-mode or CM-mode is changed, the offsets for the P-mode and N-mode are adapted accordingly, and vice versa.

For details see the FSW User Manual.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Parameters:

<DMOffset> Voltage offset between the positive and negative input terminal
 Default unit: V

[SENSe:]PROBE<pb>:SETup:MODE <Mode>**Suffix:**

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Parameters:

<Mode> RSINgle | NOAction
RSINgle
 Run single: starts one data acquisition.
NOAction
 Nothing is started on pressing the micro button.

[SENSe:]PROBE<pb>:SETup:NAME?

Queries the name of the probe.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Return values:

<Name> String containing the name of the probe.

Example:

```
//Query name of the probe
PROB3:SET:NAME?
```

Usage:

Query only

[SENSe:]PROBe<pb>:SETup:NMOffset <NMOffset>

Sets the N-mode offset. The setting is only available if a modular probe in N-mode is connected to the FSW. The maximum voltage difference between the positive and negative input terminals is 16 V.

If the probe is disconnected, the N-mode offset of the probe is reset to 0.0 V.

Note that if the offset for DM-mode or CM-mode is changed, the offsets for the P-mode and N-mode are adapted accordingly, and vice versa.

For details see the FSW User Manual.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Parameters:

<NMOffset> The voltage offset between the negative input terminal and ground.
 Default unit: V

[SENSe:]PROBe<pb>:SETup:PMODE <Mode>

Determines the mode of a multi-mode modular probe.

For details see the FSW User Manual.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Parameters:

<Mode> CM | DM | PM | NM
DM
 Voltage between the positive and negative input terminal
CM
 Mean voltage between the positive and negative input terminal vs. ground
PM
 Voltage between the positive input terminal and ground
NM
 Voltage between the negative input terminal and ground

Example:

```
SENS:PROB:SETU:PMOD PM
Sets the probe to P-mode.
```

[SENSe:]PROBe<pb>:SETup:PMOffset <PMOffset>

Sets the P-mode offset. The setting is only available if a modular probe in P-mode is connected to the FSW. The maximum voltage difference between the positive and negative input terminals is 16 V.

If the probe is disconnected, the P-mode offset of the probe is reset to 0.0 V.

Note that if the offset for DM-mode or CM-mode is changed, the offsets for the P-mode and N-mode are adapted accordingly, and vice versa.

For details see the FSW User Manual.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Parameters:

<PMOffset> The voltage offset between the positive input terminal and ground.
 Default unit: V

[SENSe:]PROBe<pb>:SETup:STATe?

Queries if the probe at the specified connector is active (detected) or not active (not detected).

To switch the probe on, i.e. activate input from the connector, use `INP:SEL:AIQ` (see [INPut:SElect](#) on page 393).

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Return values:

<State> DETected | NDETECTED

Example:

```
//Query connector state
PROB3:SET:STAT?
```

Usage:

Query only

[SENSe:]PROBe<pb>:SETup:TYPE?

Queries the type of the probe.

Suffix:

<pb> 1..n
 Selects the connector:
 1 = Baseband Input I
 2 = Baseband Input Q
 3 = RF

Return values:

<Type> String containing one of the following values:
 -"None" (no probe detected)
 -"active differential"
 -"active single-ended"
 -"active modular"

Example:

```
//Query probe type
PROB3:SET:TYPE?
```

Usage:

Query only

11.5.2.8 Configuring the 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000)

The following commands are required to use the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000).

For details on prerequisites and restrictions see the FSW I/Q Analyzer and I/Q Input User Manual.

Remote commands exclusive to configuring the 2 GHz / 5 GHz bandwidth extensions:

| | |
|---|-----|
| EXPort:WAVeform:DISPlayoff..... | 445 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope[:STATe]..... | 445 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:ALIGnment:STEP<st>[:STATe]..... | 446 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:ALIGnment:DATE..... | 446 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:ALIGnment:FALignment..... | 447 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:IDN..... | 447 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:LEDState..... | 447 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:PSMode[:STATe]..... | 448 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:SRATe..... | 448 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:TCPip..... | 448 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:VDEVice?..... | 449 |
| SYSTem:COMMunicate:RDEVice:OSCilloscope:VFIRmware?..... | 449 |
| TRIGger[:SEquence]:OSCilloscope:COUPLing..... | 449 |

EXPort:WAVeform:DISPlayoff <FastExport>

Enables or disables the display update on the oscilloscope during data acquisition with the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000).

Note that this command is **only executable by the oscilloscope**, not by the FSW.

As soon as the FSW-B2000/B5000 is activated, the display on the oscilloscope is turned off to improve performance during data export. As soon as the FSW closes the connection to the oscilloscope, the display is reactivated and the oscilloscope can be operated as usual. However, if the LAN connection is lost for any reason, the display of the oscilloscope remains deactivated. Use this command to re-activate it.

For details on the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000), see FSW I/Q Analyzer and I/Q Input User Manual.

Parameters:

<FastExport> ON | OFF | 1 | 0
 ON | 1: Disables the display update for maximum export speed.
 OFF | 0: Enables the display update. The export is slower.
 *RST: 1

SYSTem:COMMunicate:RDEVice:OSCilloscope[:STATe] <State>

Activates the optional 2 GHz / 5 GHz bandwidth extension (R&S FSW-B2000/B5000).

Note: Manual operation on the connected oscilloscope, or remote operation other than by the FSW, is not possible while the B2000/B5000 option is active.

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on

Example: `SYST:COMM:RDEV:OSC ON`

SYSTem:COMMunicate:RDEvice:OSCilloscope:ALIGNment:STEP<st>[:STATe]
<State>

Performs the alignment of the oscilloscope itself and the oscilloscope ADC for the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000). The correction data for the oscilloscope (including the connection cable between the FSW and the oscilloscope) is recorded. As a result, the state of the alignment is returned.

Alignment is required only once after setup. If alignment was performed successfully, the alignment data is stored on the oscilloscope.

Thus, alignment need only be repeated if one of the following applies:

- A new oscilloscope is connected to the "IF OUT 2 GHz/ IF OUT 5 GHz" connector of the FSW
- A new cable is used between the "IF OUT 2 GHz/ IF OUT 5 GHz" connector of the FSW and the oscilloscope
- A power splitter is inserted between the "IF OUT 2 GHz/ IF OUT 5 GHz" connector of the FSW and the oscilloscope
- New firmware is installed on the oscilloscope or the FSW

Suffix:

<st> 1..n

Parameters:

<State> Returns the state of the second alignment step.
ON | 1
 Alignment was successful.
OFF | 0
 Alignment was not yet performed (successfully).

Example: `SYST:COMM:RDEV:OSC:ALIG:STEP?`
`//Result: 1`

SYSTem:COMMunicate:RDEvice:OSCilloscope:ALIGNment:DATE <Date>

Returns the date of alignment of the "IF OUT 2 GHz/ IF OUT 5 GHz" to the oscilloscope for the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000).

Parameters:

<Date> Returns the date of alignment.

Example: `SYST:COMM:RDEV:OSC:ALIG:DATE?`
`//Result: 2014-02-28`

SYSTem:COMMunicate:RDEvice:OSCilloscope:ALIGNment:FALignment <State>

Performs a self-alignment on the oscilloscope before the B2000/B5000 alignment on the FSW.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off
ON | 1
Switches the function on
*RST: 0

Example: SYST:COMM:RDEV:OSC:ALIG:FAL ON

SYSTem:COMMunicate:RDEvice:OSCilloscope:IDN <IDString>

Returns the identification string of the oscilloscope connected to the FSW.

Parameters:

<IDString>

Example: SYST:COMM:RDEV:OSC:IDN?
//Result: Rohde&Schwarz,RTO,
1316.1000k14/200153,2.45.1.1

SYSTem:COMMunicate:RDEvice:OSCilloscope:LEDState <Color>

Returns the state of the LAN connection to the oscilloscope for the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000).

Parameters:

<Color> OFF | SUCCEssful | ERRor
SUCCEssful
Connection to the instrument has been established successfully.
OFF
No instrument configured.
ERRor
Connection to the instrument could not be established.
Check the connection between the FSW and the oscilloscope,
and make sure the IP address of the oscilloscope has been
defined (see [SYSTem:COMMunicate:RDEvice:OSCilloscope:TCPip](#) on page 448).

Example: SYST:COMM:RDEV:OSC:LEDS?
//Result: 'SUCC'

SYSTem:COMMunicate:RDEvice:OSCilloscope:PSMode[:STATe] <State>

Activates the use of the power splitter inserted between the "IF 2 GHZ OUT" connector of the FSW and the "CH1" and "CH3" input connectors of the oscilloscope. Note that this mode requires an additional alignment with the power splitter.

For details see the FSW I/Q Analyzer and I/Q Input User Manual.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: SYST:COMM:RDEV:OSC:PSM ON

SYSTem:COMMunicate:RDEvice:OSCilloscope:SRATe <Rate>

Determines whether the 10 GHz mode (default) or 20 GHz mode of the connected oscilloscope is used. The 20 GHz mode achieves a higher decimation gain, but reduces the record length by half.

Parameters:

<Rate> 10 GHz | 20 GHz
 No other sample rate values are allowed.
 *RST: 10 GHz
 Default unit: HZ

Example: TRAC:IQ:SRAT?
 //Result: 100000000
 TRAC:IQ:RLEN?
 //Result: 3128
 SYST:COMM:RDEV:OSC:SRAT 20GHZ
 TRAC:IQ:SRAT?
 //Result: 200000000
 TRAC:IQ:RLEN?
 //Result: 1564

SYSTem:COMMunicate:RDEvice:OSCilloscope:TCPip <Address>

Defines the TCPIP address or computer name of the oscilloscope connected to the FSW via LAN.

Note: The IP address is maintained after a [PRESET], and is transferred between applications.

Parameters:

<Address> computer name or IP address

Example: SYST:COMM:RDEV:OSC:TCP '192.0.2.0'

Example: `SYST:COMM:RDEV:OSC:TCP 'FSW43-12345'`

SYSTem:COMMunicate:RDEvice:OSCilloscope:VDEvice?

Queries whether the connected instrument is supported by the 2 GHz / 5 GHz bandwidth extension option(B2000/B5000).

For details see the 2 GHz bandwidth extension basics chapter in the FSW I/Q Analyzer and I/Q Input User Manual.

Return values:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: `SYST:COMM:RDEV:OSC:VDEV?`

Usage: Query only

SYSTem:COMMunicate:RDEvice:OSCilloscope:VFIRmware?

Queries whether the firmware on the connected oscilloscope is supported by the 2 GHz / 5 GHz bandwidth extension (B2000/B5000) option.

Return values:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Example: `SYST:COMM:RDEV:OSC:VFIR?`

Usage: Query only

TRIGger[:SEQuence]:OSCilloscope:COUPling <CoupType>

Configures the coupling of the external trigger to the oscilloscope.

Parameters:

<CoupType> Coupling type
DC
 Direct connection with 50 Ω termination, passes both DC and AC components of the trigger signal.
CDLimit
 Direct connection with 1 MΩ termination, passes both DC and AC components of the trigger signal.

AC

Connection through capacitor, removes unwanted DC and very low-frequency components.

*RST: DC

Manual operation: See "[Coupling](#)" on page 239

11.5.2.9 Output settings

The following commands are required to query or provide output at the FSW connectors.

DIAGnostic:SERVice:NSOource <State>

Turns the 28 V supply of the BNC connector labeled [noise source control] on the FSW on and off.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: DIAG:SERV:NSO ON

Manual operation: See "[Noise Source Control](#)" on page 212

OUTPut:IF:SBANd?

Queries the sideband provided at the "IF OUT 2 GHz" connector compared to the sideband of the RF signal. The sideband depends on the current center frequency.

Return values:

<SideBand> **NORMal**

The sideband at the output is identical to the RF signal.

INVerted

The sideband at the output is the inverted RF signal sideband.

Example: OUTP:IF IF2

Activates output at the IF OUTPUT (2 GHz) connector.

OUTP:IF:SBAN?

Queries the sideband provided at the connector.

Usage: Query only

OUTPut:IF[:SOURce] <Source>

Defines the type of signal available at one of the output connectors of the FSW.

Parameters:

<Source>

IF

The measured IF value is available at the IF/VIDEO/DEMODO output connector.

IF2

The measured IF value is available at the "IF OUT 2 GHz/ IF OUT 5 GHz" output connector at a frequency of 2 GHz.

This setting is only available if the "IF OUT 2 GHz/ IF OUT 5 GHz" connector or the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000) is available.

It is automatically set if the optional 2 GHz / 5 GHz bandwidth extension (FSW-B2000/B5000) is installed and active.

For details see the FSW I/Q Analyzer and I/Q Input User Manual.

VIDeo

The displayed video signal (i.e. the filtered and detected IF signal, 200mV) is available at the IF/VIDEO/DEMODO output connector.

This setting is required to provide demodulated audio frequencies at the output.

*RST: IF

Example:

OUTP:IF VID

Selects the video signal for the IF/VIDEO/DEMODO output connector.

Manual operation: See "Data Output" on page 211

11.5.2.10 Digital I/Q 40G streaming output commands

The following commands are only available if the Digital I/Q 40G Streaming Output option (FSW-B517/-B1017) is installed.

For details see the FSW I/Q Analyzer and I/Q Input User Manual.

| | |
|---------------------------|-----|
| OUTPut:IQHS:CDEvice?..... | 451 |
| OUTPut:IQHS:MARKer..... | 452 |
| OUTPut:IQHS:SRATe?..... | 452 |
| OUTPut:IQHS[:STATe]..... | 452 |

OUTPut:IQHS:CDEvice?

Returns a comma-separated list of information on the instrument connected to the QSFP+ connector, if available.

Example: `OUTP:IQHS:CDEV?`
Result:
`1,IQW,1525.7551k05,900987,DIG IQ 40G A,tcpip::
computername::hislip0,1.9,1.1,1,1`

Usage: Query only

Manual operation: See "[Connected Instrument](#)" on page 217

OUTPut:IQHS:MARKer

Inserts marker information to the data stream during a running I/Q data output recording. Useful to mark a specific event during the measurement that you detect in the result window, for example. Then you can search for the marker information in the output data to analyze the effects at that time.

Usage: Event

Manual operation: See "[Insert Marker](#)" on page 217

OUTPut:IQHS:SRATE?

Returns the currently used sample rate to transfer data via the Digital I/Q 40G Streaming Output interface.

Usage: Query only

Manual operation: See "[Output Settings Information](#)" on page 217

OUTPut:IQHS[:STATE] <State>

Enables or disables a digital output stream to the optional QSFP+ connector, if available.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0
Switches the function off

ON | 1
Switches the function on

*RST: 0

Manual operation: See "[Digital I/Q 40G Streaming Out](#)" on page 216

11.5.2.11 Configuring the trigger output

The following commands are required to send the trigger signal to one of the variable "TRIGGER INPUT/OUTPUT" connectors on the FSW.

| | |
|---|-----|
| OUTPut:TRIGger<tp>:DIRection..... | 453 |
| OUTPut:TRIGger<tp>:LEVel..... | 453 |
| OUTPut:TRIGger<tp>:OTYPe..... | 454 |
| OUTPut:TRIGger<tp>:PULSe:IMMediate..... | 454 |
| OUTPut:TRIGger<tp>:PULSe:LENGth..... | 454 |

OUTPut:TRIGger<tp>:DIRection <Direction>

Selects the trigger direction for trigger ports that serve as an input as well as an output.

Suffix:

<tp> Selects the used trigger port.
 2 = trigger port 2 (front)
 (Not available for FSW85 models with two RF input connectors.)
 3 = trigger port 3 (rear panel)

Parameters:

<Direction> INPut | OUTPut

INPut
 Port works as an input.

OUTPut
 Port works as an output.

*RST: INPut

Manual operation: See "[Trigger 2/3](#)" on page 213

OUTPut:TRIGger<tp>:LEVel <Level>

Defines the level of the (TTL compatible) signal generated at the trigger output.

Works only if you have selected a user-defined output with [OUTPut:TRIGger<tp>:OTYPe](#).

Suffix:

<tp> 1..n
 Selects the trigger port to which the output is sent.
 2 = trigger port 2 (front)
 (Not available for FSW85 models with two RF input connectors.)
 3 = trigger port 3 (rear)

Parameters:

<Level> **HIGH**
 5 V

LOW
 0 V

*RST: LOW

Example: OUTP:TRIG2:LEV HIGH

Manual operation: See "[Level](#)" on page 214

OUTPut:TRIGger<tp>:OTYPe <OutputType>

Selects the type of signal generated at the trigger output.

Suffix:

<tp> 1..n
 Selects the trigger port to which the output is sent.
 2 = trigger port 2 (front)
 (Not available for FSW85 models with two RF input connectors.)
 3 = trigger port 3 (rear)

Parameters:

<OutputType>

DEVICE

Sends a trigger signal when the FSW has triggered internally.

TARMed

Sends a trigger signal when the trigger is armed and ready for an external trigger event.

UDEFined

Sends a user-defined trigger signal. For more information, see [OUTPut:TRIGger<tp>:LEVel](#).

*RST: DEVICE

Manual operation: See "[Output Type](#)" on page 213

OUTPut:TRIGger<tp>:PULSe:IMMediate

Generates a pulse at the trigger output.

Suffix:

<tp> 1..n
 Selects the trigger port to which the output is sent.
 2 = trigger port 2 (front)
 (Not available for FSW85 models with two RF input connectors.)
 3 = trigger port 3 (rear)

Manual operation: See "[Send Trigger](#)" on page 214

OUTPut:TRIGger<tp>:PULSe:LENGth <Length>

Defines the length of the pulse generated at the trigger output.

Suffix:

<tp> Selects the trigger port to which the output is sent.
 2 = trigger port 2 (front)
 (Not available for FSW85 models with two RF input connectors.)
 3 = trigger port 3 (rear)

Parameters:

<Length> Pulse length in seconds.
 Default unit: S

Example: `OUTP:TRIG2:PULS:LENG 0.02`

Manual operation: See ["Pulse Length"](#) on page 214

11.5.2.12 Frequency

| | |
|--|-----|
| [SENSe:]FREQUENCY:CENTer | 455 |
| [SENSe:]FREQUENCY:CENTer:STEP | 455 |
| [SENSe:]FREQUENCY:CENTer:STEP:AUTO | 456 |
| [SENSe:]FREQUENCY:OFFSet | 456 |

[SENSe:]FREQUENCY:CENTer <Frequency>

Defines the center frequency.

Parameters:

<Frequency> For the allowed range and f_{max} , refer to the specifications document.

*RST: $f_{max}/2$

Default unit: Hz

Example:

```
FREQ:CENT 100 MHz
```

```
FREQ:CENT:STEP 10 MHz
```

```
FREQ:CENT UP
```

Sets the center frequency to 110 MHz.

Manual operation: See ["Center Frequency"](#) on page 218

[SENSe:]FREQUENCY:CENTer:STEP <StepSize>

Defines the center frequency step size.

You can increase or decrease the center frequency quickly in fixed steps using the `SENS:FREQ UP` AND `SENS:FREQ DOWN` commands, see [\[SENSe:\]FREQUENCY:CENTer](#) on page 455.

Parameters:

<StepSize> For f_{max} , refer to the specifications document.

Range: 1 to f_{MAX}

*RST: 0.1 x span

Default unit: Hz

Example:

```
//Set the center frequency to 110 MHz.
```

```
FREQ:CENT 100 MHz
```

```
FREQ:CENT:STEP 10 MHz
```

```
FREQ:CENT UP
```

Manual operation: See ["Center Frequency Stepsize"](#) on page 218

[SENSe:]FREQuency:CENTer:STEP:AUTO <State>

Defines the step width of the center frequency.

Parameters:

<State>

ON | 1

Links the step width to the current standard (currently 1 MHz for all standards)

OFF | 0

Sets the step width as defined using the `FREQ:CENT:STEP` command (see [\[SENSe:\]FREQuency:CENTer:STEP](#) on page 455).

Manual operation: See ["Center Frequency Stepsize"](#) on page 218

[SENSe:]FREQuency:OFFSet <Offset>

Defines a frequency offset.

If this value is not 0 Hz, the application assumes that the input signal was frequency shifted outside the application. All results of type "frequency" will be corrected for this shift numerically by the application.

See also ["Frequency Offset"](#) on page 218.

Note: In MSRA/MSRT mode, the setting command is only available for the MSRA/MSRT primary application. For MSRA/MSRT secondary applications, only the query command is available.

Parameters:

<Offset>

Range: -1 THz to 1 THz

*RST: 0 Hz

Default unit: HZ

Example:

`FREQ:OFFS 1GHZ`

Manual operation: See ["Frequency Offset"](#) on page 218

11.5.2.13 Amplitude settings

Amplitude and scaling settings allow you to configure the vertical (y-)axis display and for some result displays also the horizontal (x-)axis.

Useful commands for amplitude settings described elsewhere:

- [INPut:COUPling](#) on page 390
- [INPut:IMPedance](#) on page 392
- [INPut:IMPedance:PTYPe](#) on page 392
- [\[SENSe:\]ADJust:LEVel](#) on page 508

Remote commands exclusive to amplitude settings:

| | |
|--|-----|
| CALCulate<n>:UNIT:POWER..... | 457 |
| DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel..... | 457 |
| DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet..... | 458 |
| [SENSe:]DDEMod:PRESet:RLEVel..... | 458 |
| INPut:ATTenuation:AUTO:MODE..... | 458 |
| INPut:CONNector..... | 459 |
| INPut:EGAIIn[:STATe]..... | 459 |
| INPut:GAIN:STATe..... | 460 |
| INPut:GAIN[:VALue]..... | 460 |
| INPut:ATTenuation..... | 461 |
| INPut:ATTenuation:AUTO..... | 461 |
| INPut:EATT..... | 462 |
| INPut:EATT:AUTO..... | 462 |
| INPut:EATT:STATe..... | 463 |
| INPut:SANalyzer:ATTenuation..... | 463 |
| INPut:SANalyzer:ATTenuation:AUTO..... | 463 |
| [SENSe:]IQ:WBANd..... | 464 |

CALCulate<n>:UNIT:POWER <Unit>

Selects the unit of the y-axis.

The unit applies to all power-based measurement windows with absolute values.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT |
 DBUA | AMPere | DBM_mhz | DBM_hz | DBUa_mhz |
 DBUV_mhz | DBmV_mhz | DBpW_mhz
 (Units based on 1 MHz require installed R&S FSW-K54 (EMI
 measurements) option.)
 *RST: dBm

Example:

CALC:UNIT:POW DBM
 Sets the power unit to dBm.

Manual operation: See "Unit" on page 221

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel
<ReferenceLevel>**

Defines the reference level (for all traces in all windows).

With a reference level offset ≠ 0, the value range of the reference level is modified by the offset.

Suffix:

<n> irrelevant

<w> subwindow
Not supported by all applications

<t> irrelevant

Parameters:

<ReferenceLevel> The unit is variable.
Range: see specifications document
*RST: 0 dBm
Default unit: DBM

Example: DISP:TRAC:Y:RLEV -60dBm

Manual operation: See "[Reference Level](#)" on page 220

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet
<Offset>

Defines a reference level offset (for all traces in all windows).

Suffix:

<n> irrelevant

<w> subwindow
Not supported by all applications

<t> irrelevant

Parameters:

<Offset> Range: -200 dB to 200 dB
*RST: 0dB
Default unit: DB

Example: DISP:TRAC:Y:RLEV:OFFS -10dB

Manual operation: See "[Shifting the Display \(Offset\)](#)" on page 221

[SENSe:]DDEMod:PRESet:RLEVel

Initiates a measurement that evaluates and sets the ideal reference level for the current measurement. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the FSW or limiting the dynamic range by an S/N ratio that is too small.

Usage: Event

INPut:ATTenuation:AUTO:MODE <OptMode>

Selects the priority for signal processing *after* the RF attenuation has been applied.

Parameters:

<OptMode> LNOise | LDISTortion

LNOise

Optimized for high sensitivity and low noise levels

LDISortion

Optimized for low distortion by avoiding intermodulation

*RST: LDISortion (WLAN application: LNOise)

Example: INP:ATT:AUTO:MODE LNO

Manual operation: See "[Optimization](#)" on page 224

INPut:CONNector <ConnType>

Determines which connector the input for the measurement is taken from.

If an external frontend is active, the connector is automatically set to RF.

Parameters:

<ConnType>

RF

RF input connector

AIQI

Analog Baseband I connector

This setting is only available if the "Analog Baseband" interface (FSW-B71) is installed and active for input. It is not available for the FSW67 or FSW85.

For more information on the "Analog Baseband" interface (FSW-B71), see the FSW I/Q Analyzer and I/Q Input User Manual.

RFPRobe

Active RF probe

*RST: RF

Example: INP:CONN RF

Selects input from the RF input connector.

Manual operation: See "[Input Connector](#)" on page 208

INPut:EGAIN[:STATe] <State>

Before this command can be used, the external preamplifier must be connected to the FSW. See the preamplifier's documentation for details.

When activated, the FSW automatically compensates the magnitude and phase characteristics of the external preamplifier in the measurement results.

Note that when an optional external preamplifier is activated, the internal preamplifier is automatically disabled, and vice versa.

For FSW85 models with two RF inputs, you must enable correction from the external preamplifier for each input individually. Correction cannot be enabled for both inputs at the same time.

When deactivated, no compensation is performed even if an external preamplifier remains connected.

Parameters:

<State>

ON | OFF | 0 | 1

OFF | 0

No data correction is performed based on the external preamplifier

ON | 1

Performs data corrections based on the external preamplifier

*RST: 0

Example: INP:EGA ON

INPut:GAIN:STATe <State>

Turns the internal preamplifier on and off. It requires the optional preamplifier hardware.

Note that if an optional external preamplifier is activated, the internal preamplifier is automatically disabled, and vice versa.

Is not available for input from the optional "Digital Baseband" interface.

If option R&S FSW-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSW-B24 is installed, the preamplifier is active for all frequencies.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 0

Example: INP:GAIN:STAT ON
INP:GAIN:VAL 15
Switches on 15 dB preamplification.

Manual operation: See "[Preamplifier](#)" on page 222

INPut:GAIN[:VALue] <Gain>

Selects the "gain" if the preamplifier is activated (INP:GAIN:STAT ON, see [INPut:GAIN:STATe](#) on page 460).

The command requires the additional preamplifier hardware option.

Parameters:

<Gain> For all FSW models except for FSW85, the following settings are available:
15 dB and 30 dB
All other values are rounded to the nearest of these two.
For FSW85 models:
FSW43 or higher:
30 dB

Default unit: DB

Example: INP:GAIN:STAT ON
INP:GAIN:VAL 30
Switches on 30 dB preamplification.

Manual operation: See "[Preamplifier](#)" on page 222

INPut:ATTenuation <Attenuation>

Defines the total attenuation for RF input.

If an electronic attenuator is available and active, the command defines a mechanical attenuation (see [INPut:EATT:STATE](#) on page 463).

If you set the attenuation manually, it is no longer coupled to the reference level, but the reference level is coupled to the attenuation. Thus, if the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

If an external frontend is active (see [\[SENSe:\]EFRontend\[:STATE\]](#) on page 418), you can configure the attenuation of the external frontend and the analyzer separately. See also [INPut:SANalyzer:ATTenuation:AUTO](#) on page 463 and [INPut:SANalyzer:ATTenuation](#) on page 463.

Is not available if the optional "Digital Baseband" interface is active.

Parameters:

<Attenuation> Range: see specifications document
Increment: 5 dB (with optional electr. attenuator: 1 dB)
*RST: 10 dB (AUTO is set to ON)
Default unit: DB

Example: INP:ATT 30dB
Defines a 30 dB attenuation and decouples the attenuation from the reference level.

Manual operation: See "[Attenuation Mode / Value](#)" on page 223

INPut:ATTenuation:AUTO <State>

Couples or decouples the attenuation to the reference level. Thus, when the reference level is changed, the FSW determines the signal level for optimal internal data processing and sets the required attenuation accordingly.

If an external frontend is active (see [\[SENSe:\]EFRontend\[:STATE\]](#) on page 418), you can configure the attenuation of the external frontend and the analyzer separately. See also [INPut:SANalyzer:ATTenuation:AUTO](#) on page 463 and [INPut:SANalyzer:ATTenuation](#) on page 463.

Is not available if the optional "Digital Baseband" interface is active.

Parameters:

<State> ON | OFF | 0 | 1
 *RST: 1

Example:

INP:ATT:AUTO ON
 Couples the attenuation to the reference level.

Manual operation: See "[Attenuation Mode / Value](#)" on page 223

INPut:EATT <Attenuation>

Defines an electronic attenuation manually. Automatic mode must be switched off (INP:EATT:AUTO OFF, see [INPut:EATT:AUTO](#) on page 462).

If the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

Requires the electronic attenuation hardware option.

It is not available if the optional "Digital Baseband" interface is active.

Parameters:

<Attenuation> attenuation in dB
 Range: see specifications document
 Increment: 1 dB
 *RST: 0 dB (OFF)
 Default unit: DB

Example:

INP:EATT:AUTO OFF
 INP:EATT 10 dB

Manual operation: See "[Using Electronic Attenuation](#)" on page 225

INPut:EATT:AUTO <State>

Turns automatic selection of the electronic attenuation on and off.

If on, electronic attenuation reduces the mechanical attenuation whenever possible.

Requires the electronic attenuation hardware option.

It is not available if the optional "Digital Baseband" interface is active.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 1

Example:

INP:EATT:AUTO OFF

Manual operation: See "[Using Electronic Attenuation](#)" on page 225

INPut:EATT:STATe <State>

Turns the electronic attenuator on and off.

Requires the electronic attenuation hardware option.

It is not available if the optional "Digital Baseband" interface is active.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0
 Switches the function off

ON | 1
 Switches the function on

*RST: 0

Example:

INP:EATT:STAT ON
Switches the electronic attenuator into the signal path.

Manual operation: See ["Using Electronic Attenuation"](#) on page 225

INPut:SANalyzer:ATTenuation <Attenuation>

Configures attenuation at the analyzer input for an active external frontend manually.

Parameters:

<Attenuation> Range: see specifications document

 Increment: 1 dB

 Default unit: DB

Manual operation: See ["Attenuation Mode / Value"](#) on page 223

INPut:SANalyzer:ATTenuation:AUTO <State>

Enables or disables automatic configuration of attenuation at the analyzer input for an active external frontend.

By default, the attenuation settings are applied at the input of the external frontend, see [INPut:ATTenuation:AUTO](#) on page 461 and [INPut:ATTenuation](#) on page 461.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0
 Auto mode for analyzer attenuation is disabled. Allows you to configure attenuation at the analyzer using [INPut:SANalyzer:ATTenuation](#) on page 463.

ON | 1
 Auto mode for analyzer attenuation is enabled. No attenuation is configured at the analyzer.

*RST: 0

Example:

```
//Enable external frontend
EFR ON
//Query the currently configured RF attenuation
INP:ATT?
//Result: 10 dB
//Disable auto mode for analyzer attenuation
INP:SAN:ATT:AUTO OFF
//Configure 10 dB attenuation at the analyzer
INP:SAN:ATT 10
//Query the currently configured RF attenuation at the ext. FE
INP:ATT?
//Result: 0 dB
```

Manual operation: See "[Attenuation Mode / Value](#)" on page 223

[SENSe:]IQ:WBANd <State>

Selects the signal path for signal processing.

For details and restrictions, see "[Signal Path](#)" on page 224.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 The narrowband signal path is used.
ON | 1
 The wideband signal path is used.
 *RST: 0

Example: SENS:IQ:WBAN ON

Manual operation: See "[Signal Path](#)" on page 224

11.5.2.14 Scaling and units

Useful commands for scaling described elsewhere:

- [DISPlay\[:WINDow<n>\]\[\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:AUTO ONCE](#) on page 505
- [DISPlay\[:WINDow<n>\]:TRACe<t>:X\[:SCALE\]:VOFFset](#) on page 491
- [CALCulate<n>:UNIT:POWer](#) on page 457

Remote commands exclusive to scaling and units:

| | |
|---|-----|
| CALCulate<n>:STATistics:PRESet | 465 |
| CALCulate<n>:STATistics:SCALE:AUTO ONCE | 465 |
| CALCulate<n>:STATistics:SCALE:X:BCOunt | 465 |
| CALCulate<n>:STATistics:SCALE:Y:LOWer | 466 |
| CALCulate<n>:STATistics:SCALE:Y:UPPer | 466 |
| CALCulate<n>:STATistics:SCALE:Y:UNIT | 466 |
| CALCulate<n>:UNIT:ANGLE | 466 |

| | |
|--|-----|
| CALCulate<n>:X:UNIT:TIME..... | 467 |
| CALCulate<n>:Y:UNIT:TIME..... | 467 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:PDIVision..... | 467 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:RPOSition..... | 467 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:RVALue..... | 468 |
| DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]..... | 468 |
| DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision..... | 469 |
| DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition..... | 469 |
| DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RVALue..... | 470 |
| DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing..... | 470 |

CALCulate<n>:STATistics:PRESet

Suffix:

<n> 1..n
 Window

Usage: Event

Manual operation: See "Default Settings" on page 228

CALCulate<n>:STATistics:SCALE:AUTO ONCE

Initiates an automatic scaling of the diagram (x- and y-axis).

To obtain maximum resolution, the level range is set as a function of the measured spacing between peak power and the minimum power for the APD measurement and of the spacing between peak power and mean power for the CCDF measurement. In addition, the probability scale for the number of test points is adapted.

To get valid results, you have to perform a complete sweep with synchronization to the end of the auto range process. This is only possible in single sweep mode.

Note this command is not available when using an external frontend.

Suffix:

<n> Window

Manual operation: See "Auto Scale Once/Auto Scale Window" on page 227
 See "Adjust Settings" on page 228

CALCulate<n>:STATistics:SCALE:X:BCOunt <StatNofColumns>

Defines the number of columns for the statistical distribution.

Suffix:

<n> 1..n
 Window

Parameters:

<StatNofColumns> Range: 2 to 1024
 *RST: 101
 Default unit: none

Manual operation: See ["Quantize"](#) on page 228

CALCulate<n>:STATistics:SCALe:Y:LOWer <Magnitude>

Defines the lower vertical limit of the diagram.

Suffix:

<n> [Window](#)

Parameters:

<Magnitude> The number is a statistical value and therefore dimensionless.

Range: 1E-9 to 0.1

*RST: 1E-6

Example: `CALC:STAT:SCAL:Y:LOW 0.001`

Manual operation: See ["Defining Min and Max Values"](#) on page 227

CALCulate<n>:STATistics:SCALe:Y:UPPer <Magnitude>

Defines the upper vertical limit of the diagram.

Suffix:

<n> [Window](#)

Parameters:

<Magnitude> The number is a statistical value and therefore dimensionless.

Range: 1E-5 to 1.0

*RST: 1.0

Example: `CALC:STAT:SCAL:Y:UPP 0.01`

Manual operation: See ["Defining Min and Max Values"](#) on page 227

CALCulate<n>:STATistics:SCALe:Y:UNIT <Unit>

Selects the unit of the y-axis.

Suffix:

<n> [Window](#)

Parameters:

<Unit> PCT | ABS

*RST: ABS

Example: `CALC:STAT:SCAL:Y:UNIT PCT`
Sets the percentage scale.

Manual operation: See ["Y-Axis Unit"](#) on page 229

CALCulate<n>:UNIT:ANGLE <Unit>

Selects the global unit for phase results.

Suffix:

<n> irrelevant

Setting parameters:

<Unit> DEG | RAD

*RST: RAD

Manual operation: See "[Y-Axis Unit](#)" on page 229

CALCulate<n>:X:UNIT:TIME <Unit>**Suffix:**

<n> 1..n
[Window](#)

Parameters:

<Unit> S | SYM

Manual operation: See "[X-Axis Unit](#)" on page 229

CALCulate<n>:Y:UNIT:TIME <Unit>**Suffix:**

<n> 1..n
[Window](#)

Parameters:

<Unit> S | SYM

Manual operation: See "[Y-Axis Unit](#)" on page 229

DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:PDIVision <PDiv>

Defines the scaling of the x-axis for statistical result displays.

For all other result displays, this command is only available as a query.

Suffix:

<n> 1..n
[Window](#)

<t> 1..6
[Trace](#)

Parameters:

<PDiv> Defines the range per division (total range = 10*[PDiv](#))

Manual operation: See "[Range per Division](#)" on page 229

DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:RPOSition <RPos>

Defines the position of the reference value for the X axis.

Setting the position of the reference value is possible only for statistical result displays. All other result displays support the query only.

Suffix:

| | |
|-----|--------------------------------|
| <n> | 1..n Window |
| <t> | 1..6 Trace |

Parameters:

| | |
|--------|--------------------------------------|
| <RPos> | <numeric_value> Default unit: PCT |
|--------|--------------------------------------|

Example:

DISP:TRAC:X:RPOS 30 PCT

The reference value is shifted by 30% towards the left.

Manual operation: See "[X-Axis Reference Position](#)" on page 228

DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:RVALue <RVal>

Defines the reference value for the x-axis for statistical result displays.

For all other result displays, this command is only available as a query.

Suffix:

| | |
|-----|--------------------------------|
| <n> | 1..n Window |
| <t> | 1..6 Trace |

Parameters:

| | |
|--------|--------------------------------|
| <RVal> | Reference value for the x-axis |
|--------|--------------------------------|

Manual operation: See "[X-Axis Reference Value](#)" on page 228

DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALe] <Range>

Defines the display range of the y-axis (for all traces).

Suffix:

| | |
|-----|--|
| <n> | Window |
| <w> | subwindow Not supported by all applications |
| <t> | irrelevant |

Example:

DISP:TRAC:Y 110dB

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision
 <Value>

This remote command determines the grid spacing on the Y-axis for all diagrams, where possible.

In spectrum displays, for example, this command is not available.

Suffix:

| | |
|-----|--|
| <n> | Window |
| <w> | subwindow Not supported by all applications |
| <t> | irrelevant |

Parameters:

| | |
|---------|--|
| <Value> | numeric value WITHOUT UNIT (unit according to the result display) Defines the range per division (total range = 10*<Value>) *RST: depends on the result display Default unit: DBM |
|---------|--|

Example: `DISP:TRAC:Y:PDIV 10`
Sets the grid spacing to 10 units (e.g. dB) per division

Manual operation: See "[Range per Division](#)" on page 228

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition
 <Position>

Defines the vertical position of the reference level on the display grid (for all traces).

The FSW adjusts the scaling of the y-axis accordingly.

Suffix:

| | |
|-----|--|
| <n> | Window |
| <w> | subwindow Not supported by all applications |
| <t> | irrelevant |

Parameters:

| | |
|------------|---|
| <Position> | 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border. *RST: 100 PCT = frequency display; 50 PCT = time display Default unit: PCT |
|------------|---|

Example: `DISP:TRAC:Y:RPOS 50PCT`

Manual operation: See "[Y-Axis Reference Position](#)" on page 227

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RVALue <Value>

Defines the reference value assigned to the reference position in the specified window. Separate reference values are maintained for the various displays.

Suffix:

<n> [Window](#)
 <w> subwindow
 <t> irrelevant

Parameters:

<Value> Default unit: DB

Example:

DISP:TRAC:Y:RVAL 0
 Sets the value assigned to the reference position to 0 Hz

Manual operation: See "[Y-Axis Reference Value](#)" on page 227

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y:SPACing <ScalingType>

Selects the scaling of the y-axis (for all traces, <t> is irrelevant).

Suffix:

<n> [Window](#)
 <w> subwindow
 <t> [Trace](#)

Parameters:

<ScalingType> **LOGarithmic**
 Logarithmic scaling.
LINear
 Linear scaling in %.
LDB
 Linear scaling in the specified unit.
PERCent
 Linear scaling in %.
 *RST: LOGarithmic

Example:

DISP:TRAC:Y:SPAC LIN
 Selects linear scaling in %.

Manual operation: See "[Y-Axis Unit](#)" on page 229

11.5.3 Signal capture

The signal capture commands define how much, how and when data is captured from the input signal.



MSRA/MSRT operating mode

In MSRA/MSRT operating mode, only the MSRA/MSRT primary channel actually captures data from the input signal. The data acquisition settings for the VSA secondary application in MSRA/MSRT mode define the **secondary application data extract** and **analysis interval**.

For details on the MSRA operating mode see the FSW MSRA User Manual. For details on the MSRT operating mode see the FSW Realtime User Manual.

The tasks for manual operation are described in [Chapter 5.5, "Signal capture"](#), on page 230.

| | |
|--|-----|
| [SENSe:]DDEMod:PRATe..... | 471 |
| [SENSe:]DDEMod:RENgth:AUTO..... | 471 |
| [SENSe:]DDEMod:RENgth[:VALue]..... | 472 |
| [SENSe:]DDEMod:RENgth:SYMBOLs[:VALue]..... | 472 |
| [SENSe:]SWAPiq..... | 472 |
| TRACe:IQ:BWIDth..... | 473 |
| TRACe:IQ:WBAND[:STATe]..... | 473 |
| TRACe:IQ:WBAND:MBWIDth..... | 473 |

[SENSe:]DDEMod:PRATe <CaptOverSampling>

Defines the number of samples that are captured per symbol, i.e. the factor by which the symbol rate is multiplied to obtain the sample rate. This parameter also affects the demodulation bandwidth and thus the usable I/Q bandwidth.

The sample rate depends on the defined [Symbol Rate](#) (see [Chapter 4.2, "Sample rate, symbol rate and I/Q bandwidth"](#), on page 75).

Parameters:

<CaptOverSampling> | 2 | 4 | 8 | 16 | 32 | 64 | 128

The factor by which the symbol rate is multiplied to obtain the sample rate, e.g. 4 samples per symbol:
sample rate = 4*symbol rate

Example:

DDEM:PRAT 8

Captures 8 points per symbol.

Manual operation: See ["Sample Rate"](#) on page 231

[SENSe:]DDEMod:RENgth:AUTO <State>

If enabled, the capture length is automatically adapted as required according to the current result length, burst and pattern search settings, and network-specific characteristics (e.g. burst and frame structures).

Parameters:

<State>

Manual operation: See ["Capture Length Settings"](#) on page 231

[SENSe:]DDEMod:RLENgth[:VALue] <RecordLength>

Defines or queries the capture length for further processing, e.g. for burst search.

Note that the maximum capture length depends on the sample rate for signal capture (see [\[SENSe:\]DDEMod:PRATe](#) on page 471).

Parameters:

<RecordLength> The capture length can be defined in time (seconds) or symbols (SYM). The return value is always in time (s). To query the capture length in symbols, use the [\[SENSe:\]DDEMod:RLENgth:SYMBOLs\[:VALue\]](#) command.

Default unit: S

Example:

```
DDEM:RLEN 1000 SYM
// Sets a capture length of 1000 symbols.
:SENSe1:DDEMod:RLENgth:VALue?
// Returns the capture length in seconds:
0.00026041667
DDEM:RLEN 10
// Sets a capture length of 10 seconds.
```

Example:

See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606

Manual operation: See ["Capture Length Settings"](#) on page 231

[SENSe:]DDEMod:RLENgth:SYMBOLs[:VALue] <RecordLength>

Defines the capture length for further processing, e.g. for burst search, in symbols.

Note that the maximum record length depends on the sample rate for signal capture (see [\[SENSe:\]DDEMod:PRATe](#) on page 471). The maximum record length (in symbols) can be calculated as:

$$\text{Recordlength}_{\text{MAX}} = 460000000 / \langle \text{points per symbol} \rangle$$

Parameters:

<RecordLength> Default unit: SYM

Example:

```
DDEM:RLEN:SYMB 1000
```

Manual operation: See ["Capture Length Settings"](#) on page 231

[SENSe:]SWAPiq <State>

Defines whether or not the recorded I/Q pairs should be swapped (I<->Q) before being processed. Swapping I and Q inverts the sideband.

This is useful if the DUT interchanged the I and Q parts of the signal; then the FSW can do the same to compensate for it.

Parameters:

<State> **ON | 1**
 I and Q signals are interchanged
 Inverted sideband, $Q+j*I$

OFF | 0
 I and Q signals are not interchanged
 Normal sideband, $I+j*Q$

*RST: 0

Manual operation: See "[Swap I/Q](#)" on page 232

TRACe:IQ:BWIDth <Bandwidth>

Queries the bandwidth in Hz of the resampling filter ("Usable I/Q Bandwidth").

Parameters:

<Bandwidth> Usable I/Q bandwidth
 Default unit: Hz

Example: TRAC1:IQ:BWID?

Manual operation: See "[Usable I/Q Bandwidth](#)" on page 232

TRACe:IQ:WBANd[:STATe] <State>

Determines whether the wideband provided by bandwidth extension options is used or not (if installed).

Parameters:

<State> **ON | OFF | 0 | 1**

OFF | 0
 Switches the function off

ON | 1
 Switches the function on

Manual operation: See "[Maximum Bandwidth](#)" on page 231

TRACe:IQ:WBANd:MBWidth <Limit>

Defines the maximum analysis bandwidth. Any value can be specified; the next higher fixed bandwidth is used.

Defining a value other than "MAX" is useful if you want to specify the sample rate directly and at the same time, ensure a minimum bandwidth is available.

(See [Chapter 4.2.1, "Sample rate and maximum usable I/Q bandwidth for RF input"](#), on page 76).

Parameters:

<Limit>

80 MHz

Restricts the analysis bandwidth to a maximum of 80 MHz. The bandwidth extension options greater than 160 MHz are disabled.

`TRACe:IQ:WBANd[:STATe]` is set to OFF.

160 MHz

Restricts the analysis bandwidth to a maximum of 160 MHz. The bandwidth extension option R&S FSW-B320 is deactivated. (Not available or required if other bandwidth extension options larger than 320 MHz are installed.)

`TRACe:IQ:WBANd[:STATe]` is set to ON.

1200 MHz | 500 MHz | 320 MHz | MAX

All installed bandwidth extension options are activated. The currently available maximum bandwidth is allowed.

(See [Chapter 4.2.1, "Sample rate and maximum usable I/Q bandwidth for RF input"](#), on page 76).

`TRACe:IQ:WBANd[:STATe]` is set to ON.

*RST: maximum available

Default unit: Hz

Example:

`TRAC:IQ:WBAN:MBW 82 MHZ`

`TRAC:IQ:WBAN:MBW?`

Result if R&S FSW-B160/-B320 is active:

160000000

Example:

`TRAC:IQ:WBAN:MBW 82 MHZ`

`TRAC:IQ:WBAN:MBW?`

Result if R&S FSW-B512 is active:

512000000

Manual operation: See ["Maximum Bandwidth"](#) on page 231

11.5.4 Triggering measurements

The trigger commands define the beginning of a measurement.



MSRA/MSRT operating mode

In MSRA/MSRT operating mode, only the MSRA/MSRT primary channel actually captures data from the input signal. Thus, no trigger settings are available in the VSA secondary application in MSRA/MSRT operating mode. However, a **capture offset** can be defined with a similar effect as a trigger offset. It defines an offset from the start of the captured data (from the MSRA/MSRT primary) to the start of the secondary application data for vector signal analysis. (See [Configuring an analysis interval and line \(MSRA mode only\)](#).)

For details on the MSRA operating mode see the FSW MSRA User Manual. For details on the MSRT operating mode see the FSW Realtime User Manual.

Tasks for manual configuration are described in [Chapter 5.5.2, "Trigger settings"](#), on page 232.

| | |
|--|-----|
| TRIGger[:SEQuence]:BBPower:HOLDoff..... | 475 |
| TRIGger[:SEQuence]:DTIME..... | 476 |
| TRIGger[:SEQuence]:HOLDoff[:TIME]..... | 476 |
| TRIGger[:SEQuence]:IFPower:HOLDoff..... | 476 |
| TRIGger[:SEQuence]:IFPower:HYSteresis..... | 477 |
| TRIGger[:SEQuence]:LEVel:BBPower..... | 477 |
| TRIGger[:SEQuence]:LEVel[:EXternal<port>]..... | 477 |
| TRIGger[:SEQuence]:LEVel:IFPower..... | 478 |
| TRIGger[:SEQuence]:LEVel:IQPower..... | 478 |
| TRIGger[:SEQuence]:SLOPe..... | 478 |
| TRIGger[:SEQuence]:SOURce..... | 479 |
| TRIGger[:SEQuence]:TIME:RINTerval..... | 480 |

TRIGger[:SEQuence]:BBPower:HOLDoff <Period>

Defines the holding time before the baseband power trigger event.

The command requires the optional "Digital Baseband" interface or the optional "Analog Baseband" interface.

Note that this command is maintained for compatibility reasons only. Use the [TRIGger\[:SEQuence\]:IFPower:HOLDoff](#) on page 476 command for new remote control programs.

Parameters:

<Period> Range: 150 ns to 1000 s
 *RST: 150 ns
 Default unit: S

Example:

```
TRIG:SOUR BBP
Sets the baseband power trigger source.
TRIG:BBP:HOLD 200 ns
Sets the holding time to 200 ns.
```

TRIGger[:SEQuence]:DTIME <DropoutTime>

Defines the time the input signal must stay below the trigger level before a trigger is detected again.

For input from the "Analog Baseband" interface using the baseband power trigger (BBP), the default drop out time is set to 100 ns to avoid unintentional trigger events (as no hysteresis can be configured in this case).

Parameters:

<DropoutTime> Dropout time of the trigger.
 Range: 0 s to 10.0 s
 *RST: 0 s
 Default unit: S

Manual operation: See ["Drop-Out Time"](#) on page 238

TRIGger[:SEQuence]:HOLDoff[:TIME] <Offset>

Defines the time offset between the trigger event and the start of the measurement.

Parameters:

<Offset> The allowed range is 0 s to 30 s.
 *RST: 0 s
 Default unit: S

Example: TRIG:HOLD 500us

Manual operation: See ["Trigger Offset"](#) on page 238

TRIGger[:SEQuence]:IFPower:HOLDoff <Period>

Defines the holding time before the next trigger event.

Note that this command can be used for **any trigger source**, not just IF Power (despite the legacy keyword).

Note: If you perform gated measurements in combination with the IF Power trigger, the FSW ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q data measurements.

Parameters:

<Period> Range: 0 s to 10 s
 *RST: 0 s
 Default unit: S

Example: TRIG:SOUR EXT
 Sets an external trigger source.
 TRIG:IFP:HOLD 200 ns
 Sets the holding time to 200 ns.

Manual operation: See ["Trigger Holdoff"](#) on page 239

TRIGger[:SEQuence]:IFPower:HYSTeresis <Hysteresis>

Defines the trigger hysteresis, which is only available for "IF Power" trigger sources.

Parameters:

<Hysteresis> Range: 3 dB to 50 dB
 *RST: 3 dB
 Default unit: DB

Example:

```
TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HYST 10DB
Sets the hysteresis limit value.
```

Manual operation: See "[Hysteresis](#)" on page 238

TRIGger[:SEQuence]:LEVel:BBPower <Level>

Sets the level of the baseband power trigger.

Is available for the optional "Digital Baseband" interface.

Is available for the optional "Analog Baseband" interface.

Parameters:

<Level> Range: -50 dBm to +20 dBm
 *RST: -20 dBm
 Default unit: DBM

Example:

```
TRIG:LEV:BBP -30DBM
```

Manual operation: See "[Trigger Level](#)" on page 238

TRIGger[:SEQuence]:LEVel[:EXTernal<port>] <TriggerLevel>

Defines the level the external signal must exceed to cause a trigger event.

Suffix:

<port> Selects the trigger port.
 1 = trigger port 1 (TRIGGER INPUT connector on front panel)
 2 = trigger port 2 (TRIGGER INPUT/OUTPUT connector on front panel)
 (Not available for FSW85 models with two RF input connectors.)
 3 = trigger port 3 (TRIGGER3 INPUT/OUTPUT connector on rear panel)

Parameters:

<TriggerLevel> Range: 0.5 V to 3.5 V
 *RST: 1.4 V
 Default unit: V

Example:

```
TRIG:LEV 2V
```

Manual operation: See "[Trigger Level](#)" on page 238

TRIGger[:SEQuence]:LEVel:IFPower <TriggerLevel>

Defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

For compatibility reasons, this command is also available for the "Baseband Power" trigger source when using the "Analog Baseband" interface.

Parameters:

<TriggerLevel> For details on available trigger levels and trigger bandwidths, see the specifications document.

*RST: -20 dBm

Default unit: DBM

Example: TRIG:LEV:IFP -30DBM

Manual operation: See ["Trigger Level"](#) on page 238

TRIGger[:SEQuence]:LEVel:IQPower <TriggerLevel>

Defines the magnitude the I/Q data must exceed to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Parameters:

<TriggerLevel> Range: -130 dBm to 30 dBm

*RST: -20 dBm

Default unit: DBM

Example: TRIG:LEV:IQP -30DBM

Manual operation: See ["Trigger Level"](#) on page 238

TRIGger[:SEQuence]:SLOPe <Type>

For all trigger sources except time, you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

Parameters:

<Type> POSitive | NEGative

POSitive

Triggers when the signal rises to the trigger level (rising edge).

NEGative

Triggers when the signal drops to the trigger level (falling edge).

*RST: POSitive

Example: TRIG:SLOP NEG

Manual operation: See ["Slope"](#) on page 239

TRIGger[:SEQUence]:SOURce <Source>

Selects the trigger source.

Note on external triggers:

If a measurement is configured to wait for an external trigger signal in a remote control program, remote control is blocked until the trigger is received and the program can continue. Make sure that this situation is avoided in your remote control programs.

Parameters:

<Source>

IMMediate

Free Run

EXTernal

Trigger signal from the "Trigger Input" connector.

If the optional 2 GHz bandwidth extension (B2000/B5000) is installed and active, this parameter activates the "Ch3" input connector on the oscilloscope. Then the FSW triggers when the signal fed into the "Ch3" input connector on the oscilloscope meets or exceeds the specified trigger level.

Note: In previous firmware versions, the external trigger was connected to the "Ch2" input on the oscilloscope. As of firmware version FSW 2.30, the "**Ch3**" input on the oscilloscope must be used!

If power splitter mode is active, this parameter activates the "EXT TRIGGER INPUT" connector on the oscilloscope. Then the FSW triggers when the signal fed into the "EXT TRIGGER INPUT" connector on the oscilloscope meets or exceeds the specified trigger level.

EXT2

Trigger signal from the "Trigger Input/Output" connector.

For FSW85 models, Trigger 2 is not available due to the second RF input connector on the front panel. The trigger signal is taken from the "Trigger Input/Output" connector on the rear panel.

Note: Connector must be configured for "Input".

EXT3

Trigger signal from the "TRIGGER 3 INPUT/ OUTPUT" connector.

Note: Connector must be configured for "Input".

RFPower

First intermediate frequency

(Frequency and time domain measurements only.)

Not available for input from the optional "Analog Baseband" interface.

Not available for input from the optional "Digital Baseband" interface.

IFPower

Second intermediate frequency

Not available for input from the optional "Digital Baseband" interface.

For input from the optional "Analog Baseband" interface, this parameter is interpreted as `BBPower` for compatibility reasons.

IQPower

Magnitude of sampled I/Q data

For applications that process I/Q data, such as the I/Q Analyzer or optional applications.

Not available for input from the optional "Digital Baseband" interface.

TIME

Time interval

(For frequency and time domain measurements only.)

BBPower

Baseband power

For input from the optional "Analog Baseband" interface.

For input from the optional "Digital Baseband" interface.

GP0 | GP1 | GP2 | GP3 | GP4 | GP5

For applications that process I/Q data, such as the I/Q Analyzer or optional applications, and only if the optional "Digital Baseband" interface is available.

Defines triggering of the measurement directly via the LVDS connector. The parameter specifies which general-purpose bit (0 to 5) provides the trigger data.

The assignment of the general-purpose bits used by the Digital IQ trigger to the LVDS connector pins is provided in ["Digital I/Q"](#) on page 236.

*RST: IMMEDIATE

Example:

```
TRIG:SOUR EXT
```

Selects the external trigger input as source of the trigger signal

Manual operation:

See ["Trigger Source"](#) on page 234

See ["Free Run"](#) on page 234

See ["External Trigger 1/2/3"](#) on page 234

See ["External Channel 3"](#) on page 235

See ["External Analog"](#) on page 235

See ["IF Power"](#) on page 235

See ["Baseband Power"](#) on page 236

See ["I/Q Power"](#) on page 236

See ["Digital I/Q"](#) on page 236

See ["RF Power"](#) on page 237

See ["Time"](#) on page 237

TRIGger[:SEQUence]:TIME:RINTerval <Interval>

Defines the repetition interval for the time trigger.

Parameters:

<Interval> numeric value
 Range: 2 ms to 5000 s
 *RST: 1.0 s
 Default unit: S

Example:

TRIG:SOUR TIME
 Selects the time trigger input for triggering.
 TRIG:TIME:RINT 5
 The measurement starts every 5 s.

Manual operation: See "[Repetition Interval](#)" on page 239

11.5.5 Configuring sweeps

The sweep commands define how often data from the input signal is acquired and then evaluated.

Manual configuration of the sweeps is described in "[Refresh](#)" on page 241.

| | |
|---|-----|
| [SENSe:]DDEMod:SEARch:MBURst:CALC | 481 |
| [SENSe:]SWEep:COUNT | 481 |
| [SENSe:]SWEep:COUNT:CURRent? | 482 |

[SENSe:]DDEMod:SEARch:MBURst:CALC <SelectResRangeNr>

Sets the result range to be displayed after a single sweep (e.g. a burst number).

Parameters:

<SelectResRangeNr>

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See "[Select Result Rng](#)" on page 242

[SENSe:]SWEep:COUNT <SweepCount>

Defines the number of measurements that the application uses to average traces.

In continuous measurement mode, the application calculates the moving average over the average count.

In single measurement mode, the application stops the measurement and calculates the average after the average count has been reached.

Parameters:

<SweepCount> When you set a sweep count of 0 or 1, the FSW performs one single measurement in single measurement mode.
 In continuous measurement mode, if the sweep count is set to 0, a moving average over 10 measurements is performed.
 Range: 0 to 200000
 *RST: 0

Example: SWE:COUN 64
 Sets the number of measurements to 64.
 INIT:CONT OFF
 Switches to single measurement mode.
 INIT;*WAI
 Starts a measurement and waits for its end.

Manual operation: See "[Statistic Count](#)" on page 242

[SENSe:]SWEep:COUNT:CURRent? <Counter>

Queries the current statistics counter value which indicates how many result ranges have been evaluated. For results that use the capture buffer as a source, the number of used capture buffers can be queried.

Parameters:

<Value> The number of evaluated result ranges or capture buffers.

Query parameters:

<Counter> CAPTure | STATistics

STATistics

Returns the number of result ranges that have been evaluated.

CAPTure

Returns the number of used capture buffers evaluated.

*RST: STATistics

Example: SWE:COUN:CURR? CAPT

Usage: Query only

11.5.6 Configuring bursts and patterns

The burst and pattern search settings can be configured, and new patterns can be defined.

Manual configuration of bursts and patterns is described in [Chapter 5.6, "Burst and pattern configuration"](#), on page 243.

- [Burst search](#).....482
- [Pattern searches](#).....484
- [Configuring patterns](#).....486

11.5.6.1 Burst search

The burst search commands define when a burst is detected in the analyzed signal.

- [\[SENSe:\]DDEMod:SEARch:BURSt:AUTO](#).....483
- [\[SENSe:\]DDEMod:SEARch:BURSt:CONFigure:AUTO](#).....483
- [\[SENSe:\]DDEMod:SEARch:BURSt:GLENgtH:\[MINimum\]](#).....483

| | |
|--|-----|
| [SENSe:]DDEMod:SEARch:BURSt:MODE..... | 484 |
| [SENSe:]DDEMod:SEARch:BURSt:STATe..... | 484 |
| [SENSe:]DDEMod:SEARch:BURSt:TOLerance..... | 484 |

[SENSe:]DDEMod:SEARch:BURSt:AUTO <AutoBurstSearch>

Links the burst search to the type of signal. When a signal is marked as bursted, burst search is switched on automatically.

Parameters:

<AutoBurstSearch> AUTO | MANual

Example:

```
:DDEM:SEAR:BURSt:AUTO AUTO
Enables auto burst search
```

Manual operation: See ["Enabling Burst Searches"](#) on page 244

[SENSe:]DDEMod:SEARch:BURSt:CONFigure:AUTO <State>

Sets the search tolerance and the min gap length to their default values.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 1

Example:

```
SENS:DDEM:SEAR:BURSt:CONF:AUTO ON
```

Manual operation: See ["Burst Configuration"](#) on page 244

[SENSe:]DDEMod:SEARch:BURSt:GLENth[:MINimum] <MinGapLength>

Defines the minimum time between two bursts. A minimum time with decreased level must occur between two bursts. The default unit is symbol. The value can also be given in seconds.

Parameters:

<MinGapLength> Range: 1 to 15000
 *RST: 1
 Default unit: SYM

Manual operation: See ["Min Gap Length"](#) on page 245

[SENSe:]DDEMod:SEARch:BURSt:MODE <MeasOnlyOnBurst>

Sets the vector analyzer so that a measurement is performed only if a burst is found. The command is available only if the burst search is activated (see [SENSe:]DDEMod:SEARch:BURSt:STATe on page 484).

Parameters:

<MeasOnlyOnBurst> MEAS | BURS

MEAS

Measurement is always performed

BURS

Measurement is performed only if a burst is found

Manual operation: See "[Measuring only if burst was found](#)" on page 244

[SENSe:]DDEMod:SEARch:BURSt:STATe <State>

Switches the search for a signal burst on or off.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 0

Example:

```
DDEM:SEAR:BURS OFF
Switch burst search off.
```

[SENSe:]DDEMod:SEARch:BURSt:TOLerance <Tolerance>

Controls burst search tolerance.

Parameters:

<Tolerance> Range: 1 to 15000

*RST: 1

Default unit: SYM

Example:

```
:DDEM:SEAR:BURS:TOL 1
Sets the burst tolerance to 1
```

Manual operation: See "[Search Tolerance](#)" on page 245

11.5.6.2 Pattern searches

The pattern search commands define when a pattern is detected in the analyzed signal.

| | |
|---|-----|
| [SENSe:]DDEMod:SEARch:PATtern:CONFigure:AUTO..... | 485 |
| [SENSe:]DDEMod:SEARch:SYNC:AUTO..... | 485 |
| [SENSe:]DDEMod:SEARch:SYNC:IQCThreshold..... | 485 |
| [SENSe:]DDEMod:SEARch:SYNC:MODE..... | 485 |
| [SENSe:]DDEMod:SEARch:SYNC:SElect..... | 486 |
| [SENSe:]DDEMod:SEARch:SYNC:STATe..... | 486 |

[SENSe:]DDEMod:SEARch:PATtern:CONFigure:AUTO <State>

Parameters:

<State>

Manual operation: See "[I/Q Correlation Threshold](#)" on page 246

[SENSe:]DDEMod:SEARch:SYNC:AUTO <AutoPattSearch>

Links the pattern search to the type of signal. When a signal is marked as patterned, pattern search is switched on automatically.

Parameters:

<AutoPattSearch> AUTO | MANual
 *RST: AUTO

Example:

DDEM:SEAR:SYNC AUTO
 Enables auto pattern search

Manual operation: See "[Enabling Pattern Searches](#)" on page 246

[SENSe:]DDEMod:SEARch:SYNC:IQCThreshold <CorrelationLev>

Sets the I/Q correlation threshold for pattern matching in percent. A high level means stricter matching.

Parameters:

<CorrelationLev> Range: 10.0 to 100.0
 *RST: 90.0
 Default unit: PCT

Example:

SENS:DDEM:SEAR:SYNC:IQCT 85.5

Manual operation: See "[I/Q Correlation Threshold](#)" on page 246

[SENSe:]DDEMod:SEARch:SYNC:MODE <MeasOnlyOnPatt>

Sets the vector analyzer so that the measurement is performed only if the measurement was synchronous to the selected sync pattern.

The command is available only if the pattern search is activated (see [\[SENSe:\]DDEMod:SEARch:SYNC:STATe](#) on page 486).

Parameters:

<MeasOnlyOnPatt> MEAS | SYNC

MEAS

The measurement is performed independently of successful synchronization

SYNC

The measured values are displayed and considered in the error evaluation only if the set sync pattern was found. Bursts with a wrong sync pattern (sync not found) are ignored. If an invalid or no sync pattern is found, the measurement waits and resumes running only when a valid sync pattern is found.

Manual operation: See ["Meas only if Pattern Symbols Correct"](#) on page 247

[SENSe:]DDEMod:SEARch:SYNC:SElect <Filename>

Selects a predefined sync pattern file.

Parameters:

<Filename>

Example: DDEM:SEAR:SYNC:SEL 'GSM_TSC0'

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Selected Pattern for Search"](#) on page 247
See ["Standard Patterns - selecting an assigned pattern"](#) on page 248

[SENSe:]DDEMod:SEARch:SYNC:STATe <State>

Switches the search for a sync sequence on or off.

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 0

Example: DDEM:SEAR:SYNC ON 'Switches the sync search on.'

Manual operation: See ["Enabling Pattern Searches"](#) on page 246
See ["Pattern Search On"](#) on page 250

11.5.6.3 Configuring patterns

New patterns can be defined and assigned to a signal standard.

Useful commands for configuring patterns described elsewhere:

- [\[SENSe:\]DDEMod:SEARch:SYNC:STATe](#) on page 486

- [\[SENSe:\]DDEMod:SEARch:SYNC:CATalog](#) on page 373
- [\[SENSe:\]DDEMod:BORDERing](#) on page 493

Remote commands exclusive to configuring patterns:

| | |
|---|-----|
| [SENSe:]DDEMod:SEARch:SYNC:COMMeNT | 487 |
| [SENSe:]DDEMod:SEARch:SYNC:COpy | 487 |
| [SENSe:]DDEMod:SEARch:SYNC:DELeTe | 488 |
| [SENSe:]DDEMod:SEARch:SYNC:DATA | 488 |
| [SENSe:]DDEMod:SEARch:SYNC:NAME | 488 |
| [SENSe:]DDEMod:SEARch:SYNC:NState | 488 |
| [SENSe:]DDEMod:SEARch:SYNC:PATTeRn:ADD | 489 |
| [SENSe:]DDEMod:SEARch:SYNC:PATTeRn:REMOve | 489 |
| [SENSe:]DDEMod:SEARch:SYNC:TEXT | 489 |

[SENSe:]DDEMod:SEARch:SYNC:COMMeNT <Comment>

Defines a comment to a sync pattern. The pattern must have been selected before using [\[SENSe:\]DDEMod:SEARch:SYNC:NAME](#) on page 488.

Parameters:

<Comment>

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Edit"](#) on page 249
 See ["New"](#) on page 250
 See ["Comment"](#) on page 252

[SENSe:]DDEMod:SEARch:SYNC:COpy <Pattern>

Copies a pattern file. The pattern to be copied must have been selected before using [\[SENSe:\]DDEMod:SEARch:SYNC:NAME](#) on page 488.

Tip: In manual operation, a pattern can be copied in the editor by storing it under a new name.

Setting parameters:

<Pattern>

Example: : DDEMod:SEAR:SYNC:NAME 'GSM_TSC0'
 Selects the pattern.
 : DDEMod:SEAR:SYNC:COpy 'GSM_PATT'
 Copies "GSM_TSC0" to GSM_PATT.

Usage: Setting only

Manual operation: See ["Save As"](#) on page 249

[SENSe:]DDEMod:SEARCh:SYNC:DELeTe

Deletes a sync sequence. The sync sequence to be deleted must have been selected before using [\[SENSe:\]DDEMod:SEARCh:SYNC:NAME](#) on page 488.

Usage: Event

Manual operation: See ["Delete"](#) on page 250

[SENSe:]DDEMod:SEARCh:SYNC:DATA <Data>

Defines the sync sequence of a sync pattern. The pattern must have been selected before using [\[SENSe:\]DDEMod:SEARCh:SYNC:NAME](#) on page 488.

Important: The value range of a symbol depends on the degree of modulation, e.g. for an 8PSK modulation the value range is from 0 to 7. The degree of modulation belongs to the pattern and is set using the `DDEM:SEAR:SYNC:NST` command (see [\[SENSe:\]DDEMod:SEARCh:SYNC:NSTate](#) on page 488).

Parameters:

<Data> Four values represent a symbol (hexadecimal format). The value range of a symbol depends on the degree of modulation.
 With a degree of modulation of 4, all symbols have a value range of: 0000, 0001, 0002, 0003
 With a degree of modulation of 8:
 0000, 0001, 0002, 0003, 0004, 0005, 0006, 0007

Example: `DDEM:SEAR:SYNC:DATA '00010000FFFF'`
 Defines the pattern data.

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Edit"](#) on page 249
 See ["New"](#) on page 250
 See ["Symbols"](#) on page 252

[SENSe:]DDEMod:SEARCh:SYNC:NAME <Name>**Parameters:**

<Name>

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Edit"](#) on page 249
 See ["New"](#) on page 250
 See ["Name"](#) on page 251

[SENSe:]DDEMod:SEARCh:SYNC:NSTate <NState>

Selects the degree of modulation (number of permitted states). The pattern must have been selected before using [\[SENSe:\]DDEMod:SEARCh:SYNC:NAME](#) on page 488.

The number of permitted states depends on the modulation mode.

Parameters:

<NState>

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Mod. order"](#) on page 252

[SENSe:]DDEMod:SEARch:SYNC:PATtern:ADD <AddPattern>

Adds a pattern to the current standard. Using the `DDEMod:SEAR:SYNC:SEL` command, only those patterns can be selected which belong to the current standard (see [\[SENSe:\]DDEMod:SEARch:SYNC:SELect](#) on page 486).

Setting parameters:

<AddPattern>

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Usage: Setting only

Manual operation: See ["Adding patterns to a standard"](#) on page 249

[SENSe:]DDEMod:SEARch:SYNC:PATtern:REMOve <Pattern>

Deletes one or all patterns from the current standard.

Setting parameters:

<Pattern>

Example: `SENS:DDEMod:SEAR:SYNC:PATT:REM 'pattern'`

Usage: Setting only

Manual operation: See ["Removing patterns from a standard"](#) on page 249

[SENSe:]DDEMod:SEARch:SYNC:TEXT <Text>

Defines a text to explain the pattern. The text is displayed only in the selection menu (manual control). This text should be short and concise. Detailed information about the pattern is given in the comment (see [\[SENSe:\]DDEMod:SEARch:SYNC:COMMeNt](#) on page 487).

Parameters:

<Text>

Example: See [Chapter 11.13.3, "Measurement example 3: user-defined pattern search and limit check"](#), on page 609.

Manual operation: See ["Edit"](#) on page 249
 See ["New"](#) on page 250
 See ["Description"](#) on page 251

11.5.7 Defining the result range

The result range determines which part of the capture buffer, burst or pattern is displayed.

Manual configuration of the result range is described in [Chapter 5.7, "Result range configuration"](#), on page 253.

Useful commands for result ranges described elsewhere:

- [\[SENSe:\]DDEMod:SEARCH:MBURst:START\[:SYMBOLs\]? on page 572](#)
- [DISPlay\[:WINDow<n>\]:TRACe<t>:X\[:SCALE\]:STOP? on page 562](#)

Remote commands exclusive to defining result ranges:

| | |
|---|---------------------|
| CALCulate<n>:TRACe<t>:ADJust:ALIGNment[:DEFault]..... | 490 |
| CALCulate<n>:TRACe<t>:ADJust:ALIGNment:OFFSet..... | 490 |
| CALCulate<n>:TRACe<t>:ADJust[:VALue]..... | 491 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:VOFFset..... | 491 |
| [SENSe:]DDEMod:TIME..... | 492 |
| [SENSe:]DDEMod:TIME:AUTO..... | 492 |

CALCulate<n>:TRACe<t>:ADJust:ALIGNment[:DEFault] <Alignment>

Defines where the reference point is to appear in the result range.

Suffix:

| | |
|-----|--------------------------------|
| <n> | 1..n Window |
| <t> | 1..6 Trace |

Parameters:

| | |
|-------------|--|
| <Alignment> | LEFT CENTer RIGHT |
| | LEFT |
| | The reference point is at the start of the result range. |
| | CENTer |
| | The reference point is in the middle of the result range. |
| | RIGHT |
| | The reference point is displayed at the end of the result range. |
| | *RST: LEFT |

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See ["Alignment"](#) on page 254

CALCulate<n>:TRACe<t>:ADJust:ALIGNment:OFFSet <FitOffset>

Suffix:

| | |
|-----|--------------------------------|
| <n> | 1..n Window |
|-----|--------------------------------|

<t> 1..6
Trace

Parameters:

<FitOffset> Default unit: SYM

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See ["Offset"](#) on page 254

CALCulate<n>:TRACe<t>:ADJust[:VALue] <Reference>

Defines the reference point for the display.

Suffix:

<n> 1..n
Window

<t> 1..6
Trace

Parameters:

<Reference> TRIGger | BURSt | PATtern

TRIGger

The reference point is defined by the start of the capture buffer.

BURSt

The reference point is defined by the start/center/end of the burst.

PATtern

The instrument selects the reference point and the alignment.

*RST: TRIGger

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See ["Reference"](#) on page 254

DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:VOFFset <VOffset>

Defines an offset to numbering of the symbols (Except capture buffer).

Suffix:

<n> 1..n
Window

<t> 1..6
Trace

Parameters:

<VOffset> Range: -100000 to 100000
*RST: 0
Default unit: none

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Example: `:DISP:TRAC:X:VOFF 20`
Adds an offset of 20 to the number of the symbols.

Manual operation: See ["Symbol Number at <Reference> Start"](#) on page 255

[SENSe:]DDEMod:TIME <ResultLength>

The command determines the number of displayed symbols (result length).

Setting parameters:

<ResultLength> numeric value
Range: 10 to 64000
*RST: 800
Default unit: Sym

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See ["Result Length"](#) on page 254

[SENSe:]DDEMod:TIME:AUTO <State>

Determines how the result length is defined for multi-modulation analysis.

Is only available if the additional Multi-Modulation Analysis option (FSW-K70M) is installed.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
The result length is specified by `[SENSe:]DDEMod:TIME`.
ON | 1
The result length is set to the number defined in the currently loaded Frame Structure file.
*RST: 0

Example: `DDEMod:TIME:AUTO ON`
The result range is the value determined by the loaded Frame Structure file.

Manual operation: See ["According to Frame Structure File"](#) on page 254

11.5.8 Demodulation settings

During demodulation of the vector signal some undesired effects that may occur during transmission can be compensated for. Furthermore, you can influence the synchronization process.

Manual configuration of the demodulation process is described in [Chapter 5.8, "Demodulation settings"](#), on page 255.

Useful commands for demodulation described elsewhere:

- [Chapter 11.5.1.4, "Known data"](#), on page 386

Remote commands exclusive to demodulation:

| | |
|---|-----|
| [SENSe:]DDEMod:BORDERing..... | 493 |
| [SENSe:]DDEMod:ECALc[:MODE]..... | 494 |
| [SENSe:]DDEMod:ECALc:OFFSet..... | 494 |
| [SENSe:]DDEMod:EPRate:AUTO..... | 494 |
| [SENSe:]DDEMod:EPRate[:VALue]..... | 495 |
| [SENSe:]DDEMod:EQUalizer:FILE:FORMat..... | 495 |
| [SENSe:]DDEMod:EQUalizer:LENGth..... | 496 |
| [SENSe:]DDEMod:EQUalizer:LOAD..... | 496 |
| [SENSe:]DDEMod:EQUalizer:MODE..... | 496 |
| [SENSe:]DDEMod:EQUalizer:RESet..... | 497 |
| [SENSe:]DDEMod:EQUalizer:SAVE..... | 497 |
| [SENSe:]DDEMod:EQUalizer[:STATe]..... | 497 |
| [SENSe:]DDEMod:FSYNc:AUTO..... | 498 |
| [SENSe:]DDEMod:FSYNc:LEVel..... | 498 |
| [SENSe:]DDEMod:FSYNc:RESult?..... | 498 |
| [SENSe:]DDEMod:FSYNc[:MODE]..... | 498 |
| [SENSe:]DDEMod:NORMalize:ADRoop..... | 499 |
| [SENSe:]DDEMod:NORMalize:CFDRift..... | 499 |
| [SENSe:]DDEMod:NORMalize:CHANnel..... | 499 |
| [SENSe:]DDEMod:NORMalize:FDERror..... | 500 |
| [SENSe:]DDEMod:NORMalize:IQIMbalance..... | 500 |
| [SENSe:]DDEMod:NORMalize:IQOFFset..... | 500 |
| [SENSe:]DDEMod:NORMalize:IQSKew..... | 501 |
| [SENSe:]DDEMod:NORMalize:SRERror..... | 501 |
| [SENSe:]DDEMod:OPTimization..... | 501 |
| [SENSe:]DDEMod:SEARch:PATtern:SYNC:AUTO..... | 502 |
| [SENSe:]DDEMod:SEARch:PATtern:SYNC[:STATe]..... | 502 |

[SENSe:]DDEMod:BORDERing <BitOrdering>

Determines how the bits in the symbols are ordered in all symbol displays.

Parameters:

| | |
|---------------|--|
| <BitOrdering> | MSB LSB |
| | LSB |
| | Least-significant bit first (used in Bluetooth specification, for example) |
| | MSB |
| | Most significant bit first (default) |
| *RST: | MSB |

Example: DDEM:BORD LSB

Manual operation: See ["Bit Ordering"](#) on page 262

[SENSe:]DDEMod:ECALc[:MODE] <EvmCalc>

Defines the calculation formula for EVM.

Parameters:

<EvmCalc>

SIGNal | SYMBol | MECPower | MACPower

SIGNal

Calculation normalized to the mean power of the reference signal at the symbol instants.

SYMBol

Calculation normalized to the maximum power of the reference signal at the symbol instants.

MECPower

Calculation normalized to the mean expected power of the measurement signal at the symbol instants

MACPower

Calculation normalized to the maximum expected power of the measurement signal at the symbol instants

*RST: SIGNal

Manual operation: See ["Normalize EVM to"](#) on page 260

[SENSe:]DDEMod:ECALc:OFFSet <State>

Configures the way the VSA application calculates the error vector results for offset QPSK.

Parameters:

<State>

ON | 1

VSA application compensates the delay of the Q component with respect to the I component in the measurement signal as well as the reference signal before calculating the error vector. That means that the error vector contains only one symbol instant per symbol period.

OFF | 0

The VSA application subtracts the measured signal from the reference signal to calculate the error vector. This method results in the fact that the error vector contains two symbol instants per symbol period: one that corresponds to the I component and one that corresponds to the Q component.

Manual operation: See ["Offset EVM"](#) on page 262

[SENSe:]DDEMod:EPRate:AUTO <State>

Defines how many sample points are used at each symbol to calculate modulation accuracy results automatically.

If enabled, the VSA application uses the following settings, depending on the modulation type:

| Modulation | Est. Points |
|-------------|--|
| PSK, QAM | 1 |
| Offset QPSK | 2 |
| FSK, MSK | Sample rate (see [SENSe:]DDEMod:PRATe on page 471) |

Parameters:

<State>

Manual operation: See "Estimation Points/Sym" on page 260

[SENSe:]DDEMod:EPRate[:VALue] <EstOverSampling>

Defines how many sample points are used at each symbol to calculate modulation accuracy results.

For more information see "Estimation points per symbol" on page 166.

You can also let the VSA application decide how many estimation points to use, see [SENSe:]DDEMod:EPRate:AUTO on page 494.

Parameters:

<EstOverSampling> **1**
the estimation algorithm takes only the symbol time instants into account

2
two points per symbol instant are used (required for Offset QPSK)

4 | 8 | 16 | 32
the number of samples per symbol defined in the signal capture settings is used (see [SENSe:]DDEMod:PRATe on page 471), i.e. all sample time instants are weighted equally

*RST: 1

Manual operation: See "Estimation Points/Sym" on page 260

[SENSe:]DDEMod:Equalizer:FILE:FORMat <EqFormat>

Determines the file format for stored equalizer results.

Parameters:

<EqFormat> VAE | FRES

VAE
To be used as an equalizer file in VSA applications

FRES
To be used as a user-defined frequency response correction file in any other application that supports it

*RST: VAE

Example: DDEM:EQU:FILE:FORM FRES

Manual operation: See ["Save/Load Equalizer"](#) on page 259

[SENSe:]DDEMod:EQualizer:LENGth <Length>

Defines the length of the equalizer in terms of symbols.

Parameters:

<Length> Range: 1 to 256
 *RST: 10
 Default unit: SYMB

Example: DDEM:EQU:LENG 101
 Sets the equalizer length to 101 symbols.

Manual operation: See ["Filter Length"](#) on page 258

[SENSe:]DDEMod:EQualizer:LOAD <FileName>

Selects a user-defined equalizer. The equalizer mode is automatically switched to USER (see [\[SENSe:\]DDEMod:EQualizer:MODE](#) on page 496).

Parameters:

<FileName> Path and file name (without extension)

Example: DDEM:EQU:LOAD 'D:\MyEqualizer'
 Selects equalizer named `MyEqualizer` in directory D.

Manual operation: See ["Save/Load Equalizer"](#) on page 259

[SENSe:]DDEMod:EQualizer:MODE <Mode>

Switches between the equalizer modes.

For details see [Chapter 4.4.6, "The equalizer"](#), on page 142.

Parameters:

<Mode>

NORMAL
 Switches the equalizer on for the next sweep.

TRACKing
 Switches the equalizer on; the results of the equalizer in the previous sweep are considered to calculate the new filter.

FREeze
 The filter is no longer changed, the current equalizer values are used for subsequent sweeps.

USER
 A user-defined equalizer loaded from a file is used.

AVERaging

Switches the equalizer on; the results of the equalizer in all previous sweeps (since the instrument was switched on or the equalizer was reset) are considered to calculate the new filter.

To start a new averaging process, use the [\[SENSe:\]DDEMod:EQualizer:RESet](#) on page 497 command.

*RST: TRACKing

Example:

DDEM:EQU:MODE TRAC

Activates the tracking mode of the equalizer.

Manual operation: See ["Mode"](#) on page 258

[SENSe:]DDEMod:EQualizer:RESet

Deletes the data of the currently selected equalizer. After deletion, training can start again using the command `DDEM:EQU:MODE TRA` (see [\[SENSe:\]DDEMod:EQualizer:MODE](#) on page 496).

Usage: Event

Manual operation: See ["Reset Equalizer"](#) on page 258

[SENSe:]DDEMod:EQualizer:SAVE <FileName>

Saves the current equalizer results to a file.

Parameters:

<FileName> File name

Example:

DDEM:EQU:SAVE 'D:\MyEqualizer'

Saves the current equalizer results to `D:\MyEqualizer.vae`.

Manual operation: See ["Save/Load Equalizer"](#) on page 259

[SENSe:]DDEMod:EQualizer[:STATE] <State>

Activates or deactivates the equalizer.

For more information on the equalizer see [Chapter 4.4.6, "The equalizer"](#), on page 142.

Parameters:

<State> *RST: 0

Example:

DDEM:EQU OFF

Manual operation: See ["State"](#) on page 258

[SENSe:]DDEMod:FSYNc:AUTO <State>

Selects manual or automatic Fine Sync

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 0

Example: SENS : DDEMod : FSYNc : AUTO ON**Manual operation:** See "[Fine Synchronization](#)" on page 261

[SENSe:]DDEMod:FSYNc:LEVel <SERLevel>

Sets the Fine Sync Level if fine sync works on Known Data

Parameters:

<SERLevel> Range: 0.0 to 100.0
 *RST: 10.0
 Default unit: PCT

Example: SENSe : DDEMod : FSYNc : LEVel 10.0**Manual operation:** See "[If SER ≤](#)" on page 262

[SENSe:]DDEMod:FSYNc:RESult?

Queries the result of the fine sync.

Return values:

<Result> ON | OFF | 0 | 1
OFF | 0
 fine sync with known data failed
ON | 1
 fine sync with known data successful

Usage: Query only**Manual operation:** See "[Fine Synchronization](#)" on page 261

[SENSe:]DDEMod:FSYNc[:MODE] <FineSync>

Defines the fine synchronization mode used to calculate results, e.g. the bit error rate.

Note: You can define a maximum symbol error rate (SER) for the known data in reference to the analyzed data. If the SER of the known data exceeds this limit, the default synchronization using the detected data is performed. See [\[SENSe:\]DDEMod:FSYNc:LEVe1](#) on page 498.

Parameters:

<FineSync> KDATA | PATTeRn | DDATa

KDATA

(Default) The reference signal is defined as the data sequence from the loaded Known Data file that most closely matches the measured data.

PATTeRn

The reference signal is estimated from the defined pattern. This setting requires an activated pattern search, see [\[SENSe:\]DDEMod:SEARCh:SYNc:STATe](#) on page 486.

DDATa

The reference signal is estimated from the detected data.

Manual operation: See "[Fine Synchronization](#)" on page 261

[SENSe:]DDEMod:NORMAlize:ADRooP <State>

Parameters:

<State>

Manual operation: See "[Compensate for... \[\(PSK, MSK, ASK, QAM\)\]](#)" on page 257

[SENSe:]DDEMod:NORMAlize:CFDRift <State>

Defines whether the carrier frequency drift is compensated for FSK modulation.

Parameters:

<State>

Manual operation: See "[Compensate for... \[\(FSK\)\]](#)" on page 257

[SENSe:]DDEMod:NORMAlize:CHANnel <State>

Switches the channel compensation on or off. (With equalizer only)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 0

Example:

DDEM:NORM:CHAN OFF
Switches the compensation off.

Manual operation: See "[Compensate for... \[\(PSK, MSK, ASK, QAM\)\]](#)" on page 257

[SENSe:]DDEMod:NORMAlize:FDERror <State>

Defines whether the deviation error is compensated for when calculating the frequency error for FSK modulation.

Parameters:

<State> **ON | 1**
Scales the reference signal to the actual deviation of the measurement signal.

OFF | 0
Uses the entered nominal deviation for the reference signal.

Manual operation: See "[Compensate for... \[\(FSK\)\]](#)" on page 257

[SENSe:]DDEMod:NORMAlize:IQIMbalance <State>

Switches the compensation of the I/Q imbalance on or off.

Parameters:

<State> **ON | OFF | 0 | 1**

OFF | 0
Switches the function off

ON | 1
Switches the function on

*RST: 0

Example: DDEM:NORM:IQIM OFF
Switches the compensation off.

Manual operation: See "[Compensate for... \[\(PSK, MSK, ASK, QAM\)\]](#)" on page 257

[SENSe:]DDEMod:NORMAlize:IQOFset <State>

Switches the compensation of the I/Q offset on or off.

Parameters:

<State> **ON | OFF | 0 | 1**

OFF | 0
Switches the function off

ON | 1
Switches the function on

*RST: 0

Example: DDEM:NORM:IQOF OFF
Switches the compensation off.

Manual operation: See "[Compensate for... \[\(PSK, MSK, ASK, QAM\)\]](#)" on page 257

[SENSe:]DDEMod:NORMAlize:IQSKew <State>

Switches the compensation of the I/Q skew on or off.

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 0

Manual operation: See "[Compensate for... \[\(PSK, MSK, ASK, QAM\)\]](#)" on page 257

[SENSe:]DDEMod:NORMAlize:SRERror <State>

Switches the compensation for symbol rate error on or off

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 0

Example:

DDEM:NORM:SRER OFF
 Switches the compensation for symbol rate error off.

Manual operation: See "[Compensate for... \[\(PSK, MSK, ASK, QAM\)\]](#)" on page 257

[SENSe:]DDEMod:OPTimization <Criterion>

Determines the optimization criteria for the demodulation.

Parameters:

<Criterion> RMSMin | EVMMin
 RMSMin
 Optimizes calculation such that the RMS of the error vector is minimal.
 EVMMin
 Optimizes calculation such that EVM is minimal.
 *RST: RMSMin (depends on selected standard)

Example:

DDEM:OPT RMSMin
 Minimizes the RMS of the error vector.

Manual operation: See "[Optimization](#)" on page 260

[SENSe:]DDEMod:SEARch:PATtern:SYNC:AUTO <UseWfmForSync>

Selects manual or automatic synchronization with a pattern waveform to speed up measurements.

Parameters:

<UseWfmForSync> AUTO | MANual

Manual operation: See "[Coarse Synchronization](#)" on page 261

[SENSe:]DDEMod:SEARch:PATtern:SYNC[:STATe] <State>

Switches fast synchronization on and off, if you manually synchronize with a waveform pattern.

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on
 *RST: 0

Manual operation: See "[Coarse Synchronization](#)" on page 261

11.5.9 Measurement filter settings

You can configure the measurement filter to be used.

Manual configuration of the measurement filter is described in [Chapter 5.9, "Measurement filter settings"](#), on page 263.

For more information on measurement filters, refer to [Chapter 4.1.4, "Measurement filters"](#), on page 71.

Useful commands for defining measurement filters described elsewhere:

- [\[SENSe:\]DDEMod:FILTer:ALPHa](#) on page 365
- [\[SENSe:\]DDEMod:FILTer\[:STATe\]](#) on page 365

Remote commands exclusive to configuring measurement filters:

| | |
|--|-----|
| [SENSe:]DDEMod:MFILter:ALPHa | 502 |
| [SENSe:]DDEMod:MFILter:AUTO | 503 |
| [SENSe:]DDEMod:MFILter:NAME | 503 |
| [SENSe:]DDEMod:MFILter[:STATe] | 503 |
| [SENSe:]DDEMod:MFILter:USER | 503 |

[SENSe:]DDEMod:MFILter:ALPHa <MeasFiltAlphaBT>

Sets the alpha value of the measurement filter.

Parameters:

<MeasFiltAlphaBT> Range: 0.03 to 1.0
 *RST: 0.22
 Default unit: none

Manual operation: See "[Alpha/BT](#)" on page 264

[SENSe:]DDEMod:MFILter:AUTO <State>

If this command is set to "ON", the measurement filter is defined automatically depending on the transmit filter (see [\[SENSe:\]DDEMod:TFILter:NAME](#) on page 370).

Parameters:

<State> *RST: 1

Manual operation: See "[Using the Transmit Filter as a Measurement Filter \(Auto\)](#)" on page 263

[SENSe:]DDEMod:MFILter:NAME <Name>

Selects a measurement filter and automatically sets its state to "ON".

Parameters:

<Name> Name of the measurement filter or 'User' for a user-defined filter. An overview of available measurement filters is provided in [Chapter C.2, "Measurement filters"](#), on page 623.

Manual operation: See "[Type](#)" on page 264

[SENSe:]DDEMod:MFILter[:STATe] <State>

Use this command to switch the measurement filter off. To switch a measurement filter on, use the [\[SENSe:\]DDEMod:MFILter:NAME](#) command.

Parameters:

<State> **OFF | 0**
 Switches the measurement filter off.

ON | 1
 Switches the measurement filter specified by [\[SENSe:\]DDEMod:MFILter:NAME](#) on. However, this command is not necessary, as the [\[SENSe:\]DDEMod:MFILter:NAME](#) command automatically switches the selected filter on.

*RST: ON

Manual operation: See "[Type](#)" on page 264

[SENSe:]DDEMod:MFILter:USER <FilterName>

Selects the user-defined measurement filter.

For details on user-defined filters, see [Chapter 4.1.5, "Customized filters"](#), on page 73.

Parameters:

<FilterName> Name of the user-defined filter

Example:

```
SENS:DDEM:MFIL:NAME 'USER'
```

Selects user filter mode for the meas filter

```
ENS:DDEM:MFIL:USER 'D:\MyMeasFilter'
```

Selects the user-defined meas filter

Manual operation:

See ["Type"](#) on page 264

See ["Load User Filter"](#) on page 264

11.5.10 Defining the evaluation range

The evaluation range defines which range of the result is to be evaluated.

Manual configuration of the evaluation range is described in [Chapter 5.10, "Evaluation range configuration"](#), on page 265.

| | |
|---|-----|
| CALCulate<n>:ELIN<ri>:STATe | 504 |
| CALCulate<n>:ELIN<ri>[:VALue] | 505 |

CALCulate<n>:ELIN<ri>:STATe <State>

Restricts the evaluation range. The evaluation range is considered for the following display types:

- eye diagrams
- constellation diagrams
- modulation accuracy
- statistic displays
- spectrum displays

Suffix:

<n> 1..n
[Window](#)

<ri> 1..n
irrelevant

Parameters:

<State>

ON | 1

The evaluation range extends from the start value defined by

CALC:ELIN1:VAL to the stop value defined by

CALC:ELIN2:VAL (see [CALCulate<n>:ELIN<ri>\[:VALue\]](#) on page 505).

OFF | 0

The complete result area is evaluated.

*RST: 0

Example:

See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See ["Evaluating the Entire Result Range"](#) on page 266

CALCulate<n>:ELIN<ri>[:VALue] <LeftDisp>

Defines the start and stop values for the evaluation range (see [CALCulate<n>:ELIN<ri>:STATe](#) on page 504).

Suffix:

<n> 1..n
Window

<ri> 1..n
1: start value, 2: stop value

Parameters:

<LeftDisp> Range: 0 to 1000000
*RST: 0
Default unit: SYM

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See ["Start / Stop"](#) on page 266

11.5.11 Adjusting settings automatically

Some settings can be adjusted by the FSW automatically according to the current measurement settings.

Manual execution of automatic adjustment functions is described in [Chapter 5.11, "Adjusting settings automatically"](#), on page 266.

| | |
|--|-----|
| DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE..... | 505 |
| DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO:ALL..... | 506 |
| [SENSe:]ADJust:CONFigure:LEVel:DURation..... | 506 |
| [SENSe:]ADJust:CONFigure:LEVel:DURation:MODE..... | 506 |
| [SENSe:]ADJust:CONFigure:HYSTeresis:LOWer..... | 507 |
| [SENSe:]ADJust:CONFigure:HYSTeresis:UPPer..... | 507 |
| [SENSe:]ADJust:CONFigure:TRIGger..... | 508 |
| [SENSe:]DDEMod:PRESet:RLEVel..... | 508 |
| [SENSe:]ADJust:LEVel..... | 508 |

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:AUTO ONCE

Automatic scaling of the y-axis is performed once, then switched off again (for all traces).

(Not available for statistical results.)

Suffix:

<n> Window

<t> irrelevant

Manual operation: See ["Auto Scale Once/Auto Scale Window"](#) on page 227

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO:ALL

Automatic scaling of the y-axis is performed once in all windows, then switched off again.

Suffix:

<n> 1..n
[Window](#)

<t> 1..6
[Trace](#)

Usage: Event

Manual operation: See ["Auto Scale All"](#) on page 268

[SENSe:]ADJust:CONFigure:LEVel:DURation <Duration>

To determine the ideal reference level, the FSW performs a measurement on the current input data. This command defines the length of the measurement if [\[SENSe:\]ADJust:CONFigure:LEVel:DURation:MODE](#) is set to `MANual`.

Parameters:

<Duration> Numeric value in seconds
 Range: 0.001 to 16000.0
 *RST: 0.001
 Default unit: s

Example:

```
ADJ:CONF:DUR:MODE MAN
Selects manual definition of the measurement length.
ADJ:CONF:LEV:DUR 5ms
Length of the measurement is 5 ms.
```

Manual operation: See ["Changing the Automatic Measurement Time \(Meas Time Manual\)"](#) on page 267

[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE <Mode>

To determine the ideal reference level, the FSW performs a measurement on the current input data. This command selects the way the FSW determines the length of the measurement .

Parameters:

<Mode> **AUTO**
 The FSW determines the measurement length automatically according to the current input data.

MANual

The FSW uses the measurement length defined by [\[SENSe:\]ADJust:CONFigure:LEVel:DURation](#) on page 506.

*RST: AUTO

Manual operation: See ["Resetting the Automatic Measurement Time \(Meas Time Auto\)"](#) on page 267
See ["Changing the Automatic Measurement Time \(Meas Time Manual\)"](#) on page 267

[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer <Threshold>

When the reference level is adjusted automatically using the [SENSe:]ADJust:LEVEl on page 508 command, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Parameters:

<Threshold> Range: 0 dB to 200 dB
*RST: +1 dB
Default unit: dB

Example:

SENS:ADJ:CONF:HYST:LOW 2

For an input signal level of currently 20 dBm, the reference level is only adjusted when the signal level falls below 18 dBm.

Manual operation: See ["Lower Level Hysteresis"](#) on page 268

[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer <Threshold>

When the reference level is adjusted automatically using the [SENSe:]ADJust:LEVEl on page 508 command, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Parameters:

<Threshold> Range: 0 dB to 200 dB
*RST: +1 dB
Default unit: dB

Example:

SENS:ADJ:CONF:HYST:UPP 2

Example:

For an input signal level of currently 20 dBm, the reference level is only adjusted when the signal level rises above 22 dBm.

Manual operation: See ["Upper Level Hysteresis"](#) on page 267

[SENSe:]ADJust:CONFigure:TRIGger <State>

Defines the behavior of a triggered measurement when adjusting a setting automatically (using `SENS:ADJ:LEV ON`, for example).

Parameters:

<State> ON | OFF | 0 | 1

ON | 1
(default:) The measurement for adjustment waits for the next trigger.

OFF | 0
The measurement for adjustment is performed without waiting for a trigger (corresponds to "Continue" in manual operation).

*RST: 0

Example:

```
//Use default ref level at 0.00 dBm.
//Define an RF power trigger at -20 dBm
:TRIG:SEQ:SOUR RFP
:TRIG:SEQ:LEV:RFP -20
//Perform adjustment measurement without waiting for trigger
SENS:ADJ:CONF:TRIG OFF
//Perform auto level adjustment
:SENS:ADJ:LEV;*WAI
```

[SENSe:]DDEMod:PRESet:RLEVel**[SENSe:]ADJust:LEVel**

Initiates a single (internal) measurement that evaluates and sets the ideal reference level for the current input data and measurement settings. Thus, the settings of the RF attenuation and the reference level are optimized for the signal level. The FSW is not overloaded and the dynamic range is not limited by an S/N ratio that is too small.

Example: ADJ:LEV

Manual operation: See ["Setting the Reference Level Automatically \(Auto Level\)"](#) on page 221

11.6 Performing a measurement

When the VSA application is activated, a continuous sweep is performed automatically. However, you can stop and start a new measurement any time.

Furthermore, you can perform a sequence of measurements using the Sequencer (see ["Multiple Measurement Channels and Sequencer Function"](#) on page 16).

| | |
|------------------------------|-----|
| ABORT..... | 509 |
| INITiate<n>:CONMeas..... | 509 |
| INITiate<n>:CONTinuous..... | 510 |
| INITiate<n>:[IMMEDIATE]..... | 510 |
| INITiate:REFMeas..... | 511 |

| | |
|---------------------------------------|-----|
| INITiate<n>:REFResh..... | 511 |
| INITiate:SEQuencer:REFResh[:ALL]..... | 511 |
| INITiate:SEQuencer:ABORt..... | 512 |
| INITiate:SEQuencer:IMMediate..... | 512 |
| INITiate:SEQuencer:MODE..... | 512 |
| SYSTem:SEQuencer..... | 513 |

ABORt

Aborts the measurement in the current channel and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the *OPC? or *WAI command after ABOR and before the next command.

For details on overlapping execution see [Remote control via SCPI](#).

To abort a sequence of measurements by the Sequencer, use the [INITiate:SEQuencer:ABORt](#) command.

Note on blocked remote control programs:

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel to the FSW is blocked for further commands. In this case, you must interrupt processing on the remote channel first in order to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the FSW on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

- **Visa:** viClear()
- **GPIB:** ibclr()
- **RSIB:** RSDLLibclr()

Now you can send the ABORt command on the remote channel performing the measurement.

Example: ABOR; :INIT:IMM
Aborts the current measurement and immediately starts a new one.

Example: ABOR; *WAI
 INIT:IMM
Aborts the current measurement and starts a new one once abortion has been completed.

Usage: Event

INITiate<n>:CONMeas

Restarts a (single) measurement that has been stopped (using ABORt) or finished in single measurement mode.

The measurement is restarted at the beginning, not where the previous measurement was stopped.

As opposed to `INITiate<n>[:IMMEDIATE]`, this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using maxhold or averaging functions.

Suffix:

<n> irrelevant

Usage:

Asynchronous command

Manual operation: See "[Continue Single Sweep](#)" on page 241

INITiate<n>:CONTInuous <State>

Controls the measurement mode for an individual channel.

Note that in single measurement mode, you can synchronize to the end of the measurement with `*OPC`, `*OPC?` or `*WAI`. In continuous measurement mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous measurement mode in remote control, as results like trace data or markers are only valid after a single measurement end synchronization.

For details on synchronization see [Remote control via SCPI](#).

If the measurement mode is changed for a channel while the Sequencer is active (see [INITiate:SEQuencer:IMMEDIATE](#) on page 512), the mode is only considered the next time the measurement in that channel is activated by the Sequencer.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF | 0 | 1

ON | 1

Continuous measurement

OFF | 0

Single measurement

*RST: 1 (some applications can differ)

Example:

```
INIT:CONT OFF
```

Switches the measurement mode to single measurement.

```
INIT:CONT ON
```

Switches the measurement mode to continuous measurement.

Manual operation: See "[Continuous Sweep / Run Cont](#)" on page 240

INITiate<n>[:IMMEDIATE]

Starts a (single) new measurement.

For a statistics count > 0, this means a restart of the corresponding number of measurements. With trace mode MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

You can synchronize to the end of the measurement with *OPC, *OPC? or *WAI.

For details on synchronization see [Remote control via SCPI](#).

Suffix:

<n> irrelevant

Usage:

Asynchronous command

Manual operation:

See "[Single Sweep / Run Single](#)" on page 241

INITiate:REFMeas

Repeats the evaluation of the data currently in the capture buffer without capturing new data.

This is useful for long capture buffers that are split into sections for result displays. In this case, only the data in the currently selected capture buffer *section* is automatically refreshed after configuration changes. To update the entire capture buffer, you must refresh the evaluation manually using this command. See also [Chapter 4.8, "Capture buffer display"](#), on page 167.

Usage:

Event

Manual operation:

See "[Refresh](#)" on page 241

INITiate<n>:REFResh

Updates the current measurement results to reflect the current measurement settings.

No new I/Q data is captured. Thus, measurement settings apply to the I/Q data currently in the capture buffer.

The command applies exclusively to I/Q measurements. It requires I/Q data.

Suffix:

<n> irrelevant

Example:

```
INIT:REFR
```

Updates the IQ measurement results.

Usage:

Asynchronous command

Manual operation:

See "[Refresh \(MSRA/MSRT only\)](#)" on page 242

INITiate:SEQuencer:REFResh[:ALL]

Is only available if the Sequencer is deactivated ([SYSTem:SEQuencer](#) [SYST:SEQ:OFF](#)) and only in MSRA/MSRT mode.

The data in the capture buffer is re-evaluated by all active MSRA/MSRT secondary applications.

Example:

```

SYST:SEQ:OFF
Deactivates the scheduler
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a new data measurement and waits for the end of the
sweep.
INIT:SEQ:REFR
Refreshes the display for all channels.

```

INITiate:SEQuencer:ABORt

Stops the currently active sequence of measurements.

You can start a new sequence any time using `INITiate:SEQuencer:IMMEDIATE` on page 512.

Usage: Event

INITiate:SEQuencer:IMMEDIATE

Starts a new sequence of measurements by the Sequencer.

Its effect is similar to the `INITiate<n>[:IMMEDIATE]` command used for a single measurement.

Before this command can be executed, the Sequencer must be activated (see `SYSTem:SEQuencer` on page 513).

Example:

```

SYST:SEQ ON
Activates the Sequencer.
INIT:SEQ:MODE SING
Sets single sequence mode so each active measurement is per-
formed once.
INIT:SEQ:IMM
Starts the sequential measurements.

```

INITiate:SEQuencer:MODE <Mode>

Defines the capture mode for the entire measurement sequence and all measurement groups and channels it contains.

Note: To synchronize to the end of a measurement sequence using `*OPC`, `*OPC?` or `*WAI`, use `SINGLE` Sequencer mode.

Parameters:

<Mode>

SINGLE

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence is finished.

CONTInuous

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence restarts with the first one and continues until it is stopped explicitly.

*RST: CONTInuous

SYSTem:SEQuencer <State>

Turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (`INIT:SEQ...`) are executed, otherwise an error occurs.

A detailed programming example is provided in the "Operating Modes" chapter in the FSW User Manual.

Parameters:

<State> ON | OFF | 0 | 1

ON | 1

The Sequencer is activated and a sequential measurement is started immediately.

OFF | 0

The Sequencer is deactivated. Any running sequential measurements are stopped. Further Sequencer commands (`INIT:SEQ...`) are not available.

*RST: 0

Example:

`SYST:SEQ ON`

Activates the Sequencer.

`INIT:SEQ:MODE SING`

Sets single Sequencer mode so each active measurement is performed once.

`INIT:SEQ:IMM`

Starts the sequential measurements.

`SYST:SEQ OFF`

11.7 Analysis

General result analysis settings concerning the trace, markers, windows etc. can be configured.

- [Configuring traces](#)..... 514
- [Working with markers](#)..... 517
- [Configuring display lines for eye diagrams](#)..... 529
- [Configuring modulation accuracy limit lines](#)..... 533
- [Configuring an analysis interval and line \(MSRA mode only\)](#)..... 539
- [Configuring an analysis interval and line \(MSRT mode only\)](#)..... 541

11.7.1 Configuring traces

The trace settings determine how the measured data is analyzed and displayed on the screen. Depending on the result display, between 1 and 6 traces may be displayed.

Manual configuration of traces is described in [Chapter 6.1, "Trace settings"](#), on page 270.



Commands for storing trace data are described in [Chapter 11.9.1, "Retrieving trace data and marker values"](#), on page 560.

Useful commands for trace configuration described elsewhere:

- `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]`
on page 468

Remote commands exclusive to trace configuration:

| | |
|--|-----|
| <code>CALCulate<n>:TRACe<t>[:VALue]</code> | 514 |
| <code>CALCulate<n>:TRACe<t>:SYMBOLs</code> | 515 |
| <code>DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE</code> | 515 |
| <code>DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe]</code> | 516 |
| <code>DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:PRESet</code> | 517 |

`CALCulate<n>:TRACe<t>[:VALue]` <TraceRefType>

This commands selects the signal to be used as the data source for a trace.

For `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE` View, the data source to be evaluated cannot be changed. It remains set to the value that was most recently set.

Suffix:

<n> Window

<t> Trace

Parameters:

<TraceRefType> MEAS | REF | ERRor | TCAP

MEAS

Measurement signal

REF

Reference signal

ERR

Error

TCAP

Capture buffer

*RST: Depends on the current measurement.

Manual operation: See "[Evaluation](#)" on page 273

CALCulate<n>:TRACe<t>:SYMBols <SymbolSelection>

This commands selects which symbols are displayed by a trace (in a constellation graph with 2 modulations).

For `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE` View, the symbol selection cannot be changed. It remains set to the value that was most recently set.

Suffix:

<n> 1..n
Window

<t> 1..6
Trace

Parameters:

<SymbolSelection> ALL | PATTErn | DATA

ALL

Trace consists of constellation points for all symbols

PATTErn

Trace consists of only pattern symbols

DATA

Trace consists of only data symbols

*RST: ALL

Example:

`CALC2:TRAC5 PATTErn`

Displays only the pattern symbols on trace 5.

Manual operation: See "[Filter \(I/Q Constellation, K70M only\)](#)" on page 273

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE <Mode>

Selects the trace mode. If necessary, the selected trace is also activated.

For max hold, min hold or average trace mode, you can set the number of single measurements with `[SENSe:]SWEep:COUNT`. Note that synchronization to the end of the measurement is possible only in single sweep mode. Depending on the result display, not all trace modes are available.

For the Magnitude Overview Absolute and the Magnitude Absolute (Selected CB) result displays, only the trace modes "Clear/ Write" and "View" are available.

Suffix:

<n> Window

<w> subwindow
Not supported by all applications

<t> Trace

Parameters:

<Mode> **WRITE**
(default:) Overwrite mode: the trace is overwritten by each sweep.

AVERage

The average is formed over several sweeps. The "Sweep/Average Count" determines the number of averaging procedures.

MAXHold

The maximum value is determined over several sweeps and displayed. The FSW saves the sweep result in the trace memory only if the new value is greater than the previous one.

MINHold

The minimum value is determined from several measurements and displayed. The FSW saves the sweep result in the trace memory only if the new value is lower than the previous one.

VIEW

The current contents of the trace memory are frozen and displayed.

BLANK

Hides the selected trace.

DENSity

The occurrence of each value within the current result range or evaluation range is indicated by color.

This trace mode is only available for constellation, vector, and eye diagrams.

*RST: Trace 1: WRITe, Trace 2-6: BLANK

Example:

```
INIT:CONT OFF
```

Switching to single sweep mode.

```
SWE:COUN 16
```

Sets the number of measurements to 16.

```
DISP:TRAC3:MODE WRIT
```

Selects clear/write mode for trace 3.

```
INIT;*WAI
```

Starts the measurement and waits for the end of the measurement.

Manual operation: See ["Trace Mode"](#) on page 272

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATE] <State>

Turns a trace on and off.

The measurement continues in the background.

Suffix:

<n> [Window](#)

<w> subwindow
Not supported by all applications

<t> [Trace](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example: `DISP:TRAC3 ON`**Manual operation:** See ["Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6"](#) on page 271
See ["Trace 1/ Trace 2/ Trace 3/ Trace 4 \(Softkeys\)"](#) on page 274**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:PRESet <ResultType>**

Applies predefined, commonly required trace settings to the selected window.

Suffix:<n> 1..n
[Window](#)<w> 1..n
subwindow<t> 1..n
[Trace](#)**Parameters:**<ResultType> **ALL**
Preset All Traces
MAM
Max | Avg | Min
MCM
Max | ClrWrite | Min**Example:** `DISP:WIND3:TRAC:PRES MCM`
In window 3, the traces are set to the following modes:
Trace 1: Max Hold
Trace 2: Clear Write
Trace 3: Min Hold**Manual operation:** See ["Predefined Trace Settings - Quick Config"](#) on page 274

11.7.2 Working with markers

Markers help you analyze your measurement results by determining particular values in the diagram. Thus you can extract numeric values from a graphical display.

Manual configuration of markers is described in [Chapter 6.3, "Markers"](#), on page 277.

- [Individual marker settings](#)..... 518
- [Marker search and positioning settings](#).....522

11.7.2.1 Individual marker settings

In VSA evaluations, up to 5 markers can be activated in each diagram at any time.

| | |
|--|-----|
| CALCulate<n>:MARKer<m>:AOFF..... | 518 |
| CALCulate<n>:MARKer<m>:LINK..... | 518 |
| CALCulate<n>:MARKer<m>[:STATe]..... | 518 |
| CALCulate<n>:MARKer<m>:TRACe..... | 519 |
| CALCulate<n>:MARKer<m>:X..... | 519 |
| CALCulate<n>:MARKer<m>:Y?..... | 520 |
| CALCulate<n>:DELTamarker<m>:AOFF..... | 520 |
| CALCulate<n>:DELTamarker<m>:X..... | 520 |
| CALCulate<n>:DELTamarker<m>:Y?..... | 521 |
| CALCulate<n>:DELTamarker<m>[:STATe]..... | 521 |
| CALCulate<n>:DELTamarker<m>:TRACe..... | 521 |

CALCulate<n>:MARKer<m>:AOFF

Turns off all markers.

Suffix:

<n> Window

<m> Marker

Example: CALC:MARK:AOFF
Switches off all markers.

Manual operation: See "All Markers Off" on page 278

CALCulate<n>:MARKer<m>:LINK <MarkerCoupling>

With this command markers between several screens can be coupled, i.e. use the same x-value. All screens can be linked with the marker x-value scaled in symbols or time, except those showing the capture buffer. If several capture buffer measurements are visible, their markers are coupled, too.

Suffix:

<n> Window

<m> Marker

Setting parameters:

<MarkerCoupling> ON | OFF | 1 | 0
*RST: 0

Manual operation: See "Couple Windows" on page 278

CALCulate<n>:MARKer<m>[:STATe] <State>

Turns markers on and off. If the corresponding marker number is currently active as a delta marker, it is turned into a normal marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Parameters:**

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:MARK3 ON

Switches on marker 3.

Manual operation: See ["Marker State"](#) on page 278
 See ["Marker Type"](#) on page 278

CALCulate<n>:MARKer<m>:TRACe <Trace>

Selects the trace the marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Suffix:<n> [Window](#)<m> [Marker](#)**Parameters:**<Trace> **1 to 6**

Trace number the marker is assigned to.

Example:

//Assign marker to trace 1

CALC:MARK3:TRAC 2

Manual operation: See ["Assigning the Marker to a Trace"](#) on page 278

CALCulate<n>:MARKer<m>:X <Position>

Moves a marker to a specific coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

Suffix:<n> [Window](#)<m> [Marker](#)

Parameters:

<Position> Numeric value that defines the marker position on the x-axis.
The unit depends on the result display.

Range: The range depends on the current x-axis range.
Default unit: Hz

Example:

CALC:MARK2:X 1.7MHz

Positions marker 2 to frequency 1.7 MHz.

Manual operation: See "[X-value](#)" on page 278

CALCulate<n>:MARKer<m>:Y?

Queries the result at the position of the specified marker.

Suffix:

<n> 1..n

<m> 1..n

Return values:

<Result> Default unit: DBM

Usage: Query only

CALCulate<n>:DELTamarker<m>:AOFF

Turns off *all* delta markers.

Suffix:

<n> [Window](#)

<m> irrelevant

Example:

CALC:DELT:AOFF

Turns off all delta markers.

CALCulate<n>:DELTamarker<m>:X <Position>

Moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Example:

CALC:DELT:X?

Outputs the absolute x-value of delta marker 1.

Manual operation: See "[X-value](#)" on page 278

CALCulate<n>:DELTamarker<m>:Y?

Queries the result at the position of the specified delta marker.

Suffix:

<n> 1..n

<m> 1..n

Return values:

<Result> Result at the position of the delta marker.
The unit is variable and depends on the one you have currently set.

Default unit: DBM

Usage: Query only

CALCulate<n>:DELTamarker<m>[:STATe] <State>

Turns delta markers on and off.

If necessary, the command activates the delta marker first.

No suffix at DELTmarker turns on delta marker 1.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:DELT2 ON

Turns on delta marker 2.

Manual operation: See "[Marker State](#)" on page 278

See "[Marker Type](#)" on page 278

CALCulate<n>:DELTamarker<m>:TRACe <Trace>

Selects the trace a delta marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Parameters:

<Trace> Trace number the marker is assigned to.

Example:

CALC:DELT2:TRAC 2
Positions delta marker 2 on trace 2.

11.7.2.2 Marker search and positioning settings

Several functions are available to set the marker to a specific position very quickly and easily. In order to determine the required marker position, searches may be performed. The search results can be influenced by special settings.

Useful commands for positioning markers described elsewhere:

- [CALCulate<n>:MARKer<m>:TRACe](#) on page 519
- [CALCulate<n>:DELTamarker<m>:TRACe](#) on page 521

Remote commands exclusive to positioning markers:

| | |
|--|-----|
| CALCulate<n>:DELTamarker<m>:MAXimum:APEak | 522 |
| CALCulate<n>:DELTamarker<m>:MAXimum:LEFT | 523 |
| CALCulate<n>:DELTamarker<m>:MAXimum:NEXT | 523 |
| CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK] | 523 |
| CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT | 523 |
| CALCulate<n>:DELTamarker<m>:MBURst:START | 524 |
| CALCulate<n>:DELTamarker<m>:MINimum:LEFT | 524 |
| CALCulate<n>:DELTamarker<m>:MINimum:NEXT | 524 |
| CALCulate<n>:DELTamarker<m>:MINimum[:PEAK] | 524 |
| CALCulate<n>:DELTamarker<m>:MINimum:RIGHT | 525 |
| CALCulate<n>:MARKer<m>:MAXimum:APEak | 525 |
| CALCulate<n>:MARKer<m>:MAXimum:LEFT | 525 |
| CALCulate<n>:MARKer<m>:MAXimum:NEXT | 525 |
| CALCulate<n>:MARKer<m>:MAXimum:RIGHT | 525 |
| CALCulate<n>:MARKer<m>:MAXimum[:PEAK] | 526 |
| CALCulate<n>:MARKer<m>:MBURst:START | 526 |
| CALCulate<n>:MARKer<m>:MINimum:LEFT | 526 |
| CALCulate<n>:MARKer<m>:MINimum:NEXT | 526 |
| CALCulate<n>:MARKer<m>:MINimum:RIGHT | 527 |
| CALCulate<n>:MARKer<m>:MINimum[:PEAK] | 527 |
| CALCulate<n>:MARKer<m>:SEARCh | 527 |
| CALCulate<n>:MARKer<m>:X:SLIMits:LEFT | 527 |
| CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT | 528 |
| CALCulate<n>:MARKer<m>:X:SLIMits[:STATE] | 529 |

CALCulate<n>:DELTamarker<m>:MAXimum:APEak

Positions the active marker or delta marker on the largest absolute peak value (maximum or minimum) of the selected trace.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Usage: Event

CALCulate<n>:DELTaMarker<m>:MAXimum:LEFT

Moves a delta marker to the next positive peak value.

The search includes only measurement values to the left of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Search Next Peak](#)" on page 280

CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT

Moves a marker to the next positive peak value.

Suffix:

<n> 1..n
[Window](#)

<m> 1..n
[Marker](#)

Manual operation: See "[Search Next Peak](#)" on page 280

CALCulate<n>:DELTaMarker<m>:MAXimum[:PEAK]

Moves a delta marker to the highest level.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See "[Peak Search](#)" on page 280

CALCulate<n>:DELTaMarker<m>:MAXimum:RIGHT

Moves a delta marker to the next positive peak value on the trace.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Peak"](#) on page 280

CALCulate<n>:DELTamarker<m>:MBURst:START

Moves the marker m to the start of the selected result range.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Example:

CALC4:DELT2:MBUR:STAR

Moves delta marker 2 to the start of the selected result range.

Usage:

Event

Manual operation: See ["Selected Result Rng"](#) on page 281

CALCulate<n>:DELTamarker<m>:MINimum:LEFT

Moves a delta marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Minimum"](#) on page 281

CALCulate<n>:DELTamarker<m>:MINimum:NEXT

Moves a marker to the next minimum peak value.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Minimum"](#) on page 281

CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]

Moves a delta marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Minimum"](#) on page 280

CALCulate<n>:DELTaMarker<m>:MINImum:RIGHT

Moves a delta marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Minimum"](#) on page 281

CALCulate<n>:MARKer<m>:MAXImum:APeak

sets the marker to the largest absolute peak value (maximum or minimum) of the selected trace.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Usage: Event

Manual operation: See ["Max |Peak|"](#) on page 280

CALCulate<n>:MARKer<m>:MAXImum:LEFT

Moves a marker to the next positive peak.

The search includes only measurement values to the left of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Peak"](#) on page 280

CALCulate<n>:MARKer<m>:MAXImum:NEXT

Moves a marker to the next positive peak.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Peak"](#) on page 280

CALCulate<n>:MARKer<m>:MAXImum:RIGHT

Moves a marker to the next positive peak.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Peak"](#) on page 280

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

Moves a marker to the highest level.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Peak Search"](#) on page 280

CALCulate<n>:MARKer<m>:MBURst:START

Moves the marker m to the start of the selected result range.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Example:

CALC4:MARK2:MBUR:STAR

Moves marker 2 to the start of the selected result range

Usage:

Event

Manual operation: See ["Selected Result Rng"](#) on page 281

CALCulate<n>:MARKer<m>:MINimum:LEFT

Moves a marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:

<n> [Window](#)

<m> [Marker](#)

Manual operation: See ["Search Next Minimum"](#) on page 281

CALCulate<n>:MARKer<m>:MINimum:NEXT

Moves a marker to the next minimum peak value.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 281**CALCulate<n>:MARKer<m>:MINimum:RIGHT**

Moves a marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Next Minimum](#)" on page 281**CALCulate<n>:MARKer<m>:MINimum[:PEAK]**

Moves a marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

Suffix:<n> [Window](#)<m> [Marker](#)**Manual operation:** See "[Search Minimum](#)" on page 280**CALCulate<n>:MARKer<m>:SEARch <MarkReallmag>**

Specifies whether the marker search works on the real or the imag trace (for all markers).

Suffix:<n> 1..n
[Window](#)<m> 1..4
[Marker](#)**Parameters:**<MarkReallmag> REAL | IMAG
*RST: REAL**Manual operation:** See "[Real / Imag Plot](#)" on page 279**CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <SearchLimit>**Defines the left limit of the marker search range for *all* markers in *all* windows.

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<SearchLimit> The value range depends on the frequency range or measurement time.

The unit is Hz for frequency domain measurements and s for time domain measurements.

*RST: left diagram border

Default unit: HZ

<Limit> Range: -1e9 to 1e9

*RST: 0.0

Example:

```
CALC:MARK:X:SLIM ON
```

Switches the search limit function on.

```
CALC:MARK:X:SLIM:LEFT 10MHz
```

Sets the left limit of the search range to 10 MHz.

Manual operation: See "[Search Limits \(Left / Right\)](#)" on page 280

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <SearchLimit>

Defines the right limit of the marker search range for *all* markers in *all* windows.

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<Limit> The value range depends on the frequency range or measurement time.

The unit is Hz for frequency domain measurements and s for time domain measurements.

Range: -1e9 to 1e9

*RST: 800.0

Example:

```
CALC:MARK:X:SLIM ON
```

Switches the search limit function on.

```
CALC:MARK:X:SLIM:RIGH 20MHz
```

Sets the right limit of the search range to 20 MHz.

Manual operation: See "[Search Limits \(Left / Right\)](#)" on page 280

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

Turns marker search limits on and off for *all* markers in *all* windows.

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Example:

CALC:MARK:X:SLIM ON

Switches on search limitation.

Manual operation: See "[Search Limits \(Left / Right\)](#)" on page 280

11.7.3 Configuring display lines for eye diagrams

For eye diagrams, display lines allow you to measure the size of the eye in the diagram. For other result displays, lines are not available.

| | |
|---------------------------------|-----|
| CALCulate<n>:DLABs:STATe..... | 529 |
| CALCulate<n>:DLABs[:VALue]..... | 530 |
| CALCulate<n>:DLRel:STATe..... | 530 |
| CALCulate<n>:DLRel[:VALue]..... | 531 |
| CALCulate<n>:TLABs:STATe..... | 531 |
| CALCulate<n>:TLABs[:VALue]..... | 532 |
| CALCulate<n>:TLRel:STATe..... | 532 |
| CALCulate<n>:TLRel[:VALue]..... | 533 |

CALCulate<n>:DLABs:STATe <State>

Displays an absolute horizontal line in the specified window. This command is only available for eye diagrams.

Suffix:

<n> 1..n
Window

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: Display eye diagram in window 2.
 LAY:ADD? '1',BEL,MEAS
 CALC2:FORM QEYE
 Display absolute horizontal line.
 CALC2:DLAB:STAT ON
 Query y-value of absolute horizontal line.
 CALC2:DLAB:VAL?

Manual operation: See "[Horizontal Line](#)" on page 282

CALCulate<n>:DLABs[:VALue] <horLineAbsPos>

Defines value of horizontal absolute line

Suffix:

<n> 1..n
[Window](#)

Parameters:

<horLineAbsPos> Y-value of the absolute horizontal line.
 *RST: 0

Example: Display eye diagram in window 2.
 LAY:ADD? '1',BEL,MEAS
 CALC2:FORM QEYE
 Display absolute horizontal line.
 CALC2:DLAB:STAT ON
 Query y-value of absolute horizontal line.
 CALC2:DLAB:VAL?

Manual operation: See "[Horizontal Line](#)" on page 282

CALCulate<n>:DLRel:STATe <State>

Displays a relative horizontal line in the specified window. This command is only available for eye diagrams, and only if an absolute horizontal line is already available in the same diagram (see [CALCulate<n>:DLABs:STATe](#) on page 529).

Suffix:

<n> 1..n
[Window](#)

Parameters:

<State> ON | OFF | 1 | 0
 *RST: 0

Example: Display eye diagram in window 2.
 LAY:ADD? '1',BEL,MEAS
 CALC2:FORM QEYE
 Display absolute horizontal line.
 CALC2:DLAB:STAT ON
 Display relative horizontal line.
 CALC2:DLR:STAT:ON
 Query y-value of relative horizontal line.
 CALC2:DLR:VAL?

Manual operation: See "[Horizontal Line](#)" on page 282

CALCulate<n>:DLRel[:VALue] <LineRelPosRel>

Defines or queries the y-value of the relative horizontal line in the specified window. This command is only available for eye diagrams, and only if an absolute horizontal line and a relative horizontal line are already available in the same diagram (see [CALCulate<n>:DLABs:STATe](#) on page 529 and [CALCulate<n>:DLRel:STATe](#) on page 530).

Suffix:
 <n> 1..n

Parameters:
 <LineRelPosRel> Relative distance of the second horizontal line to the first (absolute) horizontal line.

Example: Display eye diagram in window 2.
 LAY:ADD? '1',BEL,MEAS
 CALC2:FORM QEYE
 Display absolute horizontal line.
 CALC2:DLAB:STAT ON
 Display relative horizontal line.
 CALC2:DLR:STAT:ON
 Query y-value of relative horizontal line.
 CALC2:DLR:VAL?

Manual operation: See "[Horizontal Line](#)" on page 282

CALCulate<n>:TLABs:STATe <State>

Displays an absolute vertical line in the specified window. This command is only available for eye diagrams.

Suffix:
 <n> 1..n
[Window](#)

Parameters:
 <State> ON | OFF | 1 | 0
 *RST: 0

Example: Display eye diagram in window 2.
 LAY:ADD? '1',BEL,MEAS
 CALC2:FORM QEYE
 Display absolute vertical line.
 CALC2:TLAB:STAT ON
 Query y-value of absolute vertical line.
 CALC2:TLAB:VAL?

Manual operation: See "[Vertical Line](#)" on page 282

CALCulate<n>:TLABs[:VALue] <vertLineAbsPos>

Defines or queries the x-value of the absolute vertical line in the specified window. This command is only available for eye diagrams, and only if an absolute vertical line is already available in the diagram (see [CALCulate<n>:TLABs:STATe](#) on page 531).

Suffix:
 <n> 1..n
[Window](#)

Parameters:
 <vertLineAbsPos> X-value of the absolute vertical line.
 Default unit: SYMB

Example: Display eye diagram in window 2.
 LAY:ADD? '1',BEL,MEAS
 CALC2:FORM QEYE
 Display absolute vertical line.
 CALC2:TLAB:STAT ON
 Query y-value of absolute vertical line.
 CALC2:TLAB:VAL?

Manual operation: See "[Vertical Line](#)" on page 282

CALCulate<n>:TLRel:STATe <State>

Displays a relative vertical line in the specified window. This command is only available for eye diagrams, and only if an absolute vertical line is already available in the same diagram (see [CALCulate<n>:TLABs:STATe](#) on page 531).

Suffix:
 <n> 1..n
[Window](#)

Parameters:
 <State> ON | OFF | 1 | 0
 *RST: 0

Example: Display eye diagram in window 2.
 LAY:ADD? '1',BEL,MEAS
 CALC2:FORM QEYE
 Display absolute vertical line.
 CALC2:TLAB:STAT ON
 Display relative vertical line.
 CALC2:TLR:STAT ON
 Query x-value of relative vertical line.
 CALC2:TLR:VAL?

Manual operation: See "[Vertical Line](#)" on page 282

CALCulate<n>:TLRel[:VALue] <LineRelPosRel>

Defines or queries the x-value of the relative vertical line in the specified window. This command is only available for eye diagrams, and only if an absolute vertical line and a relative vertical line are already available in the same diagram (see [CALCulate<n>:TLABs:STATe](#) on page 531 and [CALCulate<n>:TLRel:STATe](#) on page 532).

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LineRelPosRel> Relative distance of the second vertical line to the first (absolute) vertical line.
 Default unit: SYMB

Example: Display eye diagram in window 2.
 LAY:ADD? '1',BEL,MEAS
 CALC2:FORM QEYE
 Display absolute vertical line.
 CALC2:TLAB:STAT ON
 Display relative vertical line.
 CALC2:TLR:STAT:ON
 Query x-value of relative vertical line.
 CALC2:TLR:VAL?

Manual operation: See "[Vertical Line](#)" on page 282

11.7.4 Configuring modulation accuracy limit lines

The results of a modulation accuracy measurement can be checked for violation of defined limits automatically.

Manual configuration of limit lines is described in [Chapter 6.4.2, "Modulation accuracy limit lines"](#), on page 283.

- [General commands](#).....534
- [Defining limits](#).....534

11.7.4.1 General commands

The following commands determine the general behavior of the limit line check.

| | |
|--|-----|
| CALCulate<n>:LIMit:MACCuracy:DEFault | 534 |
| CALCulate<n>:LIMit:MACCuracy:STATe | 534 |

CALCulate<n>:LIMit:MACCuracy:DEFault

Restores the default limits and deactivates all checks in all windows.

Suffix:

<n> 1..n
 irrelevant

Usage: Event

Manual operation: See ["Set to Default"](#) on page 284

CALCulate<n>:LIMit:MACCuracy:STATe <State>

Limits checks for all evaluations based on modulation accuracy (e.g. "Result Summary") are enabled or disabled.

Suffix:

<n> 1..n
 irrelevant

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 0

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See ["Checking Modulation Accuracy Limits"](#) on page 283

11.7.4.2 Defining limits

The following commands are required to define limits for specific results.

```

CALCulate<n>:LIMit:MACCuracy:CFERror:CURRent:STATe <State>
CALCulate<n>:LIMit:MACCuracy:CFERror:MEAN:STATe <State>
CALCulate<n>:LIMit:MACCuracy:CFERror:PEAK:STATe <State>
CALCulate<n>:LIMit:MACCuracy:EVM:PCURrent:STATe <State>
CALCulate<n>:LIMit:MACCuracy:EVM:PMEan:STATe <State>
CALCulate<n>:LIMit:MACCuracy:EVM:PPEak:STATe <State>
CALCulate<n>:LIMit:MACCuracy:EVM:RCURrent:STATe <State>

```

CALCulate<n>:LIMit:MACCuracy:EVM:RMEan:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:EVM:RPEak:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FDERror:CURRent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FDERror:MEAN:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FDERror:PEAK:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FERRor:PCURrent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FERRor:PMEan:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FERRor:PPEak:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FERRor:RCURrent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FERRor:RMEan:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:FERRor:RPEak:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:MERRor:PCURrent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:MERRor:PMEan:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:MERRor:PPEak:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:MERRor:RCURrent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:MERRor:RMEan:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:MERRor:RPEak:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:OOFFset:CURRent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:OOFFset:MEAN:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:OOFFset:PEAK:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:PERRor:PCURrent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:PERRor:PMEan:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:PERRor:PPEak:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:PERRor:RCURrent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:PERRor:RMEan:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:PERRor:RPEak:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:RHO:CURRent:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:RHO:MEAN:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:RHO:PEAK:STATe <State>
 CALCulate<n>:LIMit:MACCuracy:<ResultType>:<LimitType>:STATe <LimitState>

Switches the limit check for the selected result type and limit type on or off.

Suffix:

| | |
|--------------|---|
| <n> | Window |
| <ResultType> | CFERror = "Carrier Frequency Error" EVM = "Error Vector Magnitude" FERRor = "Frequency error" (FSK only) FDERror = "Frequency deviation error" (FSK only) MERRor = "Magnitude Error" OOFFset = "I/Q Offset" PERRor = "Phase Error" RHO = "Rho" |

<LimitType> **For CFERror, OOFFset, RHO:**
 CURRent
 MEAN
 PEAK
For EVM, FERRor, MERRor, PERRor:
 PCURRent = Peak current value
 PMEan = Peak mean value
 PPEak = Peak peak value
 RCURRent = RMS current value
 RMEan = RMS mean value
 RPEak = RMS peak value

Setting parameters:

<LimitState> ON | OFF | 1 | 0
 Activates a limit check for the selected result and limit type.
 *RST: 0

Example:

```
CALC2:FEED 'XTIM:DDEM:MACC '  

Switch on "Result Summary" in screen 2  

CALC2:LIM:MACC:CFER:CURR:VAL 100 Hz  

Define a limit of [-100;100]  

CALC2:LIM:MACC:CFER:CURR:STAT ON  

Switch limit check ON
```

Manual operation: See ["Check"](#) on page 285

CALCulate<n>:LIMit:MACCuracy:CFERror:CURRent:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:CFERror:MEAN:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:CFERror:PEAK:VALue <LimitValue>

Defines the limit for the current, peak or mean center frequency error limit. Note that the limits for the current and the peak value are always kept identical.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LimitValue> the value x (x>0) defines the interval [-x; x]
 Range: 0.0 to 1000000
 *RST: 1000.0 (mean: 750.0)
 Default unit: Hz

CALCulate<n>:LIMit:MACCuracy:EVM:PCURrent:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:EVM:PMEan:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:EVM:PPEak:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:EVM:RCURrent:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:EVM:RMEan:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:EVM:RPEak:VALue <LimitValue>

Defines the value for the current, peak or mean EVM (peak or RMS) limit. Note that the limits for the current and the peak value are always kept identical.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LimitValue> Range: 0.0 to 100
 *RST: 1.5
 Default unit: %

CALCulate<n>:LIMit:MACCuracy:FDERror:CURRENT:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:FDERror:MEAN:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:FDERror:PEAK:VALue <LimitValue>

Defines the lower limit for the current, peak or mean center frequency deviation error. Note that the limits for the current and the peak value are always kept identical.

Is available for FSK modulation only.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LimitValue> Range: 0.0 to 1000000
 *RST: 1kHz

CALCulate<n>:LIMit:MACCuracy:FERRor:PCURRENT:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:FERRor:PMEan:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:FERRor:PPEak:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:FERRor:RCURRENT:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:FERRor:RMEan:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:FERRor:RPEak:VALue <LimitValue>

Defines the value for the current, peak or mean frequency error (peak or RMS) limit. Note that the limits for the current and the peak value are always kept identical.

Is available for FSK modulation only.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LimitValue> the value x (x>0) defines the interval [-x; x]
 Range: 0.0 to 100
 *RST: 1.5 (mean: 1.0)
 Default unit: Hz

CALCulate<n>:LIMit:MACCuracy:MERRor:PCURrent:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:MERRor:PMEan:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:MERRor:PPEak:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:MERRor:RCURrent:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:MERRor:RMEan:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:MERRor:RPEak:VALue <LimitValue>

Defines the value for the current, peak or mean magnitude error (peak or RMS) limit. Note that the limits for the current and the peak value are always kept identical.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LimitValue> the value x (x>0) defines the interval [-x; x]
 Range: 0.0 to 100
 *RST: 1.5
 Default unit: %

CALCulate<n>:LIMit:MACCuracy:OOFset:CURRent:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:OOFset:MEAN:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:OOFset:PEAK:VALue <LimitValue>

Defines the upper limit for the current, peak or mean I/Q offset. Note that the limits for the current and the peak value are always kept identical.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LimitValue> Range: -200.0 to 0.0
 *RST: -40.0 (mean: -45.0)
 Default unit: DB

CALCulate<n>:LIMit:MACCuracy:PERRor:PCURrent:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:PERRor:PMEan:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:PERRor:PPEak:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:PERRor:RCURrent:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:PERRor:RMEan:VALue <LimitValue>
CALCulate<n>:LIMit:MACCuracy:PERRor:RPEak:VALue <LimitValue>

Defines the value for the current, peak or mean phase error (peak or RMS) limit. Note that the limits for the current and the peak value are always kept identical.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LimitValue> the value x (x>0) defines the interval [-x; x]
 Range: 0.0 to 360
 *RST: 3.5 (RMS: 1.5)
 Default unit: deg

CALCulate<n>:LIMit:MACCuracy:RHO:CURRent:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:RHO:MEAN:VALue <LimitValue>

CALCulate<n>:LIMit:MACCuracy:RHO:PEAK:VALue <LimitValue>

Defines the lower limit for the current, peak or mean Rho limit. Note that the limits for the current and the peak value are always kept identical.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<LimitValue> Range: 0.0 to 1.0
 *RST: 0.999 (mean: 0.9995)
 Default unit: none

11.7.5 Configuring an analysis interval and line (MSRA mode only)

In MSRA operating mode, only the MSRA primary actually captures data; the MSRA secondary applications define an extract of the captured data for analysis, referred to as the **analysis interval**. The **analysis line** is a common time marker for all MSRA secondary applications.

For the VSA secondary application, the commands to define the analysis interval are the same as those used to define the actual data acquisition (see [Chapter 11.5.3, "Signal capture"](#), on page 470). Be sure to select the correct measurement channel before executing these commands.

Useful commands related to MSRA mode described elsewhere:

- [INITiate<n>:REFresh](#) on page 511
- [INITiate:SEQuencer:REFresh\[:ALL\]](#) on page 511

Remote commands exclusive to MSRA secondary applications

The following commands are only available for MSRA secondary application channels:

| | |
|--|-----|
| CALCulate<n>:MSRA:ALINe:SHOW | 539 |
| CALCulate<n>:MSRA:ALINe[:VALue] | 540 |
| CALCulate<n>:MSRA:WINDow<n>:IVAL | 540 |
| [SENSe:]MSRA:CAPTure:OFFSet | 541 |

CALCulate<n>:MSRA:ALINe:SHOW

Defines whether or not the analysis line is displayed in all time-based windows in all MSRA secondary applications and the MSRA primary application.

Note: even if the analysis line display is off, the indication whether or not the currently defined line position lies within the analysis interval of the active secondary application remains in the window title bars.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

Manual operation: See ["Show Line"](#) on page 290

CALCulate<n>:MSRA:ALINE[:VALue] <Position>

Defines the position of the analysis line for all time-based windows in all MSRA secondary applications and the MSRA primary application.

Suffix:

<n> irrelevant

Parameters:

<Position> Position of the analysis line in seconds. The position must lie within the measurement time of the MSRA measurement.

Default unit: s

Manual operation: See ["Position"](#) on page 290

CALCulate<n>:MSRA:WINDow<n>:IVAL

Returns the current analysis interval for applications in MSRA operating mode.

Suffix:

<n> irrelevant

<n> 1..n
[Window](#)

Return values:

<IntStart> Analysis start = Capture offset time
Default unit: s

<IntStop> Analysis end = capture offset + capture time
Default unit: s

[SENSe:]MSRA:CAPTure:OFFSet <Offset>

This setting is only available for secondary applications in MSRA mode, not for the MSRA primary application. It has a similar effect as the trigger offset in other measurements.

Parameters:

<Offset> This parameter defines the time offset between the capture buffer start and the start of the extracted secondary application data. The offset must be a positive value, as the secondary application can only analyze data that is contained in the capture buffer.

Range: 0 to <Record length>
 *RST: 0
 Default unit: S

Manual operation: See "[Capture Offset](#)" on page 240

11.7.6 Configuring an analysis interval and line (MSRT mode only)

In MSRT operating mode, only the MSRT primary actually captures data; the MSRT secondary applications define an extract of the captured data for analysis, referred to as the **analysis interval**. The **analysis line** is a common time marker for all MSRT secondary applications.

For the VSA secondary application, the commands to define the analysis interval are the same as those used to define the actual data acquisition (see [Chapter 11.5.3, "Signal capture"](#), on page 470). Be sure to select the correct measurement channel before executing these commands.

In addition, a capture offset can be defined, i.e. an offset from the start of the captured data to the start of the analysis interval for vector signal analysis.

Useful commands related to MSRT mode described elsewhere:

- [INITiate<n>:REFresh](#) on page 511
- [INITiate:SEQuencer:REFresh\[:ALL\]](#) on page 511

Remote commands exclusive to MSRT secondary applications

The following commands are only available for MSRT secondary application channels:

| | |
|--|-----|
| CALCulate<n>:RTMS:ALINe:SHOW | 541 |
| CALCulate<n>:RTMS:ALINe[:VALue] | 542 |
| CALCulate<n>:RTMS:WINDow<n>:IVAL | 542 |
| [SENSe:]RTMS:CAPTure:OFFSet | 543 |

CALCulate<n>:RTMS:ALINe:SHOW

Defines whether or not the analysis line is displayed in all time-based windows in all MSRT secondary applications and the MSRT primary.

Note: even if the analysis line display is off, the indication whether or not the currently defined line position lies within the analysis interval of the active secondary application remains in the window title bars.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
 Switches the function off
ON | 1
 Switches the function on

Manual operation: See "[Show Line](#)" on page 290

CALCulate<n>:RTMS:ALINE[:VALue] <Position>

Defines the position of the analysis line for all time-based windows in all MSRT secondary applications and the MSRT primary.

Suffix:

<n> irrelevant

Parameters:

<Position> Position of the analysis line in seconds. The position must lie within the measurement time (pretrigger + posttrigger) of the MSRT measurement.
 Default unit: s

Manual operation: See "[Position](#)" on page 290

CALCulate<n>:RTMS:WINDow<n>:IVAL

Returns the current analysis interval for applications in MSRT operating mode.

Suffix:

<n> irrelevant

<n> 1..n
[Window](#)

Return values:

<IntStart> Analysis start = Capture offset time
 Default unit: s
 <IntStop> Analysis end = capture offset + capture time
 Default unit: s

[SENSe:]RTMS:CAPTure:OFFSet <Offset>

This setting is only available for secondary applications in MSRT mode, not for the MSRT primary. It has a similar effect as the trigger offset in other measurements.

Parameters:

<Offset>

This parameter defines the time offset between the capture buffer start and the start of the extracted secondary application data. The offset must be a positive value, as the secondary application can only analyze data that is contained in the capture buffer.

Range: - [pretrigger time] to min (posttrigger time; sweep time)

*RST: 0

Default unit: S

Manual operation: See "[Capture Offset](#)" on page 240

11.8 Configuring the result display

The following commands are required to configure the result display in a remote environment. The tasks for manual operation are described in [Chapter 6.5, "Display and window configuration"](#), on page 285.

- [General window commands](#)..... 543
- [Working with windows in the display](#)..... 544
- [VSA window configuration](#)..... 552

11.8.1 General window commands

The following commands are required to configure general window layout, independent of the application.

Note that the suffix <n> always refers to the window *in the currently selected channel* (see [INSTrument \[:SELEct\]](#) on page 359).

| | |
|---|-----|
| DISPlay:FORMat | 543 |
| DISPlay[:WINDow<n>]:SIZE | 544 |
| DISPlay[:WINDow<n>][:SUBWindow<w>]:SELEct | 544 |

DISPlay:FORMat <Format>

Determines which tab is displayed.

Parameters:

<Format>

SPLit

Displays the MultiView tab with an overview of all active channels

SINGle

Displays the measurement channel that was previously focused.

*RST: SING

Example: DISP:FORM SPL

DISPlay[:WINDow<n>]:SIZE <Size>

Maximizes the size of the selected result display window *temporarily*. To change the size of several windows on the screen permanently, use the LAY:SPL command (see LAYout:SPLister on page 548).

Suffix:

<n> Window

Parameters:

<Size>

LARGE

Maximizes the selected window to full screen. Other windows are still active in the background.

SMALI

Reduces the size of the selected window to its original size. If more than one measurement window was displayed originally, these are visible again.

*RST: SMALI

Example: DISP:WIND2:SIZE LARG

DISPlay[:WINDow<n>][:SUBWindow<w>]:SELEct

Sets the focus on the selected result display window.

This window is then the active window.

For measurements with multiple results in subwindows, the command also selects the subwindow. Use this command to select the (sub)window before querying trace data.

Suffix:

<n> Window

<w> subwindow
Not supported by all applications

Example: //Put the focus on window 1
DISP:WIND1:SEL

Example: //Put the focus on subwindow 2 in window 1
DISP:WIND1:SUBW2:SEL

11.8.2 Working with windows in the display

The following commands are required to change the evaluation type and rearrange the screen layout for a channel as you do using the SmartGrid in manual operation. Since

the available evaluation types depend on the selected application, some parameters for the following commands also depend on the selected channel.

Note that the suffix <n> always refers to the window *in the currently selected channel*.

(See [INSTrument\[:SElect\]](#) on page 359).

| | |
|--|-----|
| LAYout:ADD[:WINDow]? | 545 |
| LAYout:CATalog[:WINDow]? | 546 |
| LAYout:IDENtify[:WINDow]? | 547 |
| LAYout:MOVE[:WINDow] | 547 |
| LAYout:REMOve[:WINDow] | 547 |
| LAYout:REPLace[:WINDow] | 548 |
| LAYout:SPLitter | 548 |
| LAYout:WINDow<n>:ADD? | 550 |
| LAYout:WINDow<n>:IDENtify? | 550 |
| LAYout:WINDow<n>:REMOve | 551 |
| LAYout:WINDow<n>:REPLace | 551 |
| LAYout:WINDow<n>:TYPE | 552 |

LAYout:ADD[:WINDow]? <WindowName>, <Direction>, <WindowType>

Adds a window to the display in the active channel.

Is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the [LAYout:REPLace\[:WINDow\]](#) command.

Query parameters:

| | |
|--------------|--|
| <WindowName> | String containing the name of the existing window the new window is inserted next to. By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the LAYout:CATalog[:WINDow]? query. |
| <Direction> | LEFT RIGHT ABOVE BELOW Direction the new window is added relative to the existing window. |
| <WindowType> | text value Type of result display (evaluation method) you want to add. See the table below for available parameter values. |

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example:

```
LAY:ADD:WIND? '1',RIGH,SYMB
```

Adds a "Symbol Table" display to the right of window 1.

Usage:

Query only

Manual operation: See ["Capture Buffer"](#) on page 20
 See ["Measurement & Reference Signal"](#) on page 20
 See ["Symbols"](#) on page 21
 See ["Error Vector"](#) on page 21
 See ["Modulation Errors"](#) on page 21
 See ["Modulation Accuracy"](#) on page 22
 See ["Equalizer"](#) on page 22
 See ["Multi Source"](#) on page 23
 See ["Signal Source"](#) on page 286

For a detailed example, see [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.

Table 11-4: <WindowType> parameter values for VSA application

| Parameter value | Data source (+ default result display) |
|-----------------|---|
| CBUffer | Capture buffer ("Magnitude absolute") |
| MEAS | Meas & Ref ("Magnitude relative") |
| REF | |
| EQUalizer | "Equalizer" |
| EVEctor | Error vector ("EVM") |
| MACCuracy | Modulation Accuracy ("Result Summary") |
| MCOMbination | Multi Source ("Spec (Meas+Error)") |
| MERRor | Modulation Errors ("Magnitude error") |
| RECOding | "I/Q 40G Recording" window providing "Insert Marker" function |
| SYMB | "Symbols (Hexadecimal)" |

LAYout:CATalog[:WINDow]?

Queries the name and index of all active windows in the active channel from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName_1>,<WindowIndex_1>..<WindowName_n>,<WindowIndex_n>

Return values:

<WindowName> string
 Name of the window.
 In the default state, the name of the window is its index.

<WindowIndex> **numeric value**
 Index of the window.

Example:

LAY:CAT?

Result:

'2',2,'1',1

Two windows are displayed, named '2' (at the top or left), and '1' (at the bottom or right).

Usage: Query only

LAYout:IDENtify[:WINDow]? <WindowName>

Queries the **index** of a particular display window in the active channel.

Note: to query the **name** of a particular window, use the [LAYout:WINDow<n>:IDENtify?](#) query.

Query parameters:

<WindowName> String containing the name of a window.

Return values:

<WindowIndex> Index number of the window.

Example:

LAY:IDEN:WIND? '2'

Queries the index of the result display named '2'.

Response:

2

Usage: Query only

LAYout:MOVE[:WINDow] <WindowName>, <WindowName>, <Direction>

Setting parameters:

<WindowName> String containing the name of an existing window that is to be moved.

By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the [LAYout:CATalog\[:WINDow\]?](#) query.

<WindowName> String containing the name of an existing window the selected window is placed next to or replaces.

By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the [LAYout:CATalog\[:WINDow\]?](#) query.

<Direction> LEFT | RIGHT | ABOVE | BELOW | REPLACE

Destination the selected window is moved to, relative to the reference window.

Example:

LAY:MOVE '4', '1', LEFT

Moves the window named '4' to the left of window 1.

Example:

LAY:MOVE '1', '3', REPL

Replaces the window named '3' by window 1. Window 3 is deleted.

Usage: Setting only

LAYout:REMOve[:WINDow] <WindowName>

Removes a window from the display in the active channel.

Setting parameters:

<WindowName> String containing the name of the window. In the default state, the name of the window is its index.

Example:

```
LAY:REM '2'
```

Removes the result display in the window named '2'.

Usage:

Setting only

LAYout:REPLace[:WINDow] <WindowName>, <WindowType>

Replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window in the active channel while keeping its position, index and window name.

To add a new window, use the [LAYout:ADD\[:WINDow\]?](#) command.

Setting parameters:

<WindowName> String containing the name of the existing window.
By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the [LAYout:CATalog\[:WINDow\]?](#) query.

<WindowType> Type of result display you want to use in the existing window.
See [LAYout:ADD\[:WINDow\]?](#) on page 545 for a list of available window types.

Example:

```
LAY:REPL:WIND '1',MTAB
```

Replaces the result display in window 1 with a marker table.

Usage:

Setting only

LAYout:SPLitter <Index1>, <Index2>, <Position>

Changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

Compared to the [DISPlay\[:WINDow<n>\]:SIZE](#) on page 544 command, the [LAYout:SPLitter](#) changes the size of all windows to either side of the splitter permanently, it does not just maximize a single window temporarily.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command does not work, but does not return an error.

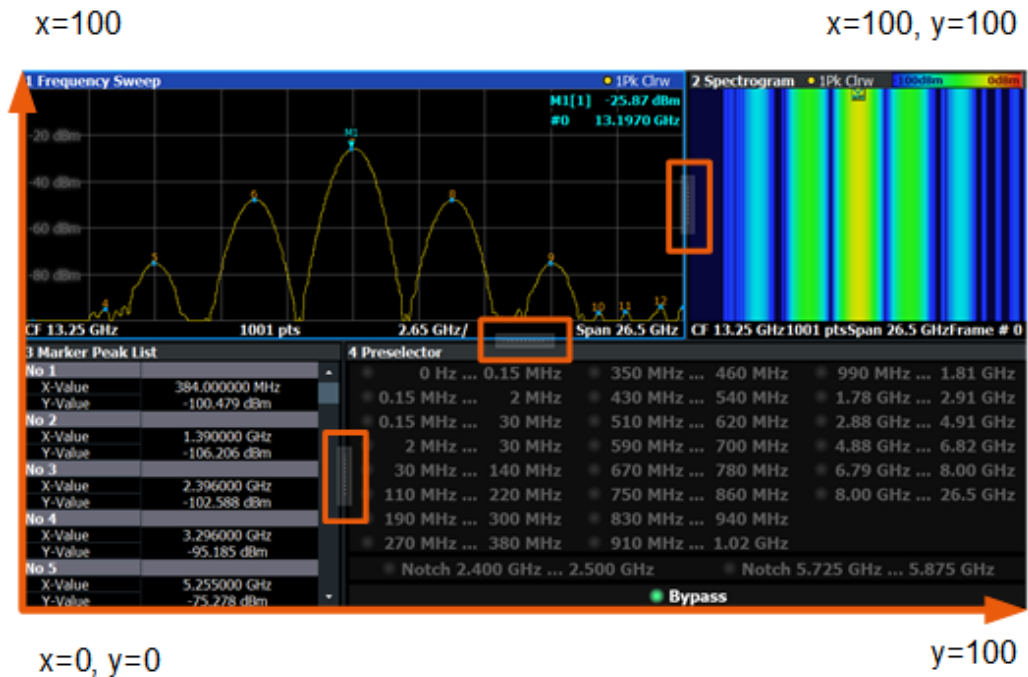


Figure 11-1: SmartGrid coordinates for remote control of the splitters

Setting parameters:

- <Index1> The index of one window the splitter controls.
- <Index2> The index of a window on the other side of the splitter.
- <Position> New vertical or horizontal position of the splitter as a fraction of the screen area (without channel and status bar and softkey menu).
The point of origin ($x = 0$, $y = 0$) is in the lower left corner of the screen. The end point ($x = 100$, $y = 100$) is in the upper right corner of the screen. (See Figure 11-1.)
The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned vertically, the splitter also moves vertically.

Range: 0 to 100

Example:

LAY:SPL 1,3,50

Moves the splitter between window 1 ("Frequency Sweep") and 3 ("Marker Table") to the center (50%) of the screen, i.e. in the figure above, to the left.

Example: `LAY:SPL 1,4,70`
 Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Peak List') towards the top (70%) of the screen. The following commands have the exact same effect, as any combination of windows above and below the splitter moves the splitter vertically.
`LAY:SPL 3,2,70`
`LAY:SPL 4,1,70`
`LAY:SPL 2,1,70`

Usage: Setting only

LAYout:WINDow<n>:ADD? <Direction>,<WindowType>

Adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added. Unlike [LAYout:ADD\[:WINDow\]?](#), for which the existing window is defined by a parameter.

To replace an existing window, use the [LAYout:WINDow<n>:REPLace](#) command.

Is always used as a query so that you immediately obtain the name of the new window as a result.

Suffix:

<n> [Window](#)

Query parameters:

<Direction> LEFT | RIGHT | ABOVE | BELOW

<WindowType> Type of measurement window you want to add.
 See [LAYout:ADD\[:WINDow\]?](#) on page 545 for a list of available window types.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example: `LAY:WIND1:ADD? LEFT,MTAB`
Result:
`'2'`
 Adds a new window named '2' with a marker table to the left of window 1.

Usage: Query only

LAYout:WINDow<n>:IDENTify?

Queries the **name** of a particular display window (indicated by the <n> suffix) in the active channel.

Note: to query the **index** of a particular window, use the [LAYout:IDENTify\[:WINDow\]?](#) command.

| | |
|-----------------------|---|
| Suffix: | |
| <n> | Window |
| Return values: | |
| <WindowName> | String containing the name of a window. In the default state, the name of the window is its index. |
| Example: | LAY:WIND2:IDEN? Queries the name of the result display in window 2. Response: '2' |
| Usage: | Query only |

LAYout:WINDow<n>:REMOve

Removes the window specified by the suffix <n> from the display in the active channel.
The result of this command is identical to the [LAYout:REMOve\[:WINDow\]](#) command.

| | |
|-----------------|--|
| Suffix: | |
| <n> | Window |
| Example: | LAY:WIND2:REM Removes the result display in window 2. |
| Usage: | Event |

LAYout:WINDow<n>:REPLace <WindowType>

Changes the window type of an existing window (specified by the suffix <n>) in the active channel.

The effect of this command is identical to the [LAYout:REPLace\[:WINDow\]](#) command.

To add a new window, use the [LAYout:WINDow<n>:ADD?](#) command.

| | |
|----------------------------|--|
| Suffix: | |
| <n> | Window |
| Setting parameters: | |
| <WindowType> | Type of measurement window you want to replace another one with. See LAYout:ADD[:WINDow]? on page 545 for a list of available window types. |
| Example: | LAY:WIND2:REPL MTAB Replaces the result display in window 2 with a marker table. |
| Usage: | Setting only |

LAYout:WINDow<n>:TYPE <WindowType>

Queries or defines the window type of the window specified by the index <n>. The window type determines which results are displayed. For a list of possible window types, see [LAYout:ADD\[:WINDow\]?](#) on page 545.

Note that this command is not available in all applications and measurements.

Suffix:

<n> 1..n
Window

Parameters:

<WindowType>

Example:

LAY:WIND2:TYPE?
Response:
MACC
Modulation accuracy

11.8.3 VSA window configuration

For each window you can select a different evaluation method (result type), based on the data source selected in the "Display Configuration". Further window settings are available for some result types.

Manual configuration of VSA windows is described in [Chapter 6.5.1, "Result window configuration"](#), on page 286.

Useful commands for configuring the window described elsewhere:

- [LAYout:ADD\[:WINDow\]?](#) on page 545

Remote commands exclusive to configuring VSA windows:

| | |
|--|-----|
| [SENSe:]DDEMod:PRESet:CALC | 553 |
| CALCulate<n>:DDEM:SPECTrum[:STATe] | 553 |
| CALCulate<n>:FEED | 554 |
| CALCulate<n>:FORMat | 555 |
| CALCulate<n>:STATistics:CCDF[:STATe] | 556 |
| CALCulate<n>:STATistics:MODE | 557 |
| DISPlay[:WINDow<n>]:ITEM[:LINE][:VALue] | 557 |
| DISPlay[:WINDow<n>]:PRATe:AUTO | 558 |
| DISPlay[:WINDow<n>]:PRATe:VALue | 558 |
| DISPlay[:WINDow<n>]:TRACe<t>:SYMBOL | 559 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]:MODE | 559 |

[SENSe:]DDEMod:PRESet:CALC

This command selects a predefined "signal overview" consisting of four windows. The top left window (1) shows magnitude data from capture buffer, the top right window (2) spectrum data from capture buffer, the bottom left window (3) the "Result Summary" and the bottom right window (4) constellation I/Q data. Using this setup, scripts written for R&S FSV instruments will continue to work.

| | |
|-------------------------|-----------------------------------|
| 1: Mag (Capture Buffer) | 2: Spec(Reallmag(Capture Buffer)) |
| 3: Result Summary | 4: Const I/Q (Meas&Ref) |

Usage: Event

Manual operation: See ["Overview"](#) on page 65

CALCulate<n>:DDEM:SPECTrum[:STATe] <State>

Switches the result type transformation to spectrum mode. Spectral evaluation is available for the following result types:

- MAGNitude
- PHASe/UPHase
- FREQuency
- Real/Imag (RIMAG)

The result types are defined using the `CALC:FORM` command (see [CALCulate<n>:FORMat](#) on page 555).

Suffix:

<n> 1..n
[Window](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off
ON | 1
Switches the function on
*RST: 0

Example:

```
CALC:FEED 'XTIM:DDEM:MEAS'
```

Selects the meas signal.

```
CALC:FORM PHAS
```

Selects the phase measurement.

```
CALC:DDEM:SPEC:STAT ON
```

Selects the spectral display of the phase.

Manual operation: See ["Result Type Transformation"](#) on page 287

CALCulate<n>:FEED <Feed>

Selects the signal source (and for the equalizer also the result type) for evaluation.

Selects the signal source (and for the equalizer and multi-source diagrams also the result type) for evaluation.

Note that this command is maintained for compatibility reasons only. Use the LAYout commands for new remote control programs (see [Chapter 11.8.2, "Working with windows in the display"](#), on page 544).

Only for the "Equalizer Impulse Response" and "Equalizer Frequency Response", as well as the multi-source diagrams, this command is required.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<Feed> string

'XTIM:DDEM:MEAS'
Measured signal

'XTIM:DDEM:REF'
Reference signal

'XTIM:DDEM:ERR:VECT'
Error vector

'XTIM:DDEM:ERR:MPH'
Modulation errors

'XTIM:DDEM:MACC'
Modulation accuracy

'XTIM:DDEM:SYMB'
Symbol table

'TCAP'
Capture buffer

'XTIM:DDEM:IMP'
Equalizer Impulse Response

'XFR:DDEM:RAT'
Equalizer Frequency Response

'XFR:DDEM:IRAT'
Equalizer Channel Frequency Response Group Delay

XTIM:DDEM:TCAP:ERR

Spectrum of Real/Imag for capture buffer and error vector

XTIM:DDEM:MEAS:ERR

Spectrum of Real/Imag for measurement and error vector

CALCulate<n>:FORMat <Format>

Defines the result type of the traces. Which parameters are available depends on the setting for the data source (see [LAYout:ADD\[:WINDow\]?](#) on page 545 and [Table 3-1](#)).

Whether the result type shows absolute or relative values is defined using the `DISP:WIND:TRAC:Y:MODE` command (see [DISPlay\[:WINDow<n>\]\[:SUBWindow<w>\]:TRACe<t>:Y\[:SCALE\]:MODE](#) on page 559).

Suffix:

<n> 1..n
[Window](#)

Parameters:

<Format> MAGNitude | PHASe | UPHase | RIMag | FREQuency | COMP | CONS | IEYE | QEYE | FEYE | CONF | COVF | RCONStellation | RSUMmary | BERate | GDELay | MOVerview | BIN | OCT | DEC | HEX | NONE

MAGNitude

Magnitude Absolute

MOVerview

Magnitude Overview Absolute (entire capture buffer)

PHASe

"Phase Wrap"

UPHase

"Phase Unwrap"

RIMag

"Real/Imag (I/Q)"

FREQuency

"Frequency Absolute"

COMP

"Vector I/Q"

CONS

"Constellation I/Q"

IEYE

"Eye Diagram Real (I)"

QEYE

"Eye Diagram Imag (Q)"

FEYE

"Eye Diagram Frequency"

CONF

"Constellation Frequency"

COVF

"Vector Frequency"

RCONstellation

"Constellation I/Q (Rotated)"

RSUMmary

"Result summary"

BERate

"Bit error rate"

GDELay

"Frequency Response Group Delay"

BIN

"Symbol table" in binary format

OCT

"Symbol table" in octal format

DEC

"Symbol table" in decimal format

HEX

"Symbol table" in hexadecimal format

Example: See [Chapter 11.13.1, "Measurement example 1: user-defined measurement of continuous QPSK signal"](#), on page 604.

Manual operation: See ["Signal Source"](#) on page 286
See ["Result Type"](#) on page 287

CALCulate<n>:STATistics:CCDF[:STATe] <State>

Switches the measurement of the statistical distribution of magnitude, phase or frequency values on or off.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<State> ON | OFF | 0 | 1
OFF | 0
Switches the function off
ON | 1
Switches the function on
*RST: 0

Example: CALC:STAT:CCDF ON
Switches the STATISTIC measurements on.

Manual operation: See ["Result Type Transformation"](#) on page 287

CALCulate<n>:STATistics:MODE <StatisticMode>

Defines whether only the symbol points or all points are considered for the statistical calculations.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<StatisticMode> SONLy | INFinite
SONLy
 Symbol points only are used
INFinite
 All points are used

Manual operation: See "[Oversampling](#)" on page 288

DISPlay[:WINDow<n>]:ITEM[:LINE][:VALue] <SingleValue>

This commands switches between the whole "Result Summary" and the diagram showing only a single value, e.g. the EVM RMS value as a bargraph. The same parameters are available as those for which modulation accuracy limits can be defined (see "[Limit Value](#)" on page 284).

Suffix:

<n> 1..n
[Window](#)

Parameters:

<SingleValue> ALL | EVMR | EVMP | PERM | PEP | MERM | MEP | CFER |
 RHO | IQOF | FERM | FEP | FDER
ALL
 Complete "Result Summary"
EVMR
 RMS EVM
EVMP
 Peak EVM
PERM
 RMS Phase error
PEP
 Peak phase error
MERM
 RMS Magnitude error
MEP
 Peak magnitude error
CFER
 Carrier frequency error

RHO

RHO

IQOF

I/Q offset

FERM

RMS frequency error

FEP

Peak frequency error

FDER

FSK deviation error

Manual operation: See "[Result Summary - Individual Results](#)" on page 57

DISPlay[:WINDow<n>]:PRATe:AUTO <DisplayPPSMoDe>

Defines the number of display points that are displayed per symbol automatically, i.e. according to [\[SENSe:\]DDEMod:PRATe](#) on page 471. To define a different number of points per symbol for display, use the `MANual` parameter and the [DISPlay\[:WINDow<n>\]:PRATe\[:VALue\]](#) command.

Suffix:

<n> 1..n
[Window](#)

Parameters:

<DisplayPPSMoDe> `AUTO` | `MANual`

Manual operation: See "[Display Points/Sym](#)" on page 288

DISPlay[:WINDow<n>]:PRATe[:VALue] <DisplayPPS>

Determines the number of points to be displayed per symbol if manual mode is selected (see [DISPlay\[:WINDow<n>\]:PRATe:AUTO](#) on page 558).

Is not available for result displays based on the capture buffer; in this case, the displayed points per symbol are defined by the sample rate ([\[SENSe:\]DDEMod:PRATe](#) command).

Suffix:

<n> 1..n
[Window](#)

Parameters:

<DisplayPPS> 1, 2, 4, 8, 16 or 32
1
only the symbol time instants are displayed
2, 4, 8, 16, 32
more points are displayed than symbols

Manual operation: See "[Display Points/Sym](#)" on page 288

DISPlay[:WINDow<n>]:TRACe<t>:SYMBol <Symbols>

Enables the display of the decision instants (time when the signals occurred) as dots on the trace.

Suffix:

| | |
|-----|--------------------------------|
| <n> | 1..n Window |
| <t> | 1..6 Trace |

Parameters:

| | |
|-----------|--|
| <Symbols> | ON OFF 0 1 OFF 0 Symbols are displayed. ON 1 Symbols are not displayed. *RST: 0 |
|-----------|--|

Manual operation: See "[Highlight Symbols](#)" on page 287

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:MODE <Mode>

Selects the type of scaling of the y-axis (for all traces).

When the display update during remote control is off, this command has no immediate effect.

Suffix:

| | |
|-----|------------------------|
| <n> | Window |
| <w> | subwindow |
| <t> | irrelevant |

Parameters:

| | |
|--------|--|
| <Mode> | ABSolute absolute scaling of the y-axis RELative relative scaling of the y-axis *RST: ABSolute |
|--------|--|

Example: DISP:TRAC:Y:MODE REL

11.9 Retrieving results

The following commands are required to retrieve the calculated VSA parameters.



All results that are not based on the capture buffer data are calculated for a single result range only (see [Chapter 4.6.1, "Result range"](#), on page 162). To retrieve the results for several result ranges, use the `[SENSE:]DDEMod:SEARCH:MBURst:CALC` on page 481 command to move from one result range to the next.

- [Retrieving trace data and marker values](#)..... 560
- [Measurement results for TRACE<n>\[:DATA\]? TRACE<n>](#).....565
- [Retrieving general burst and pattern information](#).....568
- [Retrieving parameter values](#).....573
- [Retrieving limit check results](#).....588

11.9.1 Retrieving trace data and marker values

In order to retrieve the trace and marker results in a remote environment, use the following commands:

Useful commands for retrieving results described elsewhere:

- `CALCulate<n>:MARKer<m>:Y?` on page 520

Remote commands exclusive to retrieving results:

| | |
|--|-----|
| <code>CALCulate<n>:DELTaMarker<m>:X:ABSolute?</code> | 560 |
| <code>CALCulate<n>:DELTaMarker<m>:X:RELative?</code> | 560 |
| <code>CALCulate<n>:MEAS:DIRTY?</code> | 561 |
| <code>DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:STARt?</code> | 561 |
| <code>DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:STOP?</code> | 562 |
| <code>FORMat:DEXPort:DSEParator</code> | 562 |
| <code>FORMat:DEXPort:HEADer</code> | 563 |
| <code>FORMat:DEXPort:MODE</code> | 563 |
| <code>MMEMory:STORe<n>:IQ:TRACe</code> | 563 |
| <code>MMEMory:STORe<n>:TRACe</code> | 564 |
| <code>TRACe<n>[:DATA]</code> | 564 |

`CALCulate<n>:DELTaMarker<m>:X:ABSolute?`

Queries the absolute x-value of the selected delta marker in the specified window. The command activates the corresponding delta marker, if necessary.

Suffix:

<n> Window

Usage: Query only

`CALCulate<n>:DELTaMarker<m>:X:RELative?`

Queries the relative position of a delta marker on the x-axis.

If necessary, the command activates the delta marker first.

Suffix:<n> [Window](#)<m> [Marker](#)**Return values:**

<Position> Position of the delta marker in relation to the reference marker.

Example:

CALC:DELT3:X:REL?

Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.

Usage:

Query only

CALCulate<n>:MEAS:DIRTY?

Queries the validity of the measurement data, as indicated in the channel bar in manual operation.

Suffix:<n> 1..n
[Window](#)**Return values:**

<State> ON | OFF | 0 | 1

OFF | 0

The measurement results are valid.

ON | 1

Invalid or inconsistent data is displayed, that is: the trace no longer matches the displayed instrument settings.

*RST: 0

Usage:

Query only

DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:START?

Queries the first value of the x-axis in the specified window in symbols or time, depending on the unit setting for the x-axis.

Note: using the [CALCulate<n>:TRACe<t>:ADJust:ALIGnment:OFFSet](#) command, the burst is shifted in the diagram; the x-axis thus no longer begins on the left at 0 symbols but at a selectable value.**Suffix:**<n> 1..n
[Window](#)<t> 1..6
[Trace](#)**Return values:**

<Start>

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Usage: Query only

DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:STOP?

This command queries the last value of the x-axis in the specified window in symbols or time, depending on the unit setting for the x-axis.

Note: If the burst is shifted (using the `CALC:TRAC:ALIG` commands) the x-axis no longer begins at 0 symbols on the left, but at a user-defined value.

Suffix:

<n> 1..n
Window

<t> 1..6
Trace

Return values:

<Stop>

Example: `CALC:TRAC:ADJ BURS`
Defines the burst as the reference for the screen display
`CALC:TRAC:ADJ:ALIG CENT`
Position the burst at the center of the screen
`DISP:TRAC:X:STOP?`
Queries the stop value of the x-axis

Usage: Query only

FORMat:DEXPort:DSEParator <Separator>

Selects the decimal separator for data exported in ASCII format.

Parameters:

<Separator> POINT | COMMa
COMMa
Uses a comma as decimal separator, e.g. *4,05*.
POINT
Uses a point as decimal separator, e.g. *4.05*.
***RST:** *RST has no effect on the decimal separator.
Default is POINT.

Example: `FORM:DEXP:DSEP POIN`
Sets the decimal point as separator.

Manual operation: See "[Decimal Separator](#)" on page 276

FORMat:DEXPort:HEADer <State>

Defines if a file header (including start frequency, sweep time, detector, etc.) is created or not. A short header with the instrument model, the version and the date is always transferred.

Parameters:

<State> ON | OFF | 0 | 1
 OFF | 0
 Switches the function off
 ON | 1
 Switches the function on
 *RST: 0

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Manual operation: See "[Header](#)" on page 276

FORMat:DEXPort:MODE <Mode>

Defines which data are transferred, raw I/Q data or trace data.

Parameters:

<Mode> RAW | TRACe

Example: See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

Example: FORM:DEXP:MODE RAW

Manual operation: See "[Data Export Mode](#)" on page 275

MMEMory:STORe<n>:IQ:TRACe 1, <Filename>

Stores the I/Q data for the displayed trace in the selected window to a file in `iq.tar` format.

Is only available for result types that provide I/Q data based on the error vector, such as the "Vector I/Q" or Real/Imag displays.

Suffix:

<n> 1..n
 [Window](#)

Setting parameters:

<Filename> String containing the path and name of the target file.

Example: MMEM:STOR1:TRAC 1, 'C:\TEST.iq.tar'
 Stores trace data from window 1 in the file `TEST.iq.tar`.

Usage: Setting only

Manual operation: See "[Export Trace to iq-tar File for Specific Window](#)" on page 276

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

Exports trace data from the specified window to an ASCII file.

Secure User Mode

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the FSW base unit user manual.

Suffix:

<n> [Window](#)

Parameters:

<Trace> Number of the trace to be stored

<FileName> String containing the path and name of the target file.

Example:

```
MMEM:STOR1:TRAC 1, 'C:\TEST.ASC'
```

Stores trace 1 from window 1 in the file TEST.ASC.

Manual operation: See ["Export Trace to ASCII File"](#) on page 276

TRACe<n>[:DATA] <Trace>

Queries the trace data.

Which data is returned depends on the result display in the window specified by the suffix <n>.

For details see [Chapter 11.9.2, "Measurement results for TRACe<n>\[:DATA\]? TRACE<n>"](#), on page 565.

Suffix:

<n> 1..n
[Window](#)

Query parameters:

<Trace> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6 |
TRACe1r | TRACe1i | TRACe2r | TRACe2i | TRACe3r |
TRACe3i | STRace | MSTRace | PSTRace

TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

The complete data from the corresponding trace.

TRACE1r/TRACE2r/TRACE3r

The real data from the corresponding trace. The parameters are available for the Real/Imaginary result types.

TRACE1i/TRACE2i/TRACE3i

The imaginary data from the corresponding trace. The parameters are available for the Real/Imaginary result types.

Details on the returned trace data depending on the evaluation data source and result type are provided here.

| | |
|--|-----|
| • Capture buffer results | 566 |
| • Cartesian diagrams | 566 |
| • Polar diagrams | 567 |
| • Symbols | 567 |
| • Result summary | 567 |
| • Equalizer | 568 |
| • Multi source | 568 |

11.9.2.1 Capture buffer results

For the result displays based on the capture buffer, the command returns the y-axis values of the data that is stored in the capture buffer. The number of returned values depends on the size of the capture buffer and the sample rate. For example, a capture buffer size of 500 symbols in combination with a sample rate of 4 would return 2000 level values.

The scaling of the capture buffer depends on the input source:

- Scaling is relative to the current reference level for RF input and file input.
- Scaling is relative to the full-scale level for I/Q input.

The unit is dBm.

Note that the trace results return only the values for the currently displayed capture buffer *range* (see also [Chapter 4.8, "Capture buffer display"](#), on page 167).

For the "Magnitude Overview Absolute" result display, this command returns a maximum of 25 000 values (corresponding to the displayed trace points).



You can query the x-value that relates to the first value of the y-axis using `DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:START?` on page 561.

11.9.2.2 Cartesian diagrams

For cartesian diagrams (**magnitude, phase, frequency, real/imag, eye diagrams**), the command returns the y-values of the trace. The number of returned values is the product of the "Result Length" and the display points per symbol. The unit depends on the specified unit.

(See [Chapter 11.5.2.14, "Scaling and units"](#), on page 464).



You can query the x-value that relates to the first value of the y-axis using `DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:START?` on page 561.

The eye diagram result displays are the same as the real/imag result display; the results for eye diagrams are merely superimposed in the display.

11.9.2.3 Polar diagrams

For polar diagrams, the command returns a pair of values for each trace point. The first value is the real part, the second value the imaginary part. The number of returned value pairs depends on the result type:

- "Vector I/Q":
Evaluation range length * display points per symbol
- "Constellation I/Q":
Evaluation range length
- "Constellation Frequency" and "Vector Frequency": one value for each trace point on the y-axis

11.9.2.4 Symbols

For the "Symbol table" result diagrams, the command returns one value for each number in the table. The number of returned values depends on the modulation scheme that you have selected.

If no parameter is specified, the command always returns the values in the decimal format. If the parameter `STRace` is used, the format depends on the currently defined symbol format (see `CALCulate<n>:FORMat` on page 555).

The bits are interpreted according to the `[SENSe:]DDEMod:BORDERing` on page 493 setting.

11.9.2.5 Result summary

For the "Result Summary", the command returns all values listed in the result table from top to bottom, i.e.:

For PSK, MSK and QAM modulation:

<EVM_RMS>,<EVM_Peak>,<MER_RMS>,<MER_Peak>,<Phase Error RMS>,<Phase Error Peak>,<MagError_RMS>,<MagError_Peak>,<Carrier Frequency Error>,<Rho>,<I/Q Offset>,<I/Q Imbalance>,<Gain Imbalance>,<Quadrature Error>,<Amplitude Droop>,<Power>,<**Symbol Rate Error**>,<**I/Q_Skew**>

(Note that the "Symbol Rate Error" and "I/Q skew" were appended at the end to provide compatibility to previous versions and instruments. Consider the notes on I/Q skew results described in ["I/Q skew results depend on modulation"](#) on page 152.)

For FSK modulation:

<Freq_Error_RMS>,<Freq_Error_Peak>,<Mag_Error_RMS>,<Mag_Error_Peak>,<FSK Deviation Error>,<FSK Meas Deviation>,<FSK Ref Deviation>,<Carrier Frequency Error>,<Carrier Frequency Drift>,<Power>

For each result type, both the current and statistical values are provided. The order of the results is as follows:

<result1_current>,<result1_mean>,<result1_peak>,<result1_stddev>,<result1_95%ile>,<

<result2_current>, <result2_mean>, (...)

Empty cells in the table return nothing. The number of returned values depends on the modulation scheme. PSK, MSK and QAM modulation returns 85 values (17 results x 5 statistical values), FSK modulation returns 55 values (11 results x 5 statistical values).

For more details on the individual results, see [Chapter 3.2.29, "Result summary"](#), on page 55.

11.9.2.6 Equalizer

For "Equalizer" diagrams, the command returns the y-axis values of the equalizer trace. The number of returned values depends on the result type:

- For "Impulse Response" diagrams:
(filter length * sample rate) + 1
- For "Frequency Response", "Channel and Group Delay" diagrams: 4096 values



You can query the x-value that relates to the first value of the y-axis using `DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:START?` on page 561.

11.9.2.7 Multi source

For "multi source" diagrams, the data for one source is provided in one trace, the data for the other source in another trace. By default, trace 1 in the spectrum of the Real/Imag display shows the data from the capture buffer or measurement. Trace 2 shows the error data. However, you can change the data sources for the traces (see `CALCulate<n>:TRACe<t>[:VALUE]` on page 514).

For details on the results for real/imag traces, see [Chapter 11.9.2.2, "Cartesian diagrams"](#), on page 566.

11.9.3 Retrieving general burst and pattern information

| | |
|---|-----|
| <code>CALCulate<n>:DSP:RESult:CAPTure:BURSts?</code> | 569 |
| <code>CALCulate<n>:DSP:RESult:CAPTure:PATterns?</code> | 569 |
| <code>CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:LENGth?</code> | 569 |
| <code>CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:PRESent?</code> | 569 |
| <code>CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:STARt?</code> | 570 |
| <code>CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:CONFidence?</code> | 571 |
| <code>CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:CORRect?</code> | 571 |
| <code>CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:PRESent?</code> | 571 |
| <code>CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:STARt?</code> | 571 |
| <code>[SENSe:]DDEMod:SEARch:MBURst:STARt[:SYMBols]?</code> | 572 |
| <code>[SENSe:]DDEMod:SEARch:MBURst:STARt:SAMPles?</code> | 572 |

CALCulate<n>:DSP:RESult:CAPTure:BURSts?

Queries the number of bursts found across the internal capture buffer. Note that the internal capture buffer is slightly larger than the displayed capture buffer in order to allow for sufficient filter settling times for further processing.

Suffix:

<n> irrelevant

Return values:

<Bursts> integer
Number of bursts

Example: CALC : DSP : RES : CAPT : BURSts ?

Usage: Query only

CALCulate<n>:DSP:RESult:CAPTure:PATTerns?

Queries the number of patterns found across the internal capture buffer. Note that the internal capture buffer is slightly larger than the displayed capture buffer in order to allow for sufficient filter settling times for further processing.

Suffix:

<n> irrelevant

Return values:

<Patterns> integer
Number of patterns

Example: CALC : DSP : RES : CAPT : PATTerns ?

Usage: Query only

CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:LENGth?

Queries the length of the burst in the current result range.

Suffix:

<n> irrelevant

Return values:

<Length> Burst length in samples
Default unit: none

Example: CALC : DSP : RES : RRANge : CURRent : BURSt : LENGth ?

Usage: Query only

Manual operation: See "[Expected Burst Length / Burst Found](#)" on page 245

CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:PRESEnt?

Queries whether a burst is present or not in the current result range.

| | |
|-----------------------|--|
| Suffix: | |
| <n> | irrelevant |
| Return values: | |
| <Present> | ON OFF 0 1 OFF 0 Burst not available. ON 1 Burst available |
| Example: | CALC : DSP : RES : RRAN : CURR : BURS : PRES ? |
| Usage: | Query only |

CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:STARt?

Queries the burst start in the current result range as an offset to the capture buffer start.

Tip: To determine the capture buffer start, use the `DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:STARt?` command for a window with a capture buffer display.

| | |
|-----------------------|---|
| Suffix: | |
| <n> | irrelevant |
| Return values: | |
| <Start> | Offset in symbols from the capture buffer start. Default unit: sym |
| Example: | Query the capture buffer start as the first x-value in the window with a capture buffer display. DISP : WIND2 : TRAC1 : X : SCAL : STAR ? Query the start of the burst within the result range. CALC : DSP : RES : RRAN : CURR : BURS : STAR ? |
| Usage: | Query only |

CALCulate<n>:DSP:RESult:RRANge:CURRent:PATTern:CONFidence?

Queries the confidence with which the pattern was detected in the current result range.

| | |
|--------------------------|---|
| Suffix: | |
| <n> | irrelevant |
| Return values: | |
| <Confidence> | Percentage of correct identification of pattern Range: 0 to 100 Default unit: percent |
| Example: | CALC : DSP : RES : RRAN : CURR : PATT : CONF ? |
| Usage: | Query only |
| Manual operation: | See " I/Q Correlation Threshold " on page 246 |

CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:CORRect?

Queries whether the pattern is correct or not in the current result range.

Suffix:

<n> irrelevant

Return values:

<Correct> ON | OFF | 0 | 1
OFF | 0
 Pattern not correct.
ON | 1
 Pattern correct

Example: CALC : DSP : RES : RRAN : CURR : PATT : CORR ?

Usage: Query only

Manual operation: See "[Pattern Symbols Correct](#)" on page 247

CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:PRESEnt?

Queries whether a pattern is present or not in the current result range.

Suffix:

<n> irrelevant

Return values:

<Present> ON | OFF | 0 | 1
OFF | 0
 Pattern not available.
ON | 1
 Pattern available

Example: CALC : DSP : RES : RRAN : CURR : PATT : PRESE ?

Usage: Query only

CALCulate<n>:DSP:RESult:RRANge:CURRent:PATtern:STARt?

Queries the pattern start in the current result range as an offset to the capture buffer start.

Tip: To determine the capture buffer start, use the [DISPlay\[:WINDow<n>\]:TRACe<t>:X\[:SCALE\]:STARt?](#) command for a window with a capture buffer display.

Suffix:

<n> irrelevant

Return values:

<Start> Offset in symbols from the capture buffer start.
 Default unit: sym

Example: Query the capture buffer start as the first x-value in the window with a capture buffer display.

```
DISP:WIND2:TRAC1:X:SCAL:STAR?
```

Query the start of the pattern within the result range.

```
CALC:DSP:RES:RRAN:CURR:PATT:STAR?
```

Usage: Query only

[SENSe:]DDEMod:SEARch:MBURst:START[:SYMBOLs]?

This command queries the start symbol of the current result range within the capture buffer.

Tip: to query the start *sample*, use [SENSe:]DDEMod:SEARch:MBURst:START:SAMPles? on page 572.

Return values:

<Start>

Example:

```
INIT:CONT OFF
//switch to single sweep mode
INIT;*WAI
//perform single sweep
SENS:DDEM:SEAR:MBUR:CALC 1
//switch to first result range
SENS:DDEM:SEAR:MBUR:START?
//query start of current (=first) result range
// in the capture buffer
SENS:DDEM:SEAR:MBUR:CALC 2
//switch to second result range
SENS:DDEM:SEAR:MBUR:START?
//query start of current (=second) result range
// in the capture buffer
```

Usage: Query only

[SENSe:]DDEMod:SEARch:MBURst:START:SAMPles?

This command queries the start sample of the current result range within the capture buffer.

Tip: to query the start *symbol*, use [SENSe:]DDEMod:SEARch:MBURst:START[:SYMBOLs]? on page 572.

Return values:

<Start>

Example:

```

INIT:CONT OFF
//switch to single sweep mode
INIT;*WAI
//perform single sweep
SENS:DDEM:SEAR:MBUR:CALC 1
//switch to first result range
SENS:DDEM:SEAR:MBUR:START:SAMP?
//query start of current (=first) result range
// in the capture buffer
SENS:DDEM:SEAR:MBUR:CALC 2
//switch to second result range
SENS:DDEM:SEAR:MBUR:START:SAMP?
//query start of current (=second) result range
// in the capture buffer

```

Usage: Query only

11.9.4 Retrieving parameter values

For each parameter, the VSA application calculates and shows various statistical values:

- Current value
- Mean value
Calculated as the average of the number of results defined by the [Statistic Count](#).
- Peak value
- Standard deviation
- 95 percentile
Unlike the mean value, the 95%ile is a result of all measurement results since the last start of a single or continuous sweep, or of all measurements since the last change of a measurement parameter.

For details on the individual parameters see [Chapter 3.4, "Common parameters in VSA"](#), on page 66 and [Chapter F, "Formulae"](#), on page 629.

| | |
|--|-----|
| CALCulate<n>:BERate? | 574 |
| CALCulate<n>:DDEM:BURSt:LENGth? | 574 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:ADRooP? | 575 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:ALL? | 576 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:CFERror? | 576 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:EVM? | 577 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:FDERror? | 578 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:FSK:CFDRift? | 578 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:FSK:DERRor? | 579 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:FSK:MDEViation? | 580 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:FSK:RDEViation? | 580 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:GIMBalance? | 581 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:IQIMbalance? | 581 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:IQSKew? | 582 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:MERRor? | 582 |

| | |
|--|-----|
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:MPOWer?..... | 583 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:OOFFset?..... | 584 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:PERRor?..... | 584 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:QERRor?..... | 585 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:RHO?..... | 586 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:SNR?..... | 586 |
| CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:SRERror?..... | 587 |

CALCulate<n>:BERate? <Format>

Queries the Bit Error Rate results. The available results are described in [Chapter 3.2.1, "Bit error rate \(BER\)"](#), on page 25.

Note that the specified window suffix must refer to a BER result display.

Suffix:

<n> 1..n
[Window](#)
 BER result display

Query parameters:

<Format> Specifies a particular BER result to be queried. If no parameter is specified, the current bit error rate is returned. The parameters for these results are listed in [Table 11-5](#).

DSINdex

Queries the index of the identified data sequence found in a known data file. The index starts with 0, that is: the first data sequence in the file is returned as "0".

Example:

CALC:BER? TEC

Queries the number of bit errors in the current measurement.

Usage:

Query only

Table 11-5: Parameters for BER result values

| Result | Current | Min | Max | Acc |
|--------------------------------|----------|-------|-------|---------|
| Bit Error Rate | CURRent | MIN | MAX | TOTal |
| Number of bits in result range | TCURrent | TMIN | TMAX | TTOTal |
| Number of bit errors | TECurent | TEMin | TEMax | TETotal |
| Number of symbol errors | SECurent | SEMin | SEMax | SETotal |

CALCulate<n>:DDEM:BURSt:LENGth?

Queries the length of a detected burst.

Note that since the R&S FSW VSA application has no knowledge on the ramp length, there is an uncertainty in the burst search algorithm.

Suffix:

<n> [Window](#)

Return values:

<Length> integer
Number of symbols

Example:

```
INIT:CONT OFF
//switches to single sweep
SENS:DDEM:SIGN:VAL BURS
//switches bursted signal on
INIT:IMM;*WAI
//starts single sweep and waits for result
CALC:DDEM:BURS:LENG?
//returns detected burst length
```

Usage: Query only

Manual operation: See "[Expected Burst Length / Burst Found](#)" on page 245

CALCulate<n>:MARKer<m>:FUNCTION:DDEMod:STATistic:ADRoop?
<ResultType>

Queries the results of the amplitude droop error measurement performed for digital demodulation. The output values are the same as those provided in the "Modulation Accuracy" table (see [Chapter 3.2.29, "Result summary"](#), on page 55).

Suffix:

<n> 1..n
[Window](#)

<m> 1..4
[Marker](#)

Query parameters:

<ResultType> **<none>**
Amplitude droop in dB/symbol (for current sweep)
AVG
Amplitude droop in dB/symbol, evaluating the linear average value over several sweeps
RPE
Peak value for amplitude droop over several sweeps
SDEV
Standard deviation of amplitude droop
PCTL
95 percentile value of amplitude droop

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNCTION:DDEMod:STATistic:ALL?

The command queries all results of the "Result Summary".

Suffix:

| | |
|-----|--------------------------------|
| <n> | 1..n Window |
| <m> | 1..4 Marker |

Return values:

<Results> Comma-separated list of result values in the order described below. Note the last rows differ from the Result Summary display.

Usage: Query only

Table 11-6: Results of the query

```
<EVM_RMS_Curr>,<EVM_RMS_Mean>,<EVM_RMS_Peak>,<EVM_RMS_StdDev>,<EVM_RMS_95%>,<EVM_Peak_Curr>,<EVM_Peak_Mean>,<EVM_Peak_Peak>,<EVM_Peak_StdDev>,<EVM_Peak_95%>,<MER_RMS_Curr>,<MER_RMS_Mean>,<MER_RMS_Peak>,<MER_RMS_StdDev>,<MER_RMS_95%>,<MER_Peak_Curr>,<MER_Peak_Mean>,<MER_Peak_Peak>,<MER_Peak_StdDev>,<MER_Peak_95%>,<PhaseErr_RMS_Curr>,<PhaseErr_RMS_Mean>,<PhaseErr_RMS_Peak>,<PhaseErr_RMS_StdDev>,<PhaseErr_RMS_95%>,<PhaseErr_Peak_Curr>,<PhaseErr_Peak_Mean>,<PhaseErr_Peak_Peak>,<PhaseErr_Peak_StdDev>,<PhaseErr_Peak_95%>,<MagnErr_RMS_Curr>,<MagnErr_RMS_Mean>,<MagnErr_RMS_Peak>,<MagnErr_RMS_StdDev>,<MagnErr_RMS_95%>,<MagnErr_Peak_Curr>,<MagnErr_Peak_Mean>,<MagnErr_Peak_Peak>,<MagnErr_Peak_StdDev>,<MagnErr_Peak_95%>,<CarrFreqErr_Curr>,<CarrFreqErr_Mean>,<CarrFreqErr_Peak>,<CarrFreqErr_StdDev>,<CarrFreqErr_95%>,<Rho_Curr>,<Rho_Mean>,<Rho_Peak>,<Rho_StdDev>,<Rho_95%>,<IQOffset_Curr>,<IQOffset_Mean>,<IQOffset_Peak>,<IQOffset_StdDev>,<IQOffset_95%>,<IQImb_Curr>,<IQImb_Mean>,<IQImb_Peak>,<IQImb_StdDev>,<IQImb_95%>,<GainImb_Curr>,<GainImb_Mean>,<GainImb_Peak>,<GainImb_StdDev>,<GainImb_95%>,<QuadErr_Curr>,<QuadErr_Mean>,<QuadErr_Peak>,<QuadErr_StdDev>,<QuadErr_95%>,<AmpDroop_Curr>,<AmpDroop_Mean>,<AmpDroop_Peak>,<AmpDroop_StdDev>,<AmpDroop_95%>,<Power_Curr>,<Power_Mean>,<Power_Peak>,<Power_StdDev>,<Power_95%>,<SymRateErr_Curr>,<SymRateErr_Mean>,<SymRateErr_Peak>,<SymRateErr_StdDev>,<SymRateErr_95%>,<IQSkew_Curr>,<IQSkew_Mean>,<IQSkew_Peak>,<IQSkew_StdDev>,<IQSkew_95%>
```

CALCulate<n>:MARKer<m>:FUNCTION:DDEMod:STATistic:CFERror?

<ResultType>

Queries the results of the carrier frequency error measurement performed for digital demodulation.

The output values are the same as those provided in the "Modulation Accuracy" table.

Suffix:

| | |
|-----|--------------------------------|
| <n> | 1..n Window |
|-----|--------------------------------|

<m> 1..4
Marker

Query parameters:

<ResultType> <none>
Carrier frequency error for current sweep

AVG
Average carrier frequency error over several sweeps

RPE
Peak carrier frequency error over several sweeps

SDEV
Standard deviation of frequency error

PCTL
95 percentile value of frequency error

Return values:

<Result>

Example:

See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

CALCulate<n>:MARKer<m>:FUNCTION:DDEMod:STATistic:EVM? <ResultType>

Queries the results of the error vector magnitude measurement of digital demodulation. The output values are the same as those provided in the "Modulation Accuracy" table .

Suffix:

<n> 1..n
Window

<m> 1..4
Marker

Query parameters:

<ResultType> <none>
RMS EVM value of display points of current sweep

AVG
Average of RMS EVM values over several sweeps

PAVG
Average of maximum EVM values over several sweeps

PCTL
95% percentile of RMS EVM value over several sweeps

PEAK
Maximum EVM over all symbols of current sweep

PPCT
95% percentile of maximum EVM values over several sweeps

PSD
Standard deviation of maximum EVM values over several sweeps

RPE

Maximum value of RMS EVM over several sweeps

SDEV

Standard deviation of EVM values over several sweeps

TPE

Maximum EVM over all display points over several sweeps

Return values:

<Result>

Example:

See [Chapter 11.13.2, "Measurement example 2: GSM EDGE burst measurement based on a digital standard"](#), on page 606.

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:FDERror?

<ResultType>

Queries the results of the FSK deviation error of FSK modulated signals.

Suffix:

<n> 1..n
[Window](#)

<m> 1..4
[Marker](#)

Query parameters:

<ResultType> <none>
Deviation error for current sweep.

AVG

Average FSK deviation error.

RPE

Peak FSK deviation error.

SDEV

Standard deviation of FSK deviation error.

PCTL

95 percentile value of FSK deviation error.

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:FSK:CFDRift?

<ResultType>

Queries the results of the carrier frequency drift for FSK modulated signals.

Suffix:

<n> 1..n
[Window](#)

<m> 1..4
Marker

Query parameters:

<ResultType> <none>
Carrier frequency drift for current sweep.
AVG
Average FSK carrier frequency drift over several sweeps.
RPE
Peak FSK carrier frequency drift over several sweeps.
SDEV
Standard deviation of FSK carrier frequency drift.
PCTL
95 percentile value of FSK carrier frequency drift.

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:FSK:DERRor?
<ResultType>

Queries the results of the frequency error of FSK modulated signals.

Suffix:

<n> 1..n
Window
<m> 1..4
Marker

Query parameters:

<ResultType> <none>
RMS frequency error of display points of current sweep
AVG
Average of frequency errors over several sweeps
PAVG
Average of maximum frequency errors over several sweeps
PCTL
95% percentile of frequency error over several sweeps
PEAK
Maximum frequency error over all symbols of current sweep
PPCT
95% percentile of maximum frequency errors over several sweeps
PSD
Standard deviation of maximum frequency errors over several sweeps
RPE
Maximum value of frequency error over several sweeps

SDEV

Standard deviation of frequency errors over several sweeps

TPE

Maximum frequency error over all display points over several sweeps

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:FSK:MDEViation?

<ResultType>

Queries the results of the measurement deviation of FSK modulated signals.

Suffix:<n> 1..n
[Window](#)<m> 1..4
[Marker](#)**Query parameters:**<ResultType> <none>
Measurement deviation for current sweep.**AVG**

Average FSK measurement deviation over several sweeps.

RPE

Peak FSK measurement deviation over several sweeps.

SDEV

Standard deviation of FSK measurement deviation.

PCTL

95 percentile value of FSK measurement deviation.

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:FSK:RDEViation?

<ResultType>

Queries the results of the reference deviation of FSK modulated signals.

Suffix:<n> 1..n
[Window](#)<m> 1..4
[Marker](#)**Query parameters:**<ResultType> <none>
Measurement deviation for current sweep.

AVG

Average FSK measurement deviation over several sweeps.

RPE

Peak FSK measurement deviation over several sweeps.

SDEV

Standard deviation of FSK measurement deviation.

PCTL

95 percentile value of FSK measurement deviation.

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNcTion:DDEMod:STATistic:GIMBalance?

<ResultType>

Queries the results of the Gain Imbalance error measurement of digital demodulation. The output values are the same as those provided in the "Modulation Accuracy" table .

Suffix:

<n> 1..n
[Window](#)

<m> 1..4
[Marker](#)

Query parameters:

<ResultType> **<none>**
 Gain imbalance error for current sweep

AVG
 Average gain imbalance error over several sweeps

RPE
 Peak gain imbalance error over several sweeps

SDEV
 Standard deviation of gain imbalance error

PCTL
 95 percentile value of gain imbalance error

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNcTion:DDEMod:STATistic:IQIMbalance?

<ResultType>

Queries the results of the I/Q imbalance error measurement of digital demodulation.

Suffix:

<n> 1..n
[Window](#)

<m> 1..4
Marker

Query parameters:

<ResultType> <none>
I/Q imbalance error (for current sweep)
AVG
Average I/Q imbalance error over several sweeps
RPE
Peak I/Q imbalance error over several sweeps
SDEV
Standard deviation of I/Q imbalance error
PCTL
95 percentile value of I/Q imbalance error

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:IQSKew?
<ResultType>

Queries the results of the I/Q skew error measurement of digital demodulation.

Suffix:

<n> 1..n
Window
<m> 1..4
Marker

Query parameters:

<ResultType> <none>
I/Q skew error (for current sweep)
AVG
Average I/Q skew error over several sweeps
RPE
Peak I/Q skew error over several sweeps
SDEV
Standard deviation of I/Q skew error
PCTL
95 percentile value of I/Q skew error

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:MERRor?
<ResultType>

Queries the results of the magnitude error measurement of digital demodulation.

Suffix:

<n> 1..n
[Window](#)

<m> 1..4
[Marker](#)

Query parameters:

<ResultType> **<none>**
 RMS magnitude error of display points of current sweep

AVG
 Average of magnitude errors over several sweeps

PAVG
 Average of maximum magnitude errors over several sweeps

PCTL
 95% percentile of magnitude error over several sweeps

PEAK
 Maximum magnitude errors over all symbols of current sweep

PPCT
 95% percentile of maximum magnitude errors over several sweeps

PSD
 Standard deviation of maximum magnitude errors over several sweeps

RPE
 Maximum value of magnitude errors over several sweeps

SDEV
 Standard deviation of magnitude errors over several sweeps

TPE
 Maximum magnitude errors over all display points over several sweeps

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:MPOWER?

<ResultType>

Queries the results of the power measurement of digital demodulation.

Suffix:

<n> 1..n
[Window](#)

<m> 1..4
[Marker](#)

Query parameters:

<ResultType> **<none>**
 power measurement (for current sweep)

AVG

Average of power measurement over several sweeps

RPE

Peak of power measurement over several sweeps

SDEV

Standard deviation of power measurement

PCTL

95 percentile value of power measurement

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:OOffset?

<ResultType>

Queries the results of the I/Q offset measurement performed for digital demodulation.

Suffix:<n> 1..n
[Window](#)<m> 1..4
[Marker](#)**Query parameters:**<ResultType> <none>
Origin offset error (for current sweep)**AVG**

Average origin offset error over several sweeps

RPE

Peak origin offset error over several sweeps

SDEV

Standard deviation of origin offset error

PCTL

95 percentile value of origin offset error

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:PError?

<ResultType>

Queries the results of the phase error measurement performed for digital demodulation.

Suffix:<n> 1..n
[Window](#)

<m> 1..4
Marker

Query parameters:

<ResultType> <none>
"Phase error" of display points of current sweep

AVG
Average of phase errors over several sweeps

PAVG
Average of maximum phase errors over several sweeps

PCTL
95% percentile of phase error over several sweeps

PEAK
Maximum phase error over all symbols of current sweep

PPCT
95% percentile of maximum phase errors over several sweeps

PSD
Standard deviation of maximum phase errors over several sweeps

RPE
Maximum value of phase error over several sweeps

SDEV
Standard deviation of phase errors over several sweeps

TPE
Maximum phase error over all display points over several sweeps

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:QERRor?
<ResultType>

Queries the results of the Quadrature error measurement performed for digital demodulation.

Suffix:

<n> 1..n
Window

<m> 1..4
Marker

Query parameters:

<ResultType> <none>
Quadrature error (for current sweep)

AVG
Average quadrature error over several sweeps

RPE

Peak quadrature error over several sweeps

SDEV

Standard deviation of quadrature error

PCTL

95 percentile value of quadrature error

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:RHO? <ResultType>

Queries the results of the Rho factor measurement performed for digital demodulation.

Suffix:<n> 1..n
[Window](#)<m> 1..4
[Marker](#)**Query parameters:**<ResultType> **<none>**
Rho factor (for current sweep)
AVG
Average rho factor over several sweeps
RPE
Peak rho factor over several sweeps
SDEV
Standard deviation of rho factor
PCTL
95 percentile value of rho factor**Return values:**

<Result>

CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:SNR? <ResultType>Queries the results of the SNR error (also referred to as the [Modulation Error Ratio \(MER\)](#)) measurement performed for digital demodulation.**Suffix:**<n> 1..n
[Window](#)<m> 1..4
[Marker](#)**Query parameters:**<ResultType> **<none>**
SNR value of display points of current sweep

AVG

Average of SNR values over several sweeps

PAVG

Average of maximum SNR values over several sweeps

PCTL

95% percentile of SNR value over several sweeps

PEAK

Maximum SNR over all symbols of current sweep

PPCT

95% percentile of maximum SNR values over several sweeps

PSD

Standard deviation of maximum SNR values over several sweeps

RPE

Maximum value of SNR over several sweeps

SDEV

Standard deviation of SNR values over several sweeps

TPE

Maximum SNR over all display points over several sweeps

Return values:

<Result>

CALCulate<n>:MARKer<m>:FUNCTion:DDEMod:STATistic:SRERror?

<ResultType>

Queries the symbol rate error

Suffix:<n> 1..n
[Window](#)<m> 1..4
[Marker](#)**Query parameters:**

<ResultType> PEAK | AVG | SDEV | PCTL | TPEak | RPEak | PAVG | PSDev | PPCTI

<none>

Symbol rate error (for current sweep)

AVG

Average symbol rate error over several sweeps

RPE

Peak symbol rate error over several sweeps

SDEV

Standard deviation of symbol rate error

PCTL

95 percentile value of symbol rate error

Return values:

<Result>

11.9.5 Retrieving limit check results

The "modulation accuracy" parameters can be checked against defined limits. The following commands are required to query the results of these limit checks.

```

CALCulate<n>:LIMit:MACCuracy:CFERror:CURRent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:CFERror:MEAN[:RESult]?
CALCulate<n>:LIMit:MACCuracy:CFERror:PEAK[:RESult]?
CALCulate<n>:LIMit:MACCuracy:EVM:PCURrent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:EVM:PMEan[:RESult]?
CALCulate<n>:LIMit:MACCuracy:EVM:PPEak[:RESult]?
CALCulate<n>:LIMit:MACCuracy:EVM:RCURrent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:EVM:RMEan[:RESult]?
CALCulate<n>:LIMit:MACCuracy:EVM:RPEak[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FDERror:CURRent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FDERror:MEAN[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FDERror:PEAK[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FERRor:PCURrent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FERRor:PMEan[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FERRor:PPEak[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FERRor:RCURrent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FERRor:RMEan[:RESult]?
CALCulate<n>:LIMit:MACCuracy:FERRor:RPEak[:RESult]?
CALCulate<n>:LIMit:MACCuracy:MERRor:PCURrent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:MERRor:PMEan[:RESult]?
CALCulate<n>:LIMit:MACCuracy:MERRor:PPEak[:RESult]?
CALCulate<n>:LIMit:MACCuracy:MERRor:RCURrent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:MERRor:RMEan[:RESult]?
CALCulate<n>:LIMit:MACCuracy:MERRor:RPEak[:RESult]?
CALCulate<n>:LIMit:MACCuracy:OOFfset:CURRent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:OOFfset:MEAN[:RESult]?
CALCulate<n>:LIMit:MACCuracy:OOFfset:PEAK[:RESult]?
CALCulate<n>:LIMit:MACCuracy:PERRor:PCURrent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:PERRor:PMEan[:RESult]?
CALCulate<n>:LIMit:MACCuracy:PERRor:PPEak[:RESult]?
CALCulate<n>:LIMit:MACCuracy:PERRor:RCURrent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:PERRor:RMEan[:RESult]?
CALCulate<n>:LIMit:MACCuracy:PERRor:RPEak[:RESult]?
CALCulate<n>:LIMit:MACCuracy:RHO:CURRent[:RESult]?
CALCulate<n>:LIMit:MACCuracy:RHO:MEAN[:RESult]?
CALCulate<n>:LIMit:MACCuracy:RHO:PEAK[:RESult]?
CALCulate<n>:LIMit:MACCuracy:<ResultType>:<LimitType>[:RESult]

```

Queries whether the limit for the specified result type and limit type was violated.

For details on result types and limit types see [Chapter 3.2.29, "Result summary"](#), on page 55.

Suffix:

| | |
|--------------|--|
| <n> | Window |
| <ResultType> | CFERror EVM FDERror FERRor MERRor OOFFset PERRor RHO CFERror = Carrier Frequency Error EVM = "Error Vector" Magnitude FDERror = Frequency deviation error (FSK only) FERRor = Frequency error (FSK only) MERRor = Magnitude Error OOFFset = I/Q Offset PERRor = Phase Error RHO = Rho |
| <LimitType> | CURRent MEAN PEAK PCURRent PMEan PPEak RCURRent RMEan RPEak For CFERror, OOFFset, RHO: CURRent MEAN PEAK For EVM, FDERror, FERRor, MERRor, PERRor: PCURRent = Peak current value PMEan = Peak mean value PPEak = Peak peak value RCURRent = RMS current value RMEan = RMS mean value RPEak = RMS peak value |

Return values:

| | |
|---------------|--|
| <LimitResult> | NONE PASS FAIL MARGIN NONE No limit check result available yet. PASS All values have passed the limit check. FAIL At least one value has exceeded the limit. MARGIN currently not used *RST: NONE |
|---------------|--|

11.10 Importing and exporting I/Q data and results

The I/Q data to be evaluated in the VSA application can not only be measured by the VSA application itself, it can also be imported to the application, provided it has the correct format. Furthermore, the evaluated I/Q data from the VSA application can be exported for further analysis in external applications.

For details see [Chapter 7, "I/Q data import and export"](#), on page 291.

| | |
|----------------------------------|-----|
| MMEMory:LOAD:IQ:STATe..... | 590 |
| MMEMory:STORe<n>:IQ:COMMeNt..... | 590 |
| MMEMory:STORe<n>:IQ:FORMat..... | 590 |
| MMEMory:STORe<n>:IQ:STATe..... | 591 |

MMEMory:LOAD:IQ:STATe 1, <FileName>

Restores I/Q data from a file.

Setting parameters:

<FileName> string
 String containing the path and name of the source file.
 The file type is determined by the file extension. If no file extension is provided, the file type is assumed to be `.iq.tar`.
 For `.mat` files, Matlab® v4 is assumed.

Example: `MMEM:LOAD:IQ:STAT 1, 'C:\R_S\Instr\user\data.iq.tar'`
 Loads IQ data from the specified file.

Usage: Setting only

MMEMory:STORe<n>:IQ:COMMeNt <Comment>

Adds a comment to a file that contains I/Q data.

Suffix:

<n> irrelevant

Parameters:

<Comment> String containing the comment.

Example: `MMEM:STOR:IQ:COMM 'Device test 1b'`
 Creates a description for the export file.
`MMEM:STOR:IQ:STAT 1, 'C:\R_S\Instr\user\data.iq.tar'`
 Stores I/Q data and the comment to the specified file.

MMEMory:STORe<n>:IQ:FORMat <Format>,<DataFormat>

Sets or queries the format of the I/Q data to be stored.

Suffix:

<n> irrelevant

Parameters:

<Format> **FLOat32**
 32-bit floating point format.
INT32
 32-bit integer format.

*RST: FLOat32

<DataFormat> **COMPLex**
Exports complex data.

REAL
Exports real data.

*RST: COMPLex

Example: MMEM:STOR:IQ:FORM INT32,REAL

MMEMory:STORe<n>:IQ:STATe <1>, <FileName>

Writes the captured I/Q data to a file.

By default, the contents of the file are in 32-bit floating point format.

Suffix:

<n> 1..n

Parameters:

<1>

<FileName>

String containing the path and name of the target file.
The file type is determined by the file extension. If no file extension is provided, the file type is assumed to be .iq.tar.
For .mat files, Matlab® v4 is assumed.

Example:

```
MMEM:STOR:IQ:STAT 1, 'C:\R_S\Instr\user\data.iq.tar'
```

Stores the captured I/Q data to the specified file.

Usage:

Asynchronous command

11.11 Status reporting system

The status reporting system stores all information on the current operating state of the instrument, e.g. information on errors or limit violations which have occurred. This information is stored in the status registers and in the error queue. The status registers and the error queue can be queried via IEC bus.

In this section, only the status registers/bits specific to the VSA application are described.

For details on the common FSW status registers refer to the description of remote control basics in the FSW User Manual.



*RST does not influence the status registers.

Description of the Status Registers

In addition to the registers provided by the base system, the following registers are used in the VSA application:

- `STATUS:QUESTIONABLE:SYNC<n>` - contains application-specific information about synchronization errors or errors during burst detection.
- `STATUS:QUESTIONABLE:MODULATION<n>` – provides information on any limit violations that occur after demodulation in one of the 4 windows
- `STATUS:QUESTIONABLE:MODULATION<n>:EVM` - limit violations in EVM evaluation
- `STATUS:QUESTIONABLE:MODULATION<n>:PHASE` - limit violations in Phase Error evaluation
- `STATUS:QUESTIONABLE:MODULATION<n>:MAGNITUDE` - limit violations in Magnitude Error evaluation
- `STATUS:QUESTIONABLE:MODULATION<n>:CFREQUENCY` - limit violations in Carrier Frequency evaluation
- `STATUS:QUESTIONABLE:MODULATION<n>:IQRHO` - limit violations in I/Q-Offset and RHO evaluation
- `STATUS:QUESTIONABLE:MODULATION<n>:FSK` - limit violations in FSK evaluation



The `STATUS:QUESTIONABLE` register "sums up" the information from all subregisters (e.g. bit 11 sums up the information for all `STATUS:QUESTIONABLE:SYNC` registers). For some subregisters, there may be separate registers for each active channel. Thus, if a status bit in the `STATUS:QUESTIONABLE` register indicates an error, the error may have occurred in any of the channel-specific subregisters. In this case, you must check the subregister of each channel to determine which channel caused the error. By default, querying the status of a subregister always returns the result for the currently selected channel.

The commands to query the contents of the following status registers are described in [Chapter 11.11.9, "Querying the status registers"](#), on page 597.

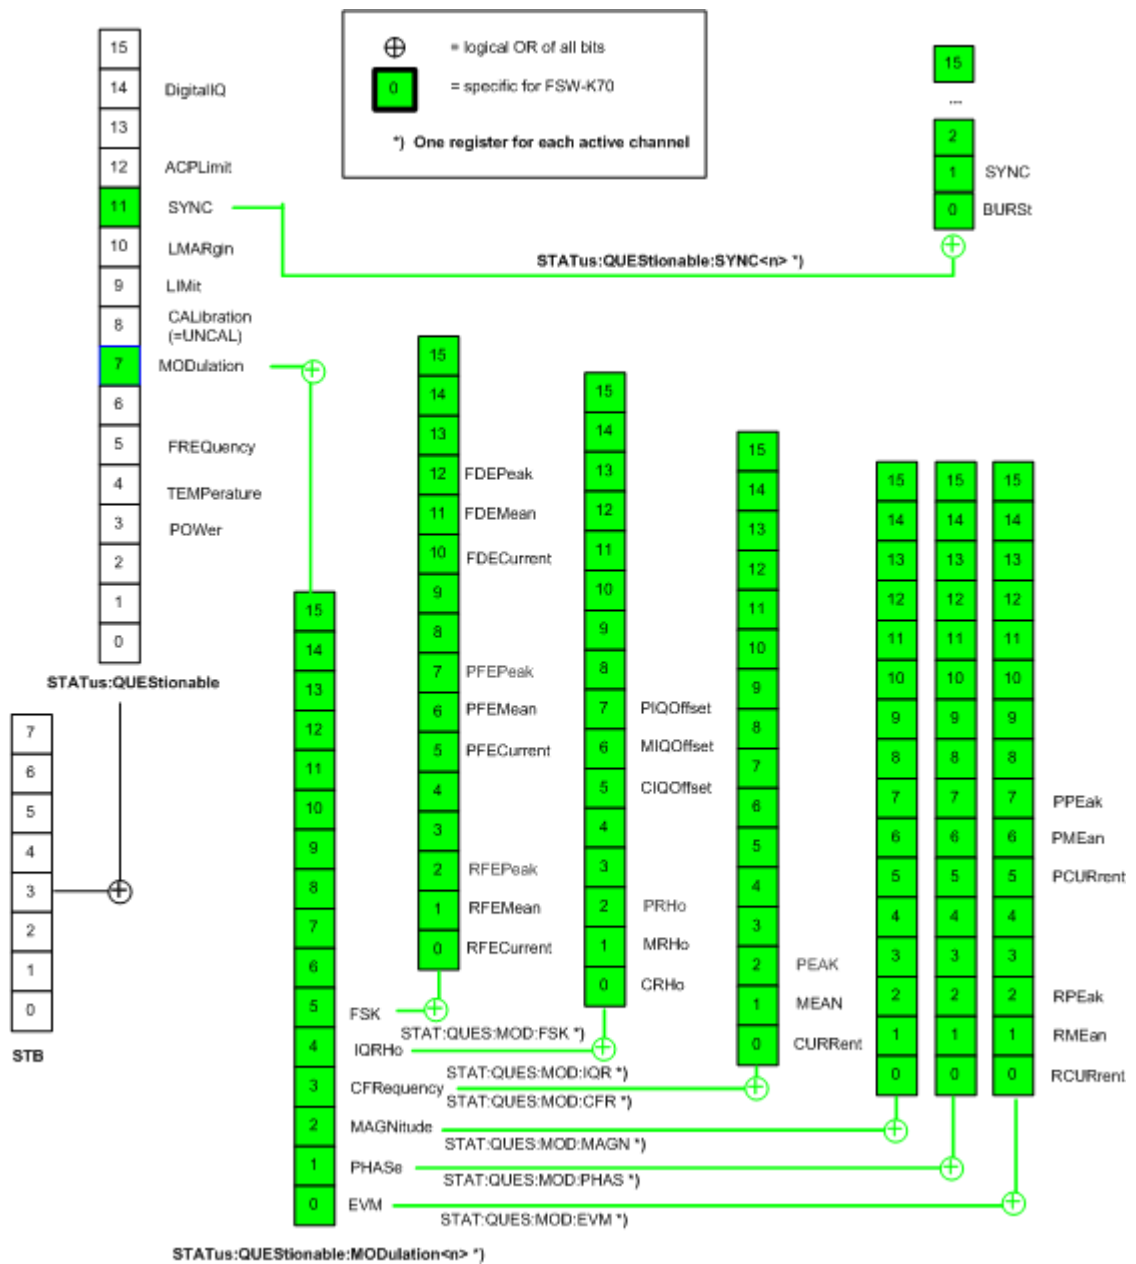


Figure 11-2: Overview of VSA-specific status registers

- [STATUS:QUESTIONable:SYNC<n> register](#)..... 594
- [STATUS:QUESTIONable:MODulation<n> register](#)..... 594
- [STATUS:QUESTIONable:MODulation<n>:EVM register](#)..... 594
- [STATUS:QUESTIONable:MODulation<n>:PHASe register](#)..... 595
- [STATUS:QUESTIONable:MODulation<n>:MAGNitude register](#)..... 595
- [STATUS:QUESTIONable:MODulation<n>:CFRequency register](#)..... 596
- [STATUS:QUESTIONable:MODulation<n>:IQRHO register](#)..... 596
- [STATUS:QUESTIONable:MODulation<n>:FSK register](#)..... 597
- [Querying the status registers](#)..... 597

11.11.1 STATUS:QUESTIONABLE:SYNC<n> register

This register contains application-specific information about synchronization errors or errors during burst detection for each window in each VSA channel. It can be queried with commands `STATUS:QUESTIONABLE:SYNC:CONDITION?` on page 599 and `STATUS:QUESTIONABLE:SYNC[:EVENT]?` on page 600.

Table 11-7: Status error bits in STATUS:QUESTIONABLE:SYNC register for R&S FSW-K70

| Bit | Definition |
|---------|---|
| 0 | Burst not found. This bit is set if a burst could not be detected. |
| 1 | Sync not found This bit is set if the sync sequence (pattern) of the midamble could not be detected. |
| 2 to 14 | Not used. |
| 15 | This bit is always 0. |

11.11.2 STATUS:QUESTIONABLE:MODULATION<n> register

This register comprises information about any limit violations that may occur after demodulation in any of the VSA windows. It can be queried with commands `STATUS:QUESTIONABLE:MODULATION<n>:CONDITION?` on page 599 and `STATUS:QUESTIONABLE:MODULATION<n>[:EVENT]?` on page 599.



The status of the `STATUS:QUESTIONABLE:MODULATION` register is indicated in bit 7 of the "STATUS:QUESTIONABLE" register. It can be queried using the `STATUS:QUESTIONABLE:EVENT` command.

| Bit No | Meaning |
|--------|---------------------------------------|
| 0 | Error in EVM evaluation |
| 1 | Error in Phase Error evaluation |
| 2 | Error in Magnitude Error evaluation |
| 3 | Error in Carrier Frequency evaluation |
| 4 | Error in I/Q offset or RHO evaluation |
| 5 | Error in FSK evaluation |
| 6-15 | These bits are not used |

11.11.3 STATUS:QUESTIONABLE:MODULATION<n>:EVM register

This register comprises information about limit violations in EVM evaluation. It can be queried with commands

STATus:QUESTionable:MODulation<n>:EVM:CONDition and
 STATus:QUESTionable:MODulation<n>:EVM[:EVENT].

| Bit No | Meaning |
|--------|-----------------------------|
| 0 | Error in current RMS value |
| 1 | Error in mean RMS value |
| 2 | Error in peak RMS value |
| 3-4 | These bits are not used |
| 5 | Error in current peak value |
| 6 | Error in mean peak value |
| 7 | Error in peak peak value |
| 8-15 | These bits are not used |

11.11.4 STATus:QUESTionable:MODulation<n>:PHASe register

This register comprises information about limit violations in Phase Error evaluation. It can be queried with commands

STATus:QUESTionable:MODulation<n>:PHASe:CONDition and
 STATus:QUESTionable:MODulation<n>:PHASe[:EVENT].

| Bit No | Meaning |
|--------|-----------------------------|
| 0 | Error in current RMS value |
| 1 | Error in mean RMS value |
| 2 | Error in peak RMS value |
| 3-4 | These bits are not used |
| 5 | Error in current peak value |
| 6 | Error in mean peak value |
| 7 | Error in peak peak value |
| 8-15 | These bits are not used |

11.11.5 STATus:QUESTionable:MODulation<n>:MAGNitude register

This register comprises information about limit violations in Magnitude Error evaluation. It can be queried with commands

STATus:QUESTionable:MODulation<n>:MAGNitude:CONDition and
 STATus:QUESTionable:MODulation<n>:MAGNitude[:EVENT].

| Bit No | Meaning |
|--------|-----------------------------|
| 0 | Error in current RMS value |
| 1 | Error in mean RMS value |
| 2 | Error in peak RMS value |
| 3-4 | These bits are not used |
| 5 | Error in current peak value |
| 6 | Error in mean peak value |
| 7 | Error in peak peak value |
| 8-15 | These bits are not used |

11.11.6 STATUS:QUESTIONable:MODulation<n>:CFRequency register

This register comprises information about limit violations in Carrier Frequency evaluation. It can be queried with commands

STATUS:QUESTIONable:MODulation<n>:CFRequency:CONDition and
STATUS:QUESTIONable:MODulation<n>:CFRequency[:EVENT].

| Bit No | Meaning |
|--------|-------------------------|
| 0 | Error in current value |
| 1 | Error in mean value |
| 2 | Error in peak value |
| 3-15 | These bits are not used |

11.11.7 STATUS:QUESTIONable:MODulation<n>:IQRHO register

This register comprises information about limit violations in I/Q offset or RHO evaluation. It can be queried with commands

STATUS:QUESTIONable:MODulation<n>:IQRHO:CONDition and
STATUS:QUESTIONable:MODulation<n>:IQRHO[:EVENT].

| Bit No | Meaning |
|--------|-----------------------------------|
| 0 | Error in current RHO value |
| 1 | Error in mean RHO value |
| 2 | Error in peak RHO value |
| 3-4 | These bits are not used |
| 5 | Error in current I/Q offset value |
| 6 | Error in mean I/Q offset value |

| Bit No | Meaning |
|--------|--------------------------------|
| 7 | Error in peak I/Q offset value |
| 8-15 | These bits are not used |

11.11.8 STATus:QUESTionable:MODulation<n>:FSK register

This register comprises information about limit violations in FSK evaluation. It can be queried with commands

STATus:QUESTionable:MODulation<n>:FSK:CONDition and
STATus:QUESTionable:MODulation<n>:FSK[:EVENT].

| Bit No | Meaning |
|--------|---|
| 0 | Error in current Frequency Error RMS value |
| 1 | Error in mean Frequency Error RMS value |
| 2 | Error in peak Frequency Error RMS value |
| 3-4 | These bits are not used |
| 5 | Error in current Frequency Error peak value |
| 6 | Error in mean Frequency Error peak value |
| 7 | Error in peak Frequency Error peak value |
| 8-9 | These bits are not used |
| 10 | Error in current Frequency Deviation value |
| 11 | Error in mean Frequency Deviation value |
| 12 | Error in peak Frequency Deviation value |
| 13-15 | These bits are not used |

11.11.9 Querying the status registers

The following commands query the contents of the individual status registers.

| | |
|---|-----|
| STATus:QUESTionable:ACPLimit:CONDition? | 599 |
| STATus:QUESTionable:DIQ:CONDition? | 599 |
| STATus:QUESTionable:FREQUENCY:CONDition? | 599 |
| STATus:QUESTionable:LIMit:CONDition? | 599 |
| STATus:QUESTionable:LMARgin:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:CFREquency:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:EVM:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:FSK:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:IQRHo:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:MAGNitude:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:PHASe:CONDition? | 599 |

| | |
|--|-----|
| STATus:QUESTionable:POWer:CONDition? | 599 |
| STATus:QUESTionable:SYNC:CONDition? | 599 |
| STATus:QUESTionable:ACPLimit[:EVENT]? | 599 |
| STATus:QUESTionable:DIQ[:EVENT]? | 599 |
| STATus:QUESTionable:FREQuency[:EVENT]? | 599 |
| STATus:QUESTionable:LIMit[:EVENT]? | 599 |
| STATus:QUESTionable:LMARgin[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:CFRequency[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:EVM[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:FSK[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:IQRHo[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:MAGNitude[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:PHASe[:EVENT]? | 599 |
| STATus:QUESTionable:POWer[:EVENT]? | 600 |
| STATus:QUESTionable:SYNC[:EVENT]? | 600 |
| STATus:QUESTionable:ACPLimit:ENABle | 600 |
| STATus:QUESTionable:DIQ:ENABle | 600 |
| STATus:QUESTionable:FREQuency:ENABle | 600 |
| STATus:QUESTionable:LIMit:ENABle | 600 |
| STATus:QUESTionable:LMARgin:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:CFRequency:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:EVM:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:FSK:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:IQRHo:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:MAGNitude:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:PHASe:ENABle | 600 |
| STATus:QUESTionable:POWer:ENABle | 600 |
| STATus:QUESTionable:SYNC:ENABle | 600 |
| STATus:QUESTionable:ACPLimit:NTRansition | 600 |
| STATus:QUESTionable:DIQ:NTRansition | 600 |
| STATus:QUESTionable:FREQuency:NTRansition | 600 |
| STATus:QUESTionable:LIMit:NTRansition | 601 |
| STATus:QUESTionable:LMARgin:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:CFRequency:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:EVM:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:FSK:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:IQRHo:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:MAGNitude:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:PHASe:NTRansition | 601 |
| STATus:QUESTionable:POWer:NTRansition | 601 |
| STATus:QUESTionable:SYNC:NTRansition | 601 |
| STATus:QUESTionable:ACPLimit:PTRansition | 601 |
| STATus:QUESTionable:DIQ:PTRansition | 601 |
| STATus:QUESTionable:FREQuency:PTRansition | 601 |
| STATus:QUESTionable:LIMit:PTRansition | 601 |
| STATus:QUESTionable:LMARgin:PTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:PTRansition | 601 |

| | |
|---|-----|
| STATus:QUESTionable:MODulation<n>:CFRequency:PTRansition..... | 601 |
| STATus:QUESTionable:MODulation<n>:EVM:PTRansition..... | 601 |
| STATus:QUESTionable:MODulation<n>:FSK:PTRansition..... | 601 |
| STATus:QUESTionable:MODulation<n>:IQRHo:PTRansition..... | 601 |
| STATus:QUESTionable:MODulation<n>:MAGNitude:PTRansition..... | 601 |
| STATus:QUESTionable:MODulation<n>:PHASe:PTRansition..... | 601 |
| STATus:QUESTionable:POWer:PTRansition..... | 602 |
| STATus:QUESTionable:SYNC:PTRansition..... | 602 |

STATus:QUESTionable:ACPLimit:CONDition?
STATus:QUESTionable:DIQ:CONDition? <ChannelName>
STATus:QUESTionable:FREQuency:CONDition?
STATus:QUESTionable:LIMit:CONDition?
STATus:QUESTionable:LMARgin:CONDition?
STATus:QUESTionable:MODulation<n>:CONDition? <ChannelName>
STATus:QUESTionable:MODulation<n>:CFRequency:CONDition?
 <ChannelName>
STATus:QUESTionable:MODulation<n>:EVM:CONDition? <ChannelName>
STATus:QUESTionable:MODulation<n>:FSK:CONDition? <ChannelName>
STATus:QUESTionable:MODulation<n>:IQRHo:CONDition? <ChannelName>
STATus:QUESTionable:MODulation<n>:MAGNitude:CONDition? <ChannelName>
STATus:QUESTionable:MODulation<n>:PHASe:CONDition? <ChannelName>
STATus:QUESTionable:POWer:CONDition? [<ChannelName>]
STATus:QUESTionable:SYNC:CONDition? <ChannelName>

Reads out the CONDition section of the status register.

The command does not delete the contents of the EVENT section.

Query parameters:

<ChannelName> String containing the name of the channel.
 The parameter is optional. If you omit it, the command works for the currently active channel.

Usage: Query only

STATus:QUESTionable:ACPLimit[:EVENT]?
STATus:QUESTionable:DIQ[:EVENT]? <ChannelName>
STATus:QUESTionable:FREQuency[:EVENT]?
STATus:QUESTionable:LIMit[:EVENT]?
STATus:QUESTionable:LMARgin[:EVENT]?
STATus:QUESTionable:MODulation<n>[:EVENT]? <ChannelName>
STATus:QUESTionable:MODulation<n>:CFRequency[:EVENT]? <ChannelName>
STATus:QUESTionable:MODulation<n>:EVM[:EVENT]? <ChannelName>
STATus:QUESTionable:MODulation<n>:FSK[:EVENT]? <ChannelName>
STATus:QUESTionable:MODulation<n>:IQRHo[:EVENT]? <ChannelName>
STATus:QUESTionable:MODulation<n>:MAGNitude[:EVENT]? <ChannelName>
STATus:QUESTionable:MODulation<n>:PHASe[:EVENT]? <ChannelName>

STATus:QUESTIONable:POWer[:EVENT]? [<ChannelName>]

STATus:QUESTIONable:SYNC[:EVENT]? <ChannelName>

Reads out the EVENT section of the status register.

The command also deletes the contents of the EVENT section.

Query parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Usage: Query only

STATus:QUESTIONable:ACPLimit:ENABLE <SumBit>[, <ChannelName>]

STATus:QUESTIONable:DIQ:ENABLE <BitDefinition>, <ChannelName>

STATus:QUESTIONable:FREQUENCY:ENABLE <SumBit>[, <ChannelName>]

STATus:QUESTIONable:LIMit:ENABLE <SumBit>[, <ChannelName>]

STATus:QUESTIONable:LMARgin:ENABLE <SumBit>[, <ChannelName>]

STATus:QUESTIONable:MODulation<n>:ENABLE <BitDefinition>, <ChannelName>

STATus:QUESTIONable:MODulation<n>:CFREquency:ENABLE <BitDefinition>,
<ChannelName>

STATus:QUESTIONable:MODulation<n>:EVM:ENABLE <BitDefinition>,
<ChannelName>

STATus:QUESTIONable:MODulation<n>:FSK:ENABLE <BitDefinition>,
<ChannelName>

STATus:QUESTIONable:MODulation<n>:IQRHo:ENABLE <BitDefinition>,
<ChannelName>

STATus:QUESTIONable:MODulation<n>:MAGNitude:ENABLE <BitDefinition>,
<ChannelName>

STATus:QUESTIONable:MODulation<n>:PHASe:ENABLE <BitDefinition>,
<ChannelName>

STATus:QUESTIONable:POWer:ENABLE <SumBit>[, <ChannelName>]

STATus:QUESTIONable:SYNC:ENABLE <BitDefinition>, <ChannelName>

Controls the ENABLE part of a register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameters:

<BitDefinition> Range: 0 to 65535

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

STATus:QUESTIONable:ACPLimit:NTRansition <SumBit>[, <ChannelName>]

STATus:QUESTIONable:DIQ:NTRansition <BitDefinition>, <ChannelName>

STATus:QUESTIONable:FREQUENCY:NTRansition <SumBit>[, <ChannelName>]

STATus:QUESTionable:LIMit:NTRansition <SumBit>[, <ChannelName>]
STATus:QUESTionable:LMARgin:NTRansition <SumBit>[, <ChannelName>]
STATus:QUESTionable:MODulation<n>:NTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:CFRequency:NTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:EVM:NTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:FSK:NTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:IQRHo:NTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:MAGNitude:NTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:PHASe:NTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:POWer:NTRansition <SumBit>[, <ChannelName>]
STATus:QUESTionable:SYNC:NTRansition <BitDefinition>[,<ChannelName>]

Controls the Negative TRansition part of a register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<BitDefinition> Range: 0 to 65535
 <ChannelName> String containing the name of the channel.
 The parameter is optional. If you omit it, the command works for the currently active channel.

STATus:QUESTionable:ACPLimit:PTRansition <SumBit>[, <ChannelName>]
STATus:QUESTionable:DIQ:PTRansition <BitDefinition>[,<ChannelName>]
STATus:QUESTionable:FREquency:PTRansition <SumBit>[, <ChannelName>]
STATus:QUESTionable:LIMit:PTRansition <SumBit>[, <ChannelName>]
STATus:QUESTionable:LMARgin:PTRansition <SumBit>[, <ChannelName>]
STATus:QUESTionable:MODulation<n>:PTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:CFRequency:PTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:EVM:PTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:FSK:PTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:IQRHo:PTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:MAGNitude:PTRansition <BitDefinition>,
 <ChannelName>
STATus:QUESTionable:MODulation<n>:PHASe:PTRansition <BitDefinition>,
 <ChannelName>

STATus:QUESTionable:POWER:PTRansition <SumBit>[, <ChannelName>]
STATus:QUESTionable:SYNC:PTRansition <BitDefinition>[,<ChannelName>]

These commands control the Positive TRansition part of a register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<BitDefinition> Range: 0 to 65535
 <ChannelName> String containing the name of the channel.
 The parameter is optional. If you omit it, the command works for the currently active channel.

11.12 Deprecated commands

The following commands are maintained for compatibility reasons with previous R&S analyzers only. Use the specified alternative commands for new remote control programs.

| | |
|---|-----|
| CALCulate<n>:FSK:DEVIation:COMPensation | 602 |
| DISPlay[:WINDow<n>]:STATe | 602 |
| [SENSe:]DDEMod:NORMalize[:VALue] | 603 |
| [SENSe:]DDEMod:SBANd | 603 |

CALCulate<n>:FSK:DEVIation:COMPensation <State>

Defines whether the deviation error is compensated for when calculating the frequency error for FSK modulation.

Note that this command is maintained for compatibility reasons only. For newer remote programs, use [\[SENSe:\]DDEMod:NORMalize:FDError](#) on page 500.

Suffix:

<n> 1..n
 [Window](#)

Parameters:

<State> **ON | 1**
 Scales the reference signal to the actual deviation of the measurement signal.
 OFF | 0
 Uses the entered nominal deviation for the reference signal.

DISPlay[:WINDow<n>]:STATe <State>

Activates or deactivates the specified window.

Note that this command is maintained for compatibility reasons only. Use the `LAYout` commands for new remote control programs (see [Chapter 11.8.2, "Working with windows in the display"](#), on page 544).

Suffix:

<n> [Window](#)

[SENSe:]DDEMod:NORMAlize[:VALue] <State>

This command switches the compensation of the IQ offset and the compensation of amplitude droop on or off.

Note that this command is maintained for compatibility reasons only. Use the more specific `[SENSe:]DDEMod:NORMAlize` commands for new remote control programs (see [Chapter 11.5.8, "Demodulation settings"](#), on page 492).

Parameters:

<State> **OFF | 0**
 No compensation for amplitude droop nor I/Q offset
 ON | 1
 Compensation for amplitude droop and I/Q offset enabled
 *RST: 1

[SENSe:]DDEMod:SBANd <SidebandPos>

Selects the sideband for the demodulation.

Note that this command is maintained for compatibility reasons only. Use the `SENS:SWAP:IQ` command for new remote control programs (see [\[SENSe:\]SWAPiq](#) on page 472).

Parameters:

<SidebandPos> **NORMAl | INVerse**
 NORMAl
 Normal (non-inverted) position
 INVerse
 Inverted position

11.13 Programming examples

The following examples demonstrate how to perform vector signal analysis in a remote environment.

These examples are meant to demonstrate the use of the most common remote commands for vector signal analysis. Note that not all commands executed here are actually necessary, as they may reflect default settings.

- [Measurement example 1: user-defined measurement of continuous QPSK signal](#) 604
- [Measurement example 2: GSM EDGE burst measurement based on a digital standard](#)..... 606
- [Measurement example 3: user-defined pattern search and limit check](#)..... 609

11.13.1 Measurement example 1: user-defined measurement of continuous QPSK signal

The following example describes a scenario similar to the one for manual operation described in

[Chapter 9.2, "Measurement example 1: continuous QPSK signal"](#), on page 314.

```
//-----Configuring the measurement -----
//Reset the instrument
*RST
//Set the center frequency.
FREQ:CENT 1GHz
//Set the reference level
DISP:TRAC:Y:RLEV 4dBm
//Create new measurement channel for vector signal analysis named "MyVSA"
INST:CRE:NEW DDEM, 'MyVSA'

//-----Configuring the measurement -----

//Reset the instrument
*RST
//Set the center frequency.
FREQ:CENT 1GHz
//Set the reference level
DISP:TRAC:Y:RLEV 4dBm
//Create new measurement channel for vector signal analysis named "MyVSA"
INST:CRE:NEW DDEM, 'MyVSA'

//----- Configuring the expected input signal -----

//Set the modulation type
DDEM:FORM QPSK
//Set the modulation order
DDEM:QPSK:FORM NORM
//Query the available symbol mappings for QPSK modulation
DDEM:MAPP:CAT?
//Set the symbol mapping to WCDMA
DDEM:MAPP 'WCDMA'
//Set the symbol rate
DDEM:SRAT 1 MHz
//Select the RRC transmit filter
DDEM:TFIL:NAME 'RRC'
DDEM:TFIL:ALPH 0.35
```

```

//----- Configuring an averaged EVM vs Time result display -----

//Create new window to the right of I/Q constellation (window 1) with
//error vector as data type
LAY:ADD? '1',RIGH,EVEC
//Result: '5'
//Set result type for window 5 to magnitude = EVM
CALC5:FORM MAGN
//Add a second trace in average mode
DISPlay:WINDow5:TRACe2:MODE AVER
//Add a third trace in max hold mode
DISPlay:WINDow5:TRACe3:MODE MAXH
//Calculate an average over 10 sweeps
SWE:COUN 10

//-----Performing the measurement-----

//Select single sweep mode.
INIT:CONT OFF
//Initiate a new measurement and wait until the 10 sweeps have finished.
INIT;*WAI

//-----Storing the Constellation I/Q diagram to a file -----

//Display the I/Q Constellation result display (window 1) in full screen.
DISP:WIND1:SIZE LARG
//Define the destination of the screenshot as a file.
HCOP:DEST 'MMEM'
//Select bmp as the file format.
HCOP:DEV:LANG BMP
//Select the file name for the printout.
MMEM:NAME 'C:\R_S\INST\USER\IQConstellation.bmp'
//Print all screen elements
HCOP:ITEM:ALL
//Store the printout in a file called 'IQConstellation.bmp'.
HCOP
//Restore the I/Q Constellation result display to one subwindow.
DISP:WIND5:SIZE SMAL

//-----Storing the EVM trace data to a file-----

//Include a header in the trace export file
FORM:DEXP:HEAD ON
//Export the trace data, not raw I/Q data
FORM:DEXP:MODE TRAC
//Save the detected symbol values (x-values are not exported with trace data)
MMEM:STOR4:TRAC 1,'AverageEVM'

```

```
//Save the EVM values (window 5) to an ascii file.
MMEM:STOR5:TRAC 1, 'AverageEVM'
```

11.13.2 Measurement example 2: GSM EDGE burst measurement based on a digital standard

The following example describes a scenario similar to the one for manual operation described in

[Chapter 9.3, "Measurement example 2: burst GSM EDGE signals"](#), on page 319



Note that although this example uses the settings from a predefined digital standard, the configuration is changed to demonstrate the possibilities of the VSA application. A measurement that is performed strictly according to the standard requires much fewer programming efforts.

The rising and falling edges of a GSM burst are analyzed using the following result range settings:

Result Range Alignment and Evaluation Range
☐
X

Result Range

Evaluation Range

Length

Result Length = 738.462 μ s

Result Range Alignment

Reference Capture Burst Pattern Waveform

Alignment Left Center Right

Offset

Symbol Number at Burst Start

Visualization

The diagram illustrates the alignment of the result range to the burst. The burst is a blue trapezoid centered at 100.0, with a peak level of 10 and a trough level of -10. The result range is a green rectangle from 0.0 to 200.0, starting 10 symbols before the burst begins and ending 10 symbols after it ends.

```

//-----Configuring the measurement -----

//Reset the instrument
*RST
//Set the center frequency.
FREQ:CENT 1GHz
//Set the reference level
DISP:TRAC:Y:RLEV 4dBm
//Create new measurement channel for vector signal analysis named "VSA"
INST:CRE:NEW DDEM,'VSA'

//-----Loading the required digital standard -----

//Loads the GSM EDGE_8PSK standard file and the settings defined there
DDEM:PRES 'EDGE_NB'

//-----Changing data acquisition settings -----

DDEM:RLEN 10000 sym

//----- Defining the result range -----
//Define the result length as 200 symbols.
DDEMod:TIME 200
//Define the burst as the reference for the result range
CALC:TRAC:ADJ BURS
//Align the result range to the left edge of the burst
CALC:TRAC:ADJ:ALIG LEFT
//Define an offset of 10 symbols from the burst start
CALC:TRAC:ADJ:ALIG:OFFS -10
//Define the symbol number 10 as the result range start
DISP:TRAC:X:VOFF 10

//-----Defining the evaluation range -----

//Evaluation range starts at symbol 13 and ends at symbol 155
CALC:ELIN:STAT ON
CALC:ELIN1 13
CALC:ELIN2 155

//----- Changing the result display -----

//Close symbol table display (window 4)
LAY:WIND4:REM
//Add a second trace in max hold mode to EVM vs Time display (window 1)
DISP:WINDow1:TRACe2:MODE MAXH
//Create new window to the right of capture buffer (window 3) with
//measurement signal as data type
LAY:ADD? '3',RIGH,MEAS
//Result: '4'

```

```

//Set result type for window 4 to magnitude
CALC4:FORM MAGN
//Add a second trace in clear/write mode for the reference signal
DISP:WINDow4:TRACe2:MODE WRIT
CALC4:TRAC2 REF

//----- Activating limit checks for modulation accuracy -----

//Activate limit checks for all values in the Result Summary
CALC:LIM:MACC:STAT ON

//-----Performing the measurement -----

//Select single sweep mode.
INIT:CONT OFF
//Initiate a new measurement and wait until the 10 sweeps have finished.
INIT;*WAI

//----- Retrieving Results -----

//Query the value and check the limit for the EVM RMS value in the
//result summary for the current evaluation range
CALC2:MARK:FUNC:DDEM:STAT:EVM? AVG
CALC:LIM:MACC:EVM:RCUR?

//Query the value and check the limit for the largest error vector magnitude
//in the measurement.
CALC2:MARK:FUNC:DDEM:STAT:EVM? PAVG
CALC:LIM:MACC:EVM:PPE?

//Query the value and check the limit for the mean carrier frequency offset
//in the result summary for the current evaluation range
CALC2:MARK:FUNC:DDEM:STAT:CFER? AVG
CALC:LIM:MACC:CFER:MEAN?

//----- Storing trace data to a file -----

//Include a header in the trace export file
FORM:DEXP:HEAD ON
//Export the trace data, not raw I/Q data
FORM:DEXP:MODE TRAC
//Query the first value of the x-axis for the current result range
//(x-values are not exported with trace data)
DISP:WIND1:TRAC2:X:STAR?

//Save the measurement signal values (trace 1 in window 4) to an ascii file.
MMEM:STOR4:TRAC 1,'Measurement signal'
//Save the reference signal values (trace 2 in window 4) to an ascii file.
MMEM:STOR4:TRAC 2,'Reference signal'
//Save the result summary values (window 2) for the current result range

```



```
//to an ascii file.
MDEM:STOR2:TRAC 1,'Result Summary'

//----- Retrieving results for further result ranges ----->

//Query the number of result ranges (current is last)
DDEM:SEAR:MBUR:CALC?
//Use variable <x> to determine number of previous result range
//DDEM:SEAR:MBUR:CALC <x>
//Move to next result range and repeat section "retrieving results" for
//range-specific results
```

11.13.3 Measurement example 3: user-defined pattern search and limit check

In this example a user-defined pattern is used to detect bursts and the calculated measurement results are checked against defined limits. The configuration settings are stored as a user-defined standard.

```
//-----Configuring the measurement -----

//Reset the instrument
*RST
//Set the center frequency.
FREQ:CENT 1GHz
//Set the reference level
DISP:TRAC:Y:RLEV 4dBm
//Create new measurement channel for vector signal analysis named "VSA"
INST:CRE:NEW DDEM,'VSA'

//-----Loading the required digital standard -----
//Load the GSM EDGE_8PSK standard file and the settings defined there
DDEM:PRES 'EDGE_NB'

//----- Creating a pattern -----
//Create new pattern
DDEM:SEAR:SYNC:NAME 'EDGE_TSC0_1stSymbolWrong'
DDEM:SEAR:SYNC:NST 8
DDEM:SEAR:SYNC:DATA '00060007000100070007000100070001000100010007000700070007
00010007000700010007000700010007000100010001'
DDEM:SEAR:SYNC:COMM 'Customized pattern'
DDEM:SEAR:SYNC:TEXT 'manipulated pattern that matches the EDGE_TSC0 pattern except
//for the first symbol (correct: 7, manipulated 6)'
//Add new pattern to current standard
DDEM:SEAR:SYNC:PATT:ADD 'EDGE_TSC0_1stSymbolWrong'
//Select new pattern
DDEM:SEAR:SYNC:SEL 'EDGE_TSC0_1stSymbolWrong'

//Select single sweep mode.
INIT:CONT OFF
```

```

//Initiate a new measurement
INIT;*WAI

//--- Configuring the expected input signal manually (for demonstration purposes)---
//Configure an 8PSK EDGE GSM input signal manually
//Set the modulation
DDEM:FORM PSK
DDEMod:PSK:NST 8
DDEM:PSK:FORM N3P
DDEM:MAPP 'EDGE'

//Set the symbol rate
DDEM:SRAT 270833.333
//Set Result Length
DDEMod:TIME 148
//Set Transmit Filter
DDEMod:TFILTER:NAME 'GMSK_LINEARIZED'
//Define input signal as burst signal with Burst Length 148 and 3 symbols run-in/out
DDEM:SIGN BURS
DDEM:SEAR:BURS:LENG:MAX 148
DDEM:SEAR:BURS:SKIP:RIS 3
DDEM:SEAR:BURS:SKIP:FALL 3
DDEM:SEAR:BURS:LENG:MIN 142
//Define that the input signal has a pattern
DDEM:SIGN:PATT ON
//Query the names of all defined patterns assigned to the current standard
DDEM:SEAR:SYNC:CAT? CURR
//Select a pattern
DDEM:SEAR:SYNC:SEL 'EDGE_TSC0_1stSymbolWrong'
//Ignore the first 58 symbols of the signal before comparing pattern
DDEM:STAN:SYNC:OFFS 58
DDEM:STAN:SYNC:OFFS:STAT ON
//Define the pattern waveform as the reference for the result range
DDEM:SEAR:SYNC:STAT ON
//Align the result range to the center of the pattern
CALC:TRAC:ADJ PATT
CALC:TRAC:ADJ:ALIG CENT
//Define values on x-Axis
DISPlay:WINDow:TRACe:X:SCALE:VOFFset 3
//Evaluation range starts at symbol 3 and ends at symbol 144.75
CALC:ELIN:STAT ON
CALC:ELIN1 3
CALC:ELIN2 144.75

//----- Storing the new settings as a user-defined standard -----
DDEM:STAN:SAVE 'C:\TEMP\CustomizedBurstMeas'

//-----Performing the measurement -----

```

```
//Select single sweep mode.  
INIT:CONT OFF  
//Initiate a new measurement and wait until it has finished.  
INIT;*WAI  
  
//----- Retrieving Results -----  
//Query the trace results of the capture buffer display.  
TRAC3:DATA? TRACE1  
//Query the results of the result summary.  
TRAC2:DATA? TRACE1
```

Annex

A Abbreviations

The following abbreviations are commonly used in the description of the R&S FSW-K70 option.

| Abbreviation | Meaning | See section |
|-----------------------|---|--|
| FSK | Frequency Shift Keying Modulation mode for which the information is encrypted in the frequency. | Frequency Shift Keying (FSK) |
| ISI | Inter-symbol Interference | |
| ISI-free demodulation | Demodulation structure in which the signal is no longer influenced by adjacent symbols at the decision instants after signal-adapted filtering. | System-Theoretical Modulation and Demodulation Filters |
| MEAS filter | Measurement Filter Weighting filter for the measurement. | System-Theoretical Modulation and Demodulation Filters |
| MSK | Minimum Shift Keying Modulation mode. | Minimum Shift Keying (MSK) |
| NDA Demodulator | Non Data Aided Demodulator Demodulation without any knowledge of the sent data contents. | Demodulation and Algorithms |
| PSK | Phase Shift Keying Modulation mode for which the information lies within the phase or within the phase transitions. | Phase Shift Keying (PSK) |
| QAM | Quadrature Amplitude Modulation Modulation mode for which the information is encrypted both in the amplitude and phase. | Quadrature Amplitude Modulation (QAM) |
| RMS | Root Mean Square | Averaging RMS Quantities |
| RX filter | Receive Filter Baseband filter in analyzer used for signal-adapted filtering. | System-Theoretical Modulation and Demodulation Filters |
| Transmit filter | Transmitter Filter Digital impulse shaping filter in signal processing unit of transmitter. | System-Theoretical Modulation and Demodulation Filters |
| VSA | Vector Signal Analysis Measurement at complex modulated RF carriers. | |

B Predefined standards and settings

In the "Digital Standards" menu, predefined basic settings for standards can be selected and user-defined standards stored (see [Chapter 5.2, "Configuration according to digital standards"](#), on page 184).

The most common measurements are predefined as standard settings for a large number of mobile radio networks. The instrument comes prepared with the following settings for those standards:

- Capture length and result length
- Signal description
- Modulation
- Transmit filter and measurement filter
- Burst/Pattern search configuration
- Result range alignment
- Evaluation range settings
- Display configuration

The standard settings are grouped in folders to facilitate selecting a standard.

Table B-1: List of predefined standards and settings

| Folder | Standard (SCPI) ¹⁾ | Modulation Mapping | Symbol rate | Transmit Filter Meas. Filter | Alpha/BT | Search for Burst | Search for Pattern | Pattern | Result length | Alignment | Evaluation Range |
|--------|--|-------------------------|------------------|---|----------|------------------|--------------------|--|---------------|----------------------|------------------|
| GSM | GSM_Nor- malBurst (GSM) | DMSK GSM | 270.83333 kHz | GMSK NONE | 0.3 | ✓ | ✓ | GSM_TSC0 (...) GSM_TSC7 | 148 | Pattern to Center | 0.5 - 147.25 |
| | GSM_Syn- chronization- Burst (GSM_SB) | DMSK GSM | 270.83333 kHz | GMSK NONE | 0.3 | ✓ | ✓ | GSM_SB0 (...) GSM_SB2 | 148 | Pattern to Center | 3 - 144 |
| | GSM_Fre- quencyBurst (GSM_FB) | DMSK GSM | 270.83333 kHz | GMSK NONE | 0.3 | ✓ | ✓ | GSM_FB0 GSM_FB01 | 148 | Pattern to Center | 3 - 144 |
| | GSM_Acces- sBurst (GSM_AB) | DMSK GSM | 270.83333 kHz | GMSK NONE | 0.3 | ✓ | ✓ | GSM_AB0 (...) GSM_AB2 | 88 | Pattern to Center | 8 - 85 |
| | EDGE_8PS K (EDGE_NB, EDGE_Nor- malburst) | 3 π /8-8PSK EDGE | 270.833 kHz | Linear- ized GMSK EDGE_N SR | - | ✓ | ✓ | EDGE_TSC0 (...) EDGE_TS7 | 148 | Pattern to Center | 3-144.75 |
| | EDGE_16Q AM | π /4-16QAM EDGE | 270.833 kHz | Linear- ized GMSK EDGE_N SR | - | ✓ | ✓ | 16QAM_EDGE_TSC0 (...) 16QAM_EDGE_TS7 | 148 | Pattern to Center | 3-144.75 |

1) The SCPI parameter for remote commands is provided where it differs from the standard name or a short form is available.

2) According to Shaped offset QPSK TG (RIG 106-13) standard, without differential precoding; sample rate = 1 MHz (not defined in standard)

| Folder | Standard (SCPI) ¹ | Modulation Mapping | Symbol rate | Transmit Filter Meas. Filter | Alpha/BT | Search for Burst | Search for Pattern | Pattern | Result length | Alignment | Evaluation Range |
|--------|------------------------------|------------------------|-------------|--|----------|------------------|--------------------|--|---------------|-------------------|------------------|
| | EDGE_32QAM | $\pi/4$ -32QAM EDGE | 270.833 kHz | Linearized GMSK EDGE_N SR | - | ✓ | ✓ | 32QAM_EDGE_TSC0 (...) 32QAM_EDGE_TS7 | 148 | Pattern to Center | 3-144.75 |
| | EDGE_QPSK_HSR_NarrowPulse | $3\pi/4$ -QPSK EDGE | 325 kHz | EDGE Narrow Pulse Shape EDGE HSR (Narrow Pulse) | - | ✓ | ✓ | EDGE_HSR_QPSK_TSC0 (...) EDGE_HSR_QPSK_TSC1..7 | 177 | Pattern to Center | 4- 172.75 |
| | EDGE_QPSK_HSR_WidePulse | $3\pi/4$ -QPSK EDGE | 325 kHz | EDGE Wide Pulse Shape EDGE HSR (Wide Pulse) | - | ✓ | ✓ | EDGE_HSR_QPSK_TSC0 (...) EDGE_HSR_QPSK_TSC1..7 | 177 | Pattern to Center | 4- 172.75 |
| | EDGE_16QAM_HSR_NarrowPulse | $\pi/4$ -16QAM EDGE | 325 kHz | EDGE Narrow Pulse Shape EDGE HSR (Narrow Pulse) | - | ✓ | ✓ | EDGE_HSR_16QAM_TSC0 (...) EDGE_HSR_16QAM_TSC1..7 | 177 | Pattern to Center | 4- 172.75 |

1) The SCPI parameter for remote commands is provided where it differs from the standard name or a short form is available.

2) According to Shaped offset QPSK TG (RIG 106-13) standard, without differential precoding; sample rate = 1 MHz (not defined in standard)

| Folder | Standard (SCPI) ¹ | Modulation Mapping | Symbol rate | Transmit Filter Meas. Filter | Alpha/BT | Search for Burst | Search for Pattern | Pattern | Result length | Alignment | Evaluation Range |
|--------|---|-------------------------|-------------|--|----------|------------------|--------------------|--|---------------|----------------------|------------------|
| | EDGE_16Q AM_HSR_W idePulse | $\pi/4$ -16QAM EDGE | 325 kHz | EDGE Wide Pulse Shape EDGE HSR (Wide Pulse) | - | ✓ | ✓ | EDGE_HSR_16QAM_TSC0 (...) EDGE_HSR_16QAM_TSC1..7 | 177 | Pattern to Center | 4- 172.75 |
| | EDGE_32Q AM_HSR_N arrowPulse | $-\pi/4$ -32QAM EDGE | 325 kHz | EDGE Narrow Pulse Shape EDGE HSR (Narrow Pulse) | - | ✓ | ✓ | EDGE_HSR_32QAM_TSC0 (...) EDGE_HSR_32QAM_TSC1..7 | 177 | Pattern to Center | 4- 172.75 |
| | EDGE_32Q AM_HSR_W idePulse | $-\pi/4$ -32QAM EDGE | 325 kHz | EDGE Wide Pulse Shape EDGE HSR (Wide Pulse) | - | ✓ | ✓ | EDGE_HSR_32QAM_TSC0 (...) EDGE_HSR_32QAM_TSC1..7 | 177 | Pattern to Center | 4- 172.75 |
| TETRA | TETRA_Dis- continuous- Downlink (TETRA_ND DOWN) | $\pi/4$ -DQPSK TETRA | 18 kHz | RRC RRC | 0.35 | ✓ | - | TETRA_S1 ... TETRA_S3 | 246 | Burst to Center | 0 - 244 |

1) The SCPI parameter for remode commands is provided where it differs from the standard name or a short form is available.

2) According to Shaped offset QPSK TG (IRIG 106-13) standard, without differential precoding; sample rate = 1 MHz (not defined in standard)

| Folder | Standard (SCPI) ¹ | Modulation Mapping | Symbol rate | Transmit Filter Meas. Filter | Alpha/BT | Search for Burst | Search for Pattern | Pattern | Result length | Alignment | Evaluation Range |
|-------------------------|---|-------------------------|---------------|---|----------------|------------------|--------------------|--------------------|---------------|--------------------|------------------|
| | TETRA_Con tinuous- Downlink (TETRA_NC DOWN) | $\pi/4$ -DQPSK TETRA | 18 kHz | RRC RRC | 0.35 | ✓ | - | TETRA_E TETRA_S | 255 | Burst to Center | 0 - 244 |
| 3GPP | 3G_WCDMA (3G_WCDM A_FWD, 3G_WCDMA _REV) | QPSK WCDMA | 3.84 MHz | RRC RRC | 0.22 | - | - | - | 800 | Capture/ Left | - |
| SOQPS K ² | SOQPSK- TG | GRAY | 1 MHz | Shaped Offset QPSK TG None | 0.7 (fixed) | - | - | - | 1000 | Capture/ Left | - |
| CDMA | CDMA2000_ 1X_FWD (F1CD, CDMA2K_1 X_FWD) | QPSK CDMA2K_F WD | 1.2288 MHz | CDMA 2000 1X FWD Low ISI Meas Fil- ter | - | - | - | - | 800 | Capture/ Left | - |
| | CDMA2000_ 1X_REV (R1CD) | Offset QPSK Gray | 1.2288 MHz | CDMA 2000 1X Reverse Low ISI Meas Fil- ter | - | - | - | - | 800 | Capture/ Left | - |
| APCO2 5 | APCO25_C QPSK | $\pi/4$ DQPSK APCO25 | 4.8 kHz | RC NONE | 0.2 - | - | - | - | 200 | Capture/ Left | - |

¹) The SCPI parameter for remote commands is provided where it differs from the standard name or a short form is available.

²) According to Shaped offset QPSK TG (IRIG 106-13) standard, without differential precoding; sample rate = 1 MHz (not defined in standard)

| Folder | Standard (SCPI) ¹⁾ | Modulation Mapping | Symbol rate | Transmit Filter Meas. Filter | Alpha/BT | Search for Burst | Search for Pattern | Pattern | Result length | Alignment | Evaluation Range |
|----------------|-------------------------------|---------------------------|-------------|--------------------------------------|----------|------------------|--------------------|--------------------------|---------------|--------------------|---------------------|
| | APCO25_C4 FM | 4FSK APCO25 | 4.8 kHz | APCO25 C4FM Rectan- gular | - | - | - | - | 200 | Capture/ Left | - |
| | APCO_P2_ H-CDM | 4FSK APCO_25_ Phase_2 | 6 kHz | APCO2 5 H-CPM Rectan- gular | - | ✓ | - | - | 168 | Burst/ Cen- ter | entire result range |
| | APCO_P2_ H-DQPSK | 4FSK APCO_25_ Phase_2 | 6 kHz | NONE Rectan- gular | - | - | - | - | 180 | Capture/ Left | entire result range |
| Blue- tooth | Blue- tooth_DH1 | 2FSK Natural | 1 MHz | GMSK None | 0.5 | ✓ | - | - | 366 | Burst to Center | 2 - 363.75 |
| | Blue- tooth_DH3 | 2FSK Natural | 1 MHz | GMSK None | 0.5 | ✓ | - | - | 1622 | Burst to Center | 2 - 1619.75 |
| | Blue- tooth_DH5 | 2FSK Natural | 1 MHz | GMSK None | 0.5 | ✓ | - | - | 2870 | Burst to Center | 2 - 2867.75 |
| | Blue- tooth_Low Energy | 2FSK Natural | 1 MHz | GMSK None | 0.5 | ✓ | - | - | 376 | Burst to Center | 60 - 347.75 |
| | Bluetooth_2- DH1 | $\pi/4$ -DQPSK BT_EDR2 | 1 MHz | RRC RRC | 0.4 | ✓ | ✓ | Bluetooth_EDR_Sync_2-DHx | 242 | Pattern / Left | - |
| | Bluetooth_2- DH3 | $\pi/4$ -DQPSK BT_EDR2 | 1 MHz | RRC RRC | 0.4 | ✓ | ✓ | Bluetooth_EDR_Sync_2-DHx | 1494 | Pattern / Left | - |
| | Bluetooth_2- DH5 | $\pi/4$ -DQPSK BT_EDR2 | 1 MHz | RRC RRC | 0.4 | ✓ | ✓ | Bluetooth_EDR_Sync_2-DHx | 2742 | Pattern / Left | - |

1) The SCPI parameter for remote commands is provided where it differs from the standard name or a short form is available.

2) According to Shaped offset QPSK TG (RIG 106-13) standard, without differential precoding; sample rate = 1 MHz (not defined in standard)

| Folder | Standard (SCPI) ¹ | Modulation Mapping | Symbol rate | Transmit Filter Meas. Filter | Alpha/BT | Search for Burst | Search for Pattern | Pattern | Result length | Alignment | Evaluation Range |
|--------|------------------------------|--|-------------|------------------------------|----------|------------------|--------------------|------------------------------|---------------|--|------------------|
| | Bluetooth_3-DH1 | $\pi/4$ -DQPSK BT_EDR3 | 1 MHz | RRC RRC | 0.4 | ✓ | ✓ | Bluetooth_EDR_Sync_3-DHX | 242 | Pattern / Left | - |
| | Bluetooth_3-DH3 | $\pi/4$ -DQPSK BT_EDR3 | 1 MHz | RRC RRC | 0.4 | ✓ | ✓ | Bluetooth_EDR_Sync_3-DHX | 1494 | Pattern / Left | - |
| | Bluetooth_3-DH5 | $\pi/4$ -DQPSK BT_EDR3 | 1 MHz | RRC RRC | 0.4 | ✓ | ✓ | Bluetooth_EDR_Sync_3-DHX | 2742 | Pattern / Left | - |
| | Bluetooth_5_LE1M | 2FSK Natural | 1 MHz | GMSK None | 0.5 | ✓ | ✓ | BT-LE-Sync | 376 | Pattern Left (-8 Symbols Offset) | 56 - 351.75 |
| | Bluetooth_5_LE2M | 2FSK Natural | 2 MHz | GMSK None | 0.5 | ✓ | ✓ | BT-LE-Sync | 384 | Pattern Left (-16 Symbols Offset) | 64 - 359.75 |
| DECT | DECT_P32_FixedPart (DECT_FP) | 2FSK Natural | 1.152 MHz | GMSK None | 0.5 | ✓ | ✓ | DECT_PP DECT_PP_Prolonged | 424 | Capture Left | 0 - 799.75 |
| | DECT_P32_PortablePart | 2FSK Natural | 1.152 MHz | GMSK None | 0.5 | ✓ | ✓ | DECT_FP DECT_FP_Prolonged | 424 | Capture Left | - |
| DVB-S2 | DVB_S2_8P SK | 8PSK DVB_S2_8P SK | 20 MHz | RRC RRC | 0.35 | - | - | - | 90 | Capture Left | - |
| | DVB_S2_16 AP SK | UserQAM 16ary DVB_S2_16 APSK_34 | 20 MHz | RRC RRC | 0.35 | - | - | - | 180 | Capture Left | - |

1) The SCPI parameter for remote commands is provided where it differs from the standard name or a short form is available.

2) According to Shaped offset QPSK TG (IRIG 106-13) standard, without differential precoding; sample rate = 1 MHz (not defined in standard)

| Folder | Standard (SCPI) ¹⁾ | Modulation Mapping | Symbol rate | Transmit Filter Meas. Filter | Alpha/BT | Search for Burst | Search for Pattern | Pattern | Result length | Alignment | Evaluation Range |
|-----------|-------------------------------|------------------------------------|--------------|------------------------------|----------|------------------|--------------------|---------|---------------|-----------------|---------------------|
| | DVB_S2_32_APSK | UserQAM 32ary DVB_S2_32_APSK_34 | 20 MHz | RRC RRC | 0.35 | - | - | - | 270 | Capture Left | - |
| | DVB_S2_Q_PSK | QPSK DVB_S2_Q_PSK | 20 MHz | RRC RRC | 0.35 | - | - | - | 90 | Capture Left | - |
| ZIGBEE | ZIG-BEE_BPSK_868M_300K | BPSK Natural | 300 kHz | RC None | 1.0 | ✓ | - | - | 1000 | Burst to Center | - |
| | ZIG-BEE_BPSK_915M_600K | BPSK Natural | 600 kHz | RC None | 1.0 | ✓ | - | - | 1000 | Burst to Center | - |
| | ZIG-BEE_OQPSK_2450M_1M | Offset-QPSK Gray | 1 MHz | Half Sine - | - | ✓ | - | - | 1000 | Burst to Center | - |
| DOCSIS_30 | DS_DOCSIS_256QAM | 256QAM DOCSIS | 5.360537 MHz | RRC RRC | 0.12 | ✓ | - | - | 800 | Capture Left | entire result range |
| | DS_DOCSIS_64QAM | 64QAM DOCSIS | 5.056941 MHz | RRC RRC | 0.18 | ✓ | - | - | 800 | Capture Left | entire result range |
| | DS_Euro-DOCSIS_256QAM | DVB-C | 6.952 MHz | RRC RRC | 0.15 | ✓ | - | - | 800 | Capture Left | entire result range |
| | DS_Euro-DOCSIS_64QAM | 64QAM DVB-C | 6.952 MHz | RRC RRC | 0.15 | ✓ | - | - | 800 | Capture Left | entire result range |

1) The SCPI parameter for remote commands is provided where it differs from the standard name or a short form is available.
2) According to Shaped offset QPSK TG (RIG 106-13) standard, without differential precoding; sample rate = 1 MHz (not defined in standard)

| Folder | Standard (SCPI) ¹⁾ | Modulation Mapping | Symbol rate | Transmit Filter Meas. Filter | Alpha/BT | Search for Burst | Search for Pattern | Pattern | Result length | Alignment | Evaluation Range |
|--------|-------------------------------|-------------------------|-------------|------------------------------|----------|------------------|--------------------|---|---------------|-------------------|------------------|
| GBAS | GBAS | D8PSK VDL | 10.5 kHz | RC/None | 0.6 / -- | ✓ | ✓ | GBAS_Sync | 67 | Pattern / Left | - |
| DMR | DMR.xml | 4FSK APCO25_C 4FM | 4.8 kHz | RRC RRC | 0.2 | ✓ | ✓ | DMR_BS_sourced_Voice DMR_BS_sourced_Data DMR_MS_sourced_Voice DMR_MS_sourced_Data DMR_MS_sourced_RCsync DMR_TDMA_dm_TS1_Voice DMR_TDMA_dm_TS1_Data DMR_TDMA_dm_TS2_Voice DMR_TDMA_dm_TS2_Data | 120 | Pattern to Center | - |

1) The SCPI parameter for remote commands is provided where it differs from the standard name or a short form is available.
2) According to Shaped offset QPSK TG (RIG 106-13) standard, without differential precoding; sample rate = 1 MHz (not defined in standard)

C Predefined measurement and tx filters

The most frequently required measurement and TX filters required for vector signal analysis according to digital standards are provided by the FSW VSA application.

For general information on the use of these filters see [Chapter 4.1, "Filters and bandwidths during signal processing"](#), on page 68.

C.1 Transmit filters

The transmit filters required for common standards are predefined in the VSA application.

Table C-1: Overview of predefined Transmit filters

| | |
|-------------------------|--|
| RC | Raised cosine |
| RRC | Root raised cosine |
| Gauss | Gauss filter |
| GMSK | Gauss filter convolved with a rectangular filter; typically used for MSK |
| Linearized GMSK | Standard-specific filter for GSM EDGE (3GPP TS 45.004), normal symbol rate |
| EDGE Narrow Pulse Shape | Standard-specific filter for GSM EDGE (higher symbol rate) |
| EDGE Wide Pulse Shape | Standard-specific filter for GSM EDGE (higher symbol rate) |
| Half Sine | Half Sine filter |
| APCO25 C4FM | Filter for the APCO25 C4FM standard. |
| APCO25 H-CPM | Filter for the APCO25 Phase 2 standard. |
| APCO25 H-DQPSK | Filter for the APCO25 Phase 2 standard. |
| APCO25 H-D8PSK Narrow | Filter for the APCO25 Phase 2 standard. |
| APCO25 H-D8PSK Wide | Filter for the APCO25 Phase 2 standard. |
| CDMA2000 1X Forward | Filter for CDMA ONE forward link (TIA/EIA/IS-95-A May 1995) and CDMA2000 1X forward link (http://www.3gpp2.org/Public_html/specs/C.S0002-C_v1.0.pdf 28/05/2002) |
| CDMA2000 1X Reverse | Filter for CDMA ONE forward link (TIA/EIA/IS-95-A May 1995) and CDMA2000 1X reverse link (http://www.3gpp2.org/Public_html/specs/C.S0002-C_v1.0.pdf 28/05/2002) |
| Rectangular | Rectangular filter in the time domain with a length of 1 symbol period |
| Shaped Offset QPSK TG | Filter for shaped offset QPSK TG standard |

| | |
|------|--|
| None | No filter is used. |
| USER | User-defined filter. Define the filter using the <code>[SENSe:]DDEMod:TFILter:USER</code> command. |

C.2 Measurement filters

The most frequently required measurement filters are predefined in the VSA application.

Table C-2: Overview of predefined measurement filters

| | |
|-------------------------|---|
| EDGE NSR | Measurement filter required for the "EDGE, Normal Symbol Rate" standard. (see 3GPP TS 45.005, chapter 4.6 "Modulation Accuracy"). The resulting system is NOT inter-symbol interference free. |
| EDGE HSR (Narrow Pulse) | Measurement filter required for the "EDGE, High Symbol Rate, Narrow Pulse" standard. |
| EDGE HSR (Wide Pulse) | Measurement filter required for the "EDGE, High Symbol Rate, Wide Pulse" standard. |
| Gauss | Classic Gauss filter with an adjustable BT |
| Low ISI Meas Filter | Measurement filter implemented to retain a low intersymbol interference. Best suited for eye diagrams or I/Q vector diagrams. Not necessarily suited for EVM evaluation due to amplification in the pass band. (Not available for SOQPSK modulated signals. If selected, the used filter does not provide low-ISI results!) |
| Low Pass (Narrow) | Pass band up to $F_{\text{symbol}}/2$ Stop band starts at F_{symbol} (-40dB) |
| Low Pass (Wide) | Pass band up to F_{symbol} Stop band starts at $1.5 \cdot F_{\text{symbol}}$ (-40dB) |
| Rectangular | Rectangular filter in the time domain with a length of 1 symbol period; integrate and dump effect |
| RRC | Root Raised Cosine Filter. The roll-off parameter "Alpha" is set according to the Transmit filter if the "Auto (according to Transmit filter)" option is enabled (see "Using the Transmit Filter as a Measurement Filter (Auto)" on page 263). Otherwise it must be set manually. If the Transmit filter is also a Root Raised Cosine filter with the same roll-off parameter, the resulting system is inter-symbol interference free. |
| USER | User-defined filter. Define the filter using the <code>Load User Filter</code> function or the <code>[SENSe:]DDEMod:MFILter:USER</code> command. For details see Chapter 8.2.2, "How to select user-defined filters" , on page 296. |
| NONE | No measurement filter is used. |

The frequency response of the available standard-specific measurement filters is shown in [Chapter F.6.2, "Measurement filter"](#), on page 636.

C.3 Typical combinations of tx and measurement filters

Typical combinations of Tx and Meas filters are shown in [Table C-3](#); they can be set in the VSA application using "Meas filter = AUTO" (see ["Using the Transmit Filter as a Measurement Filter \(Auto\)"](#) on page 263).

Table C-3: Typical combinations of Tx and Meas filters

| Transmit filter | Measurement filter (analyzer) | Remarks |
|--------------------------|-------------------------------|---|
| RC (raised cosine) | - | filter combination without intersymbol interference (ISI) |
| RRC (root raised cosine) | RRC | filter combination without ISI |
| GMSK | - | filter combination with low ISI |
| Linearized GMSK | EDGE NSR | standard specific filter; filter combination with ISI |
| Gauss | - | filter combination with low ISI |
| Rectangular | - | filter combination without ISI |
| Half Sine | - | filter combination without ISI |
| CDMA2000 1X FORWARD | Low ISI Meas Filter | filter combination without ISI |
| CDMA2000 1X REVERSE | Low ISI Meas Filter | filter combination without ISI |
| APCO25 C4FM | Rectangular | filter combination without ISI |
| APCO25 H-CPM | Rectangular | filter combination without ISI |
| APCO25 H-DQPSK | Low ISI Meas Filter | filter combination without ISI |
| APCO25 H-D8PSK Narrow | Low ISI Meas Filter | filter combination without ISI |
| APCO25 H-D8PSK Wide | Low ISI Meas Filter | filter combination without ISI |
| EDGE Narrow Pulse Shape | EDGE HSR (Narrow Pulse) | standard specific filter; filter combination with ISI |
| EDGE Wide Pulse Shape | EDGE HSR (Wide Pulse) | standard specific filter; filter combination with ISI |
| User | Low ISI Meas Filter | filter combination with low ISI |

D ASCII file export format for VSA data

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or several columns (depending on the result type) which are also separated by a semicolon.

If several traces in several windows are exported to one file, the data for each window is listed subsequently. Within the data for a single window, the data for the individual traces is listed subsequently.

For details on which data is stored for which result display, see [TRACe<n> \[:DATA\]](#) on page 564.

Table D-1: ASCII file format for VSA trace data export

| File contents | Description |
|--|--|
| Header | |
| Type;FSW; | Instrument model |
| Version;1.40; | Firmware version |
| Date;01.Apr 2012; | Date of data set storage |
| Header section for individual window | |
| Screen;1; | Window name |
| Points per Symbol;4; | Points per symbol |
| x Axis Start;-13;sym; | Start value of the x axis |
| x Axis Stop;135;sym; | Stop value of the x axis |
| y per div;0.22000000000000003; | Y axis range per division |
| Ref value y axis;-10.00;dBm; | Y axis reference value |
| Ref value position;100;%; | Y axis reference position |
| Start of result range in capture buffer;6400;sym | Number of symbol at which exported capture buffer range begins |
| Header section for individual trace | |
| Trace; 1; | First trace |
| Meas Result;IQ; | Result type |
| Meas Signal;Meas; | Data source (measurement or reference data) |
| Demodulator;Offset QPSK; | Demodulation type |
| ResultMode;Trace; | Result mode |
| x unit;sym; | Unit of the x axis |
| y unit;dBm; | Unit of the y axis |
| Trace Mode;Clear Write; | Trace mode |

| File contents | Description |
|---|---|
| Values;800; | Number of measurement points |
| Data section for individual trace | |
| 10000;-10.3;-15.7 10130;-11.5;-16.9 10360;-12.0;-17.4 ...;...; | Measured values: <x value>, <y1>, <y2>; <y2> is only available with detector AUTOPEAK and contains the smallest of the two measured values for a measurement point |
| Header section for individual trace | |
| Trace; 2; | Next trace in same window |
| Meas Result;IQ; | Result type |
| Meas Signal;Meas; | Data source (measurement or reference data) |
| Demodulator;Offset QPSK; | Demodulation type |
| ResultMode;Trace; | Result mode |
| x unit;sym; | Unit of the x axis |
| y unit;dBm; | Unit of the y axis |
| Trace Mode;Clear Write; | Trace mode |
| Values;800; | Number of measurement points |
| Data section for individual trace | |
| ... | |
| Header section for individual window | |
| Screen;2; | Name of next window |
| ... | |
| Header section for individual trace | |
| Trace; 1; | First trace in second window |
| Data section for individual trace | |
| ... | |

E Known data file syntax description

When you load a Known Data file, the R&S FSW-K70 application checks whether the file complies with the following syntax:

Table E-1: Known Data File Syntax

| Syntax | Possible Values | Description |
|--|--|---|
| <RS_VSA_KNOWN_DATA_FILE Version="01.00"> | as specified | File Header |
| <Comment></Comment> | arbitrary | Optional file description |
| <Base></Base> | 2 16 | The base used to specify the <Data> values (binary or hexadecimal) For <ModulationOrder> values ≥ 32 , use binary (2). |
| <ModulationOrder></ModulationOrder> | 2 4 8 16 32 64 128 256 | Number of values each symbol can represent (order of modulation), e.g. 8 for 8-PSK For <ModulationOrder> values ≥ 32 , use <Base> = 2. |
| <ResultLength></ResultLength> | 1 ... up to 2000 ^{*)} | Number of symbols in each <Data> element The number must be identical to the "Result Length" setting in the "Result Range" dialog box, i.e. the number of symbols to be demodulated. |
| <Data></Data> | One character per symbol in the sequence Possible characters are: 0 to n-1, where n is the <ModulationOrder> Spaces, tabs and line breaks are ignored | One possible sequence of symbols that can be demodulated from the input signal Up to 6000 ^{*)} different sequences, i.e. <Data>-elements, can be defined in total |
| </RS_VSA_KNOWN_DATA_FILE> | as specified | File End |

^{*)} the exact number also depends on available memory space

Sample xml file for known data

```
<RS_VSA_KNOWN_DATA_FILE Version="01.00">

  <Comment> Standard EDGE_8PSK </Comment>
  <Base>          16          </Base>
  <ModulationOrder> 8          </ModulationOrder>
  <ResultLength>  148        </ResultLength>

  <Data>
    777 511 727 242 206 341 366 632 073 607
    770 173 705 631 011 235 507 476 330 522
    177 177 171 117 777 177 717 717 111 615
    527 046 104 004 106 047 125 415 723 344
    241 264 773 111 337 446 514 600 677 7      </Data>

  <Data>
    77 511 727 242 206 341 366 632 073 607
    770 173 705 631 011 235 507 476 330 522
```

```

177 177 171 117 777 177 717 717 111 615
527 046 104 004 106 047 125 415 723 344
241 264 773 111 337 446 514 600 677 7    7 </Data>

<Data>      7 511 727 242 206 341 366 632 073 607
770 173 705 631 011 235 507 476 330 522
177 177 171 117 777 177 717 717 111 615
527 046 104 004 106 047 125 415 723 344
241 264 773 111 337 446 514 600 677 7    77 </Data>

<Data> 7 777 511 727 242 206 341 366 632 073 607
770 173 705 631 011 235 507 476 330 522
177 177 171 117 777 177 717 717 111 615
527 046 104 004 106 047 125 415 723 344
241 264 773 111 337 446 514 600 677      </Data>

<Data> 77 777 511 727 242 206 341 366 632 073 607
770 173 705 631 011 235 507 476 330 522
177 177 171 117 777 177 717 717 111 615
527 046 104 004 106 047 125 415 723 344
241 264 773 111 337 446 514 600 67      </Data>
</RS_VSA_KNOWN_DATA_FILE>

```

F Formulae

| | |
|---|-----|
| • Trace-based evaluations..... | 629 |
| • Result summary evaluations..... | 631 |
| • Statistical evaluations for the result summary..... | 634 |
| • Trace averaging..... | 634 |
| • Analytically calculated filters..... | 635 |
| • Standard-specific filters..... | 636 |

F.1 Trace-based evaluations

The trace-based evaluations all take place at the sample rate defined by the "Display Points Per Symbol" parameter (see "Display Points/Sym" on page 288). The sampling instants at this rate are referred to as "t" here, i.e.

$$t = n \cdot T_D$$

Where T_D equals the duration of one sampling period at the sample rate defined by the "Display Points Per Symbol" parameter.

| Test parameter | Formula |
|--------------------------------|---|
| Error vector | $EV(t) = MEAS(t) - REF(t)$ |
| "Error Vector" Magnitude (EVM) | $EVM(t) = \frac{ EV(t) }{C}$ <p>with the normalization constant C depends on your setting. By default C^2 is the mean power of the reference signal.</p> $C = \sqrt{\frac{1}{K} \sum_k REF(k \cdot T) ^2}$ <p>T = duration of symbol periods</p> |
| Magnitude | $Mag_{MEAS}(t) = MEAS(t) $ $Mag_{REF}(t) = REF(t) $ |
| Phase | $Phase_{MEAS}(t) = \angle(MEAS(t))$ $Phase_{REF}(t) = \angle(REF(t))$ |
| Frequency | $FREQ_{MEAS}(t) = \frac{1}{2 \cdot \pi} \frac{d}{dt} \angle MEAS(t)$ $FREQ_{REF}(t) = \frac{1}{2 \cdot \pi} \frac{d}{dt} \angle REF(t)$ |

| Test parameter | Formula |
|-------------------|--|
| "Magnitude error" | $MAG_ERR(t) = MAG_{MEAS}(t) - MAG_{REF}(t)$ |
| "Phase error" | $PHASE_ERR(t) = PHASE_{MEAS}(t) - PHASE_{REF}(t)$ |
| Frequency error | $FREQ_ERR(t) = FREQ_{MEAS}(t) - FREQ_{REF}(t)$ |

FSK Modulation

The trace-based results for FSK signals are the same as those available for linear modulation types. However, as the signal processing for FSK signals is performed on the magnitude and instantaneous frequency, the I/Q based results first require a reconstruction of the reference and measured I/Q waveforms, as illustrated in [Reconstruction of the reference and measured I/Q waveforms for FSK modulation](#).

The dashed outline of the "compensate" blocks indicate that these operations are optionally (de-)activated depending on the corresponding user settings. With respect to FSK measurements, the optional compensation parameters are:

- [FSK Reference deviation](#)
- [Carrier frequency drift](#)

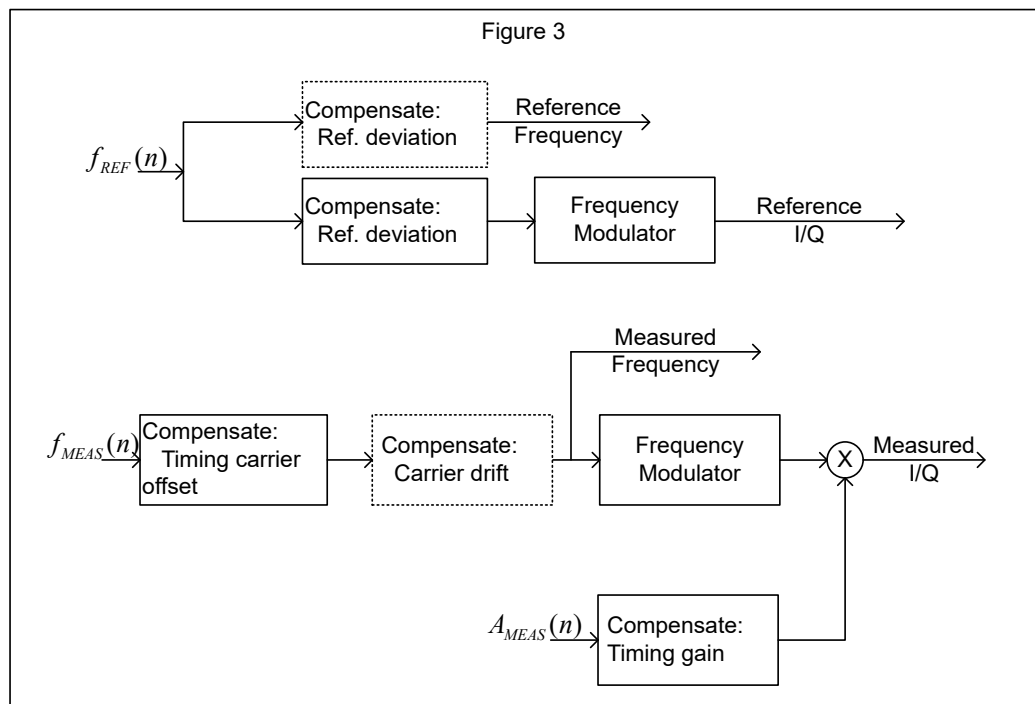


Figure F-1: Reconstruction of the reference and measured I/Q waveforms for FSK modulation

Note that a reference deviation error is corrected in the reference frequency trace. This ensures that the frequency deviation in the measured frequency trace corresponds to that of the originally measured signal. With respect to the I/Q reconstruction, the measured magnitude is timing compensated using the timing offset estimated from the

measured instantaneous frequency. This ensures that the measured magnitude and frequency remain synchronized in the reconstructed I/Q waveform.

F.2 Result summary evaluations

The evaluations for the result summary take place at the sample rate defined by the "Display Points Per Symbol" parameter (see "Display Points/Sym" on page 288). This value can be one of the following:

- "1": only the symbol instant contributes to the result
- "2": two samples per symbol instant contribute to the result (required for offset QPSK)
- The "Sample rate" defined for data acquisition (see "Sample Rate" on page 231): all samples contribute to the result equally

The results are determined by the evaluation range.

The sampling instants at this rate are referred to as "t" here, i.e.

$$t = n \cdot T_D$$

Where T_D equals the duration of one sampling period at the sample rate defined by the "Display Points Per Symbol" parameter

F.2.1 PSK, QAM and MSK modulation

For PSK, QAM and MSK modulation the estimation model is described in detail in chapter [Chapter 4.5.1, "PSK, QAM and MSK modulation"](#), on page 145. The parameters of the PSK, QAM and MSK-specific result summary table can be related to the distortion model parameters as follows:

Table F-1: Evaluation of results in the PSK, QAM and MSK result summary

| | | |
|------------------|------|---|
| EVM | RMS | $\sqrt{\frac{1}{N} \sum_n EVM(n \cdot T_D)^2}$ |
| | Peak | $\max(EVM(n \cdot T_D))$ |
| Modulation error | RMS | $-20 \cdot \log_{10} \left(\frac{\sqrt{\frac{1}{N} \sum_n EV(n \cdot T_D) ^2}}{\sqrt{\frac{1}{K} \sum_k REF(k \cdot T) ^2}} \right)$ |

| | | |
|-------------------------------|------|--|
| | Peak | $\min(MER(n \cdot T_D))$ $\text{with } MER(n \cdot T_D) = -20 \cdot \log_{10} \left(\frac{\sqrt{\frac{1}{N} \sum_n EV(n \cdot T_D) ^2}}{\sqrt{\frac{1}{K} \sum_k REF(k \cdot T) ^2}} \right)$ |
| "Magnitude error" | RMS | $\sqrt{\frac{1}{N} \sum_n MAG_ERR(n \cdot T_D) ^2}$ |
| | Peak | $\max(MAG_ERR(n \cdot T_D))$ |
| "Phase error" | RMS | $\sqrt{\frac{1}{N} \sum_n PHASE_ERR(n \cdot T_D) ^2}$ |
| | Peak | $\max(PHASE_ERR(n \cdot T_D))$ |
| RHO (correlation coefficient) | | $\rho = \frac{\left \sum_n REF^*(n) \cdot MEAS(n) \right ^2}{\sum_n REF(n) ^2 \cdot \sum_n MEAS(n) ^2} = \frac{ KKF(MEAS, REF) ^2}{AKF(REF) \cdot AKF(MEAS)}$ |
| IQ Offset C | | $C_{[lin]} = \frac{\left(\frac{c_I}{g_I} \right)^2 + \left(\frac{c_Q}{g_Q} \right)^2}{\frac{1}{K} \sum_k REF(k \cdot T) ^2}$ $C = 10 \cdot \log_{10}(C_{[lin]})[\text{dB}]$ |
| IQ Imbalance B | | $B_{[lin]} = \frac{ g_I - g_Q \cdot e^{j\theta} }{ g_I + g_Q \cdot e^{j\theta} }$ $B = 20 \cdot \log_{10}(B_{[lin]})[\text{dB}]$ |
| Gain Imbalance G | | $G_{[lin]} = \frac{g_Q}{g_I}$ $G = 20 \cdot \log_{10}(G_{[lin]})[\text{dB}]$ |

| | | |
|---------------------------|--|---|
| Quadrature Error Θ | | $\theta_{[lin]} = \vartheta / \pi \cdot 180^\circ$ $\theta = \theta_{[lin]} [\text{deg}]$ |
| Amplitude Droop A | | $A_{[lin]} = e^{-\alpha \cdot T}$ $A = 20 \cdot \log_{10}(A_{[lin]}) [\text{dB/Sym}]$ |

F.2.2 FSK modulation

For FSK modulation the estimation model is described in detail in section [Chapter 4.5.2, "FSK modulation"](#), on page 156. The parameters of the FSK-specific result summary table can be related to the distortion model parameters as follows:

Table F-2: Evaluation of results in the FSK result summary

| | | |
|---|------|---|
| Frequency Error | RMS | $\sqrt{\frac{1}{N} \sum_n FREQ_ERR(n \cdot T_D) ^2}$ |
| | Peak | $\max(FREQ_ERR(n \cdot T_D))$ |
| Magnitude Error | RMS | $\sqrt{\frac{1}{N} \sum_n MAG_ERR(n \cdot T_D) ^2}$ |
| | Peak | $\max(MAG_ERR(n \cdot T_D))$ |
| FSK Deviation Error Λ_{ERR} | | $\Lambda_{ERR} = \Lambda_{MEAS} - \Lambda_{REF} = (B - 1) \cdot \Lambda_{REF}$ Estimated FSK deviation error [Hz]. |
| FSK Measurement Deviation Λ_{MEAS} | | $\Lambda_{MEAS} = B \cdot \Lambda_{REF}$ Estimated FSK deviation of the meas signal [Hz]. |
| FSK Reference Deviation Λ_{REF} | | FSK reference deviation as entered by the user [Hz]. |
| Carrier Frequency Error f_0 | | $f_0 = \frac{C}{2 \cdot \pi}$ The carrier frequency error of the measured signal [Hz]. |
| Carrier Frequency Drift f_d | | $f_d = \frac{D}{2 \cdot \pi \cdot T}$ The drift in the carrier frequency of the measured signal [Hz/Sym]. |

F.3 Statistical evaluations for the result summary

The statistical evaluations in the result summary are based on the measurement results that are displayed in the "Current" column. Hence, the index "m" here represents the current evaluation, "M" is the total number of evaluations. In single sweep mode, M corresponds to the statistics count.

If the measurement values are represented in the logarithmic domain, the linear values are averaged. The result is then subsequently converted back into logarithmic domain. The linear values are indicated by the subscript [lin] in [Chapter F.2.1, "PSK, QAM and MSK modulation"](#), on page 631.

| | Mathematical expression | Calculation in FSW |
|----------------------|--|--|
| Mean \hat{x}_M | $\bar{x}_M = \frac{1}{M} \sum_m x_m$ | $\bar{x}_M = \frac{(M-1) \cdot \bar{x}_{M-1} + x_M}{M}$ with $\bar{x}_0 = 0$ |
| Peak \hat{x}_M | $\hat{x}_M = x_{idx}$ with $idx = \arg \max_m x_m $ | $\hat{x}_M = x_M \text{ if } x_M > \hat{x}_{M-1} $ $\hat{x}_M = x_{M-1} \text{ if } x_M \leq \hat{x}_{M-1} $ with $\bar{x}_0 = 0$ |
| StdDev σ_M | $\sigma_M = \sqrt{\frac{1}{M} \sum_m (x_m - \bar{x}_M)^2}$ with $\bar{x}_M = \frac{1}{M} \sum_m x_m$ | $\sigma_M = \sqrt{\frac{(M-1) \cdot \sigma_{M-1}^2 + \frac{M}{M-1} (x_M - \bar{x}_M)^2}{M}}$ with $\sigma_0 = 0$ |
| 95%ile $x_{95,M}$ | $x_{95,M} = \{x \Pr(x_m \leq x) = 0.95\}$ Pr() denotes the probability | Sorting the values and giving the 95%ile. |

F.4 Trace averaging

The index "m" represents the current evaluation, "M" is the total number of evaluations. In single sweep mode, M corresponds to the statistics count. The index "s" represents the sth sample within the trace.

If the measurement results are represented in logarithmic domain, the average operation is performed on the linear values. The result is then subsequently converted back into logarithmic domain.

| | Measurements | Calculation in FSW |
|-----------------------------------|--|--|
| RMS Average $\bar{x}_{s,M}$ | <ul style="list-style-type: none"> Error Vector Magnitude (EVM) Meas/Ref magnitude Capture Buffer magnitude | $\bar{x}_{s,M} = \sqrt{\frac{(M-1) \cdot \bar{x}_{s,M-1}^2 + x_{s,M}^2}{M}}$ |
| Linear Average $\bar{x}_{s,M}$ | All measurements where trace averaging is possible except for the measurements listed for RMS averaging | $\bar{x}_{s,M} = \frac{(M-1) \cdot \bar{x}_{s,M-1} + x_{s,M}}{M}$ |

F.5 Analytically calculated filters

The following filters are calculated during runtime of the unit and as a function of the operating parameter Alpha or BT.

| Filter Type | Setting Parameter | Impulse Response |
|--|--------------------|--|
| Raised cosine (RC) | Alpha (α) | $h(t) = \frac{\sin\left(\frac{\pi}{T}\right) \cdot \cos\left(\frac{\pi\alpha t}{T}\right)}{\left(\frac{\pi}{T}\right) \cdot 1 - 4\left(\frac{\alpha t}{T}\right)^2}$ |
| Root raised cosine (RRC) | Alpha (α) | $h(t) = 4\alpha \frac{\cos((1+\alpha)\pi/T) + \frac{\sin((1-\alpha)\pi/T)}{4\alpha/T}}{\pi\sqrt{T} \left(1 - (4\alpha t/T)^2\right)}$ |
| Gaussian filter (Gauss) ETSI TS 100 959 (V8.3.0) | BT | $h(t) = \frac{\exp\left(\frac{-t^2}{2\rho^2 T^2}\right)}{\sqrt{(2\pi) \cdot \rho T}}$ <p>with</p> $\rho = \frac{\sqrt{\ln 2}}{2\pi BT}$ |

F.6 Standard-specific filters

F.6.1 Transmit filter

EDGE Tx filter ETSI TS 300 959 (V8.1.2) (Linearized GMSK)

$$c_0(t) = \begin{cases} \prod_{i=0}^3 S(t+iT) & \text{for } 0 \leq t \leq 5T \\ 0 & \text{else} \end{cases}$$

$$S(t) = \begin{cases} \sin\left(\pi \int_0^t g(t') dt'\right) & \text{for } 0 \leq t \leq 4T \\ \sin\left(\frac{\pi}{2} - \pi \int_0^{t-4T} g(t') dt'\right) & \text{for } 4T < t \leq 8T \\ 0 & \text{else} \end{cases}$$

$$g(t) = \frac{1}{2T} \left(Q\left(2\pi \cdot 0.3 \frac{t-5T/2}{T\sqrt{\ln(2)}}\right) - Q\left(2\pi \cdot 0.3 \frac{t-3T/2}{T\sqrt{\ln(2)}}\right) \right)$$

$$Q(t) = \frac{1}{\sqrt{2\pi}} \int_t^{\infty} e^{-\frac{\tau^2}{2}} d\tau$$

$c_0(t)$ is the impulse response of the EDGE transmit filter




F.6.2 Measurement filter




F.6.2.1 EDGE measurement filters

RC filter, Alpha = 0.25, single-side-band 6 dB bandwidth = 90 kHz Windowing by multiplying the impulse response according to the following equation:

$$w(t) = \begin{cases} 1, & 0 \leq |t| \leq 1.5T \\ 0.5 \left(1 + \cos\left[\pi \left(|t| - 1.5T \right) / 2.25T \right] \right) & 1.5T < |t| < 3.75T \\ 0, & |t| \geq 3.75T \end{cases}$$



The following figure shows the frequency response of the standard-specific measurement filters.

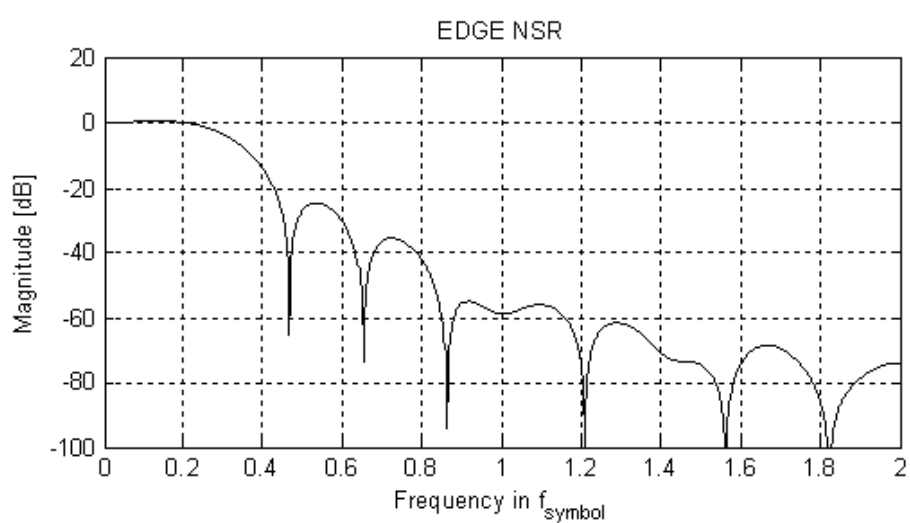
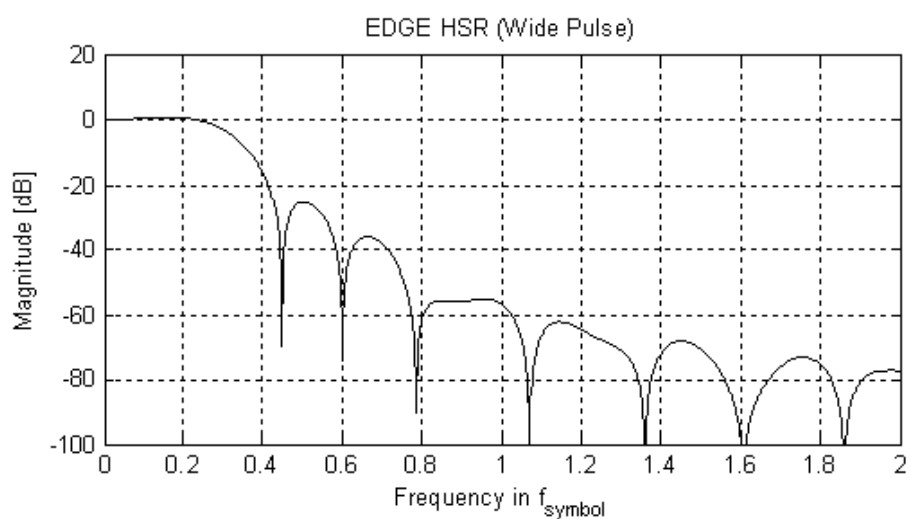
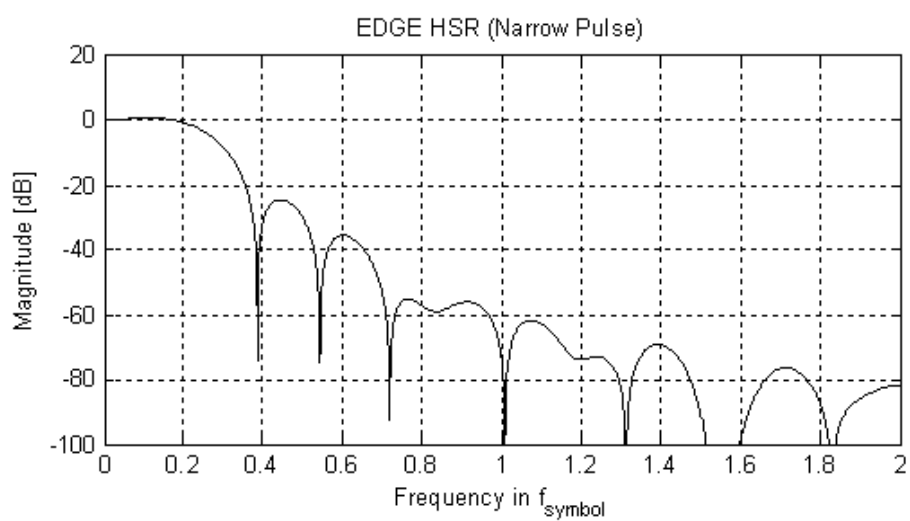


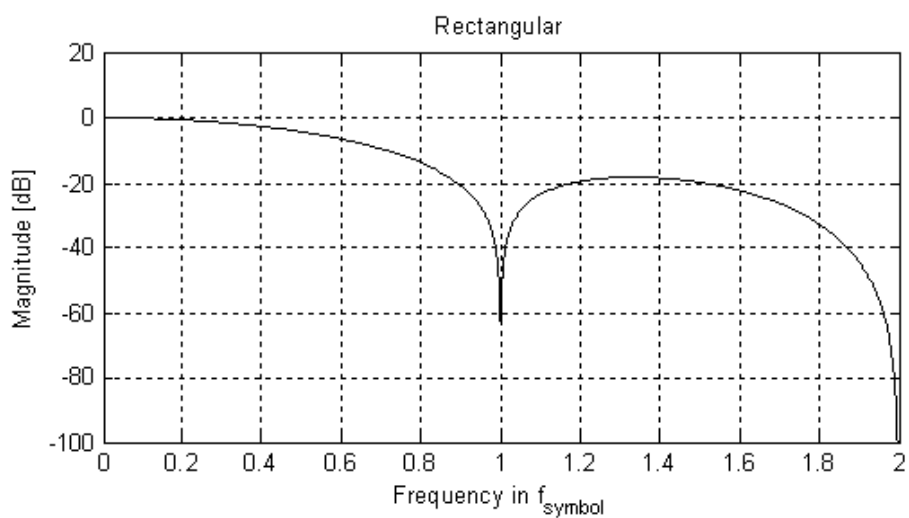
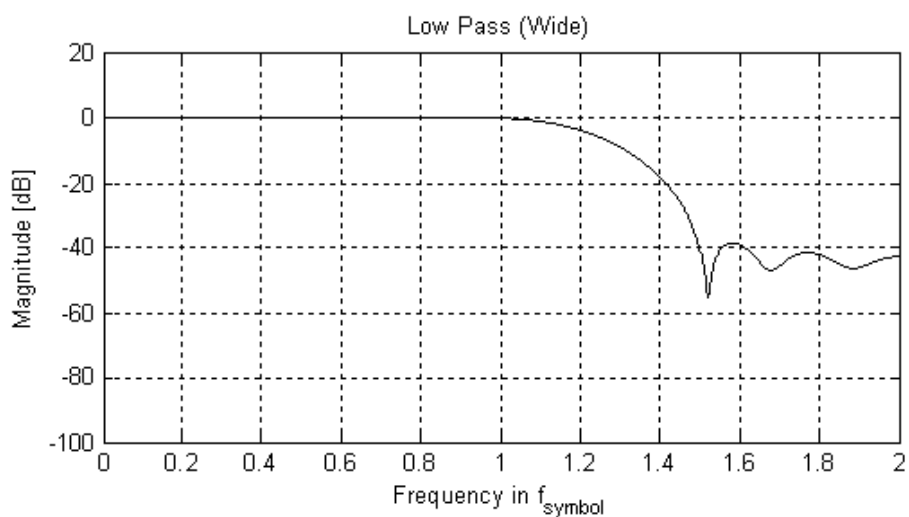
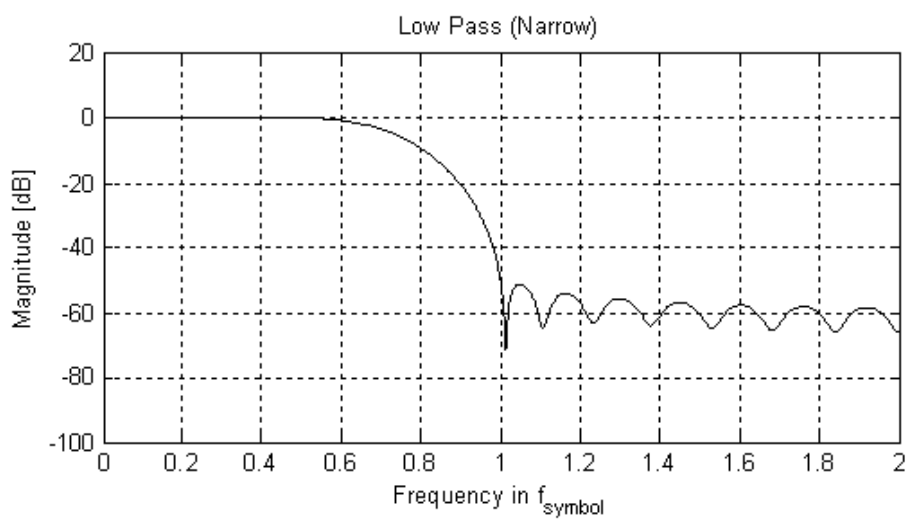





F.6.2.2 Low-isi filters

The following frequency responses are obtained when using a low-ISI measurement filter and the Transmit filter indicated in the title of each diagram.

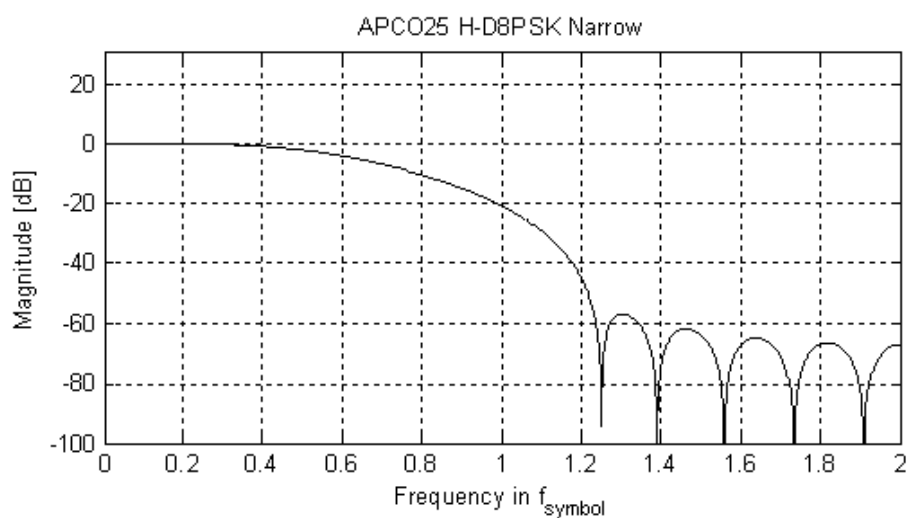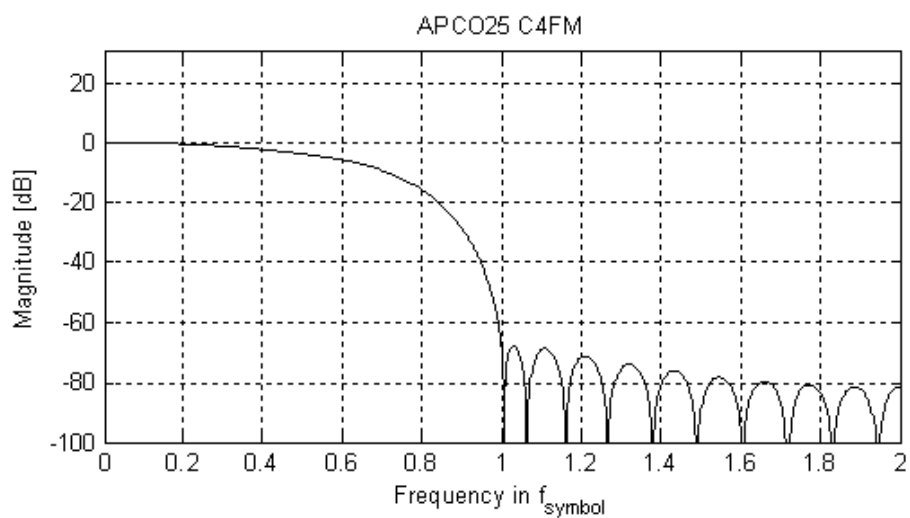

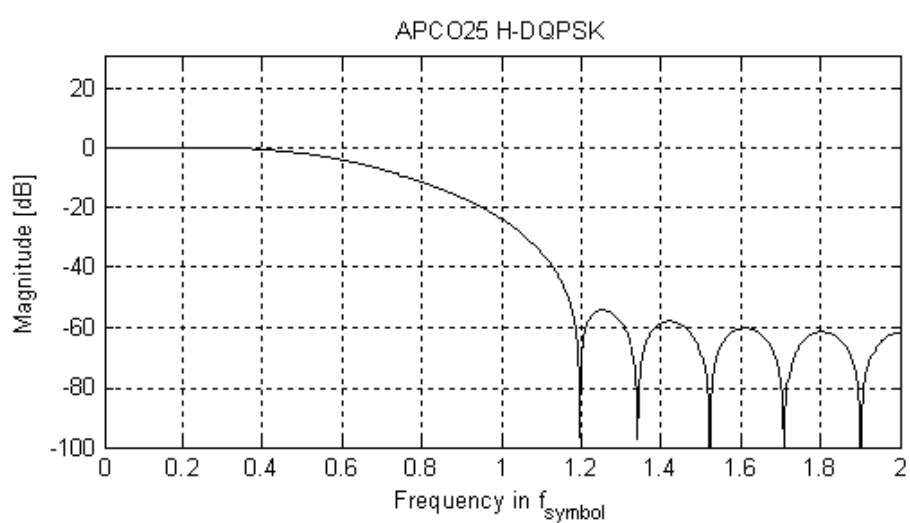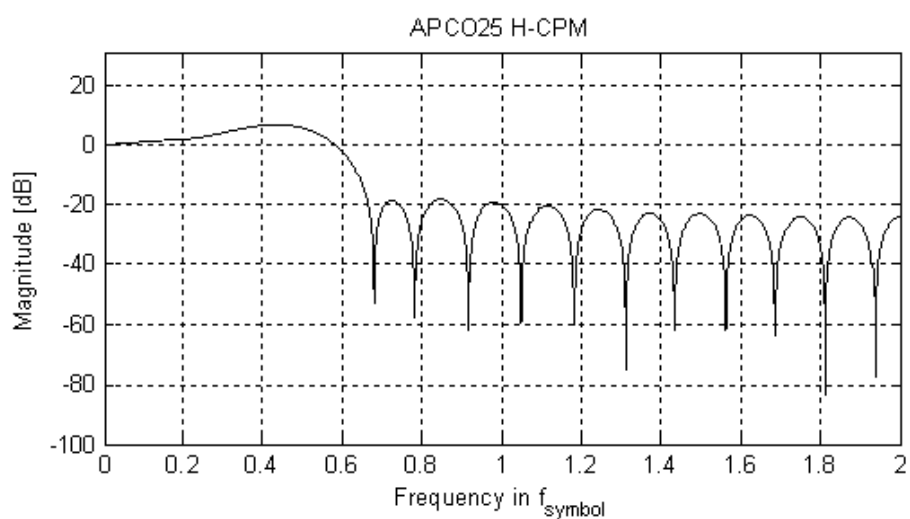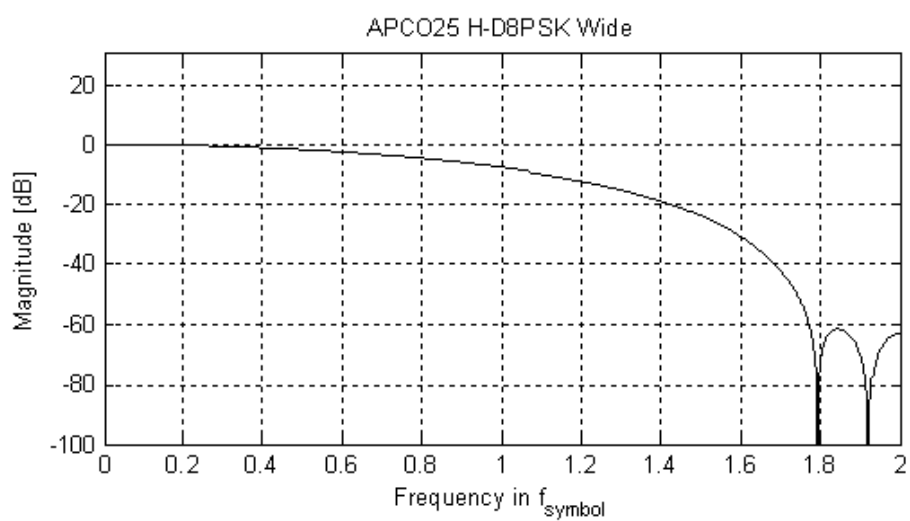

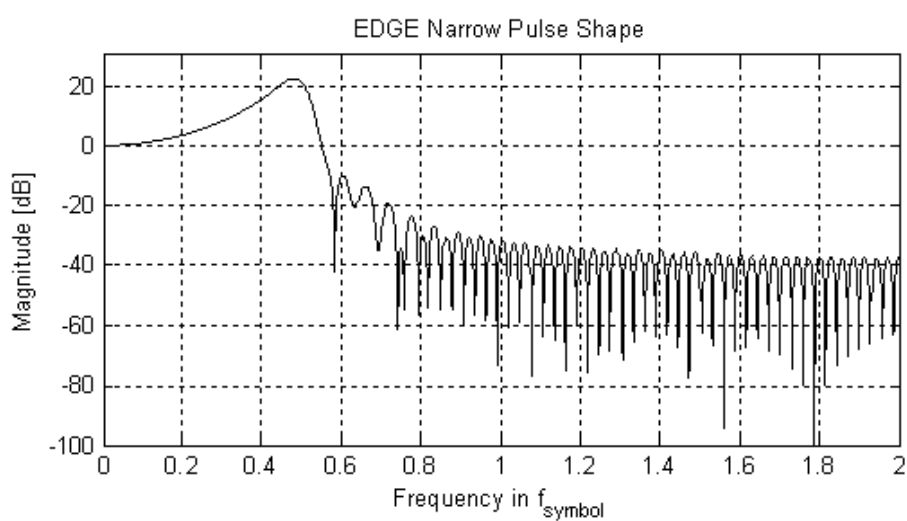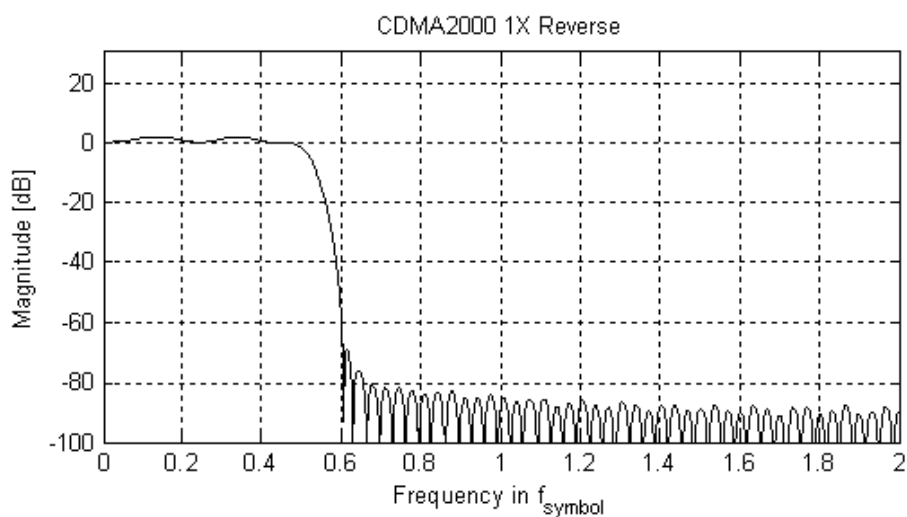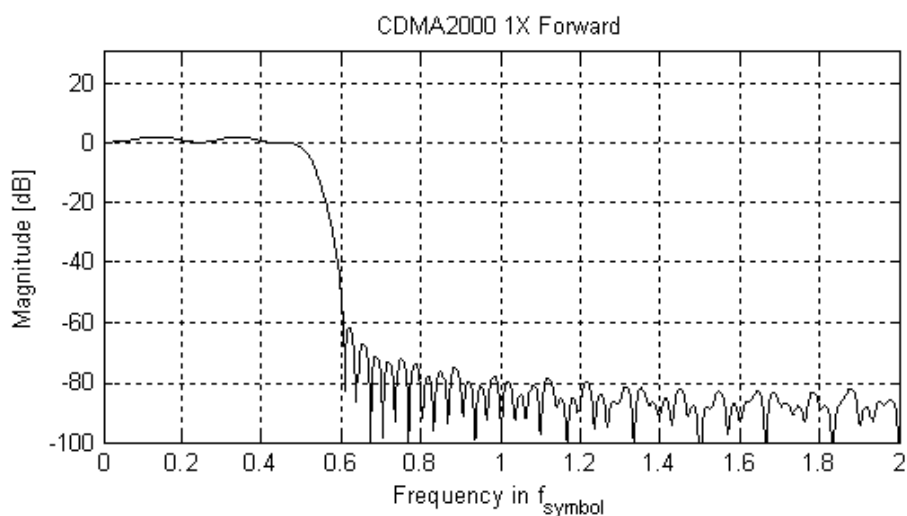

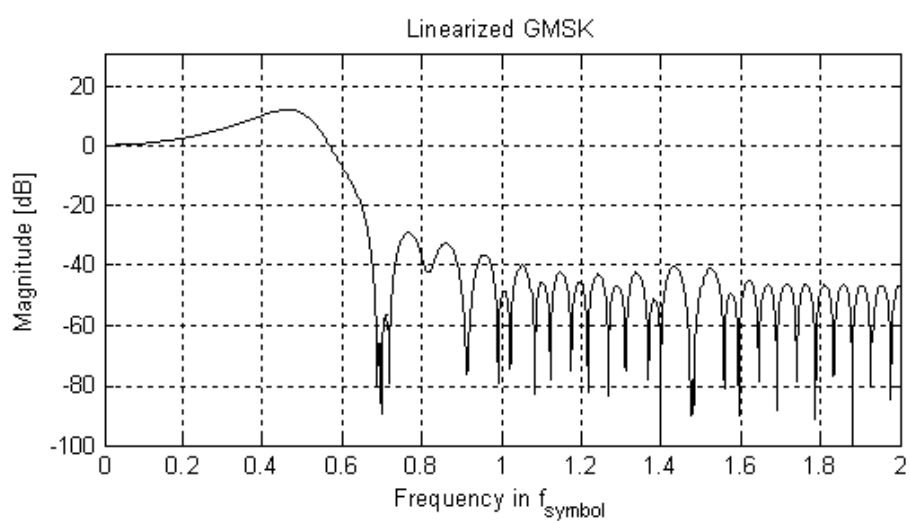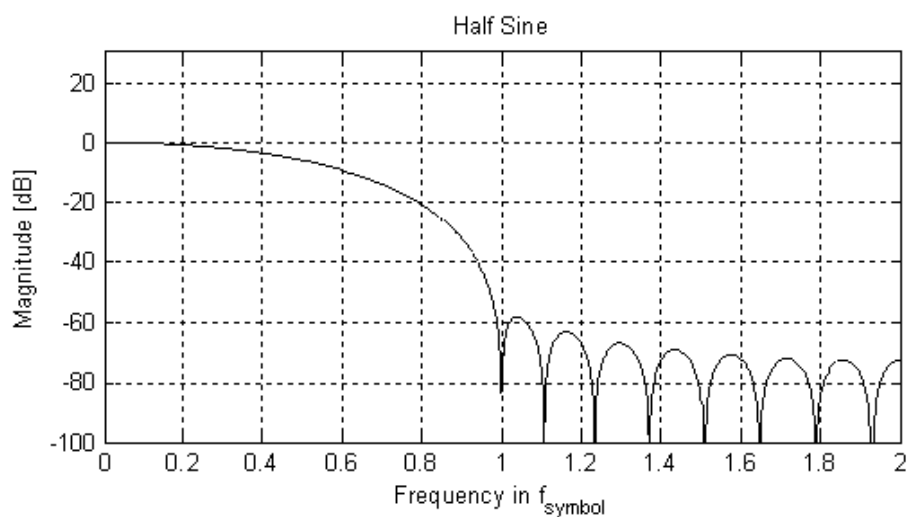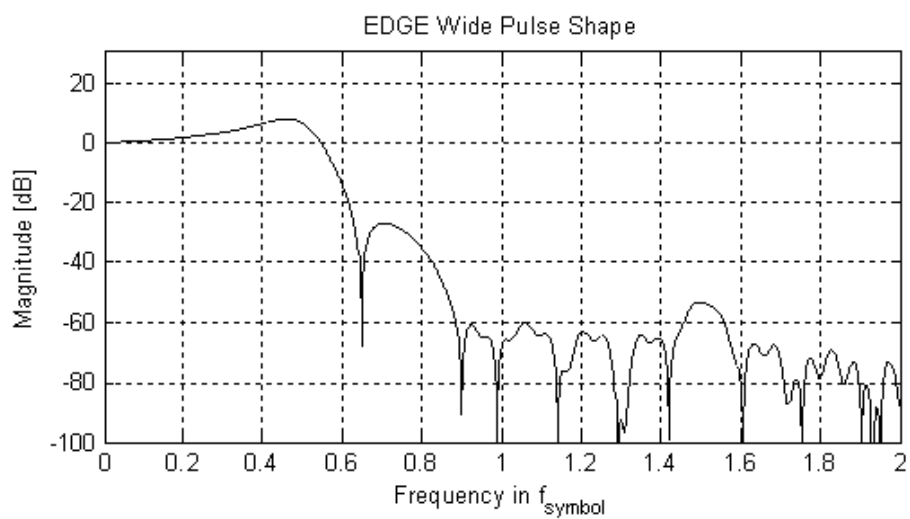

List of Commands (VSA)

| | |
|---|-----|
| [SENSe:]ADJust:CONFigure:HYSTeresis:LOWer..... | 507 |
| [SENSe:]ADJust:CONFigure:HYSTeresis:UPPer..... | 507 |
| [SENSe:]ADJust:CONFigure:LEVel:DURation..... | 506 |
| [SENSe:]ADJust:CONFigure:LEVel:DURation:MODE..... | 506 |
| [SENSe:]ADJust:CONFigure:TRIGger..... | 508 |
| [SENSe:]ADJust:LEVel..... | 508 |
| [SENSe:]CORRection:CVL:BAND..... | 404 |
| [SENSe:]CORRection:CVL:BIAS..... | 404 |
| [SENSe:]CORRection:CVL:CATalog?..... | 405 |
| [SENSe:]CORRection:CVL:CLEar..... | 405 |
| [SENSe:]CORRection:CVL:COMMeNt..... | 405 |
| [SENSe:]CORRection:CVL:DATA..... | 406 |
| [SENSe:]CORRection:CVL:HARMonic..... | 406 |
| [SENSe:]CORRection:CVL:MIXer..... | 406 |
| [SENSe:]CORRection:CVL:PORTs..... | 407 |
| [SENSe:]CORRection:CVL:SElect..... | 407 |
| [SENSe:]CORRection:CVL:SNUMber..... | 407 |
| [SENSe:]DDEMod:APSK:NState..... | 364 |
| [SENSe:]DDEMod:ASK:NState..... | 364 |
| [SENSe:]DDEMod:BOrdering..... | 493 |
| [SENSe:]DDEMod:ECALc:OFFSet..... | 494 |
| [SENSe:]DDEMod:ECALc[:MODE]..... | 494 |
| [SENSe:]DDEMod:EPRate:AUTO..... | 494 |
| [SENSe:]DDEMod:EPRate[:VALue]..... | 495 |
| [SENSe:]DDEMod:EQUalizer:FILE:FORMat..... | 495 |
| [SENSe:]DDEMod:EQUalizer:LENGth..... | 496 |
| [SENSe:]DDEMod:EQUalizer:LOAD..... | 496 |
| [SENSe:]DDEMod:EQUalizer:MODE..... | 496 |
| [SENSe:]DDEMod:EQUalizer:RESet..... | 497 |
| [SENSe:]DDEMod:EQUalizer:SAVE..... | 497 |
| [SENSe:]DDEMod:EQUalizer[:State]..... | 497 |
| [SENSe:]DDEMod:FACTory[:VALue]..... | 360 |
| [SENSe:]DDEMod:FILTer:ALPHa..... | 365 |
| [SENSe:]DDEMod:FILTer[:State]..... | 365 |
| [SENSe:]DDEMod:FORMat..... | 365 |
| [SENSe:]DDEMod:FSK:NState..... | 366 |
| [SENSe:]DDEMod:FSYNc:AUTO..... | 498 |
| [SENSe:]DDEMod:FSYNc:LEVel..... | 498 |
| [SENSe:]DDEMod:FSYNc:RESult?..... | 498 |
| [SENSe:]DDEMod:FSYNc[:MODE]..... | 498 |
| [SENSe:]DDEMod:KDATA:PRBS:FEEDback:AUTO..... | 387 |
| [SENSe:]DDEMod:KDATA:PRBS:FEEDback[:State]..... | 387 |
| [SENSe:]DDEMod:KDATA:PRBS:PATtern:AUTO..... | 388 |
| [SENSe:]DDEMod:KDATA:PRBS:PATtern[:State]..... | 388 |
| [SENSe:]DDEMod:KDATA:PRBS:POLYNomial:AUTO..... | 388 |
| [SENSe:]DDEMod:KDATA:PRBS:POLYNomial[:ORder]..... | 389 |
| [SENSe:]DDEMod:KDATA:PRBS[:TYPE]..... | 389 |

| | |
|--|-----|
| [SENSe:]DDEMod:KDATA:SOURce..... | 389 |
| [SENSe:]DDEMod:KDATA:STATe..... | 386 |
| [SENSe:]DDEMod:KDATA[:NAME]..... | 387 |
| [SENSe:]DDEMod:MAPPING:CATalog?..... | 366 |
| [SENSe:]DDEMod:MAPPING[:VALue]..... | 367 |
| [SENSe:]DDEMod:MFILter:ALPHa..... | 502 |
| [SENSe:]DDEMod:MFILter:AUTO..... | 503 |
| [SENSe:]DDEMod:MFILter:NAME..... | 503 |
| [SENSe:]DDEMod:MFILter:USER..... | 503 |
| [SENSe:]DDEMod:MFILter[:STATe]..... | 503 |
| [SENSe:]DDEMod:MSK:FORMat..... | 367 |
| [SENSe:]DDEMod:NORMALize:ADRoop..... | 499 |
| [SENSe:]DDEMod:NORMALize:CFDRift..... | 499 |
| [SENSe:]DDEMod:NORMALize:CHANnel..... | 499 |
| [SENSe:]DDEMod:NORMALize:FDERror..... | 500 |
| [SENSe:]DDEMod:NORMALize:IQIMbalance..... | 500 |
| [SENSe:]DDEMod:NORMALize:IQOFset..... | 500 |
| [SENSe:]DDEMod:NORMALize:IQSKew..... | 501 |
| [SENSe:]DDEMod:NORMALize:SRERror..... | 501 |
| [SENSe:]DDEMod:NORMALize[:VALue]..... | 603 |
| [SENSe:]DDEMod:OPTimization..... | 501 |
| [SENSe:]DDEMod:PATtern:APSK:NSTate..... | 375 |
| [SENSe:]DDEMod:PATtern:ASK:NSTate..... | 376 |
| [SENSe:]DDEMod:PATtern:FORMat..... | 376 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT..... | 376 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:NEXT:BOOSting..... | 377 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:NEXT:MODulation..... | 377 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:PREVious:BOOSting..... | 378 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:PREVious:MODulation..... | 378 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:SAVE..... | 378 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:STRucture..... | 379 |
| [SENSe:]DDEMod:PATtern:FRAMe:EDIT:TEXT..... | 381 |
| [SENSe:]DDEMod:PATtern:FRAMe:LOAD..... | 382 |
| [SENSe:]DDEMod:PATtern:FRAMe:MODE..... | 382 |
| [SENSe:]DDEMod:PATtern:MAPPING:CATalog?..... | 382 |
| [SENSe:]DDEMod:PATtern:MAPPING[:VALue]..... | 383 |
| [SENSe:]DDEMod:PATtern:PSK:FORMat..... | 383 |
| [SENSe:]DDEMod:PATtern:PSK:NSTate..... | 383 |
| [SENSe:]DDEMod:PATtern:QAM:FORMat..... | 384 |
| [SENSe:]DDEMod:PATtern:QAM:NSTate..... | 384 |
| [SENSe:]DDEMod:PATtern:QPSK:FORMat..... | 385 |
| [SENSe:]DDEMod:PATtern:USER:NAME..... | 385 |
| [SENSe:]DDEMod:PATtern[:STATe]..... | 386 |
| [SENSe:]DDEMod:PRATe..... | 471 |
| [SENSe:]DDEMod:PRESet:CALC..... | 553 |
| [SENSe:]DDEMod:PRESet:RLEVel..... | 458 |
| [SENSe:]DDEMod:PRESet:RLEVel..... | 508 |
| [SENSe:]DDEMod:PRESet[:STANdard]..... | 361 |
| [SENSe:]DDEMod:PSK:FORMat..... | 367 |
| [SENSe:]DDEMod:PSK:NSTate..... | 368 |

| | |
|--|-----|
| [SENSe:]DDEMod:QAM:FORMat..... | 368 |
| [SENSe:]DDEMod:QAM:NSTate..... | 368 |
| [SENSe:]DDEMod:QPSK:FORMat..... | 369 |
| [SENSe:]DDEMod:RELEngth:AUTO..... | 471 |
| [SENSe:]DDEMod:RELEngth:SYMBols[:VALue]..... | 472 |
| [SENSe:]DDEMod:RELEngth[:VALue]..... | 472 |
| [SENSe:]DDEMod:SBAND..... | 603 |
| [SENSe:]DDEMod:SEARch:BURSt:AUTO..... | 483 |
| [SENSe:]DDEMod:SEARch:BURSt:CONFIgure:AUTO..... | 483 |
| [SENSe:]DDEMod:SEARch:BURSt:GLEngth[:MINimum]..... | 483 |
| [SENSe:]DDEMod:SEARch:BURSt:LENGth:MAXimum..... | 372 |
| [SENSe:]DDEMod:SEARch:BURSt:LENGth[:MINimum]..... | 372 |
| [SENSe:]DDEMod:SEARch:BURSt:MODE..... | 484 |
| [SENSe:]DDEMod:SEARch:BURSt:SKIP:FALLing..... | 372 |
| [SENSe:]DDEMod:SEARch:BURSt:SKIP:RISing..... | 373 |
| [SENSe:]DDEMod:SEARch:BURSt:STATe..... | 484 |
| [SENSe:]DDEMod:SEARch:BURSt:TOLerance..... | 484 |
| [SENSe:]DDEMod:SEARch:MBURst:CALC..... | 481 |
| [SENSe:]DDEMod:SEARch:MBURst:STARt:SAMPles?..... | 572 |
| [SENSe:]DDEMod:SEARch:MBURst:STARt[:SYMBols]?..... | 572 |
| [SENSe:]DDEMod:SEARch:PATtern:CONFIgure:AUTO..... | 485 |
| [SENSe:]DDEMod:SEARch:PATtern:SYNC:AUTO..... | 502 |
| [SENSe:]DDEMod:SEARch:PATtern:SYNC[:STATe]..... | 502 |
| [SENSe:]DDEMod:SEARch:SYNC:AUTO..... | 485 |
| [SENSe:]DDEMod:SEARch:SYNC:CATalog..... | 373 |
| [SENSe:]DDEMod:SEARch:SYNC:COMMeNt..... | 487 |
| [SENSe:]DDEMod:SEARch:SYNC:COPIY..... | 487 |
| [SENSe:]DDEMod:SEARch:SYNC:DATA..... | 488 |
| [SENSe:]DDEMod:SEARch:SYNC:DELeTe..... | 488 |
| [SENSe:]DDEMod:SEARch:SYNC:IQCThreshold..... | 485 |
| [SENSe:]DDEMod:SEARch:SYNC:MODE..... | 485 |
| [SENSe:]DDEMod:SEARch:SYNC:NAME..... | 488 |
| [SENSe:]DDEMod:SEARch:SYNC:NSTate..... | 488 |
| [SENSe:]DDEMod:SEARch:SYNC:PATtern:ADD..... | 489 |
| [SENSe:]DDEMod:SEARch:SYNC:PATtern:REMOve..... | 489 |
| [SENSe:]DDEMod:SEARch:SYNC:SELeCt..... | 486 |
| [SENSe:]DDEMod:SEARch:SYNC:STATe..... | 486 |
| [SENSe:]DDEMod:SEARch:SYNC:TEXT..... | 489 |
| [SENSe:]DDEMod:SIGNal:PATtern..... | 373 |
| [SENSe:]DDEMod:SIGNal[:VALue]..... | 374 |
| [SENSe:]DDEMod:SRATe..... | 370 |
| [SENSe:]DDEMod:STANdard:COMMeNt..... | 361 |
| [SENSe:]DDEMod:STANdard:DELeTe..... | 361 |
| [SENSe:]DDEMod:STANdard:PRESet[:VALue]..... | 361 |
| [SENSe:]DDEMod:STANdard:SAVE..... | 362 |
| [SENSe:]DDEMod:STANdard:SYNC:OFFSet:STATe..... | 374 |
| [SENSe:]DDEMod:STANdard:SYNC:OFFSet[:VALue]..... | 374 |
| [SENSe:]DDEMod:TFILter:ALPHA..... | 370 |
| [SENSe:]DDEMod:TFILter:NAME..... | 370 |
| [SENSe:]DDEMod:TFILter:USER..... | 371 |

| | |
|---|-----|
| [SENSe:]DDEMod:TFILter[:STATe]..... | 371 |
| [SENSe:]DDEMod:TIME..... | 492 |
| [SENSe:]DDEMod:TIME:AUTO..... | 492 |
| [SENSe:]DDEMod:USER:NAME..... | 371 |
| [SENSe:]EFRontend:ALIGnment<ch>:FILE..... | 419 |
| [SENSe:]EFRontend:ALIGnment<ch>:STATe..... | 419 |
| [SENSe:]EFRontend:CONNection:CONFig..... | 411 |
| [SENSe:]EFRontend:CONNection:CSTATe?..... | 412 |
| [SENSe:]EFRontend:CONNection[:STATe]..... | 411 |
| [SENSe:]EFRontend:FREQuency:BAND:COUNT?..... | 412 |
| [SENSe:]EFRontend:FREQuency:BAND:LOWer?..... | 412 |
| [SENSe:]EFRontend:FREQuency:BAND:UPPer?..... | 413 |
| [SENSe:]EFRontend:FREQuency:BCONfig:AUTO..... | 413 |
| [SENSe:]EFRontend:FREQuency:BCONfig:LIST?..... | 414 |
| [SENSe:]EFRontend:FREQuency:BCONfig:SElect..... | 414 |
| [SENSe:]EFRontend:FREQuency:IFREquency:SIDeband?..... | 415 |
| [SENSe:]EFRontend:FREQuency:IFREquency[:VALUe]?..... | 415 |
| [SENSe:]EFRontend:FREQuency:LOSCillator:INPut:FREQuency?..... | 415 |
| [SENSe:]EFRontend:FREQuency:LOSCillator:MODE..... | 416 |
| [SENSe:]EFRontend:FREQuency:LOSCillator:OUTPut:FREQuency?..... | 416 |
| [SENSe:]EFRontend:FREQuency:LOSCillator:OUTPut:STATe..... | 416 |
| [SENSe:]EFRontend:FREQuency:REFerence..... | 417 |
| [SENSe:]EFRontend:FREQuency:REFerence:LIST?..... | 417 |
| [SENSe:]EFRontend:FWUPdate..... | 420 |
| [SENSe:]EFRontend:IDN?..... | 417 |
| [SENSe:]EFRontend:NETWork..... | 418 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:FILE..... | 421 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:STATe..... | 421 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:CORRection:VALid?..... | 422 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:FREQuency:MAXimum?..... | 423 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:FREQuency:MINimum?..... | 423 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:GAIN?..... | 424 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:LIST?..... | 422 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:NAME?..... | 424 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:REFResh..... | 422 |
| [SENSe:]EFRontend[:CHANnel<ch>]:EXTDevice<di>:TYPE?..... | 424 |
| [SENSe:]EFRontend[:STATe]..... | 418 |
| [SENSe:]EFRontend<fe>:SELFtest:RESult?..... | 420 |
| [SENSe:]EFRontend<fe>:SELFtest?..... | 420 |
| [SENSe:]FREQuency:CENTer..... | 455 |
| [SENSe:]FREQuency:CENTer:STEP..... | 455 |
| [SENSe:]FREQuency:CENTer:STEP:AUTO..... | 456 |
| [SENSe:]FREQuency:OFFSet..... | 456 |
| [SENSe:]IQ:WBAND..... | 464 |
| [SENSe:]MIXer<x>:BIAS:HIGH..... | 397 |
| [SENSe:]MIXer<x>:BIAS[:LOW]..... | 397 |
| [SENSe:]MIXer<x>:FREQuency:HANDover..... | 398 |
| [SENSe:]MIXer<x>:FREQuency:START..... | 399 |
| [SENSe:]MIXer<x>:FREQuency:STOP..... | 399 |
| [SENSe:]MIXer<x>:HARMonic:BAND..... | 399 |

| | |
|---|-----|
| [SENSe:]MIXer<x>:HARMonic:BAND:PRESet..... | 399 |
| [SENSe:]MIXer<x>:HARMonic:HIGH:STATe..... | 400 |
| [SENSe:]MIXer<x>:HARMonic:HIGH[:VALue]..... | 400 |
| [SENSe:]MIXer<x>:HARMonic:TYPE..... | 401 |
| [SENSe:]MIXer<x>:HARMonic[:LOW]..... | 401 |
| [SENSe:]MIXer<x>:IF?..... | 401 |
| [SENSe:]MIXer<x>:LOPower..... | 398 |
| [SENSe:]MIXer<x>:LOSS:HIGH..... | 402 |
| [SENSe:]MIXer<x>:LOSS:TABLE:HIGH..... | 402 |
| [SENSe:]MIXer<x>:LOSS:TABLE[:LOW]..... | 402 |
| [SENSe:]MIXer<x>:LOSS[:LOW]..... | 403 |
| [SENSe:]MIXer<x>:PORTs..... | 403 |
| [SENSe:]MIXer<x>:RFOVerrange[:STATe]..... | 403 |
| [SENSe:]MIXer<x>[:STATe]..... | 397 |
| [SENSe:]MSRA:CAPTure:OFFSet..... | 541 |
| [SENSe:]PROBe<pb>:ID:PARTnumber?..... | 439 |
| [SENSe:]PROBe<pb>:ID:SRNumber?..... | 439 |
| [SENSe:]PROBe<pb>:SETup:ATTRatio..... | 440 |
| [SENSe:]PROBe<pb>:SETup:CMOFFset..... | 440 |
| [SENSe:]PROBe<pb>:SETup:DMOFFset..... | 441 |
| [SENSe:]PROBe<pb>:SETup:MODE..... | 441 |
| [SENSe:]PROBe<pb>:SETup:NAME?..... | 441 |
| [SENSe:]PROBe<pb>:SETup:NMOFFset..... | 442 |
| [SENSe:]PROBe<pb>:SETup:PMODE..... | 442 |
| [SENSe:]PROBe<pb>:SETup:PMOFFset..... | 443 |
| [SENSe:]PROBe<pb>:SETup:STATe?..... | 443 |
| [SENSe:]PROBe<pb>:SETup:TYPE?..... | 444 |
| [SENSe:]RTMS:CAPTure:OFFSet..... | 543 |
| [SENSe:]SWAPiq..... | 472 |
| [SENSe:]SWEep:COUNT..... | 481 |
| [SENSe:]SWEep:COUNT:CURRent?..... | 482 |
| ABORT..... | 509 |
| CALCulate<n>:BERate?..... | 574 |
| CALCulate<n>:DDEM:BURSt:LENGth?..... | 574 |
| CALCulate<n>:DDEM:SPECTrum[:STATe]..... | 553 |
| CALCulate<n>:DELTamarker<m>:AOFF..... | 520 |
| CALCulate<n>:DELTamarker<m>:MAXimum:APEak..... | 522 |
| CALCulate<n>:DELTamarker<m>:MAXimum:LEFT..... | 523 |
| CALCulate<n>:DELTamarker<m>:MAXimum:NEXT..... | 523 |
| CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT..... | 523 |
| CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]..... | 523 |
| CALCulate<n>:DELTamarker<m>:MBURst:START..... | 524 |
| CALCulate<n>:DELTamarker<m>:MINimum:LEFT..... | 524 |
| CALCulate<n>:DELTamarker<m>:MINimum:NEXT..... | 524 |
| CALCulate<n>:DELTamarker<m>:MINimum:RIGHT..... | 525 |
| CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]..... | 524 |
| CALCulate<n>:DELTamarker<m>:TRACe..... | 521 |
| CALCulate<n>:DELTamarker<m>:X..... | 520 |
| CALCulate<n>:DELTamarker<m>:X:ABSolute?..... | 560 |
| CALCulate<n>:DELTamarker<m>:X:RELative?..... | 560 |

| | |
|--|-----|
| CALCulate<n>:DELTamarker<m>:Y? | 521 |
| CALCulate<n>:DELTamarker<m>[:STATe] | 521 |
| CALCulate<n>:DLABs:STATe | 529 |
| CALCulate<n>:DLABs[:VALue] | 530 |
| CALCulate<n>:DLRel:STATe | 530 |
| CALCulate<n>:DLRel[:VALue] | 531 |
| CALCulate<n>:DSP:RESult:CAPTure:BURSts? | 569 |
| CALCulate<n>:DSP:RESult:CAPTure:PATTerns? | 569 |
| CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:LENGth? | 569 |
| CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:PRESent? | 569 |
| CALCulate<n>:DSP:RESult:RRANge:CURRent:BURSt:START? | 570 |
| CALCulate<n>:DSP:RESult:RRANge:CURRent:PATTern:CONFidence? | 570 |
| CALCulate<n>:DSP:RESult:RRANge:CURRent:PATTern:CORRect? | 571 |
| CALCulate<n>:DSP:RESult:RRANge:CURRent:PATTern:PRESent? | 571 |
| CALCulate<n>:DSP:RESult:RRANge:CURRent:PATTern:START? | 571 |
| CALCulate<n>:ELIN<ri>:STATe | 504 |
| CALCulate<n>:ELIN<ri>[:VALue] | 505 |
| CALCulate<n>:FEED | 554 |
| CALCulate<n>:FORMat | 555 |
| CALCulate<n>:FSK:DEVIation:COMPensation | 602 |
| CALCulate<n>:FSK:DEVIation:REFerence:RELative | 363 |
| CALCulate<n>:FSK:DEVIation:REFerence[:VALue] | 364 |
| CALCulate<n>:LIMit:MACCuracy:<ResultType>:<LimitType>:STATe | 535 |
| CALCulate<n>:LIMit:MACCuracy:<ResultType>:<LimitType>[:RESult] | 588 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:CURRent:STATe | 534 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:CURRent:VALue | 536 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:CURRent[:RESult]? | 588 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:MEAN:STATe | 534 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:MEAN:VALue | 536 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:MEAN[:RESult]? | 588 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:PEAK:STATe | 534 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:PEAK:VALue | 536 |
| CALCulate<n>:LIMit:MACCuracy:CFERror:PEAK[:RESult]? | 588 |
| CALCulate<n>:LIMit:MACCuracy:DEFault | 534 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PCURrent:STATe | 534 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PCURrent:VALue | 536 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PCURrent[:RESult]? | 588 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PMean:STATe | 534 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PMean:VALue | 536 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PMean[:RESult]? | 588 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PPEak:STATe | 534 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PPEak:VALue | 536 |
| CALCulate<n>:LIMit:MACCuracy:EVM:PPEak[:RESult]? | 588 |
| CALCulate<n>:LIMit:MACCuracy:EVM:RCURrent:STATe | 534 |
| CALCulate<n>:LIMit:MACCuracy:EVM:RCURrent:VALue | 536 |
| CALCulate<n>:LIMit:MACCuracy:EVM:RCURrent[:RESult]? | 588 |
| CALCulate<n>:LIMit:MACCuracy:EVM:RMEan:STATe | 535 |
| CALCulate<n>:LIMit:MACCuracy:EVM:RMEan:VALue | 537 |
| CALCulate<n>:LIMit:MACCuracy:EVM:RMEan[:RESult]? | 588 |
| CALCulate<n>:LIMit:MACCuracy:EVM:RPEak:STATe | 535 |

| | |
|---|-----|
| CALCulate<n>:LIMit:MACCuracy:EVM:RPEak:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:EVM:RPEak[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:CURRent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:CURRent:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:CURRent[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:MEAN:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:MEAN:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:MEAN[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:PEAK:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:PEAK:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FDERRor:PEAK[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PCURRent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PCURRent:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PCURRent[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PMEan:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PMEan:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PMEan[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PPEak:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PPEak:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:PPEak[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RCURRent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RCURRent:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RCURRent[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RMEan:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RMEan:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RMEan[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RPEak:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RPEak:VALue..... | 537 |
| CALCulate<n>:LIMit:MACCuracy:FERRor:RPEak[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PCURRent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PCURRent:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PCURRent[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PMEan:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PMEan:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PMEan[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PPEak:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PPEak:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:PPEak[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RCURRent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RCURRent:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RCURRent[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RMEan:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RMEan:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RMEan[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RPEak:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RPEak:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:MERRor:RPEak[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:OOFfset:CURRent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:OOFfset:CURRent:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:OOFfset:CURRent[:RESult]?..... | 588 |

| | |
|--|-----|
| CALCulate<n>:LIMit:MACCuracy:OOFset:MEAN:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:OOFset:MEAN:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:OOFset:MEAN[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:OOFset:PEAK:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:OOFset:PEAK:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:OOFset:PEAK[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PCURrent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PCURrent:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PCURrent[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PMEan:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PMEan:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PMEan[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PPEak:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PPEak:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:PERror:PPEak[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RCURrent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RCURrent:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RCURrent[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RMEan:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RMEan:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RMEan[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RPEak:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RPEak:VALue..... | 538 |
| CALCulate<n>:LIMit:MACCuracy:PERror:RPEak[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:RHO:CURrent:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:RHO:CURrent:VALue..... | 539 |
| CALCulate<n>:LIMit:MACCuracy:RHO:CURrent[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:RHO:MEAN:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:RHO:MEAN:VALue..... | 539 |
| CALCulate<n>:LIMit:MACCuracy:RHO:MEAN[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:RHO:PEAK:STATe..... | 535 |
| CALCulate<n>:LIMit:MACCuracy:RHO:PEAK:VALue..... | 539 |
| CALCulate<n>:LIMit:MACCuracy:RHO:PEAK[:RESult]?..... | 588 |
| CALCulate<n>:LIMit:MACCuracy:STATe..... | 534 |
| CALCulate<n>:MARKer<m>:AOFF..... | 518 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:ADRooP?..... | 575 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:ALL?..... | 576 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:CFERror?..... | 576 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:EVM?..... | 577 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:FDERror?..... | 578 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:FSK:CFDRift?..... | 578 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:FSK:DERRor?..... | 579 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:FSK:MDEVIation?..... | 580 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:FSK:RDEVIation?..... | 580 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:GIMBalance?..... | 581 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:IQIMbalance?..... | 581 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:IQSKew?..... | 582 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:MERRor?..... | 582 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:MPower?..... | 583 |
| CALCulate<n>:MARKer<m>:FUNctio:n:DDEMod:STATistic:OOFset?..... | 584 |

| | |
|---|-----|
| CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:PERRor? | 584 |
| CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:QERRor? | 585 |
| CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:RHO? | 586 |
| CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:SNR? | 586 |
| CALCulate<n>:MARKer<m>:FUNction:DDEMod:STATistic:SRERror? | 587 |
| CALCulate<n>:MARKer<m>:LINK | 518 |
| CALCulate<n>:MARKer<m>:MAXimum:APEak | 525 |
| CALCulate<n>:MARKer<m>:MAXimum:LEFT | 525 |
| CALCulate<n>:MARKer<m>:MAXimum:NEXT | 525 |
| CALCulate<n>:MARKer<m>:MAXimum:RIGHT | 525 |
| CALCulate<n>:MARKer<m>:MAXimum[:PEAK] | 526 |
| CALCulate<n>:MARKer<m>:MBURst:START | 526 |
| CALCulate<n>:MARKer<m>:MINimum:LEFT | 526 |
| CALCulate<n>:MARKer<m>:MINimum:NEXT | 526 |
| CALCulate<n>:MARKer<m>:MINimum:RIGHT | 527 |
| CALCulate<n>:MARKer<m>:MINimum[:PEAK] | 527 |
| CALCulate<n>:MARKer<m>:SEARch | 527 |
| CALCulate<n>:MARKer<m>:TRACe | 519 |
| CALCulate<n>:MARKer<m>:X | 519 |
| CALCulate<n>:MARKer<m>:X:SLIMits:LEFT | 527 |
| CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT | 528 |
| CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] | 529 |
| CALCulate<n>:MARKer<m>:Y? | 520 |
| CALCulate<n>:MARKer<m>[:STATe] | 518 |
| CALCulate<n>:MEAS:DIRTY? | 561 |
| CALCulate<n>:MSRA:ALINe:SHOW | 539 |
| CALCulate<n>:MSRA:ALINe[:VALue] | 540 |
| CALCulate<n>:MSRA:WINDow<n>:IVAL | 540 |
| CALCulate<n>:RTMS:ALINe:SHOW | 541 |
| CALCulate<n>:RTMS:ALINe[:VALue] | 542 |
| CALCulate<n>:RTMS:WINDow<n>:IVAL | 542 |
| CALCulate<n>:STATistics:CCDF[:STATe] | 556 |
| CALCulate<n>:STATistics:MODE | 557 |
| CALCulate<n>:STATistics:PRESet | 465 |
| CALCulate<n>:STATistics:SCALE:AUTO ONCE | 465 |
| CALCulate<n>:STATistics:SCALE:X:BCOunt | 465 |
| CALCulate<n>:STATistics:SCALE:Y:LOWer | 466 |
| CALCulate<n>:STATistics:SCALE:Y:UNIT | 466 |
| CALCulate<n>:STATistics:SCALE:Y:UPPer | 466 |
| CALCulate<n>:TLABs:STATe | 531 |
| CALCulate<n>:TLABs[:VALue] | 532 |
| CALCulate<n>:TLRel:STATe | 532 |
| CALCulate<n>:TLRel[:VALue] | 533 |
| CALCulate<n>:TRACe<t>:ADJust:ALIGNment:OFFSet | 490 |
| CALCulate<n>:TRACe<t>:ADJust:ALIGNment[:DEFault] | 490 |
| CALCulate<n>:TRACe<t>:ADJust[:VALue] | 491 |
| CALCulate<n>:TRACe<t>:SYMBols | 515 |
| CALCulate<n>:TRACe<t>[:VALue] | 514 |
| CALCulate<n>:UNIT:ANGLE | 466 |
| CALCulate<n>:UNIT:POWER | 457 |

| | |
|--|-----|
| CALCulate<n>:X:UNIT:TIME..... | 467 |
| CALCulate<n>:Y:UNIT:TIME..... | 467 |
| CALibration:AIQ:HATiming[:STATE]..... | 438 |
| DIAGnostic:SERVice:NSource..... | 450 |
| DISPlay:FORMat..... | 543 |
| DISPlay[:WINDow<n>]:ITEM[:LINE][:VALue]..... | 557 |
| DISPlay[:WINDow<n>]:PRATe:AUTO..... | 558 |
| DISPlay[:WINDow<n>]:PRATe[:VALue]..... | 558 |
| DISPlay[:WINDow<n>]:SIZE..... | 544 |
| DISPlay[:WINDow<n>]:STATe..... | 602 |
| DISPlay[:WINDow<n>]:TRACe<t>:SYMBol..... | 559 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:PDIVision..... | 467 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:RPOSITion..... | 467 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:RVALue..... | 468 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:START?..... | 561 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:STOP?..... | 562 |
| DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:VOFFset..... | 491 |
| DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:AUTO:ALL..... | 506 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:SElect..... | 544 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:MODE..... | 515 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:PRESet..... | 517 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y:SPACing..... | 470 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]..... | 468 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]:AUTO ONCE..... | 505 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]:MODE..... | 559 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]:PDIVision..... | 469 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]:RLEVel..... | 457 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet..... | 458 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]:RPOSITion..... | 469 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:Y[:SCALE]:RVALue..... | 470 |
| DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>[:STATe]..... | 516 |
| EXPort:WAVeform:DISPlayoff..... | 445 |
| FORMat:DEXPort:DSEParator..... | 562 |
| FORMat:DEXPort:HEADer..... | 563 |
| FORMat:DEXPort:MODE..... | 563 |
| INITiate:REFMeas..... | 511 |
| INITiate:SEQuencer:ABORT..... | 512 |
| INITiate:SEQuencer:IMMediate..... | 512 |
| INITiate:SEQuencer:MODE..... | 512 |
| INITiate:SEQuencer:REFResh[:ALL]..... | 511 |
| INITiate<n>:CONMeas..... | 509 |
| INITiate<n>:CONTinuous..... | 510 |
| INITiate<n>:REFResh..... | 511 |
| INITiate<n>[:IMMediate]..... | 510 |
| INPut:ATTenuation..... | 461 |
| INPut:ATTenuation:AUTO..... | 461 |
| INPut:ATTenuation:AUTO:MODE..... | 458 |
| INPut:ATTenuation:PROTection:RESet..... | 390 |
| INPut:CONNector..... | 459 |
| INPut:COUPling..... | 390 |

| | |
|---------------------------------------|-----|
| INPut:DIQ:CDEvice..... | 432 |
| INPut:DIQ:RANGe:COUPling..... | 433 |
| INPut:DIQ:RANGe[:UPPer]..... | 433 |
| INPut:DIQ:RANGe[:UPPer]:AUTO..... | 433 |
| INPut:DIQ:RANGe[:UPPer]:UNIT..... | 433 |
| INPut:DIQ:SRATe..... | 434 |
| INPut:DIQ:SRATe:AUTO..... | 434 |
| INPut:DPATH..... | 391 |
| INPut:EATT..... | 462 |
| INPut:EATT:AUTO..... | 462 |
| INPut:EATT:STATe..... | 463 |
| INPut:EGain[:STATe]..... | 459 |
| INPut:FILE:PATH..... | 394 |
| INPut:FILTer:HPASs[:STATe]..... | 391 |
| INPut:FILTer:YIG[:STATe]..... | 392 |
| INPut:GAIN:STATe..... | 460 |
| INPut:GAIN[:VALue]..... | 460 |
| INPut:IMPedance..... | 392 |
| INPut:IMPedance:PTYPe..... | 392 |
| INPut:IQ:BALanced[:STATe]..... | 436 |
| INPut:IQ:FULLscale:AUTO..... | 436 |
| INPut:IQ:FULLscale[:LEVel]..... | 437 |
| INPut:IQ:IMPedance..... | 437 |
| INPut:IQ:IMPedance:PTYPe..... | 437 |
| INPut:IQ:TYPE..... | 438 |
| INPut:SANalyzer:ATTenuation..... | 463 |
| INPut:SANalyzer:ATTenuation:AUTO..... | 463 |
| INPut:SElect..... | 393 |
| INPut:TYPE..... | 394 |
| INSTRument:CREate:DUPLicate..... | 356 |
| INSTRument:CREate:REPLace..... | 357 |
| INSTRument:CREate[:NEW]..... | 356 |
| INSTRument:DELeTe..... | 357 |
| INSTRument:LIST?..... | 357 |
| INSTRument:REName..... | 359 |
| INSTRument[:SElect]..... | 359 |
| LAYout:ADD[:WINDow]?..... | 545 |
| LAYout:CATalog[:WINDow]?..... | 546 |
| LAYout:IDENtify[:WINDow]?..... | 547 |
| LAYout:MOVE[:WINDow]..... | 547 |
| LAYout:REMOve[:WINDow]..... | 547 |
| LAYout:REPLace[:WINDow]..... | 548 |
| LAYout:SPLitter..... | 548 |
| LAYout:WINDow<n>:ADD?..... | 550 |
| LAYout:WINDow<n>:IDENtify?..... | 550 |
| LAYout:WINDow<n>:REMOve..... | 551 |
| LAYout:WINDow<n>:REPLace..... | 551 |
| LAYout:WINDow<n>:TYPE..... | 552 |
| MMEMory:LOAD:IQ:STATe..... | 590 |
| MMEMory:LOAD:IQ:STReam..... | 395 |

| | |
|---|-----|
| MMEMory:LOAD:IQ:STReam:AUTO..... | 395 |
| MMEMory:LOAD:IQ:STReam:LIST?..... | 396 |
| MMEMory:STORe<n>:IQ:COMMeNt..... | 590 |
| MMEMory:STORe<n>:IQ:FORMat..... | 590 |
| MMEMory:STORe<n>:IQ:STATe..... | 591 |
| MMEMory:STORe<n>:IQ:TRACe..... | 563 |
| MMEMory:STORe<n>:TRACe..... | 564 |
| OUTPut:DIQ[:STATe]..... | 434 |
| OUTPut:IF:SBANd?..... | 450 |
| OUTPut:IF[:SOURce]..... | 451 |
| OUTPut:IQHS:CDEVice?..... | 451 |
| OUTPut:IQHS:MARKer..... | 452 |
| OUTPut:IQHS:SRATe?..... | 452 |
| OUTPut:IQHS[:STATe]..... | 452 |
| OUTPut:TRIGGer<tp>:DIRectioN..... | 453 |
| OUTPut:TRIGGer<tp>:LEVel..... | 453 |
| OUTPut:TRIGGer<tp>:OTYPe..... | 454 |
| OUTPut:TRIGGer<tp>:PULSe:IMMediate..... | 454 |
| OUTPut:TRIGGer<tp>:PULSe:LENGth..... | 454 |
| OUTPut<up>:DIQ:CDEVice?..... | 434 |
| STATus:QUEStionable:ACPLimit:CONDitioN?..... | 599 |
| STATus:QUEStionable:ACPLimit:ENABle..... | 600 |
| STATus:QUEStionable:ACPLimit:NTRansitioN..... | 600 |
| STATus:QUEStionable:ACPLimit:PTRansitioN..... | 601 |
| STATus:QUEStionable:ACPLimit[:EVENT]?..... | 599 |
| STATus:QUEStionable:DIQ:CONDitioN?..... | 599 |
| STATus:QUEStionable:DIQ:ENABle..... | 600 |
| STATus:QUEStionable:DIQ:NTRansitioN..... | 600 |
| STATus:QUEStionable:DIQ:PTRansitioN..... | 601 |
| STATus:QUEStionable:DIQ[:EVENT]?..... | 599 |
| STATus:QUEStionable:FREQuency:CONDitioN?..... | 599 |
| STATus:QUEStionable:FREQuency:ENABle..... | 600 |
| STATus:QUEStionable:FREQuency:NTRansitioN..... | 600 |
| STATus:QUEStionable:FREQuency:PTRansitioN..... | 601 |
| STATus:QUEStionable:FREQuency[:EVENT]?..... | 599 |
| STATus:QUEStionable:LIMit:CONDitioN?..... | 599 |
| STATus:QUEStionable:LIMit:ENABle..... | 600 |
| STATus:QUEStionable:LIMit:NTRansitioN..... | 601 |
| STATus:QUEStionable:LIMit:PTRansitioN..... | 601 |
| STATus:QUEStionable:LIMit[:EVENT]?..... | 599 |
| STATus:QUEStionable:LMARgin:CONDitioN?..... | 599 |
| STATus:QUEStionable:LMARgin:ENABle..... | 600 |
| STATus:QUEStionable:LMARgin:NTRansitioN..... | 601 |
| STATus:QUEStionable:LMARgin:PTRansitioN..... | 601 |
| STATus:QUEStionable:LMARgin[:EVENT]?..... | 599 |
| STATus:QUEStionable:MODulation<n>:CFREquency:CONDitioN?..... | 599 |
| STATus:QUEStionable:MODulation<n>:CFREquency:ENABle..... | 600 |
| STATus:QUEStionable:MODulation<n>:CFREquency:NTRansitioN..... | 601 |
| STATus:QUEStionable:MODulation<n>:CFREquency:PTRansitioN..... | 601 |
| STATus:QUEStionable:MODulation<n>:CFREquency[:EVENT]?..... | 599 |

| | |
|--|-----|
| STATus:QUESTionable:MODulation<n>:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:EVM:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:EVM:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:EVM:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:EVM:PTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:EVM[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:FSK:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:FSK:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:FSK:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:FSK:PTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:FSK[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:IQRHo:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:IQRHo:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:IQRHo:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:IQRHo:PTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:IQRHo[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:MAGNitude:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:MAGNitude:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:MAGNitude:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:MAGNitude:PTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:MAGNitude[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:PHASe:CONDition? | 599 |
| STATus:QUESTionable:MODulation<n>:PHASe:ENABle | 600 |
| STATus:QUESTionable:MODulation<n>:PHASe:NTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:PHASe:PTRansition | 601 |
| STATus:QUESTionable:MODulation<n>:PHASe[:EVENT]? | 599 |
| STATus:QUESTionable:MODulation<n>:PTRansition | 601 |
| STATus:QUESTionable:MODulation<n>[:EVENT]? | 599 |
| STATus:QUESTionable:POWer:CONDition? | 599 |
| STATus:QUESTionable:POWer:ENABle | 600 |
| STATus:QUESTionable:POWer:NTRansition | 601 |
| STATus:QUESTionable:POWer:PTRansition | 602 |
| STATus:QUESTionable:POWer[:EVENT]? | 600 |
| STATus:QUESTionable:SYNC:CONDition? | 599 |
| STATus:QUESTionable:SYNC:ENABle | 600 |
| STATus:QUESTionable:SYNC:NTRansition | 601 |
| STATus:QUESTionable:SYNC:PTRansition | 602 |
| STATus:QUESTionable:SYNC[:EVENT]? | 600 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:ALIGNment:DATE | 446 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:ALIGNment:FALIGNment | 447 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:ALIGNment:STEP<st>[:STATe] | 446 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:IDN | 447 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:LEDState | 447 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:PSMMode[:STATe] | 448 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:SRATe | 448 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:TCPip | 448 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:VDEvice? | 449 |
| SYSTem:COMMunicate:RDEvice:OSCilloscope:VFIRmware? | 449 |

| | |
|--|-----|
| SYSTem:COMMunicate:RDEvice:OSCilloscope[:STATE]..... | 445 |
| SYSTem:PRESet:CHANnel[:EXEC]..... | 360 |
| SYSTem:SEQuencer..... | 513 |
| TRACe:IQ:BWIDth..... | 473 |
| TRACe:IQ:FILE:REPetition:COUNT..... | 396 |
| TRACe:IQ:WBANd:MBWIDth..... | 473 |
| TRACe:IQ:WBANd[:STATE]..... | 473 |
| TRACe<n>[:DATA]..... | 564 |
| TRIGger[:SEQUence]:BBPower:HOLDoff..... | 475 |
| TRIGger[:SEQUence]:DTIME..... | 476 |
| TRIGger[:SEQUence]:HOLDoff[:TIME]..... | 476 |
| TRIGger[:SEQUence]:IFPower:HOLDoff..... | 476 |
| TRIGger[:SEQUence]:IFPower:HYSteresis..... | 477 |
| TRIGger[:SEQUence]:LEVel:BBPower..... | 477 |
| TRIGger[:SEQUence]:LEVel:IFPower..... | 478 |
| TRIGger[:SEQUence]:LEVel:IQPower..... | 478 |
| TRIGger[:SEQUence]:LEVel[:EXternal<port>]..... | 477 |
| TRIGger[:SEQUence]:OSCilloscope:COUPling..... | 449 |
| TRIGger[:SEQUence]:SLOPe..... | 478 |
| TRIGger[:SEQUence]:SOURce..... | 479 |
| TRIGger[:SEQUence]:TIME:RINTerval..... | 480 |

Index

Symbols

| | |
|-----------------------|-----|
| 4ASK | |
| Constellation diagram | 128 |
| 8PSK | |
| Constellation diagram | 100 |
| 16APSK | |
| Constellation diagram | 129 |
| 95%ile | |
| Formula | 634 |

A

| | |
|------------------------------|----------|
| Aborting | |
| Sweep | 240, 241 |
| AC/DC coupling | 206, 222 |
| Activating | |
| VSA (remote) | 356 |
| Alignment | |
| Result range | 254 |
| Alpha/BT | 190, 264 |
| Amplitude | |
| Configuration | 219 |
| Configuration (remote) | 456 |
| Distortion, effect | 153 |
| Settings | 219 |
| Amplitude droop | |
| Compensation | 257 |
| Definition | 153 |
| Formula | 631 |
| Analog Baseband | |
| Input | 208 |
| Analysis | |
| Bandwidth, definition | 76, 95 |
| Button | 270 |
| Analysis interval | |
| Configuration (MSRA, remote) | 539, 541 |
| MSRA/MSRT | 230, 471 |
| Analysis line | 179 |
| Configuration | 289 |
| Configuration (MSRA, remote) | 539, 541 |
| Analyzing | |
| Measured data | 306 |
| Application cards | 13 |
| Application notes | 13 |
| APSK | |
| Modulation type | 187, 194 |
| Symbol mapping | 129 |
| ASCII Trace export | 625 |
| ASK | |
| Modulation type | 187, 194 |
| Symbol mapping | 128 |
| Attenuation | 223 |
| Auto | 223 |
| Electronic | 225 |
| Manual | 223 |
| Option | 225 |
| Protective (remote) | 390 |
| Audio signals | |
| Output (remote) | 211, 451 |
| Auto adjustment | |
| Triggered measurement | 508 |

| | |
|------------------------|---------------|
| Auto level | |
| Hysteresis | 267, 268 |
| Reference level | 221, 267 |
| Softkey | 221, 267 |
| Auto settings | |
| Meastime Auto | 267 |
| Meastime Manual | 267 |
| Automatic | |
| Configuration | 266 |
| Configuration (remote) | 505 |
| Averaging | |
| Measurements | 244, 247, 250 |

B

| | |
|-----------------------------|---------|
| B2000 | |
| Remote commands | 444 |
| Band | |
| External Mixer (remote) | 399 |
| Bandwidth | |
| Coverage, MSRA/MSRT mode | 178 |
| Demodulation | 70 |
| Depending on sample rate | 96 |
| Digital I/Q data | 95 |
| Extension options | 77, 231 |
| Maximum usable | 76, 231 |
| Relationship to sample rate | 78 |
| Signal processing | 68 |
| Usable (max.) | 76 |
| BB Power | |
| Trigger (softkey) | 236 |
| Bias | |
| External Mixer (remote) | 397 |
| Bit error rate (BER) | |
| Result type | 25 |
| Bluetooth | |
| DEVm | 343 |
| Brochures | 12 |
| Burst GSM EDGE | |
| Measurement example | 319 |
| Burst search | |
| Algorithm | 135 |
| Auto configuration | 244 |
| Configuration | 243 |
| Demodulation process | 132 |
| Enabling | 244 |
| Errors | 329 |
| Gap length | 245 |
| Parameters | 134 |
| Process | 134 |
| Remote | 482 |
| Robustness | 135 |
| Tolerance | 245 |
| Burst signal | 191 |
| Bursts | |
| Display | 17 |
| Information | 245 |
| Length (min/max) | 192 |
| Programming example | 606 |
| Reference for result range | 254 |
| Run-in | 192 |
| Signal structure | 191 |
| Useful length | 164 |

C

| | |
|--|----------|
| Capture buffer | |
| Data source | 20 |
| Display | 167 |
| Length | 161 |
| Navigating | 317 |
| Reference for result range | 254 |
| Result types | 20 |
| Capture Buffer | |
| Display | 167 |
| Capture length | |
| Data acquisition | 231 |
| Display | 17 |
| Capture offset | |
| MSRA/MSRT secondary applications | 240 |
| MSRT secondary applications | 240 |
| Remote | 541, 543 |
| Softkey | 240 |
| Capture oversampling | |
| see also: Sample rate | 75 |
| Capture sections | 167 |
| Carrier frequency drift | |
| Compensation | 257 |
| Definition | 160 |
| Formula | 633 |
| Carrier frequency error | |
| Formula | 633 |
| Carrier in carrier measurement | 276 |
| Carrier-in-carrier | 59 |
| Carrier-in-Carrier | 23 |
| Center frequency | 218 |
| Softkey | 218 |
| Step size | 218 |
| Channel | |
| Creating (remote) | 357 |
| Deleting (remote) | 357 |
| Duplicating (remote) | 356 |
| Querying (remote) | 357 |
| Renaming (remote) | 359 |
| Replacing (remote) | 357 |
| Channel bandwidth | |
| MSRA/MSRT mode | 178 |
| Channel Frequency Response Group Delay | |
| Result type | 27 |
| Channel Frequency Response Magnitude | |
| Result type | 28 |
| Clock rate | |
| Definition | 95 |
| Closing | |
| Channels (remote) | 357 |
| Windows (remote) | 551 |
| Coarse Synchronization | 261 |
| Compatible | |
| Patterns | 249 |
| Compensation | |
| Demodulation | 255, 257 |
| Modulation errors | 147 |
| Remote | 492 |
| Constellation | |
| Frequency (result type) | 29 |
| Constellation I/Q | |
| Result type | 29 |
| Rotated, Result type | 31 |
| Constellation points | |
| Symbol mapping | 97 |

| | |
|-------------------------|----------|
| Continue single sweep | |
| Softkey | 241 |
| Continuous signal | 191 |
| Continuous sweep | |
| Softkey | 240 |
| Conventions | |
| SCPI commands | 351 |
| Conversion loss | |
| External Mixer (remote) | 402, 403 |
| Conversion loss tables | |
| Available (remote) | 405 |
| Band (remote) | 404 |
| Bias (remote) | 404 |
| Deleting (remote) | 405 |
| External Mixer (remote) | 402 |
| Harmonic order (remote) | 406 |
| Mixer type (remote) | 407 |
| Selecting (remote) | 407 |
| Copying | |
| Channel (remote) | 356 |
| Couple Windows | |
| Markers | 278 |
| Coupling | |
| Trigger | 239 |
| Customized | |
| Measurement, performing | 294 |

D

| | |
|---------------------------------------|----------|
| Data acquisition | |
| Capture length | 231 |
| Configuration | 230 |
| MSRA/MSRT | 230, 471 |
| Sample rate | 231 |
| Usable I/Q Bandwidth | 232 |
| Data sheets | 12 |
| Data source | |
| Capture buffer | 20 |
| Display | 18 |
| Equalizer | 22 |
| Error vector | 21 |
| Evaluation method | 19 |
| Meas & Ref | 20 |
| Modulation accuracy | 22 |
| Modulation errors | 21 |
| Multi Source | 23 |
| Result types | 23 |
| Symbols | 21 |
| DC offset | |
| Analog Baseband (B71, remote control) | 438 |
| Decimal separator | |
| Trace export | 276 |
| Default values | |
| Preset | 268 |
| Scaling | 228 |
| Deleting | |
| Settings files | 185 |
| Standards | 185 |
| Delta markers | |
| Defining | 278 |
| Demodulation | |
| Advanced | 259 |
| Bandwidth | 70 |
| Compensation | 255, 257 |
| Configuration | 255 |
| Estimation points per symbol | 260 |
| Known data | 170 |

- Normalization 260
- Offset EVM 262
- Process 131
- Remote 492
- Synchronization 259, 261
- DEVM
 - Bluetooth 343
- Diagram footer information 18
- Differential EVM
 - see DEVM 343
- Differential PSK (DPSK)
 - Symbol mapping 105
- Digital Baseband
 - Output settings 217
- Digital Baseband interface 215
 - Connected instrument 215
 - Output connection status (remote) 434
 - Output settings 214, 215
- Digital I/Q
 - Bandwidths 95
 - Connection information 215, 217
 - Enhanced mode 96, 236
 - Output settings 214
 - Output settings information 215, 217
 - Sample rates 95
 - Triggering 236
- Digital I/Q 40G
 - Output settings 216
- Digital I/Q 40G Streaming Out 216
 - Connected instrument 217
- Digital input
 - Bandwidths 96
 - Restrictions 96
- Digital output
 - Enabling 215, 216
 - Restrictions 96
- Digital standards
 - Assigned patterns 248
 - Assigning patterns 249
 - Configuration 184
 - Performing measurement according to 292
 - Predefined 613
 - Remote 360
 - Removing assigned patterns 249
 - VSA measurements 184
- Direct path
 - Input configuration 207
- Display
 - Configuration 285
 - Information 16
 - Points per symbol 166, 288, 629, 631
- Display lines
 - see Lines 281
- Drop-out time
 - Trigger 238
- Duplicating
 - Channel (remote) 356
- DVB-S2
 - Configuration tool 185
- E**
- EDGE
 - Filters, frequency response 636
 - Measurement example 319
- Electronic input attenuation 223, 225
- Enhanced mode
 - Digital I/Q 96, 236
- Equalizer
 - Basics 142
 - Data source 22
 - Loading 259
 - MSRA/MSRT mode 178
 - Result types 22
 - Storing 259
- Error messages
 - Explanation 329
- Error model
 - FSK 158
 - PSK, QAM, MSK 145
- Error vector 276
 - Data source 21
 - Definition 147
 - Formula 629
 - Result types 21
- Error Vector Magnitude (EVM)
 - Definition 147
 - Formula 629
 - Result type 32
 - RMS, peak (formulae) 631
- Errors
 - IF OVLD 220
- Estimation
 - Algorithms 144
 - FSK 159
 - Points per symbol 146, 166, 260
 - PSK, QAM, MSK 146
 - Ranges 146
- Evaluation
 - Refreshing 241
 - Specific range 242
 - Traces 273
- Evaluation methods
 - Data source 19
 - Remote 545
- Evaluation range
 - Configuration 265
 - Configuration (remote) 504
 - Definition 164
 - Display 165
 - Entire result range 266
 - Start/stop values 266
- Export format 625
- Exporting
 - I/Q data 291
 - I/Q data (remote) 589
 - Trace data 312
- Exporting I/Q data 276
- External Mixer
 - Activating (remote) 397
 - Band 399
 - Programming example 408
 - RF overrange 403
 - Type 403
- External trigger 234, 235
 - Level (remote) 477
- Eye diagram
 - Display lines 281
 - Eye size 281
 - Frequency (result type) 33
 - Imag (Q) (result type) 34
 - Measuring eye size 310
 - Real (I) (result type) 36

- F**
- Factory settings
 - Restoring 268
 - filename
 - Settings 184
 - Files
 - I/Q data input 209
 - Filter bandwidth (BT)
 - Measurement filter 264
 - Transmit filter 190
 - Filters
 - (De-) Modulation 70
 - Customized 73
 - Customized, creating 73
 - Customized, selecting 296
 - Formulae 635
 - High-pass (RF input) 207
 - Measurement 70, 71, 623
 - Measurement (formulae) 636
 - Predefined 622
 - Receive 70
 - Reference 70
 - Signal processing 68
 - Standard-specific (formulae) 636
 - Transmit 70, 622
 - Transmit (formulae) 636
 - Typical combinations 624
 - YIG (remote) 392
 - FILTWIZ 73
 - Fine Synchronization 261
 - Folders
 - Digital standards 184
 - Formulae
 - Analytically calculated filters 635
 - Evaluation 629
 - Measurement filters 636
 - Parameters 629
 - Result Summary parameters 631
 - Result Summary parameters (FSK) 633
 - Standard-specific filters 636
 - Statistics 634
 - Trace averaging 634
 - Transmit filters 636
 - Free Run
 - Trigger 234
 - Frequency
 - Absolute (result type) 37
 - Configuration 217
 - Configuration (remote) 455
 - Formula 629
 - IF Out 211
 - Offset 218
 - Relative (result type) 38
 - Frequency error
 - Absolute (result type) 39
 - Formula 629
 - Relative (result type) 41
 - RMS, peak (formulae) 633
 - Frequency response
 - Channel (result type) 28
 - EDGE filters 636
 - Low-ISI filters 639
 - Magnitude (result type) 43
 - Phase (result type) 43
 - Frequency Response Group Delay
 - Channel (result type) 27
 - Result type 42
 - Frequency shift keying (FSK)
 - Symbol mapping 110
 - Frontend
 - Configuration 204
 - Configuration (remote) 390
 - FSK
 - Calculating errors 630
 - Compensation 630
 - Deviation error (formula) 633
 - Error model 158
 - Estimation 159
 - Manchester code 348
 - Measurement deviation (formula) 633
 - Modulation type 187, 194
 - Reference deviation 189
 - Signal model 156
 - FSK deviation error
 - Compensation 257
 - Definition 161
 - FSK reference deviation
 - Formula 633

G

 - Gain distortion
 - Effect 153
 - Gain imbalance
 - Definition 150
 - Effect 150
 - Formula 631
 - Preconditions for measurement 151
 - Gating 317
 - Getting started 11
 - GSM
 - Programming example 606

H

 - Handover frequency
 - External Mixer (remote) 398
 - Hardware settings
 - Displayed 17
 - Harmonics
 - External Mixer (remote) 401
 - High-pass filter
 - RF input 207
 - Horizontal line
 - Eye diagram 282
 - Hysteresis
 - Lower (Auto level) 268
 - Trigger 238
 - Upper (Auto level) 267

I

 - I/Q bandwidth
 - Usable 69, 232
 - I/Q correlation threshold
 - Pattern search 246
 - I/Q data
 - Exporting (remote) 589
 - Importing (remote) 589
 - Importing/Exporting 291
 - Input file 210

| | |
|--------------------------------------|----------|
| Input files | 209 |
| Maximum bandwidth | 76 |
| Sample rate | 76 |
| I/Q imbalance | |
| Compensation | 257 |
| Definition | 151 |
| Formula | 631 |
| I/Q offset | |
| (Origin Offset) Definition | 149 |
| Compensating | 149 |
| Compensation | 257 |
| Formula | 631 |
| I/Q pattern search | |
| see Pattern search | 135 |
| I/Q Power | |
| Trigger | 236 |
| Trigger level (remote) | 478 |
| I/Q skew | |
| Definition | 152 |
| IF frequency | |
| Output | 211 |
| Output (remote) | 451 |
| IF Out Frequency | 211 |
| IF output | |
| Remote | 451 |
| IF Power | |
| Trigger | 235 |
| Trigger level (remote) | 478 |
| IF WIDE OUTPUT | |
| Connector | 231 |
| Impedance | |
| Setting | 208, 223 |
| Importing | |
| I/Q data | 291 |
| I/Q data (remote) | 589 |
| Impulse response | |
| Magnitude (result type) | 44 |
| Phase (result type) | 45 |
| Real/Imag (result type) | 46 |
| Input | |
| Configuration | 204 |
| Configuration (remote) | 390 |
| Coupling | 206, 222 |
| I/Q data files | 209 |
| Overload (remote) | 390 |
| RF | 206 |
| Settings | 204, 222 |
| Source Configuration | 204 |
| Input sample rate (ISR) | |
| Definition | 76, 95 |
| Input sources | |
| I/Q data file | 210 |
| I/Q data files | 209 |
| Radio frequency | 205 |
| Installation | 15 |
| Instrument security procedures | 12 |
| Intersymbol interference (ISI) | 70 |
| Filter | 70 |
| iq.tar files | 276 |
| ISI-free system | 72 |
| ITU-T | |
| PRBS data | 171 |

K

| | |
|----------------------------------|---------------|
| Keys | |
| MKR -> | 280 |
| Peak Search | 280 |
| RUN CONT | 240 |
| RUN SINGLE | 241 |
| Known data | 201 |
| Creating files | 303 |
| Dependencies, restrictions | 169 |
| Enabling | 202 |
| File syntax | 627 |
| Files | 302 |
| Fine synchronization | 261, 262 |
| Loading | 203 |
| PRBS | 170, 203, 305 |
| Recording tool | 304 |
| Symbol decisions | 137 |
| Working with | 302 |

L

| | |
|---|-----|
| Limit lines | |
| Current/mean/peak values | 284 |
| Default | 284 |
| Enabling | 283 |
| Modulation accuracy | 283 |
| Peak search | 280 |
| Values | 284 |
| Values, checking | 285 |
| Limits | |
| Configuring | 311 |
| Defining (remote) | 534 |
| Modulation Accuracy | 311 |
| Retrieving check results (remote) | 588 |
| Linear average | |
| Formula | 634 |
| Lines | |
| Eye diagram | 281 |
| Horizontal | 282 |
| Limit checking | 283 |
| Vertical | 282 |
| LO feedthrough | 207 |
| Loading | |
| Settings files | 185 |
| Low-ISI filters | |
| Frequency response | 639 |
| Lower Level Hysteresis | 268 |

M

| | |
|-------------------------------------|----------|
| Magnitude | |
| Formula | 629 |
| Magnitude (Selected CB Section) | |
| Result type | 167 |
| Result types | 46 |
| Magnitude Absolute | |
| Result type | 46, 167 |
| Magnitude error | |
| Definition | 148 |
| Formula | 629 |
| Result type | 50 |
| RMS, peak (formulae) | 631, 633 |
| Magnitude Overview (Capture Buffer) | |
| Result type | 48 |
| Magnitude Overview Absolute | |
| Result type | 167 |

- Magnitude Relative
 - Result type 49
 - Manchester code 348
 - Mapping
 - see Symbol mapping 97
 - Mapping wizard (mapwiz) 130
 - Marker to Trace 278
 - Markers
 - Absolute peak 280
 - Assigned trace 278
 - Configuring 277
 - Coupling 278
 - Deactivating 278
 - Delta markers 278
 - General settings (remote) 522
 - Minimum 280
 - Next minimum 281
 - Next peak 280
 - Peak 280
 - Positioning 280
 - Retrieving values (remote) 560
 - Search settings 279
 - Settings (remote) 518
 - State 278
 - Type 278
 - X-value 278
 - Matched filter 70
 - Max Peak 280
 - Maximizing
 - Windows (remote) 544
 - Mean
 - Formula 634
 - Meas & Ref
 - Data source 20
 - Result types 20
 - MEAS filter 70
 - Meas only if burst was found 244
 - Measurement bandwidth 70
 - Measurement example
 - Burst GSM EDGE Signals 319
 - Continuous QPSK 314
 - Measurement examples
 - Burst GSM EDGE signal (remote) 606
 - Continuous QPSK signal (remote) 604
 - Measurement filter 71
 - Alpha/BT 264
 - Configuration 263
 - Configuration (remote) 502
 - Demodulation process 133
 - Enabling 263
 - Loading 264
 - Predefined 264, 623
 - Type 264
 - User-defined 264
 - Measurement ranges
 - Comparison 161
 - Definition 161
 - Measurement signal
 - Evaluating 273
 - Measurement time
 - Auto settings 267
 - Min Gap Length
 - Bursts 245
 - Min/max values
 - Y-axis 227
 - Minimum 280
 - Marker positioning 280
 - Next 281
 - Minimum shift keying (MSK)
 - Symbol mapping 115
 - MKR ->
 - Key 280
 - ModAcc Limits 283
 - Modulation
 - Configuration 186
 - Display 17
 - Errors, FSK 160
 - Inverted (I/Q, remote) 472
 - Inverted (I/Q) 232
 - Mapping 189, 195
 - Order 188, 194
 - Remote 363
 - Symbol Rate 189
 - Type 187, 194
 - User-defined 130
 - Modulation accuracy
 - Data source 22
 - Individual results 57
 - Limit checking 283
 - Limit checking, enabling 283
 - Limit lines (remote) 533
 - Limits 311
 - Result types 22
 - Modulation Error Ratio (MER)
 - Definition 148
 - Modulation errors 144, 147
 - Data source 21
 - Formula 631
 - PSK, QAM, MSK 145
 - Result types 21
 - Modulation order
 - Known data 170
 - Pattern symbols 252
 - Modulation type
 - FSK 156
 - MSK
 - Error model 145
 - Modulation type 187, 194
 - MSRA
 - Analysis interval 230, 471
 - Operating mode 178
 - Trigger 233, 475
 - MSRA secondary applications
 - Capture offset (remote) 541
 - MSRT
 - Analysis interval 230, 471
 - Operating mode 178
 - Trigger 233, 475
 - MSRT secondary applications
 - Capture offset 240
 - Capture offset (remote) 543
 - Multi Source
 - Data source 23
 - Multiple
 - Measurement channels 16
- ## N
- Next Minimum 281
 - Marker positioning 281
 - Next Peak 280
 - Marker positioning 280

- Noise
 - Effect 155
 - Source 212
- Normalization
 - Demodulation 260
- O**
- Offset
 - Analysis interval 240
 - EVM 262
 - Frequency 218
 - Pattern 192
 - QPSK 108
 - QPSK, symbol mapping 108
 - Reference level 221
 - Result range 254
- On Off Keying (OOK)
 - Constellation diagram 128
- OOK
 - Symbol mapping 128
- Optimization
 - Demodulation 260
- Options
 - Bandwidth extension 77, 231
 - Electronic attenuation 225
 - High-pass filter 207
 - Preamplifier 222
- OQPSK
 - Constellation diagram 108
- Oscilloscopes
 - Remote commands (B2000) 444
- Output
 - Audio 451
 - Configuration 204
 - Configuration (softkey) 210
 - Digital Baseband interface settings 214, 215
 - Digital Baseband interface status 434
 - Digital Baseband settings 217
 - Digital I/Q (remote) 434
 - Digital I/Q 40G settings 216
 - IF frequency (remote) 450
 - IF Out Frequency 211
 - IF source (remote) 451
 - Noise source 212
 - Sample rate, definition 76, 95
 - Settings 210
 - Trigger 213
 - Video 211, 451
- Overload
 - RF input (remote) 390
- Oversampling
 - Statistics 288
- Overview
 - Configuration 180
- P**
- Parameters
 - Description 66, 67
 - FSK 67
 - PSK, QAM, MSK 66
 - Retrieving results (remote) 573
 - SCPI parameters 66, 67
- Pattern search
 - Configuration 245
 - Demodulation process 132
 - Display 17
 - Enabling 246, 250
 - Errors 329
 - Found pattern 247
 - I/Q correlation threshold 246
 - Performing 297
 - Process 135
 - Remote 484
 - Selected pattern 247
- Patterns 192
 - Adding to standard 249
 - Assigning to standard 298
 - Available 249
 - Coarse synchronization 261
 - Compatible 249
 - Configuration 192, 247
 - Copying 249
 - Creating 250
 - Definition 250
 - Definition (remote) 486
 - Deleting 250
 - Details 250
 - Displaying 249
 - Editing 249
 - Enabling 247, 250
 - Fine synchronization 261
 - Managing 301
 - Name 192, 251
 - Offset 192
 - Prefix 249
 - Reference for result range 254
 - Removing from standard 249
 - Restoring 269
 - Selected 248
 - Standard 248
 - Symbol check 139
 - Symbol check (demodulation process) 133
 - Symbol format 252, 287
 - Symbols 252
 - Working with 297
- Peak search
 - Key 280
 - Limits 280
 - Mode 279
- Peaks
 - Absolute 280
 - Formula 634
 - Marker positioning 280
 - Next 280
 - Softkey 280
- Phase
 - Distortion, effect 154
 - Formula 629
 - Wrap (result type) 52
- Phase error
 - Definition 148
 - Formula 629
 - Result type 51
 - RMS, peak (formulae) 631
- Phase Error
 - Result type 51
- Phase shift keying
 - see PSK 98
- Phase unwrap
 - Unwrap (result type) 53
- Ports
 - External Mixer (remote) 403

- Power splitter mode 448
- PRBS
 - ITU-T 171
 - Known data 170, 203, 305
- Preamplifier
 - Setting 222
 - Softkey 222
- Prefix
 - Patterns 249
- Preset
 - Bands (External Mixer, remote) 399
- Presetting
 - Channels 183
 - Default values 268
- Pretrigger 238
- Programming examples
 - Burst GSM EDGE signal 606
 - Continuous QPSK signal 604
 - External Mixer 408
- Protection
 - RF input (remote) 390
- PSK
 - Differential 105
 - Error model 145
 - Mixed forms 106
 - Modulation type 187, 194
 - Rotating 102
 - Rotating differential 106
 - Symbol mapping 98
- Q**
- QAM
 - Error model 145
 - Modulation type 187, 194
 - Symbol mapping 116
- QPSK
 - Continuous 314
 - Measurement example 314
 - Offset 108
 - Offset, symbol mapping 108
 - Programming example 604
 - Shaped offset 109
- Quadrature Amplitude Modulation
 - see QAM 116
- Quadrature error
 - Definition 151
 - Effect 151
 - Formula 631
 - Preconditions for measurement 151
- Quick Config
 - Traces 274
- R**
- Range
 - X-axis 229
- Range per division
 - Y-axis 228
- Raw data
 - Exporting 275
- Real/Imag (I/Q)
 - Result type 54
- Receive filter 70
- Record length
 - Definition 76
 - Relationship to sample rate 78
- Recording tool
 - Known data 304
- Reference
 - Result range 254
- Reference deviation
 - Definition 157
 - FSK 189
- Reference filter 71
- Reference level 220
 - Auto level 221, 267
 - Offset 221
 - Unit 220, 221
 - Value 220
- Reference position
 - X-axis 228
 - Y-axis 227
- Reference signal 146
 - Demodulation process 133
 - Evaluating 273
 - Generating 133
- Reference value
 - X-axis 228
 - Y-axis 227
- Refresh
 - Softkey 241
- Refreshing
 - MSRA secondary applications 242
 - MSRT secondary applications 242
 - Softkey 242
- Release notes 12
- Remote commands
 - Basics on syntax 351
 - Boolean values 354
 - Capitalization 352
 - Character data 355
 - Data blocks 355
 - Numeric values 353
 - Optional keywords 352
 - Parameters 353
 - Strings 355
 - Suffixes 352
- Repetition interval 239
 - Softkey 239
- Resetting
 - RF input protection 390
- Restoring
 - Channel settings 183
 - Factory settings 268
 - Pattern files 269
 - Standard files 185, 268
- Result display
 - Configuration (remote) 543
 - Troubleshooting 338
- Result displays
 - Data sources 19
- Result length 163
 - Display 17
 - Known data 170
 - QAM modulation 116
 - Ranges 254
- Result range
 - Alignment 164, 254, 255
 - Alignment (known data) 170
 - Configuration 253
 - Defining 295
 - Definition 162
 - Demodulation process 132

- Display 162
- Evaluating 266
- Length 163, 254
- Offset 254
- Overlapping 337
- Reference 254
- Remote 490
- Run-In/out 164
- Selecting 242
- Result Summary
 - Configuration 57
 - Display points per symbol 167
 - Evaluations 631
 - Formulae 631
 - Formulae (FSK) 633
 - Result type 55
- Result type
 - Display 18
 - Transformation 287
 - Window configuration 287
- Result types
 - Bit error rate (BER) 25
 - Capture buffer 20
 - Channel Frequency Response Group Delay 27
 - Channel Frequency Response Magnitude 28
 - Constellation Frequency 29
 - Constellation I/Q 29
 - Constellation I/Q (Rotated) 31
 - Equalizer 22
 - Error vector 21
 - Error Vector Magnitude (EVM) 32
 - Eye Diagram Frequency 33
 - Eye Diagram Imag (Q) 34
 - Eye Diagram Real (I) 36
 - Frequency Absolute 37
 - Frequency Error Absolute 39
 - Frequency Error Relative 41
 - Frequency Relative 38
 - Frequency Response Group Delay 42
 - Frequency Response Magnitude 43
 - Frequency Response Phase 43
 - Impulse Response Magnitude 44
 - Impulse Response Phase 45
 - Impulse Response Real/Imag 46
 - Magnitude (Selected CB Section) 46
 - Magnitude Absolute 46
 - Magnitude Error 50
 - Magnitude Overview (Capture Buffer) 48
 - Magnitude Relative 49
 - Meas & Ref 20
 - Modulation accuracy 22
 - Modulation errors 21
 - Multi Source 23
 - Overview 23
 - Phase Error 51
 - Phase Unwrap 53
 - Phase Wrap 52
 - Real/Imag (I/Q) 54
 - Result Summary 55
 - SCPI parameters 23
 - Spectrum (Capture Buffer + Error) 58
 - Spectrum (Meas+Error) 60
 - Symbol Table 61
 - Symbols 21
 - Vector Frequency 63
 - Vector I/Q 63
- Results
 - Retrieving (remote) 559
 - Updating the display 242
- RF attenuation
 - Auto 223
 - Manual 223
- RF input 205
 - Overload protection (remote) 390
 - Remote 390
- RF overrange
 - External Mixer 403
- RF Power
 - Trigger 237
- RHO
 - Formula 631
- RMS average
 - Formula 634
- Roll-off factor (Alpha)
 - Measurement filter 264
 - Transmit filter 190
- Rotating Differential PSK
 - Symbol mapping 106
- Rotating PSK
 - Symbol mapping 102
- RRC filter 70
- RUN CONT
 - Key 240
- RUN SINGLE
 - Key 241
- Run-in
 - Bursts 192
- S**
 - Safety instructions 12
 - Sample rate 70, 166
 - Basics 68
 - Definition 75, 76, 95
 - Digital I/Q data 95
 - Max. usable I/Q bandwidth 76
 - Maximum 76
 - Relationship to bandwidth 78
 - Relationship to symbol rate 76
 - Remote 471
 - Setting 231
 - Saving
 - Settings 185
 - Scaling
 - Automatically 227, 268
 - Diagrams, changing 307
 - X-axis 225, 308
 - X-axis (automatically) 228
 - X-axis, y-axis (default) 228
 - Y-axis 225, 307, 308
 - Y-axis (remote control) 470
 - Y-axis (statistics) 227
 - Search
 - Direction (Real or Imag) 279
 - Tolerance (Burst Search) 245
 - Search Limits
 - Activating 280
 - Secure user mode
 - Storage location 184
 - Security procedures 12
 - Select Result Rng
 - Softkey 242

- Sequencer 16
 - Activating (remote) 512
 - Remote 510
- Sequences
 - Aborting (remote) 512
 - Mode (remote) 512
- Service manual 11
- Settings
 - filename 184
 - Restoring files 185, 268
 - Storage location 184
- Settings files
 - Deleting 185
 - Loading 185
 - Saving 185
- Shaped offset QPSK 109
- Signal capture 230
 - Remote control 470
- Signal description
 - Configuration 186
 - Configuration (remote) 362
 - Pattern 192
 - Softkey 186
- Signal model 144
 - FSK 156
- Signal structure
 - Burst settings 191
 - Configuration 190
 - Remote 371
- Signal type
 - Continuous/Burst Signal 191
- Single sweep
 - Softkey 241
- Slope
 - Trigger 239, 478
- Slow/I/Q 95
- Softkeys
 - Auto Level 221, 267
 - BB Power 236
 - Capture Offset 240
 - Center 218
 - Continue Single Sweep 241
 - Continuous Sweep 240
 - Digital I/Q 236
 - Display configuration 285
 - External 234
 - Free Run 234
 - IF Power 235
 - Lower Level Hysteresis 268
 - Marker Config 277
 - Marker to Trace 278
 - Meastime Auto 267
 - Meastime Manual 267
 - Min 280
 - ModAcc Limits 283
 - Next Min 281
 - Next Peak 280
 - Norm/Delta 278
 - Outputs Config 210
 - Peak 280
 - Preamp 222
 - Ref Level 220
 - Ref Level Offset 221
 - Refresh 242
 - Repetition interval 239
 - RF Atten Auto 223
 - RF Atten Manual 223
- RF Power 237
- Signal Description 186
- Single Sweep 241
- Time 237
- Trace 1/2/3/4 274
- Trace Config 270
- Trigger Offset 238
- Trigger/Gate Config 232
- Upper Level Hysteresis 267
- Window configuration 285
- Specifications 12
- Specifics for
 - Configuration 183
- Spectrum
 - Result type transformation 287
- Spectrum (Capture Buffer + Error)
 - Result type 58
- Spectrum (Meas+Error)
 - Result type 60
- SR
 - see Symbol rate 17
- Standards
 - see Digital standards 184
- Statistic count 242
 - Display 17
- Statistics
 - Formulae 634
 - Oversampling 288
 - Result type transformation 287
- Status registers
 - Description 592
 - Querying 597
 - STAT:QUES:POW 390
- Status reporting system 591
- StdDev
 - Formula 634
- Storage location
 - Secure user mode 184
 - Settings 184
- Suffixes
 - Common 355
 - Remote commands 352
- Swap I/Q 232
 - Remote 472
- Sweep
 - Aborting 240, 241
 - Configuration (remote) 481, 508
 - Count, see Statistic count 242
 - Settings 240
- Symbol check
 - Algorithm 139
 - Demodulation 139
 - Patterns 139
- Symbol decisions
 - Algorithm 136
 - Demodulation 136
 - Demodulation process 132
 - Known data 137
- Symbol error rate (SER)
 - Fine synchronization 262
- Symbol mapping 97, 189, 195
 - APSK 129
 - ASK 128
 - Differential PSK 105
 - FSK 110
 - MSK 115
 - Offset QPSK 108

- OOK 128
- PSK 98
- QAM 116
- Rotating differential PSK 106
- Rotating PSK 102
- User-defined 130
- Wizard (mapwiz) 130
- Symbol number
 - Result range start 255
- Symbol rate 166, 189
 - Basics 68
 - Display 17
 - MSRA/MSRT mode 178
 - Relationship to sample rate 76
 - Remote 370
- Symbol Rate Error (SRE) 257
 - Definition 148
- Symbol tables
 - Result type 61
- symbols
 - Highlighting 287
 - Window Configuration 287
- Symbols
 - Data source 21
 - Format, patterns 252, 287
 - Patterns 252
 - Result types 21
- Synchronization 146
 - Coarse 261
 - Demodulation 259
 - Demodulation process 133
 - Fails, troubleshooting 348
 - Fine 261
 - Known data 261, 262
 - Patterns 261
 - Remote 492
 - Symbol error rate (SER) 262
- Syntax
 - Known data files 627
- T**
- Time trigger
 - Repetition interval 239
 - Softkey 237
- Trace Export
 - Configuration 275
 - Data mode 275
 - Header information 276
 - Storage location 276
- Traces 274
 - Averaging, formulae 634
 - Capture Buffer (remote) 566
 - Cartesian Diagrams (remote) 566
 - Configuration 270
 - Configuring (remote control) 514
 - Equalizer (remote) 568
 - Evaluation 273
 - Export format 276
 - Exporting 276
 - Exporting data 312
 - Measurement signal 273
 - Mode 272
 - Mode (remote) 515
 - Multi Source (remote) 568
 - Polar Diagrams (remote) 567
 - Reference signal 273
 - Result Summary (remote) 567
 - Retrieving data (remote) 560
 - Selecting 271
 - Settings (remote control) 514
 - Settings, predefined 274
 - Symbols (remote) 567
 - Troubleshooting 338
- Transmit filter 70
 - Alpha/BT 190
 - Predefined 622
 - Type 189
 - User-defined 190
 - Using as measurement filter 263
- Trigger
 - Configuration 232
 - Drop-out time 238
 - External (remote) 479
 - Holdoff 239
 - Hysteresis 238
 - Offset 238
 - Output 213
 - Remote control 474
 - Slope 239, 478
- Trigger level 238
 - External trigger (remote) 477
 - I/Q Power (remote) 478
 - IF Power (remote) 478
- Trigger source 234
 - BB Power 236
 - Digital I/Q 236
 - External 234
 - External Analog 235
 - External Ch3 235
 - Free Run 234
 - I/Q Power 236
 - IF Power 235
 - RF Power 237
 - Time 237
- Triggers
 - MSRA/MSRT 233, 475
- Troubleshooting
 - Burst search 329
 - Flow chart 327
 - Frequently asked questions 338
 - Input overload 390
 - Pattern search 329
 - Result display 338
 - Traces 338
- U**
- Units
 - Reference level 220, 221
 - X-axis 229
 - X-axis, y-axis 229
 - Y-axis 229
- Updating
 - Result display 242
- Upper Level Hysteresis 267
- Usable I/Q bandwidth
 - Definition 76, 95
 - Result display 19, 232
- Useful length
 - Bursts 164
- User filters
 - Loading 190

- User QAM
 - Modulation type 187, 194
- User sample rate
 - Definition 76, 95
- V**
- Vector frequency
 - Result type 63
- Vector I/Q
 - Result type 63
- Vertical line
 - Eye diagram 282
- Video output 211, 451
- Videos 13
- W**
- White papers 13
- Window configuration 285, 286
 - Data source 286
 - Remote 552
 - Result type 287
 - Result type transformation 287
- Window title bar information 18
- Windows
 - Adding (remote) 545
 - Closing (remote) 551
 - Configuring 183
 - Layout (remote) 548
 - Maximizing (remote) 544
 - Querying (remote) 546, 547
 - Replacing (remote) 548
 - Splitting (remote) 544
 - Types (remote) 545
- X**
- X-axis
 - Quantize 228
 - Range 229
 - Reference position 228, 309
 - Reference value 228, 309
 - Scaling 225
 - Scaling (default) 228
 - Scaling automatically 228
 - Scaling, auto 227, 268
 - Scaling, auto all windows 268
 - Units 229
- X-value
 - Marker 278
- Y**
- Y-axis
 - Mix, max values 227
 - Range 310
 - Range per division 228
 - Reference position 227, 307
 - Reference value 227, 307
 - Scaling 225
 - Scaling (statistics) 227
 - Scaling, auto 227, 268, 308, 309
 - Scaling, auto all windows 268
 - Units 229
- YIG-preselector
 - Activating/Deactivating 207
 - Activating/Deactivating (remote) 392