

R&S® AFQ-K352, R&S® SMBV-K352,
R&S® SMJ-K352, R&S® SMU-K352
HD Radio™ Test Waveforms
Manual



1171.6450.32 – 08

This document describes the following software options:

- R&S®AFQ-K352
1401.6154.02
- R&S®SMBV-K352
1415.8431.02
- R&S®SMJ-K352
1409.2958.02
- R&S®SMU-K352
1408.8069.02

Under license of:
iBiquity Digital Corporation
6711 Columbia Gateway Drive, Suite 500
Columbia, MD 21046
Attention: Licensing Department
(443) 539-4290
testequipmentlicensing@ibiquity.com

HD Radio™ Technology Manufactured Under License From iBiquity Digital Corp. U.S. and Foreign Patents.

HD Radio™ and the HD Radio logo are proprietary trademarks of iBiquity Digital Corp. © 2003-2010 iBiquity Digital Corp. All rights reserved.

© 2017 Rohde & Schwarz GmbH & Co. KG
Mühlhofstr. 15, 81671 München, Germany
Phone: +49 89 41 29 - 0
Fax: +49 89 41 29 12 164
Email: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of their owners.

The following abbreviations are used throughout this manual: R&S®SMBV100A is abbreviated as R&S SMBV, R&S®SMJ100A is abbreviated as R&S SMJ, R&S®SMU200A is abbreviated as R&S SMU, R&S®AFQ100A is abbreviated as R&S AFQ

Contents

1	Preface	5
1.1	Documentation Overview	5
1.1.1	Quick Start Guide Manual.....	5
1.1.2	Operating Manual and Help.....	5
1.1.3	Service Manual.....	5
1.1.4	Instrument Security Procedures.....	6
1.1.5	Basic Safety Instructions.....	6
1.1.6	Data Sheets and Brochures.....	6
1.1.7	Release Notes and Open Source Acknowledgment (OSA).....	6
1.1.8	Application Notes, Application Cards, White Papers, etc.....	6
2	Getting Started	8
2.1	Contents of the Disk	8
2.2	Version History	8
2.2.1	Version 1.40.....	8
2.2.2	Version 1.30.....	12
2.2.3	Version 1.20.....	15
2.2.4	Version 1.00.....	16
2.3	System Requirements	17
2.4	Installation Instructions	17
2.5	Enabling the R&S SMBV to play the HD Radio™ waveforms files	18
2.6	Enabling the R&S SMU/SMJ to play the HD Radio™ waveforms files	20
3	Available Waveform Files	23
3.1	AM Folder	23
3.2	CC Folder	25
3.3	FM Folder	27
	Index	33

1 Preface

1.1 Documentation Overview

This section provides an overview of the R&S SMx/AFQ user documentation. Unless specified otherwise, you find the documents on the R&S SMx/AFQ product page at:

www.rohde-schwarz.com/manual/smbv100a

www.rohde-schwarz.com/manual/smj100a

www.rohde-schwarz.com/manual/smu200a

1.1.1 Quick Start Guide Manual

Introduces the R&S SMx/AFQ and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the instrument.

1.1.2 Operating Manual and Help

Separate manuals for the base unit and the software options are provided for download:

- **Base unit manual**
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the quick start guide manual.
- **Software option manual**
Contains the description of the specific functions of an option. Basic information on operating the R&S SMx/AFQ is not included.

The contents of the user manuals are available as help in the R&S SMx/AFQ. The help offers quick, context-sensitive access to the complete information for the base unit and the software options.

All user manuals are also available for download or for immediate display on the Internet.

1.1.3 Service Manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS, <https://gloris.rohde-schwarz.com>).

1.1.4 Instrument Security Procedures

Deals with security issues when working with the R&S SMx/AFQ in secure areas. It is available for download on the Internet.

1.1.5 Basic Safety Instructions

Contains safety instructions, operating conditions and further important information. The printed document is delivered with the instrument.

1.1.6 Data Sheets and Brochures

The data sheet contains the technical specifications of the R&S SMx/AFQ. It also lists the options and their order numbers and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/smbv100a

See www.rohde-schwarz.com/brochure-datasheet/smj100a

See www.rohde-schwarz.com/brochure-datasheet/smu200a

1.1.7 Release Notes and Open Source Acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The open source acknowledgment document provides verbatim license texts of the used open source software.

See www.rohde-schwarz.com/firmware/smbv100a

See www.rohde-schwarz.com/firmware/smj100a

See www.rohde-schwarz.com/firmware/smu200a

1.1.8 Application Notes, Application Cards, White Papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/smbv100a.

See www.rohde-schwarz.com/application/smj100a.

See www.rohde-schwarz.com/application/smu200a.

2 Getting Started

The HD Radio™ test waveforms files (*.wv) are provided on a hard disk and can be played on the Arbitrary Waveform Generator (ARB) of the instruments listed under [Chapter 2.3, "System Requirements"](#), on page 17.



Playing of HD Radio test waveforms on an R&S Signal Generator and R&S I/Q Modulation Generator requires a license form iBiquity Digital Corporation.

2.1 Contents of the Disk

Waveform files (*.wv) as listed in [Chapter 3, "Available Waveform Files"](#), on page 23.

2.2 Version History



For information on the current firmware version refer to the release notes of the instrument.

2.2.1 Version 1.40

119 new waveform files

CC_FMr440_e1wfr015_HighDataRate.wv
CC_FMr440d_e1wfr011.wv
CC_FMr440d_e1wfr012.wv
CC_FMr440d_e1wfr013.wv
CC_FMr440d_e1wfr014.wv
CC_TTN_FMr440a_e1wfr001.wv
CC_TTN_FMr440a_e1wfr002.wv
CC_TTN_FMr440a_e1wfr003.wv
CC_TTN_FMr440a_e1wfr004.wv
CC_TTN_FMr440a_e1wfr005.wv
CC_TTN_FMr440a_e1wfr006.wv
CC_TTN_FMr440a_e1wfr007.wv

CC_TTN_FMr440a_e1wfr008.wv
CC_TTN_FMr440a_e1wfr009.wv
CC_TTN_FMr440a_e1wfr010.wv
CC_TTN_FMr440a_e1wfr011.wv
CC_TTN_FMr440a_e1wfr012.wv
CC_TTN_FMr440a_e1wfr013.wv
CC_TTN_FMr440a_e1wfr014.wv
CC_TTN_FMr440a_e1wfr015.wv
CC_TTN_FMr440a_e1wfr016.wv
CC_TTN_FMr440a_e1wfr017.wv
CC_TTN_FMr440a_e1wfr018.wv
CC_TTN_FMr440a_e1wfr019.wv
CC_TTN_FMr440a_e1wfr019b.wv
CC_TTN_FMr440a_e1wfr020.wv
CC_TTN_FMr440a_e1wfr020b.wv
CC_TTN_FMr440a_e1wfr021.wv
CC_TTN_FMr440a_e1wfr022.wv
CC_TTN_FMr440a_e1wfr023.wv
CC_TTN_FMr440a_e1wfr024.wv
CC_TTN_FMr440a_e1wfr025.wv
CC_TTN_FMr440a_e1wfr026.wv
CC_TTN_FMr440a_e1wfr027.wv
CC_TTN_FMr440a_e1wfr028.wv
CC_TTN_FMr440a_e1wfr029.wv
CC_TTN_FMr440a_e1wfr030.wv
CC_TTN_FMr440a_e1wfr031.wv
CC_TTN_FMr440a_e1wfr032.wv
CC_TTN_FMr440a_e1wfr033.wv
CC_TTN_FMr440a_e1wfr034.wv
CC_TTN_FMr440a_e1wfr035.wv
CC_TTN_FMr440a_e1wfr036.wv
CC_TTN_FMr440a_e1wfr037.wv
CC_TTN_FMr440a_e1wfr038.wv

CC_TTN_FMr440a_e1wfr039.wv
CC_TTN_FMr440a_e1wfr040.wv
CC_TTN_FMr440a_e1wfr041.wv
CC_TTN_FMr440a_e1wfr042.wv
CC_TTN_FMr440a_e1wfr043.wv
CC_TTN_FMr440a_e1wfr044.wv
CC_TTN_FMr440a_e1wfr045.wv
CC_TTN_FMr440a_e1wfr046.wv
CC_TTN_FMr440a_e1wfr047.wv
CC_TTN_FMr440a_e1wfr048.wv
CC_TTN_FMr440a_e1wfr049.wv
CC_TTN_FMr440a_e1wfr049b.wv
CC_TTN_FMr440a_e1wfr050.wv
CC_TTN_FMr440a_e1wfr050b.wv
CC_TTN_FMr440a_e1wfr051.wv
CC_TTN_FMr440a_e1wfr051b.wv
CC_TTN_FMr440a_e1wfr052.wv
CC_TTN_FMr440a_e1wfr053.wv
CC_TTN_FMr440a_e1wfr054.wv
CC_TTN_FMr440a_e1wfr055.wv
CC_TTN_FMr440a_e1wfr056.wv
CC_TTN_FMr440a_e1wfr057.wv
CC_TTN_FMr440a_e1wfr058.wv
CC_TTN_FMr440a_e1wfr065.wv
CC_TTN_FMr440a_e1wfr070.wv
CC_TTN_FMr440a_e1wfr071.wv
CC_TTN_FMr440a_e1wfr072.wv
IB_AMr201_e1awfr1190.wv
IB_AMr208_e1awfr1221.wv
IB_AMr208_e1awfr1249.wv
IB_AMr208_e1awfr1260.wv
IB_AMr208b_e1awf1123.wv
IB_AMr208c_e1awf1124.wv

IB_AMr230_e1awfr1187.wv
IB_AMr230_e1awfr1261.wv
IB_AMr430_e1wfr1028.wv
IB_AMr440_e1wfr1116.wv
IB_AMr440_e1wfr1117.wv
IB_FMr201_e1wfr1189.wv
IB_FMr208_e1wfr1122.wv
IB_FMr208_e1wfr1185.wv
IB_FMr208_e1wfr1246.wv
IB_FMr208_e1wfr1247.wv
IB_FMr208_e1wfr1248.wv
IB_FMr208c_e1wfc546.wv
IB_FMr220_e1wfa108.wv
IB_FMr220b_e1wfr1119.wv
IB_FMr220c_e1wfr1191.wv
IB_FMr430_e1wfr1090.wv
IB_FMr430_e1wfr1091.wv
IB_FMr430_e1wfr1092.wv
IB_FMr430_e1wfr1093.wv
IB_FMr430_e1wfr1094.wv
IB_FMr430_e1wfr1095.wv
IB_FMr430_e1wfr1096.wv
IB_FMr430_e1wfr1097.wv
IB_FMr430_e1wfr1098.wv
IB_FMr430_e1wfr1099.wv
IB_FMr430_e1wfr1100.wv
IB_FMr430_e1wfr1101.wv
IB_FMr430_e1wfr1102.wv
IB_FMr430_e1wfr1152.wv
IB_FMr430a_e1wfr1085.wv
IB_FMr440_e1wfr1111.wv
IB_FMr440_e1wfr1112.wv
IB_FMr440_e1wfr1113.wv

IB_FMr440_e1wfr1114.wv

IB_FMr440_e1wfr1115.wv

IB_FMr440_e1wfr1243.wv

IB_FMr440_e1wfr1251.wv

IB_FMr440_e1wfr1252.wv

IB_FMr440_e1wfr1253.wv

IB_FMr440_e1wfr1254.wv

IB_FMr440_e1wfr1255.wv

2 removed waveform files

IB_FMr208c_e10wfc546

IB_FMr208k_e1wfa104

2.2.2 Version 1.30

29 new waveform files

IB_AMr001_e1_cw_0_m10.wv

IB_AMr001_e1_cw_2_6.wv

IB_AMr001_e1_cw_m1_m2.wv

IB_AMr001_e1_cw_m30_0_30.wv

IB_AMr001_e1_cw_m7p5_10.wv

IB_AMr430_e1wfr1016.wv

IB_AMr430_e1wfr1017.wv

IB_AMr430_e1wfr1018.wv

IB_AMr430_e1wfr1019.wv

IB_AMr430_e1wfr1020.wv

IB_AMr430_e1wfr1021.wv

IB_AMr430_e1wfr1022.wv

IB_AMr430_e1wfr1023.wv

IB_AMr430_e1wfr1024.wv

IB_AMr430_e1wfr1025.wv

IB_AMr430_e1wfr1026.wv

IB_AMr430_e1wfr1027.wv

IB_FMr001_e1_cw_0_100.wv

IB_FMr001_e1_cw_0_m100.wv
 IB_FMr001_e1_cw_m275_0_275.wv
 IB_FMr001_e1_cw_m50_0.wv
 IB_FMr230a_e1wfa153.wv
 IB_FMr430_e1wfr1080.wv
 IB_FMr430_e1wfr1082.wv
 IB_FMr430_e1wfr1083.wv
 IB_FMr430_e1wfr1086.wv
 IB_FMr430_e1wfr1087.wv
 IB_FMr430_e1wfr1088.wv
 IB_FMr430_e1wfr1089.wv

4 removed waveform files

IB_AMr208_e0wfc33.wv
 IB_AMr208_e0wfc34.wv
 IB_FMr208j_e0wfa12.wv
 IB_FMr420c_e1wfr1080.wv

66 updated waveform files

Old file name	Name of replacement
IB_AM_e0_CW_dc.wv	IB_AM_e1a_CW_dc.wv
IB_AMr201_e0wfc52.wv	IB_AMr201_e1awfc52.wv
IB_AMr208_e0wfa05.wv	IB_AMr208_e1awfa05.wv
IB_AMr208_e0wfa07.wv	IB_AMr208_e1awfa07.wv
IB_AMr208_e0wfa10.wv	IB_AMr208_e1awfa10.wv
IB_AMr208_e0wfb01.wv	IB_AMr208_e1awfb01.wv
IB_AMr208_e0wfb02.wv	IB_AMr208_e1awfb02.wv
IB_AMr208_e0wfb03.wv	IB_AMr208_e1awfb03.wv
IB_AMr208_e0wfb04.wv	IB_AMr208_e1awfb04.wv
IB_AMr208_e0wfb05.wv	IB_AMr208_e1awfb05.wv
IB_AMr208_e0wfb102.wv	IB_AMr208_e1awfb102.wv
IB_AMr208_e0wfb104.wv	IB_AMr208_e1awfb104.wv
IB_AMr208_e0wfb111.wv	IB_AMr208_e1awfb111.wv
IB_AMr208_e0wfb113.wv	IB_AMr208_e1awfb113.wv
IB_AMr208_e0wfb119.wv	IB_AMr208_e1awfb119.wv

Old file name	Name of replacement
IB_AMr208_e0wfb121.wv	IB_AMr208_e1awfb121.wv
IB_AMr208_e0wfb124.wv	IB_AMr208_e1awfb124.wv
IB_AMr208_e0wfb126.wv	IB_AMr208_e1awfb126.wv
IB_AMr208_e0wfb128.wv	IB_AMr208_e1awfb128.wv
IB_AMr208_e0wfb130.wv	IB_AMr208_e1awfb130.wv
IB_AMr208_e0wfb131.wv	IB_AMr208_e1awfb131.wv
IB_AMr208_e0wfb132.wv	IB_AMr208_e1awfb132.wv
IB_AMr208_e0wfb134.wv	IB_AMr208_e1awfb134.wv
IB_AMr208_e0wfb135.wv	IB_AMr208_e1awfb135.wv
IB_AMr208_e0wfb145.wv	IB_AMr208_e1awfb145.wv
IB_AMr208_e0wfb243.wv	IB_AMr208_e1awfb243.wv
IB_AMr208_e0wfc00.wv	IB_AMr208_e1awfc00.wv
IB_AMr208_e0wfc04.wv	IB_AMr208_e1awfc04.wv
IB_AMr208_e0wfc06.wv	IB_AMr208_e1awfc06.wv
IB_AMr208_e0wfc08.wv	IB_AMr208_e1awfc08.wv
IB_AMr208_e0wfc10.wv	IB_AMr208_e1awfc10.wv
IB_AMr208_e0wfc11.wv	IB_AMr208_e1awfc11.wv
IB_AMr208_e0wfc19.wv	IB_AMr208_e1awfc19.wv
IB_AMr208_e0wfc20.wv	IB_AMr208_e1awfc20.wv
IB_AMr208_e0wfc23.wv	IB_AMr208_e1awfc23.wv
IB_AMr208_e0wfc24.wv	IB_AMr208_e1awfc24.wv
IB_AMr208_e0wfc26.wv	IB_AMr208_e1awfc26.wv
IB_AMr208_e0wfc27.wv	IB_AMr208_e1awfc27.wv
IB_AMr208_e0wfc29.wv	IB_AMr208_e1awfc29.wv
IB_AMr208_e0wfc30.wv	IB_AMr208_e1awfc30.wv
IB_AMr208_e0wfc31.wv	IB_AMr208_e1awfc31.wv
IB_AMr208_e0wfc32.wv	IB_AMr208_e1awfc32.wv
IB_AMr208a_e0wfb00.wv	IB_AMr208a_e1awfb00.wv
IB_AMr208a_e0wfb138.wv	IB_AMr208a_e1awfb138.wv
IB_AMr208a_e0wfc33.wv	IB_AMr208a_e1awfc33.wv
IB_AMr208a_e0wfc34.wv	IB_AMr208a_e1awfc34.wv
IB_AMr208c_e0wfa11.wv	IB_AMr208c_e1awfa11.wv
IB_AMr220_e0wfc28.wv	IB_AMr220_e1awfc28.wv

Old file name	Name of replacement
IB_AMr230_e0wfr1005.wv	IB_AMr230_e1awfr1005.wv
IB_AMr230a_e0wfr1001.wv	IB_AMr230a_e1awfr1001.wv
IB_AMr230a_e0wfr1002.wv	IB_AMr230a_e1awfr1002.wv
IB_AMr230b_e0wfc102.wv	IB_AMr230b_e1awfc102.wv
IB_AMr230d_e0wfr12.wv	IB_AMr230d_e1awfr12.wv
IB_FMr230a_e0wfr1002.wv	IB_FMr230a_e1wfr1003.wv
IB_FMr230a_e0wfr1003.wv	IB_FMr230a_e1wfr1004.wv
IB_FMr230a_e0wfr1004.wv	IB_FMr230a_e1wfr1005.wv
IB_FMr230a_e0wfr1005.wv	IB_FMr230a_e1wfr1006.wv
IB_FMr230a_e0wfr1006.wv	IB_FMr230a_e1wfr1007.wv
IB_FMr230a_e0wfr1007.wv	IB_FMr230a_e1wfr1008.wv
IB_FMr230a_e0wfr1008.wv	IB_FMr230a_e1wfr1009.wv
IB_FMr230a_e0wfr1009.wv	IB_FMr230a_e1wfr1011.wv
IB_FMr230a_e0wfr1011.wv	IB_FMr230a_e1wfr1012.wv
IB_FMr230a_e0wfr1012.wv	IB_FMr230a_e1wfr1013.wv
IB_FMr230a_e0wfr1013.wv	IB_FMr230a_e1wfr1037.wv
IB_FMr230a_e0wfr1037.wv	IB_FMr230b_e1wfr1002.wv
IB_FMr430_e1wfr1081.wv	IB_FMr430a_e1wfr1081.wv

2.2.3 Version 1.20

25 new waveform files

IB_AMr208_e0wfc20.wv

IB_AMr230_e0wfr1005.wv

IB_FMr001_e1_cw_0_m200.wv

IB_FMr001_e1_cw_10_20.wv

IB_FMr001_e1_cw_50_100.wv

IB_FMr001_e1_cw_m80_m90.wv

IB_FMr208c_e0wfc210.wv

IB_FMr208c_e0wfc90.wv

IB_FMr230_e0wfc14.wv

IB_FMr230_e0wfr1061.wv

IB_FMr230a_e0wfr1037.wv

IB_FMr230b_e0wfr1024.wv
 IB_FMr230c_e0wfd204.wv
 IB_FMr230c_e0wfr1022.wv
 IB_FMr230c_e0wfr1032.wv
 IB_FMr230d_e0wfa78.wv
 IB_FMr230f_e0wfr1023.wv
 IB_FMr420c_e1wfr1080.wv
 IB_FMr430_e1wfr1070.wv
 IB_FMr430_e1wfr1071.wv
 IB_FMr430_e1wfr1072.wv
 IB_FMr430_e1wfr1073.wv
 IB_FMr430_e1wfr1074.wv
 IB_FMr430_e1wfr1075.wv
 IB_FMr430_e1wfr1081.wv

11 updated waveform files

Old file name	Name of replacement
IB_AMr208_e0wfb01.wv	IB_AMr208_e0wfc20.wv
IB_AMr230a_e0wfr1001.wv	IB_AMr230_e0wfr1001.wv
IB_AMr230a_e0wfr1002.wv	IB_AMr230_e0wfr1002.wv
IB_AMr230b_e0wfc102.wv	IB_AMr230a_e0wfc102.wv
IB_AMr230d_e0wfr12.wv	IB_AMr208a_e0wfa12.wv
IB_FMr208d_e0wfa141.wv	IB_FMr208c_e0wfa141.wv
IB_FMr208j_e0wfa12.wv	IB_FMr220a_e0wfa12.wv
IB_FMr230_e0wfr143.wv	IB_FMr208d_e0wfa143.wv
IB_FMr230a_e0wfc102.wv	IB_FMr230_e0wfc102.wv
IB_FMr230b_e0wfr1010.wv	IB_FMr230a_e0wfr1010.wv
IB_FMr230d_e0wfr1025.wv	IB_FMr230c_e0wfr1025.wv

2.2.4 Version 1.00

Initial release.

2.3 System Requirements

The waveforms files can be played on the instruments listed below. The instrument must be equipped with the options listed in the [Table 2-1](#).

- R&S SMU200A Vector Signal Generator



- R&S SMBV100A Vector Signal Generator



- R&S SMJ100A Vector Signal Generator



Table 2-1: Required options

Option name	Description
<ul style="list-style-type: none"> • R&S SMU/SMJ-B9/B10 • R&S SMBV-B10/51 and -K511 	<ul style="list-style-type: none"> • Baseband Generator • Baseband Generator with Memory Extension
R&S SMx/AFQ-K352	HD Radio™ test waveforms

x = U for R&S SMU, J for R&S SMJ, BV for R&S SMBV

For information on the order number of an option refer to the data sheet.

2.4 Installation Instructions



The files are encrypted for reasons of protection. Copying or recording the waveforms files with the intention of using them on another playback device is prohibited!

If the waveforms files are supplied together with a new instrument, the waveforms files and the license key are already installed.

To install the HD Radio™ waveforms files on your instrument, proceed as described below.


1. Copy the waveforms files from the DVDs to USB stick, external USB HDD, or use the DVD with an external USB DVD drive.
2. Connect the USB stick, USB HDD or the external USB DVD drive to USB connector of the instrument.
3. Copy the waveforms files to the instrument target directory.
4. Enable the HD Radio™ option to play the encrypted files.
At your instrument, select "Setup > Install SW Options > Option Key" and enter the key code.

2.5 Enabling the R&S SMBV to play the HD Radio™ waveforms files

To play the HD Radio™ waveforms files on your instrument, proceed as described below.

1. Press the PRESET key.
SCPI command: `*RST`


The instrument's settings will be adjust to a standard set of operating conditions.
2. Select "AWGN/IMP > Analog I/Q Out Settings" and set the parameter "I/Q Level Vp (EMF)" to 0.25 V to meet the RF requirements for this option.

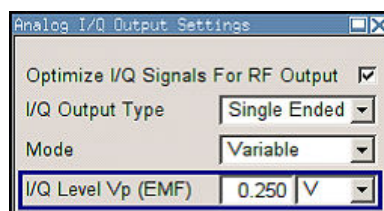


SCPI command: `SOUR:IQ:OUTP:LEV 0.25`

3. Select "Baseband block > ARB".

Enabling the R&S SMBV to play the HD Radio™ waveforms files

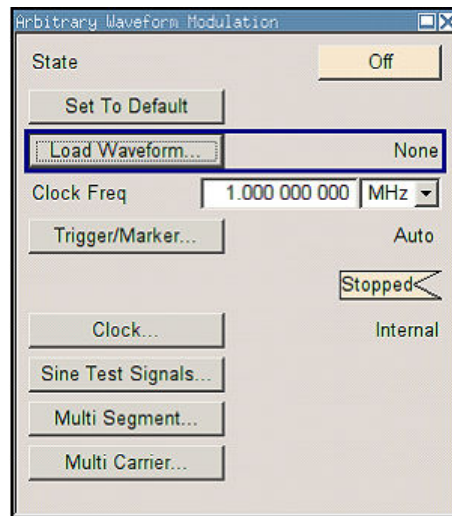


4. Select "Load Waveform" button, navigate to the directory with the HD Radio™ waveforms files (for instance "/hdd/ARB/HDRadio") and select a file from the list. Only files with extension * .wv are displayed.

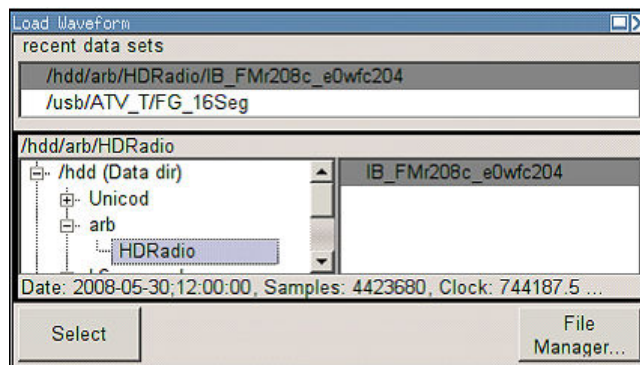

SCPI command: SOUR:BB:ARB:WAV:SEL
'hdd/ARB/HDRadio/IB_FMr208c_e0wfc204.wv'

The name of the selected file and the clock frequency are displayed in the "ARB" dialog.

Enabling the R&S SMU/SMJ to play the HD Radio™ waveforms files

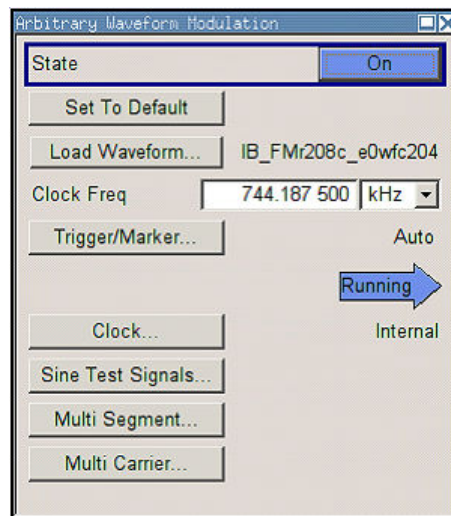

5. Set the "State" to ON to enable ARB modulation.

SCPI command: `SOUR:BB:ARB:STAT ON`

The R&S SMBV process the selected waveform file.

2.6 Enabling the R&S SMU/SMJ to play the HD Radio™ waveforms files

To play the HD Radio™ waveforms files on your instrument, proceed as described below.

1. Press the PRESET key.

SCPI command: `*RST`


The instrument's settings will be adjust to a standard set of operating conditions.

2. Select "Baseband block > ARB".

Enabling the R&S SMU/SMJ to play the HD Radio™ waveforms files



3. Select "Load Waveform" button, navigate to the directory with the HD Radio™ waveforms files (for instance "d:/ARB/HDRadio") and select a file from the list. Only files with extension *.wv are displayed.

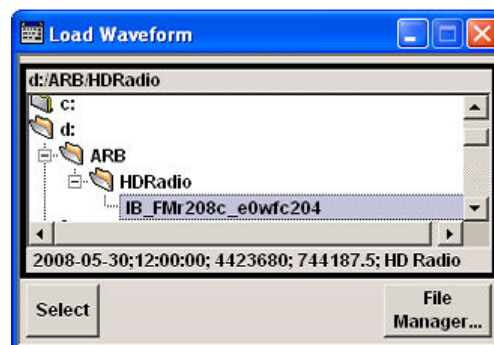


SCPI command:

```
SOUR:BB:ARB:WAV:SEL 'd:/ARB/HDRadio/IB_FMr208c_e0wfc204.wv'
```

The name of the selected file and the clock frequency are displayed in the "ARB" dialog.

Enabling the R&S SMU/SMJ to play the HD Radio™ waveforms files

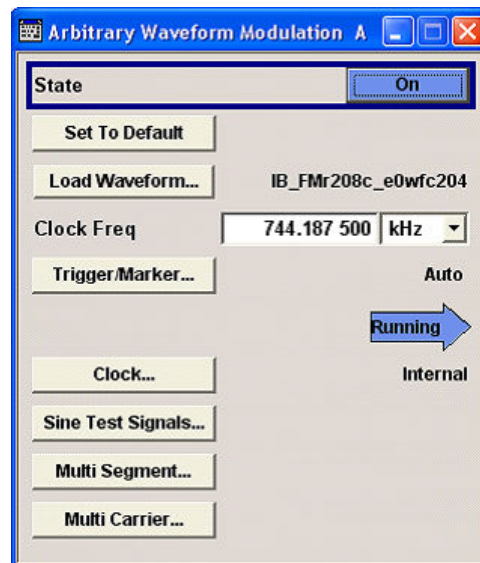

4. Set the "State" to ON to enable ARB modulation.

SCPI command: `SOUR:BB:ARB:STAT ON`

The R&S Signal Generator process the selected waveform file.

3 Available Waveform Files

The disk contains 3 folders with the available waveform files. For details on the waveform files contact the iBiquity Digital Corporation.

3.1 AM Folder

Contains the following waveform files, listed in alphabetical order:

IB_AM_e1_awgn.wv
IB_AM_e1a_CW_dc.wv
IB_AMr001_e1_cw_0_m10.wv
IB_AMr001_e1_cw_2_6.wv
IB_AMr001_e1_cw_m1_m2.wv
IB_AMr001_e1_cw_m30_0_30.wv
IB_AMr001_e1_cw_m7p5_10.wv
IB_AMr201_e1awfc52.wv
IB_AMr201_e1awfr1190.wv
IB_AMr208_e1awfa05.wv
IB_AMr208_e1awfa07.wv
IB_AMr208_e1awfa10.wv
IB_AMr208_e1awfb01.wv
IB_AMr208_e1awfb02.wv
IB_AMr208_e1awfb03.wv
IB_AMr208_e1awfb04.wv
IB_AMr208_e1awfb05.wv
IB_AMr208_e1awfb102.wv
IB_AMr208_e1awfb104.wv
IB_AMr208_e1awfb111.wv
IB_AMr208_e1awfb113.wv
IB_AMr208_e1awfb119.wv
IB_AMr208_e1awfb121.wv
IB_AMr208_e1awfb124.wv
IB_AMr208_e1awfb126.wv
IB_AMr208_e1awfb128.wv

IB_AMr208_e1awfb130.wv
IB_AMr208_e1awfb131.wv
IB_AMr208_e1awfb132.wv
IB_AMr208_e1awfb134.wv
IB_AMr208_e1awfb135.wv
IB_AMr208_e1awfb145.wv
IB_AMr208_e1awfb243.wv
IB_AMr208_e1awfc00.wv
IB_AMr208_e1awfc04.wv
IB_AMr208_e1awfc06.wv
IB_AMr208_e1awfc08.wv
IB_AMr208_e1awfc10.wv
IB_AMr208_e1awfc11.wv
IB_AMr208_e1awfc19.wv
IB_AMr208_e1awfc20.wv
IB_AMr208_e1awfc23.wv
IB_AMr208_e1awfc24.wv
IB_AMr208_e1awfc26.wv
IB_AMr208_e1awfc27.wv
IB_AMr208_e1awfc29.wv
IB_AMr208_e1awfc30.wv
IB_AMr208_e1awfc31.wv
IB_AMr208_e1awfc32.wv
IB_AMr208_e1awfr1221.wv
IB_AMr208_e1awfr1249.wv
IB_AMr208_e1awfr1260.wv
IB_AMr208a_e1awfb00.wv
IB_AMr208a_e1awfb138.wv
IB_AMr208a_e1awfc33.wv
IB_AMr208a_e1awfc34.wv
IB_AMr208b_e1awf1123.wv
IB_AMr208c_e1awf1124.wv
IB_AMr208c_e1awfa11.wv

IB_AMr220_e1awfc28.wv
IB_AMr230_e1awfr1005.wv
IB_AMr230_e1awfr1187.wv
IB_AMr230_e1awfr1261.wv
IB_AMr230a_e1awfr1001.wv
IB_AMr230a_e1awfr1002.wv
IB_AMr230b_e1awfc102.wv
IB_AMr230d_e1awfr12.wv
IB_AMr430_e1wfr1016.wv
IB_AMr430_e1wfr1017.wv
IB_AMr430_e1wfr1018.wv
IB_AMr430_e1wfr1019.wv
IB_AMr430_e1wfr1020.wv
IB_AMr430_e1wfr1021.wv
IB_AMr430_e1wfr1022.wv
IB_AMr430_e1wfr1023.wv
IB_AMr430_e1wfr1024.wv
IB_AMr430_e1wfr1025.wv
IB_AMr430_e1wfr1026.wv
IB_AMr430_e1wfr1027.wv
IB_AMr430_e1wfr1028.wv
IB_AMr440_e1wfr1116.wv
IB_AMr440_e1wfr1117.wv

3.2 CC Folder

Contains the following waveform files, listed in alphabetical order:

CC_TTN_FMr440a_e1wfr001.wv
CC_TTN_FMr440a_e1wfr002.wv
CC_TTN_FMr440a_e1wfr003.wv
CC_TTN_FMr440a_e1wfr004.wv
CC_TTN_FMr440a_e1wfr005.wv
CC_TTN_FMr440a_e1wfr006.wv

CC_TTN_FMr440a_e1wfr007.wv
CC_TTN_FMr440a_e1wfr008.wv
CC_TTN_FMr440a_e1wfr009.wv
CC_TTN_FMr440a_e1wfr010.wv
CC_TTN_FMr440a_e1wfr011.wv
CC_TTN_FMr440a_e1wfr012.wv
CC_TTN_FMr440a_e1wfr013.wv
CC_TTN_FMr440a_e1wfr014.wv
CC_TTN_FMr440a_e1wfr015.wv
CC_TTN_FMr440a_e1wfr016.wv
CC_TTN_FMr440a_e1wfr017.wv
CC_TTN_FMr440a_e1wfr018.wv
CC_TTN_FMr440a_e1wfr019.wv
CC_TTN_FMr440a_e1wfr019b.wv
CC_TTN_FMr440a_e1wfr020.wv
CC_TTN_FMr440a_e1wfr020b.wv
CC_TTN_FMr440a_e1wfr021.wv
CC_TTN_FMr440a_e1wfr022.wv
CC_TTN_FMr440a_e1wfr023.wv
CC_TTN_FMr440a_e1wfr024.wv
CC_TTN_FMr440a_e1wfr025.wv
CC_TTN_FMr440a_e1wfr026.wv
CC_TTN_FMr440a_e1wfr027.wv
CC_TTN_FMr440a_e1wfr028.wv
CC_TTN_FMr440a_e1wfr029.wv
CC_TTN_FMr440a_e1wfr030.wv
CC_TTN_FMr440a_e1wfr031.wv
CC_TTN_FMr440a_e1wfr032.wv
CC_TTN_FMr440a_e1wfr033.wv
CC_TTN_FMr440a_e1wfr034.wv
CC_TTN_FMr440a_e1wfr035.wv
CC_TTN_FMr440a_e1wfr036.wv
CC_TTN_FMr440a_e1wfr037.wv

CC_TTN_FMr440a_e1wfr038.wv
CC_TTN_FMr440a_e1wfr039.wv
CC_TTN_FMr440a_e1wfr040.wv
CC_TTN_FMr440a_e1wfr041.wv
CC_TTN_FMr440a_e1wfr042.wv
CC_TTN_FMr440a_e1wfr043.wv
CC_TTN_FMr440a_e1wfr044.wv
CC_TTN_FMr440a_e1wfr045.wv
CC_TTN_FMr440a_e1wfr046.wv
CC_TTN_FMr440a_e1wfr047.wv
CC_TTN_FMr440a_e1wfr048.wv
CC_TTN_FMr440a_e1wfr049.wv
CC_TTN_FMr440a_e1wfr049b.wv
CC_TTN_FMr440a_e1wfr050.wv
CC_TTN_FMr440a_e1wfr050b.wv
CC_TTN_FMr440a_e1wfr051.wv
CC_TTN_FMr440a_e1wfr051b.wv
CC_TTN_FMr440a_e1wfr052.wv
CC_TTN_FMr440a_e1wfr053.wv
CC_TTN_FMr440a_e1wfr054.wv
CC_TTN_FMr440a_e1wfr055.wv
CC_TTN_FMr440a_e1wfr056.wv
CC_TTN_FMr440a_e1wfr057.wv
CC_TTN_FMr440a_e1wfr058.wv
CC_TTN_FMr440a_e1wfr065.wv
CC_TTN_FMr440a_e1wfr070.wv
CC_TTN_FMr440a_e1wfr071.wv
CC_TTN_FMr440a_e1wfr072.wv

3.3 FM Folder

Contains the following waveform files, listed in alphabetical order:

CC_FMr440_e1wfr015_HighDataRate.wv

CC_FMr440d_e1wfr011.wv
CC_FMr440d_e1wfr012.wv
CC_FMr440d_e1wfr013.wv
CC_FMr440d_e1wfr014.wv
IB_FM_e1_awgn.wv
IB_FM_e1_CW_dc.wv
IB_FMr001_e1_cw_0_100.wv
IB_FMr001_e1_cw_0_m100.wv
IB_FMr001_e1_cw_0_m200.wv
IB_FMr001_e1_cw_10_20.wv
IB_FMr001_e1_cw_50_100.wv
IB_FMr001_e1_cw_m275_0_275.wv
IB_FMr001_e1_cw_m50_0.wv
IB_FMr001_e1_cw_m80_m90.wv
IB_FMr201_e1wfc52.wv
IB_FMr201_e1wfr1189.wv
IB_FMr208_e1wfr1122.wv
IB_FMr208_e1wfr1185.wv
IB_FMr208_e1wfr1246.wv
IB_FMr208_e1wfr1247.wv
IB_FMr208_e1wfr1248.wv
IB_FMr208c_e1wfa05.wv
IB_FMr208c_e1wfa25.wv
IB_FMr208c_e1wfa98.wv
IB_FMr208c_e1wfa99.wv
IB_FMr208c_e1wfc00.wv
IB_FMr208c_e1wfc03.wv
IB_FMr208c_e1wfc08.wv
IB_FMr208c_e1wfc09.wv
IB_FMr208c_e1wfc10.wv
IB_FMr208c_e1wfc201.wv
IB_FMr208c_e1wfc203.wv
IB_FMr208c_e1wfc204.wv

IB_FMr208c_e1wfc206.wv
IB_FMr208c_e1wfc209.wv
IB_FMr208c_e1wfc210.wv
IB_FMr208c_e1wfc211.wv
IB_FMr208c_e1wfc227.wv
IB_FMr208c_e1wfc230.wv
IB_FMr208c_e1wfc27.wv
IB_FMr208c_e1wfc28.wv
IB_FMr208c_e1wfc30.wv
IB_FMr208c_e1wfc46.wv
IB_FMr208c_e1wfc546.wv
IB_FMr208c_e1wfc547.wv
IB_FMr208c_e1wfc548.wv
IB_FMr208c_e1wfc90.wv
IB_FMr208d_e1wfa141.wv
IB_FMr208d_e1wfc208.wv
IB_FMr208d_e1wfc538.wv
IB_FMr208d_e1wfc540.wv
IB_FMr208d_e1wfc542.wv
IB_FMr208d_e1wfc549.wv
IB_FMr208e_e1wfc12.wv
IB_FMr208e_e1wfc13.wv
IB_FMr208g_e1wfc94.wv
IB_FMr208i_e1wfa58.wv
IB_FMr208j_e1wfa105.wv
IB_FMr208j_e1wfa106.wv
IB_FMr208j_e1wfa107.wv
IB_FMr208j_e1wfa109.wv
IB_FMr208j_e1wfa11.wv
IB_FMr208j_e1wfc31.wv
IB_FMr208j_e1wfc89.wv
IB_FMr220_e1wfa108.wv
IB_FMr220a_e1wfc100.wv

IB_FMr220a_e1wfc101.wv
IB_FMr220a_e1wfc553.wv
IB_FMr220a_e1wfc555.wv
IB_FMr220b_e1wfr1119.wv
IB_FMr220c_e1wfr1191.wv
IB_FMr230_e1wfc14.wv
IB_FMr230_e1wfr1061.wv
IB_FMr230_e1wfr143.wv
IB_FMr230a_e1wfa153.wv
IB_FMr230a_e1wfc102.wv
IB_FMr230a_e1wfr1000.wv
IB_FMr230a_e1wfr1001.wv
IB_FMr230a_e1wfr1003.wv
IB_FMr230a_e1wfr1004.wv
IB_FMr230a_e1wfr1005.wv
IB_FMr230a_e1wfr1006.wv
IB_FMr230a_e1wfr1007.wv
IB_FMr230a_e1wfr1008.wv
IB_FMr230a_e1wfr1009.wv
IB_FMr230a_e1wfr1011.wv
IB_FMr230a_e1wfr1012.wv
IB_FMr230a_e1wfr1013.wv
IB_FMr230a_e1wfr1037.wv
IB_FMr230b_e1wfr1002.wv
IB_FMr230b_e1wfr1010.wv
IB_FMr230b_e1wfr1024.wv
IB_FMr230c_e1wfd204.wv
IB_FMr230c_e1wfr1022.wv
IB_FMr230c_e1wfr1032.wv
IB_FMr230d_e1wfa78.wv
IB_FMr230d_e1wfr1025.wv
IB_FMr230f_e1wfr1023.wv
IB_FMr430_e1wfr1070.wv

IB_FMr430_e1wfr1071.wv
IB_FMr430_e1wfr1072.wv
IB_FMr430_e1wfr1073.wv
IB_FMr430_e1wfr1074.wv
IB_FMr430_e1wfr1075.wv
IB_FMr430_e1wfr1080.wv
IB_FMr430_e1wfr1082.wv
IB_FMr430_e1wfr1083.wv
IB_FMr430_e1wfr1086.wv
IB_FMr430_e1wfr1087.wv
IB_FMr430_e1wfr1088.wv
IB_FMr430_e1wfr1089.wv
IB_FMr430_e1wfr1090.wv
IB_FMr430_e1wfr1091.wv
IB_FMr430_e1wfr1092.wv
IB_FMr430_e1wfr1093.wv
IB_FMr430_e1wfr1094.wv
IB_FMr430_e1wfr1095.wv
IB_FMr430_e1wfr1096.wv
IB_FMr430_e1wfr1097.wv
IB_FMr430_e1wfr1098.wv
IB_FMr430_e1wfr1099.wv
IB_FMr430_e1wfr1100.wv
IB_FMr430_e1wfr1101.wv
IB_FMr430_e1wfr1102.wv
IB_FMr430_e1wfr1152.wv
IB_FMr430a_e1wfr1081.wv
IB_FMr430a_e1wfr1085.wv
IB_FMr440_e1wfr1111.wv
IB_FMr440_e1wfr1112.wv
IB_FMr440_e1wfr1113.wv
IB_FMr440_e1wfr1114.wv
IB_FMr440_e1wfr1115.wv

IB_FMr440_e1wfr1243.wv

IB_FMr440_e1wfr1251.wv

IB_FMr440_e1wfr1252.wv

IB_FMr440_e1wfr1253.wv

IB_FMr440_e1wfr1254.wv

IB_FMr440_e1wfr1255.wv

Index

A

Application cards	6
Application notes	6
ARB	18, 20

B

Brochures	6
-----------------	---

D

Data sheets	6
Documentation overview	5

H

HD Radio System Requirements	17
Help	5

I

Installation Instructions	17
Instrument help	5
Instrument security procedures	6

K

K352 HD Radio test waveforms	17
------------------------------------	----

O

Open source acknowledgment	6
OSA	6

P

Preset	18, 20
--------------	--------

Q

Quick start guide	5
-------------------------	---

R

Release notes	6
Required options	17

S

Safety instructions	6
Service manual	5
System Requirements	17

U

User manual	5
-------------------	---

W

Waveforms files	23
Waveforms Files	18, 20
White papers	6