

R&S®FSVA3000 / R&S®FSV3000

Signal and Spectrum Analyzer

Instrument Security Procedures



1179009702
Version 04

ROHDE & SCHWARZ
Make ideas real



This document describes the types of memory and their use in the R&S®FSVA3000 / R&S®FSV3000. While every effort has been made to ensure the accuracy of the information herein, it is provided without warranty. Design iteration and revisions may result in minor differences between the information provided here and your product.

© 2022 Rohde & Schwarz GmbH & Co. KG
Muehldorfstr. 15, 81671 Muenchen, Germany
Phone: +49 89 41 29 - 0
Email: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

1179.0097.02 | Version 04 | R&S®FSVA3000 / R&S®FSV3000

The following abbreviations are used throughout this manual: R&S®FSVA3000 is abbreviated as R&S FSV/A. R&S®FSV3000 is abbreviated as R&S FSV. R&S FSV/A refers to both the R&S FSV3000 and the R&S FSV/A3000.

Contents

1 Overview	3
2 Instrument models covered	4
3 Security terms and definitions	4
4 Statement of volatility	5
5 Instrument sanitization procedure	7
6 Operability outside the secured area	10
7 Validity of instrument calibration after sanitization	11
8 Special security features	11
Glossary	13
Index	13

1 Overview

Securing important information is crucial in many applications.

Generally, highly secured environments do not allow any test equipment to leave the area unless it can be proven that no user information leaves with the test equipment, e.g. to be calibrated.

"Regarding sanitization, the principal concern is ensuring that data is not unintentionally released" [1].

This document provides a statement regarding the volatility of the memory types used and specifies the steps required to sanitize an instrument.

The procedures in this document follow "NIST Special Publication 800-88: Guidelines for Media Sanitization" [1].

In addition, recommendations are provided to safeguard information on the R&S FSV/A.

References

See the following literature for further information.

- [1] **Kissel Richard L. [et al.]** Guidelines for Media Sanitization = Special Publication (NIST SP) = NIST SP - 800-88 Rev 1. - Gaithersburg : [s.n.], December 17, 2014.
- [2] **National Industrial Security Program Authorization Office** Defense Security Service (DSS) Assessment and Authorization Process Manual (DAAPM). - May 6, 2019.
- [3] **ACSC Australian Cyber Security Centre** Australian Government Information Security Manual, January 2020.

2 Instrument models covered

Product name	Order number
R&S®FSV3004	1330.5000.04
R&S®FSV3007	1330.5000.07
R&S®FSV3013	1330.5000.13
R&S®FSV3030	1330.5000.30
R&S®FSV3044	1330.5000.43
R&S®FSV3050	1330.5000.50
R&S®FSVA3004	1330.5000.05
R&S®FSVA3007	1330.5000.08
R&S®FSVA3013	1330.5000.14
R&S®FSVA3030	1330.5000.31
R&S®FSVA3044	1330.5000.44
R&S®FSVA3050	1330.5000.51

3 Security terms and definitions

Terms defined in Guidelines for Media Sanitization

According to NIST Special Publication 800-88 [1]: "Sanitization is a process to render access to target data (the data subject to the sanitization technique) on the media infeasible for a given level of recovery effort." It defines the following categories of sanitization:

- **"Sanitization"**
"Media sanitization refers to a process that renders access to target data on the media infeasible for a given level of effort."
- **"Clear"**

"Clear applies logical techniques to sanitize data in all user-addressable storage locations for protection against simple non-invasive data recovery techniques; typically applied through the standard Read and Write commands to the storage device, such as by rewriting with a new value or using a menu option to reset the device to the factory state (where rewriting is not supported)."

- **"Purge"**
"Purge applies physical or logical techniques that render Target Data recovery infeasible using state of the art laboratory techniques."
- **"Destroy"**
"Destroy renders Target Data recovery infeasible using state of the art laboratory techniques and results in the subsequent inability to use the media for storage of data."

Control of media

Another option to secure sensitive information is to keep physical media within the classified area, see [\[1\]](#), paragraph 4.4.

Volatile memory

"Memory components that do not retain data after removal of all electrical power sources, and when reinserted into a similarly configured system, are considered volatile memory components." [\[2\]](#)

Typical examples are RAM, e.g. SDRAM.

Non-volatile memory

"Components that retain data when all power sources are discontinued are non-volatile memory components." [\[2\]](#).

In the context of this document, non-volatile memory components are non-user accessible internal memory types, e.g. EEPROM, Flash, etc.

Media

Media are types of non-volatile memory components. In the context of this document, media are user-accessible and retain data when you turn off power.

Media types are Hard Disk Drives (HDD), Solid State Drives (SSD), Memory Cards, e.g. SD, microSD, CFast, etc., USB removable media, e.g. Pen Drives, Memory Sticks, Thumb Drives, etc. and similar technologies.

4 Statement of volatility

The R&S FSV/A contains various memory components. See the subsequent sections for a detailed description regarding type, size, usage and location.



Notes on memory sizes

Due to the continuous development of memory components, the listed values of memory sizes may not represent the current, but the minimal configuration.

4.1 Volatile memory

Volatile memory modules are considered as non-accessible internal storage devices, as described in [Security terms and definitions > Volatile memory](#).

Table 4-1: Types of volatile memory

Memory type	Location	Size	Content / Function	User modifiable
SDRAM	CPU board	8 Gbyte (IPC11/1) 16 Gbyte (IPC11/4 or IPS14)	Temporary information storage for operating system and instrument firmware	Yes
SDRAM/DDR4	Motherboard	2 Gbyte	Measurement data	Yes
SDRAM/DDR4	B200/-B400/-B600 bandwidth extension option	6 Gbyte	Measurement data	Yes
SDRAM/DDR4	B1000 bandwidth ext. opt.	12 Gbyte	Measurement data	Yes

4.2 Non-volatile memory

Non-volatile memory modules are considered as non-accessible internal storage devices, as described in [Security terms and definitions > Non-volatile memory](#).

Table 4-2: Types of non-volatile memory

Memory type	Location	Size	Content / Function	User modifiable
EEPROM	Board assembly	≤ 1 Mbyte	Hardware information: <ul style="list-style-type: none"> Serial number Product options Calibration correction data 	No
Flash	CPU board	8 Mbyte	BIOS	No
Flash	Frontend	4 Mbyte	Module-specific data: <ul style="list-style-type: none"> Serial number Product options Board internal correction data FPGA bitstream data 	No
Flash	Microwave converter	4 Mbyte		
Flash	Motherboard	32 Mbyte		
Flash	B200/-B400/-B600 bandwidth extension option	64 Mbyte		
Flash	B1000 bandwidth ext. opt.	128 Mbyte		
Flash	10Gbit/s LAN interface option (R&S FSV3-B6)	4 Mbyte	<ul style="list-style-type: none"> IP address MAC address 	No

4.3 Media

Media memory modules are considered as non-volatile storage devices, as described in [Security terms and definitions > Media](#).

Table 4-3: Types of media memory modules

Memory type	Location	Size	Content / Function	User modifiable
Standard configuration without option R&S FSV3-B20 (removable hard drive)				
Solid-state drive (SSD) (removable)	CPU board	Variable	<ul style="list-style-type: none"> • Operating system • Instrument firmware and firm-ware options with license keys • Instrument states and setups • Trace data • Limit lines, transducer tables • Screen images 	Yes
Configuration with option R&S FSV3-B20 (removable hard drive)				
CFAST memory card (removable)	Front of the R&S FSV/A	64 Gbyte	<ul style="list-style-type: none"> • Operating system • Instrument firmware and firm-ware options with license keys • Instrument states and setups • Trace data • Limit lines, transducer tables • Screen images 	Yes

5 Instrument sanitization procedure

[Figure 5-1](#) illustrates the different types of data storage and sanitization procedures, depending on the options the instrument is equipped with.

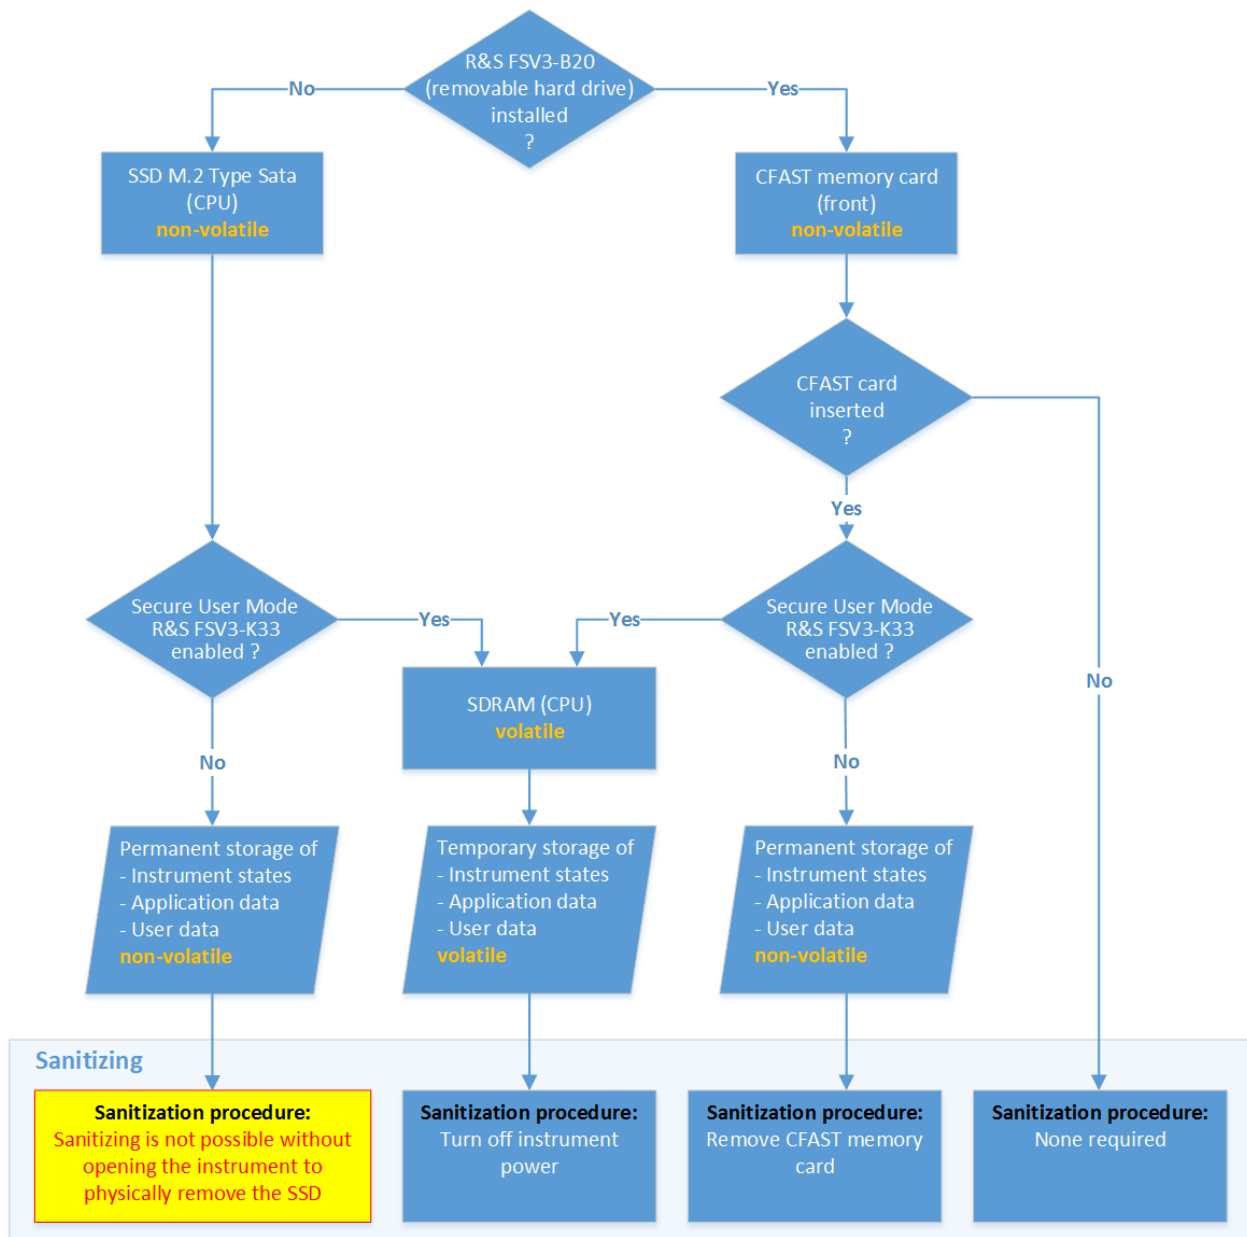


Figure 5-1: Sanitizing overview: R&S FSV/A with and without R&S FSV3-B18/-B20 (removable hard drive) and R&S FSV3-K33

5.1 Volatile memory

You can [purge](#) the volatile memory by following the procedure below. The sanitizing procedure complies to the definition of NIST [1], see "[Terms defined in Guidelines for Media Sanitization](#)" on page 4.

Removing power

To turn off and remove power

1. Turn off the R&S FSV/A.
2. Disconnect the power plug.

Provided the instrument remains without power for at least five minutes, all volatile memory modules lose their contents, see [1].

5.2 Non-volatile memory

The non-volatile memories do not contain user data. Therefore no sanitization procedure is required.

5.3 Media

The R&S FSV/A can be equipped exclusively with one of the following non-volatile storage devices to store user-modifiable data:

- Removable solid-state drive (SSD)
- Removable CFAST memory card (option R&S FSV3-B18/B20)

R&S FSV/A equipped with a removable solid-state drive (SSD)

The internal SSD memory module is located on the CPU board. Thus, sanitizing is not possible without physically removing the SSD, which requires opening the instrument. Only trained service personnel is allowed to open the R&S FSV/A.

However, you can equip the R&S FSV/A with the option R&S FSV3-K33 (security write protection of solid state drive), which allows you to enable the [Secure User Mode](#). If enabled, the R&S FSV/A redirects user data and instrument setups to the volatile memory (SDRAM). In this case, the sanitization procedure is to turn off the instrument and remove power.

See also [Chapter 8.2, "Secure User Mode \(R&S FSV/A-K33\)"](#), on page 12.

To remove the CFAST memory card (R&S FSV3-B18/B20)

1. **NOTICE!** Do not remove the CFAST memory card during operation as data can get lost.
Turn off the R&S FSV/A.
2. Locate the CFAST memory card on the front panel.



Figure 5-2: Location of the CFAST memory card

3. Press the CFAST memory card to release it from the instrument.
4. Pull out the CFAST memory card from the R&S FSV/A.
5. Keep the CFAST memory card under organizational control.

6 Operability outside the secured area

As the solid-state drive or the CFAST memory card holds the operating system, the R&S FSV/A cannot be operated without one of them.

The solid-state drive can only be removed by Rohde & Schwarz service personnel. For instruments equipped with the solid-state drive, no special requirements apply for operation outside the secured area.

For instruments equipped with the CFAST memory card, Rohde & Schwarz provides a separate removable CFAST memory card (option R&S FSV3-B18) for servicing and calibration. This CFAST memory card contains the operating system and required instrument data.

To restore operability outside the secured area

1. Insert a second non-classified CFAST memory card (R&S FSV3-B18).
This memory card enables the R&S FSV/A to start the operating system.
2. Turn on the R&S FSV/A.
3. Perform a self-alignment as described in [Chapter 7, "Validity of instrument calibration after sanitization"](#), on page 11 or ["Securing Self Alignment Data when Secure User Mode is enabled"](#) on page 12 if Secure User Mode (R&S FSV/A-K33) is enabled.

The instrument is ready for use.

To return to the secured area

Before re-entering the secured area:

- ▶ Remove the non-classified CFAST memory card, if necessary.

To restore operability inside secured area

1. Install the classified CFAST memory card.
2. Connect the instrument to the power supply.

The R&S FSV/A is ready for use.

7 Validity of instrument calibration after sanitization

The EEPROM is the only memory type used to hold permanent adjustment values required to maintain the validity of the R&S FSV/A's calibration. Therefore, the sanitizing procedure does not affect the validity of the instrument's calibration.

After exchanging the optional removable CFAST memory card, perform a self-alignment once:



Ensure that the instrument has sufficient warm-up time before you perform the self-alignment.

1. Select the [SETUP] key.
2. Select the "Alignment" softkey.
3. Select "Start Self Alignment"

This function uses the high-stability internal reference generator to produce the temporary adjustment values. Using the permanent and temporary values, the necessary adjustment information is then stored on the removable CFAST memory card. Rohde & Schwarz recommends that you perform the self-alignment function once a week.

8 Special security features

This section leads you to the information on how to use the security features to protect the R&S FSV/A from unauthorized access of classified information saved or displayed in the instrument.

The user manual is provided for download on the product page at <https://www.rohde-schwarz.com/manual/fsv3000/> and www.rohde-schwarz.com/manual/fsva3000.html.

8.1 Considerations for USB interfaces

USB ports can pose a security risk in high-security locations. Generally, this risk comes from small USB pen drives, also known as memory sticks or key drives. They can be easily concealed and can quickly read or write several Gbyte of data.

You can disable the write capability on the USB ports of the R&S FSV/A via a utility software. This utility software is available on the R&S FSV/A website https://www.rohde-schwarz.com/manual/r-s-fsva3000-fsv3000-instrument-security-manuals-gb1_78701-616614.html.

To disable the write capability, copy the utility software to the R&S FSV/A and run it once. After a reboot of the instrument, the write capability to any USB memory device is disabled.

8.2 Secure User Mode (R&S FSV/A-K33)

If it is not possible to remove the SSD and store it securely, or if users must not obtain knowledge of other user's data, an optional Secure User Mode (R&S FSV/A-K33, Security write protection of solid state drive) is available. In Secure User Mode, the SSD is write-protected so that no information can be written to memory permanently. Data that the R&S FSV/A normally stores on the SSD is redirected to volatile memory instead, which is not a security concern.

Data that is stored in volatile memory can be accessed by the user just as in normal operation. However, when the instrument's power is removed, all data in this memory is cleared. Thus, in Secure User Mode, the instrument always starts in a defined, fixed state when switched on.

Securing Self Alignment Data when Secure User Mode is enabled

When the secure user mode (R&S FSV/A-K33) is enabled, the R&S FSV/A redirects the self alignment data to the volatile memory (SDRAM). The SDRAM memory loses its data when you power off the instrument.



Ensure that the instrument has sufficient warm-up time before you perform the self-alignment.

To make sure that no self alignment data is lost, follow the instructions closely:

1. Deactivate the write protection of the SSD to allow the alignment data to be saved on the SSD. The write protection is disabled by deactivating the secure user mode (requires administrator login):

Note: If you do not remove the write protection first, the self alignment data is lost when you power off the instrument. As a result, the measurement values can deviate later on.

- a) Select [SETUP] > "System Configuration".

- b) In the "Config" tab, select "Secure User Mode > Off".
This change does not take effect until you have restarted the instrument.
 - c) Reboot the R&S FSV/A.
 2. Perform the self-alignment:
 - a) Select [SETUP] > "Alignment".
 - b) Select "Start Self Alignment".

Once the system correction values have been calculated successfully, the R&S FSV/A prompts a message.

The R&S FSV/A saves the self-alignment data on the SSD.
- To reactivate the secure user mode:
1. Select [SETUP] > "System Configuration".
 2. In the "Config" tab, select "Secure User Mode": "On".
 3. Reboot the R&S FSV/A to apply the change.

Glossary

C

CFast: Compact Fast - compact flash mass memory device.

D

DRAM: Dynamic Random Access Memory.

H

HDD: Hard disk drive.

M

microSD: Micro Solid-state Drive - memory card.

S

SD: Solid-state drive - memory card.

SSD: ATA Solid-state drives (including PATA, SATA, eSATA, mSATA,...).

Index

C

Calibration validity	
Sanitization procedure	11
Clear	4
Control of media	5

D

Destroy	4
---------------	---

G

Guideline definition	4
----------------------------	---

H

How to:	
Establish operability inside secured area	11
Return to secured area	10

I

Instrument sanitization	
Non-volatile memory	9

L

Literature	
see References	4

M

Media	
Memory types	7
Remove	9
Sanitization procedure	9
Terms and definitions	5
Memory types	5
Media	7
Non-volatile memory	6
Volatile memory	6

N

NIST	3
Non-volatile memory	
Instrument sanitization	9
Memory types	6
Terms and definitions	5

O

Overview	3
----------------	---

P

Purge	4
-------------	---

R

References	4
Remove media	9
Restore operability inside secured area	11

Return to secured area	10, 11
S	
Sanitization	4, 7
Sanitization procedure	
Calibration validity	11
Media	9
Non-volatile memory	8
Remove power	9
Volatile memory	9
Secure User Mode	
Security features	12
Special security features	11
Secure User Mode	12
USB interface	12
Statement of volatility	5
T	
Terms and definitions	4
Clear	4
Control of media	5
Destroy	4
Media	5
Non-volatile memory	5
Purge	4
Sanitization	4
Volatile memory	5
U	
USB interface	
Security features	12
V	
Volatile memory	
Instrument sanitization	8
Memory types	6
Terms and definitions	5