

SERIAL BUS TRIGGER AND DECODE WITH R&S® RTO6 OSCILLOSCOPES

Instant insight meets in-depth information



- ▶ Trigger at protocol level
- ▶ View decoded packets
- ▶ Get time-correlated packet and signal views

Application Brochure
Version 01.00

Oscilloscope innovation. Measurement confidence.
www.rohde-schwarz.com/product/RTO6

ROHDE & SCHWARZ

Make ideas real



AT A GLANCE

TRIGGER AND DECODE SERIAL BUSES

Add protocol triggering and decode capabilities to your oscilloscope.

Connect your oscilloscope to serial bus signals and trigger and decode at a packet level. Unlike dedicated protocol analyzers, oscilloscopes have minimal intrusion on serial bus signaling and correlate packet level measurements with physical layer signal parametric behavior. Use your oscilloscope for a system-level view of one or more serial buses time correlated with other system events. The R&S®RTO6 oscilloscope series includes trigger and decode options for the following:

Serial trigger and decode software options	Included protocols
Low speed serial buses	I ² C, SPI, RS-232/UART, I ² S/LJ/RJ/TDM, Manchester/NRZ
Automotive protocols	CAN/LIN incl. CAN-dbc file import/CAN-FD, FlexRay™ incl. Fibex file import/SENT/CXPI
Aerospace protocols	MIL-STD-1553, ARINC 429, SpaceWire
Ethernet protocols	10BASE-T, 100BASE-TX, MDIO
MIPI RFFE	MIPI RFFE
Automotive Ethernet	IEEE 100BASE-T1, IEEE 1000BASE-T1
USB protocols	USB 1.0/1.1, USB 2.0/HSIC/USB 3.1 Gen 1, USB Power Delivery (USB-PD)/USB SSIC
MIPI M-PHY, D-PHY	MIPI D-PHY/M-PHY/UniPro/Decoding for DSI and CSI-2
PCI Express	8b10b (up to 6.25 Gbit/s)/PCI Express Revision 1.x/2.x

CONTENTS

Decode and interpret packets easily	3
Reliably trigger on and capture your serial bus	4
Analyze your serial bus efficiently	5
Protocols	9
Ordering information	30


DECODE AND INTERPRET PACKETS EASILY

Decode your serial bus instantly

Access the serial bus dialog directly from the main display by clicking on +Bus.

Reliable triggering and decoding requires setting correct signal thresholds. Accelerate your test setup with full autoselect. With one click, the oscilloscope performs the following for a quick decode setup:

- ▶ Executes "Autoset" for horizontal and vertical scales
- ▶ Adjusts horizontal scale to display at least one frame or packet
- ▶ Executes "Auto thresholds" to determine thresholds
- ▶ If necessary, performs bit rate estimation
- ▶ Sets default protocol trigger (at frame start for example)
- ▶ Turns on protocol decoder

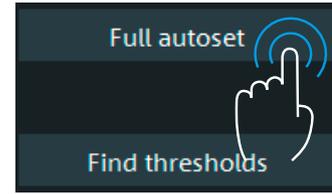

Full autoselect for serial bus decoding

Easily visualize your decoded packets

Color-coded packet fields make quick visualization of specific attributes in decoded messages easier. For example, a parity bit with an error in a UART frame or a missing NACK bit in an I²C frame are marked red.




Color-coded packet fields

Protocol-specific symbol labels

Label lists allow decoded data to be interpreted into symbol names, making it easier to identify protocol-specific messages. Load label lists as .csv or .ptt files.


The symbol names appear both in the decoded table and on the waveform as frame captions of the decoded signal. The R&S®RTO6 can do this for all protocols using ID or address identification. In the following example, the CAN DBC file is used to extract physical values such as engine speed from the CAN raw data.



Decode layer with CAN symbols

User-oriented screen setup

The vertical and horizontal control knobs or the touch screen can be used to zoom in and out from the decoded layer. The R&S®SmartGrid function can rearrange the windows displayed on the screen to best fit your viewing preferences. The decoded bus can be overlaid on the captured signal and/or displayed in a separate result table window.

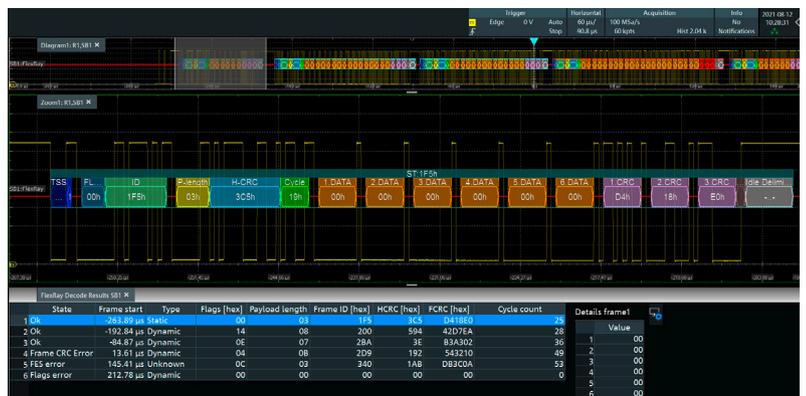


Customized screen setup

RELIABLY TRIGGER ON AND CAPTURE YOUR SERIAL BUS

Packet-level, protocol-aware triggering

R&S®RTO6 oscilloscopes incorporate an integrated circuit with built-in protocol-aware triggers. Use these to isolate and capture specific events of interest.


Designed by engineers with deep knowledge of each supported protocol, the serial bus applications provide the most flexible triggering capability in the industry. Choose from a wide range of serial bus trigger types. Select the specific trigger you need, including triggering on bus errors.

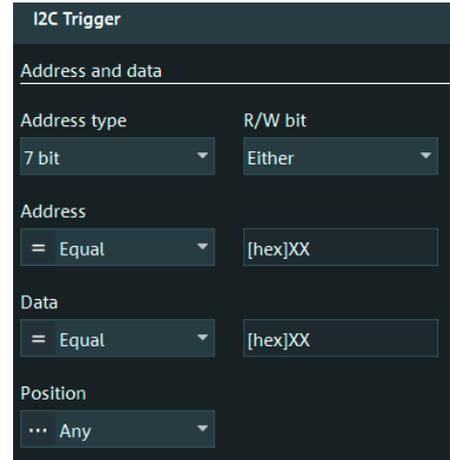

I²C triggering example

Hardware-based triggering


Hardware-based triggering uses dedicated hardware to look for the trigger event in the serial bus for fast and accurate triggers to detect rare signal faults and implement a variety of complex protocol trigger conditions on the R&S®RTO6.

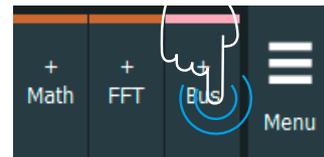

Direct access to serial bus dialog

Trigger on symbol data

Once the symbol names are uploaded, they easily trigger on the protocol-specific symbol data.

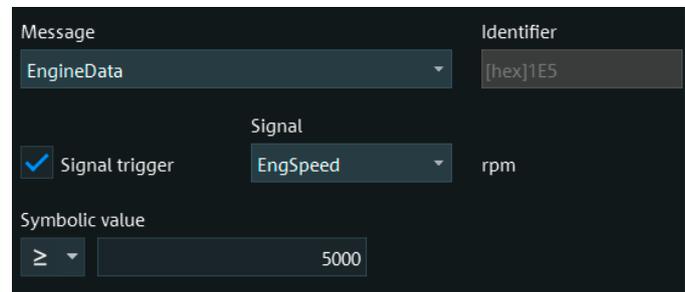

Trigger on symbol data

ANALYZE YOUR SERIAL BUS EFFICIENTLY

Capture more packets with deep memory


Need to capture long time periods? Deep memory can capture more packets. With a memory depth of up to 2 Gpoint, R&S®RTO6 oscilloscopes can capture long time periods where cause and effect are spaced over time. Signal detail is time-correlated with packet content for fast debugging.

Segmented memory extends capture time

Segmented memory can capture more packets in an acquisition. Segmented memory stores packets around successive triggers, without having to store the dead time between packets. This significantly reduces the blind time to as low as 300 ns. Use the history player to see the decoding for each segment.

Zoom coupling


An easy-to-read table shows all detected events with time-stamps. Easily navigate between captured search events with zoom coupling. Select a frame and the corresponding zoom window will be automatically displayed.

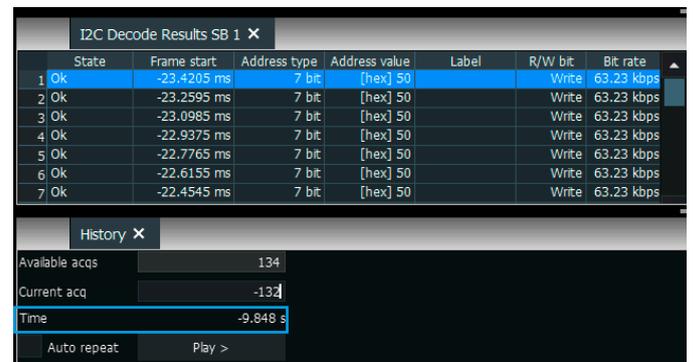

10 s of I²C bus activity captured using segmented memory (see blue framed area)

Search decoded data

The search function can find events of interest in the captured bus activity. Search parameters are identical to trigger parameters and allow multiple event types to be searched simultaneously. The event types are protocol-specific to help quickly track down specific frame types, contents and errors.

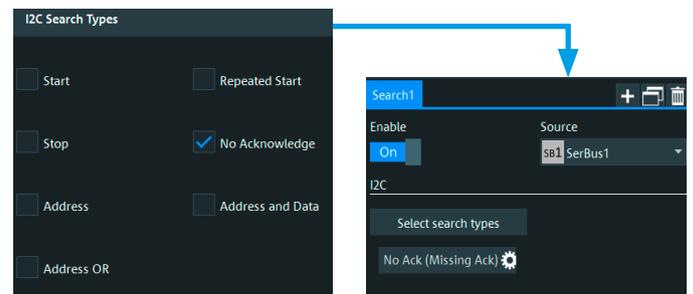

Step 1

Step 2




I²C "No ACK" search options and results

Step 3

Binary representation


Get a binary representation of your bus signals to find and debug signal integrity issues. Adjust threshold lines and observe the change in binary signal representations.

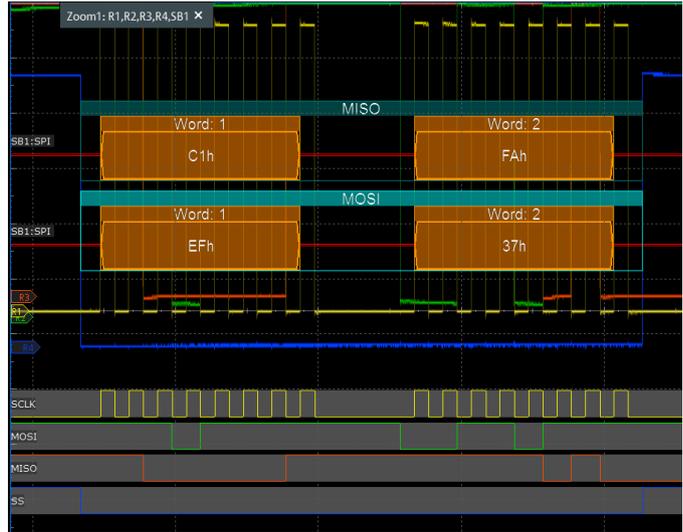

Binary representation of SCLK, MOSI, MISO and SS signals for SPI bus debugging

Context-sensitive help

Activate 'Help' and a brief description of every parameter setting appears. Click 'Show help' for a more detailed description of this parameter and the corresponding SCPI command.

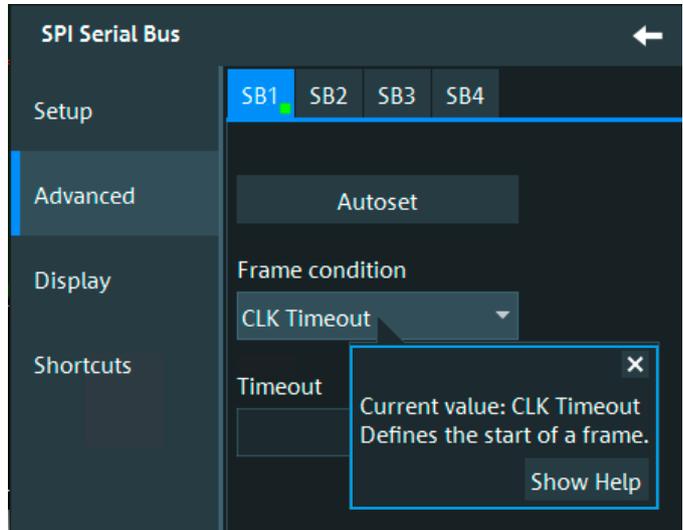


Context-sensitive help messages (see blue framed area)

Bus analysis

Additional bus measurements are available for most common buses, including Ethernet. To analyze bus timing, measure the frame-to-frame time and display it as a track or histogram. Automatically measure the time between trigger packets or the time difference between frames. Further analyze your bus by measuring various bus error statistics as frame error rates. See the list of additional measurements in the table.

Protocol measurements for bus analysis	
Frame to frame	time difference between two frames
Trigger to frame	time between a defined frame and the next trigger signal
Field value	value of a field in current acquisition
Gap	measures a gap or period at which the bus is idle; distance of a gap can only be measured between two identified frames
Main bit rate	bit rate as defined by the standard
Second bit rate	additional bit rate, protocol dependent; for example: Data rate for the CAN-FD protocol
Bus idle	calculates bus idle time for quick evaluation whether the bus is running at its limits or if more communications are possible
Frame count	number of all frames within the acquisition window
Frame error count	sum of all frames with errors within the acquisition window
Frame error rate	sum of all frames with errors divided by all frames within the acquisition window.
Consecutive frame error rate	measures the rate at which at least two consecutive frames have an error

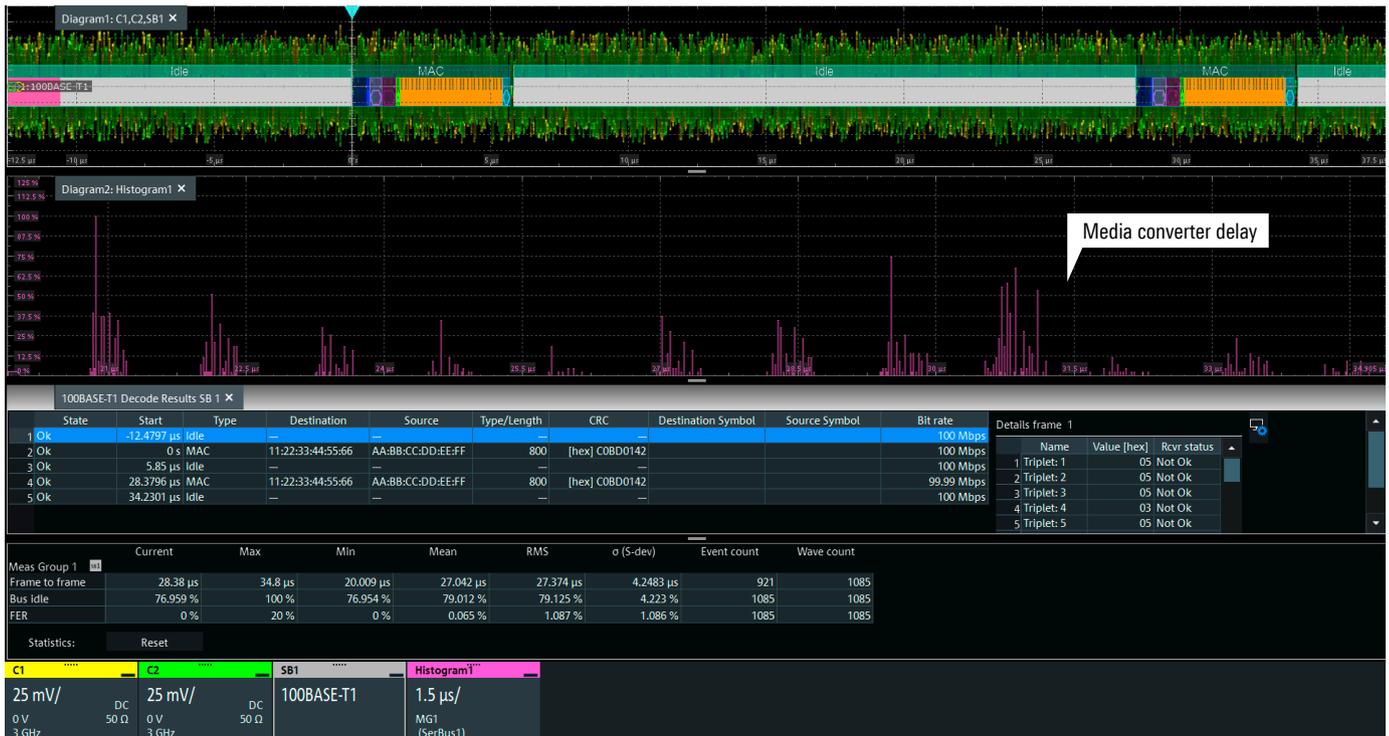

Example of bus timing measurements on a 100BASE-T1 bus





PROTOCOLS

I ² C protocol trigger and decode	10
SPI protocol trigger and decode	12
UART/RS-232 protocol trigger and decode	14
Audio protocols trigger and decode	16
Customized Manchester and NRZ protocol trigger and decode	18
CAN protocol trigger and decode	20
LIN protocol trigger and decode	22
FlexRay™ protocol trigger and decode	24
SENT protocol trigger and decode	26
CXPI protocol trigger and decode	28


I²C PROTOCOL TRIGGER AND DECODE

The R&S® RT06-K510 low speed serial bus option supports I²C triggering and decoding.

Protocol-specific visual display of decoded packets

Color-coding for protocol fields is protocol-specific and simplifies interpretation of the visual display. The I²C decode data layer is highly customizable and may include:

- ▶ Binary signal representation of SCL (clock) and SDA (data) signals
- ▶ Symbol names (if corresponding .csv and .ptt files are loaded)
- ▶ Any of the data formats: hex, octal, binary, ASCII, decimal (signed and unsigned)

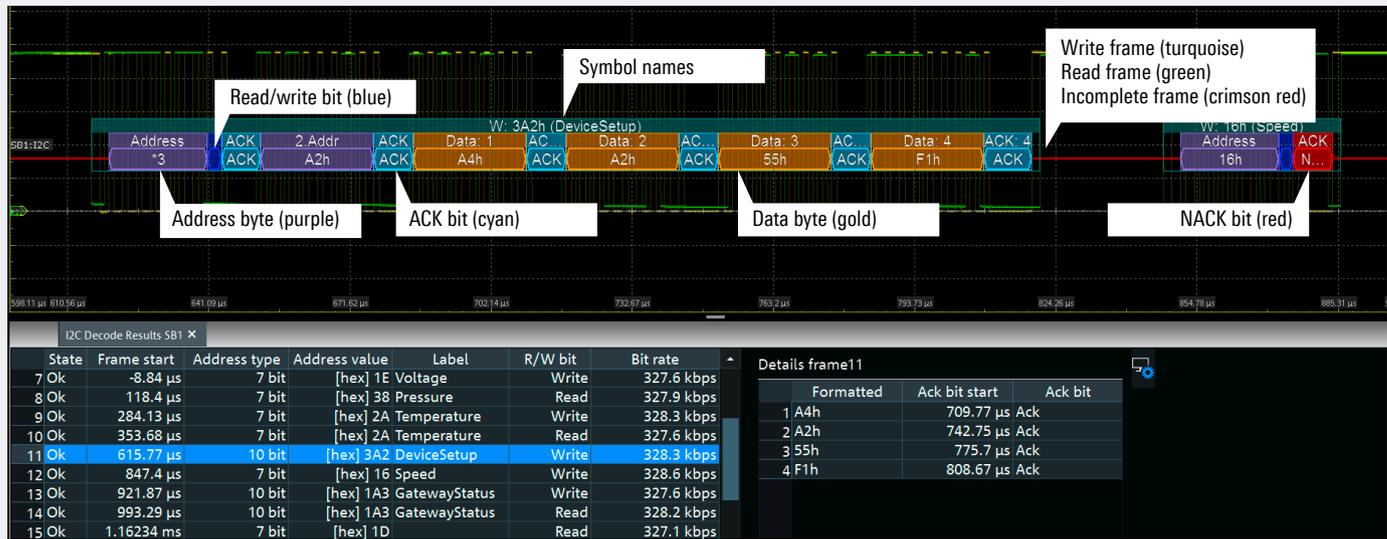

I²C specifications	
I²C protocol configuration	addressing scheme: 7 bit or 10 bit
	read/write bit: included in address or separate field
	threshold levels: manual setting or auto threshold
	bit rate: auto-detected (up to 6.5 Mbps)
I²C sources (clock and data)	analog channels: 1, 2, 3 or 4
	with R&S®RTO6-B1 mixed-signal option (MSO), logic channels D0 to D15 also used
	reference and math waveforms (for decoding)
I²C trigger (hardware-based)	<p>trigger events:</p> <ul style="list-style-type: none"> ▶ Start ▶ Repeated start ▶ Stop ▶ Missing ACK: address NACK, data write NACK, AND/OR data read NACK ▶ Address OR: up to 4 OR-ed address values ▶ Address and data
	<p>address setup:</p> <ul style="list-style-type: none"> ▶ 7 bit or 10 bit ▶ Value: hex, decimal, octal, ASCII or binary ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Read/write bit: included in address or in a separate field
	<p>data setup:</p> <ul style="list-style-type: none"> ▶ Pattern: up to 8 byte, hex, octal, binary, ASCII, signed, unsigned ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Offset within frame: 0 byte to 4095 byte
I²C decode	<p>decode display:</p> <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus + logical signal, tabulated list, decode layers ▶ Color coding: frame, start/restart, address, read/write bit, data, ACK/NACK, stop, error ▶ Additional layers for binary values and symbols
	decode table fields: state, frame start, address type (7 bit or 10 bit), address value, label, read/write bit, ACK bit, ACK bit start, bit rate
	decoded data format: hex, octal, binary, ASCII, signed, unsigned, symbolic names
I²C search	event: combination of start, repeated start, stop, missing ACK, address, data, address and data
	events setup: same as trigger event setup
I²C bus measurements	frame to frame, trigger to frame, field value, gap, main bit rate, bus idle time, frame count, frame error count, frame error rate, consecutive frame error rate


SPI PROTOCOL TRIGGER AND DECODE

The R&S®RT06-K510 low speed serial bus option supports SPI triggering and decoding.

Protocol-specific visual display of decoded packets

Color-coding of SPI decode layer is protocol-specific and simplifies interpretation of the visual display. The SPI decode data layer is highly customizable and may include:

- ▶ Binary signal representation of the SCLK, MISO, MOSI and SS messages
- ▶ Any of the data formats: hex, octal, binary, ASCII, decimal

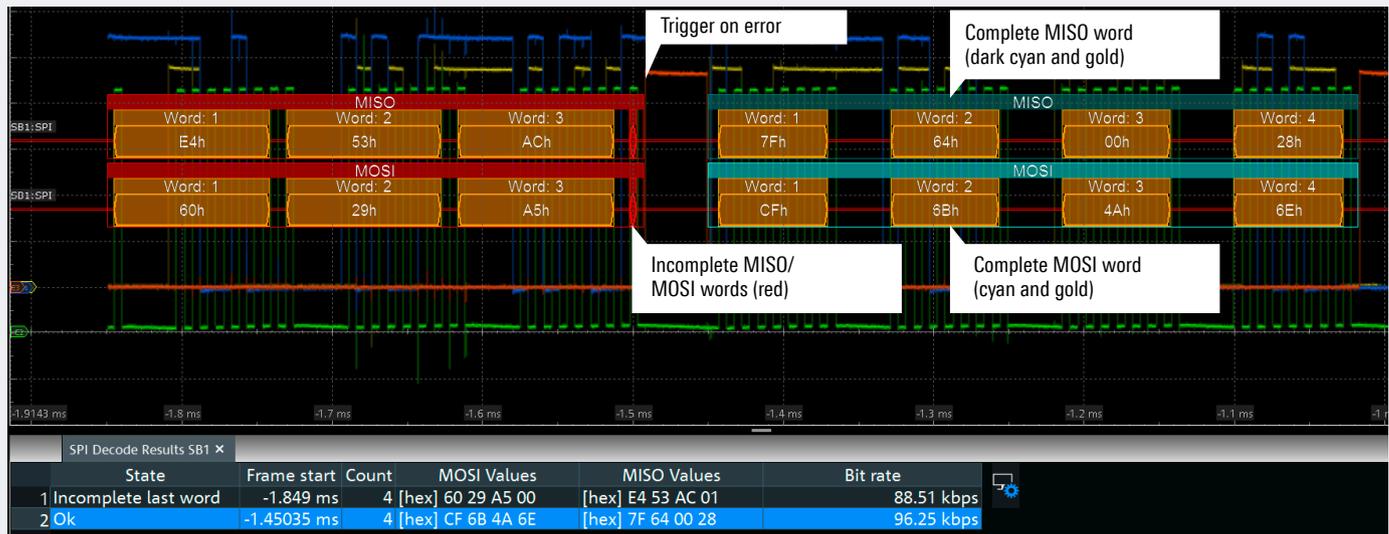

SPI specifications	
SPI protocol configuration	type: 2-wire, 3-wire and 4-wire SPI bit rate: auto-detected, up to 50 Mbps bit order: MSB first or LSB first word length: 4 bit to 32 bit frame condition: SS or clock timeout MOSI/MISO/SS polarity: active high or active low clock polarity: falling/rising edge, idle low/high, 1st/2nd edge threshold levels: manual setting or auto threshold
SPI sources (clock, MOSI/MISO, SS)	analog channels: 1, 2, 3 or 4 with R&S®RTO6-B1 mixed-signal option (MSO), logic channels D0 to D15 also used reference and math waveforms (for decoding)
SPI trigger (hardware-based)	trigger events: <ul style="list-style-type: none"> ▶ Frame start (SS or CLK timeout) ▶ MOSI and/or MISO data setup: <ul style="list-style-type: none"> ▶ Search mode: word-aligned or bit-aligned ▶ Condition: =, ≠ ▶ Value: up to 256 bit, hex, decimal, octal, ASCII or binary ▶ Offset within frame: 0 bit to 32 767 bit
SPI decode	decode display: <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus + logical signal, tabulated list, decode layers ▶ Color coding: frame, word, error ▶ Additional layers for binary values decode table fields: state, frame start, count, MOSI values, MISO values, bit rate decoded data format: hex, decimal, octal, binary, ASCII
SPI search	event: start of frame, MOSI and/or MISO events setup: same as trigger event setup
SPI bus measurements	frame to frame, trigger to frame, field value, gap, main bit rate, bus idle time, frame count, frame error count, frame error rate, consecutive frame error rate


UART/RS-232 PROTOCOL TRIGGER AND DECODE

The R&S®RT06-K510 low speed serial bus option supports UART/RS-232 triggering and decoding.

Protocol-specific visual display of decoded packets

The color-coding of fields is protocol-specific and simplifies interpretation of the visual display. The UART/RS-232 decode data layer is highly customizable and may include:

- Any of the data formats: hex, octal, binary, ASCII, decimal

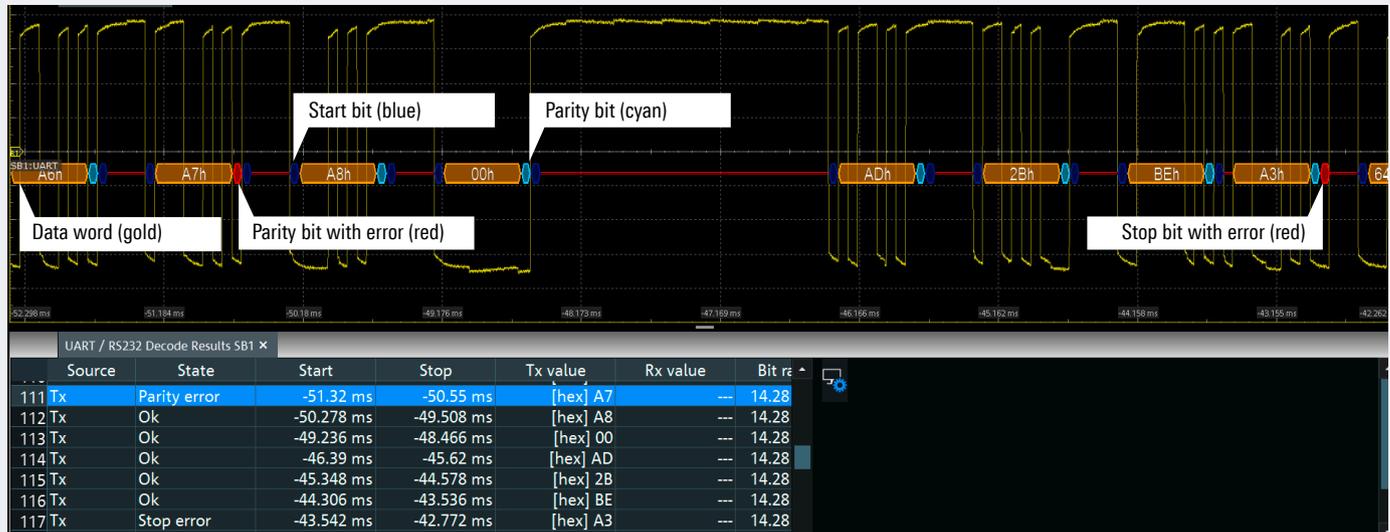


UART/RS-232 specifications	
UART protocol configuration	supports: RS-232, RS-422 (with differential probing), RS-485 (with differential probing), UART (all that conform to the oscilloscope application parameters)
	bit rate: enter manually or choose predefined values, 300 bps to 20 Mbps
	number of bits: 5 bit to 9 bit
	bit order: LSB first, MSB first
	stop bit: 1, 1.5 or 2 bit periods
	end of packet: word, timeout, none
	polarity: idle high or idle low
	parity: none, odd, even, mark, space, don't care
	threshold levels: manual setting or auto threshold
UART/RS-232 sources (TX and RX)	analog channels: 1, 2, 3 or 4
	with R&S®RTO6-B1 mixed-signal option (MSO), logic channels D0 to D15 also used
	reference and math waveforms (for decoding)
UART/RS-232 trigger (TX or RX; hardware-based)	trigger events: <ul style="list-style-type: none"> ▶ Start bit ▶ Packet start ▶ Data ▶ Parity error ▶ Break condition ▶ Stop error
	data setup: <ul style="list-style-type: none"> ▶ Condition: =, ≠ ▶ Value: up to 256 bit, hex, decimal, octal, binary or ASCII ▶ Offset within frame: 0 bit to 32767 bit
UART/RS-232 decode	decode display: <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus + logical signal, tabulated list, decode layers ▶ Color coding: data, parity bit, start error, parity error, stop, error ▶ Additional layers for binary values
	decode table fields: source, state, start, stop, TX value, RX value, bit rate
	decoded data format: hex, decimal, octal, binary, ASCII
UART/RS-232 bus measurements	frame to frame, trigger to frame, field value, gap, main bit rate, bus idle time, frame count, frame error count, frame error rate, consecutive frame error rate

AUDIO PROTOCOLS TRIGGER AND DECODE

The R&S®RT06-K510 low speed serial bus option supports audio protocols triggering and decoding.

Protocol-specific visual display of decoded packets

The color-coding of protocol fields is protocol-specific and simplifies interpretation of the visual display. The audio decoded data shows each channel in a different color.

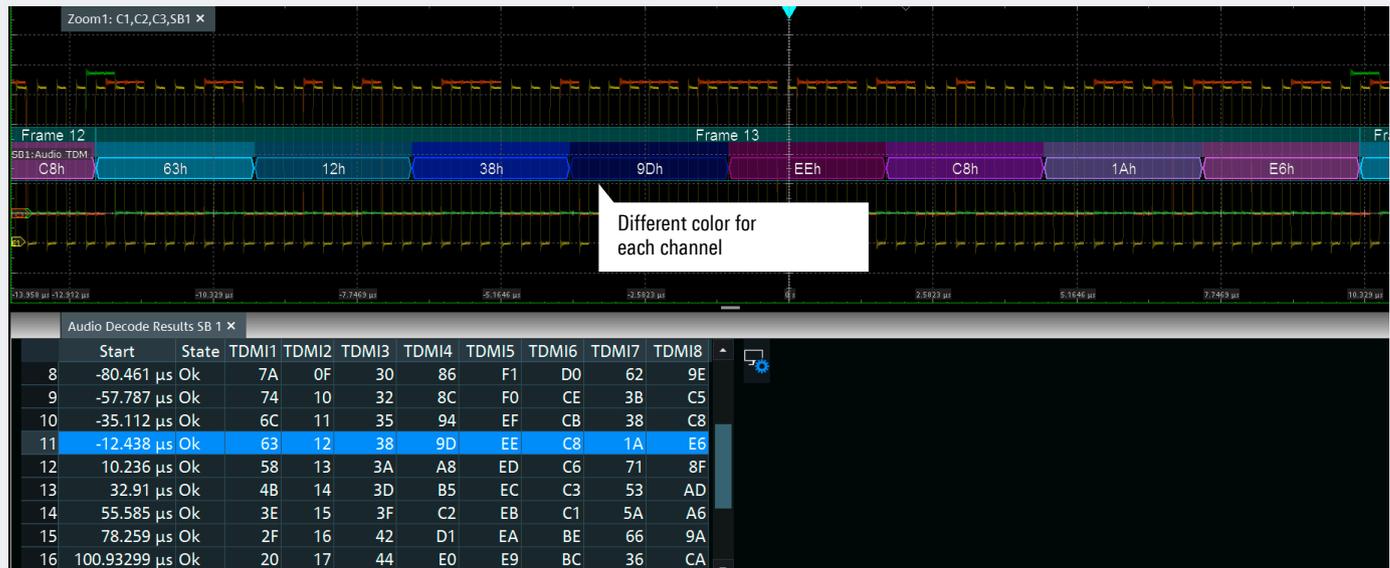

Audio protocols specifications	
Audio signal types	<ul style="list-style-type: none"> ▶ I²S standard ▶ Left justified (LJ) ▶ Right justified (RJ) ▶ Time division multiplexed (TDM)
Audio sources (clock and data)	analog channels: 1, 2, 3 or 4 with R&S®RTO6-B1 mixed-signal option (MSO), additionally use logic channels D0 to D15 reference and math waveforms (for decoding)
Audio protocol configuration	clock polarity: rising edge or falling edge word select line polarity: normal or inverted data polarity: active high or active low threshold levels: manual setting or auto threshold
Audio trigger (hardware-based)	trigger events: <ul style="list-style-type: none"> ▶ Data ▶ Window ▶ Frame condition ▶ Word select ▶ Error condition data setup: <ul style="list-style-type: none"> ▶ Data pattern of an audio channel up to 4 byte ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Value: hex, decimal, octal, ASCII or binary window setup: <ul style="list-style-type: none"> ▶ Word count of data pattern of an audio channel up to 4 byte ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Value: hex, decimal, octal, ASCII or binary ▶ Word length: 1 word to 1 000 000 words frame condition setup: <ul style="list-style-type: none"> ▶ Combination of audio channels in a frame up to 4 byte ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Value: hex, decimal, octal, ASCII or binary word select setup: <ul style="list-style-type: none"> ▶ Positive or negative slope error condition setup: <ul style="list-style-type: none"> ▶ Source of word select
Audio decode	decode display: <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus + logical signal, tabulated list, decode layers ▶ Color coding: audio frame, frame error, incomplete frame decode table fields: state, start, audio channel
Audio protocol measurements	decoded data format: hex, unsigned decimal, signed decimal (two's complement), octal, binary, ASCII audio display: display of audio waveform for specified audio channels long-term display: history of selected audio data as trace against measurements, waveforms and time index

CUSTOMIZED MANCHESTER AND NRZ PROTOCOL TRIGGER AND DECODE

The R&S®RT06-K510 low speed serial bus option supports customized Manchester and NRZ triggering and decoding.


Customized protocol frame setup

Input a customized protocol frame manually or upload a file. Each packet in the frame may be described by the following parameters:

- ▶ Field name (user-defined name)
- ▶ Bits (length in bit)
- ▶ Condition (for example a specific pattern)
- ▶ Format (the data format for the condition value)
- ▶ Bit order (most significant or least significant bit first)
- ▶ Color (user-defined color)
- ▶ Result (sets whether this should be displayed in the decode table results)

Customized Manchester and NRZ protocol-specific visual display of decoded packets

The color-coding of the Manchester and NRZ decode layer is protocol-specific and simplifies interpretation of the visual display. You can define the colors in the decode data layer and choose which data is displayed in the decode table.

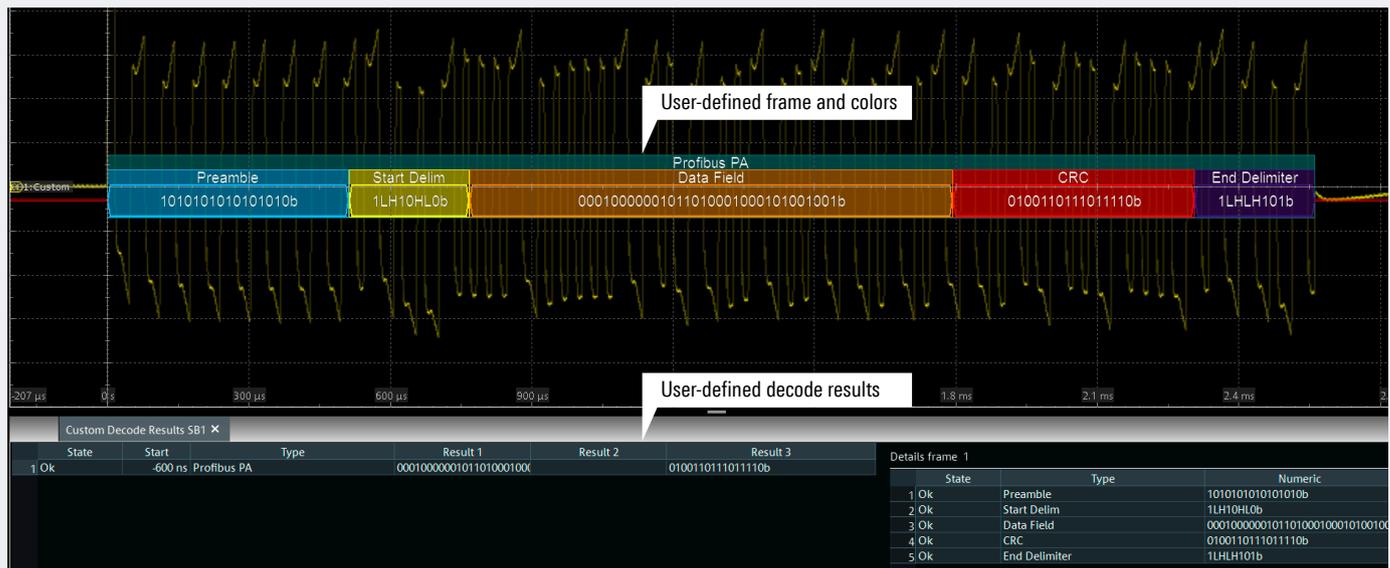

Custom trigger and decode for profibus PA

Custom Format ← → - ×

Frame: ◀ Profibus PA ▶

	Field name	Bits	Condition	Format	Bit order	Color	Result
1	Preamble	16	=1010101010101010	Binary	MSB First	Blue	-
2	Start Delim	8	=1LH10HL0	Binary	MSB First	Yellow	-
3	Data Field	32		Binary	MSB First	Orange	1
4	CRC	16		Binary	MSB First	Red	3
5	End Delimiter	8	=1LHLH101	Binary	MSB First	Purple	-

User-defined profibus PA frame

Custom: Manchester and NRZ specifications	
Bit encoding	<ul style="list-style-type: none"> ▶ Manchester, Manchester II ▶ NRZ clocked, NRZ unclocked
Manchester/NRZ sources (data, clock for NRZ clocked)	<p>analog channels: 1, 2, 3 or 4</p> <p>with R&S®RTO6-B1 mixed-signal option (MSO), logic channels D0 to D15 (only for NRZ) also used</p> <p>reference and math waveforms</p>
Custom protocol setup	<ul style="list-style-type: none"> ▶ Data polarity (Manchester): normal or inverted ▶ Data polarity (NRZ): active high or active low ▶ Data idle polarity (NRZ unclocked): idle low or idle high ▶ Clock polarity (NRZ clocked): idle low or idle high ▶ Clock phase (Manchester/NRZ clocked): first edge or second edge ▶ Timing settings <ul style="list-style-type: none"> - Bit rate (optional for Manchester/Manchester II, mandatory for NRZ unclocked) - Gap time (optional for Manchester/Manchester II/NRZ clocked, mandatory for NRZ unclocked) ▶ Thresholds: manual setting or auto threshold
Custom frame format	<ul style="list-style-type: none"> ▶ Frame ▶ Multiple frame management ▶ Frame identification and sync ▶ Variable length frames ▶ Variable number of cells ▶ Cells: name, size (bits), numeric format, bit order, color
Custom filter configuration	to display only selected events
Manchester/NRZ triggering capabilities	<p>frame start:</p> <ul style="list-style-type: none"> ▶ Gap, start bit <p>pattern:</p> <ul style="list-style-type: none"> ▶ Data value: binary or hexadecimal ▶ Data position: =, ≥, in range <p>advanced:</p> <ul style="list-style-type: none"> ▶ Frame type: frame type (with OR combinations), frame fields (with AND combinations) ▶ Error type: CRC error AND parity error ▶ Frame field data ▶ Data count condition: =, ≠, <, ≤, >, ≥, in range, out of range
Custom: Manchester/NRZ decode	<p>decode display:</p> <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus signal, tabulated list, result details, decode layers ▶ Color coding: according to cell configuration table ▶ Decoded data format: according to cell configuration table ▶ Decode table fields: state, start, stop, type, result 1 (1st field content), result 2 (2nd field content), result 3 (3rd field content)


CAN PROTOCOL TRIGGER AND DECODE

The R&S®RT06-K520 automotive protocol option supports CAN including CAN-dbc file import/CAN-FD triggering and decoding.

Protocol-specific visual display of decoded packets

Color-coding for protocol fields is protocol-specific and simplifies visual display interpretation. The CAN decode data layer is highly customizable and may include:

- ▶ Binary signal representation of the CAN signal
- ▶ Symbolic names (with CAN-dbc file import)
- ▶ Any of the data formats: hex, octal, binary, ASCII, decimal (signed and unsigned)

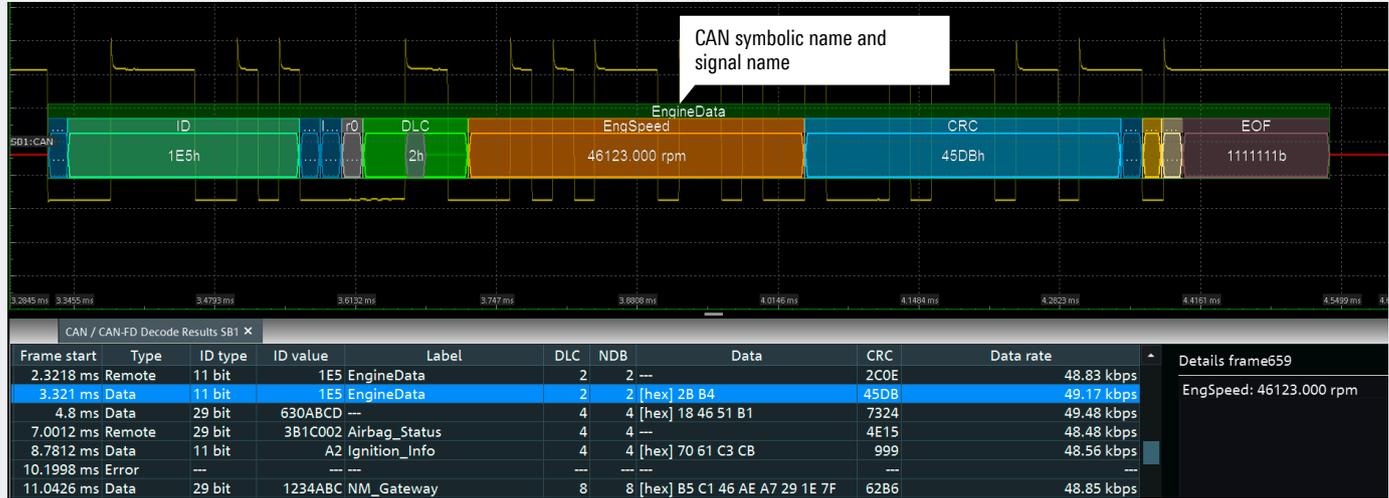

CAN specifications	
CAN protocol configuration	protocol: CAN, CAN-FD
	signal type: CAN_L, CAN_H
	bit rate: 100 bps to 1 Mbps (CAN), 10 kbps to 15 Mbps (CAN-FD)
	sampling point: 5% to 95% within bit period; independent settings for arbitration phase and data phase
	device list: associate frame identifier with symbolic ID, load DBC file content
	threshold levels: manual setting or auto threshold
CAN sources	analog channels: 1, 2, 3 or 4
	with R&S®RTO6-B1 mixed-signal option (MSO), logic channels D0 to D15 also used
	reference and math waveforms (for decoding)
CAN trigger (hardware-based)	trigger events: <ul style="list-style-type: none"> ▶ Start of frame ▶ Frame type ▶ Identifier ▶ Identifier and data ▶ Error condition: CRC error, form error, bit stuffing error AND/OR ACK error
	identifier setup: <ul style="list-style-type: none"> ▶ Frame type: data, remote or both ▶ Identifier type: standard or extended ▶ Transfer: little-endian, big-endian ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range
	data setup: <ul style="list-style-type: none"> ▶ Pattern: up to 8 byte in the complete data range ▶ Value: hex, decimal, octal, binary, ASCII, symbolic DLC value ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Offset within frame: 0 byte to 4095 byte
CAN decode	decode display: <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus + logical signal, tabulated list, decode layers ▶ Color coding: start of frame, identifier, FD bits, DLC, data payload, CRC, end of frame, error frame, overload frame, CRC error, bit stuffing error ▶ Additional layers for binary values
	decode table fields: state, frame start, ID type, ID value, label, DLC, NDB, data, CRC, data rate
	decoded data format: hex, decimal, octal, binary, ASCII, symbolic
CAN search	event: start of frame, frame type, identifier, identifier and data, error condition
	events setup: same as trigger event setup
CAN bus measurements	frame to frame, trigger to frame, field value, gap, main bit rate, second bit rate, bus idle time, frame count, frame error count, frame error rate, consecutive frame error rate


LIN PROTOCOL TRIGGER AND DECODE

The R&S®RT06-K520 automotive protocol option supports LIN protocol triggering and decoding.

Protocol-specific visual display of decoded packets

Color-coding for protocol fields is protocol-specific and simplifies interpretation of the visual display. The LIN decode data layer is highly customizable and may include:

- ▶ Binary signal representation of the LIN signal
- ▶ Symbolic names
- ▶ Any of the data formats: hex, octal, binary, ASCII, decimal (signed and unsigned)

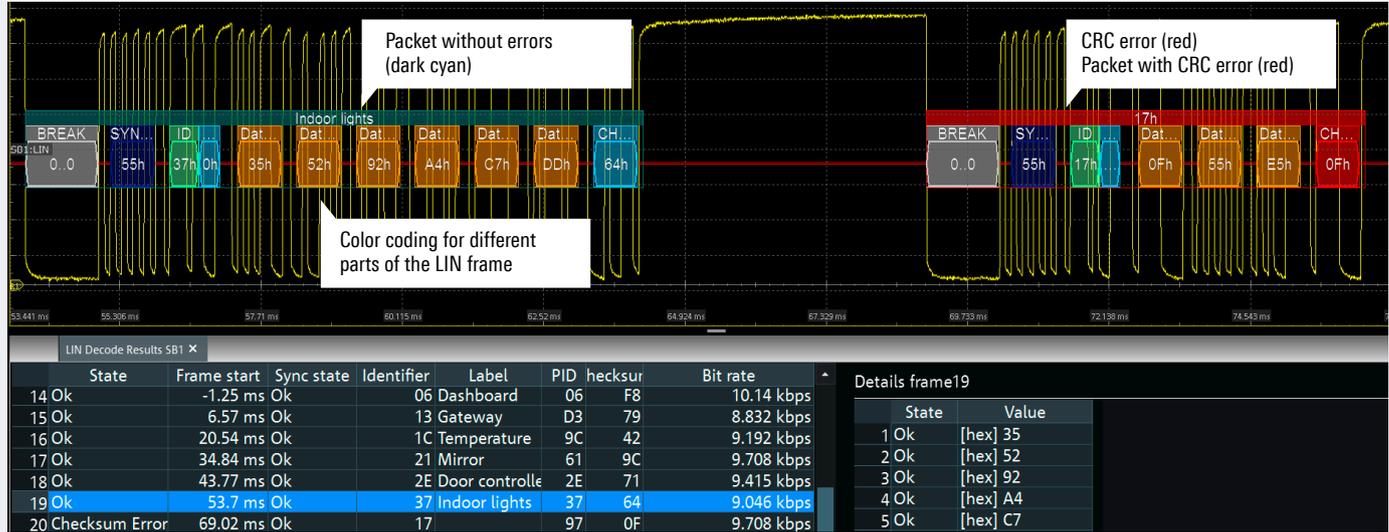

LIN specifications	
LIN protocol configuration	<p>protocol version: 1.3, 2.x or SAE J602; mixed traffic is supported</p> <p>bit rate: enter manually user-defined bit rate (in range from 1 kbps to 20 kbps) or choose from predefined standard bit rates (1.2/2.4/4.8/9.6/10.417/19.2 kbps)</p> <p>threshold levels: manual setting or auto threshold</p>
LIN sources	<p>analog channels: 1, 2, 3 or 4</p> <p>with R&S®RTO6-B1 mixed-signal option (MSO), logic channels D0 to D15 also used</p> <p>reference and math waveforms (for decoding)</p>
LIN trigger (hardware-based)	<p>trigger events:</p> <ul style="list-style-type: none"> ▶ Start of frame ▶ Identifier ▶ Identifier and data ▶ Wake-up frame ▶ Error condition: identifier parity error, sync field error AND/OR checksum error <p>identifier setup:</p> <ul style="list-style-type: none"> ▶ Range: 0 d to 63 d ▶ Value: hex, decimal, octal, binary, ASCII ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range <p>data setup:</p> <ul style="list-style-type: none"> ▶ Pattern: up to 8 byte in the complete data range ▶ Value: hex, decimal, octal, binary, ASCII ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range
LIN decode	<p>decode display:</p> <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus + logical signal, tabulated list ▶ Color coding: start of frame, frame identifier, data payload, checksum, error condition <p>decode table fields: state, frame start, sync state, identifier, label, PID, checksum, bit rate</p> <p>decoded data format: hex, decimal, octal, binary, ASCII, symbolic</p>
LIN search	<p>event: combination of start of frame (sync break), identifier, identifier + data, wake-up frame, error condition</p> <p>events setup: same as trigger event setup</p>
LIN bus measurements	<p>frame to frame, trigger to frame, field value, gap, main bit rate, second bit rate, bus idle time, frame count, frame error count, frame error rate, consecutive frame error rate</p>

FlexRay™ PROTOCOL TRIGGER AND DECODE

The R&S®RT06-K520 automotive protocol option supports FlexRay™ triggering and decoding.

Protocol-specific visual display of decoded packets

Color-coding for protocol fields is protocol-specific and simplifies interpretation of the visual display. The FlexRay™ decode data layer is highly customizable and may include:

- ▶ Binary signal representation of the FlexRay™ signal
- ▶ Any of the data formats: hex, octal, binary, ASCII, decimal (signed and unsigned)



FlexRay™ specifications	
FlexRay™ protocol configuration	<p>signal type: single-ended, differential, logic</p> <p>channel type: A, B</p> <p>bit rate: standard bit rates (2.5, 5.0, 10.0 Mbps)</p> <p>threshold levels: manual setting or auto threshold</p>
FlexRay™ sources	<p>analog channels: 1, 2, 3 or 4</p> <p>with R&S®RTO6-B1 mixed-signal option (MSO), additionally use logic channels D0 to D15</p> <p>reference and math waveforms (for decoding)</p>
FlexRay™ trigger (hardware-based)	<p>trigger events:</p> <ul style="list-style-type: none"> ▶ Start of frame ▶ Identifier and data ▶ Symbol ▶ Wake-up frame ▶ Error condition: FSS error, BSS error, FES error, header CRC error AND/OR frame CRC error <p>identifier setup:</p> <ul style="list-style-type: none"> ▶ Indicator bits setup: payload preamble bit, null frame bit, sync frame bit and startup frame bit separately configurable (1, 0 or don't care) ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Payload length condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Cycle count: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Step parameter for selection of noncontiguous values within provided range <p>data setup:</p> <ul style="list-style-type: none"> ▶ Pattern: up to 8 byte ▶ Value: hex, decimal, octal, binary, ASCII ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Offset within frame: 0 byte to 253 byte
FlexRay™ decode	<p>decode display:</p> <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus + logical signal, tabulated list ▶ Color coding: frame, frame header, identifier, payload length, header CRC, cycle count, data payload, frame CRC, error condition <p>decode table fields: state, frame start, type, flags, payload length, frame ID, HCRC, FCRC, cycle count</p> <p>decoded data format: hex, decimal, octal, binary, ASCII, symbolic</p>
FlexRay™ search	<p>event: combination of start of frame, header+ data, symbol, wake-up, error condition</p> <p>events setup: same as trigger event setup</p>


SENT PROTOCOL TRIGGER AND DECODE

The R&S®RT06-K520 automotive protocol option supports SENT triggering and decoding.

Protocol-specific visual display of decoded packets

Color-coding for protocol fields is protocol-specific and simplifies interpretation of the visual display. The SENT decode data layer is highly customizable and may include:

- ▶ Binary signal representation of the SENT signal
- ▶ Any of the data formats: hex, octal, binary, ASCII, decimal (signed and unsigned)

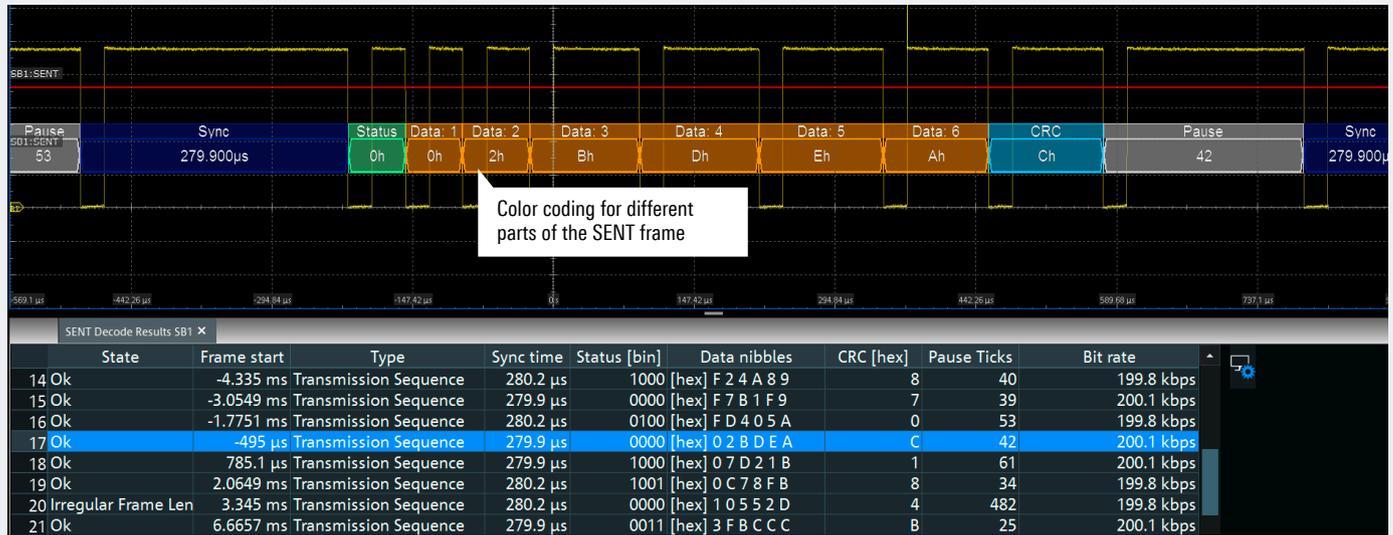

SENT specifications	
SENT protocol configuration	serial protocol: none, short, enhanced
	clock period: 1 μ s to 100 μ s
	clock tolerance: 0% to 25%
	data nibbles: 1 to 6
	CRC version: Legacy (Feb 2008) and v2010/v2016 (latest)
	CRC calculation: SAE J2716 standard and TLE 4998X
	pause pulse: no, yes, for constant frame length
	frame length in clock ticks: 104 to 922 (applicable only when pause pulse = constant frame length)
SENT sources	analog channels: 1, 2, 3 or 4
	with R&S®RTO6-B1 mixed-signal option (MSO), additionally use logic channels D0 to D15
	reference and math waveforms (for decoding)
SENT trigger (hardware-based)	trigger events: <ul style="list-style-type: none"> ▶ Calibration or sync ▶ Transmission sequence ▶ Serial message ▶ Error condition: calibration pulse error, pulse period error, CRC error AND/OR irregular frame length error
	transmission sequence status nibble setup: <ul style="list-style-type: none"> ▶ Value: 0 to F ▶ Condition: =, \neq, <, \leq, >, \geq, in range, out of range
	transmission sequence data nibbles setup: <ul style="list-style-type: none"> ▶ Value: 0 to F ▶ Condition: =, \neq, <, \leq, >, \geq, in range, out of range
	serial message identifier setup <ul style="list-style-type: none"> ▶ Value: 00 to FF ▶ Condition: =, \neq, <, \leq, >, \geq, in range, out of range ▶ Identifier type: 4 bit and 8 bit (applicable only with enhanced serial protocol)
SENT decode	decode display: <ul style="list-style-type: none"> ▶ Display type: decoded bus, tabulated list ▶ Color coding: : transmission sequence: sync/calibration, status, data bits, CRC, pause pulse (optional), calibration pulse error, pulse period error, irregular frame length error and CRC error; serial message: identifier, data, CRC, form error, CRC error
	decode table fields: state, frame start, sync time, status, data nibbles, CRC, pause ticks, bit rate
	decoded data format: hex, decimal, octal, binary, ASCII
SENT search	event: calibration or sync, transmission sequence, serial message and error condition
	events setup: same as trigger event setup


CXPI PROTOCOL TRIGGER AND DECODE

The R&S®RT06-K520 automotive protocol option supports CXPI triggering and decoding.

Protocol-specific visual display of decoded packets

Color-coding for protocol fields is protocol-specific and simplifies interpretation of the visual display. The CXPI decode data layer is highly customizable and may include:

- ▶ Binary signal representation of the CAN signal
- ▶ Any of the data formats: hex, octal, binary, ASCII, decimal (signed and unsigned)

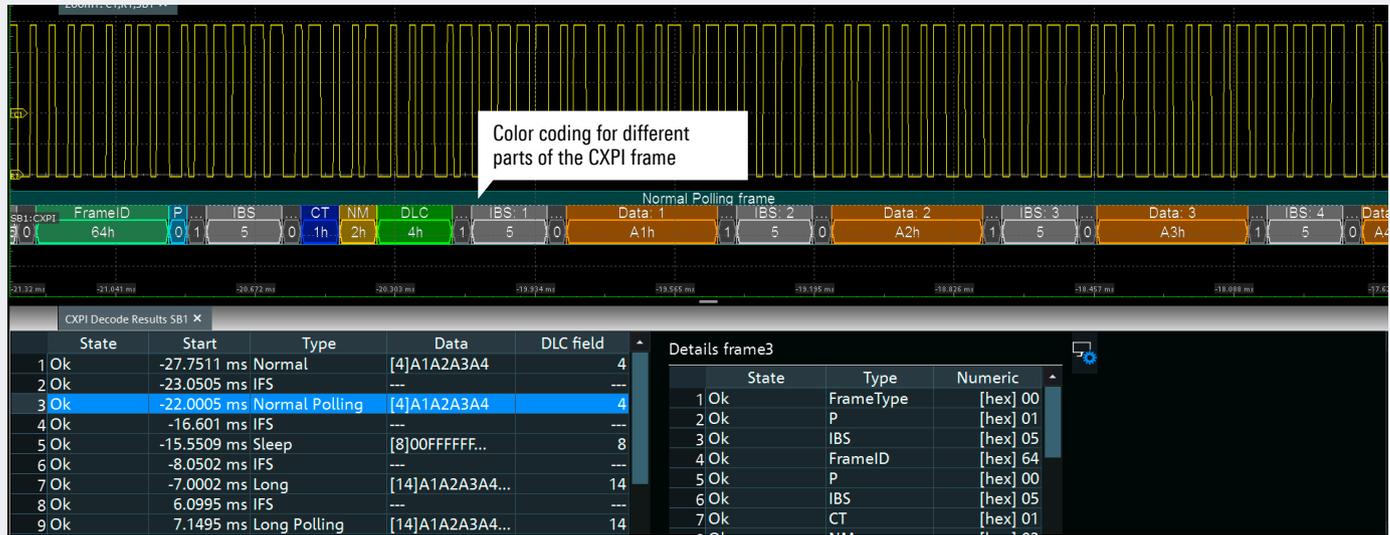

CXPI specifications	
CXPI protocol configuration	<p>signal type: one channel</p> <p>bit rate: auto-detected/adjustable</p> <p>threshold levels: manual setting or auto threshold</p> <p>polarity: normal or inverted</p> <p>expected IBS length: 0 to 15</p> <p>expected IFS length: 16 to 100000</p>
CXPI sources	<p>analog channels: 1, 2, 3 or 4</p> <p>with R&S®RTO6-B1 mixed-signal option (MSO), logic channels D0 to D15 also used</p> <p>reference and math waveforms (for decoding)</p>
CXPI trigger (hardware-based)	<p>trigger events:</p> <ul style="list-style-type: none"> ▶ Frame start ▶ Frame types with frame content ▶ Error condition <p>frame types: normal, normal poll, sleep, long, long poll, PID, PTYPE, PTYPE+PID</p> <p>frame content (depending on frame type): frame ID, NW, CT, DLC, data pattern</p> <p>data setup:</p> <ul style="list-style-type: none"> ▶ Pattern: up to 8 byte ▶ Condition: =, ≠, <, ≤, >, ≥, in range, out of range ▶ Payload data index: =, <, ≤, >, ≥, in range <p>error condition setup: IFS, IBS, CRC, length, parity, UART, DLC</p>
CXPI decode	<p>decode display:</p> <ul style="list-style-type: none"> ▶ Display type: decoded bus, logical signal, bus + logical signal, tabulated list, details, decode layers ▶ Color coding: for different cell types <p>decode table fields: state, start, type, data, DLC field</p> <p>decoded data format: hex, decimal, octal, binary</p>
CXPI search	<p>event: frame start, frame types with data, error types</p> <p>events setup: same as trigger event setup</p>

ORDERING INFORMATION

Designation	Type	Order No.	
Serial trigger and decode software options			Included protocols
Bus analysis	R&S®RTO6-K500	1801.6864.02	
Low speed serial buses	R&S®RTO6-K510	1801.7019.02	I ² C, SPI, RS-232/UART, I ² S/LJ/RJ/TDM, Manchester/NRZ
Automotive protocols	R&S®RTO6-K520	1801.7025.02	CAN/LIN incl. CAN-dbc file import/CAN-FD, FlexRay™ incl. Fibex file import/SENT/CXPI
Aerospace protocols	R&S®RTO6-K530	1801.7031.02	MIL-STD-1553, ARINC 429, SpaceWire
Ethernet protocols	R&S®RTO6-K540	1801.7048.02	10BASE-T, 100BASE-TX, MDIO
MIPI RFFE	R&S®RTO6-K550	1801.7054.02	MIPI RFFE
Automotive Ethernet	R&S®RTO6-K560	1801.7060.02	IEEE 100BASE-T1, IEEE 1000BASE-T1
USB protocols	R&S®RTO6-K570	1801.7077.02	USB 1.0/1.1, USB 2.0/HSIC/USB 3.1 Gen 1, USB power delivery (USB-PD)/USB SSIC
MIPI M-PHY, D-PHY	R&S®RTO6-K580	1801.7083.02	MIPI D-PHY/M-PHY/UniPro/Decoding for DSI and CSI-2
PCI Express	R&S®RTO6-K590	1801.7090.02	8b10b (up to 6.25 Gbit/s)/PCI Express Revision 1.x/2.x
Trigger and decode bundle	R&S®RTO6-TDBDL	1801.7725.02	R&S®RTO6-K500/-K510/-K520/-K530/-K540/-K550/-K560/-K570/-K580/-K590

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.

Service that adds value

- ▶ Worldwide
- ▶ Local and personalized
- ▶ Customized and flexible
- ▶ Uncompromising quality
- ▶ Long-term dependability

Rohde & Schwarz

The Rohde&Schwarz technology group is among the trail-blazers when it comes to paving the way for a safer and connected world with its leading solutions in test & measurement, technology systems, and networks & cybersecurity. Founded more than 85 years ago, the group is a reliable partner for industry and government customers around the globe. The independent company is headquartered in Munich, Germany and has an extensive sales and service network with locations in more than 70 countries.

www.rohde-schwarz.com

Sustainable product design

- ▶ Environmental compatibility and eco-footprint
- ▶ Energy efficiency and low emissions
- ▶ Longevity and optimized total cost of ownership

Certified Quality Management

ISO 9001

Certified Environmental Management

ISO 14001

Rohde & Schwarz training

www.training.rohde-schwarz.com

Rohde & Schwarz customer support

www.rohde-schwarz.com/support

