

# R&S®FSMR3-K6

## Pulse Measurement Option

### User Manual



1179450502  
Version 03



This document describes the following R&S®FSMR3000 models:

- R&S®FSMR3008 (1345.4004K08)
- R&S®FSMR3026 (1345.4004K26)
- R&S®FSMR3050 (1345.4004K50)

The contents of this manual correspond to firmware version 1.20 and higher.

The following firmware options are described:

- R&S FSMR3-K6 (1345.3137.02)

© 2022 Rohde & Schwarz GmbH & Co. KG  
Muehldorfstr. 15, 81671 Muenchen, Germany  
Phone: +49 89 41 29 - 0  
Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)  
Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

1179.4505.02 | Version 03 | R&S®FSMR3-K6

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol, e.g. R&S®FSMR3 is indicated as R&S FSMR3.

# Contents

<b>1</b>	<b>Documentation overview.....</b>	<b>9</b>
1.1	Getting started manual.....	9
1.2	User manuals and help.....	9
1.3	Service manual.....	9
1.4	Instrument security procedures.....	10
1.5	Printed safety instructions.....	10
1.6	Data sheets and brochures.....	10
1.7	Release notes and open-source acknowledgment (OSA).....	10
1.8	Application notes, application cards, white papers, etc.....	10
<b>2</b>	<b>Welcome to the pulse measurements application.....</b>	<b>11</b>
2.1	Starting the pulse application.....	11
2.2	Understanding the display information.....	12
<b>3</b>	<b>Measurements and result displays.....</b>	<b>15</b>
3.1	Pulse parameters.....	15
3.1.1	Timing parameters.....	16
3.1.2	Power/amplitude parameters.....	19
3.1.3	Frequency parameters.....	23
3.1.4	Phase parameters.....	24
3.1.5	Envelope model (cardinal data points) parameters.....	25
3.2	Evaluation methods for pulse measurements.....	29
<b>4</b>	<b>Measurement basics.....</b>	<b>41</b>
4.1	Parameter definitions.....	41
4.1.1	Amplitude droop.....	42
4.1.2	Ripple.....	42
4.1.3	Overshoot.....	44
4.2	Pulse detection.....	44
4.3	Parameter spectrum calculation.....	46
4.4	Basics on input from I/Q data files.....	49
4.5	Trace evaluation.....	50
4.5.1	Trace statistics.....	51

4.5.2	Normalizing traces.....	51
<b>5</b>	<b>Configuration.....</b>	<b>55</b>
<b>5.1</b>	<b>Configuration overview.....</b>	<b>55</b>
<b>5.2</b>	<b>Signal description.....</b>	<b>57</b>
<b>5.3</b>	<b>Input and output settings.....</b>	<b>60</b>
5.3.1	Input source settings.....	60
5.3.1.1	Radio frequency input.....	60
<b>5.4</b>	<b>Frontend settings.....</b>	<b>63</b>
5.4.1	Frequency settings.....	63
5.4.2	Amplitude settings.....	64
<b>5.5</b>	<b>Trigger settings.....</b>	<b>67</b>
<b>5.6</b>	<b>Data acquisition.....</b>	<b>72</b>
<b>5.7</b>	<b>Sweep settings.....</b>	<b>75</b>
<b>5.8</b>	<b>Pulse detection.....</b>	<b>76</b>
<b>5.9</b>	<b>Pulse measurement settings.....</b>	<b>79</b>
5.9.1	Measurement levels.....	79
5.9.2	Measurement point.....	82
5.9.3	Measurement range.....	84
<b>5.10</b>	<b>Automatic settings.....</b>	<b>85</b>
<b>6</b>	<b>Analysis.....</b>	<b>87</b>
<b>6.1</b>	<b>Result configuration.....</b>	<b>87</b>
6.1.1	Pulse selection.....	87
6.1.2	Result range.....	88
6.1.3	Result range spectrum configuration.....	89
6.1.4	Result range frequency configuration.....	91
6.1.5	Parameter configuration for result displays.....	91
6.1.5.1	Parameter distribution configuration.....	91
6.1.5.2	Parameter spectrum configuration.....	93
6.1.5.3	Parameter trend configuration.....	95
6.1.6	Table configuration.....	97
6.1.6.1	Limit settings for table displays.....	97
6.1.7	Y-Scaling.....	99
6.1.8	Units.....	101

<b>6.2</b>	<b>Display configuration</b> .....	<b>102</b>
<b>6.3</b>	<b>Markers</b> .....	<b>102</b>
6.3.1	Individual marker settings.....	102
6.3.2	General marker settings.....	105
6.3.3	Marker search settings.....	107
6.3.4	Marker positioning functions.....	108
<b>6.4</b>	<b>Trace configuration</b> .....	<b>109</b>
<b>6.5</b>	<b>Trace / data export configuration</b> .....	<b>113</b>
<b>6.6</b>	<b>Export functions</b> .....	<b>115</b>
<b>7</b>	<b>Export functions</b> .....	<b>118</b>
<b>8</b>	<b>How to perform measurements in the pulse application</b> .....	<b>121</b>
<b>8.1</b>	<b>How to perform a standard pulse measurement</b> .....	<b>121</b>
<b>8.2</b>	<b>How to configure a limit check for a pulse measurement</b> .....	<b>122</b>
<b>8.3</b>	<b>How to export table data</b> .....	<b>123</b>
<b>9</b>	<b>Remote commands for pulse measurements</b> .....	<b>125</b>
<b>9.1</b>	<b>Introduction</b> .....	<b>125</b>
9.1.1	Conventions used in descriptions.....	126
9.1.2	Long and short form.....	127
9.1.3	Numeric suffixes.....	127
9.1.4	Optional keywords.....	127
9.1.5	Alternative keywords.....	128
9.1.6	SCPI parameters.....	128
9.1.6.1	Numeric values.....	128
9.1.6.2	Boolean.....	129
9.1.6.3	Character data.....	130
9.1.6.4	Character strings.....	130
9.1.6.5	Block data.....	130
<b>9.2</b>	<b>Common suffixes</b> .....	<b>130</b>
<b>9.3</b>	<b>Activating pulse measurements</b> .....	<b>131</b>
<b>9.4</b>	<b>Signal description</b> .....	<b>134</b>
<b>9.5</b>	<b>Input/output settings</b> .....	<b>137</b>
9.5.1	RF input.....	137

9.5.2	Input from I/Q data files.....	141
9.5.3	Configuring the outputs.....	141
<b>9.6</b>	<b>Frontend configuration.....</b>	<b>141</b>
9.6.1	Frequency.....	142
9.6.2	Amplitude settings.....	143
9.6.3	Configuring the attenuation.....	145
<b>9.7</b>	<b>Triggering measurements.....</b>	<b>146</b>
9.7.1	Configuring the triggering conditions.....	147
9.7.2	Configuring the trigger output.....	151
<b>9.8</b>	<b>Data acquisition.....</b>	<b>153</b>
<b>9.9</b>	<b>Pulse detection.....</b>	<b>156</b>
<b>9.10</b>	<b>Configuring the pulse measurement.....</b>	<b>159</b>
9.10.1	Measurement levels.....	159
9.10.2	Measurement point.....	162
9.10.3	Measurement range.....	164
<b>9.11</b>	<b>Configuring and performing sweeps.....</b>	<b>165</b>
<b>9.12</b>	<b>Configuring the results.....</b>	<b>170</b>
9.12.1	Selecting the pulse.....	170
9.12.2	Defining the result range.....	171
9.12.3	Configuring a parameter distribution.....	172
9.12.4	Configuring a parameter spectrum.....	179
9.12.5	Configuring a pulse-pulse spectrum.....	186
9.12.6	Configuring a parameter trend.....	188
9.12.7	Configuring a result range spectrum.....	207
9.12.8	Configuring the statistics and parameter tables.....	208
9.12.9	Configuring limit checks.....	227
9.12.10	Configuring the Y-Axis scaling and units.....	231
<b>9.13</b>	<b>Configuring the result display.....</b>	<b>235</b>
9.13.1	General window commands.....	235
9.13.2	Working with windows in the display.....	236
<b>9.14</b>	<b>Configuring standard traces.....</b>	<b>243</b>
<b>9.15</b>	<b>Working with markers.....</b>	<b>248</b>
9.15.1	Individual marker settings.....	248

9.15.2	General marker settings.....	253
9.15.3	Positioning the marker.....	256
9.15.3.1	Positioning normal markers.....	256
9.15.3.2	Positioning delta markers.....	258
<b>9.16</b>	<b>Retrieving results.....</b>	<b>260</b>
9.16.1	Retrieving and storing trace data.....	260
9.16.2	Retrieving information on detected pulses.....	264
9.16.3	Retrieving parameter results.....	269
9.16.3.1	Retrieving power / amplitude parameters.....	270
9.16.3.2	Retrieving timing parameters.....	287
9.16.3.3	Retrieving frequency parameters.....	296
9.16.3.4	Retrieving phase parameters.....	301
9.16.3.5	Retrieving envelope model parameters.....	305
9.16.4	Retrieving limit results.....	319
9.16.5	Exporting trace results to an ASCII file.....	321
9.16.6	Exporting table results to an ASCII file.....	323
<b>9.17</b>	<b>Retrieving marker results.....</b>	<b>325</b>
<b>9.18</b>	<b>Deprecated commands.....</b>	<b>326</b>
<b>9.19</b>	<b>Programming example: pulse measurement.....</b>	<b>327</b>
	<b>Annex.....</b>	<b>333</b>
<b>A</b>	<b>Reference: ASCII file export format.....</b>	<b>335</b>
<b>B</b>	<b>Effects of large gauss filters.....</b>	<b>337</b>
<b>C</b>	<b>I/Q data file format (iq-tar).....</b>	<b>338</b>
<b>C.1</b>	<b>I/Q parameter XML file specification.....</b>	<b>339</b>
C.1.1	Minimum data elements.....	339
C.1.2	Example.....	341
<b>C.2</b>	<b>I/Q data binary file.....</b>	<b>343</b>
	<b>List of Commands (Pulse).....</b>	<b>346</b>
	<b>Index.....</b>	<b>364</b>





# 1 Documentation overview

This section provides an overview of the R&S FSMR3 user documentation. Unless specified otherwise, you find the documents at:

[www.rohde-schwarz.com/product/FSMR3000.html/](http://www.rohde-schwarz.com/product/FSMR3000.html/)

## 1.1 Getting started manual

Introduces the R&S FSMR3 and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc.

A printed version is delivered with the instrument. A PDF version is available for download on the Internet.

## 1.2 User manuals and help

Separate user manuals are provided for the base unit and the firmware applications:

- Base unit manual  
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages.
- Firmware application manual  
Contains the description of the specific functions of a firmware application, including remote control commands. Basic information on operating the R&S FSMR3 is not included.

The contents of the user manuals are available as help in the R&S FSMR3. The help offers quick, context-sensitive access to the complete information for the base unit and the firmware applications.

All user manuals are also available for download or for immediate display on the Internet.

## 1.3 Service manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

Application notes, application cards, white papers, etc.

## 1.4 Instrument security procedures

Deals with security issues when working with the R&S FSMR3 in secure areas. It is available for download on the Internet.

## 1.5 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

## 1.6 Data sheets and brochures

The data sheet contains the technical specifications of the R&S FSMR3. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See [www.rohde-schwarz.com/brochure-datasheet/FSMR3000/](http://www.rohde-schwarz.com/brochure-datasheet/FSMR3000/)

## 1.7 Release notes and open-source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The software makes use of several valuable open source software packages. An open-source acknowledgment document provides verbatim license texts of the used open source software.

See [www.rohde-schwarz.com/firmware/FSMR3000/](http://www.rohde-schwarz.com/firmware/FSMR3000/)

## 1.8 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

See [www.rohde-schwarz.com/application/FSMR3000/](http://www.rohde-schwarz.com/application/FSMR3000/)

## 2 Welcome to the pulse measurements application

The R&S FSMR3000 Pulse application is a firmware application that adds functionality to perform measurements on pulsed signals to the R&S FSMR3.

The R&S FSMR3000 Pulse application provides measurement and analysis functions for pulse signals frequently used in radar applications, for example.

The R&S FSMR3000 Pulse application (R&S FSMR3-K6) features:

- Automated measurement of many pulse parameters including timing, amplitude, frequency and phase parameters
- Statistical analysis of pulse parameters
- Analysis of "parameter trends" over time and frequency
- Visualization of the dependency between parameters
- Display of amplitude, frequency, phase and power spectrum measurement traces for individual pulses

This user manual contains a description of the functionality that the application provides, including remote control operation.

Functions that are not discussed in this manual are the same as in the Spectrum application and are described in the R&S FSMR3 User Manual. The latest version is available for download at the product homepage:

### Installation

You can find detailed installation instructions in the R&S FSMR3 Getting Started manual or in the Release Notes.

## 2.1 Starting the pulse application

Pulse measurements require a separate application on the R&S FSMR3.

### To activate the R&S FSMR3000 Pulse application

1. Press the [MODE] key on the front panel of the R&S FSMR3.

A dialog box opens that contains all operating modes and applications currently available on your R&S FSMR3.

2. Select the "Pulse" item.



The R&S FSMR3 opens a new measurement channel for the R&S FSMR3000 Pulse application.


The measurement is started immediately with the default settings. It can be configured in the Pulse "Overview" dialog box, which is displayed when you select the "Overview" softkey from any menu (see [Chapter 5.1, "Configuration overview"](#), on page 55).

### Multiple Measurement Channels and Sequencer Function

When you activate an application, a new measurement channel is created which determines the measurement settings for that application. The same application can be activated with different measurement settings by creating several channels for the same application.

The number of channels that can be configured at the same time depends on the available memory on the instrument.


Only one measurement can be performed at any time, namely the one in the currently active channel. However, in order to perform the configured measurements consecutively, a Sequencer function is provided.

If activated, the measurements configured in the currently active channels are performed one after the other in the order of the tabs. The currently active measurement is indicated by a  symbol in the tab label. The result displays of the individual channels are updated in the tabs (including the "MultiView") as the measurements are performed. Sequential operation itself is independent of the currently *displayed* tab.

For details on the Sequencer function see the R&S FSMR3 User Manual.

## 2.2 Understanding the display information

The following figure shows a measurement diagram during analyzer operation. All different information areas are labeled. They are explained in more detail in the following sections.

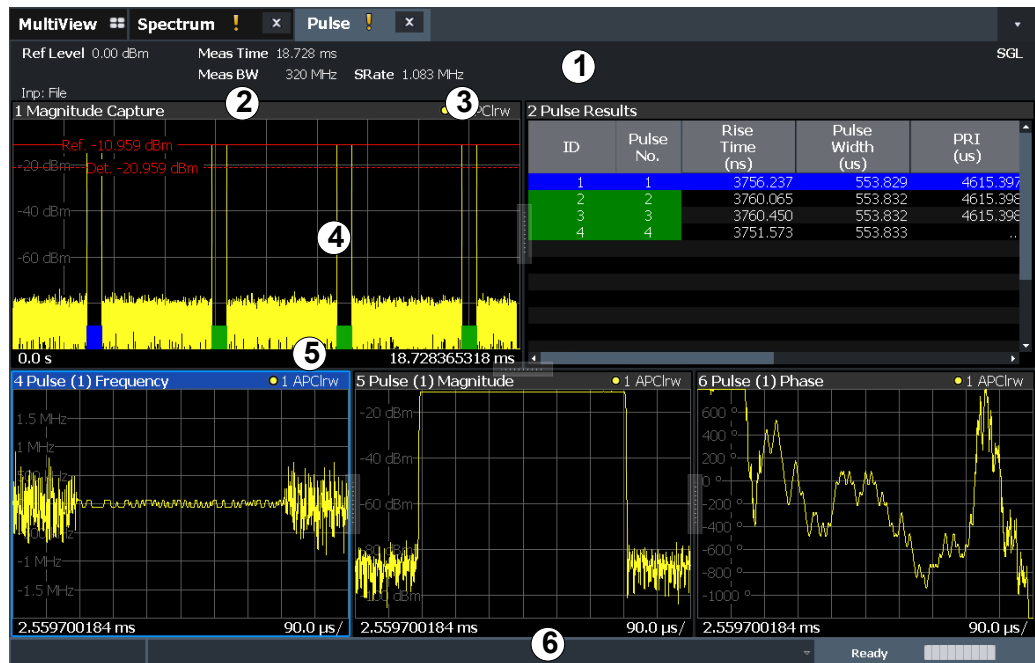

- 1 = Channel bar for firmware and measurement settings
- 2+3 = Window title bar with diagram-specific (trace) information
- 4 = Diagram area
- 5 = Diagram footer with diagram-specific information, depending on measurement
- 6 = Instrument status bar with error messages, progress bar and date/time display

### Channel bar information

In the R&S FSMR3000 Pulse application, the R&S FSMR3 shows the following settings:

**Table 2-1: Information displayed in the channel bar in the R&S FSMR3000 Pulse application**

<b>Ref Level</b>	Reference level
<b>Att *)</b>	RF attenuation
<b>Freq *)</b>	Center frequency for the RF signal
<b>Meas Time</b>	Measurement time (data acquisition time)
<b>Meas BW *)</b>	Measurement bandwidth
<b>SRate</b>	Sample rate
<b>SGL</b>	The sweep is set to single sweep mode.
*) If the input source is an I/Q data file, most measurement settings related to data acquisition are not known and thus not displayed.	

In addition, the channel bar also displays information on instrument settings that affect the measurement results even though this is not immediately apparent from the display of the measured values (e.g. transducer or trigger settings). This information is dis-

played only when applicable for the current measurement. For details see the R&S FSMR3 Getting Started manual.

### Window title bar information

For each diagram, the header provides the following information:



*Figure 2-1: Window title bar information in the R&S FSMR3000 Pulse application*

- 1 = Window number
- 2 = Window type
- 3 = Trace color
- 4 = Trace number
- 6 = Trace mode

### Diagram footer information

The diagram footer (beneath the diagram) contains the start and stop values for the displayed time range.

### Status bar information

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram. Furthermore, the progress of the current operation is displayed in the status bar.

## 3 Measurements and result displays

During a pulse measurement, I/Q data from the input signal is captured for a specified time or for a specified record length. Pulses are detected from the signal according to specified thresholds and user-defined criteria. The measured signal is then compared with the ideal signal described by the user and any deviations are recorded. The defined range of measured data is then evaluated to determine characteristic pulse parameters. These parameters can either be displayed as traces, in a table, or be evaluated statistically over a series of measurements.

### Measurement range vs. result range vs. detection range

The **measurement range** defines which part of an *individual pulse* is measured (for example for frequency deviation), whereas the **result range** determines which data is **displayed** on the screen in the form of amplitude, frequency or phase vs. time traces.

The **detection range** (if enabled) determines which part of the *capture buffer* is analyzed. The pulse numbers in the result displays are always relative to the current detection range, that is: pulse number 1 is the first pulse within the detection range in the capture buffer. If disabled (default), the entire capture buffer is used as the detection range. See also "[Detection range](#)" on page 46.

- [Pulse parameters](#)..... 15
- [Evaluation methods for pulse measurements](#)..... 29

### 3.1 Pulse parameters

The pulse parameters to be measured are based primarily on the IEEE 181 Standard 181-2003. For detailed descriptions refer to the standard documentation ("IEEE Standard on Transitions, Pulses, and Related Waveforms", from the IEEE Instrumentation and Measurement (I&M) Society, 7 July 2003).

The following graphic illustrates the main pulse parameters and characteristic values. (For a definition of the values used to determine the measured pulse parameters see [Chapter 4.1, "Parameter definitions"](#), on page 41.)

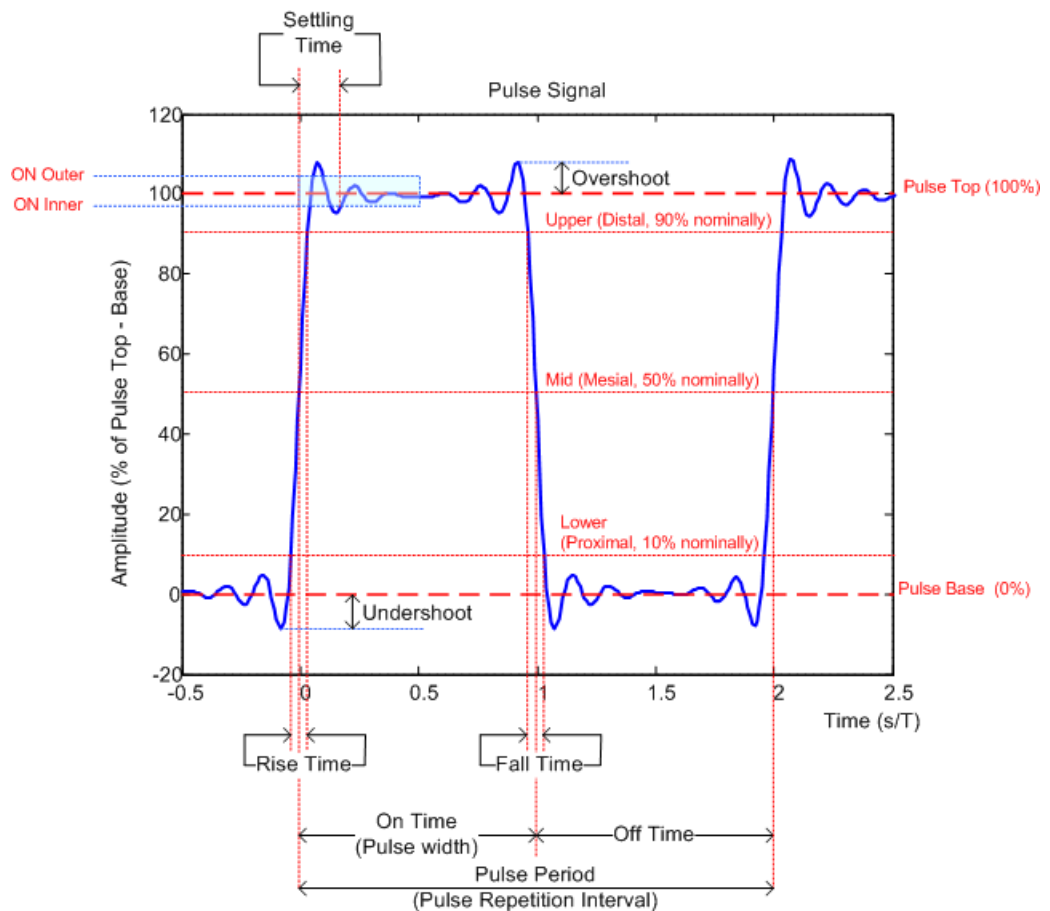


Figure 3-1: Definition of the main pulse parameters and characteristic values

In order to obtain these results, select the corresponding parameter in the result configuration (see [Chapter 6.1, "Result configuration"](#), on page 87) or apply the required SCPI parameter to the remote command (see [Chapter 9.12, "Configuring the results"](#), on page 170 and [Chapter 9.16, "Retrieving results"](#), on page 260).

- [Timing parameters](#)..... 16
- [Power/amplitude parameters](#)..... 19
- [Frequency parameters](#)..... 23
- [Phase parameters](#)..... 24
- [Envelope model \(cardinal data points\) parameters](#)..... 25

### 3.1.1 Timing parameters

The following timing parameters can be determined by the R&S FSMR3000 Pulse application.

<a href="#">Timestamp</a> .....	17
<a href="#">Settling Time</a> .....	17
<a href="#">Rise Time</a> .....	17
<a href="#">Fall Time</a> .....	17



Pulse Width (ON Time).....	18
Off Time.....	18
Duty Ratio.....	18
Duty Cycle (%).....	18
Pulse Repetition Interval.....	18
Pulse Repetition Frequency (Hz).....	19

### Timestamp

The time stamp uniquely identifies each pulse in the capture buffer. It is defined as the time from the capture start point to the beginning of the pulse period of the current pulse. (As opposed to the pulse *number*, which is always relative to the start of the detection range, see also "Detection range" on page 46).

Depending on the user-specified definition of the pulse period, the period begins with the mid-level crossing of the current pulse's rising edge (period: high-to-low) or the mid-level crossing of the previous pulse's falling edge (period low-to-high). See also "Pulse Period" on page 58.

**Note:** For external triggers, the trigger point within the sample (TPIS) is considered in the timestamp (see [TRACe: IQ: TPISample?](#) on page 269).

Remote command:

[\[SENSe:\] PULSe: TIMing: TSTamp?](#) on page 295  
[CALCulate<n>: TABLE: TIMing: TSTamp](#) on page 226  
[\[SENSe:\] PULSe: TIMing: TSTamp: LIMit?](#) on page 321

### Settling Time

The difference between the time at which the pulse exceeds the mid threshold on the rising edge to the point where the pulse waveform remains within the pulse boundary (ON Inner/ ON Outer)

See [Figure 3-1](#)

Remote command:

[\[SENSe:\] PULSe: TIMing: SETTling?](#) on page 294  
[CALCulate<n>: TABLE: TIMing: SETTling](#) on page 226  
[\[SENSe:\] PULSe: TIMing: SETTling: LIMit?](#) on page 321

### Rise Time

The time required for the pulse to transition from the base to the top level. This is the difference between the time at which the pulse exceeds the lower and upper thresholds.

See [Figure 3-1](#)

Remote command:

[\[SENSe:\] PULSe: TIMing: RISE?](#) on page 293  
[CALCulate<n>: TABLE: TIMing: RISE](#) on page 226  
[\[SENSe:\] PULSe: TIMing: RISE: LIMit?](#) on page 320

### Fall Time

The time required for the pulse to transition from the top to the base level. This is the difference between the time at which the pulse drops below the upper and lower thresholds.

See [Figure 3-1](#)

Remote command:

[\[SENSe:\]PULSe:TIMing:FALL?](#) on page 289

[CALCulate<n>:TABLe:TIMing:FALL](#) on page 225

[\[SENSe:\]PULSe:TIMing:FALL:LIMit?](#) on page 320

#### **Pulse Width (ON Time)**

The time that the pulse remains at the top level ("ON"). This is the time between the first positive edge and the subsequent negative edge of the pulse in seconds, where the edges occur at crossings of the mid threshold.

See [Figure 3-1](#)

Remote command:

[\[SENSe:\]PULSe:TIMing:PWIDth?](#) on page 293

[CALCulate<n>:TABLe:TIMing:PWIDth](#) on page 226

[\[SENSe:\]PULSe:TIMing:PWIDth:LIMit?](#) on page 320

#### **Off Time**

The time that the pulse remains at the base level ("OFF"). This is the time between the first negative edge and the subsequent positive edge of the pulse in seconds, where the edges occur at crossings of the mid threshold.

See [Figure 3-1](#)

Remote command:

[\[SENSe:\]PULSe:TIMing:OFF?](#) on page 290

[CALCulate<n>:TABLe:TIMing:OFF](#) on page 225

[\[SENSe:\]PULSe:TIMing:OFF:LIMit?](#) on page 320

#### **Duty Ratio**

The ratio of the "Pulse Width" to "Pulse Repetition Interval" expressed as a value between 0 and 1 (requires at least two measured pulses)

Remote command:

[\[SENSe:\]PULSe:TIMing:DRATio?](#) on page 289

[CALCulate<n>:TABLe:TIMing:DRATio](#) on page 224

[\[SENSe:\]PULSe:TIMing:DRATio:LIMit?](#) on page 320

#### **Duty Cycle (%)**

The ratio of the "Pulse Width" to "Pulse Repetition Interval" expressed as a percentage (requires at least two measured pulses)

Remote command:

[\[SENSe:\]PULSe:TIMing:DCYClE?](#) on page 288

[CALCulate<n>:TABLe:TIMing:DCYClE](#) on page 224

[\[SENSe:\]PULSe:TIMing:DCYClE:LIMit?](#) on page 320

#### **Pulse Repetition Interval**

The time between two consecutive edges of the same polarity in seconds (requires at least two measured pulses). The user-specified definition of the pulse period (see "[Pulse Period](#)" on page 58) determines whether this value is calculated from consecutive rising or falling edges.

Remote command:

[SENSe:] PULSe:TIMing:PRI? on page 292  
 CALCulate<n>:TABLe:TIMing:PRI on page 225  
 [SENSe:] PULSe:TIMing:PRI:LIMit? on page 320

### Pulse Repetition Frequency (Hz)

The frequency of occurrence of pulses, i.e. inverse of the "Pulse Repetition Interval" (requires at least two measured pulses)

Remote command:

[SENSe:] PULSe:TIMing:PRF? on page 291  
 CALCulate<n>:TABLe:TIMing:PRF on page 225  
 [SENSe:] PULSe:TIMing:PRF:LIMit? on page 320

## 3.1.2 Power/amplitude parameters

The following power/amplitude parameters can be determined by the R&S FSMR3000 Pulse application.

Top Power.....	19
Base Power.....	19
Pulse Amplitude.....	20
In-Phase Amplitude/Quadrature Amplitude.....	20
Average ON Power.....	20
Average Tx Power.....	20
Minimum Power.....	20
Peak Power.....	21
Peak-to-Avg ON Power Ratio.....	21
Peak-to-Average Tx Power Ratio.....	21
Peak-to-Min Power Ratio.....	21
Droop.....	21
Ripple.....	22
Overshoot.....	22
Power (at Point).....	22
Pulse-to-Pulse Power Ratio.....	22

### Top Power

The median pulse ON power. The value of this parameter is used as a reference (100%) to determine other parameter values such as the rising / falling thresholds. Various algorithms are provided to determine the top power (see "Measurement Algorithm" on page 81).

Remote command:

[SENSe:] PULSe:POWer:TOP? on page 286  
 CALCulate<n>:TABLe:POWer:TOP on page 224  
 [SENSe:] PULSe:POWer:TOP:LIMit? on page 320

### Base Power

The median pulse OFF power. The value of this parameter is used as a reference (0%) to determine other parameter values such as the rising / falling thresholds.

Remote command:

[SENSe:] PULSe:POWer:BASE? on page 276  
 CALCulate<n>:TABLe:POWer:BASE on page 220  
 [SENSe:] PULSe:POWer:BASE:LIMit? on page 320

### Pulse Amplitude

The difference between the "Top Power" and the "Base Power", calculated in linear power units (W). This value determines the 100% power range (amplitude). This value is converted to dBm for the "Pulse Results" table.

Remote command:

[SENSe:] PULSe:POWer:AMPLitude? on page 273  
 CALCulate<n>:TABLe:POWer:AMPLitude on page 219  
 [SENSe:] PULSe:POWer:AMPLitude:LIMit? on page 320

### In-Phase Amplitude/Quadrature Amplitude

The pulse in-phase or quadrature amplitude as a voltage, measured at the measurement point of the pulse (see [Chapter 5.9.2, "Measurement point"](#), on page 82). Values range from -10 mV to +10 mV.

Remote command:

Querying results:

[SENSe:] PULSe:POWer:AMPLitude:I? on page 274  
 [SENSe:] PULSe:POWer:AMPLitude:Q? on page 275

Including results in result summary table:

CALCulate<n>:TABLe:POWer:AMPLitude:I on page 219  
 CALCulate<n>:TABLe:POWer:AMPLitude:Q on page 220

Querying limit check results:

[SENSe:] PULSe:POWer:AMPLitude:I:LIMit? on page 320  
 [SENSe:] PULSe:POWer:AMPLitude:Q:LIMit? on page 320

### Average ON Power

The average power during the pulse ON time

Remote command:

[SENSe:] PULSe:POWer:ON? on page 278  
 CALCulate<n>:TABLe:POWer:ON on page 221  
 [SENSe:] PULSe:POWer:ON:LIMit? on page 320

### Average Tx Power

The average transmission power over the entire pulse ON + OFF time

Remote command:

[SENSe:] PULSe:POWer:AVG? on page 275  
 CALCulate<n>:TABLe:POWer:AVG on page 220  
 [SENSe:] PULSe:POWer:AVG:LIMit? on page 320

### Minimum Power

The minimum power over the entire pulse ON + OFF time

Remote command:

[SENSe:] PULSe:POWer:MIN? on page 278  
 CALCulate<n>:TABLe:POWer:MIN on page 221  
 [SENSe:] PULSe:POWer:MIN:LIMit? on page 320

### Peak Power

The maximum power over the entire pulse ON + OFF time

Remote command:

[SENSe:] PULSe:POWer:MAX? on page 277  
 CALCulate<n>:TABLe:POWer:MAX on page 220  
 [SENSe:] PULSe:POWer:MAX:LIMit? on page 320

### Peak-to-Avg ON Power Ratio

The ratio of maximum to average power over the pulse ON time (also known as **crest factor**)

Remote command:

[SENSe:] PULSe:POWer:PON? on page 283  
 CALCulate<n>:TABLe:POWer:PON on page 222  
 [SENSe:] PULSe:POWer:PON:LIMit? on page 320

### Peak-to-Average Tx Power Ratio

The ratio of maximum to average power over the entire pulse ON + OFF interval.

Remote command:

[SENSe:] PULSe:POWer:PAVG? on page 281  
 CALCulate<n>:TABLe:POWer:PAVG on page 222  
 [SENSe:] PULSe:POWer:PAVG:LIMit? on page 320

### Peak-to-Min Power Ratio

The ratio of maximum to minimum power over the entire pulse ON + OFF time

Remote command:

[SENSe:] PULSe:POWer:PMIN? on page 281  
 CALCulate<n>:TABLe:POWer:PMIN on page 222  
 [SENSe:] PULSe:POWer:PMIN:LIMit? on page 320

### Droop

The rate at which the pulse top level decays, calculated as the difference between the power at the beginning of the pulse ON time and the power at the end of the pulse ON time, divided by the pulse amplitude.

Droop values are only calculated if **Pulse Has Droop** is set to "On" (default).

For more information see [Chapter 4.1.1, "Amplitude droop"](#), on page 42

**Note:** The percentage ratio values are calculated in %V if the "Measurement Level" is defined in V (see ["Reference Level Unit"](#) on page 81), otherwise in %W.

Remote command:

[SENSe:] PULSe:POWer:ADRoop:DB? on page 272  
 [SENSe:] PULSe:POWer:ADRoop[:PERCent]? on page 272  
 CALCulate<n>:TABLe:POWer:ADRoop:DB on page 218

CALCulate<n>:TABLE:POWer:ADRoop[:PERCent] on page 219

[SENSe:]PULSe:POWer:ADRoop:DB:LIMit? on page 320

[SENSe:]PULSe:POWer:ADRoop[:PERCent]:LIMit? on page 320

### Ripple

The ripple is calculated as the difference between the maximum and minimum deviation from the pulse top reference, within a user specified interval.

For more information see [Chapter 4.1.2, "Ripple"](#), on page 42

**Note:** The percentage ratio values are calculated in %V if the "Measurement Level" is defined in V (see ["Reference Level Unit"](#) on page 81), otherwise in %W.

Remote command:

[SENSe:]PULSe:POWer:RIPPlE:DB? on page 285

[SENSe:]PULSe:POWer:RIPPlE[:PERCent]? on page 285

CALCulate<n>:TABLE:POWer:RIPPlE:DB on page 223

CALCulate<n>:TABLE:POWer:RIPPlE[:PERCent] on page 223

[SENSe:]PULSe:POWer:RIPPlE:DB:LIMit? on page 320

[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:LIMit? on page 320

### Overshoot

The height of the local maximum after a rising edge, divided by the pulse amplitude.

For more information see [Chapter 4.1.3, "Overshoot"](#), on page 44.

**Note:** The percentage ratio values are calculated in %V if the "Measurement Level" is defined in V (see ["Reference Level Unit"](#) on page 81), otherwise in %W.

Remote command:

[SENSe:]PULSe:POWer:OVERshooT:DB? on page 279

[SENSe:]PULSe:POWer:OVERshooT[:PERCent]? on page 280

CALCulate<n>:TABLE:POWer:OVERshooT:DB on page 221

CALCulate<n>:TABLE:POWer:OVERshooT[:PERCent] on page 221

[SENSe:]PULSe:POWer:OVERshooT:DB:LIMit? on page 320

[SENSe:]PULSe:POWer:OVERshooT[:PERCent]:LIMit? on page 320

### Power (at Point)

The power measured at the pulse "measurement point" specified by the [Measurement Point Reference](#) and the ["Offset"](#) on page 83

Remote command:

[SENSe:]PULSe:POWer:POINt? on page 282

CALCulate<n>:TABLE:POWer:POINt on page 222

[SENSe:]PULSe:POWer:POINt:LIMit? on page 320

### Pulse-to-Pulse Power Ratio

The ratio of the "Power" values from the first measured pulse to the current pulse.

Remote command:

[SENSe:]PULSe:POWer:PPRatio? on page 284

CALCulate<n>:TABLE:POWer:PPRatio on page 223

[SENSe:]PULSe:POWer:PPRatio:LIMit? on page 320

### 3.1.3 Frequency parameters

The following frequency parameters can be determined by the R&S FSMR3000 Pulse application.

Frequency.....	23
Pulse-Pulse Frequency Difference.....	23
Frequency Error (RMS).....	23
Frequency Error (Peak).....	23
Frequency Deviation.....	24
Chirp Rate.....	24

#### Frequency

Frequency of the pulse measured at the defined [Measurement point](#)

Remote command:

[\[SENSe:\] PULSe:FREQuency:POINt?](#) on page 299

[CALCulate<n>:TABLE:FREQuency:POINt](#) on page 216

[\[SENSe:\] PULSe:FREQuency:POINt:LIMit?](#) on page 320

#### Pulse-Pulse Frequency Difference

Difference in frequency between the first measured pulse and the currently measured pulse

Remote command:

[\[SENSe:\] PULSe:FREQuency:PPFREquency?](#) on page 299

[CALCulate<n>:TABLE:FREQuency:PPFREquency](#) on page 216

[\[SENSe:\] PULSe:FREQuency:PPFREquency:LIMit?](#) on page 320

#### Frequency Error (RMS)

The RMS frequency error of the currently measured pulse. The error is calculated relative to the given pulse modulation. It is not calculated at all for modulation type "Arbitrary". The error is calculated over the [Measurement range](#).

Remote command:

[\[SENSe:\] PULSe:FREQuency:RERRor?](#) on page 300

[CALCulate<n>:TABLE:FREQuency:RERRor](#) on page 216

[\[SENSe:\] PULSe:FREQuency:RERRor:LIMit?](#) on page 320

#### Frequency Error (Peak)

The peak frequency error of the currently measured pulse. The error is calculated relative to the given pulse modulation. It is not calculated at all for modulation type "Arbitrary". The error is calculated over the [Measurement range](#).

Remote command:

[\[SENSe:\] PULSe:FREQuency:PERRor?](#) on page 298

[CALCulate<n>:TABLE:FREQuency:PERRor](#) on page 216

[\[SENSe:\] PULSe:FREQuency:PERRor:LIMit?](#) on page 320

**Frequency Deviation**

The frequency deviation of the currently measured pulse. The deviation is calculated as the absolute difference between the maximum and minimum frequency values within the [Measurement range](#).

Remote command:

[SENSe:]PULSe:FREQuency:DEVIation? on page 297

CALCulate<n>:TABLe:FREQuency:DEVIation on page 215

[SENSe:]PULSe:FREQuency:DEVIation:LIMit? on page 320

**Chirp Rate**

A known frequency chirp rate (per  $\mu\text{s}$ ) to be used for generating an ideal pulse waveform.

Note: a chirp rate is only available for the [Pulse Modulation](#) type "Linear FM".

Remote command:

[SENSe:]PULSe:FREQuency:CRATe? on page 296

CALCulate<n>:TABLe:FREQuency:CRATe on page 215

[SENSe:]PULSe:FREQuency:CRATe:LIMit? on page 320

**3.1.4 Phase parameters**

The following phase parameters can be determined by the R&S FSMR3000 Pulse application.

<a href="#">Phase</a> .....	24
<a href="#">Pulse-Pulse Phase Difference</a> .....	24
<a href="#">Phase Error (RMS)</a> .....	25
<a href="#">Phase Error (Peak)</a> .....	25
<a href="#">Phase Deviation</a> .....	25

**Phase**

Phase of the pulse measured at the defined [Measurement point](#)

Remote command:

[SENSe:]PULSe:PHASe:POINt? on page 303

CALCulate<n>:TABLe:PHASe:POINt on page 217

[SENSe:]PULSe:PHASe:POINt:LIMit? on page 320

**Pulse-Pulse Phase Difference**

Difference in phase between the first measured pulse and the currently measured pulse

Remote command:

[SENSe:]PULSe:PHASe:PPPHase? on page 304

CALCulate<n>:TABLe:PHASe:PPPHase on page 218

[SENSe:]PULSe:PHASe:PPPHase:LIMit? on page 320



**Phase Error (RMS)**

The RMS phase error of the currently measured pulse. The error is calculated relative to the given pulse modulation. It is not calculated at all for the [Pulse Modulation](#) type "Arbitrary". The error is calculated over the [Measurement range](#).

Remote command:

[\[SENSe:\]PULSe:PHASe:RERRor?](#) on page 305

[CALCulate<n>:TABLe:PHASe:RERRor](#) on page 218

[\[SENSe:\]PULSe:PHASe:RERRor:LIMit?](#) on page 320

**Phase Error (Peak)**

The peak phase error of the currently measured pulse. The error is calculated relative to the given pulse modulation. It is not calculated at all for the [Pulse Modulation](#) type "Arbitrary". The error is calculated over the [Measurement range](#).

Remote command:

[\[SENSe:\]PULSe:PHASe:PERRor?](#) on page 302

[CALCulate<n>:TABLe:PHASe:PERRor](#) on page 217

[\[SENSe:\]PULSe:PHASe:PERRor:LIMit?](#) on page 320

**Phase Deviation**

The phase deviation of the currently measured pulse. The deviation is calculated as the absolute difference between the maximum and minimum phase values within the [Measurement range](#).

Remote command:

[\[SENSe:\]PULSe:PHASe:DEViation?](#) on page 302

[CALCulate<n>:TABLe:PHASe:DEViation](#) on page 217

[\[SENSe:\]PULSe:PHASe:DEViation:LIMit?](#) on page 320

### 3.1.5 Envelope model (cardinal data points) parameters

The pulse envelope model has the shape of a trapezoid of amplitude (V) versus time (s) values. This model allows for a finite rise and fall time, as well as an amplitude droop across the top of the pulse. During measurement of each pulse, the points of this trapezoidal model are determined as the basis for further measurements. For example, the rise and fall time amplitude thresholds or the "pulse top" duration are determined from the parameters of the envelope model.

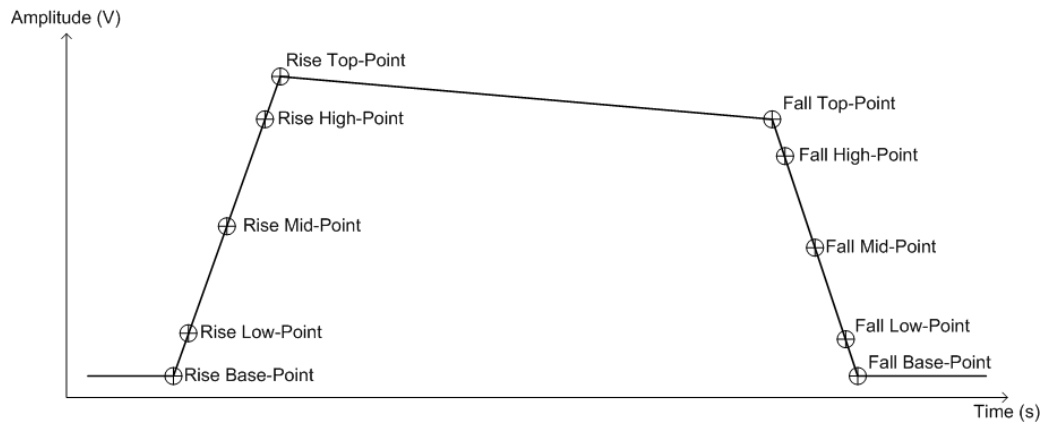


Figure 3-2: Envelope model parameters

Each of these parameters has a time and an amplitude value. The time values are relative to the pulse timestamp and displayed in seconds. The amplitude values are displayed as power in dBm units.



You configure the desired high, mid and low thresholds for the rise and fall slopes relative to the base (0%) and top (100%) levels. See [Chapter 5.9.1, "Measurement levels"](#), on page 79.

The power value of the rise base point and the fall base point is assumed to be equal and is defined by the "Base Power" parameter found in the "Amplitude Parameters" group of the table configuration (see ["Base Power"](#) on page 19).

<a href="#">Rise Base Point Time</a> .....	26
<a href="#">Rise Low Point Time</a> .....	27
<a href="#">Rise Mid Point Time</a> .....	27
<a href="#">Rise High Point Time</a> .....	27
<a href="#">Rise Top Point Time</a> .....	27
<a href="#">Rise Low Point Level</a> .....	27
<a href="#">Rise Mid Point Level</a> .....	27
<a href="#">Rise High Point Level</a> .....	28
<a href="#">Rise Top Point Level</a> .....	28
<a href="#">Fall Base Point Time</a> .....	28
<a href="#">Fall Low Point Time</a> .....	28
<a href="#">Fall Mid Point Time</a> .....	28
<a href="#">Fall High Point Time</a> .....	28
<a href="#">Fall Top Point Time</a> .....	28
<a href="#">Fall Low Point Level</a> .....	29
<a href="#">Fall Mid Point Level</a> .....	29
<a href="#">Fall High Point Level</a> .....	29
<a href="#">Fall Top Point Level</a> .....	29

**Rise Base Point Time**

The time the amplitude starts rising above 0 %.

Remote command:

[SENSe:] PULSe:EMODel:RBPTime? on page 313

CALCulate<n>:TABLE:EMODel:RBPTime on page 212

[SENSe:] PULSe:EMODel:RBPTime:LIMit? on page 319

#### Rise Low Point Time

The time the amplitude reaches the **Low (Proximal) Threshold** in the rising edge.

Remote command:

[SENSe:] PULSe:EMODel:RLPTime? on page 316

CALCulate<n>:TABLE:EMODel:RLPTime on page 213

[SENSe:] PULSe:EMODel:RLPTime:LIMit? on page 320

#### Rise Mid Point Time

The time the amplitude reaches the **Mid (Mesial) Threshold** in the rising edge.

Remote command:

[SENSe:] PULSe:EMODel:RMPTime? on page 317

CALCulate<n>:TABLE:EMODel:RMPTime on page 214

[SENSe:] PULSe:EMODel:RMPTime:LIMit? on page 320

#### Rise High Point Time

The time the amplitude reaches the **High (Distal) Threshold** in the rising edge.

Remote command:

[SENSe:] PULSe:EMODel:RHPTime? on page 315

CALCulate<n>:TABLE:EMODel:RHPTime on page 213

[SENSe:] PULSe:EMODel:RHPTime:LIMit? on page 320

#### Rise Top Point Time

The time the amplitude reaches the 100 % level in the rising edge.

Remote command:

[SENSe:] PULSe:EMODel:RTPTime? on page 319

CALCulate<n>:TABLE:EMODel:RTPTime on page 215

[SENSe:] PULSe:EMODel:RTPTime:LIMit? on page 320

#### Rise Low Point Level

The amplitude of the **Low (Proximal) Threshold** in the rising edge.

Remote command:

[SENSe:] PULSe:EMODel:RLPLevel? on page 315

CALCulate<n>:TABLE:EMODel:RLPLevel on page 213

[SENSe:] PULSe:EMODel:RLPLevel:LIMit? on page 320

#### Rise Mid Point Level

The amplitude of the **Mid (Mesial) Threshold** in the rising edge.

Remote command:

[SENSe:] PULSe:EMODel:RMPLevel? on page 317

CALCulate<n>:TABLE:EMODel:RMPLevel on page 214

[SENSe:] PULSe:EMODel:RMPLevel:LIMit? on page 320

**Rise High Point Level**

The amplitude of the [High \(Distal\) Threshold](#) in the rising edge.

Remote command:

[\[SENSe:\]PULSe:EMODel:RHPLLevel?](#) on page 314

[CALCulate<n>:TABLE:EMODel:RHPLLevel](#) on page 213

[\[SENSe:\]PULSe:EMODel:RHPLLevel:LIMit?](#) on page 319

**Rise Top Point Level**

The amplitude at 100 % in the rising edge.

Remote command:

[\[SENSe:\]PULSe:EMODel:RTPLLevel?](#) on page 318

[CALCulate<n>:TABLE:EMODel:RTPLLevel](#) on page 214

[\[SENSe:\]PULSe:EMODel:RTPLLevel:LIMit?](#) on page 320

**Fall Base Point Time**

The time the amplitude reaches 0 % on the falling edge.

Remote command:

[\[SENSe:\]PULSe:EMODel:FBPTime?](#) on page 307

[CALCulate<n>:TABLE:EMODel:FBPTime](#) on page 210

[\[SENSe:\]PULSe:EMODel:FBPTime:LIMit?](#) on page 319

**Fall Low Point Time**

The time the amplitude reaches the [Low \(Proximal\) Threshold](#) in the falling edge.

Remote command:

[\[SENSe:\]PULSe:EMODel:FLPTime?](#) on page 310

[CALCulate<n>:TABLE:EMODel:FLPTime](#) on page 211

[\[SENSe:\]PULSe:EMODel:FLPTime:LIMit?](#) on page 319

**Fall Mid Point Time**

The time the amplitude reaches the [Mid \(Mesial\) Threshold](#) in the falling edge.

Remote command:

[\[SENSe:\]PULSe:EMODel:FMPTime?](#) on page 311

[CALCulate<n>:TABLE:EMODel:FMPTime](#) on page 212

[\[SENSe:\]PULSe:EMODel:FMPTime:LIMit?](#) on page 319

**Fall High Point Time**

The time the amplitude reaches the [High \(Distal\) Threshold](#) in the falling edge.

Remote command:

[\[SENSe:\]PULSe:EMODel:FHPTime?](#) on page 309

[CALCulate<n>:TABLE:EMODel:FHPTime](#) on page 211

[\[SENSe:\]PULSe:EMODel:FHPTime:LIMit?](#) on page 319

**Fall Top Point Time**

The time the amplitude falls below the 100 % level in the falling edge.

Remote command:

[SENSe:] PULSe:EMODel:FTPTime? on page 313

CALCulate<n>:TABLE:EMODel:FTPTime on page 212

[SENSe:] PULSe:EMODel:FTPTime:LIMit? on page 319

#### Fall Low Point Level

The amplitude of the [Low \(Proximal\) Threshold](#) in the falling edge.

Remote command:

[SENSe:] PULSe:EMODel:FLPLevel? on page 309

CALCulate<n>:TABLE:EMODel:FLPLevel on page 211

[SENSe:] PULSe:EMODel:FLPLevel:LIMit? on page 319

#### Fall Mid Point Level

The amplitude of the [Mid \(Mesial\) Threshold](#) in the falling edge.

Remote command:

[SENSe:] PULSe:EMODel:FMPLevel? on page 311

CALCulate<n>:TABLE:EMODel:FMPLevel on page 211

[SENSe:] PULSe:EMODel:FMPLevel:LIMit? on page 319

#### Fall High Point Level

The amplitude of the [High \(Distal\) Threshold](#) in the falling edge.

Remote command:

[SENSe:] PULSe:EMODel:FHPLevel? on page 308

CALCulate<n>:TABLE:EMODel:FHPLevel on page 210

[SENSe:] PULSe:EMODel:FHPLevel:LIMit? on page 319

#### Fall Top Point Level

The amplitude at 100 % in the falling edge.

Remote command:

[SENSe:] PULSe:EMODel:FTPLevel? on page 312

CALCulate<n>:TABLE:EMODel:FTPLevel on page 212

[SENSe:] PULSe:EMODel:FTPLevel:LIMit? on page 319

## 3.2 Evaluation methods for pulse measurements

The data that was measured by the R&S FSMR3000 Pulse application can be evaluated using various different methods.

By default, the Pulse measurement results are displayed in the following windows:

- "Magnitude Capture"
- "Pulse Results"
- "Pulse Frequency"
- "Pulse Magnitude"
- "Pulse Phase"

The following evaluation methods are available for Pulse measurements:

Magnitude Capture.....	30
Marker Table.....	31
Parameter Distribution.....	31
Parameter Spectrum.....	32
Parameter Trend.....	32
Pulse Frequency.....	34
Pulse I and Q.....	35
Pulse Magnitude.....	35
Pulse Phase.....	36
Pulse Phase (Wrapped).....	36
Pulse Results.....	37
Pulse-Pulse Spectrum.....	38
Pulse Statistics.....	39
Result Range Spectrum.....	40


### Magnitude Capture

Displays the captured data. Detected pulses are indicated by **green bars** along the x-axis. The currently selected pulse is highlighted in **blue**.

Additionally, the following parameters are indicated by horizontal lines in the diagram:

- **"Ref"**: the pulse detection reference level (see [Chapter 5.9.1, "Measurement levels"](#), on page 79)
- **"Det"**: the pulse detection threshold (see ["Threshold"](#) on page 78)
- **"100 %"**: a fixed top power level (see ["Fixed Value"](#) on page 81)  
You can drag the line in the diagram to change the top power level.

The detection range is indicated by vertical lines (**"DR"**, see ["Detection Range"](#) on page 78). You can drag the lines within the capture buffer to change the detection range.

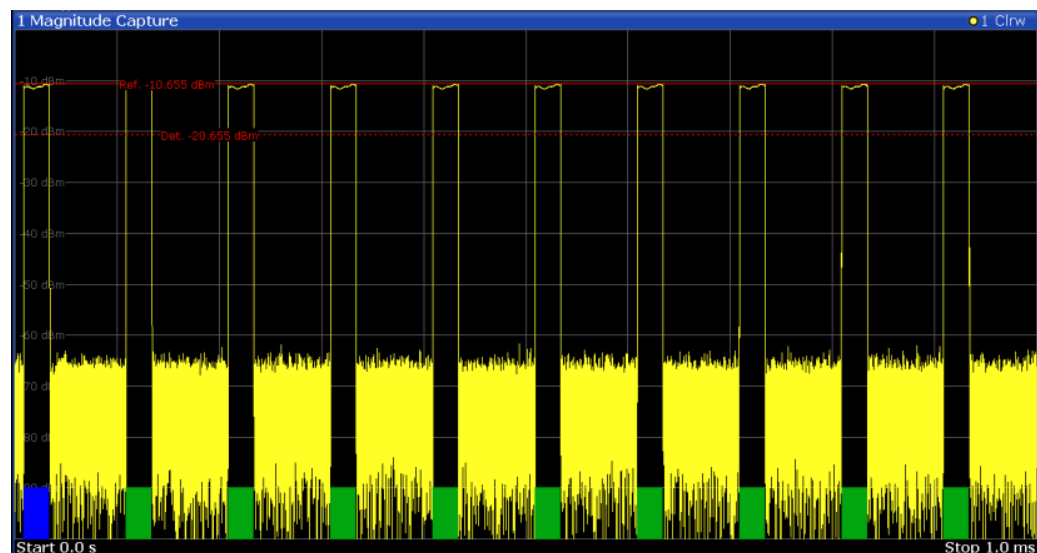

Remote command:

LAY:ADD:WIND '2',RIGH,MCAP see [LAYout:ADD\[:WINDow\]?](#) on page 236

Results:

[TRACe<n>\[:DATA\]?](#) on page 260

### Marker Table

Displays a table with the current marker values for the active markers.

This table is displayed automatically if configured accordingly.

1 Marker Table							
Wnd	Type	Ref	Trc	X-Value	Y-Value	Function	Function Result
2	M1		1	2.1725 ms	-6.80 dBm		
2	D2	M1	1	13.859 ms	-0.00 dB		
2	D3	M1	1	4.6259 ms	-0.00 dB		
2	D4	M1	1	9.2331 ms	-0.00 dB		

**Tip:** To navigate within long marker tables, simply scroll through the entries with your finger on the touchscreen.

Remote command:

LAY:ADD? '1',RIGH, MTAB, see [LAYout:ADD\[:WINDow\]?](#) on page 236

Results:


[CALCulate<n>:MARKer<m>:X](#) on page 250

[CALCulate<n>:MARKer<m>:Y?](#) on page 325

### Parameter Distribution

Plots a histogram of a particular parameter, i.e. all measured parameter values from the current capture vs pulse count or occurrence in %. Thus you can determine how often a particular parameter value occurs. For each "parameter distribution" window you can configure a different parameter to be displayed.

This evaluation method allows you to distinguish transient and stable effects in a specific parameter, such as a spurious frequency deviation or a fluctuation in power over several pulses.

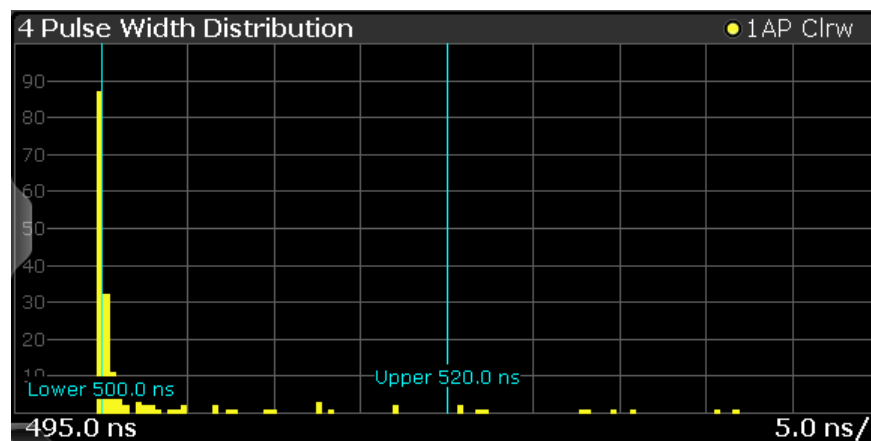

**Note:** Limit lines. Optionally, limit lines can be displayed in the "Parameter Distribution" diagram. You can drag these lines to a new position in the window. The new position is maintained, the limit check is repeated, and the results of the limit check in any active table displays are adapted.

Note that averaging is not possible for "parameter distribution" traces.

Remote command:

LAY:ADD:WIND '2',RIGH,PDIS see LAYout:ADD[:WINDOW]? on page 236

Chapter 9.12.3, "Configuring a parameter distribution", on page 172


Results:

TRACe<n>[:DATA]? on page 260

### Parameter Spectrum

Calculates an FFT for a selected column of the "Pulse Results" table. This "spectrum" allows you to easily determine the frequency of periodicities in the pulse parameters. For example, the "Parameter Spectrum" for "Pulse Top Power" might display a peak at a particular frequency, indicating incidental amplitude modulation of the amplifier output due to the power supply.

The "Parameter Spectrum" is calculated by taking the magnitude of the FFT of the selected parameter and normalizing the result to the largest peak. In order to calculate the frequency axis the average PRI (pulse repetition interval) is taken to be the "sample rate" for the FFT. Note that in cases where the signal has a non-uniform or staggered PRI the frequency axis must therefore be interpreted with caution.

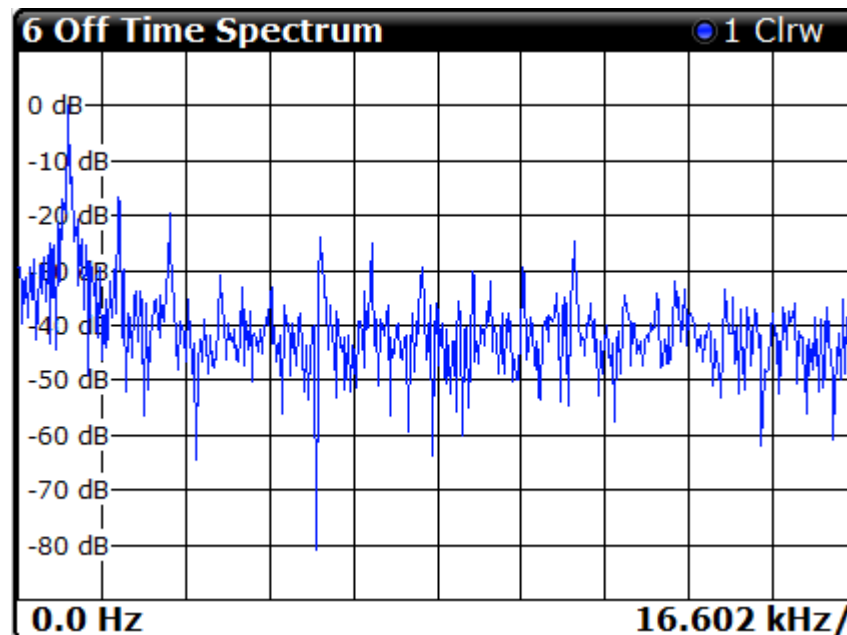

Remote command:

LAY:ADD:WIND '2',RIGH,PSP see LAYout:ADD[:WINDOW]? on page 236

Chapter 9.12.4, "Configuring a parameter spectrum", on page 179

Results:

TRACe<n>[:DATA]? on page 260

### Parameter Trend

Plots all measured parameter values from the current capture buffer (or detection range, if enabled) vs pulse number or pulse timestamp. This is equivalent to plotting a column of the "Pulse Results" table for the rows highlighted green. This evaluation allows you to determine trends in a specific parameter, such as a frequency deviation or a fluctuation in power over several pulses.



The "parameter trend" evaluation can also be used for a more general scatter plot - the parameters from the current capture buffer cannot only be displayed over time, but also versus any other pulse parameter. For example, you can evaluate the rise time vs fall time.

For each "parameter trend" window you can configure a different parameter to be displayed for both the x-axis and the y-axis, making this a very powerful and flexible analysis tool.

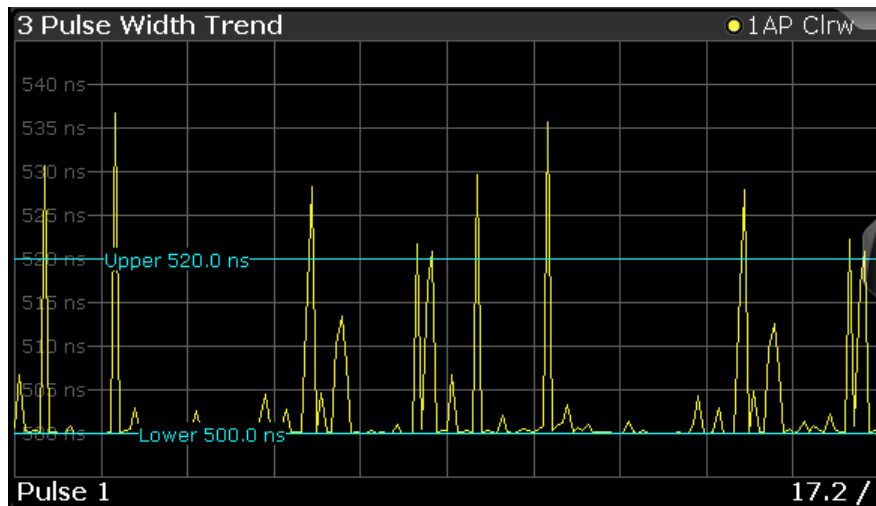


Figure 3-3: Pulse width trend display (over pulse numbers)

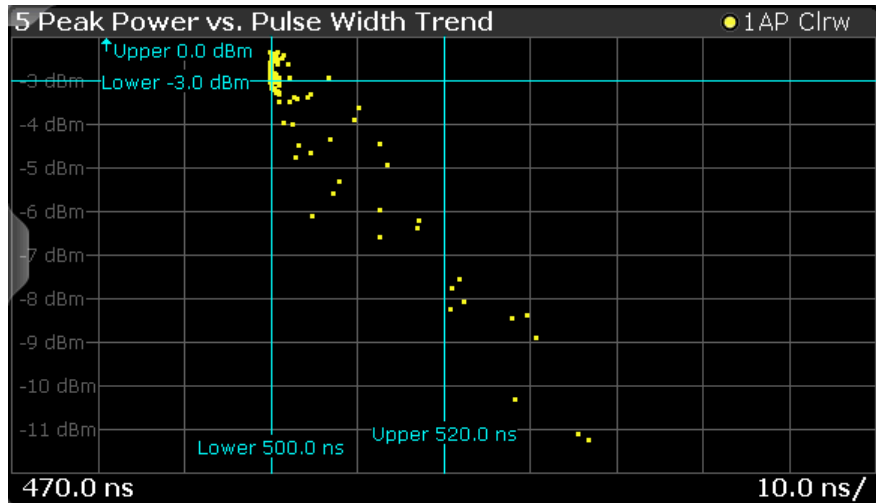


Figure 3-4: Peak power vs pulse width scatter plot

**Note:** Limit lines. Optionally, limit lines can be displayed in the "Parameter Trend" diagram. You can drag these lines to a new position in the window. The new position is maintained, the limit check is repeated, and the results of the limit check in any active table displays are adapted.

If a limit is defined for a parameter that is displayed in a "Parameter Trend" diagram, the ["Auto Scale Once"](#) on page 100 function is not available for the axis this parameter is displayed on (see also ["Activating a limit check for a parameter"](#) on page 99). This avoids the rapid movement of the limit lines which would occur if the axis scale changed.

Note that averaging is not possible for "parameter trend" traces.

**Note:** Setting markers in "Parameter Trend" Displays. In "Parameter Trend" displays, especially when the x-axis unit is not pulse number, positioning a marker by defining its x-axis value can be very difficult or ambiguous. Thus, markers can be positioned by defining the corresponding pulse number in the "Marker" edit field for all parameter trend displays, regardless of the displayed x-axis parameter. The "Marker" edit field is displayed when you select one of the "Marker" softkeys.

However, the position displayed in the marker information area or the marker table is shown in the defined x-axis unit.


Remote command:

LAY:ADD:WIND '2', RIGH, PTR see [LAYout:ADD\[:WINDow\]?](#) on page 236

[Chapter 9.12.6, "Configuring a parameter trend"](#), on page 188

### Pulse Frequency

Displays the frequency trace of the selected pulse. The length and alignment of the trace can be configured in the "Result Range" dialog box (see [Chapter 6.1.2, "Result range"](#), on page 88).

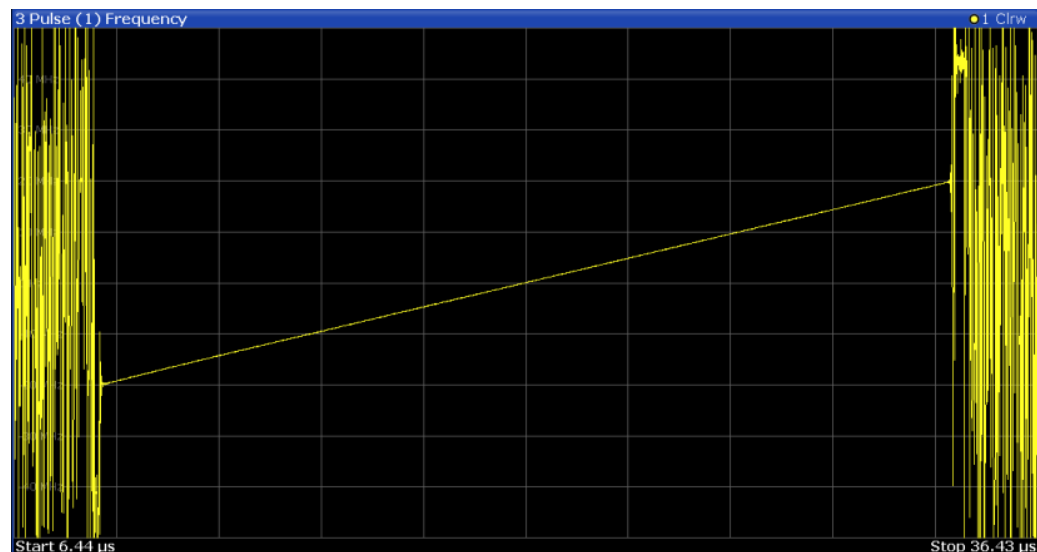

#### Note:

You can apply an additional filter after demodulation to help filter out unwanted signals (see ["FM Video Bandwidth"](#) on page 91).

Remote command:


LAY:ADD:WIND '2', RIGH, PFR see [LAYout:ADD\[:WINDow\]?](#) on page 236

Results:

[TRACe<n>\[:DATA\]?](#) on page 260

### Pulse I and Q

Displays the magnitude of the I and Q components of the selected pulse versus time as separate traces in one diagram. The length and alignment of the trace can be configured in the "Result Range" dialog box (see [Chapter 6.1.2, "Result range"](#), on page 88).

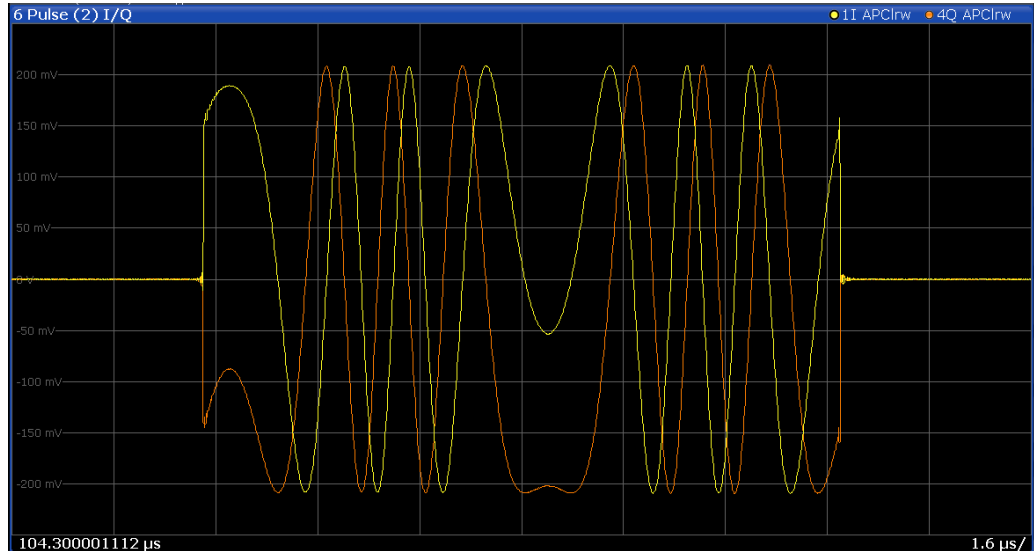

Remote command:

LAY:ADD:WIND '2',RIGH,PIAQ see [LAYout:ADD\[:WINDow\]?](#) on page 236


Results:

[\[SENSe:\]PULSe:POWer:AMPLitude:I?](#) on page 274

[\[SENSe:\]PULSe:POWer:AMPLitude:Q?](#) on page 275

### Pulse Magnitude

Displays the magnitude vs. time trace of the selected pulse. The length and alignment of the trace can be configured in the "Result Range" dialog box (see [Chapter 6.1.2, "Result range"](#), on page 88).

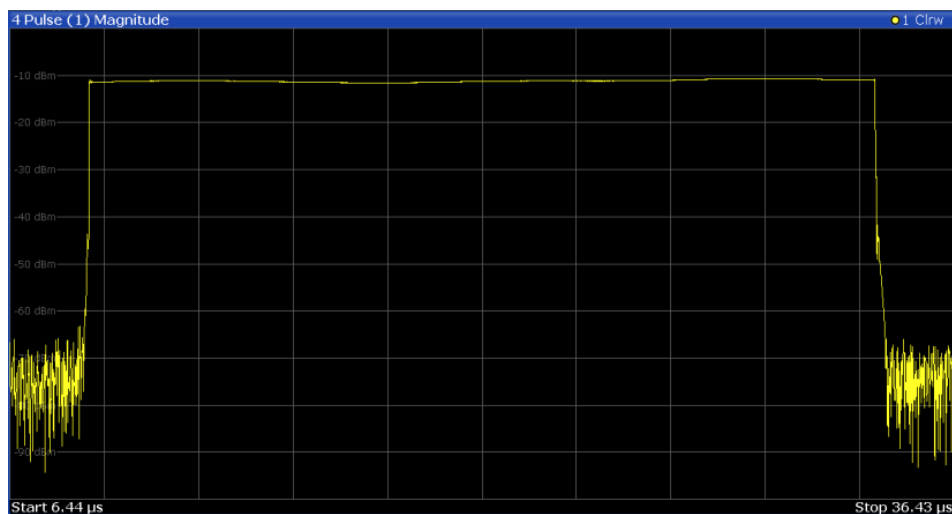

Remote command:


LAY:ADD:WIND '2',RIGH,PMAG see LAYout:ADD[:WINDOW]? on page 236

Results:

TRACe<n>[:DATA]? on page 260

### Pulse Phase

Displays the phase vs. time trace of the selected pulse. The length and alignment of the trace can be configured in the "Result Range" dialog box (see [Chapter 6.1.2, "Result range"](#), on page 88).

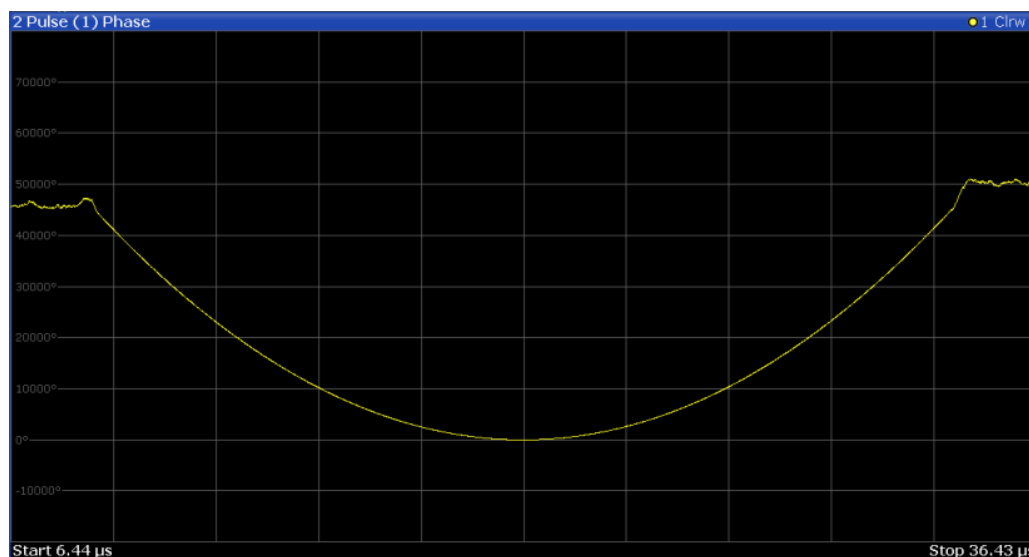

Remote command:


LAY:ADD:WIND '2',RIGH,PPH see LAYout:ADD[:WINDOW]? on page 236

Results:

TRACe<n>[:DATA]? on page 260

### Pulse Phase (Wrapped)

Displays the *wrapped* phase vs. time trace of the selected pulse. The length and alignment of the trace can be configured in the "Result Range" dialog box (see [Chapter 6.1.2, "Result range"](#), on page 88).

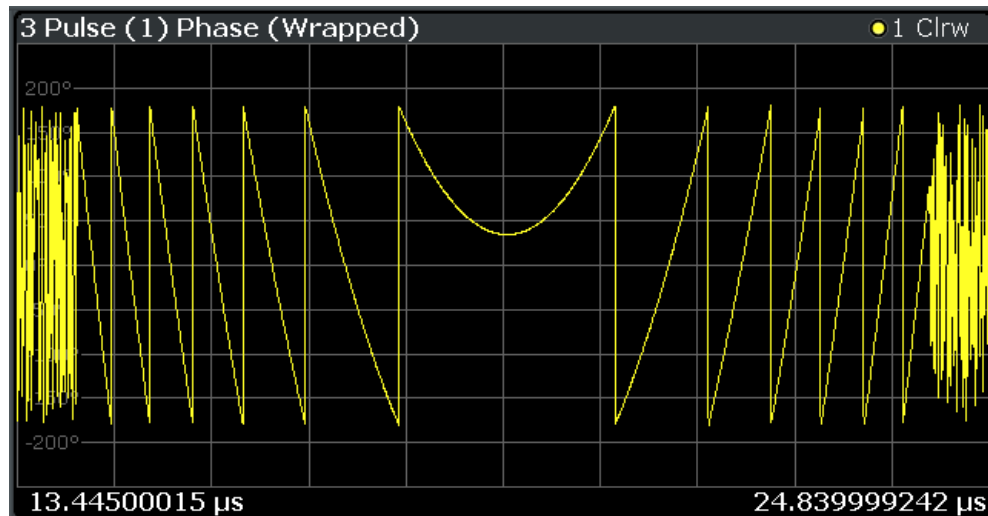

Remote command:

LAY:ADD:WIND ' 2 ', RIGH, PPW see LAYout:ADD[:WINDow] ? on page 236

Results:

TRACe<n>[:DATA] ? on page 260

### Pulse Results

Displays the measured pulse parameters in a table of results. Which parameters are displayed can be configured in the "Result Configuration" (see [Chapter 6.1, "Result configuration"](#), on page 87). The currently selected pulse is highlighted blue. The pulses contained in the current capture buffer (or detection range, if enabled) are highlighted green. The number of detected pulses in the current capture buffer ("Curr") and the entire measurement ("Total") is indicated in the title bar.

ID	Pulse No.	Rise Time (ns)	Pulse Width (us)	Duty Cycle (%)	PRI (us)	Freq (kHz)	Phase (deg)	Avg ON Power (dBm)	Avg Tx Power (dBm)
1	1	15.874	24.990	24.990	100.000	62.520	-45.133	-11.160	-17.182
2	2	15.887	24.989	24.989	100.000	68.689	-169.432	-11.160	-17.182
3	3	15.807	24.990	24.990	100.000	80.236	65.311	-11.160	-17.182
4	4	15.832	24.989	24.989	100.000	56.634	-58.796	-11.160	-17.182
5	5	15.858	24.989	24.989	100.000	10.379	176.157	-11.160	-17.182
6	6	15.754	24.989	24.989	100.000	23.151	51.561	-11.160	-17.182
7	7	15.723	24.990	24.990	100.000	37.782	-74.075	-11.161	-17.183
8	8	15.814	24.989	24.989	100.000	68.768	161.575	-11.160	-17.182
9	9	15.753	24.989	24.989	100.000	24.018	36.684	-11.159	-17.181
10	10	15.753	24.989	...	...	78.155	-87.496	-11.160	-16.775

### Note:

You can apply an additional filter after demodulation to help filter out unwanted signals (see ["FM Video Bandwidth"](#) on page 91).

### Limit check

Optionally, the measured results can be checked against defined limits (see [Chapter 6.1.6.1, "Limit settings for table displays"](#), on page 97). The results of the limit check are indicated in the Pulse Results table as follows:

Table 3-1: Limit check results in the result tables

Display color	Limit check result
White	No limit check active for this parameter
Green	Limit check passed
Red, asterisk before	Limit check failed; limit exceeds lower limit
Red, asterisk behind	Limit check failed; limit exceeds upper limit

ID	Pulse No.	Rise Time (ns)	Pulse Width (us)	PRI (us)	Freq (kHz)	Phase (deg)	Avg ON Power (dBm)	Avg Tx Power (dBm)
1	1	1.298	1.000	1000.000	-34.202	17.103*	-1.156	-7.174
2	2	1.252	1.000	1000.000	148.593*	82.488*	-1.160	-7.178
3	3	*1.144	1.000	1000.000	43.929	147.875*	-1.160	-7.179
4	4	*1.145	1.000	1000.000	3.003	*-146.788	-1.165	*-7.183
5	5	1.345*	1.000	1000.000	-17.957	-81.461	-1.170	*-7.187
6	6	1.301*	1.000	1000.000	-24.960	-16.165	-1.164	*-7.182
7	7	1.257	1.000	1000.000	174.040*	49.201*	-1.163	*-7.181
8	8	*1.147	1.000	1000.000	6.071	114.574*	-1.157	-7.175
9	9	*1.146	1.000	1000.000	0.170	179.859*	-1.161	-7.179
10	10	1.323*	1.000	1000.000	-10.307	*-114.753	-1.161	-7.178
11	11	1.300	1.000	1000.000	132.146*	-49.404	-1.166	*-7.184
12	12	1.225	1.000	1000.000	120.300*	15.858*	-1.168	*-7.186
13	13	*1.132	1.000	1000.000	-0.056	81.239*	-1.165	*-7.183
14	14	*1.139	1.000	1000.000	-2.574	146.618*	-1.162	*-7.181
15	15	1.321*	1.000	1000.000	-19.358	*-147.878	-1.157	-7.175
16	16	1.212	1.000	1000.000	160.043*	-82.614	-1.156	-7.174
17	17	*1.148	1.000	1000.000	15.095	-17.126	-1.160	-7.179
18	18	*1.175	1.000	1000.000	11.340	48.270*	-1.165	*-7.183
19	19	1.346*	1.000	1000.000	-5.057	113.660*	-1.170	*-7.188
20	20	1.322*	1.000	1000.000	-0.558	179.023*	-1.167	*-7.185
21	21	1.255	1.000	1000.000	126.961*	*-115.592	-1.162	*-7.180
22	22	*1.155	1.000	1000.000	17.944	-50.322	-1.155	-7.173
23	23	1.237	1.000	1000.000	-18.114	15.271*	-1.155	-7.173
24	24	1.405*	1.000	1000.000	-27.071	80.441*	-1.161	-7.179
25	25	1.235	1.000	1000.000	157.741*	146.067*	-1.162	*-7.181
26	26	*1.145	1.000	1000.000	22.441	*-148.617	-1.168	*-7.186
27	27	*1.164	1.000	1000.000	21.059	-83.314	-1.165	*-7.184
28	28	1.293	1.000	1000.000	-17.347	-17.660	-1.158	-7.176

**Note:** The results of the limit check are for informational purposes only; special events such as stopping the measurement are not available.

**Note:** Optionally, limit lines can be displayed in the [Parameter Distribution](#) and [Parameter Trend](#) diagrams. You can drag these lines to a new position in the window. The new position is maintained, the limit check is repeated, and the results of the limit check in any active table displays are adapted.

Remote command:

LAY:ADD:WIND '2', RIGH, PRES see LAYout:ADD[:WINDOW]? on page 236

[Chapter 9.12.8, "Configuring the statistics and parameter tables"](#), on page 208

Results:


[Chapter 9.16.3, "Retrieving parameter results"](#), on page 269

Number of pulses: [SENSe:] PULSe: COUNT? on page 266

[Chapter 9.16.4, "Retrieving limit results"](#), on page 319

### Pulse-Pulse Spectrum

The pulse-to-pulse spectrum is basically a [Parameter Spectrum](#), based on complex I/Q data. The I and Q values for each pulse (taken at the [Measurement Point Reference](#)) are integrated over all pulses to create a spectrum that consists of positive and negative frequencies. You cannot select a parameter for the spectrum. All other settings are identical to the "parameter spectrum".

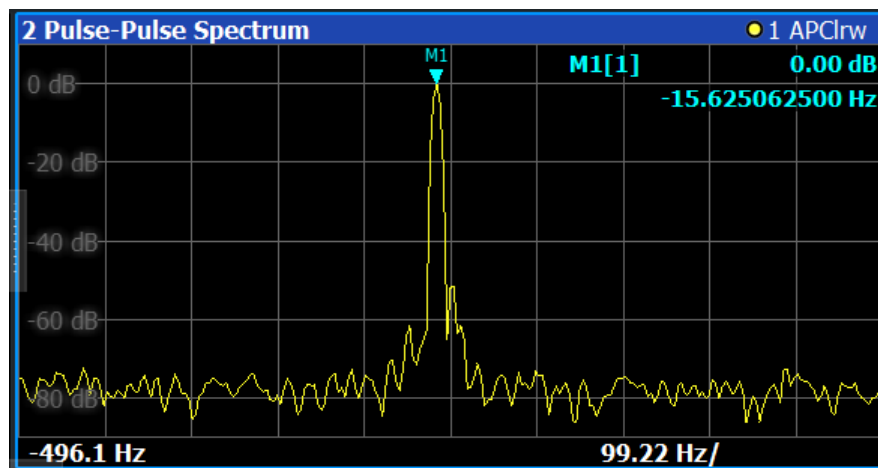

The pulse-to-pulse spectrum is useful to analyze small frequency shifts which cannot be detected within an individual pulse, for example Doppler effects.

Remote command:

LAY:ADD? '1', RIGH, PPSP, see LAYout:ADD[:WINDow]? on page 236

Results:

TRACe<n>[:DATA]? on page 260

### Pulse Statistics

Displays statistical values (minimum, maximum, average, standard deviation) for the measured pulse parameters in a table of results. The number of evaluated pulses is also indicated. Both the current capture buffer data and the cumulated captured data from a series of measurements are evaluated. The statistics calculated only from pulses within the current capture buffer (or detection range, if enabled) are highlighted green. For reference, the measured parameters from the "Selected Pulse" are also shown, highlighted blue. The displayed parameters are the same as in the "Pulse Results" and can be configured in the "Result Configuration" (see Chapter 6.1, "Result configuration", on page 87).

2 Pulse Statistics							
Statistic	Rise Time (ns)	Pulse Width (us)	PRI (us)	Freq (kHz)	Phase (deg)	Avg ON Power (dBm)	Avg Tx Power (dBm)
Selected	390.874	2.497	5.001	-1381.191	162.848	-8.932	-11.867
Average	389.151	2.494	5.000	29.268	159.566	-8.917	-11.857
Std. Dev.	4.452629	0.002681	0.002577	1291.108946	1.876093	0.007118	0.006323
Maximum	399.039	2.501	5.006	3540.801	163.161	-8.902	-11.846
Minimum	374.156	2.489	4.995	-3157.272	156.158	-8.932	-11.869
Count	70	70	69	70	70	70	69
Average	389.111	2.494	5.000	15.116	35.399	-8.915	-11.854
Std. Dev.	4.626054	0.002825	0.002910	1174.363128	100.977665	0.007829	0.006560
Maximum	403.504	2.502	5.009	3540.801	164.469	-8.896	-11.838
Minimum	372.463	2.486	4.988	-4136.710	-119.778	-8.932	-11.869
Count	696	696	686	696	696	696	686

**Note:** Limit checks are also available for "Pulse Statistics"; see "Pulse Results" on page 37.

Remote command:

LAY:ADD:WIND '2', RIGH, PST see LAYout:ADD[:WINDow]? on page 236

Chapter 9.12.8, "Configuring the statistics and parameter tables", on page 208

Results:

Chapter 9.16.3, "Retrieving parameter results", on page 269


[SENSe:] PULSe:<ParameterGroup>:<Parameter>:COUNT? on page 268  
Chapter 9.16.4, "Retrieving limit results", on page 319

### Result Range Spectrum

Calculates a power spectrum from the captured I/Q data, within the time interval defined by the result range (see Chapter 6.1.2, "Result range", on page 88).

The "Result Range Spectrum" is calculated using a *Welch periodogram*, which involves averaging the spectrum calculated by overlapping windows.

The shape of the window used for the calculation can be specified. The length of the window is calculated such that a specific resolution bandwidth is obtained.

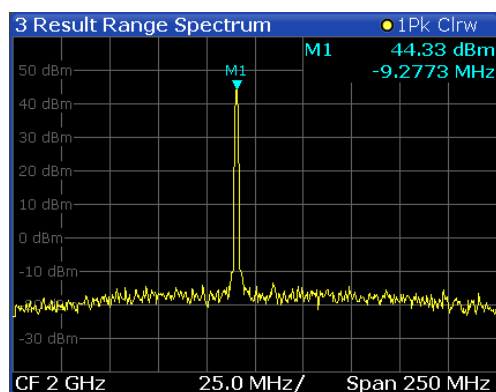

Remote command:

LAY:ADD:WIND '2', RIGH, RRSP see LAYout:ADD[:WINDow]? on page 236

Results:

TRACe<n>[:DATA]? on page 260



## 4 Measurement basics

Some background knowledge on basic terms and principles used in pulse measurements is provided here for a better understanding of the required configuration settings.

- [Parameter definitions](#)..... 41
- [Pulse detection](#).....44
- [Parameter spectrum calculation](#).....46
- [Basics on input from I/Q data files](#)..... 49
- [Trace evaluation](#).....50

### 4.1 Parameter definitions

The pulse parameters to be measured are based primarily on the IEEE 181 Standard 181-2003. For detailed descriptions refer to the standard documentation ("IEEE Standard on Transitions, Pulses, and Related Waveforms", from the IEEE Instrumentation and Measurement (I&M) Society, 7 July 2003).

The following definitions are used to determine the measured pulse power parameters:

Value	Description
$L_{0\%}$	The magnitude in V corresponding to the pulse OFF level (base level)
$L_{100\%}$	The magnitude in V corresponding to the pulse ON level (top level)
$L_{Ov}$	The magnitude in V at the peak level occurring directly after the pulse rising edge (mid-level crossing)
$L_{rise}$	The magnitude in V of the reference model at the top of the rising edge (beginning of the pulse top)
$L_{fall}$	The magnitude in V of the reference model at the top of the falling edge (end of the pulse top)
$L_{rip+}$	The magnitude in V corresponding to the largest level above the reference model which occurs within the ripple portion of the pulse top
$L_{top+}$	The magnitude in V of the reference model at the point in time where $L_{rip+}$ is measured
$L_{rip-}$	The magnitude in V corresponding to the lowest measured level below the reference model which occurs within the ripple portion of the pulse top
$L_{top-}$	The magnitude in V of the reference model at the point in time where $L_{rip-}$ is measured

- [Amplitude droop](#).....42
- [Ripple](#).....42
- [Overshoot](#).....44

### 4.1.1 Amplitude droop

The amplitude droop is calculated as the difference between the power at the beginning of the pulse ON time and the power at the end of the pulse ON time, divided by the pulse amplitude:

$$\text{Droop (\%V)} = \frac{L_{rise} - L_{fall}}{L_{100\%} - L_{0\%}} \times 100$$

$$\text{Droop (\%W)} = \frac{L_{rise}^2 - L_{fall}^2}{L_{100\%}^2 - L_{0\%}^2} \times 100$$

$$\text{Droop (dB)} = 20 \times \log_{10} \left( \frac{L_{rise}}{L_{fall}} \right)$$

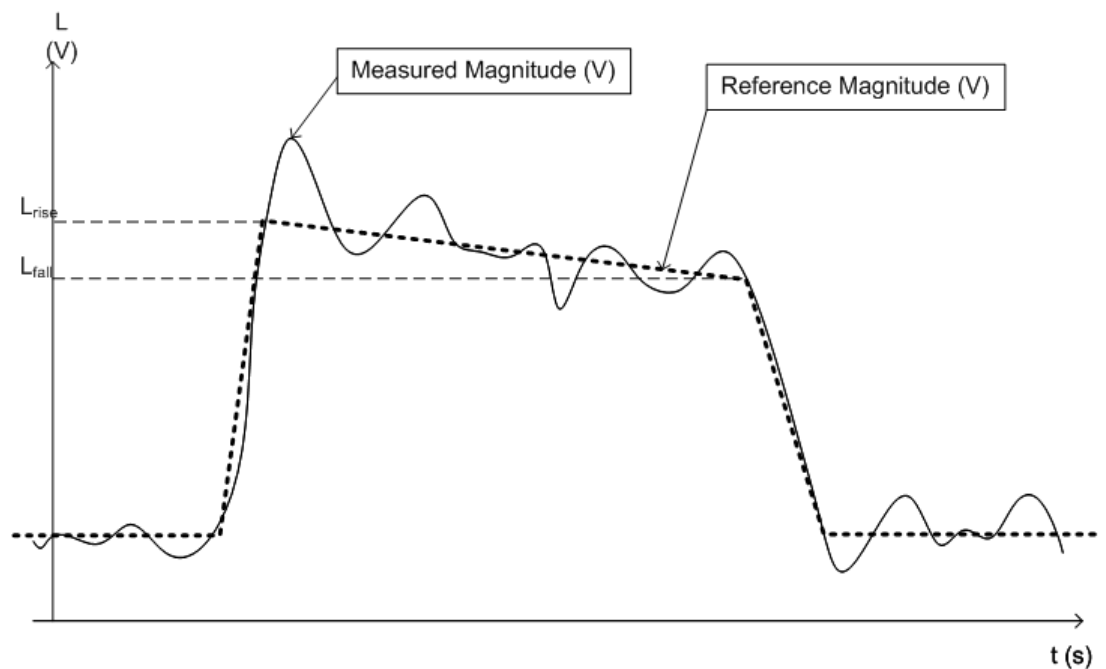


Figure 4-1: Illustration of levels used to define the droop measurement

### 4.1.2 Ripple

The ripple is calculated as the difference between the maximum and minimum deviation from the pulse top reference, within a user specified interval.

The default behavior compensates for droop in the pulse top using the following formulae:

$$\text{Ripple (\%V)} = \frac{|L_{rip+} - L_{top+}| + |L_{top-} - L_{rip-}|}{L_{100\%} - L_{0\%}} \times 100$$

$$\text{Ripple (\%W)} = \frac{|L_{rip+}^2 - L_{top+}^2| + |L_{top-}^2 - L_{rip-}^2|}{L_{100\%}^2 - L_{0\%}^2} \times 100$$

$$\text{Ripple (dB)} = 10 \times \log_{10} \left( \frac{L_{100\%}^2 + |L_{rip+}^2 - L_{top+}^2|}{L_{100\%}^2 - |L_{top-}^2 - L_{rip-}^2|} \right)$$

However, if **Pulse Has Droop** is set to "Off" or the 100 % Level **Position** is set to "Center", then the reference model has a flat pulse top and  $L_{top+} = L_{top-} = L_{100\%}$ . Thus, the formulae are reduced to:

$$\text{Ripple (\%V)} = \frac{L_{rip+} - L_{rip-}}{L_{100\%} - L_{0\%}} \times 100$$

$$\text{Ripple (\%W)} = \frac{L_{rip+}^2 - L_{rip-}^2}{L_{100\%}^2 - L_{0\%}^2} \times 100$$

$$\text{Ripple (dB)} = 20 \times \log_{10} \left( \frac{L_{rip+}}{L_{rip-}} \right)$$

The following illustration indicates the levels used for calculation.

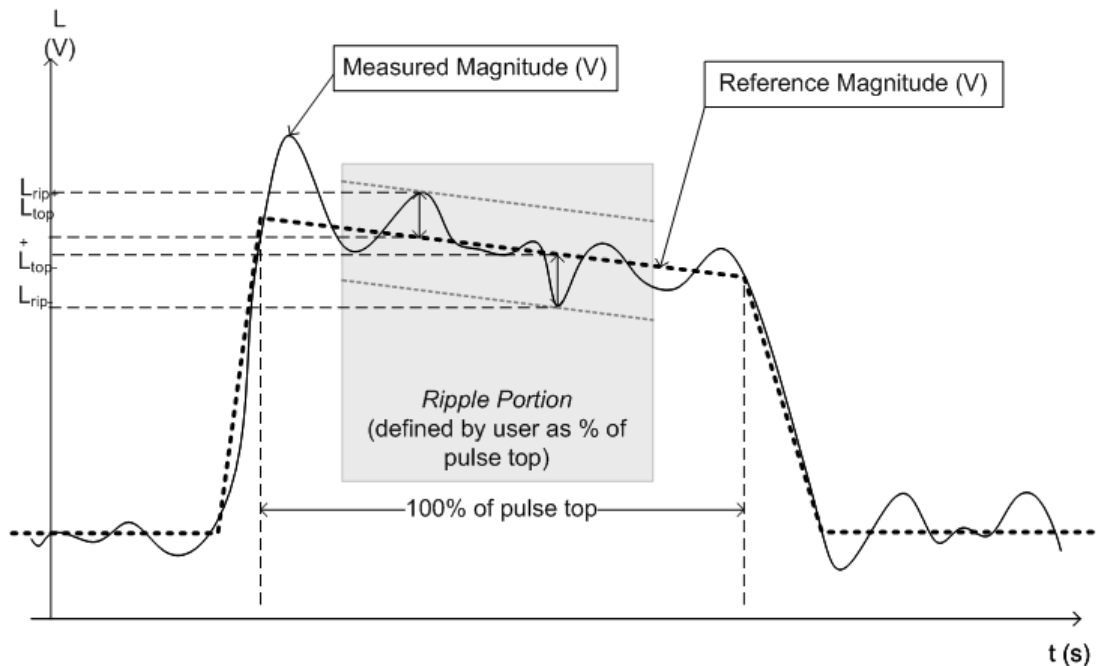


Figure 4-2: Illustration of levels used to define the ripple measurement.

### 4.1.3 Overshoot

The overshoot is defined as the height of the local maximum after a rising edge, divided by the pulse amplitude:

$$\text{Overshoot (\%V)} = \frac{L_{Ov} - L_{100\%}}{L_{100\%} - L_{0\%}} \times 100$$

$$\text{Overshoot (\%W)} = \frac{L_{Ov}^2 - L_{100\%}^2}{L_{100\%}^2 - L_{0\%}^2} \times 100$$

$$\text{Overshoot (dB)} = 20 \times \log_{10} \left( \frac{L_{Ov}}{L_{100\%}} \right)$$


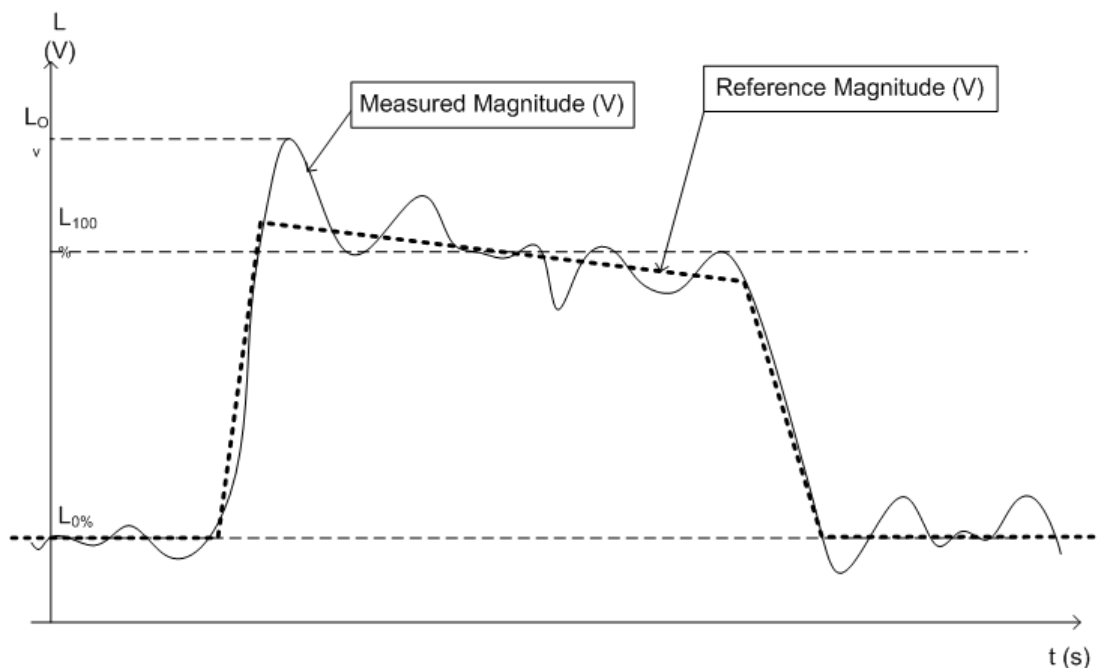


Figure 4-3: Illustration of levels used to define the overshoot measurement

## 4.2 Pulse detection

A pulsed input signal is a signal whose carrier power is modulated by two states: ON and OFF. Basically, a pulse is detected when the input signal power exceeds a threshold, then falls below that threshold, or vice versa. Pulses that rise to and then remain at a peak (positive) power level for a certain duration, and then fall again are referred to as **positive** pulses. The opposite - falling to and remaining at a minimum (negative) power level, then rising - is referred to as a **negative** pulse. The "ON" power level is

referred to as the **top** or **100% level**, whereas the "OFF" level is referred to as the **base** or **0% level**.

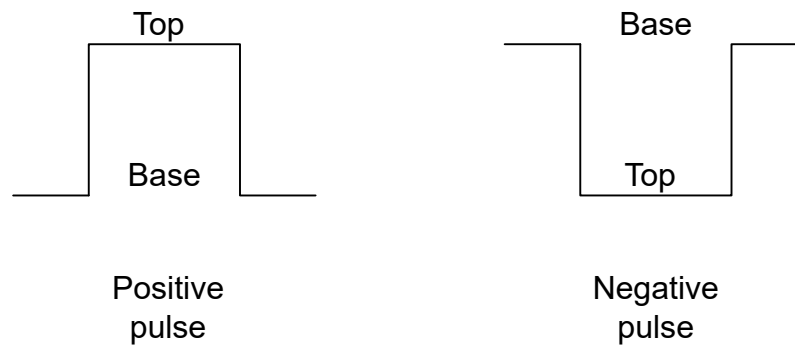

A **hysteresis** can refine the detection process and avoid falsely interpreting unstable signals as additional pulses. Optionally, detection can be restricted to a maximum number of pulses per capture process.

A top power level that is not constant is called an amplitude **droop**. Since the top level is an important reference for several pulse parameters, take a droop into consideration where possible. If a signal is known to have a droop, the reference level is not calculated as an average or median value over the ON time. Instead, it is calculated separately for the rising and falling edges.

The time it takes the signal power to rise from the base level to the top is called the **rise time**.

The duration the signal power remains at the top level is considered the **ON time**, which also defines the **pulse width**.

The time it takes the signal power to fall from the top to the base level is called the **fall time**.

The duration the signal power remains at the base level is called the **OFF time**.

The **pulse repetition interval** (also known as **pulse period**) is defined as the duration of one complete cycle consisting of:

- The rise time
- The ON time
- The fall time
- The OFF time

To avoid taking noise, ripples, or other signal instabilities into consideration, the absolute peak or minimum power values are not used to calculate these characteristic values. Instead, threshold values are defined.

See [Chapter 3.1, "Pulse parameters"](#), on page 15 for more precise definitions and an illustration of how these values are calculated.

### Detection range

If the capture buffer contains a large number of pulses, it can be tedious to find a particular pulse for analysis. In this case, you can enable the use of a detection range instead of the entire capture buffer for analysis.

A detection range determines which part of the capture buffer is analyzed. It is defined by the [Detection Start](#) and the [Detection Length](#). If disabled (default), the entire capture buffer is used as the detection range.

The pulse numbers in the result displays are always relative to the current detection range, that is: pulse number 1 is the first pulse within the detection range. If you change the position of the detection range within the capture buffer, pulse number 1 can be a different pulse. All pulse-based results are automatically updated, if necessary. To navigate to a particular pulse in the capture buffer, use the pulse timestamps, which are relative to the start of the capture buffer.

An active detection range is indicated by vertical lines ("DR") in the "Magnitude Capture" Buffer display. You can also change the detection range graphically by dragging the vertical lines in the window.

## 4.3 Parameter spectrum calculation

When a signal is measured over time, it is possible to calculate the frequency spectrum for the measured signal by performing an FFT on the measured data. Similarly, it is possible to calculate a "spectrum" for a particular pulse parameter by performing an FFT. This "spectrum" allows you to determine the frequency of periodicities in the pulse parameters easily. For example, the "Parameter Spectrum" for "Pulse Top Power" can display a peak at a particular frequency, indicating incidental amplitude modulation of the amplifier output due to the power supply.

Basically, the "parameter spectrum" is calculated by taking the magnitude of the FFT of the selected parameter and normalizing the result to the largest peak.

### Frequency axis

When calculating a spectrum from a measured signal, the sample rate ensures a regular distance between two frequencies. To calculate the frequency axis for a "parameter spectrum", the average PRI (pulse repetition interval) is taken to be the "sample rate" for the FFT.

### Interpolation

However, in cases where the signal has a non-uniform or staggered PRI the frequency axis must be interpreted with caution. In cases where the pulses only occur in non-contiguous intervals, using the PRI no longer provides useful results. A good solution to create equidistant samples for calculation is to "fill up" the intervals between pulses with interpolated values. Based on the measured and interpolated values, the frequency axis can then be created.

The number of possible interpolation values is restricted to 100,000 by the R&S FSMR3000 Pulse application. Thus, the resulting spectrum is limited. By default, the

frequency span for the resulting spectrum is determined automatically. However, to improve the accuracy (and performance) of the interpolation, the maximum required frequency span can be restricted further manually.

### Non-contiguous pulses - sections vs gaps

For the non-contiguous pulse measurements described above, interpolation in the long intervals where no pulses occur distort the result. Therefore, time intervals without pulses are identified, referred to as *gaps*. The time intervals that contain pulses are also identified, referred to as *sections*. Interpolation is then performed only on the sections, whereas the gaps are ignored for the spectrum calculation.

A *gap threshold* ensures that pulses with large intervals are not split into multiple sections. A *section threshold* ensures that singular pulses within a long gap are not included in calculation.

### Example: Non-contiguous pulse measurement

A typical measurement setup that results in non-contiguous pulses is a rotating radar antenna scanning the air. For most of the time required for a single rotation, no pulses are received. However, when an object comes within the scan area, several pulses are detected within a short duration in time (identified as a section). When the object leaves the scan area again, the pulses will stop, defining a gap until the next object is detected.

### Blocks

Spectrum calculation is then performed for the individual sections only. However, the Fourier transformation is not performed on the entire section in one step. Each section is split into blocks, which can overlap. An FFT is performed on each block to calculate an individual result. The smaller the block size, the more individual results are calculated, and the more precise the final result. Thus, the block size determines the resolution bandwidth in the final spectrum. Note that while the block size can be defined manually, the RBW cannot.

### Window functions

Each block with its measured and interpolated values is multiplied with a specific window function. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the R&S FSMR3000 Pulse application. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

Table 4-1: FFT window functions

Window type	Function
Rectangular	The rectangular window function is in effect not a function at all, it maintains the original sampled data. This can be useful to minimize the required bandwidth; however, heavy sidelobes can occur, which do not exist in the original signal.
Hamming	$w_{\text{hamming}}(n) = 0.54 - 0.46\left(\frac{2\pi n}{\text{length} - 1}\right)$
Hann	$w_{\text{hann}}(n) = 0.5 - 0.5\left(\frac{2\pi n}{\text{length} - 1}\right)$
Blackman (default)	$w_{\text{blackman}}(n) = \frac{\alpha + 1}{2} - 0.5 \cos\left(\frac{2\pi n}{\text{length} - 1}\right) - \frac{\alpha}{2} \cos\left(\frac{4\pi n}{\text{length} - 1}\right)$ $\alpha = \frac{0.5}{1 + \cos\left(\frac{2\pi}{\text{length} - 1}\right)}$
Bartlett	$w_{\text{bartlett}}(n) = 0.54 - 0.46\left(\frac{2\pi n}{\text{length} - 1}\right)$

### Averaging and final spectrum

After windowing, an FFT is performed on each block, and the individual spectrum results are then combined to a total result by averaging the traces. The complete process to calculate a "parameter spectrum" is shown in [Figure 4-4](#).



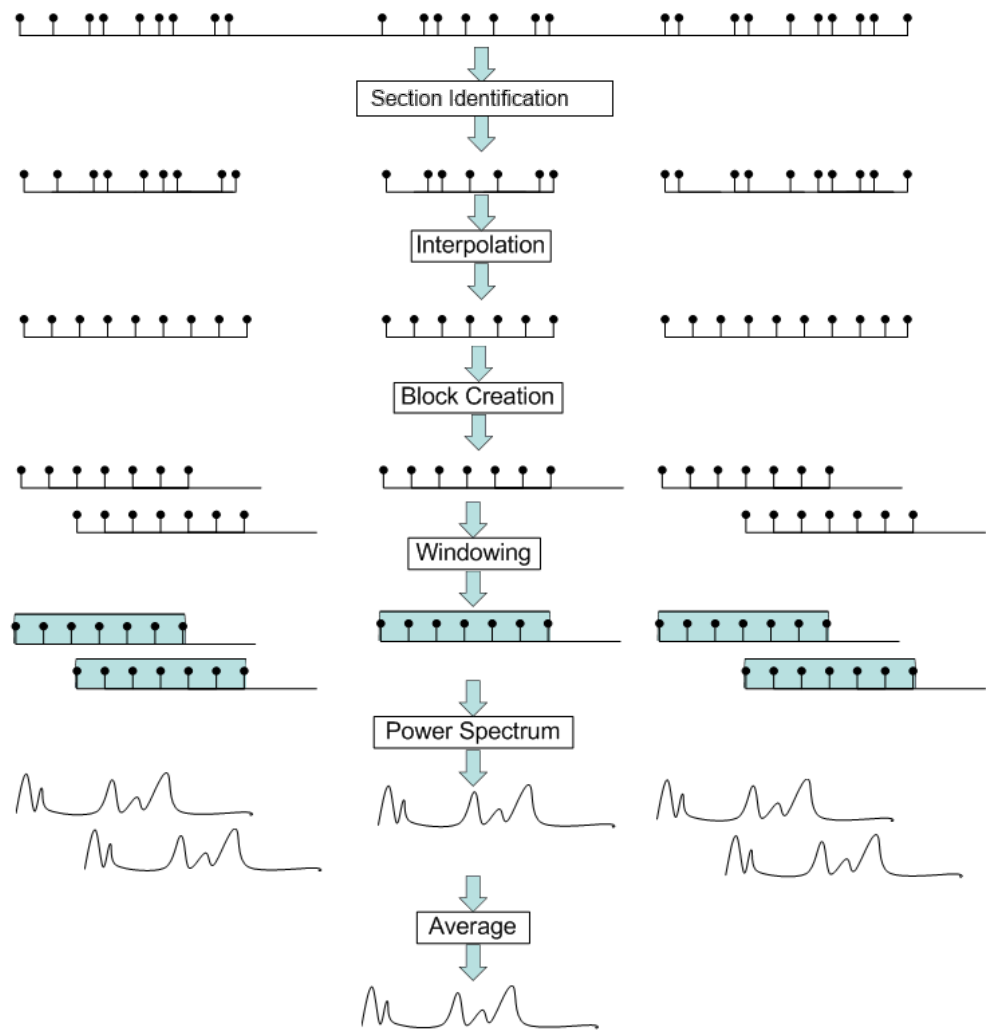


Figure 4-4: Calculating a parameter spectrum for non-contiguous pulses

## 4.4 Basics on input from I/Q data files

The I/Q data to be evaluated in a particular R&S FSMR3 application cannot only be captured by the application itself, it can also be loaded from a file, provided it has the correct format. The file is then used as the input source for the application.

For example, you can capture I/Q data using the I/Q Analyzer application, store it to a file, and then analyze the signal parameters for that data later using the Pulse application (if available).



An application note on converting Rohde & Schwarz I/Q data files is available from the Rohde & Schwarz website:

[1EF85: Converting R&S I/Q data files](#)

When importing data from an I/Q data file using the import functions provided by some R&S FSMR3 applications, the data is only stored temporarily in the capture buffer. It overwrites the current measurement data and is in turn overwritten by a new measurement. If you use an I/Q data file as input, the stored I/Q data remains available for any number of subsequent measurements. Furthermore, the (temporary) data import requires the current measurement settings in the current application to match the settings that were applied when the measurement results were stored (possibly in a different application). When the data is used as an input source, however, the data acquisition settings in the current application (attenuation, center frequency, measurement bandwidth, sample rate) can be ignored. As a result, these settings cannot be changed in the current application. Only the measurement time can be decreased, to perform measurements on an extract of the available data (from the beginning of the file) only.

When using input from an I/Q data file, the [RUN SINGLE] function starts a single measurement (i.e. analysis) of the stored I/Q data, while the [RUN CONT] function repeatedly analyzes the same data from the file.



#### Sample iq.tar files

If you have the optional R&S FSMR3 VSA application (R&S FSMR3-K70), some sample `iq.tar` files are provided in the `C:/R_S/Instr/user/vsa/DemoSignals` directory on the R&S FSMR3.

#### Pre-trigger and post-trigger samples

In applications that use pre-triggers or post-triggers, if no pre-trigger or post-trigger samples are specified in the I/Q data file, or too few trigger samples are provided to satisfy the requirements of the application, the missing pre- or post-trigger values are filled up with zeros. Superfluous samples in the file are dropped, if necessary. For pre-trigger samples, values are filled up or omitted at the beginning of the capture buffer. For post-trigger samples, values are filled up or omitted at the end of the capture buffer.

## 4.5 Trace evaluation

Traces in graphical result displays based on the defined result range (see [Chapter 6.1.2, "Result range"](#), on page 88) can be configured. For example, you can perform statistical evaluations over a defined number of measurements, pulses, or samples.

You can configure up to 6 individual traces for the following result displays (see [Chapter 6.1.2, "Result range"](#), on page 88):

- "Pulse Frequency" on page 34
- "Pulse Magnitude" on page 35
- "Pulse Phase" on page 36
- "Pulse Phase (Wrapped)" on page 36
- Trace statistics..... 51
- Normalizing traces..... 51

### 4.5.1 Trace statistics

Each trace represents an analysis of the data measured in one result range. Statistical evaluations can be performed over several traces, that is, result ranges. Which ranges and how many are evaluated depends on the configuration settings.

#### Selected pulse vs all pulses

The "Sweep/Average Count" determines how many measurements are evaluated.

For each measurement, in turn, either the selected pulse only (that is: one result range), or all detected pulses (that is: possibly several result ranges) can be included in the statistical evaluation.

Thus, the overall number of averaging steps depends on the "Sweep/Average Count" and the [statistical evaluation mode](#).

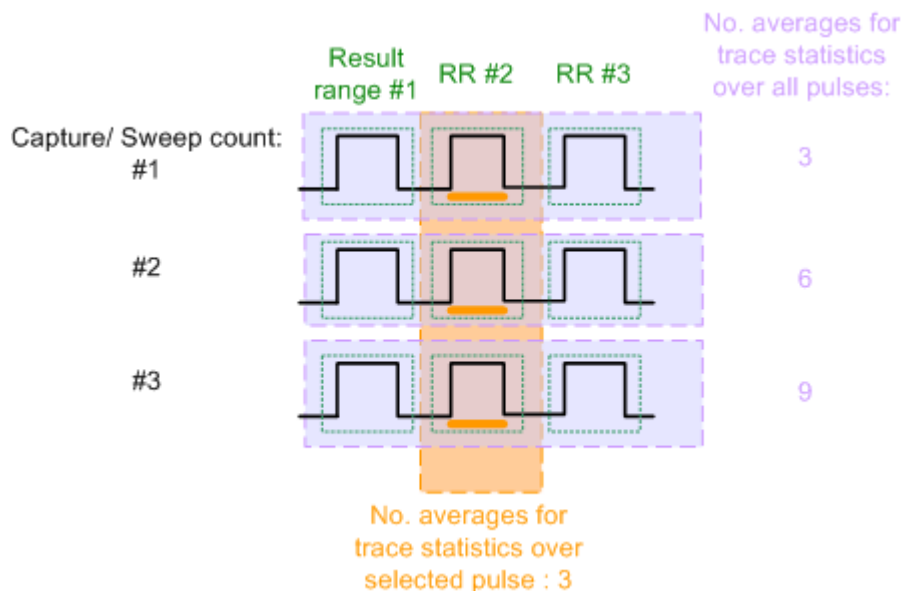


Figure 4-5: Trace statistics - number of averaging steps

### 4.5.2 Normalizing traces

For pulse results based on an individual pulse, sometimes, the absolute value is not of interest. Instead, the relative offset of each point in the trace from a specific measurement point within the pulse, or from a reference pulse, is of interest.

#### Normalization based on a measurement point

In a standard trace for a pulse result display, the measured frequency, magnitude, or phase value for each measurement point in the result range is displayed. If only the relative deviations within that pulse are of interest, you can subtract a fixed value from each trace point. The fixed value is the value measured at a specified point in the pulse. Thus, the trace value at the specified measurement point is always 0. This happens when a trace is normalized based on the measured pulse.

The measurement point used for normalization is the same point used to determine the pulse parameter results, see [Chapter 5.9.2, "Measurement point"](#), on page 82.

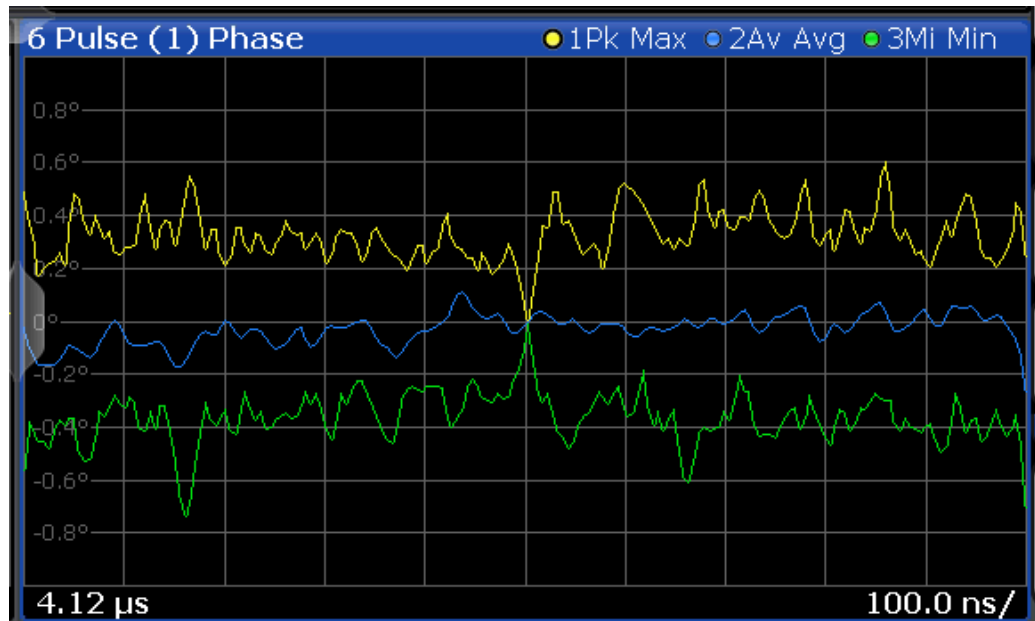


Figure 4-6: Normalization of the Pulse Phase trace based on the measured pulse

By default, the measurement point is the center of the pulse. However, this position can be moved arbitrarily within the pulse by defining an offset.

If the measurement point is defined with an offset in time, the trace value does not pass 0 at the measurement point. It passes 0 at the time of the measurement point + the offset value.

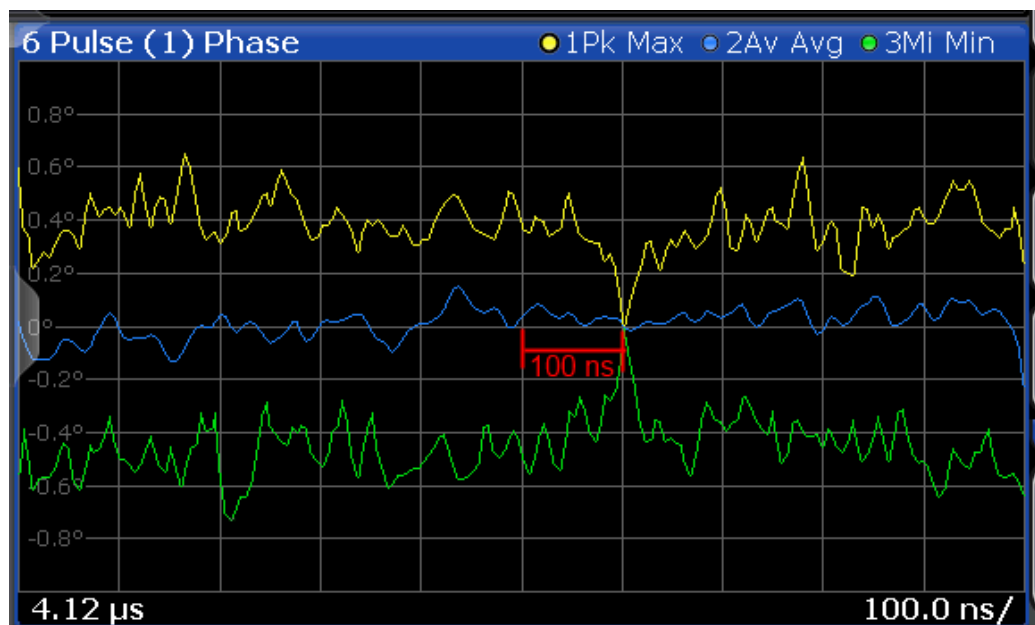


Figure 4-7: Normalization of the Pulse Phase trace based on the measured pulse + 100 ns offset



### Normalization + averaging window

Together with an [Averaging Window](#) for the measurement point, normalization based on the measured pulse can provide for a very stable pulse trace. However, the calculated average value does not always coincide with the measured trace point value. So in this case, the maxhold, minhold or average traces do not necessarily pass 0 at the measurement point.

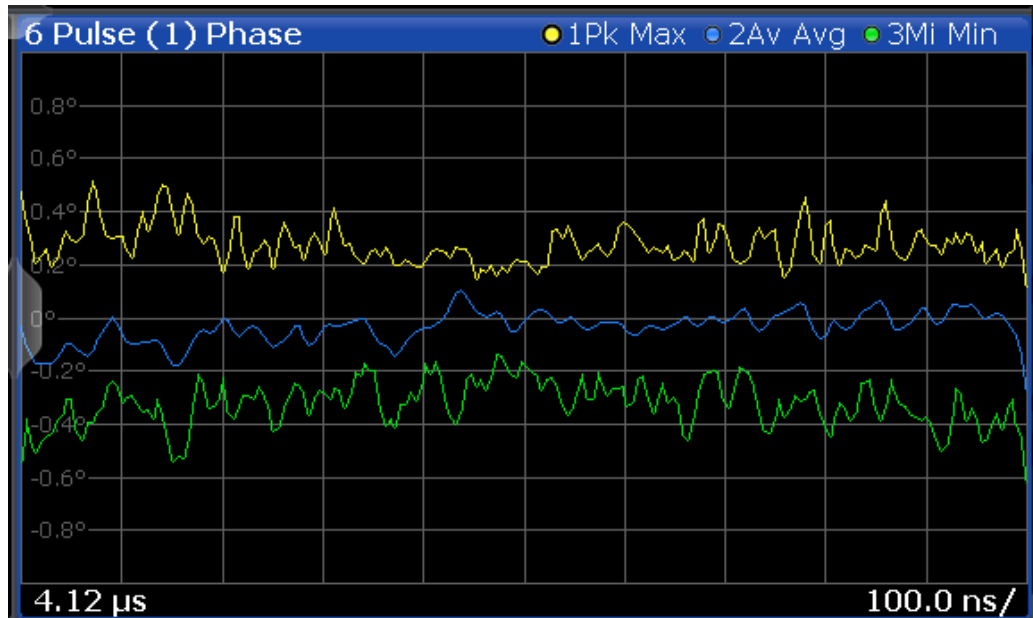


Figure 4-8: Normalization based on the measured pulse with an average window

### Normalization based on a reference pulse

Sometimes you are not interested in the deviations of the pulse results within a single pulse, but rather in the deviations to a reference pulse. Then you can also base normalization on the measurement point of a specified reference pulse. In this case, the trace value for the measurement point in the reference pulse is deducted from all trace values in the measured pulse.

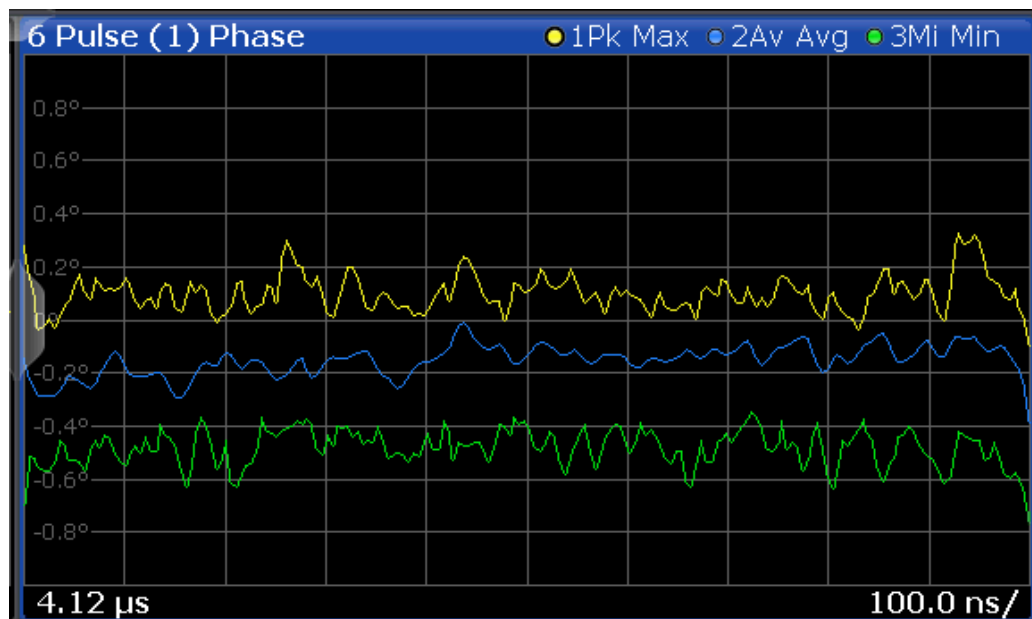


Figure 4-9: Normalization based on a reference pulse



Note that in this case, the value at the measurement point used to determine pulse parameter results is also normalized. Thus, normalization based on a reference pulse modifies the results in the [Pulse Results](#) and ["Pulse Statistics"](#) on page 39 tables! The pulse parameter values in the pulse tables for the (normalized) reference pulse are always 0.

However, as opposed to normalization based on a measured pulse, the pulse-to-pulse deviations are maintained when normalized to a reference pulse.

The reference pulse can be defined as one of the following:

- A fixed pulse number
- The currently selected pulse
- A previous (-n) or subsequent (+n) pulse, relative to the currently evaluated pulse

#### Normalization of pulse phase traces

Phase traces for an individual pulse can be normalized just like magnitude and frequency traces, as described above. However, you can also define a phase offset. In this case, the pulses are not normalized to 0, but to the phase offset value. The phase measured at a specified point in the reference or measured pulse, *plus the phase offset*, is subtracted from each trace point.

The phase offset for normalization is defined in the "Units" settings (see ["Phase Normalization"](#) on page 102).

## 5 Configuration

**Access:** [MODE] > "Pulse"

Pulse measurements require a special application on the R&S FSMR3.

When you activate the Pulse application the first time, a set of parameters is passed on from the currently active application. After initial setup, the parameters for the measurement channel are stored upon exiting and restored upon re-entering the channel. Thus, you can switch between applications quickly and easily.

When you activate the Pulse application, a pulse measurement for the input signal is started automatically with the default configuration. The "Pulse" menu is displayed and provides access to the most important configuration functions.



### Automatic refresh of results after configuration changes


The R&S FSMR3 supports you in finding the correct measurement settings quickly and easily - after each change in settings, the measurements are repeated and the result displays are updated immediately and automatically to reflect the changes. You do not need to refresh the display manually. Thus, you can see if the setting is appropriate or not directly through the transparent dialog boxes.

• <a href="#">Configuration overview</a> .....	55
• <a href="#">Signal description</a> .....	57
• <a href="#">Input and output settings</a> .....	60
• <a href="#">Frontend settings</a> .....	63
• <a href="#">Trigger settings</a> .....	67
• <a href="#">Data acquisition</a> .....	72
• <a href="#">Sweep settings</a> .....	75
• <a href="#">Pulse detection</a> .....	76
• <a href="#">Pulse measurement settings</a> .....	79
• <a href="#">Automatic settings</a> .....	85

### 5.1 Configuration overview



Throughout the measurement configuration, an overview of the most important currently defined settings is provided in the "Overview".

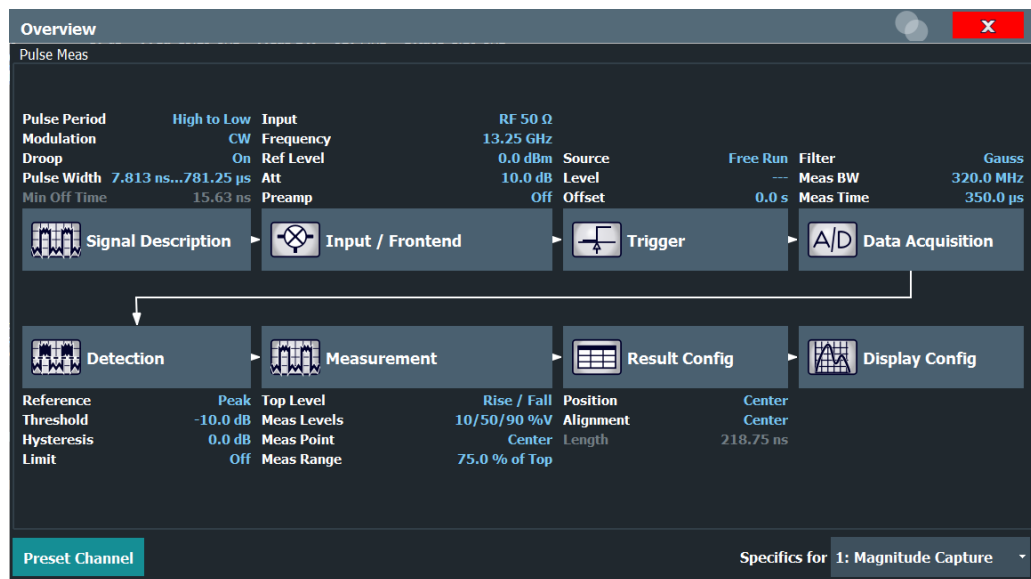

In addition to the main measurement settings, the "Overview" provides quick access to the main settings dialog boxes. Thus, you can easily configure an entire measurement channel from input over processing to output and evaluation by stepping through the dialog boxes as indicated in the "Overview".

In particular, the "Overview" provides quick access to the following configuration dialog boxes (listed in the recommended order of processing):

1. Signal Description  
See [Chapter 5.2, "Signal description"](#), on page 57
2. Input and Frontend Settings
3. (Optionally:) Trigger/Gate  
See [Chapter 5.5, "Trigger settings"](#), on page 67
4. Data Acquisition  
See [Chapter 5.6, "Data acquisition"](#), on page 72
5. Pulse Detection  
See [Chapter 5.8, "Pulse detection"](#), on page 76
6. Pulse Measurement  
See [Chapter 5.9, "Pulse measurement settings"](#), on page 79
7. Result Configuration  
See [Chapter 6.1, "Result configuration"](#), on page 87

#### To configure settings

- ▶ Select any button in the "Overview" to open the corresponding dialog box.



Select a setting in the channel bar (at the top of the measurement channel tab) to change a specific setting.

Preset Channel.....	57
Specific Settings for.....	57

### Preset Channel

Select the "Preset Channel" button in the lower left-hand corner of the "Overview" to restore all measurement settings *in the current channel* to their default values.

**Note:** Do not confuse the "Preset Channel" button with the [Preset] key, which restores the entire instrument to its default values and thus closes *all channels* on the R&S FSMR3 (except for the default channel)!

Remote command:

`SYSTem:PRESet:CHANnel[:EXEC]` on page 134

### Specific Settings for

The channel can contain several windows for different results. Thus, the settings indicated in the "Overview" and configured in the dialog boxes vary depending on the selected window.


Select an active window from the "Specific Settings for" selection list that is displayed in the "Overview" and in all window-specific configuration dialog boxes.

The "Overview" and dialog boxes are updated to indicate the settings for the selected window.

## 5.2 Signal description

**Access:** "Overview" > "Signal Description"

The signal description provides information on the expected input signal, which optimizes pulse detection and measurement.

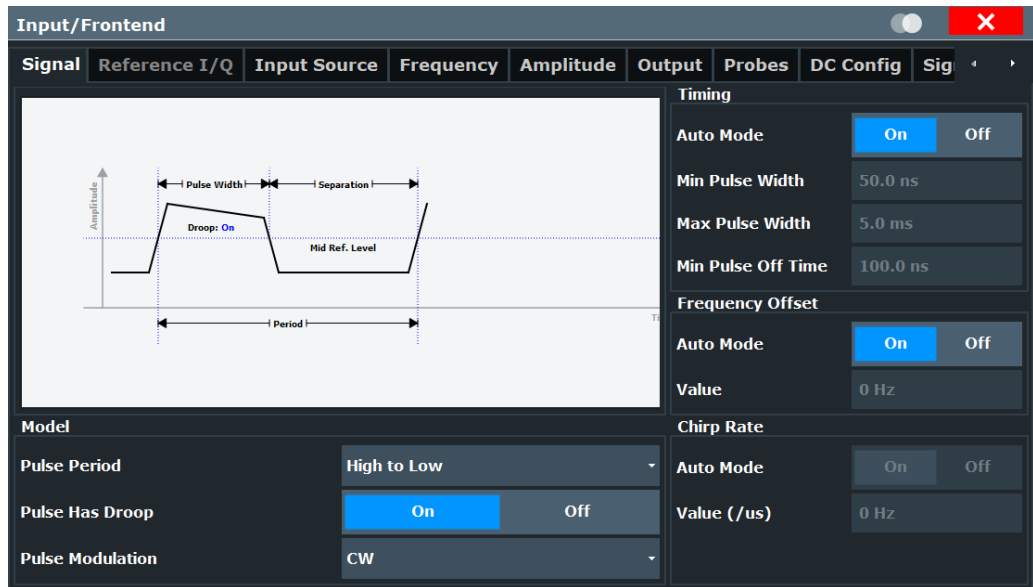

Pulse Period.....58  
 Pulse Has Droop.....58  
 Pulse Modulation.....58  
 Timing Auto Mode.....59  
 Minimum Pulse Width.....59  
 Maximum Pulse Width.....59  
 Min Pulse Off Time.....59  
 Frequency Offset Auto Mode.....59  
 Frequency Offset Value.....59  
 Chirp Rate Auto Mode.....60  
 Chirp Rate.....60

**Pulse Period**

Defines how a pulse is detected.

- "High to Low" The pulse period begins with the falling edge of the preceding pulse and ends with the falling edge of the current pulse.
- "Low to High" The pulse period begins with the rising edge of the current pulse and end with the rising edge of the succeeding pulse.

Remote command:

[\[SENSe:\] TRACe:MEASurement:DEFine:PULSe:PERiod](#) on page 137

**Pulse Has Droop**

If enabled, a pulse can be modeled as having amplitude droop, i.e. the pulse top may not be flat.

Remote command:

[\[SENSe:\] TRACe:MEASurement:DEFine:PULSe:ADRoop](#) on page 136

**Pulse Modulation**

Defines the expected pulse modulation:

"Arbitrary"	Modulation not considered (no phase error/frequency error results available)
"CW"	Continuous wave modulation, i.e. only the carrier power is modulated (On/Off) For CW modulation, additional parameters are available to define the frequency offset.
"Linear FM"	Linear frequency modulation (FM) (The frequency changes linearly over time within each pulse) For linear pulse modulation, additional parameters are available to define the chirp rate.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:MODulation](#) on page 136

### Timing Auto Mode

If enabled, the timing parameters (minimum pulse width, maximum pulse width, minimum pulse off time) are determined automatically from the current capture settings.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:DURation:AUTO](#) on page 134

### Minimum Pulse Width

Defines a minimum pulse width; pulses outside this range are not detected. The available value range is restricted by the sample rate.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:DURation:MIN](#) on page 135

### Maximum Pulse Width

Defines a maximum pulse width; pulses outside this range are not detected. The available value range is restricted by the sample rate.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:DURation:MAX](#) on page 135

### Min Pulse Off Time

The minimum time the pulse is "off", i.e. the time between successive pulses. This value is used to determine noise statistics and to reject short drops in amplitude during pulse "on" time. The available value range is 50ns to 100s, but may be restricted further by the sample rate.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:DURation:OFF](#) on page 135

### Frequency Offset Auto Mode

If enabled, the frequency offset is estimated automatically for each individual pulse.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:FREquency:OFFSet:AUTO](#) on page 136

### Frequency Offset Value

Defines a known frequency offset to be corrected in the pulse acquisition data.

Remote command:

[SENSe:] TRACe:MEASurement:DEFine:FREQuency:OFFSet on page 135

### Chirp Rate Auto Mode

If enabled, the chirp rate is estimated automatically for each individual pulse.

Remote command:

[SENSe:] TRACe:MEASurement:DEFine:FREQuency:RATE:AUTO on page 136

### Chirp Rate

Defines a known frequency chirp rate (in Hz/μs) to be used to generate an ideal pulse waveform for computing frequency and phase error parameters. This value is assumed constant for all measured pulses.

Remote command:

[SENSe:] TRACe:MEASurement:DEFine:FREQuency:RATE on page 136

## 5.3 Input and output settings

**Access:** "Overview" > "Input/Frontend"

**Or:** "Input & Output"

The R&S FSMR3 can analyze signals from different input sources and provide various types of output (such as noise or trigger signals).

- [Input source settings](#).....60

### 5.3.1 Input source settings

**Access:** "Overview" > "Input/Frontend" > "Input Source"

The input source determines which data the R&S FSMR3 analyzes.

The default input source for the R&S FSMR3 is "Radio Frequency", i.e. the signal at the "RF Input" connector of the R&S FSMR3. If no additional options are installed, this is the only available input source.

- [Radio frequency input](#).....60

#### 5.3.1.1 Radio frequency input

**Access:** "Overview" > "Input/Frontend" > "Input Source" > "Radio Frequency"

Input Source	Power Sensor	External Generator	Probes
<b>Radio Frequency</b>	On Off		
	Input Coupling	AC	DC
	YIG-Preselector	On	Off
	Impedance Matching		
	Impedance	50Ω	75Ω User
	Value	100.0 Ohm	
	Pad Type	Series-R	MLP



### RF Input Protection

The RF input connector of the R&S FSMR3 must be protected against signal levels that exceed the ranges specified in the data sheet. Therefore, the R&S FSMR3 is equipped with an overload protection mechanism for DC and signal frequencies up to 30 MHz. This mechanism becomes active as soon as the power at the input mixer exceeds the specified limit. It ensures that the connection between RF input and input mixer is cut off.

When the overload protection is activated, an error message is displayed in the status bar ("INPUT OVLD"), and a message box informs you that the RF input was disconnected. Furthermore, a status bit (bit 3) in the `STAT:QUES:POW` status register is set. In this case, you must decrease the level at the RF input connector and then close the message box. Then measurement is possible again. Reactivating the RF input is also possible via the remote command `INPut<ip>:ATTenuation:PROTection:RESet`.

Radio Frequency State.....	61
Input Coupling.....	62
Impedance.....	62
High Pass Filter 1 to 3 GHz.....	62
YIG-Preselector.....	62

### Radio Frequency State

Activates input from the "RF Input" connector.

Remote command:

`INPut<ip>:SELEct` on page 140

### Input Coupling

The RF input of the R&S FSMR3 can be coupled by alternating current (AC) or direct current (DC).

AC coupling blocks any DC voltage from the input signal. AC coupling is activated by default to prevent damage to the instrument. Very low frequencies in the input signal can be distorted.

However, some specifications require DC coupling. In this case, you must protect the instrument from damaging DC input voltages manually. For details, refer to the data sheet.

Remote command:

`INPut<ip>:COUPling` on page 138

### Impedance

For some measurements, the reference impedance for the measured levels of the R&S FSMR3000 can be set to 50  $\Omega$  or 75  $\Omega$ .

Select 75  $\Omega$  if the 50  $\Omega$  input impedance is transformed to a higher impedance using a 75  $\Omega$  adapter of the RAZ type. (That corresponds to 25 $\Omega$  in series to the input impedance of the instrument.) The correction value in this case is 1.76 dB = 10 log (75 $\Omega$ /50 $\Omega$ ).

Remote command:

`INPut<ip>:IMPedance` on page 140

### High Pass Filter 1 to 3 GHz

Activates an additional internal highpass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the analyzer to measure the harmonics for a DUT, for example.

This function requires an additional hardware option.

**Note:** For RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG-preselector, if available.)

Remote command:

`INPut<ip>:FILTer:HPASs[:STATe]` on page 139

### YIG-Preselector

Enables or disables the YIG-preselector.

This setting requires an additional option on the R&S FSMR3000.

An internal YIG-preselector at the input of the R&S FSMR3000 ensures that image frequencies are rejected. However, image rejection is only possible for a restricted bandwidth. To use the maximum bandwidth for signal analysis you can disable the YIG-preselector at the input of the R&S FSMR3000, which can lead to image-frequency display.

**Note:** Note that the YIG-preselector is active only on frequencies greater than 8 GHz. Therefore, switching the YIG-preselector on or off has no effect if the frequency is below that value.

Remote command:

`INPut<ip>:FILTer:YIG[:STATe]` on page 140

## 5.4 Frontend settings

**Access:** "Overview" > "Input/Frontend"

The frequency and amplitude settings represent the "frontend" of the measurement setup.

- [Frequency settings](#).....63
- [Amplitude settings](#).....64

### 5.4.1 Frequency settings

**Access:** "Overview" > "Input/Frontend" > "Frequency"

The screenshot shows the 'Input/Frontend' configuration window with the following settings:

- Signal**: Reference I/Q
- Input Source**: (Not explicitly shown)
- Frequency**: Center: 4.0 GHz
- Center Frequency Stepsize**: Stepsize: Manual, Value: 1.0 MHz
- Frequency Offset**: Value: 0 Hz

<a href="#">Center Frequency</a> .....	63
<a href="#">Center Frequency Stepsize</a> .....	63
<a href="#">Frequency Offset</a> .....	64

#### Center Frequency

Defines the center frequency of the signal in Hertz.

The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$$

$$\text{zero span}: 0 \text{ Hz} \leq f_{\text{center}} \leq f_{\text{max}}$$

$f_{\text{max}}$  and  $\text{span}_{\min}$  depend on the instrument and are specified in the data sheet.

Remote command:

[SENSe:] FREQuency:CENTer on page 142

#### Center Frequency Stepsize

Defines the step size by which the center frequency is increased or decreased using the arrow keys.

When you use the rotary knob the center frequency changes in steps of only 1/10 of the span.

The step size can be coupled to another value or it can be manually set to a fixed value.

"= Center"        Sets the step size to the value of the center frequency. The used value is indicated in the "Value" field.

"Manual"         Defines a fixed step size for the center frequency. Enter the step size in the "Value" field.

Remote command:

[\[SENSe:\] FREQuency:CENTer:STEP](#) on page 142

### Frequency Offset

Shifts the displayed frequency range along the x-axis by the defined offset.

This parameter has no effect on the instrument's hardware, on the captured data, or on data processing. It is simply a manipulation of the final results in which absolute frequency values are displayed. Thus, the x-axis of a spectrum display is shifted by a constant offset if it shows absolute frequencies. However, if it shows frequencies relative to the signal's center frequency, it is not shifted.

A frequency offset can be used to correct the display of a signal that is slightly distorted by the measurement setup, for example.

The allowed values range from -1 THz to 1 THz. The default setting is 0 Hz.

Remote command:

[\[SENSe:\] FREQuency:OFFSet](#) on page 143

## 5.4.2 Amplitude settings

**Access:** "Overview" > "Input/Frontend" > "Amplitude"

Amplitude settings affect the y-axis values.



Input/Frontend					
Signal	Reference I/Q	Input Source	Frequency	Amplitude	Output
Reference Level			Input Settings		
Value	0.0 dBm	Preamplifier	On	Off	
Offset	0.0 dB	Input Coupling	AC	DC	
	Auto Level	Impedance	50Ω	75Ω	
Attenuation			Electronic Attenuation		
Mode	Auto	Manual	State	On	Off
Value	10.0 dB		Mode	Auto	Manual
Optimization	Low Noise		Value	0 dB	

Reference Level.....	65
└ Shifting the Display (Offset).....	65
RF Attenuation.....	66
└ Attenuation Mode / Value.....	66
Input Settings.....	66
└ Preamplifier.....	66
└ Input Coupling.....	66
└ Impedance.....	67

### Reference Level

Defines the expected maximum reference level. Signal levels above this value are possibly not measured correctly. Signals above the reference level are indicated by an "IF Overload" status display.

The reference level can also be used to scale power diagrams; the reference level is then used for the calculation of the maximum on the y-axis.

Since the hardware of the R&S FSMR3000 is adapted according to this value, it is recommended that you set the reference level close above the expected maximum signal level. Thus you ensure an optimal measurement (no compression, good signal-to-noise ratio).

Remote command:

```
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:RLEVel
```

on page 144

### Shifting the Display (Offset) ← Reference Level

Defines an arithmetic level offset. This offset is added to the measured level. In some result displays, the scaling of the y-axis is changed accordingly.

Define an offset if the signal is attenuated or amplified before it is fed into the R&S FSMR3 so the application shows correct power results. All displayed power level results are shifted by this value.

The setting range is  $\pm 200$  dB in 0.01 dB steps.

Note, however, that the *internal* reference level (used to adjust the hardware settings to the expected signal) ignores any "Reference Level Offset". Thus, it is important to keep in mind the actual power level the R&S FSMR3 must handle. Do not rely on the displayed reference level (internal reference level = displayed reference level - offset).

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet` on page 144

### RF Attenuation

Defines the mechanical attenuation for RF input.

#### Attenuation Mode / Value ← RF Attenuation

Defines the attenuation applied to the RF input of the R&S FSMR3.

The RF attenuation can be set automatically as a function of the selected reference level (Auto mode). Automatic attenuation ensures that no overload occurs at the RF Input connector for the current reference level. It is the default setting.

In "Manual" mode, you can set the RF attenuation in 1 dB steps (down to 0 dB). Other entries are rounded to the next integer value. The range is specified in the data sheet. If the defined reference level cannot be set for the defined RF attenuation, the reference level is adjusted accordingly and the warning "limit reached" is displayed.

**NOTICE!** Risk of hardware damage due to high power levels. When decreasing the attenuation manually, ensure that the power level does not exceed the maximum level allowed at the RF input, as an overload can lead to hardware damage.

Remote command:

`INPut<ip>:ATTenuation` on page 146

`INPut<ip>:ATTenuation:AUTO` on page 146

### Input Settings

Some input settings affect the measured amplitude of the signal, as well.

#### Preamplicifier ← Input Settings

If the (optional) internal preamplifier hardware is installed on the R&S FSMR3000, a preamplifier can be activated for the RF input signal.

You can use a preamplifier to analyze signals from DUTs with low output power.

"Off" Deactivates the preamplifier.

"15 dB" The RF input signal is amplified by about 15 dB.

"30 dB" The RF input signal is amplified by about 30 dB.

For FSMR3050, the input signal is amplified by 30 dB if the preamplifier is activated.

Remote command:

`INPut<ip>:GAIN:STATe` on page 144

`INPut<ip>:GAIN[:VALue]` on page 145

#### Input Coupling ← Input Settings

The RF input of the R&S FSMR3 can be coupled by alternating current (AC) or direct current (DC).

AC coupling blocks any DC voltage from the input signal. AC coupling is activated by default to prevent damage to the instrument. Very low frequencies in the input signal can be distorted.

However, some specifications require DC coupling. In this case, you must protect the instrument from damaging DC input voltages manually. For details, refer to the data sheet.

Remote command:

[INPut<ip>:COUPling](#) on page 138

### Impedance ← Input Settings

For some measurements, the reference impedance for the measured levels of the R&S FSMR3000 can be set to 50  $\Omega$  or 75  $\Omega$ .

Select 75  $\Omega$  if the 50  $\Omega$  input impedance is transformed to a higher impedance using a 75  $\Omega$  adapter of the RAZ type. (That corresponds to 25 $\Omega$  in series to the input impedance of the instrument.) The correction value in this case is 1.76 dB = 10 log (75 $\Omega$ /50 $\Omega$ ).

Remote command:

[INPut<ip>:IMPedance](#) on page 140

## 5.5 Trigger settings

**Access:** "Overview" > "Trigger" > "Trigger Source"

**Or:** [TRIG] > "Trigger Config"

Trigger settings determine when the input signal is measured.

Trigger Source		Trigger In/Out	Segmented Capture	
Source	Ext Trigger 1			
Level	1.4 V	Drop-Out Time	0 s	
Offset	0 s	Slope	Rising	Falling
Hysteresis	3.0 dB	Holdoff	0 s	

External triggers from one of the [TRIGGER INPUT/OUTPUT] connectors on the R&S FSMR3000 are also available.

For step-by-step instructions on configuring triggered measurements, see the R&S FSMR3 User Manual.

Trigger Source.....	68
L Free Run.....	68
L Ext. Trigger 1/2.....	68
L I/Q Power.....	69
L IF Power.....	69
L RF Power.....	69
Trigger Level.....	70
Drop-Out Time.....	70
Trigger Offset.....	70
Slope.....	70
Hysteresis.....	70
Trigger Holdoff.....	71
Trigger 1/2.....	71
L Output Type.....	71
L Level.....	72
L Pulse Length.....	72
L Send Trigger.....	72

### Trigger Source

Defines the trigger source. If a trigger source other than "Free Run" is set, "TRG" is displayed in the channel bar and the trigger source is indicated.

**Note:** When triggering is activated, the squelch function is automatically disabled.

Remote command:

TRIGger [ :SEquence ] :SOURce on page 150

### Free Run ← Trigger Source

No trigger source is considered. Data acquisition is started manually or automatically and continues until stopped explicitly.

Remote command:

TRIG:SOUR IMM, see TRIGger [ :SEquence ] :SOURce on page 150

### Ext. Trigger 1/2 ← Trigger Source

Data acquisition starts when the TTL signal fed into the specified input connector meets or exceeds the specified trigger level.

(See "Trigger Level" on page 70).

**Note:** The "External Trigger 1" softkey automatically selects the trigger signal from the "Trigger Input / Output" connector on the front panel.

For details, see the "Instrument Tour" chapter in the R&S FSMR3 Getting Started manual.

"External Trigger 1"

Trigger signal from the "Trigger Input / Output" connector.  
(front panel)

**"External Trigger 2"**

Trigger signal from the "Sync Trigger Input / Output" connector.  
(rear panel)

Note: Connector must be configured for "Input" in the "Output" configuration  
(See the R&S FSMR3 user manual).

Remote command:

TRIG:SOUR EXT, TRIG:SOUR EXT2

See [TRIGger\[:SEquence\]:SOURce](#) on page 150

**I/Q Power ← Trigger Source**

Triggers the measurement when the magnitude of the sampled I/Q data exceeds the trigger threshold.

Remote command:

TRIG:SOUR IQP, see [TRIGger\[:SEquence\]:SOURce](#) on page 150

**IF Power ← Trigger Source**

The R&S FSMR3 starts capturing data as soon as the trigger level is exceeded around the third intermediate frequency.

For frequency sweeps, the third IF represents the start frequency. The trigger threshold depends on the defined trigger level, as well as on the RF attenuation and preamplification. A reference level offset, if defined, is also considered. The trigger bandwidth at the intermediate frequency depends on the RBW and sweep type. For details on available trigger levels and trigger bandwidths, see the instrument data sheet.

For measurements on a fixed frequency (e.g. zero span or I/Q measurements), the third IF represents the center frequency.

This trigger source is only available for RF input.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths, see the data sheet.

**Note:** Be aware that in auto sweep type mode, due to a possible change in sweep types, the trigger bandwidth can vary considerably for the same RBW setting.

Remote command:

TRIG:SOUR IFP, see [TRIGger\[:SEquence\]:SOURce](#) on page 150

**RF Power ← Trigger Source**

Defines triggering of the measurement via signals which are outside the displayed measurement range.

For this purpose, the instrument uses a level detector at the first intermediate frequency.

The input signal must be in the frequency range between 500 MHz and 8 GHz.

The resulting trigger level at the RF input depends on the RF attenuation and preamplification. For details on available trigger levels, see the instrument's data sheet.

**Note:** If the input signal contains frequencies outside of this range (e.g. for fullspan measurements), the measurement can be aborted. A message indicating the allowed input frequencies is displayed in the status bar.

A "Trigger Offset", "Trigger Polarity" and "Trigger Holdoff" (to improve the trigger stability) can be defined for the RF trigger, but no "Hysteresis".

Remote command:

TRIG:SOUR RFP, see [TRIGger\[:SEquence\]:SOURce](#) on page 150

### Trigger Level

Defines the trigger level for the specified trigger source.

For details on supported trigger levels, see the instrument data sheet.

Remote command:

[TRIGger\[:SEquence\]:LEVel:IFPower](#) on page 149

[TRIGger\[:SEquence\]:LEVel:IQPower](#) on page 149

[TRIGger\[:SEquence\]:LEVel\[:EXTernal<port>\]](#) on page 148

[TRIGger\[:SEquence\]:LEVel:RFPower](#) on page 149

### Drop-Out Time

Defines the time that the input signal must stay below the trigger level before triggering again.

Remote command:

[TRIGger\[:SEquence\]:DTIME](#) on page 147

### Trigger Offset

Defines the time offset between the trigger event and the start of the measurement.

Offset > 0:	Start of the measurement is delayed
Offset < 0:	Measurement starts earlier (pretrigger) Only possible for zero span (e.g. I/Q Analyzer application) and gated trigger switched off Maximum allowed range limited by the measurement time: $\text{Pretrigger}_{\text{max}} = \text{measurement time}_{\text{max}}$

**Tip:** To determine the trigger point in the sample (for "External" or "IF Power" trigger source), use the [TRACe:IQ:TPISample?](#) command.

Remote command:

[TRIGger\[:SEquence\]:HOLDoff\[:TIME\]](#) on page 147

### Slope

For all trigger sources except time, you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

Remote command:

[TRIGger\[:SEquence\]:SLOPe](#) on page 150

### Hysteresis

Defines the distance in dB to the trigger level that the trigger source must exceed before a trigger event occurs. Setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

This setting is only available for "IF Power" trigger sources. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:

[TRIGger\[:SEquence\]:IFPower:HYSteresis](#) on page 148

### Trigger Holdoff

Defines the minimum time (in seconds) that must pass between two trigger events. Trigger events that occur during the holdoff time are ignored.

Remote command:

[TRIGger\[:SEquence\]:IFPower:HOLDoff](#) on page 148

### Trigger 1/2

The trigger input and output functionality depends on how the variable "Trigger Input/Output" connectors are used.

"Trigger 1" "Trigger 1": "Trigger Input/Output" connector on the front panel

"Trigger 2" Defines the usage of the variable "Trigger Input/Output" connector on the rear panel.

"Input" The signal at the connector is used as an external trigger source by the R&S FSMR3000. Trigger input parameters are available in the "Trigger" dialog box.

"Output" The R&S FSMR3000 sends a trigger signal to the output connector to be used by connected devices. Further trigger parameters are available for the connector.

Remote command:

[OUTPut<up>:TRIGger<tp>:DIRection](#) on page 151

### Output Type ← Trigger 1/2

Type of signal to be sent to the output

"Device Triggered" (Default) Sends a trigger when the R&S FSMR3000 triggers.

- "Trigger Armed" Sends a (high level) trigger when the R&S FSMR3000 is in "Ready for trigger" state.  
This state is indicated by a status bit in the `STATUS:OPERATION` register (bit 5), as well as by a low-level signal at the "AUX" port (pin 9).
- "User Defined" Sends a trigger when you select the "Send Trigger" button.  
In this case, further parameters are available for the output signal.


Remote command:

`OUTPut<up>:TRIGger<tp>:OTYPe` on page 152

#### Level ← Output Type ← Trigger 1/2

Defines whether a high (1) or low (0) constant signal is sent to the trigger output connector (for "Output Type": "User Defined").

The trigger pulse level is always opposite to the constant signal level defined here. For example, for "Level" = "High", a constant high signal is output to the connector until you select the [Send Trigger](#) function. Then, a low pulse is provided.

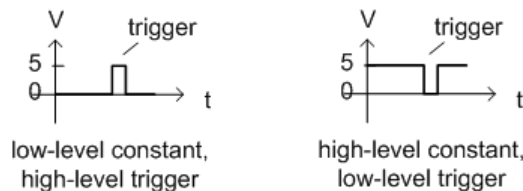

Remote command:

`OUTPut<up>:TRIGger<tp>:LEVel` on page 151

#### Pulse Length ← Output Type ← Trigger 1/2

Defines the duration of the pulse (pulse width) sent as a trigger to the output connector.

Remote command:

`OUTPut<up>:TRIGger<tp>:PULSe:LENGth` on page 152

#### Send Trigger ← Output Type ← Trigger 1/2

Sends a user-defined trigger to the output connector immediately.

Note that the trigger pulse level is always opposite to the constant signal level defined by the output [Level](#) setting. For example, for "Level" = "High", a constant high signal is output to the connector until you select the "Send Trigger" function. Then, a low pulse is sent.

Which pulse level is sent is indicated by a graphic on the button.

Remote command:

`OUTPut<up>:TRIGger<tp>:PULSe:IMMediate` on page 152

## 5.6 Data acquisition

**Access:** "Overview" > "Data Acquisition" > "Acquisition"

**Or:** [MEAS CONFIG] > "Data Acquisition" > "Acquisition" tab

You must define how much and how data is captured from the input signal.



**Acquisition / Detection**

Acquisition
Detection

**Measurement Bandwidth**

<b>Filter Type</b>	Flat	Gauss
<b>Meas Bandwidth</b>	200.0 MHz	
<b>Sample Rate</b>	512.0 MHz	

**Measurement Time**

<b>Meas Time</b>	350.0 $\mu$ s
<b>Record Length</b>	179 200
<b>Long Capture Buffer</b>	<span style="background-color: #333; color: white; padding: 2px 10px; border: 1px solid #333;">Auto</span> <span style="background-color: #333; color: white; padding: 2px 10px; border: 1px solid #333; margin-left: 10px;">On</span> <span style="background-color: #007bff; color: white; padding: 2px 10px; border: 1px solid #333; margin-left: 10px;">Off</span>



#### Input from I/Q data files

If the input source is an I/Q data file, most measurement settings related to data acquisition (attenuation, center frequency, measurement bandwidth, sample rate) cannot be changed. The measurement time can only be decreased, in order to perform measurements on an extract of the available data (from the beginning of the file) only.

For details, see [Chapter 4.4, "Basics on input from I/Q data files"](#), on page 49.

Filter type.....	73
Measurement Bandwidth.....	74
Sample rate.....	74
Measurement Time.....	74
Record length.....	74

#### Filter type

Defines the filter to be used for demodulation.

"Flat"                      Standard flat demodulation filter

"Gauss" Filter with optimized settling behavior (default)

**Note:** For Gaussian filters whose -3dB bandwidth is large compared to the maximum I/Q bandwidth, the ideal Gaussian filter shape would exceed the maximum I/Q bandwidth at its outer edges. Thus, the actual filter only follows the ideal Gaussian filter shape in the inner range of the set I/Q bandwidth. At a certain frequency offset it must deviate from the ideal Gauss filter and drop off faster.

For details see [Chapter B, "Effects of large gauss filters"](#), on page 337.

Remote command:

[\[SENSe:\] BWIDth:DEMod:TYPE](#) on page 153

### Measurement Bandwidth

The measurement bandwidth is defined by the used filter and the sample rate. Either a flat or a Gauss filter are available. For information on supported sample rates and filter bandwidths see the data sheet.

**Note:** If the input source is an I/Q data file, the measurement bandwidth cannot be changed.

For details, see [Chapter 4.4, "Basics on input from I/Q data files"](#), on page 49.

Remote command:

[\[SENSe:\] BANDwidth:DEMod](#) on page 153

### Sample rate

The sample rate for I/Q data acquisition is indicated for reference only. It is calculated from the defined measurement bandwidth and measurement time, or taken from the I/Q data input file.

### Measurement Time

Defines how long data is captured for analysis ("Meas Time"), or how many samples are captured in each record ("Record Length").

**Note:** If the input source is an I/Q data file, the measurement time can only be decreased, in order to perform measurements on an extract of the available data (from the beginning of the file) only.

For details, see [Chapter 4.4, "Basics on input from I/Q data files"](#), on page 49.

The maximum measurement time in the R&S FSMR3000 Pulse application is limited only by the available memory ("memory limit reached" message is shown in status bar). Note, however, that increasing the measurement time (and thus reducing the available memory space) may restrict the number of measurement channels that can be activated simultaneously on the R&S FSMR3.

Remote command:

[\[SENSe:\] SWEEp:TIME](#) on page 155

### Record length

The record length for I/Q data acquisition is indicated for reference only. It is calculated from the defined measurement bandwidth and measurement time, or taken from the I/Q data input file.

Remote command:

[SENSe:] RLENgth? on page 154

## 5.7 Sweep settings

**Access:** [SWEEP]

The sweep settings define how often data from the input signal is acquired and then evaluated.

Continuous Sweep / Run Cont.....	75
Single Sweep / Run Single.....	75
Continue Single Sweep.....	76
Measurement Time.....	76
Sweep/Average Count.....	76

### Continuous Sweep / Run Cont

After triggering, starts the sweep and repeats it continuously until stopped. This is the default setting.

While the measurement is running, the "Continuous Sweep" softkey and the [RUN CONT] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

**Note:** Sequencer. If the Sequencer is active, the "Continuous Sweep" softkey only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in continuous sweep mode is swept repeatedly.

Furthermore, the [RUN CONT] key controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see the R&S FSMR3 User Manual.

Remote command:

INITiate<n>:CONTinuous on page 167

### Single Sweep / Run Single

After triggering, starts the number of sweeps set in "Sweep Count". The measurement stops after the defined number of sweeps has been performed.

While the measurement is running, the "Single Sweep" softkey and the [RUN SINGLE] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

**Note:** Sequencer. If the Sequencer is active, the "Single Sweep" softkey only controls the sweep mode for the currently selected channel. However, the sweep mode only takes effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel in single sweep mode only once.

Furthermore, the [RUN SINGLE] key controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel is updated.

Remote command:

[INITiate<n>\[:IMMediate\]](#) on page 167

### Continue Single Sweep

After triggering, repeats the number of sweeps set in "Sweep Count", without deleting the trace of the last measurement.

While the measurement is running, the "Continue Single Sweep" softkey and the [RUN SINGLE] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Remote command:

[INITiate<n>:CONMeas](#) on page 166

### Measurement Time

Defines how long data is captured for analysis ("Meas Time"), or how many samples are captured in each record ("Record Length").

**Note:** If the input source is an I/Q data file, the measurement time can only be decreased, in order to perform measurements on an extract of the available data (from the beginning of the file) only.

For details, see [Chapter 4.4, "Basics on input from I/Q data files"](#), on page 49.

The maximum measurement time in the R&S FSMR3000 Pulse application is limited only by the available memory ("memory limit reached" message is shown in status bar). Note, however, that increasing the measurement time (and thus reducing the available memory space) may restrict the number of measurement channels that can be activated simultaneously on the R&S FSMR3.

Remote command:

[\[SENSe:\]SWEep:TIME](#) on page 155

### Sweep/Average Count

Defines the number of measurements to be performed in the single sweep mode. Values from 0 to 200000 are allowed. If the values 0 or 1 are set, one measurement is performed.

In continuous sweep mode, if "Sweep Count" = 0 (default), averaging is performed over 10 measurements. For "Sweep Count" = 1, no averaging, maxhold or minhold operations are performed.

The "Average Count" also determines the number of measurements used to calculate the pulse trace statistics for the result range displays (see [Chapter 4.5.1, "Trace statistics"](#), on page 51).

Remote command:


[\[SENSe:\]SWEep:COUNT](#) on page 168

## 5.8 Pulse detection

**Access:** "Overview" > "Detection"

Or: [MEAS CONFIG] > "Data Acquisition" > "Detection" tab

The pulse detection settings define the conditions under which a pulse is detected within the input signal.

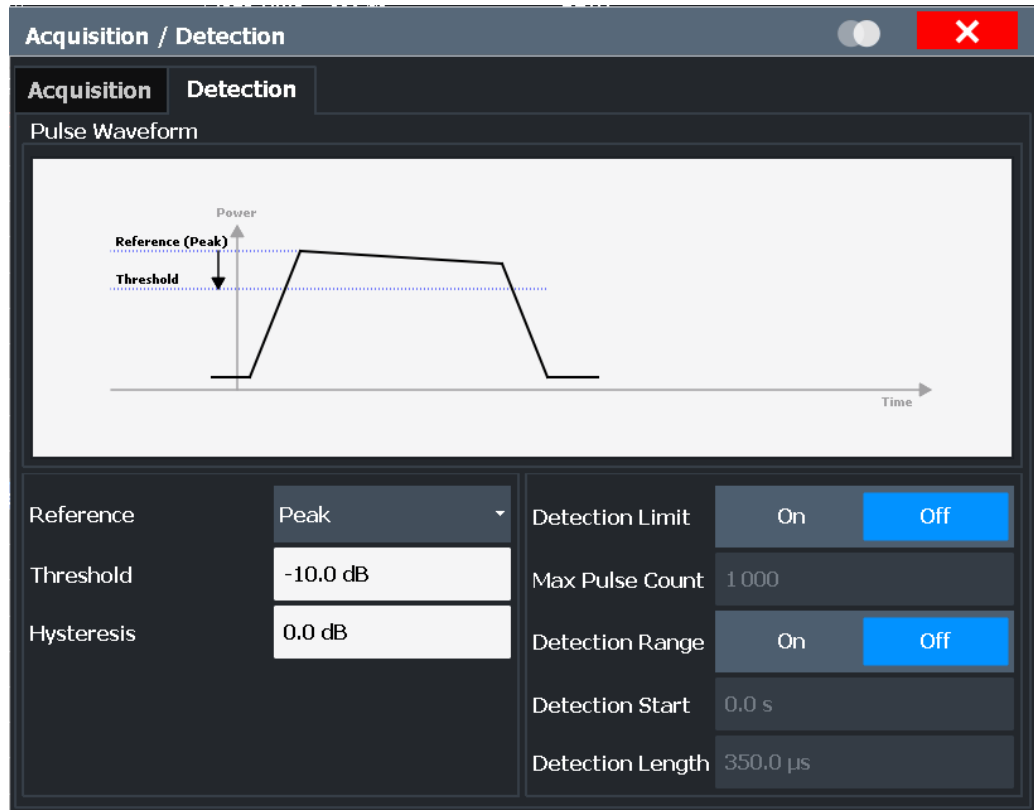

Reference Source..... 77  
 Threshold..... 78  
 Hysteresis..... 78  
 Detection Limit..... 78  
 Maximum Pulse Count..... 78  
 Detection Range..... 78  
 Detection Start..... 78  
 Detection Length..... 79

**Reference Source**

Defines the level to be used as a reference for the pulse detection threshold.

- "Reference" Current reference level
- "Peak" Peak level as measured over the entire capture data interval
- "Noise" Noise level determined from the current capture data according to the [Min Pulse Off Time](#) parameter set in [Signal description](#).
- "Absolute" Absolute level defined by the [Threshold](#)

Remote command:

[SENSe:] DETect:REFerence on page 158

### Threshold

The threshold determines whether a pulse is detected or not. The top of a pulse must exceed the threshold in order to be detected. The threshold is defined in dB in relation to the defined reference, or as an absolute threshold in dBm.

Remote command:

[SENSe:]DETECT:THRESHOLD on page 158

### Hysteresis

Defines a hysteresis for pulse detection in dB in relation to the defined threshold. As long as the signal does not exceed the hysteresis, the next threshold crossing is ignored.

Remote command:

[SENSe:]DETECT:HYS TERESIS on page 157

### Detection Limit

Restricts the number of pulses to be detected. When the maximum number is exceeded, measurement is stopped for the current capture buffer. This limitation can be used to speed up the measurement if only a small number of pulses is of interest.

Remote command:

[SENSe:]DETECT:LIMIT on page 156

### Maximum Pulse Count

Defines the maximum number of pulses to be detected.

This limit is ignored if [Detection Limit](#) is disabled.

Remote command:

[SENSe:]DETECT:LIMIT:COUNT on page 156

### Detection Range

Enables or disables the use of a detection range instead of the entire capture buffer for analysis.

A detection range determines which part of the capture buffer is analyzed. It is defined by the [Detection Start](#) and the [Detection Length](#). An active detection range is indicated in the "Magnitude Capture" Buffer display by vertical lines ("DR").

See also "[Detection range](#)" on page 46.

Remote command:

[SENSe:]DETECT:RANGE on page 157

### Detection Start

Defines the beginning of the detection range as the time in seconds from the capture buffer start. You can also change the detection start graphically by dragging the left vertical line ("DR") in the "Magnitude Capture" Buffer.

The pulse numbers in the result displays are always relative to the current detection range, that is: pulse number 1 is the first pulse within the detection range in the capture buffer. (Timestamps are in relation to the capture buffer start.)

Remote command:

[SENSe:]DETECT:RANGE:START on page 157

**Detection Length**

Defines the length of the detection range as a time in seconds. You can also change the detection length graphically by dragging one of the vertical lines ("DR") in the "Magnitude Capture" Buffer.

Remote command:

[SENSe:] DETect:RANGe:LENGth on page 157

## 5.9 Pulse measurement settings

**Access:** "Overview" > "Measurement"

The pulse measurement settings determine how much data is measured for each pulse, in relation to defined levels, points, or ranges. Which definition is actually used during measurement depends on the selected evaluation method.


- [Measurement levels](#)..... 79
- [Measurement point](#)..... 82
- [Measurement range](#)..... 84

### 5.9.1 Measurement levels

**Access:** "Overview" > "Measurement" > "Meas Levels" tab

Or: [MEAS CONFIG] > "Pulse Meas" > "Meas Levels" tab

Some measurements are performed depending on defined levels.

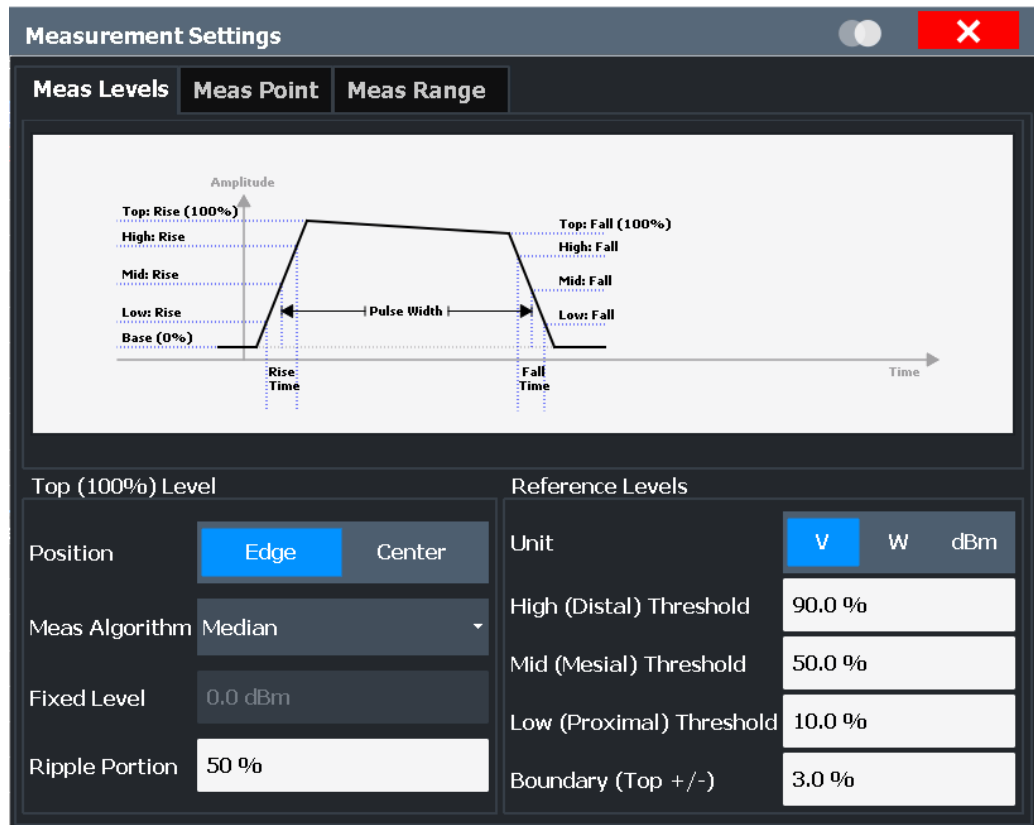

Position..... 80

Measurement Algorithm..... 81

Fixed Value..... 81

Ripple Portion..... 81

Reference Level Unit..... 81

High (Distal) Threshold..... 81

Mid (Mesial) Threshold..... 81

Low (Proximal) Threshold..... 82

Boundary..... 82

**Position**

Determines where the 100% value (from base to top) for the rise and fall time measurements is calculated.

This allows you to consider a "droop" in the pulse top during the pulse measurements. If a droop is to be considered, the 100% value must be calculated separately for the rising and falling edges.

"Edge" The 100% value is measured separately for the rising and falling edges.

"Center" The 100% value is measured at the pulse center and used for all measurements.

Remote command:

[SENSe:] TRACe:MEASurement:DEFine:COMPensate:ADRoop on page 160



**Measurement Algorithm**

Defines the algorithm used to detect the pulse top level.

"Mean"	The arithmetic average of the measured values
"Median"	The level for which half the values lie above, the other half below in the histogram
"Fixed"	A <b>Fixed Value</b> is used. Useful if some pulses do not reach the top level, but you want to measure them nevertheless, while maintaining a specified top level.
"Peak Power"	The peak power is used to detect the pulse top level.

Remote command:

[\[SENSe:\]TRACe:MEASurement:ALGORITHM](#) on page 159

**Fixed Value**

Defines the value (in dBm) to be used by the "Fixed" measurement algorithm.

Note that if the fixed value is much higher than the actual pulse top level, pulse parameters cannot be measured ("---" indicated in the table results). In this case, reduce the fixed power level or the **High (Distal) Threshold** used for rise/fall time measurements.

You can also change the fixed top power level graphically, by moving the "100 %" horizontal line in the "Magnitude Capture" Buffer display.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:TOP:FIXed](#) on page 160

**Ripple Portion**

Defines the portion of the pulse top which is used to measure the ripple.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:RIPple](#) on page 160

**Reference Level Unit**

Defines the unit of the pulse amplitude values, i.e. whether magnitude (V) or power (W, dBm) values are used to determine the threshold levels for fall and rise times.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:AMPLitude:UNIT](#) on page 159

**High (Distal) Threshold**

The upper threshold in percent of the pulse amplitude used to signify the end of a rising or beginning of a falling signal level.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:TRANSition:HREFerence](#) on page 161

**Mid (Mesial) Threshold**

The middle threshold in percent of the pulse amplitude used to signify the mid-transition level between pulse states.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:TRANSition:REFerence](#) on page 161

**Low (Proximal) Threshold**

The lower threshold in percent of the pulse amplitude used to signify the end of a falling or beginning of a rising signal level.

Remote command:

[\[SENSe:\] TRACe:MEASurement:DEFine:TRANSition:LREference](#) on page 161

**Boundary**

The boundary in percent of the pulse amplitude to either side of the pulse top (ON state). Used to determine the settling time, for example. Once the signal remains within the boundary, it is assumed to have settled.

Remote command:

[\[SENSe:\] TRACe:MEASurement:DEFine:BOUNDary:TOP](#) on page 160

**5.9.2 Measurement point**

**Access:** "Overview" > "Measurement" > "Meas Point" tab

**Or:** [MEAS CONFIG] > "Pulse Meas" > "Meas Point" tab

Some specific pulse parameters, e.g. the phase or the frequency, are determined at a specific time instant (measurement point) within the pulse. You can configure this point based on a reference and offset value.

**Measurement Settings**

Meas Levels | **Meas Point** | Meas Range | Time Sidelobe Range | Pulse

Amplitude

Time

Meas Point

Trigger

-5.0 µs

Reference

Rise | Center | Fall | **Trigger**

Offset

-5.0 µs

Averaging Window

0 s

Reference for Pulse-Pulse Measurements

Mode | Pulse Fixed | 1

Measurement Point Reference.....	83
Offset.....	83
Averaging Window.....	83
Reference for Pulse-Pulse Measurements.....	83

### Measurement Point Reference

Defines the reference which the [Offset](#) refers to.

"Rise"	The measurement point is defined in reference to the rising edge (mid-level crossing).
"Center"	The measurement point is defined in reference to the center of the pulse (equal distance from the rising and falling mid-level crossings).
"Fall"	The measurement point is defined in reference to the falling edge (mid-level crossing).

Remote command:

`[SENSe:]TRACe:MEASurement:DEFine:PULSe:INSTant:REFerence`  
on page 162

### Offset

The time offset of the measurement point in reference to the pulse center or an edge, depending on the [Measurement Point Reference](#) setting.

The "Offset" is indicated in the dialog box.

Remote command:

`[SENSe:]TRACe:MEASurement:DEFine:PULSe:INSTant` on page 162

### Averaging Window

Measurement point results are averaged over a window centered at the measurement point. The length of the averaging window in seconds can be defined. A minimum length of 1 sample is enforced internally.

Remote command:

`[SENSe:]TRACe:MEASurement:DEFine:PULSe:INSTant:AWINDOW` on page 162

### Reference for Pulse-Pulse Measurements

Reference pulse on which relative pulse results are based (e.g. for traces normalized to reference pulse, see [Chapter 4.5.2, "Normalizing traces"](#), on page 51).

"Fixed"	A fixed pulse number Relative results for the specified pulse number itself are not valid and are indicated as "...".
"Selected"	The currently selected pulse (see <a href="#">Chapter 6.1.1, "Pulse selection"</a> , on page 87) Relative results for the selected pulse itself are not valid and are indicated as "...". If you change the value for the reference pulse here, the <a href="#">Chapter 6.1.1, "Pulse selection"</a> , on page 87 value is adapted accordingly, and vice versa.

- "Before Pulse" The nth pulse before the currently evaluated pulse, where n is the specified number  
 No values are available for the first n pulses, as no valid reference pulse is available. These results are indicated as "...".  
 For example, a value of 2 will use row 1 as the reference row for Pulse-Pulse results for pulse number 3. In this case, pulse numbers 1 and 2 will not have a valid reference row and the Pulse-Pulse results will be invalid for these rows.
- "After Pulse" The nth pulse after the currently evaluated pulse, where n is the specified number  
 No values are available for the last n pulses, as no valid reference pulse is available. These results are indicated as "...".  
 For example, a value of 2 will use row 5 as the reference row for Pulse-Pulse results for pulse number 3. In this case, the last two pulse rows will not have a valid reference row and the Pulse-Pulse results will be invalid for these rows.

Remote command:

[\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:REFerence:POSition](#)  
 on page 163

[\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:REFerence](#) on page 163

### 5.9.3 Measurement range

**Access:** "Overview" > "Measurement" > "Meas Range" tab

**Or:** [MEAS CONFIG] > "Pulse Meas" > "Meas Range" tab

Some measurements are performed over a range within the pulse, for example the phase or frequency deviation. The measurement range is specified either by start and end points relative to the rising and falling edges, or as a proportion of the pulse top.



Reference, Length, Offset..... 85

### Reference, Length, Offset

Defines the reference for the measurement range definition. Depending on the selected reference type, an additional setting is available to define the range.

- "Center" Defines a relative range around the center of the pulse. The range is defined by its **length** in percent of the pulse top.
- "Edge" Defines the start and stop of the measurement range with respect to the pulse edges. The range is defined by a time **offset** from the middle of the **rising edge** and a time offset from the middle of the **falling edge**.

Remote command:

`[SENSe:] TRACe:MEASurement:DEFine:PULSe:ESTimation:REFerence`  
on page 165

Relative range (Center):

`[SENSe:] TRACe:MEASurement:DEFine:PULSe:ESTimation:LENGth`  
on page 164

Absolute range (Edge):

`[SENSe:] TRACe:MEASurement:DEFine:PULSe:ESTimation:OFFSet:LEFT`  
on page 164

`[SENSe:] TRACe:MEASurement:DEFine:PULSe:ESTimation:OFFSet:RIGHT`  
on page 164

## 5.10 Automatic settings

**Access:** [AUTO SET]

Some settings can be adjusted by the R&S FSMR3 automatically according to the current measurement settings.

<a href="#">Auto Scale Continuous (All)</a> .....	86
<a href="#">Auto Scale Once (All)</a> .....	86

### **Auto Scale Continuous (All)**

Automatically determines the optimal result range and reference level position for *each new measurement* in all displayed diagrams (for graphical or pulse-based result displays only).

Remote command:

SENS:TRAC:MEAS:DEF:RRAN:AUTO ON, see [\[SENSe:\]TRACe:MEASurement:DEFine:RRANge:AUTO](#) on page 171

DISP:TRAC:Y:SCAL:AUTO ON, see [DISPlay\[:WINDow<n>\]\[:SUBWindow<n>\]:TRACe<t>:Y\[:SCALe\]:AUTO](#) on page 232

### **Auto Scale Once (All)**

Automatically determines the optimal result range and reference level position *once* for the *current* measurement settings in all displayed diagrams and pulse-based result displays. All automatic scaling functions are then switched off.

Remote command:

SENS:TRAC:MEAS:DEF:RRAN:AUTO ONCE, see [\[SENSe:\]TRACe:MEASurement:DEFine:RRANge:AUTO](#) on page 171

DISP:TRAC:Y:SCAL:AUTO ONCE, see [DISPlay\[:WINDow<n>\]\[:SUBWindow<n>\]:TRACe<t>:Y\[:SCALe\]:AUTO](#) on page 232

## 6 Analysis

After a Pulse measurement has been performed, you can analyze the results in various ways.

- [Result configuration](#)..... 87
- [Display configuration](#)..... 102
- [Markers](#)..... 102
- [Trace configuration](#)..... 109
- [Trace / data export configuration](#)..... 113
- [Export functions](#)..... 115

### 6.1 Result configuration

**Access:** "Overview" > "Result Configuration"

**Or:** [MEAS CONFIG] > "Result Config"

Some evaluation methods require or allow for additional settings to configure the result display. Note that the available settings depend on the selected window (see "[Specific Settings for](#)" on page 57).

- [Pulse selection](#)..... 87
- [Result range](#)..... 88
- [Result range spectrum configuration](#)..... 89
- [Result range frequency configuration](#)..... 91
- [Parameter configuration for result displays](#)..... 91
- [Table configuration](#)..... 97
- [Y-Scaling](#)..... 99
- [Units](#)..... 101

#### 6.1.1 Pulse selection

**Access:** [MEAS CONFIG] > "Selected Pulse"

The pulse traces (frequency, magnitude and pulse vs. time) always display the trace for one specific pulse, namely the currently selected pulse. The currently selected pulse is highlighted blue in the "Pulse Results" and "Pulse Statistics" displays.

As soon as a new pulse is selected, all pulse-specific displays are automatically updated.



The selected pulse (number) is relative to the currently defined detection range, if enabled (see "[Detection Range](#)" on page 78). If you change the detection range within the capture buffer, the selected pulse is adapted automatically, and all pulse-based results are updated, if necessary.



**Linked markers**

In "Parameter Trend" displays, the marker M1 can be linked to the selected pulse (see "Link Trend M1 to Selected Pulse" on page 107). Thus, if you select a different pulse, the marker M1 is also set to the same pulse, and vice versa.

**Remote command:**

[SENSe:] TRACe:MEASurement:DEFine:PULSe:SElected on page 170


**6.1.2 Result range**

**Access:** "Overview" > "Result Configuration" > "Result Range" tab

**Or:** [MEAS CONFIG] > "Result Config" > "Result Range" tab

The result range determines which data is displayed on the screen (see also "Measurement range vs. result range vs. detection range" on page 15). This range applies to the "pulse magnitude", frequency and phase vs time displays.

Furthermore, the spectrum for the result range can be displayed (see "Result Range Spectrum" on page 40).

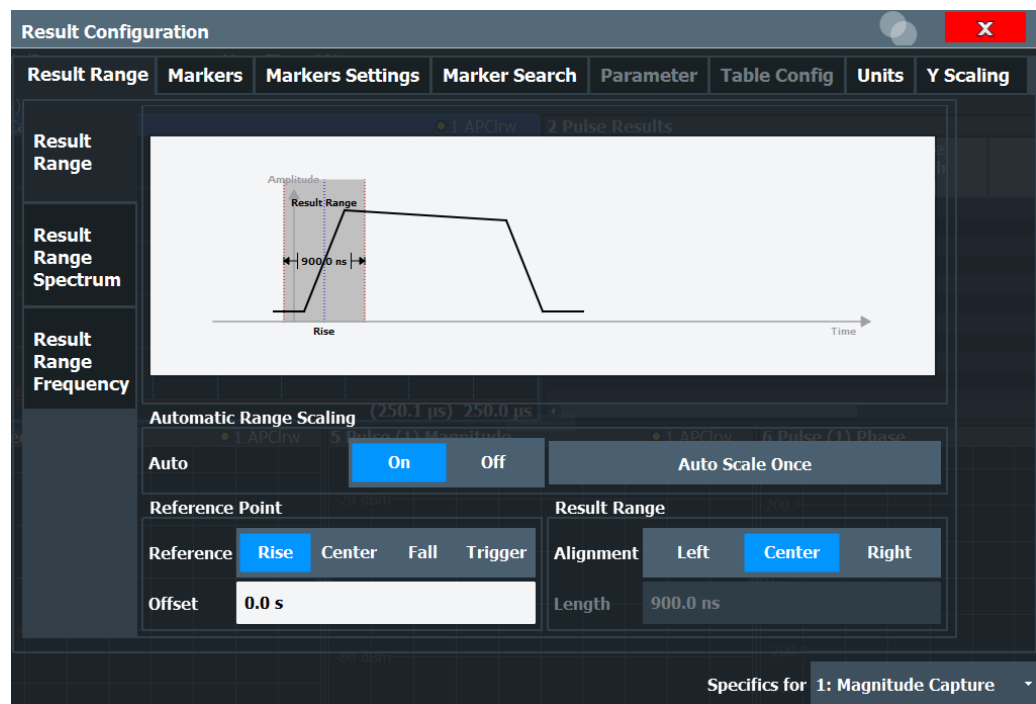

The range is defined by a reference point, alignment and the range length.

Automatic Range Scaling.....89  
 Result Range Reference Point.....89  
 Offset.....89  
 Alignment..... 89  
 Length..... 89



**Automatic Range Scaling**

Defines whether the result range length is determined automatically according to the width of the selected pulse (see [Chapter 6.1.1, "Pulse selection"](#), on page 87).

**Note:** The result range is applied to all pulse-based result displays.

"OFF"	Switches automatic range scaling off
"ON"	Switches automatic range scaling on
"ONCE"	Executes automatic range scaling once and then switches it off

Remote command:

[\[SENSe:\] TRACe:MEASurement:DEFine:RRANge:AUTO](#) on page 171

**Result Range Reference Point**

Defines the reference point for positioning the result range. The [Offset](#) is given with respect to this value.

"Rise"	The result range is defined in reference to the rising edge.
"Center"	The result range is defined in reference to the center of the pulse top.
"Fall"	The result range is defined in reference to the falling edge.

Remote command:

[\[SENSe:\] TRACe:MEASurement:DEFine:RRANge:REFerence](#) on page 172

**Offset**

The offset in seconds from the pulse edge or center at which the result range reference point occurs.

Remote command:

[\[SENSe:\] TRACe:MEASurement:DEFine:RRANge:OFFSet](#) on page 172

**Alignment**

Defines the alignment of the result range in relation to the selected [Result Range Reference Point](#).

"Left"	The result range starts at the pulse center or selected edge.
"Center"	The result range is centered around the pulse center or selected edge.
"Right"	The result range ends at the pulse center or selected edge.

Remote command:

[\[SENSe:\] TRACe:MEASurement:DEFine:RRANge:ALIGnment](#) on page 171

**Length**

Defines the length or duration of the result range.

Remote command:


[\[SENSe:\] TRACe:MEASurement:DEFine:RRANge:LENGth](#) on page 172

**6.1.3 Result range spectrum configuration**

**Access:** "Overview" > "Result Configuration" > "Result Range" tab > "Result Range Spectrum" tab

Or: [MEAS CONFIG] > "Result Config" > "Result Range" tab > "Result Range Spectrum" tab

For the "Result Range Spectrum" display additional settings are available for the FFT.

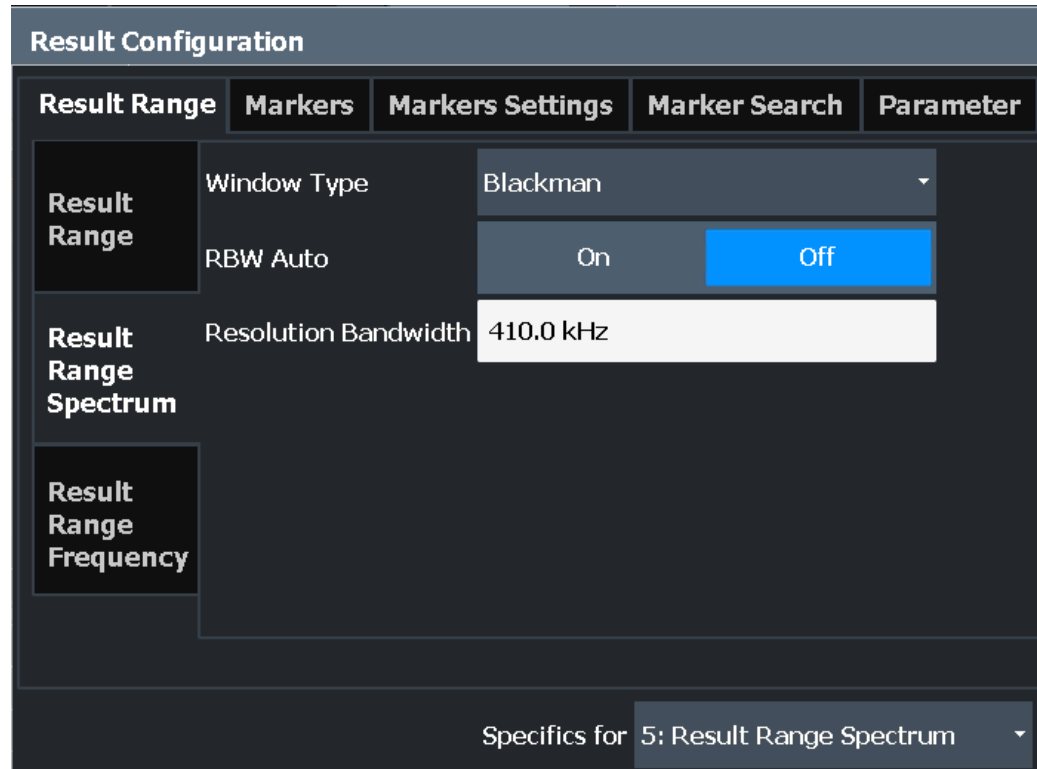

<a href="#">Window Type</a> .....	90
<a href="#">ResBW Manual</a> .....	90
<a href="#">RBW Auto</a> .....	91

### Window Type

Used FFT window type for "Result Range Spectrum". The same window types are available as for "Parameter Spectrum" displays (see "[Window functions](#)" on page 47).

Remote command:

[CALCulate<n>:RRSPectrum:WINDow](#) on page 207

### ResBW Manual

Defines the resolution bandwidth for the "Result Range Spectrum".

The resolution bandwidth defines the minimum frequency separation at which the individual components of a spectrum can be distinguished. Small values lead to high precision results, as the distance between two distinguishable frequencies is small, but require a larger measurement interval (that is: longer [Result Range length](#)) for the calculation. Higher values decrease the precision, but can increase measurement speed.

Remote command:

[CALCulate<n>:RRSPectrum:RBW](#) on page 208

**RBW Auto**

If activated, a resolution bandwidth is selected automatically which provides a good balance between fast measurement speed and high spectral resolution.

Remote command:

[CALCulate<n>:RRSPectrum:AUTO](#) on page 208

**6.1.4 Result range frequency configuration****FM Video Bandwidth**

**Access:** "Bandwidth" > "FM Video Bandwidth"

Additional filters applied after demodulation help filter out unwanted signals, or correct pre-emphasized input signals.

- Relative low pass filters:  
Relative filters (3 dB) can be selected in % of the analysis (demodulation) bandwidth. The filters are designed as 5th-order Butterworth filters (30 dB/octave) and active for all demodulation bandwidths.
- "None" deactivates the FM video bandwidth (default).

Remote command:

[\[SENSe:\]DEMod:FMVF:TYPE](#) on page 154

**6.1.5 Parameter configuration for result displays**

**Access:** "Overview" > "Result Configuration" > "Parameter" tab


For "parameter trend", spectrum, or distribution displays you can define which parameters are to be evaluated in each window.

- [Parameter distribution configuration](#)..... 91
- [Parameter spectrum configuration](#)..... 93
- [Parameter trend configuration](#)..... 95

**6.1.5.1 Parameter distribution configuration**

**Access:** "Overview" > "Result Configuration" > "Parameter" > "Distribution"

The "parameter distribution" evaluations allow you to visualize the number of occurrences for a specific parameter value within the current capture buffer. For each "parameter distribution" window you can configure which measured parameter is to be displayed.

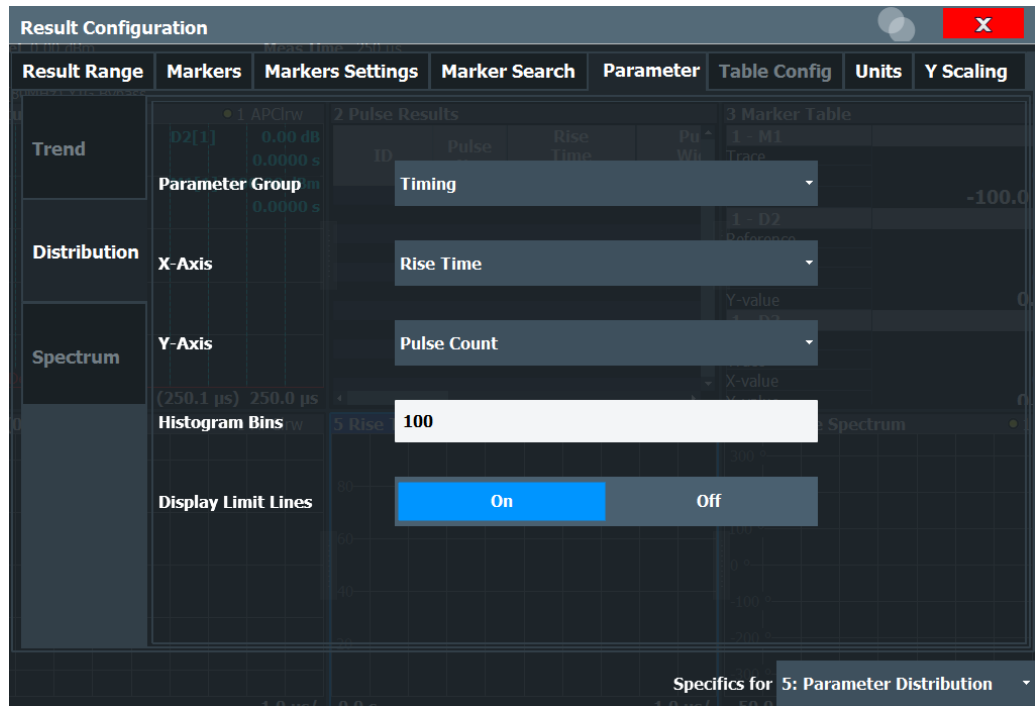

This tab is only available for windows with a Parameter Distribution evaluation.

Parameter Group.....	92
X-Axis.....	92
Y-Axis.....	92
Histogram Bins.....	93
Display Limit Lines.....	93

### Parameter Group

Defines the group of parameters from which one can be selected to display the distribution of the measured values on the y-axis. For a description of the parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.

### X-Axis

Defines the parameter for which the values are displayed on the x-axis. The available parameters depend on the selected [Parameter Group](#).

Remote command:

CALCulate<n>:DISTribution:<GroupName> <X-Axis>,<Y-Axis>, see e.g. [CALCulate<n>:DISTribution:FREquency](#) on page 174

### Y-Axis

Defines the scaling of the y-axis.

"Pulse count"    Number of pulses in which the value occurred.

"Occurrence"    Number of occurrences in percent of all measured values.

### Histogram Bins

Number of columns on the x-axis, i.e. the number of measurement value ranges for which the occurrences are determined.

Remote command:

[CALCulate<n>:DISTRibution:NBINs](#) on page 175

### Display Limit Lines

Hides or shows the limit lines in the selected Parameter Trend or Parameter Distribution result display. You can drag these lines to a new position in the window. The new position is maintained, the limit check is repeated, and the results of the limit check in any active table displays are adapted.

Note that this function only has an effect on the visibility of the lines in the graphical displays, it does not affect the limit check in general or the display of the limit check results in the table displays.

Remote command:

[CALCulate<n>:DISTRibution:LLINes\[:STATe\]](#) on page 175

[CALCulate<n>:TREND:LLINes\[:STATe\]](#) on page 196


## 6.1.5.2 Parameter spectrum configuration

**Access:** "Overview" > "Result Configuration" > "Parameter" > "Spectrum"

A "parameter spectrum" displays the results of an FFT for a selected column of the "Pulse Results" table. This "spectrum" allows you to easily determine the frequency of periodicities in the pulse parameters.

For each "Parameter Spectrum" window you can configure which measured parameter is to be displayed and how the spectrum is determined.

The pulse-to-pulse spectrum is basically a "parameter spectrum" based on complex I/Q data. You cannot select a parameter for the spectrum. All other settings are identical to the "parameter spectrum".

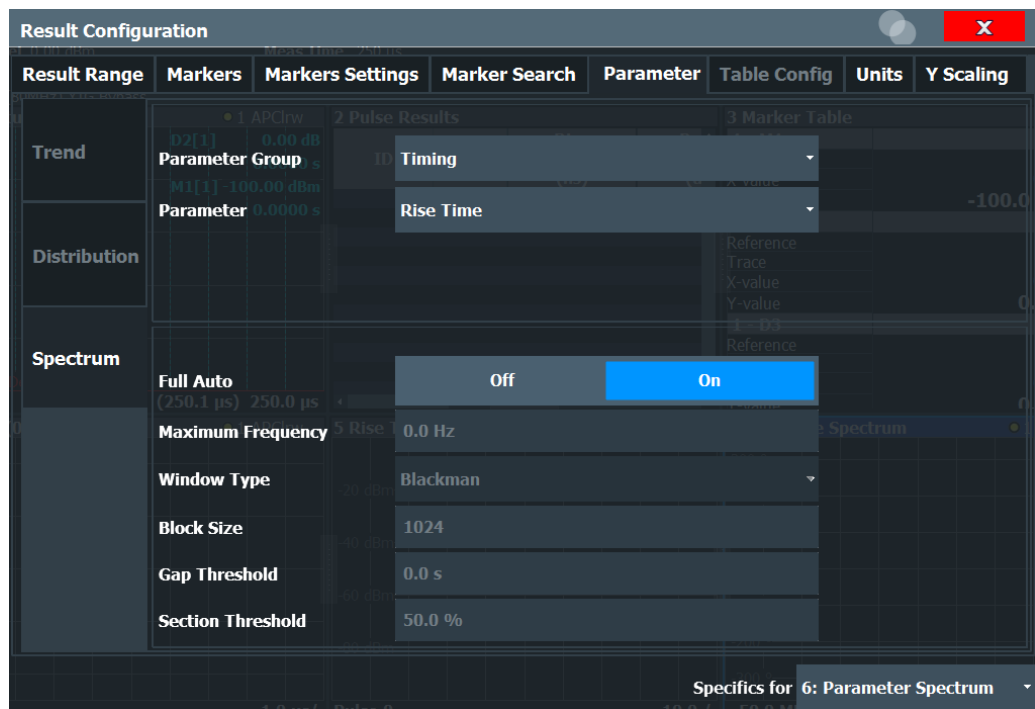

This tab is only available for windows with a "Parameter Spectrum" evaluation.

For more information on how the "parameter spectrum" is calculated see [Chapter 4.3, "Parameter spectrum calculation"](#), on page 46.

<a href="#">Parameter Group</a> .....	94
<a href="#">Parameter</a> .....	94
<a href="#">Full Auto</a> .....	95
<a href="#">Maximum Frequency</a> .....	95
<a href="#">Window Type</a> .....	95
<a href="#">Block Size</a> .....	95
<a href="#">Gap Threshold</a> .....	95
<a href="#">Section Threshold</a> .....	95

### Parameter Group

Defines the group of parameters from which one can be selected to display the FFT of the measured values. For a description of the parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.

### Parameter

Defines the parameter for which the FFT is calculated and displayed. The available parameters depend on the selected [Parameter Group](#).

Remote command:

CALCulate<n>:PSpectrum:<GroupName> <X-Axis>, see e.g. [CALCulate<n>:PSpectrum:FREquency](#) on page 181

**Full Auto**

Determines the "Parameter Spectrum" settings automatically. For most measurement cases, automatic configuration should be suitable.

If enabled, the individual settings are not available.

Remote command:

[CALCulate<n>:PSPectrum:AUTO](#) on page 179

**Maximum Frequency**

Defines the maximum frequency span for which the Spectrum is calculated. Internally, the span is limited by the number of possible interpolation samples (100 000). Limiting the span to the actually required frequencies decreases the calculation time and can improve the obtained RBW.

Remote command:

[CALCulate<n>:PSPectrum:MAXFrequency](#) on page 182

**Window Type**

Used FFT window type

Remote command:

[CALCulate<n>:PSPectrum:WINDow](#) on page 185

**Block Size**

Size of block used in spectrum calculation. Windowing and averaging are used to combine blocks. The block size also determines the resulting RBW of the spectrum.

Remote command:

[CALCulate<n>:PSPectrum:BLOCKsize](#) on page 180

**Gap Threshold**

Minimum time that must pass before a gap is detected as such.

Remote command:

[CALCulate<n>:PSPectrum:GTHReshold](#) on page 182

**Section Threshold**

Minimum section size as a percentage of the block size. Sections that are smaller than the threshold are ignored and considered to be in the detected gap.


Remote command:

[CALCulate<n>:PSPectrum:STHReshold](#) on page 184

**6.1.5.3 Parameter trend configuration**

**Access:** "Overview" > "Result Configuration" > "Parameter" tab > "Trend" tab

The parameter trend result displays allow you to visualize changes in a specific parameter for all measured pulses within the current capture buffer. For each parameter trend window you can configure which measured parameter is to be displayed on the x-axis and which on the y-axis.

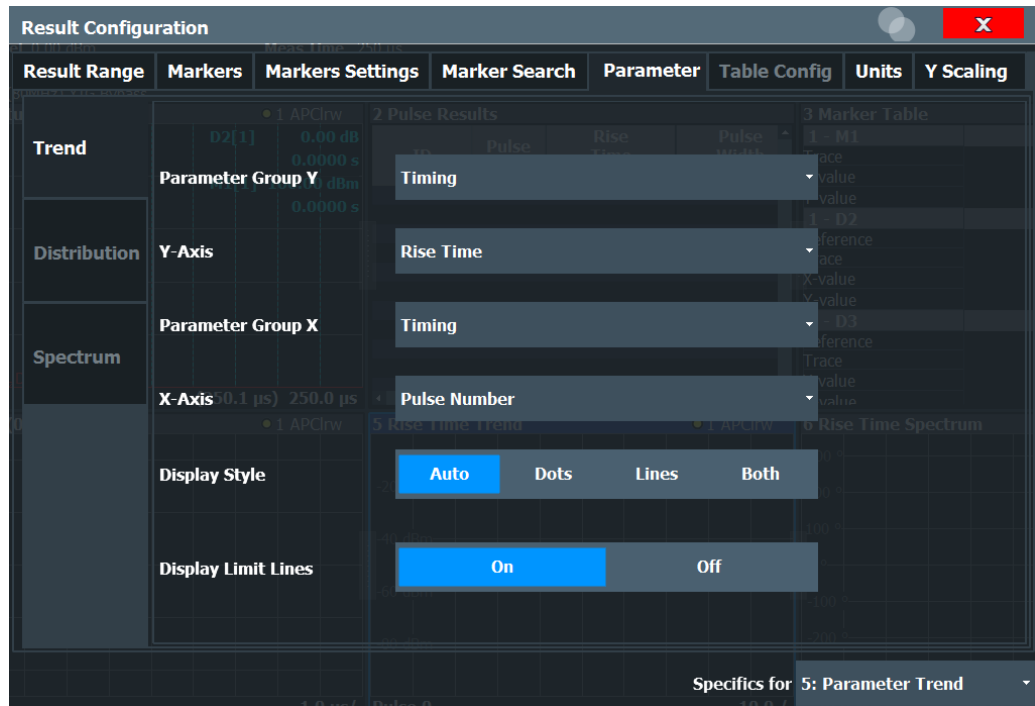

This tab is only available for windows with a Parameter Trend result display.

Parameter Group Y.....	96
Y-Axis.....	96
Parameter Group X.....	96
X-Axis.....	97
Display Limit Lines.....	97

### Parameter Group Y

Defines the group of parameters from which one can be selected to display the trend on the y-axis. For a description of the parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.

### Y-Axis

Defines the parameter for which the trend is displayed on the y-axis. The available parameters depend on the selected "[Parameter Group Y](#)" on page 96.

Remote command:

CALCulate<n>:TRENd:<GroupName>:Y, see e.g. [CALCulate<n>:TRENd:FREquency:Y](#) on page 195

CALCulate<n>:TRENd:<GroupName> Y, X, see e.g. [CALCulate<n>:TRENd:FREquency](#) on page 193

### Parameter Group X

Defines the group of parameters from which one can be selected to display the trend on the x-axis. For a description of the parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.



**X-Axis**

Defines the parameter for which the trend is displayed on the y-axis. The available parameters depend on the selected [Parameter Group X](#).

Remote command:

CALCulate<n>:TRENd:<GroupName>:X, see e.g. [CALCulate<n>:TRENd:FREQuency:X](#) on page 194

CALCulate<n>:TRENd:<GroupName> Y,X, see e.g. [CALCulate<n>:TRENd:FREQuency](#) on page 193

**Display Limit Lines**

Hides or shows the limit lines in the selected Parameter Trend or Parameter Distribution result display. You can drag these lines to a new position in the window. The new position is maintained, the limit check is repeated, and the results of the limit check in any active table displays are adapted.

Note that this function only has an effect on the visibility of the lines in the graphical displays, it does not affect the limit check in general or the display of the limit check results in the table displays.

Remote command:

CALCulate<n>:DISTribution:LLINes[:STATe] on page 175

CALCulate<n>:TRENd:LLINes[:STATe] on page 196

**6.1.6 Table configuration**

**Access:** "Overview" > "Result Configuration" > "Table Config"

During each measurement, a large number of statistical and characteristic values are determined. The "Pulse Statistics" and "Pulse Results" result displays provide an overview of the parameters selected here.

Note that the "Result Configuration" dialog box is window-specific; table configuration settings are only available if a table display is selected. However, the table configuration applies to *all* tables, regardless of which table is selected.

Select the parameters to be included in the tables, and the required unit scaling, if available. For a description of the individual parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.

Table export configuration is described in ["Table Export Configuration"](#) on page 116.

Remote command:

CALCulate<n>:TABLE:<GroupName>:<ParamName>, see [Chapter 9.12.8, "Configuring the statistics and parameter tables"](#), on page 208


- [Limit settings for table displays](#)..... 97

**6.1.6.1 Limit settings for table displays**

**Access:** "Overview" > "Result Configuration" > "Table Config" > "Limits"

Measurement results can be checked against defined limits and the results of the limit check can then be indicated in the Result Table.

For details on limits see "Pulse Results" on page 37.

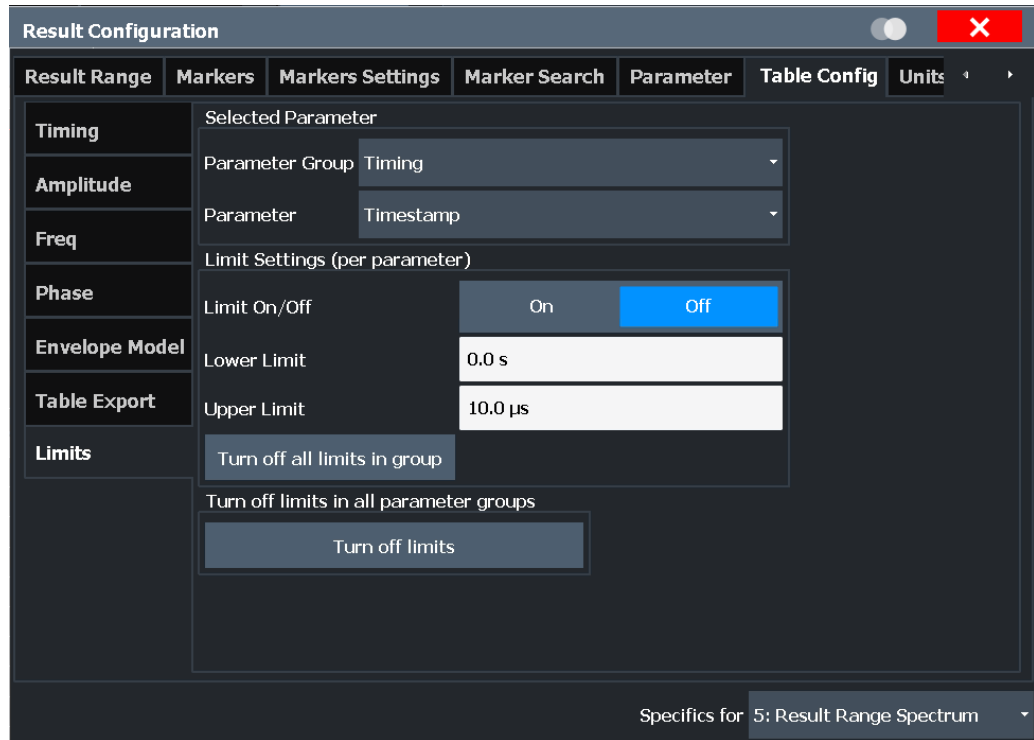

The settings are window-specific and only available for result tables.



Optionally, limit lines can be displayed in the [Parameter Distribution](#) and [Parameter Trend](#) diagrams. You can drag these lines to a new position in the window. The new position is maintained, the limit check is repeated, and the results of the limit check in any active table displays are adapted.

<a href="#">Parameter Group</a> .....	98
<a href="#">Parameter</a> .....	98
<a href="#">Activating a limit check for a parameter</a> .....	99
<a href="#">Defining lower and upper limits for a parameter</a> .....	99
<a href="#">Deactivating a limit check for an entire parameter group</a> .....	99
<a href="#">Deactivating all limit checks for all parameter groups</a> .....	99

**Parameter Group**

Defines the group of parameters from which one can be selected to define limits. For a description of the parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.

**Parameter**

Defines the parameter for which the limits are to be defined. The available parameters depend on the selected [Parameter Group](#).

**Activating a limit check for a parameter**

To activate a limit check for the selected parameter, set "Limit On/Off" to "ON".

Remote command:

`CALCulate<n>:TABLE:<ParameterGroup>:<Parameter>:LIMit:STATe`

on page 227

**Defining lower and upper limits for a parameter**

The "Lower Limit" and "Upper Limit" define the valid value range for the limit check for the selected parameter.

Remote command:

`CALCulate<n>:TABLE:<ParameterGroup>:<Parameter>:LIMit` on page 229

**Deactivating a limit check for an entire parameter group**

To deactivate all limits for an entire parameter group at once, select "Turn off all limits in group". This function is identical to setting "Limit On/Off" to "OFF" for each parameter in the group.

Remote command:

`CALCulate<n>:TABLE:<ParameterGroup>:ALL:LIMit:STATe` on page 228

**Deactivating all limit checks for all parameter groups**

To deactivate all limits for all parameter groups at once, select "Turn off limits". This function is identical to setting "Limit On/Off" to "OFF" for each parameter in each group.


Remote command:

`CALCulate<n>:TABLE:ALL:LIMit:STATe` on page 229

## 6.1.7 Y-Scaling

**Access:** "Overview" > "Result Configuration" > "Y Scaling"

The scaling for the vertical axis is highly configurable, using either absolute or relative values.

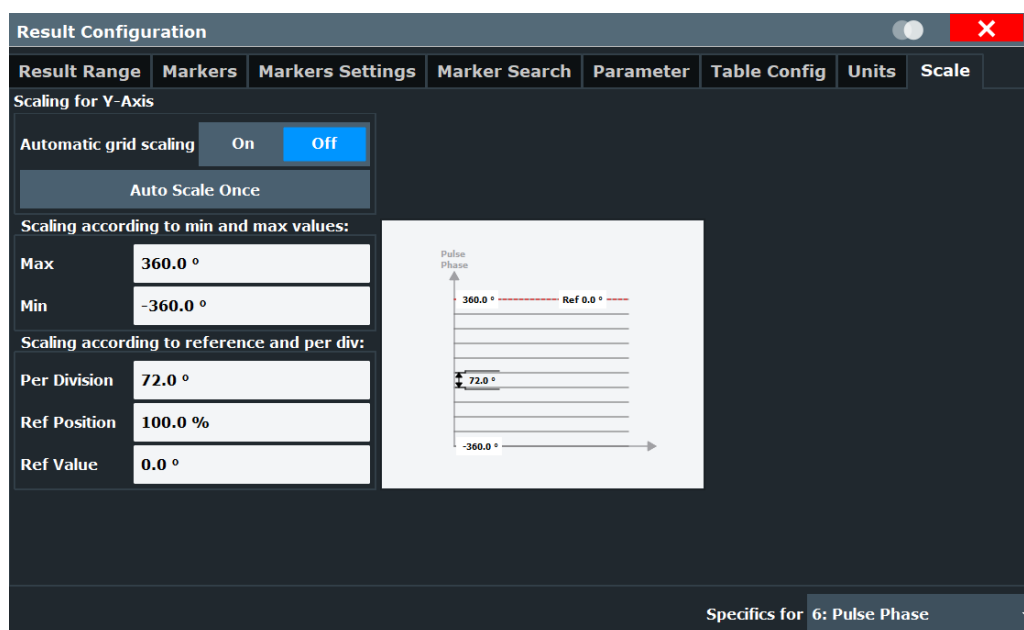

Automatic Grid Scaling.....	100
Auto Scale Once.....	100
Absolute Scaling (Min/Max Values).....	101
Relative Scaling (Reference/ per Division).....	101
L Per Division.....	101
L Ref Position.....	101
L Ref Value.....	101

### Automatic Grid Scaling

The y-axis is scaled automatically according to the current measurement settings and results (continuously).

**Note:** If a limit is defined for a parameter that is displayed in a [Parameter Trend](#) diagram (see "[Activating a limit check for a parameter](#)" on page 99), autoscaling is not available for the axis this parameter is displayed on.

**Note: Tip:** To update the scaling automatically *once* when this setting for continuous scaling is off, use the "[Auto Scale Once](#)" on page 100 button or the softkey in the [AUTO SET] menu.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<n>]:TRACe<t>:Y[:SCALE]:AUTO`  
on page 232

### Auto Scale Once

Automatically determines the optimal range and reference level position to be displayed for the current measurement settings.

The display is only set once; it is not adapted further if the measurement settings are changed again.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<n>]:TRACe<t>:Y[:SCALE]:AUTO`  
on page 232

**Absolute Scaling (Min/Max Values)**

Define the scaling using absolute minimum and maximum values.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MAXimum` on page 232

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MINimum` on page 232

**Relative Scaling (Reference/ per Division)**

Define the scaling relative to a reference value, with a specified value range per division.

**Per Division ← Relative Scaling (Reference/ per Division)**

Defines the value range to be displayed per division of the diagram (1/10 of total range).

**Note:** The value defined per division refers to the default display of 10 divisions on the y-axis. If fewer divisions are displayed (e.g. because the window is reduced in height), the range per division is increased in order to display the same result range in the smaller window. In this case, the per division value does not correspond to the actual display.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision` on page 233

**Ref Position ← Relative Scaling (Reference/ per Division)**

Defines the position of the reference value in percent of the total y-axis range.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 233

**Ref Value ← Relative Scaling (Reference/ per Division)**

Defines the reference value to be displayed at the specified reference position.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue` on page 234

**6.1.8 Units**

**Access:** "Overview" > "Result Configuration" > "Units"

The unit for phase display is configurable.

<a href="#">Phase Unit</a> .....	101
<a href="#">Phase Normalization</a> .....	102
<a href="#">Frequency Scaling</a> .....	102

**Phase Unit**

Defines the unit in which phases are displayed (degree or rad).

Remote command:

`UNIT:ANGLE` on page 234

**Phase Normalization**

Normalizes "pulse phase" traces to a specific phase value. For details see ["Normalization of pulse phase traces"](#) on page 54.

This function is only available for "Pulse Phase" and "Pulse Phase (Wrapped)" result displays.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:NORMAlize:PHASe` on page 246

**Frequency Scaling**

Switches between relative (default) and absolute frequency values. This setting applies to "Pulse Frequency", Result Range Spectrum, "Parameter Distribution" and "Parameter Trend" result displays.

Remote command:

`CALCulate<n>:UNIT:FREQuency` on page 231

## 6.2 Display configuration



**Access:** [MEAS]

**Or:** [MEAS CONFIG] > "Display Config"

The captured signal can be displayed using various evaluations. All evaluations available for the Pulse application are displayed in the evaluation bar in SmartGrid mode.

Up to six evaluation methods can be displayed simultaneously in separate windows. The Pulse evaluation methods are described in [Chapter 3, "Measurements and result displays"](#), on page 15.



For details on working with the SmartGrid see the R&S FSMR3 Getting Started manual.

## 6.3 Markers

**Access:** "Overview" > "Result Configuration" > "Markers"


Markers help you analyze your measurement results by determining particular values in the diagram. Thus you can extract numeric values from a graphical display.

- [Individual marker settings](#)..... 102
- [General marker settings](#)..... 105
- [Marker search settings](#)..... 107
- [Marker positioning functions](#)..... 108

### 6.3.1 Individual marker settings

**Access:** "Overview" > "Result Configuration" > "Markers"

Up to 17 markers or delta markers can be activated for each window simultaneously.

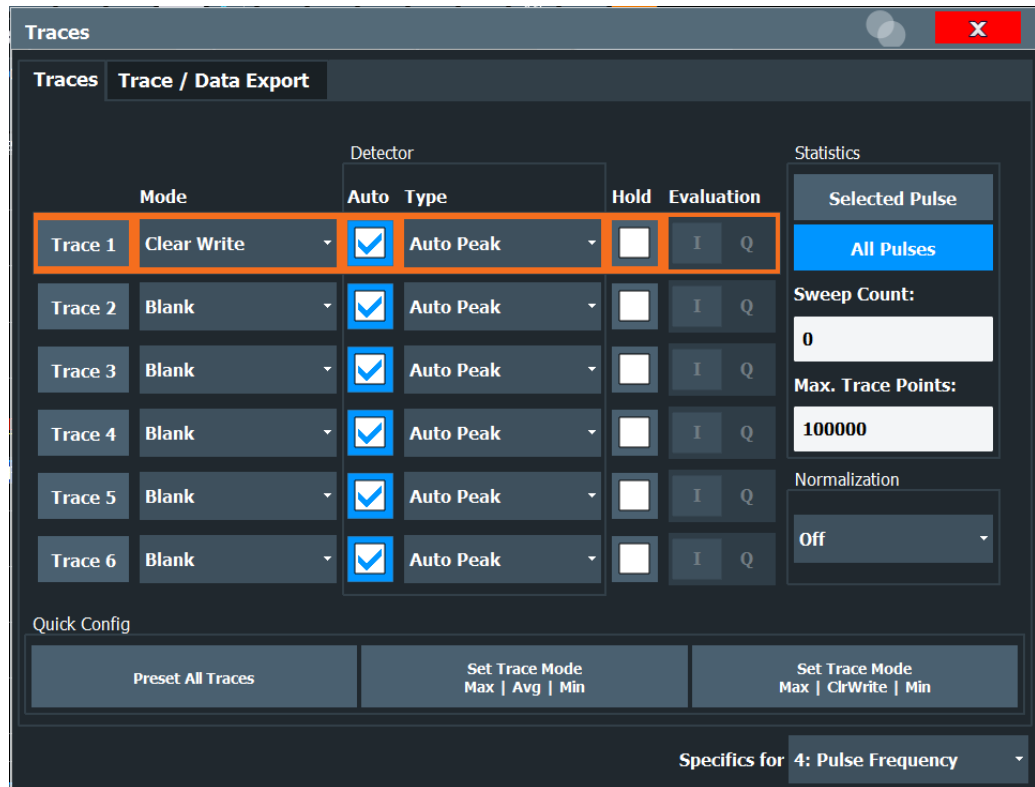

Selected Marker.....	103
Marker State.....	103
X-value.....	103
Marker Type.....	104
Reference Marker.....	104
Linking to Another Marker.....	104
Assigning the Marker to a Trace.....	105
Select Marker.....	105
All Markers Off.....	105

### Selected Marker

Marker name. The marker which is currently selected for editing is highlighted orange.

Remote command:

Marker selected via suffix <m> in remote commands.

### Marker State

Activates or deactivates the marker in the diagram.

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 249

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 252

### X-value

Defines the position of the marker on the x-axis.

**Note:** Setting markers in "Parameter Trend" Displays. In "Parameter Trend" displays, especially when the x-axis unit is not pulse number, positioning a marker by defining its x-axis value can be very difficult or unambiguous. Thus, markers can be positioned by defining the corresponding pulse number in the "Marker" edit field for all parameter trend displays, regardless of the displayed x-axis parameter. The "Marker" edit field is displayed when you select one of the "Marker" softkeys.

Remote command:

[CALCulate<n>:DELTaMarker<m>:X](#) on page 253

[CALCulate<n>:MARKer<m>:X](#) on page 250

### Marker Type

Toggles the marker type.

The type for marker 1 is always "Normal", the type for delta marker 1 is always "Delta". These types cannot be changed.

**Note:** If normal marker 1 is the active marker, switching the "Mkr Type" activates an additional delta marker 1. For any other marker, switching the marker type does not activate an additional marker, it only switches the type of the selected marker.

"Normal"            A normal marker indicates the absolute value at the defined position in the diagram.

"Delta"            A delta marker defines the value of the marker relative to the specified reference marker (marker 1 by default).

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 249

[CALCulate<n>:DELTaMarker<m>\[:STATe\]](#) on page 252

### Reference Marker

Defines a marker as the reference marker which is used to determine relative analysis results (delta marker values).

Remote command:

[CALCulate<n>:DELTaMarker<m>:MREference](#) on page 252

### Linking to Another Marker

Links the current marker to the marker selected from the list of active markers. If the x-axis value of the initial marker is changed, the linked marker follows to the same position on the x-axis. Linking is off by default.

Using this function you can set two markers on different traces to measure the difference (e.g. between a max hold trace and a min hold trace or between a measurement and a reference trace).

Remote command:

[CALCulate<n>:MARKer<ms>:LINK:TO:MARKer<md>](#) on page 249

[CALCulate<n>:DELTaMarker<ms>:LINK:TO:MARKer<md>](#) on page 251

[CALCulate<n>:DELTaMarker<m>:LINK](#) on page 251



### Assigning the Marker to a Trace

The "Trace" setting assigns the selected marker to an active trace. The trace determines which value the marker shows at the marker position. If the marker was previously assigned to a different trace, the marker remains on the previous frequency or time, but indicates the value of the new trace.

If a trace is turned off, the assigned markers and marker functions are also deactivated.

Remote command:

[CALCulate<n>:MARKer<m>:TRACe](#) on page 250

### Select Marker

The "Select Marker" function opens a dialog box to select and activate or deactivate one or more markers quickly.



Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 249

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 252

### All Markers Off


Deactivates all markers in one step.

Remote command:

[CALCulate<n>:MARKer<m>:AOFF](#) on page 249

## 6.3.2 General marker settings

**Access:** "Overview" > "Result Configuration" > "Marker Settings"

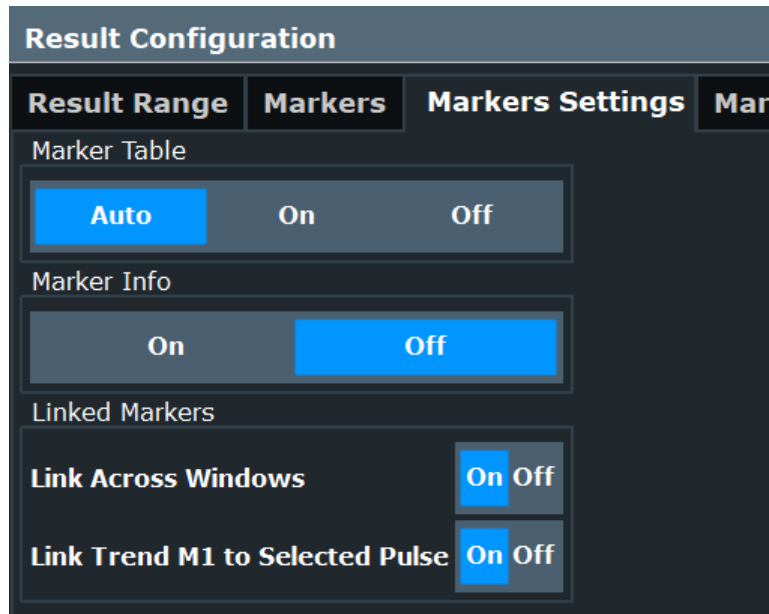

### Marker Table Display

Defines how the marker information is displayed.

- "On" Displays the marker information in a table in a separate area beneath the diagram.
- "Off" No separate marker table is displayed. If [Marker Info](#) is active, the marker information is displayed within the diagram area.
- "Auto" (Default) If more than two markers are active, the marker table is displayed automatically. If [Marker Info](#) is active, the marker information for up to two markers is displayed in the diagram area.

Remote command:

[DISPlay\[:WINDow<n>\]:MTABLE](#) on page 255

### Marker Info

Turns the marker information displayed in the diagram on and off.

1AP Clrw	
M1[1]	81.13 dB $\mu$ V 177.610 MHz
D2[1]	-22.18 dB -28.980 MHz

Remote command:

[DISPlay\[:WINDow<n>\]:MINFo\[:STATe\]](#) on page 255

### Linked Markers Across Windows

If enabled, the markers in all diagrams with the same x-axis are linked, i.e. when you move a marker in one window, the markers in all other windows are moved to the same x-value.

In particular, markers in all pulse measurement displays (such as "Pulse Magnitude", "Pulse Phase" etc.) are linked, if enabled. Similarly, markers in all "Parameter Trend" displays can be linked.

Remote command:

`CALCulate<n>:MARKer<m>:LINK` on page 254

### Link Trend M1 to Selected Pulse

If enabled, marker M1 in "Parameter Trend" displays is linked to the pulse selection. Thus, if you move the marker M1 to a different pulse, the [Pulse selection](#) is set to the same pulse, and vice versa.


Note that this function is only available if [Linked Markers Across Windows](#) is also enabled.

Remote command:

`CALCulate<n>:MARKer<m>:LINK:TREND` on page 254

## 6.3.3 Marker search settings

Markers are commonly used to determine peak values, i.e. maximum or minimum values, in the measured signal. Configuration settings allow you to influence the peak search results.

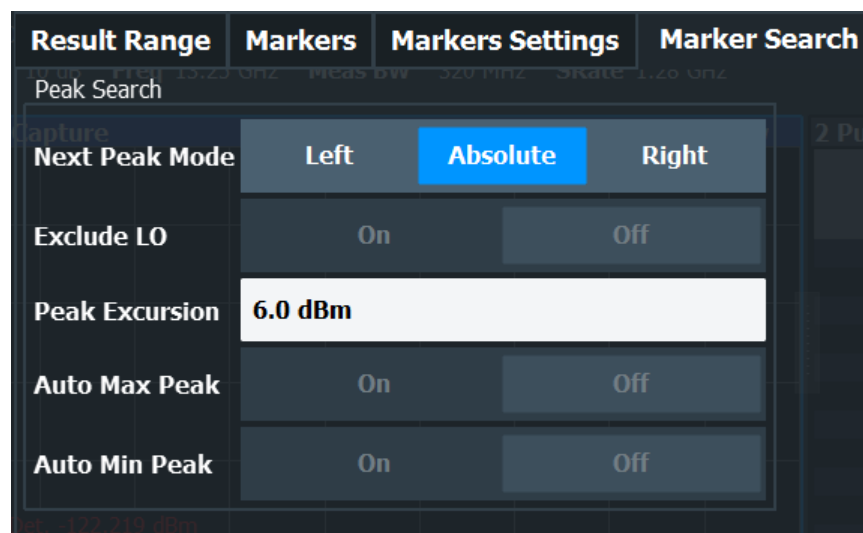

[Search Mode for Next Peak](#)..... 107

[Peak Excursion](#)..... 108

### Search Mode for Next Peak

Selects the search mode for the next peak search.

"Left"	Determines the next maximum/minimum to the left of the current peak.
"Absolute"	Determines the next maximum/minimum to either side of the current peak.
"Right"	Determines the next maximum/minimum to the right of the current peak.

Remote command:

[Chapter 9.15.3, "Positioning the marker"](#), on page 256

### Peak Excursion

Defines the minimum level value by which a signal must rise or fall so that it is identified as a maximum or a minimum by the search functions.

Remote command:

[CALCulate<n>:MARKer<m>:PEXCursion](#) on page 254

## 6.3.4 Marker positioning functions

The following functions set the currently selected marker to the result of a peak search or set other characteristic values to the current marker value.

<a href="#">Select Marker</a> .....	108
<a href="#">Peak Search</a> .....	109
<a href="#">Search Minimum</a> .....	109

### Select Marker

The "Select Marker" function opens a dialog box to select and activate or deactivate one or more markers quickly.



Remote command:

[CALCulate<n>:MARKer<m>\[:STATE\]](#) on page 249

[CALCulate<n>:DELTAmarker<m>\[:STATE\]](#) on page 252

**Peak Search**

Sets the selected marker/delta marker to the maximum of the trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 256

[CALCulate<n>:DELTAmarker<m>:MAXimum\[:PEAK\]](#) on page 258

**Search Minimum**

Sets the selected marker/delta marker to the minimum of the trace. If no marker is active, marker 1 is activated.

Remote command:

[CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) on page 257

[CALCulate<n>:DELTAmarker<m>:MINimum\[:PEAK\]](#) on page 259

## 6.4 Trace configuration

Traces in graphical result displays based on the defined result range (see [Chapter 6.1.2, "Result range"](#), on page 88) can be configured, for example to perform statistical evaluations over a defined number of measurements, pulses, or samples.


For details on trace evaluation see [Chapter 4.5, "Trace evaluation"](#), on page 50.



Trace data can also be exported to an ASCII file for further analysis. For details see [Chapter 6.5, "Trace / data export configuration"](#), on page 113.

You can configure up to 6 individual traces for the following result displays (see [Chapter 6.1.2, "Result range"](#), on page 88):

- ["Pulse Frequency"](#) on page 34
- ["Pulse Magnitude"](#) on page 35
- ["Pulse Phase"](#) on page 36
- ["Pulse Phase \(Wrapped\)"](#) on page 36

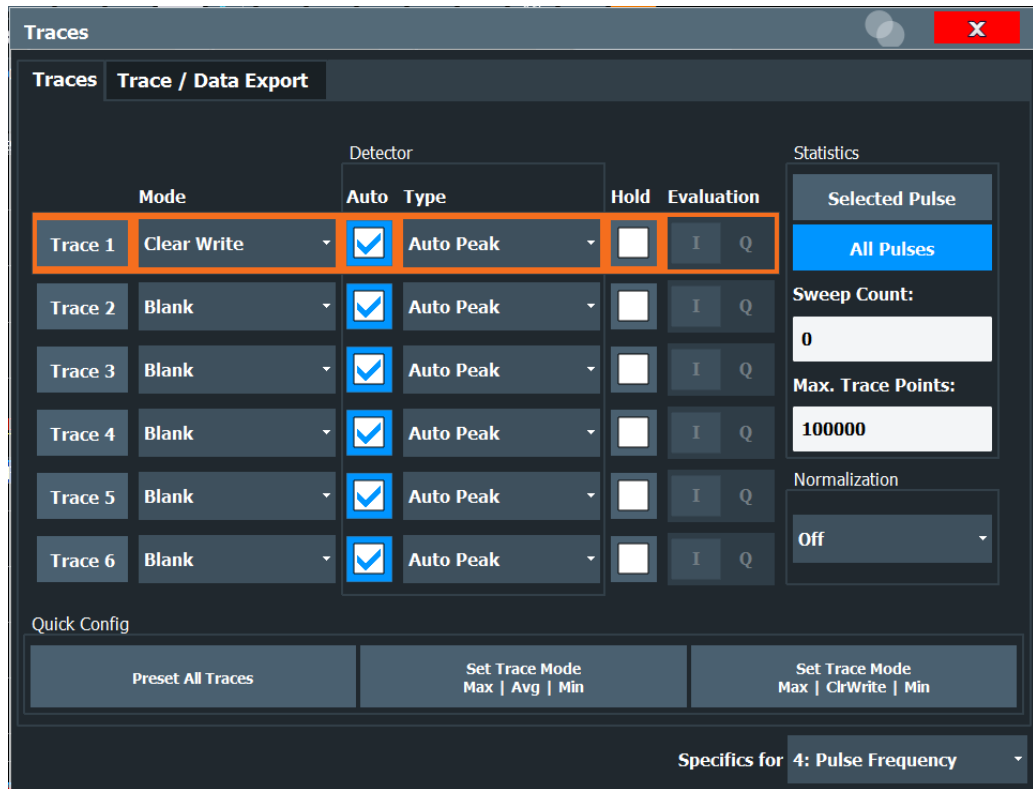

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6..... 110

Trace Mode..... 110

Detector..... 111

Hold..... 111

Evaluation..... 111

Statistical Evaluation..... 112

- └ Selected Pulse vs All Pulses..... 112
- └ Sweep/Average Count..... 112
- └ Maximum number of trace points..... 112

Normalization..... 112

Predefined Trace Settings - Quick Config..... 113

Trace 1/ Trace 2/ Trace 3/ Trace 4 (Softkeys)..... 113

**Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6**

Selects the corresponding trace for configuration. The currently selected trace is highlighted orange.

For the Magnitude Capture result display, only one trace is available, which cannot be configured.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe]` on page 246

Selected via numeric suffix of `TRACe<t>` commands

**Trace Mode**

Defines the update mode for subsequent traces.

"Clear/ Write"	Overwrite mode (default): the trace is overwritten by each measurement.
"Max Hold"	The maximum value is determined over several measurements and displayed. The R&S FSMR3 saves each trace point in the trace memory only if the new value is greater than the previous one.
"Min Hold"	The minimum value is determined from several measurements and displayed. The R&S FSMR3 saves each trace point in the trace memory only if the new value is lower than the previous one.
"Average"	The average is formed over several measurements.
"View"	The current contents of the trace memory are frozen and displayed.
"Blank"	Removes the selected trace from the display.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE` on page 244

### Detector

Defines the trace detector to be used for trace analysis.

"Auto"	(default:) Selects the optimum detector for the selected trace and filter mode
"Type"	Defines the selected detector type.

Remote command:

`[SENSe:] [WINDow<n>:] DETector<t>[:FUNction]` on page 247

`[SENSe:] [WINDow<n>:] DETector<t>[:FUNction]:AUTO` on page 247

### Hold

If activated, traces in "Min Hold", "Max Hold" and "Average" mode are not reset after specific parameter changes have been made.

Normally, the measurement is started again after parameter changes, before the measurement results are analyzed (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

The default setting is off.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE:HCONTinuous` on page 245

### Evaluation

Defines which signal component (I/Q) is evaluated in which trace for the [Pulse I and Q](#) result display. This setting is not available for any other result displays. By default, the I component is displayed by trace 1, while the Q component is displayed by trace 4.

Remote command:

`CALCulate<n>:TRACe<t>[:VALue]` on page 326

**Statistical Evaluation**

If the trace modes "Average", "Max Hold" or "Min Hold" are set, you can define how many pulses, measurements and measurement samples are included in the statistical evaluation.

For details see [Chapter 4.5.1, "Trace statistics"](#), on page 51.

**Selected Pulse vs All Pulses ← Statistical Evaluation**

Defines which pulses are included in the statistical evaluation.

"Selected pulse"	Only the selected pulse from each measurement is included in the statistical evaluation.
"All Pulses"	All measured pulses from each measurement are included in the statistical evaluation.

Remote command:

`[SENSe:]STATistic<n>:TYPE` on page 248

**Sweep/Average Count ← Statistical Evaluation**

Defines the number of measurements to be performed in the single sweep mode.

**Maximum number of trace points ← Statistical Evaluation**

If the number of samples within the result range (see [Chapter 6.1.2, "Result range"](#), on page 88) is larger than this value, the trace data is reduced to the defined maximum number of trace points using the selected detector.

Restricting this value can improve performance during statistical evaluation of large result range lengths.

Remote command:

`[SENSe:]SWEep:POINTs` on page 248

**Normalization**

Enables or disables normalization of the trace in reference to the measured pulse or a reference pulse. For details see [Chapter 4.5.2, "Normalizing traces"](#), on page 51.

"Off"	Traces are not normalized
"Measured Pulse"	The value in the measurement point (that is: the value in the "Pulse Results" table) for each pulse in phase, amplitude or frequency is subtracted from the respective trace to normalize each trace to 0. An additional phase offset may be defined, see <a href="#">"Phase Normalization"</a> on page 102.
"Reference Pulse"	The value in the measurement point (that is: the value in the "Pulse Results" table) for the <i>Reference Pulse</i> is subtracted from the respective trace to normalize the traces. The reference pulse is defined in the "Measurement Point" settings, see <a href="#">"Reference for Pulse-Pulse Measurements"</a> on page 83. An additional phase offset may be defined, see <a href="#">"Phase Normalization"</a> on page 102.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:NORMAlize:MODE` on page 245



### Predefined Trace Settings - Quick Config

Commonly required trace settings have been predefined and can be applied very quickly by selecting the appropriate button.

Function	Trace Settings	
Preset All Traces	Trace 1:	Clear Write
		Blank
Set Trace Mode Max   Avg   Min	Trace 1:	Max Hold
	Trace 2:	Average
	Trace 3:	Min Hold
		Blank
Set Trace Mode Max   ClrWrite   Min	Trace 1:	Max Hold
	Trace 2:	Clear Write
	Trace 3:	Min Hold
		Blank

### Trace 1/ Trace 2/ Trace 3/ Trace 4 (Softkeys)

Displays the "Traces" settings and focuses the "Mode" list for the selected trace.

Remote command:

`DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe]` on page 246

## 6.5 Trace / data export configuration



**Access:** "Save" > "Export" > "Export Configuration"


**Or:** [TRACE] > "Trace Config" > "Trace / Data Export"

The R&S FSMR3 provides various evaluation methods for the results of the performed measurements. However, if you want to evaluate the data with other, external applications, you can export the measurement data to an ASCII file.



The standard data management functions (e.g. saving or loading instrument settings) that are available for all R&S FSMR3 applications are not described here.

See the R&S FSMR3000 base unit user manual for a description of the standard functions.

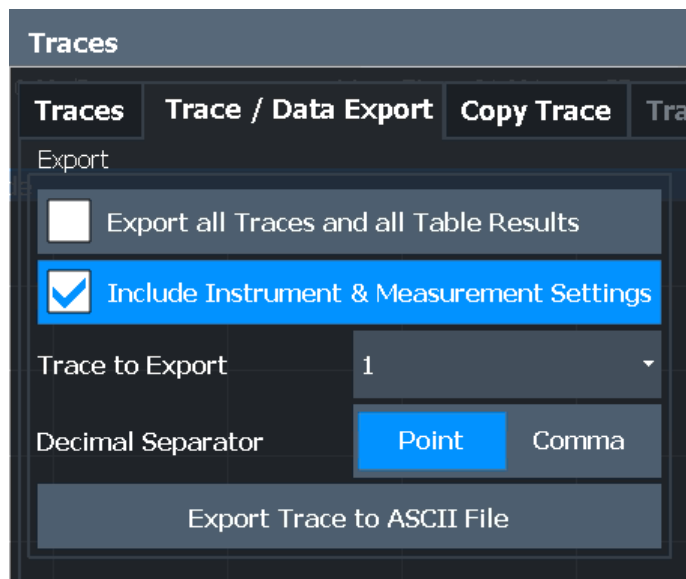

<a href="#">Export all Traces and all Table Results</a> .....	114
<a href="#">Include Instrument &amp; Measurement Settings</a> .....	114
<a href="#">Trace to Export</a> .....	114
<a href="#">Decimal Separator</a> .....	114
<a href="#">Export Trace to ASCII File</a> .....	115

### Export all Traces and all Table Results

Selects all displayed traces and result tables (e.g. "Result Summary", marker table etc.) in the current application for export to an ASCII file.

Alternatively, you can select one specific trace only for export (see [Trace to Export](#)).

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Remote command:

`FORMat:DEXPort:TRACes` on page 323

### Include Instrument & Measurement Settings

Includes additional instrument and measurement settings in the header of the export file for result data.

Remote command:

`FORMat:DEXPort:HEADer` on page 322

### Trace to Export

Defines an individual trace to be exported to a file.

This setting is not available if [Export all Traces and all Table Results](#) is selected.

### Decimal Separator

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

`FORMat:DEXPort:DSEParator` on page 322

**Export Trace to ASCII File**

Opens a file selection dialog box and saves the selected trace in ASCII format (.dat) to the specified file and directory.

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Remote command:

MMEMory:STORe<n>:TRACe on page 263

## 6.6 Export functions



**Access:** "Save" > "Export"



The standard data management functions (e.g. saving or loading instrument settings) that are available for all R&S FSMR3 applications are not described here.

See the R&S FSMR3 User Manual for a description of the standard functions.

Export table to ASCII File.....	115
Table Export Configuration.....	116
L Columns to Export.....	116
L Export Limits.....	116
L Decimal Separator.....	116
L Export table to ASCII File.....	116
Absolute Time Stamp.....	117
Export Trace to ASCII File.....	117
Trace Export Configuration.....	117

**Export table to ASCII File**

Opens a file selection dialog box and saves the selected result table in ASCII format (.DAT) to the specified file and directory.

For details on the file format, see [Chapter A, "Reference: ASCII file export format"](#), on page 335.

**Note:** To store the measurement results for **all** traces and tables in **all** windows, use the [Export Trace to ASCII File](#) command in the "Save/Recall" > "Export" menu. (See also [Chapter 6.5, "Trace / data export configuration"](#), on page 113.)

**Note:** Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSMR3000 base unit user manual.

Remote command:

MMEMory:STORe<n>:TABLe on page 323

**Table Export Configuration**

**Access:** "Overview" > "Result Config" > "Table Config" tab > "Table Export" tab

**Or:** "Save/Recall" > "Export"

The settings are window-specific and only available for result tables.

Table Config			
Timing	Columns to Export	Visible	All
Amplitude	Export Limits	Off	On
Freq	Decimal Separator	Point	Comma
Phase	Abs Time Stamp	Off	On
Envelope Model	Export Table to ASCII File		
Table Export			
Limits			

**Columns to Export ← Table Export Configuration**

Defines which of the result table columns are to be included in the export file.

"Visible" Only the currently visible columns in the result display are exported.

"All" All columns, including currently hidden ones, for the result display are exported.

Remote command:

[MMEMory:STORe<n>:TABLE](#) on page 323

**Export Limits ← Table Export Configuration**

If activated, any limits defined for the table will be included in the export file.

Remote command:

[MMEMory:STORe<n>:TABLE:LIMit](#) on page 324

**Decimal Separator ← Table Export Configuration**

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 322

**Export table to ASCII File ← Table Export Configuration**

Opens a file selection dialog box and saves the selected result table in ASCII format (.DAT) to the specified file and directory.

For details on the file format, see [Chapter A, "Reference: ASCII file export format"](#), on page 335.

**Note:** To store the measurement results for **all** traces and tables in **all** windows, use the [Export Trace to ASCII File](#) command in the "Save/Recall" > "Export" menu. (See also [Chapter 6.5, "Trace / data export configuration"](#), on page 113.)

**Note:** Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSMR3000 base unit user manual.

Remote command:

[MMEMory:STORe<n>:TABLe](#) on page 323

### Absolute Time Stamp

If the function is enabled, it prints the absolute time stamp for the pulse in the first position before the rest of the ASCII table export.

In addition to the current capture part, absolute time stamp also works for the cumulative part of the table.

Remote command:

[FORMat:DEXPort:TSTamp](#) on page 323

### Export Trace to ASCII File

Opens a file selection dialog box and saves the selected trace in ASCII format (.dat) to the specified file and directory.

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Remote command:

[MMEMory:STORe<n>:TRACe](#) on page 263

### Trace Export Configuration

Opens the "Traces" dialog box to configure the trace and data export settings. See [Chapter 6.5, "Trace / data export configuration"](#), on page 113.

## 7 Export functions



**Access:** "Save" > "Export"



The standard data management functions (e.g. saving or loading instrument settings) that are available for all R&S FSMR3 applications are not described here.

See the R&S FSMR3 User Manual for a description of the standard functions.

Export table to ASCII File.....	118
Table Export Configuration.....	118
L Columns to Export.....	119
L Export Limits.....	119
L Decimal Separator.....	119
L Export table to ASCII File.....	119
Absolute Time Stamp.....	120
Export Trace to ASCII File.....	120
Trace Export Configuration.....	120

### Export table to ASCII File

Opens a file selection dialog box and saves the selected result table in ASCII format (.DAT) to the specified file and directory.

For details on the file format, see [Chapter A, "Reference: ASCII file export format"](#), on page 335.

**Note:** To store the measurement results for **all** traces and tables in **all** windows, use the [Export Trace to ASCII File](#) command in the "Save/Recall" > "Export" menu. (See also [Chapter 6.5, "Trace / data export configuration"](#), on page 113.)

**Note:** Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSMR3000 base unit user manual.

Remote command:


[MMEMory:STORe<n>:TABLE](#) on page 323

### Table Export Configuration

**Access:** "Overview" > "Result Config" > "Table Config" tab > "Table Export" tab

**Or:** "Save/Recall" > "Export"

The settings are window-specific and only available for result tables.

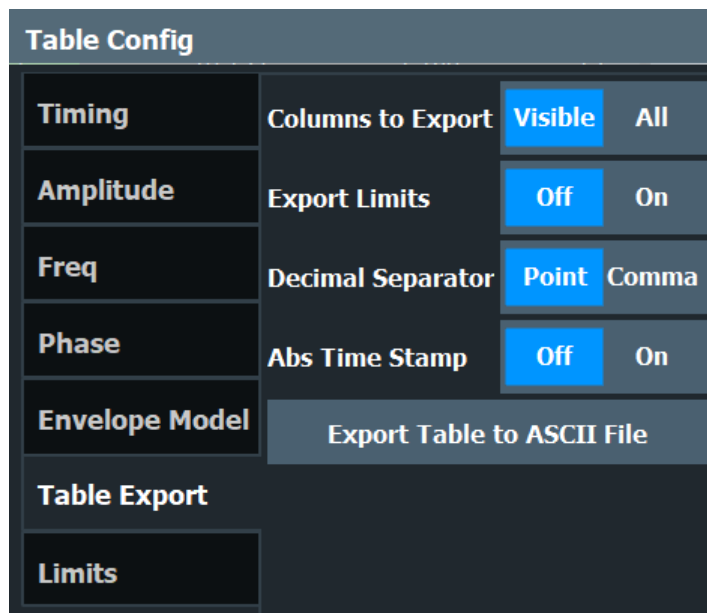

#### Columns to Export ← Table Export Configuration

Defines which of the result table columns are to be included in the export file.

"Visible" Only the currently visible columns in the result display are exported.

"All" All columns, including currently hidden ones, for the result display are exported.

Remote command:

[MMEMory:STORe<n>:TABLE](#) on page 323

#### Export Limits ← Table Export Configuration

If activated, any limits defined for the table will be included in the export file.

Remote command:

[MMEMory:STORe<n>:TABLE:LIMit](#) on page 324

#### Decimal Separator ← Table Export Configuration

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 322

#### Export table to ASCII File ← Table Export Configuration

Opens a file selection dialog box and saves the selected result table in ASCII format (.DAT) to the specified file and directory.

For details on the file format, see [Chapter A, "Reference: ASCII file export format"](#), on page 335.

**Note:** To store the measurement results for **all** traces and tables in **all** windows, use the [Export Trace to ASCII File](#) command in the "Save/Recall" > "Export" menu. (See also [Chapter 6.5, "Trace / data export configuration"](#), on page 113.)

**Note:** Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSMR3000 base unit user manual.

Remote command:

[MMEMory:STORe<n>:TABLe](#) on page 323

### **Absolute Time Stamp**

If the function is enabled, it prints the absolute time stamp for the pulse in the first position before the rest of the ASCII table export.

In addition to the current capture part, absolute time stamp also works for the cumulative part of the table.

Remote command:

[FORMat:DEXPort:TSTamp](#) on page 323

### **Export Trace to ASCII File**

Opens a file selection dialog box and saves the selected trace in ASCII format (.dat) to the specified file and directory.

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Remote command:

[MMEMory:STORe<n>:TRACe](#) on page 263

### **Trace Export Configuration**

Opens the "Traces" dialog box to configure the trace and data export settings. See [Chapter 6.5, "Trace / data export configuration"](#), on page 113.



## 8 How to perform measurements in the pulse application

The following step-by-step instructions demonstrate how to perform a Pulse measurement with the R&S FSMR3-K6 option.

- [How to perform a standard pulse measurement](#)..... 121
- [How to configure a limit check for a pulse measurement](#).....122
- [How to export table data](#)..... 123

### 8.1 How to perform a standard pulse measurement

#### To perform a standard pulse measurement

1. Press the [MODE] key on the front panel and select the "Pulse" application.
2. Select the "Overview" softkey to display the "Overview" for a Pulse measurement.
3. Select the "Signal Description" button and configure the expected pulse characteristics.
4. Select the "Input/Frontend" button to define the input signal's center frequency, amplitude and other basic settings.
5. Optionally, select the "Trigger" button and define a trigger for data acquisition, for example an external trigger to start capturing data only when a useful signal is transmitted.
6. Select the "Data Acquisition" button and define the bandwidth parameters for the input signal:
  - "Measurement Bandwidth": the amount of signal bandwidth to capture
  - "Measurement Time": how long the input signal is captured
7. Select the "Pulse Detection" button and define the criteria to detect the individual pulses within the input signal.
8. Select the "Measurement" button and define the general measurement settings concerning:
  - The measurement levels
  - The measurement point
  - The measurement range
9. Select the "Display" button and select the evaluation methods that are of interest to you.  
Arrange them on the display to suit your preferences.
10. Exit the SmartGrid mode and select the "Overview" softkey to display the "Overview" again.

11. Select the "Result Config" button in the "Overview" to configure which data is displayed in the individual result displays, and other settings for specific evaluation methods. These settings are window-specific, so select the window before you configure the settings.
  - Define the "Result Range", which determines the extent of measured data displayed in "pulse magnitude", frequency and phase vs time traces.
  - Configure specific settings for the selected evaluation methods.
  - Configure a limit check (see ["To configure a limit check for a pulse measurement"](#) on page 122).
  - Configure markers and delta markers to determine deviations and offsets within the results, e.g. when comparing errors or peaks.
  - Adapt the diagram scaling to the displayed data.
  - Optionally, configure the trace to display the average over a series of sweeps. If necessary, increase the "Sweep/Average Count" in the "Sweep Config" dialog box.
12. Stop the continuous sweep and start a new sweep with the new configuration (e.g. using the [RUN SINGLE] key).
13. Press the "Selected Pulse" softkey and select a specific pulse to be evaluated.

The result displays are updated to show the results for the selected pulse.

## 8.2 How to configure a limit check for a pulse measurement

### To configure a limit check for a pulse measurement

Measurement results can be checked against defined limits and the results of the limit check can then be indicated in the Result Table. This procedure assumes a standard pulse measurement has been defined (as described in ["To perform a standard pulse measurement"](#) on page 121) and a Result Table display is active.

1. Select the "Result Config" button in the "Overview".
2. If necessary, select the Result Table from the "Specifics for" list of windows.
3. Switch to the "Table Config" tab, then select the "Limits" tab.
4. Select the parameter for which you want to perform a limit check.

For details on available parameters and parameter groups, see [Chapter 3.1, "Pulse parameters"](#), on page 15.
5. Toggle the "Limit On/Off" setting to "On".
6. Define the lower or upper limit value, or both.

- Repeat [step 4](#) to [step 6](#) for each parameter you want to perform a limit check on.

The measured values and all newly measured values for the specified parameter are compared to the defined limit values.

If the measured value remains above the lower limit and below the upper limit, it is displayed in green in the Result Table.

If the measured value exceeds either limit value, it is displayed in red in the Result Table.



### Changing the limit values graphically

Limit lines can also be displayed in "Parameter Trend" or "Parameter Distribution" result displays ("Result Config" > "Parameter" tab > "Display Limit Lines").

You can drag these limit lines to a new position in the window. The new position is maintained, the limit check is repeated, and the results of the limit check in any active table displays are adapted.

### To deactivate a limit check

- Select the "Result Config" button in the "Overview".
- If necessary, select the Result Table from the "Specifics for" list of windows.
- Switch to the "Table Config" tab, then select the "Limits" tab.
- To deactivate the limit check for a single parameter, select the parameter and toggle the "Limit On/Off" setting to "Off".
  - To deactivate the limit check for an entire parameter group, select "Turn off all limits in group".
  - To deactivate the limit check for all parameters in all parameter groups, select "Turn off limits".


## 8.3 How to export table data

The measured result table data can be exported to an ASCII file. For each parameter, the measured values are output.

For details on the storage format, see [Chapter A, "Reference: ASCII file export format"](#), on page 335.

Table data can be exported either from the "Result Configuration" dialog box, or from the "Save/Recall" menu.

### To export from the "Save/Recall" menu

- Select an active result table whose data you want to export.
- Select the  "Save" icon in the toolbar.
- Select the "Export" softkey.
- If necessary, change the decimal separator used in the ASCII export file.

5. Select the "ASCII Table Export" softkey.
6. In the file selection dialog box, select the storage location and file name for the export file.
7. Select "Save" to close the dialog box and export the table data to the file.

**To export from the "Result configuration" dialog box**

1. Press the "Overview" softkey.
2. Select the "Result Config" button.
3. Select the window that contains the result table in the "Specifics for" selection box.
4. Select the "Table Config" tab.
5. Select the vertical "Table Export" tab.
6. Select whether you want to export all columns or only the currently visible columns of the table.
7. If necessary, change the decimal separator used in the ASCII export file.
8. Select the "Export Table to ASCII File" button.
9. In the file selection dialog box, select the storage location and file name for the export file.
10. Select "Save" to close the dialog box and export the table data to the file.

## 9 Remote commands for pulse measurements

The following commands are required to perform measurements in the Pulse application in a remote environment. The R&S FSMR3 must already be set up for remote operation in a network as described in the base unit manual.



Note that basic tasks that are also performed in the base unit in the same way are not described here. For a description of such tasks, see the R&S FSMR3 User Manual.

In particular, this includes:

- Managing Settings and Results, i.e. storing and loading settings and result data
- Basic instrument configuration, e.g. checking the system configuration, customizing the screen layout, or configuring networks and remote operation
- Using the common status registers (specific status registers for Pulse measurements are not used)

After a short introduction, the tasks specific to the Pulse application are described here:

• <a href="#">Introduction</a> .....	125
• <a href="#">Common suffixes</a> .....	130
• <a href="#">Activating pulse measurements</a> .....	131
• <a href="#">Signal description</a> .....	134
• <a href="#">Input/output settings</a> .....	137
• <a href="#">Frontend configuration</a> .....	141
• <a href="#">Triggering measurements</a> .....	146
• <a href="#">Data acquisition</a> .....	153
• <a href="#">Pulse detection</a> .....	156
• <a href="#">Configuring the pulse measurement</a> .....	159
• <a href="#">Configuring and performing sweeps</a> .....	165
• <a href="#">Configuring the results</a> .....	170
• <a href="#">Configuring the result display</a> .....	235
• <a href="#">Configuring standard traces</a> .....	243
• <a href="#">Working with markers</a> .....	248
• <a href="#">Retrieving results</a> .....	260
• <a href="#">Retrieving marker results</a> .....	325
• <a href="#">Deprecated commands</a> .....	326
• <a href="#">Programming example: pulse measurement</a> .....	327

### 9.1 Introduction

Commands are program messages that a controller (e.g. a PC) sends to the instrument or software. They operate its functions ('setting commands' or 'events') and request information ('query commands'). Some commands can only be used in one

way, others work in two ways (setting and query). If not indicated otherwise, the commands can be used for settings and queries.

The syntax of a SCPI command consists of a header and, usually, one or more parameters. To use a command as a query, you have to append a question mark after the last header element, even if the command contains a parameter.

A header contains one or more keywords, separated by a colon. Header and parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). If there is more than one parameter for a command, they are separated by a comma from one another.

Only the most important characteristics that you need to know when working with SCPI commands are described here. For a more complete description, refer to the user manual of the R&S FSMR3.



### Remote command examples

Note that some remote command examples mentioned in this general introduction are possibly not supported by this particular application.

## 9.1.1 Conventions used in descriptions

The following conventions are used in the remote command descriptions:

- **Command usage**

If not specified otherwise, commands can be used both for setting and for querying parameters.

If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.

- **Parameter usage**

If not specified otherwise, a parameter can be used to set a value and it is the result of a query.

Parameters required only for setting are indicated as **Setting parameters**.

Parameters required only to refine a query are indicated as **Query parameters**.

Parameters that are only returned as the result of a query are indicated as **Return values**.

- **Conformity**

Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S FSMR3 follow the SCPI syntax rules.

- **Asynchronous commands**

A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.

- **Reset values (\*RST)**

Default parameter values that are used directly after resetting the instrument (\*RST command) are indicated as **\*RST values**, if available.

- **Default unit**

The default unit is used for numeric values if no other unit is provided with the parameter.

- **Manual operation**

If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

### 9.1.2 Long and short form

The keywords have a long and a short form. You can use either the long or the short form, but no other abbreviations of the keywords.

The short form is emphasized in uppercase letters. Note however, that this emphasis only serves the purpose to distinguish the short from the long form in the manual. For the instrument, the case does not matter.

**Example:**

`SENSe:FREQuency:CENTer` is the same as `SENS:FREQ:CENT`.

### 9.1.3 Numeric suffixes

Some keywords have a numeric suffix if the command can be applied to multiple instances of an object. In that case, the suffix selects a particular instance (e.g. a measurement window).

Numeric suffixes are indicated by angular brackets (<n>) next to the keyword.

If you do not quote a suffix for keywords that support one, a 1 is assumed.

**Example:**

`DISPlay[:WINDow<1...4>]:ZOOM:STATe` enables the zoom in a particular measurement window, selected by the suffix at `WINDow`.

`DISPlay:WINDow4:ZOOM:STATe ON` refers to window 4.

### 9.1.4 Optional keywords

Some keywords are optional and are only part of the syntax because of SCPI compliance. You can include them in the header or not.



If an optional keyword has a numeric suffix and you need to use the suffix, you have to include the optional keyword. Otherwise, the suffix of the missing keyword is assumed to be the value 1.

Optional keywords are emphasized with square brackets.

**Example:**

Without a numeric suffix in the optional keyword:

```
[SENSe:]FREQuency:CENTer is the same as FREQuency:CENTer
```

With a numeric suffix in the optional keyword:

```
DISPlay[:WINDow<1...4>]:ZOOM:STATe
```

DISPlay:ZOOM:STATe ON enables the zoom in window 1 (no suffix).

DISPlay:WINDow4:ZOOM:STATe ON enables the zoom in window 4.

### 9.1.5 Alternative keywords

A vertical stroke indicates alternatives for a specific keyword. You can use both keywords to the same effect.

**Example:**

```
[SENSe:]BANDwidth|BWIDth[:RESolution]
```

In the short form without optional keywords, BAND 1MHZ would have the same effect as BWID 1MHZ.

### 9.1.6 SCPI parameters

Many commands feature one or more parameters.

If a command supports more than one parameter, they are separated by a comma.

**Example:**

```
LAYout:ADD:WINDow Spectrum,LEFT,MTABLE
```

Parameters can have different forms of values.

- [Numeric values](#)..... 128
- [Boolean](#)..... 129
- [Character data](#)..... 130
- [Character strings](#)..... 130
- [Block data](#)..... 130

#### 9.1.6.1 Numeric values

Numeric values can be entered in any form, i.e. with sign, decimal point or exponent. For physical quantities, you can also add the unit. If the unit is missing, the command uses the basic unit.

**Example:**

With unit: SENSe:FREQuency:CENTer 1GHZ

Without unit: SENSe:FREQuency:CENTer 1E9 would also set a frequency of 1 GHz.



Values exceeding the resolution of the instrument are rounded up or down.

If the number you have entered is not supported (e.g. for discrete steps), the command returns an error.

Instead of a number, you can also set numeric values with a text parameter in special cases.

- **MIN/MAX**  
Defines the minimum or maximum numeric value that is supported.
- **DEF**  
Defines the default value.
- **UP/DOWN**  
Increases or decreases the numeric value by one step. The step size depends on the setting. Sometimes, you can customize the step size with a corresponding command.

### Querying numeric values

When you query numeric values, the system returns a number. For physical quantities, it applies the basic unit (e.g. Hz for frequencies). The number of digits after the decimal point depends on the type of numeric value.

#### Example:

Setting: `SENSe:FREQuency:CENTer 1GHZ`

Query: `SENSe:FREQuency:CENTer?` would return `1E9`

Sometimes, numeric values are returned as text.

- **INF/NINF**  
Infinity or negative infinity. Represents the numeric values `9.9E37` or `-9.9E37`.
- **NAN**  
Not a number. Represents the numeric value `9.91E37`. NAN is returned if errors occur.

### 9.1.6.2 Boolean

Boolean parameters represent two states. The "on" state (logically true) is represented by "ON" or the numeric value 1. The "off" state (logically untrue) is represented by "OFF" or the numeric value 0.

#### Querying Boolean parameters

When you query Boolean parameters, the system returns either the value 1 ("ON") or the value 0 ("OFF").

#### Example:

Setting: `DISPlay:WINDow:ZOOM:STATe ON`

Query: `DISPlay:WINDow:ZOOM:STATe?` would return `1`

### 9.1.6.3 Character data

Character data follows the syntactic rules of keywords. You can enter text using a short or a long form. For more information, see [Chapter 9.1.2, "Long and short form"](#), on page 127.

#### Querying text parameters

When you query text parameters, the system returns its short form.

#### Example:

Setting: `SENSe:BANDwidth:RESolution:TYPE NORMal`

Query: `SENSe:BANDwidth:RESolution:TYPE?` would return `NORM`

### 9.1.6.4 Character strings

Strings are alphanumeric characters. They have to be in straight quotation marks. You can use a single quotation mark ( ' ) or a double quotation mark ( " ).

#### Example:

`INSTRument:DELeTe 'Spectrum'`

### 9.1.6.5 Block data

Block data is a format which is suitable for the transmission of large amounts of data.

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. The data bytes follow. During the transmission of these data bytes, all end or other control signs are ignored until all bytes are transmitted. #0 specifies a data block of indefinite length. The use of the indefinite format requires an `NL^END` message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

## 9.2 Common suffixes

In the R&S FSMR3000 Pulse application, the following common suffixes are used in remote commands:

**Table 9-1: Common suffixes used in remote commands in the R&S FSMR3000 Pulse application**

Suffix	Value range	Description
<m>	1 to 4	Marker
<n>	1 to 6	Window (in the currently selected channel)

Suffix	Value range	Description
<t>	1	Trace
<li>	1 to 8	Limit line

## 9.3 Activating pulse measurements

Pulse measurements require a special application on the R&S FSMR3. The measurement is started immediately with the default settings.

<a href="#">INSTrument:CREate:DUPLicate</a> .....	131
<a href="#">INSTrument:CREate[:NEW]</a> .....	131
<a href="#">INSTrument:CREate:REPLace</a> .....	132
<a href="#">INSTrument:DELeTe</a> .....	132
<a href="#">INSTrument:LIST?</a> .....	132
<a href="#">INSTrument:REName</a> .....	133
<a href="#">INSTrument[:SELeCt]</a> .....	134
<a href="#">SYSTem:PRESet:CHANnel[:EXEC]</a> .....	134

---

### INSTrument:CREate:DUPLicate

This command duplicates the currently selected channel, i.e. creates a new channel of the same type and with the identical measurement settings. The name of the new channel is the same as the copied channel, extended by a consecutive number (e.g. "IQAnalyzer" -> "IQAnalyzer 2").

The channel to be duplicated must be selected first using the `INST:SEL` command.

**Example:**

```
INST:SEL 'Measuring Receiver'
```

```
INST:CRE:DUPL
```

Duplicates the channel named 'Measuring Receiver' and creates a new channel named 'Measuring Receiver 2'.

**Usage:** Event

---

### INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>

This command adds a measurement channel. You can configure up to 10 measurement channels at the same time (depending on available memory).

**Parameters:**

<ChannelType> Channel type of the new channel.  
For a list of available channel types, see [INSTrument:LIST?](#) on page 132.

<ChannelName> String containing the name of the channel.  
Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.

**Example:**

```
INST:CRE SAN, 'Spectrum 2'
```

Adds a spectrum display named "Spectrum 2".

---

**INSTrument:CREate:REPLace** <ChannelName1>,<ChannelType>,<ChannelName2>

This command replaces a channel with another one.

**Setting parameters:**

<ChannelName1> String containing the name of the channel you want to replace.

<ChannelType> Channel type of the new channel.  
For a list of available channel types, see [INSTrument:LIST?](#) on page 132.

<ChannelName2> String containing the name of the new channel.

**Note:** If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see [INSTrument:LIST?](#) on page 132). Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "\*", "?".

**Example:**

```
INST:CRE:REPL 'Measuring Receiver
2',MREC,'Measuring Receiver 3'
```

Replaces the channel named "Measuring Receiver 2" by a new channel of type "Measuring Receiver" named "Measuring Receiver 3".

**Usage:** Setting only

---

**INSTrument:DELeTe** <ChannelName>

This command deletes a channel.

If you delete the last channel, the default Measuring Receiver channel is activated.

**Setting parameters:**

<ChannelName> String containing the name of the channel you want to delete. A channel must exist to delete it.

**Example:**

```
INST:DEL 'Measuring Receiver 2'
```

Deletes the channel with the name 'Measuring Receiver 2'.

**Usage:** Setting only

---

**INSTrument:LIST?**

This command queries all active channels. The query is useful to obtain the names of the existing channels, which are required to replace or delete the channels.

**Return values:**

<ChannelType>,  
<ChannelName> For each channel, the command returns the channel type and channel name (see tables below).

Tip: to change the channel name, use the [INSTrument:REName](#) command.

**Example:** `INST:LIST?`  
 Result for 2 channels:  
 'MREC', 'Measuring Receiver', 'MREC', 'Measuring Receiver 2'

**Usage:** Query only

*Table 9-2: Available channel types and default channel names*

Application	<ChannelType> Parameter	Default Channel Name*)
Measuring Receiver	MRECeiver	Measuring Receiver
Spectrum (R&S FSMR3-B1)	SANalyzer	Spectrum
I/Q Analyzer (R&S FSMR3-B1)	IQ	IQ Analyzer
Phase Noise (R&S FSMR3-B60)	PNOise	Phase Noise
Pulse (R&S FSMR3-K6)	PULSE	Pulse
Avionics (R&S FSMR3-K15)	AVIonics	Avionics
Vector Signal Analysis (VSA, R&S FSMR3-K70)	DDEM	VSA

Note: the default channel name is also listed in the table. If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.

**INSTrument:REName** <ChannelName1>, <ChannelName2>

This command renames a channel.

**Setting parameters:**

<ChannelName1> String containing the name of the channel you want to rename.

<ChannelName2> String containing the new channel name.  
 Note that you cannot assign an existing channel name to a new channel. If you do, an error occurs.  
 Channel names can have a maximum of 31 characters, and must be compatible with the Windows conventions for file names. In particular, they must not contain special characters such as ":", "\*", "?".

**Example:** `INST:REN 'Measuring Receiver 2', 'Measuring Receiver 3'`  
 Renames the channel with the name 'Measuring Receiver 2' to 'Measuring Receiver 3'.

**Usage:** Setting only

**INSTrument[:SElect] <ChannelType>**

This command activates a new measurement channel with the defined channel type, or selects an existing measurement channel with the specified name.

See also [INSTrument:CREate\[:NEW\]](#) on page 131.

**Parameters:**

<ChannelType>      **PULSe**  
Pulse option, R&S FSMR3–K6

**SYSTem:PRESet:CHANnel[:EXEC]**

This command restores the default instrument settings in the current channel.

Use `INST:SEL` to select the channel.

**Example:**            `INST:SEL 'Spectrum2'`  
Selects the channel for "Spectrum2".  
`SYST:PRESet:CHAN:EXEC`  
Restores the factory default settings to the "Spectrum2"channel.

**Usage:**              Event

**Manual operation:** See "[Preset Channel](#)" on page 57

## 9.4 Signal description

The signal description provides information on the expected input signal, which optimizes pulse detection.

<a href="#">[SENSe:]TRACe:MEASurement:DEFine:DURation:AUTO</a> .....	134
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:DURation:MAX</a> .....	135
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:DURation:MIN</a> .....	135
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:DURation:OFF</a> .....	135
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:FREQuency:OFFSet</a> .....	135
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:FREQuency:OFFSet:AUTO</a> .....	136
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:FREQuency:RATE</a> .....	136
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:FREQuency:RATE:AUTO</a> .....	136
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:PULSe:ADRoop</a> .....	136
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:PULSe:MODulation</a> .....	136
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:PULSe:PERiod</a> .....	137

**[SENSe:]TRACe:MEASurement:DEFine:DURation:AUTO <State>**

If this flag is set to ON, the pulse timing parameters (min/max width, min off time) are determined automatically from the current capture settings.

**Parameters:**

<State>              ON | OFF | 0 | 1  
\*RST:                1

**Manual operation:** See ["Timing Auto Mode"](#) on page 59

---

**[SENSe:]TRACe:MEASurement:DEFine:DURation:MAX** <PulseMaxWidth>

Defines a maximum pulse width; pulses outside this range are not detected. The available value range may be restricted by the sample rate.

**Parameters:**

<PulseMaxWidth>    Range:     50ns to 100s  
                          \*RST:     5 ms  
                          Default unit: S

**Manual operation:** See [" Maximum Pulse Width"](#) on page 59

---

**[SENSe:]TRACe:MEASurement:DEFine:DURation:MIN** <PulseMinWidth>

Defines a minimum pulse width; pulses outside this range are not detected. The available value range may be restricted by the sample rate.

**Parameters:**

<PulseMinWidth>    Range:     50ns to 100s  
                          \*RST:     50 ns  
                          Default unit: S

**Manual operation:** See ["Minimum Pulse Width"](#) on page 59

---

**[SENSe:]TRACe:MEASurement:DEFine:DURation:OFF** <PulseMinOff>

The minimum time the pulse is "off", i.e. the time between successive pulses. This value is used to determine noise statistics and to reject short drops in amplitude during pulse "ON" time. The available value range may be restricted by the sample rate.

**Parameters:**

<PulseMinOff>        Range:     50ns to 100s  
                          \*RST:     1 us  
                          Default unit: S

**Manual operation:** See ["Min Pulse Off Time"](#) on page 59

---

**[SENSe:]TRACe:MEASurement:DEFine:FREQuency:OFFSet** <Offset>

Defines a known frequency offset to be corrected in the pulse acquisition data.

Use the [\[SENSe:\]TRACe:MEASurement:DEFine:FREQuency:OFFSet:AUTO](#) to define the frequency offset automatically.

**Parameters:**

<Offset>                \*RST:     0  
                          Default unit: HZ

**Manual operation:** See ["Frequency Offset Value"](#) on page 59

---

**[SENSe:]TRACe:MEASurement:DEFine:FREQuency:OFFSet:AUTO <State>**

If enabled, the frequency offset is estimated automatically for each individual pulse.

**Parameters:**

<State> ON | OFF | 0 | 1  
 \*RST: 1

**Manual operation:** See "[Frequency Offset Auto Mode](#)" on page 59

---

**[SENSe:]TRACe:MEASurement:DEFine:FREQuency:RATE <PulseChirpRate>**

Defines a known frequency chirp rate (in Hz/μs) to be used to generate an ideal pulse waveform for computing frequency and phase error parameters. This value is assumed constant for all measured pulses.

Use the [\[SENSe:\]TRACe:MEASurement:DEFine:FREQuency:RATE:AUTO](#) to define the chirp rate automatically.

**Parameters:**

<PulseChirpRate> \*RST: 0  
 Default unit: Hz/μs

**Manual operation:** See "[Chirp Rate](#)" on page 60

---

**[SENSe:]TRACe:MEASurement:DEFine:FREQuency:RATE:AUTO <State>**

If enabled, the chirp rate is estimated automatically for each individual pulse.

**Parameters:**

<State> ON | OFF | 0 | 1  
 \*RST: 1

**Manual operation:** See "[Chirp Rate Auto Mode](#)" on page 60

---

**[SENSe:]TRACe:MEASurement:DEFine:PULSe:ADRoop <State>**

**Parameters:**

<State> ON | OFF | 0 | 1  
 \*RST: 1

**Manual operation:** See "[Pulse Has Droop](#)" on page 58

---

**[SENSe:]TRACe:MEASurement:DEFine:PULSe:MODulation <Modulation>**

The type of pulse modulation which is expected.

**Parameters:**

<Modulation> ARB | CW | LFM | RIQ  
**ARB**  
 Arbitrary



**CW**

Continuous wave

**LFM**

Linear FM (fixed value)

\*RST: CW

**Manual operation:** See "Pulse Modulation" on page 58**[SENSe:]TRACe:MEASurement:DEFine:PULSe:PERiod <PulsePeriod>**

This command defines how a pulse is detected.

**Parameters:**

&lt;PulsePeriod&gt; HL | LH

**HL**

The pulse period begins with the falling edge of the preceding pulse and ends with the falling edge of the current pulse.

**LH**

The pulse period begins with the rising edge of the current pulse and end with the rising edge of the succeeding pulse.

\*RST: HL

**Manual operation:** See "Pulse Period" on page 58

## 9.5 Input/output settings

The R&S FSMR3 can analyze signals from different input sources (such as RF, power sensors etc.) and provide various types of output (such as noise or trigger signals). The following commands are required to configure data input and output.

- [RF input](#).....137
- [Input from I/Q data files](#).....141
- [Configuring the outputs](#).....141

### 9.5.1 RF input

<a href="#">INPut&lt;ip&gt;:ATTenuation:PROTection:RESet</a> .....	138
<a href="#">INPut&lt;ip&gt;:ATTenuation:PROTection[:STATe]</a> .....	138
<a href="#">INPut&lt;ip&gt;:COUPling</a> .....	138
<a href="#">INPut&lt;ip&gt;:DPATH</a> .....	139
<a href="#">INPut&lt;ip&gt;:FILTer:HPASS[:STATe]</a> .....	139
<a href="#">INPut&lt;ip&gt;:FILTer:YIG[:STATe]</a> .....	140
<a href="#">INPut&lt;ip&gt;:IMPedance</a> .....	140
<a href="#">INPut&lt;ip&gt;:SELect</a> .....	140

**INPut<ip>:ATTenuation:PROTection:RESet**

This command resets the attenuator and reconnects the RF input with the input mixer for the R&S FSMR3000 after an overload condition occurred and the protection mechanism intervened. The error status bit (bit 3 in the `STAT:QUES:POW` status register) and the `INPUT OVL` message in the status bar are cleared.

(For details on the status register see the R&S FSMR3000 base unit user manual).

The command works only if the overload condition has been eliminated first.

**Suffix:**

<ip>                    1 | 2  
                          irrelevant

**Example:**            `INP:ATT:PROT:RES`

**INPut<ip>:ATTenuation:PROTection[:STATe] <State>**

This command turns the availability of attenuation levels of 10 dB or less on and off.

**Suffix:**

<ip>                    1 | 2  
                          irrelevant

**Parameters:**

<State>                ON | OFF | 1 | 0

**ON | 1**

Attenuation levels of 10 dB or less are not allowed to protect the RF input connector of the R&S FSMR3000.

**OFF | 0**

Attenuation levels of 10 dB or less are not blocked. Provide appropriate protection for the RF input connector of the R&S FSMR3000 yourself.

\*RST:                1

**Example:**            `INP:ATT:PROT ON`  
                          Turns on the input protection.

**INPut<ip>:COUPLing <CouplingType>**

This command selects the coupling type of the RF input.

**Suffix:**

<ip>                    1 | 2  
                          irrelevant

**Parameters:**

<CouplingType>      AC | DC  
**AC**  
                          AC coupling

**DC**  
DC coupling  
\*RST: AC

**Example:** INP:COUP DC

**Manual operation:** See "[Input Coupling](#)" on page 62

### INPut<ip>:DPATH <DirectPath>

Enables or disables the use of the direct path for frequencies close to 0 Hz.

**Suffix:**  
<ip> 1 | 2  
irrelevant

**Parameters:**  
<DirectPath> AUTO | OFF  
**AUTO | 1**  
(Default) the direct path is used automatically for frequencies close to 0 Hz.  
**OFF | 0**  
The analog mixer path is always used.

**Example:** INP:DPAT OFF

### INPut<ip>:FILTer:HPASs[:STATe] <State>

Activates an additional internal high-pass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the R&S FSMR3000 to measure the harmonics for a DUT, for example.

This function requires an additional high-pass filter hardware option.

(Note: for RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG-preselector, if available.)

**Suffix:**  
<ip> 1 | 2  
irrelevant

**Parameters:**  
<State> ON | OFF | 0 | 1  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on  
\*RST: 0

**Example:** INP:FILT:HPAS ON  
Turns on the filter.

**Manual operation:** See ["High Pass Filter 1 to 3 GHz"](#) on page 62

---

#### INPut<ip>:FILTer:YIG[:STATe] <State>

Enables or disables the YIG filter.

**Suffix:**

<ip> 1 | 2  
irrelevant

**Example:**

INP:FILT:YIG OFF  
Deactivates the YIG-preselector.

**Manual operation:** See ["YIG-Preselector"](#) on page 62

---

#### INPut<ip>:IMPedance <Impedance>

This command selects the nominal input impedance of the RF input. In some applications, only 50 Ω are supported.

**Suffix:**

<ip> 1 | 2  
irrelevant

**Parameters:**

<Impedance> 50 | 75  
\*RST: 50 Ω  
Default unit: OHM

**Example:**

INP:IMP 75

**Manual operation:** See ["Impedance"](#) on page 62

---

#### INPut<ip>:SELEct <Source>

This command selects the signal source for measurements, i.e. it defines which connector is used to input data to the R&S FSMR3.

**Suffix:**

<ip> 1 | 2  
irrelevant

**Parameters:**

<Source> **RF**  
Radio Frequency ("RF INPUT" connector)  
\*RST: RF

**Manual operation:** See ["Radio Frequency State"](#) on page 61

## 9.5.2 Input from I/Q data files

The input for measurements can be provided from I/Q data files. The commands required to configure the use of such files are described here.

Useful commands for retrieving results described elsewhere:

- `INPut<ip>:SElect` on page 140

### Remote commands exclusive to input from I/Q data files:

`INPut<ip>:FILE:PATH..... 141`

---

**INPut<ip>:FILE:PATH <FileName>[, <AnalysisBW>]**

This command selects the I/Q data file to be used as input for further measurements.

The I/Q data must have a specific format as described in R&S FSMR3 I/Q Analyzer and I/Q Input User Manual.

#### Suffix:

<ip>                    1 | 2  
                          irrelevant

#### Parameters:

<FileName>            String containing the path and name of the source file.  
                          The file extension is \*.iq.tar.

<AnalysisBW>        Optionally: The analysis bandwidth to be used by the measurement. The bandwidth must be smaller than or equal to the bandwidth of the data that was stored in the file.  
                          Default unit: HZ

**Example:**            `INP:FILE:PATH 'C:\R_S\Instr\user\data.iq.tar'`  
                          Uses I/Q data from the specified file as input.

**Example:**            `INP:FILE:PATH 'C:\R_S\Instr\user\data.iq.tar',`  
                          `10MHz`  
                          Uses an analysis bandwidth of 10 MHz of the data provided in the file.

## 9.5.3 Configuring the outputs

The following commands are required to provide output from the R&S FSMR3.

## 9.6 Frontend configuration

The following commands are required to configure frequency and amplitude settings, which represent the "frontend" of the measurement setup.

- [Frequency](#)..... 142
- [Amplitude settings](#)..... 143
- [Configuring the attenuation](#)..... 145

### 9.6.1 Frequency

<a href="#">[SENSe:]FREQUENCY:CENTer</a> .....	142
<a href="#">[SENSe:]FREQUENCY:CENTer:STEP</a> .....	142
<a href="#">[SENSe:]FREQUENCY:CENTer:STEP:AUTO</a> .....	142
<a href="#">[SENSe:]FREQUENCY:OFFSet</a> .....	143

---

#### [SENSe:]FREQUENCY:CENTer <Frequency>

This command defines the center frequency.

##### Parameters:

<Frequency>            The allowed range and  $f_{\max}$  is specified in the data sheet.  
                              \*RST:             $f_{\max}/2$   
                              Default unit: Hz

##### Example:

```
FREQ:CENT 100 MHz
FREQ:CENT:STEP 10 MHz
FREQ:CENT UP
Sets the center frequency to 110 MHz.
```

**Manual operation:** See "[Center Frequency](#)" on page 63

---

#### [SENSe:]FREQUENCY:CENTer:STEP <StepSize>

This command defines the center frequency step size.

You can increase or decrease the center frequency quickly in fixed steps using the `SENS:FREQ UP AND SENS:FREQ DOWN` commands, see [\[SENSe:\]FREQUENCY:CENTer](#) on page 142.

##### Parameters:

<StepSize>             $f_{\max}$  is specified in the data sheet.  
                              Range:            1 to  $f_{\max}$   
                              \*RST:            0.1 x span  
                              Default unit: Hz

##### Example:

```
//Set the center frequency to 110 MHz.
FREQ:CENT 100 MHz
FREQ:CENT:STEP 10 MHz
FREQ:CENT UP
```

**Manual operation:** See "[Center Frequency Stepsize](#)" on page 63

---

#### [SENSe:]FREQUENCY:CENTer:STEP:AUTO <State>

This command couples or decouples the center frequency step size to the span.

**Parameters:**

<State> ON | OFF | 0 | 1  
 \*RST: 1

**Example:**

FREQ:CENT:STEP:AUTO ON  
 Activates the coupling of the step size to the span.

**[SENSe:]FREQuency:OFFSet <Offset>**

This command defines a frequency offset.

If this value is not 0 Hz, the application assumes that the input signal was frequency shifted outside the application. All results of type "frequency" will be corrected for this shift numerically by the application.

See also "[Frequency Offset](#)" on page 64.

**Parameters:**

<Offset> Range: -1 THz to 1 THz  
 \*RST: 0 Hz  
 Default unit: HZ

**Example:**

FREQ:OFFS 1GHZ

**Manual operation:** See "[Frequency Offset](#)" on page 64

## 9.6.2 Amplitude settings

The following commands are required to configure the amplitude settings in a remote environment.

Useful commands for amplitude settings described elsewhere:

- [INPut<ip>:COUPling](#) on page 138
- [INPut<ip>:IMPedance](#) on page 140
- [DISPlay\[:WINDow<n>\]\[:SUBWindow<n>\]:TRACe<t>:Y\[:SCALE\]:AUTO](#) on page 232

**Remote commands exclusive to amplitude settings:**

<a href="#">[SENSe:]ADJust:LEVel</a> .....	143
<a href="#">DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:Y[:SCALE]:RLEVel</a> .....	144
<a href="#">DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:Y[:SCALE]:RLEVel:OFFSet</a> .....	144
<a href="#">INPut&lt;ip&gt;:GAIN:STATE</a> .....	144
<a href="#">INPut&lt;ip&gt;:GAIN[:VALue]</a> .....	145

**[SENSe:]ADJust:LEVel**

Initiates a single (internal) measurement that evaluates and sets the ideal reference level for the current input data and measurement settings. Thus, the settings of the RF attenuation and the reference level are optimized for the signal level. The R&S FSMR3 is not overloaded and the dynamic range is not limited by an S/N ratio that is too small.

**Example:** ADJ:LEV

---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel**  
 <ReferenceLevel>

This command defines the reference level (for all traces in all windows).

With a reference level offset  $\neq 0$ , the value range of the reference level is modified by the offset.

**Suffix:**

<n>	irrelevant
<w>	subwindow Not supported by all applications
<t>	irrelevant

**Parameters:**

<ReferenceLevel>	The unit is variable. Range: see datasheet *RST: 0 dBm Default unit: DBM
------------------	---

**Example:** DISP:TRAC:Y:RLEV -60dBm

**Manual operation:** See ["Reference Level"](#) on page 65

---

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet**  
 <Offset>

This command defines a reference level offset (for all traces in all windows).

**Suffix:**

<n>	irrelevant
<w>	subwindow Not supported by all applications
<t>	irrelevant

**Parameters:**

<Offset>	Range: -200 dB to 200 dB *RST: 0dB Default unit: DB
----------	---

**Example:** DISP:TRAC:Y:RLEV:OFFS -10dB

**Manual operation:** See ["Shifting the Display \(Offset\)"](#) on page 65

---

**INPut<ip>:GAIN:STATe <State>**

This command turns the internal preamplifier on and off. It requires the optional preamplifier hardware.



The preamplification value is defined using the `INPut<ip>:GAIN[:VALue]` on page 145.

**Suffix:**

<ip> 1 | 2  
irrelevant

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on  
\*RST: 0

**Example:**

```
INP:GAIN:STAT ON
INP:GAIN:VAL 15
```

Switches on 15 dB preamplification.

**Manual operation:** See "Preamplifier" on page 66

**INPut<ip>:GAIN[:VALue] <Gain>**

This command selects the "gain" if the preamplifier is activated (`INP:GAIN:STAT ON`, see `INPut<ip>:GAIN:STATe` on page 144).

The command requires the additional preamplifier hardware option.

**Suffix:**

<ip> 1 | 2  
irrelevant

**Parameters:**

<Gain> For FSMR3008 and FSMR3026, the following settings are available:  
15 dB and 30 dB  
All other values are rounded to the nearest of these two.  
FSMR3050:  
30 dB  
Default unit: DB

**Example:**

```
INP:GAIN:STAT ON
INP:GAIN:VAL 30
```

Switches on 30 dB preamplification.

**Manual operation:** See "Preamplifier" on page 66

### 9.6.3 Configuring the attenuation

<code>INPut&lt;ip&gt;:ATTenuation</code> .....	146
<code>INPut&lt;ip&gt;:ATTenuation:AUTO</code> .....	146

**INPut<ip>:ATTenuation <Attenuation>**

This command defines the total attenuation for RF input.

If you set the attenuation manually, it is no longer coupled to the reference level, but the reference level is coupled to the attenuation. Thus, if the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

**Suffix:**

<ip>                    1 | 2  
                          irrelevant

**Parameters:**

<Attenuation>        Range:        see data sheet  
                          Increment:   5 dB (with optional electr. attenuator: 1 dB)  
                          \*RST:        10 dB (AUTO is set to ON)  
                          Default unit: DB

**Example:**

INP:ATT 30dB

Defines a 30 dB attenuation and decouples the attenuation from the reference level.

**Manual operation:** See "[Attenuation Mode / Value](#)" on page 66

**INPut<ip>:ATTenuation:AUTO <State>**

This command couples or decouples the attenuation to the reference level. Thus, when the reference level is changed, the R&S FSMR3 determines the signal level for optimal internal data processing and sets the required attenuation accordingly.

**Suffix:**

<ip>                    1 | 2  
                          irrelevant

**Parameters:**

<State>                ON | OFF | 0 | 1  
                          \*RST:        1

**Example:**

INP:ATT:AUTO ON

Couples the attenuation to the reference level.

**Manual operation:** See "[Attenuation Mode / Value](#)" on page 66

## 9.7 Triggering measurements

Useful commands for triggering described elsewhere:

- [\[SENSe:\]FREQuency:CENTer](#) on page 142

**Remote commands exclusive to triggering:**

- [Configuring the triggering conditions](#).....147
- [Configuring the trigger output](#).....151

**9.7.1 Configuring the triggering conditions**

<a href="#">TRIGger[:SEQuence]:DTIME</a> .....	147
<a href="#">TRIGger[:SEQuence]:HOLDoff[:TIME]</a> .....	147
<a href="#">TRIGger[:SEQuence]:IFPower:HOLDoff</a> .....	148
<a href="#">TRIGger[:SEQuence]:IFPower:HYSteresis</a> .....	148
<a href="#">TRIGger[:SEQuence]:LEVel[:EXternal&lt;port&gt;]</a> .....	148
<a href="#">TRIGger[:SEQuence]:LEVel:IFPower</a> .....	149
<a href="#">TRIGger[:SEQuence]:LEVel:IQPower</a> .....	149
<a href="#">TRIGger[:SEQuence]:LEVel:RFPower</a> .....	149
<a href="#">TRIGger[:SEQuence]:RFPower:HOLDoff</a> .....	150
<a href="#">TRIGger[:SEQuence]:SLOPe</a> .....	150
<a href="#">TRIGger[:SEQuence]:SOURce</a> .....	150

**TRIGger[:SEQuence]:DTIME <DropoutTime>**

Defines the time the input signal must stay below the trigger level before a trigger is detected again.

**Parameters:**

<DropoutTime> Dropout time of the trigger.  
 Range: 0 s to 10.0 s  
 \*RST: 0 s  
 Default unit: S

**Manual operation:** See "[Drop-Out Time](#)" on page 70

**TRIGger[:SEQuence]:HOLDoff[:TIME] <Offset>**

Defines the time offset between the trigger event and the start of the measurement.

A negative offset is possible for time domain measurements.

**Parameters:**

<Offset> For measurements in the frequency domain, the range is 0 s to 30 s.  
 For measurements in the time domain, the range is the negative measurement time to 30 s.  
 \*RST: 0 s  
 Default unit: S

**Example:** TRIG:HOLD 500us

**Manual operation:** See "[Trigger Offset](#)" on page 70

**TRIGger[:SEQuence]:IFPower:HOLDoff** <Period>

This command defines the holding time before the next trigger event.

Note that this command can be used for **any trigger source**, not just IF Power (despite the legacy keyword).

**Parameters:**

<Period>                    Range:     0 s to 10 s  
                               \*RST:     0 s  
                               Default unit: S

**Example:**

TRIG:SOUR EXT  
 Sets an external trigger source.  
 TRIG:IFP:HOLD 200 ns  
 Sets the holding time to 200 ns.

**Manual operation:** See ["Trigger Holdoff"](#) on page 71

**TRIGger[:SEQuence]:IFPower:HYSteresis** <Hysteresis>

This command defines the trigger hysteresis, which is only available for "IF Power" trigger sources.

**Parameters:**

<Hysteresis>                Range:     3 dB to 50 dB  
                               \*RST:     3 dB  
                               Default unit: DB

**Example:**

TRIG:SOUR IFP  
 Sets the IF power trigger source.  
 TRIG:IFP:HYST 10DB  
 Sets the hysteresis limit value.

**Manual operation:** See ["Hysteresis"](#) on page 70

**TRIGger[:SEQuence]:LEVel[:EXTernal<port>]** <TriggerLevel>

This command defines the level the external signal must exceed to cause a trigger event.

**Suffix:**

<port>                      Selects the trigger port.  
                               1 = trigger port 1 (TRIGGER INPUT/OUTPUT connector on front panel)  
                               2 = trigger port 2 (TRIGGER INPUT/OUTPUT connector on rear panel)

**Parameters:**

<TriggerLevel>             Range:     0.5 V to 3.5 V  
                               \*RST:     1.4 V  
                               Default unit: V

**Example:**

TRIG:LEV 2V

**Manual operation:** See ["Trigger Level"](#) on page 70

---

#### TRIGger[:SEQuence]:LEVel:IFPower <TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

**Parameters:**

<TriggerLevel> For details on available trigger levels and trigger bandwidths, see the data sheet.

\*RST: -20 dBm

Default unit: DBM

**Example:** TRIG:LEV:IFP -30DBM

**Manual operation:** See ["Trigger Level"](#) on page 70

---

#### TRIGger[:SEQuence]:LEVel:IQPower <TriggerLevel>

This command defines the magnitude the I/Q data must exceed to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

**Parameters:**

<TriggerLevel> Range: -130 dBm to 30 dBm

\*RST: -20 dBm

Default unit: DBM

**Example:** TRIG:LEV:IQP -30DBM

**Manual operation:** See ["Trigger Level"](#) on page 70

---

#### TRIGger[:SEQuence]:LEVel:RFPower <TriggerLevel>

This command defines the power level the RF input must exceed to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

The input signal must be between 500 MHz and 8 GHz.

**Parameters:**

<TriggerLevel> For details on available trigger levels and trigger bandwidths, see the data sheet.

\*RST: -20 dBm

Default unit: DBM

**Example:** TRIG:LEV:RFP -30dBm

**Manual operation:** See ["Trigger Level"](#) on page 70

---

**TRIGger[:SEQuence]:RFPower:HOLDoff <Time>**

This command defines the holding time before the next trigger event. Note that this command is available for any trigger source, not just RF Power.

Note that this command is maintained for compatibility reasons only. Use the [TRIGger\[:SEQuence\]:IFPower:HOLDoff](#) on page 148 command for new remote control programs.

**Parameters:**

<Time>                      Default unit: S

---

**TRIGger[:SEQuence]:SLOPe <Type>****Parameters:**

<Type>                      POSitive | NEGative

**POSitive**

Triggers when the signal rises to the trigger level (rising edge).

**NEGative**

Triggers when the signal drops to the trigger level (falling edge).

\*RST:                      POSitive

**Example:**                      TRIG:SLOP NEG

**Manual operation:**    See "[Slope](#)" on page 70

---

**TRIGger[:SEQuence]:SOURce <Source>**

This command selects the trigger source.

**Note on external triggers:**

If a measurement is configured to wait for an external trigger signal in a remote control program, remote control is blocked until the trigger is received and the program can continue. Make sure that this situation is avoided in your remote control programs.

**Parameters:**

<Source>

**IMMediate**

Free Run

**EXT | EXT2**

Trigger signal from one of the "Trigger Input/Output" connectors.

Note: Connector must be configured for "Input".

**IFPower**

Second intermediate frequency

**IQPower**

Magnitude of sampled I/Q data

For applications that process I/Q data, such as the I/Q Analyzer or optional applications.

\*RST:                      IMMediate

<b>Example:</b>	TRIG:SOUR EXT Selects the external trigger input as source of the trigger signal
<b>Manual operation:</b>	See "Trigger Source" on page 68 See "Free Run" on page 68 See "Ext. Trigger 1/2" on page 68 See "I/Q Power" on page 69 See "IF Power" on page 69 See "RF Power" on page 69

## 9.7.2 Configuring the trigger output

The following commands are required to send the trigger signal to one of the variable "TRIGGER INPUT/OUTPUT" connectors on the R&S FSMR3000.

OUTPut<up>:TRIGger<tp>:DIRection.....	151
OUTPut<up>:TRIGger<tp>:LEVel.....	151
OUTPut<up>:TRIGger<tp>:OTYPe.....	152
OUTPut<up>:TRIGger<tp>:PULSe:IMMEDIATE.....	152
OUTPut<up>:TRIGger<tp>:PULSe:LENGth.....	152

---

### OUTPut<up>:TRIGger<tp>:DIRection <Direction>

This command selects the trigger direction for trigger ports that serve as an input as well as an output.

#### Suffix:

<up>	irrelevant
<tp>	Selects the used trigger port. <2>: selects trigger port 2 (on the rear panel).

#### Parameters:

<Direction>	INPut   OUTPut
	<b>INPut</b> Port works as an input.
	<b>OUTPut</b> Port works as an output.
*RST:	INPut

**Manual operation:** See "Trigger 1/2" on page 71

---

### OUTPut<up>:TRIGger<tp>:LEVel <Level>

This command defines the level of the (TTL compatible) signal generated at the trigger output.

This command works only if you have selected a user-defined output with

[OUTPut<up>:TRIGger<tp>:OTYPe](#).

#### Suffix:

<up>	1..n
------	------

<tp> Selects the trigger port to which the output is sent.

**Parameters:**

<Level>           **HIGH**  
                       5 V  
                       **LOW**  
                       0 V  
                       \*RST:       LOW

**Example:**           OUTP:TRIG2:LEV HIGH

**Manual operation:** See "[Level](#)" on page 72

**OUTPut<up>:TRIGger<tp>:OTYPe <OutputType>**

This command selects the type of signal generated at the trigger output.

**Suffix:**

<up>                   1..n  
 <tp>                   Selects the trigger port to which the output is sent.  
                           2 = trigger port 2 (rear panel)

**Parameters:**

<OutputType>       **DEVice**  
                       Sends a trigger signal when the R&S FSMR3 has triggered internally.  
                       **TARMed**  
                       Sends a trigger signal when the trigger is armed and ready for an external trigger event.  
                       **UDEFined**  
                       Sends a user-defined trigger signal. For more information, see [OUTPut<up>:TRIGger<tp>:LEVel](#).  
                       \*RST:       DEVice

**Manual operation:** See "[Output Type](#)" on page 71

**OUTPut<up>:TRIGger<tp>:PULSe:IMMEDIATE**

This command generates a pulse at the trigger output.

**Suffix:**

<up>                   Selects the trigger port to which the output is sent.  
                           2 = trigger port 2 (rear)  
 <tp>                   1..n

**Manual operation:** See "[Send Trigger](#)" on page 72

**OUTPut<up>:TRIGger<tp>:PULSe:LENGth <Length>**

This command defines the length of the pulse generated at the trigger output.



**Suffix:**

<up>	1..n
<tp>	Selects the trigger port to which the output is sent. 2 = trigger port 2 (rear)

**Parameters:**

<Length>	Pulse length in seconds. Default unit: S
----------	---

**Example:**            `OUTP:TRIG2:PULS:LENG 0.02`

**Manual operation:** See "Pulse Length" on page 72

## 9.8 Data acquisition

The following commands are required to configure how much and how data is captured from the input signal.

<code>[SENSe:]BANDwidth:DEMod</code> .....	153
<code>[SENSe:]BWIDth:DEMod</code> .....	153
<code>[SENSe:]BANDwidth:DEMod:TYPE</code> .....	153
<code>[SENSe:]BWIDth:DEMod:TYPE</code> .....	153
<code>[SENSe:]DEMod:FMVF:TYPE</code> .....	154
<code>[SENSe:]RLENgth?</code> .....	154
<code>[SENSe:]SRATe?</code> .....	154
<code>[SENSe:]SWEep:TIME</code> .....	155
<code>TRACe:IQ:LCAPture</code> .....	155

---

**[SENSe:]BANDwidth:DEMod <Bandwidth>**

**[SENSe:]BWIDth:DEMod <Bandwidth>**

Sets/queries the measurement bandwidth in Hz.

The measurement bandwidth is defined by the used filter and the sample rate. For information on supported sample rates and filter bandwidths see the data sheet.

**Parameters:**

<Bandwidth>	*RST:        80.0 MHz Default unit: HZ
-------------	---

---

**[SENSe:]BANDwidth:DEMod:TYPE <FilterType>**

**[SENSe:]BWIDth:DEMod:TYPE <FilterType>**

This command defines the type of demodulation filter to be used. For information on supported filter bandwidths see the data sheet.

**Parameters:**

<FilterType>	FLAT   GAUSs <b>FLAT</b> Standard flat demodulation filter
--------------	--

**GAUSS**

Gaussian filter for optimized settling behavior

For Gaussian filters with a large 3dB bandwidth (> 40 MHz, only available with the bandwidth extension option) the actual filter shape deviates strongly from the ideal Gauss filter outside a range of approximately  $\pm 80$  MHz. For this range the flat filter is more accurate.

For details see [Chapter B, "Effects of large gauss filters"](#), on page 337.

\*RST: GAUS

**Manual operation:** See ["Filter type"](#) on page 73

**[SENSe:]DEMod:FMVF:TYPE <Filter>**

Activates or deactivates additional filters applied after demodulation to filter out unwanted signals, or correct pre-emphasized input signals.

**Parameters:**

<Filter> NONE | LP01 | LP1 | LP5 | LP10 | LP25

**NONE**

No video filter applied

**LP01**

Low pass filter 0.1 % bandwidth

**LP1**

Low pass filter 1 % bandwidth

**LP5**

Low pass filter 5 % bandwidth

**LP10**

Low pass filter 10 % bandwidth

**LP25**

Low pass filter 25 % bandwidth

**Example:** SENS:DEMod:FMVF:TYPE LP01

**Manual operation:** See ["FM Video Bandwidth"](#) on page 91

**[SENSe:]RLENgth?**

This command returns the record length in samples set up for current measurement settings.

**Usage:** Query only

**Manual operation:** See ["Record length"](#) on page 74

**[SENSe:]SRATe?**

This command returns the sample rate set up for current measurement settings.

**Return values:**

<SampleRate> Current sample rate used by the application.

**Usage:**

Query only

**[SENSe:]SWEep:TIME <Time>**

This command defines the measurement time. It automatically decouples the time from any other settings.

The maximum measurement time in the R&S FSMR3000 Pulse application is limited only by the available memory ("memory limit reached" message is shown in status bar). Note, however, that increasing the measurement time (and thus reducing the available memory space) may restrict the number of measurement channels that can be activated simultaneously on the R&S FSMR3.

**Parameters:**

<Time> refer to data sheet  
 \*RST: depends on current settings (determined automatically)  
 Default unit: S

**Manual operation:** See "[Measurement Time](#)" on page 74

**TRACe:IQ:LCAPture <State>**

The long capture buffer provides functionality to use the full I/Q memory depth of the R&S FSMR3 for data acquisition.

**Parameters:**

<State> AUTO | ON | OFF

**AUTO**

The long capture buffer is activated in case that the record length exceeds the amount of data which can be acquired within the standard memory capacity of the R&S FSMR3. If the record length decreases again, the long capture buffer is deactivated automatically.

**ON**

The long capture buffer is activated permanently. A data capture in a different measurement channel will overwrite and invalidate the acquired I/Q data. A red "IQ" icon in the channel tab indicates that the results for the channel no longer match the data currently in the capture buffer.

**OFF**

This is the default setting. Only the standard I/Q memory capacity of the R&S FSMR3 is used. The available I/Q memory capacity is shared by all measurement channels.

## 9.9 Pulse detection

The pulse detection settings define the conditions under which a pulse is detected within the input signal.

[SENSe:]DETECT:LIMit.....	156
[SENSe:]DETECT:LIMit:COUNT.....	156
[SENSe:]DETECT:HYSteresis.....	157
[SENSe:]DETECT:RANGe.....	157
[SENSe:]DETECT:RANGe:LENGth.....	157
[SENSe:]DETECT:RANGe:STARt.....	157
[SENSe:]DETECT:REFerence.....	158
[SENSe:]DETECT:THReshold.....	158

---

### [SENSe:]DETECT:LIMit <State>

If enabled, the number of pulses to be detected is restricted. When the maximum number is exceeded, measurement is stopped for the current capture buffer. This limitation can be used to speed up the measurement if only a small number of pulses is of interest.

The maximum number of pulses to be detected is defined using the [SENSe:]DETECT:LIMit:COUNT command.

#### Parameters:

<State>            ON | OFF | 0 | 1  
                       **OFF | 0**  
                       Switches the function off  
                       **ON | 1**  
                       Switches the function on  
                       \*RST:        0

**Manual operation:** See "[Detection Limit](#)" on page 78

---

### [SENSe:]DETECT:LIMit:COUNT <MaxPulseCount>

Defines the maximum number of pulses to be detected.

This limit is only considered if [SENSe:]DETECT:LIMit is enabled.

#### Parameters:

<MaxPulseCount>    integer  
                           Range:        0 to see data sheet  
                           \*RST:        1000

**Manual operation:** See "[Maximum Pulse Count](#)" on page 78



This command is only available for `[SENSe:]DETECT:RANGe ON`.

**Parameters:**

<DetectionStart> Time from the capture buffer start  
Default unit: S

**Example:**

```
SENS:DET:RANG ON
SENS:DET:RANG:STAR 10ms
SENS:DET:RANG:LENG 100ms
```

**Manual operation:** See "[Detection Start](#)" on page 78

**[SENSe:]DETECT:REFerence <Reference>**

The reference level to be used for setting the pulse detection threshold.

**Parameters:**

<Reference> REFLevel | PEAK | NOISe | ABSolute

**REFLevel**

Current reference level

**PEAK**

Peak level as measured over the entire capture data interval

**NOISe**

Noise level determined from the current capture data according to `[SENSe:]TRACe:MEASurement:DEFine:DURation:MIN` on page 135.

**ABSolute**

Absolute level defined by `[SENSe:]DETECT:THReshold` on page 158.

\*RST: PEAK

**Manual operation:** See "[Reference Source](#)" on page 77

**[SENSe:]DETECT:THReshold <Level>**

The threshold determines whether a pulse is detected or not. The top of a pulse must exceed the threshold in order to be detected. The threshold is defined in relation to the reference defined by `[SENSe:]DETECT:REFerence`.

**Parameters:**

<Level> numeric value in dB or dBm, depending on reference type

\*RST: -10.0

**Manual operation:** See "[Threshold](#)" on page 78

## 9.10 Configuring the pulse measurement

The following commands determine how much data is measured for each pulse, in relation to defined levels, points, or ranges.

- [Measurement levels](#)..... 159
- [Measurement point](#)..... 162
- [Measurement range](#)..... 164

### 9.10.1 Measurement levels

<a href="#">[SENSe:]TRACe:MEASurement:ALGorithm</a> .....	159
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:AMPLitude:UNIT</a> .....	159
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:BOUNDary:TOP</a> .....	160
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:COMPensate:ADRoop</a> .....	160
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:RIPPlE</a> .....	160
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:TOP:FIXed</a> .....	160
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:TRANSition:HREFerence</a> .....	161
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:TRANSition:LREFerence</a> .....	161
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:TRANSition:REFerence</a> .....	161

---

#### [SENSe:]TRACe:MEASurement:ALGorithm <Algorithm>

The measurement algorithm used for finding the pulse top and base levels.

##### Parameters:

<Algorithm>

##### MEAN

The arithmetic average of the measured values

##### MEDian

The level for which half the values lie above, the other half below in the histogram

##### PEAKpower

The peak power is used to detect the pulse top level.

##### FIXed

A fixed pulse top level value is used

\*RST: MEDian

##### Example:

SENS:TRAC:MEAS:ALG PEAK

**Manual operation:** See "[Measurement Algorithm](#)" on page 81

---

#### [SENSe:]TRACe:MEASurement:DEFine:AMPLitude:UNIT <Unit>

Defines the unit of the pulse amplitude values, i.e. whether magnitude (V) or power (W, dBm) values are used to determine the threshold levels for fall and rise times.

##### Parameters:

<Unit>

V | W | DBM

\*RST: V

**Manual operation:** See ["Reference Level Unit"](#) on page 81

**[SENSe:]TRACe:MEASurement:DEFine:BOUNdary:TOP** <PulseInstant>

The boundary in percent of the pulse amplitude to either side of the pulse top (ON state). Used to determine the settling time, for example. Once the signal remains within the boundary, it is assumed to have settled.

**Parameters:**

<PulseInstant>      percentage  
                             Range:      1 to 20  
                             \*RST:        3

**Manual operation:** See ["Boundary"](#) on page 82

**[SENSe:]TRACe:MEASurement:DEFine:COMPensate:ADRoop** <State>

Determines whether the 100% value (from base to top) for the rise and fall time measurements is calculated from the Edges.

This allows you to consider a "droop" in the pulse top during the pulse measurements. If a droop is to be considered, the 100% value must be calculated separately for the rising and falling edges.

**Parameters:**

<State>                      **ON | 1**  
                                     The 100% value is measured separately for the rising and falling edges.  
                                     **OFF | 0**  
                                     The 100% value is measured at the pulse center and used for all measurements.  
                                     \*RST:        1

**Manual operation:** See ["Position"](#) on page 80

**[SENSe:]TRACe:MEASurement:DEFine:RIPple** <Portion>

Determines portion of the pulse top which is used to measure the ripple.

**Parameters:**

<Portion>                    percentage  
                                     Range:      0 to 100  
                                     \*RST:        50

**Manual operation:** See ["Ripple Portion"](#) on page 81

**[SENSe:]TRACe:MEASurement:DEFine:TOP:FIXed** <TopFixed>

Defines the top power level value to be used by the pulse measurement algorithm.



This command is only available for `[SENSe:]TRACe:MEASurement:ALGorithm  
FIXed`

**Parameters:**

`<TopFixed>` numeric value  
Default unit: dBm

**Example:**

```
SENS:TRAC:MEAS:ALG FIXED
SENS:TRAC:MEAS:DEF:TOP:FIX -10
```

**Manual operation:** See ["Fixed Value"](#) on page 81

**[SENSe:]TRACe:MEASurement:DEFine:TRANSition:HREFerence** `<Threshold>`

The upper threshold in percent of the pulse amplitude used to signify the end of a rising or beginning of a falling signal level.

**Parameters:**

`<Threshold>` percentage  
Range: 0 to 100  
\*RST: 90

**Manual operation:** See ["High \(Distal\) Threshold"](#) on page 81

**[SENSe:]TRACe:MEASurement:DEFine:TRANSition:LREFerence** `<Threshold>`

The lower threshold in percent of the pulse amplitude used to signify the end of a falling or beginning of a rising signal level.

**Parameters:**

`<Threshold>` percentage  
Range: 0 to 100  
\*RST: 10

**Manual operation:** See ["Low \(Proximal\) Threshold"](#) on page 82

**[SENSe:]TRACe:MEASurement:DEFine:TRANSition:REFerence** `<Threshold>`

The threshold in percent of the pulse amplitude used to signify the mid-transition level between pulse states.

**Parameters:**

`<Threshold>` percentage  
Range: 0 to 100  
\*RST: 50

**Manual operation:** See ["Mid \(Mesial\) Threshold"](#) on page 81



**[SENSe:]TRACe:MEASurement:DEFine:PULSe:REFerence <RefPulseNumber>**

Selects a particular pulse to be used as a reference for relative pulse parameters (see [\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:REFerence:POSition](#) on page 163).

The number of the current or all detected pulses can be queried using [\[SENSe:\]PULSe:NUMBer?](#) on page 268 or [\[SENSe:\]PULSe:ID?](#) on page 268.

**Parameters:**

<RefPulseNumber> Range: 0 to number of detected pulses  
\*RST: 0

**Manual operation:** See "[Reference for Pulse-Pulse Measurements](#)" on page 83

**[SENSe:]TRACe:MEASurement:DEFine:PULSe:REFerence:POSition <Mode>**

Defines the eference pulse on which relative pulse results are based (e.g. for traces normalized to reference pulse, see [Chapter 4.5.2, "Normalizing traces"](#), on page 51).

**Parameters:**

<Mode> FIXed | SElected | BPULse | APULse

**FIXed**

A fixed pulse number; the pulse number is specified by [\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:REFerence](#) on page 163

**SElected**

The currently selected pulse (see [\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:SElected](#) on page 170)

**BPULse**

The nth pulse *before* the currently evaluated pulse, where n is the number specified by [\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:REFerence](#) on page 163.  
No values are available for the first n pulses.

**APULse**

The nth pulse *after* the currently evaluated pulse, where n is the number specified by [\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:REFerence](#) on page 163.  
No values are available for the last n pulses.

**Example:**

```
SENS:TRAC:MEAS:DEF:PULS:REF:POS FIX
SENS:TRAC:MEAS:DEF:PULS:REF 1
```

All relative pulse results are based on pulse number 1.

**Example:**

```
SENS:TRAC:MEAS:DEF:PULS:SEL 2
SENS:TRAC:MEAS:DEF:PULS:REF:POS SEL
```

All relative pulse results are based on the currently selected pulse number 2.

**Example:**           SENS:TRAC:MEAS:DEF:PULS:REF:POS BPUL  
                   SENS:TRAC:MEAS:DEF:PULS:REF 1  
 For each pulse evaluation, the previous pulse is used as a reference. The first pulse has no results.

**Example:**           SENS:TRAC:MEAS:DEF:PULS:REF:POS APUL  
                   SENS:TRAC:MEAS:DEF:PULS:REF 2  
 For each pulse evaluation, the second-next pulse is used as a reference. The last 2 pulses have no results.

**Manual operation:** See ["Reference for Pulse-Pulse Measurements"](#) on page 83

### 9.10.3 Measurement range

<a href="#">[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:LENGth</a> .....	164
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:OFFSet:LEFT</a> .....	164
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:OFFSet:RIGHT</a> .....	164
<a href="#">[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:REFerence</a> .....	165

---

**[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:LENGth** <Length>

**Parameters:**

<Length>           percentage  
                   Range:       1 to 100  
                   \*RST:       75

**Manual operation:** See ["Reference, Length, Offset"](#) on page 85

---

**[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:OFFSet:LEFT**  
 <OffsetLeft>

The offset in seconds from the pulse rising edge at which the estimation range begins.

**Parameters:**

<OffsetLeft>       \*RST:       0  
                   Default unit: S

**Manual operation:** See ["Reference, Length, Offset"](#) on page 85

---

**[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:OFFSet:RIGHT**  
 <OffsetRight>

The offset in seconds from the pulse falling edge at which the estimation range ends.

**Parameters:**

<OffsetRight>     \*RST:       0  
                   Default unit: S

**Manual operation:** See ["Reference, Length, Offset"](#) on page 85

**[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:REFERENCE**

&lt;Reference&gt;

Defines the reference for the measurement range definition. Depending on the selected reference type, an additional setting is available to define the range.

**Parameters:**

&lt;Reference&gt;

CENTer | EDGE

**CENTER**

Defines a relative range around the center of the pulse. The range is defined by its **length** in percent of the pulse top.

**EDGE**

Defines the start and stop of the measurement range with respect to the pulse edges. The range is defined by a time **offset** from the middle of the **rising edge** and a time offset from the middle of the **falling edge**.

\*RST:       CENTer

**Manual operation:** See "[Reference, Length, Offset](#)" on page 85

## 9.11 Configuring and performing sweeps

When the Pulse application is activated, a continuous sweep is performed automatically. However, you can stop and start a new measurement any time.

Furthermore, you can perform a sequence of measurements using the Sequencer (see "[Multiple Measurement Channels and Sequencer Function](#)" on page 12).

Useful commands for configuring sweeps described elsewhere:

- [\[SENSe:\]SWEep:TIME](#) on page 155
- [\[SENSe:\]SWEep:POINTs](#) on page 248

**Remote commands exclusive to configuring sweeps:**

<a href="#">ABORt</a> .....	165
<a href="#">INITiate&lt;n&gt;:CONMeas</a> .....	166
<a href="#">INITiate&lt;n&gt;:CONTInuous</a> .....	167
<a href="#">INITiate&lt;n&gt;:[IMMediate]</a> .....	167
<a href="#">INITiate:SEQuencer:ABORt</a> .....	167
<a href="#">INITiate:SEQuencer:IMMediate</a> .....	168
<a href="#">INITiate:SEQuencer:MODE</a> .....	168
<a href="#">[SENSe:]SWEep:COUNT</a> .....	168
<a href="#">[SENSe:]SWEep:COUNT:CURRent?</a> .....	169
<a href="#">SYSTem:SEQuencer</a> .....	169

**ABORt**

This command aborts the measurement in the current channel and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the `*OPC?` or `*WAI` command after `ABOR` and before the next command.

For details on overlapping execution see [Remote control via SCPI](#).

**Note on blocked remote control programs:**

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel to the R&S FSMR3000 is blocked for further commands. In this case, you must interrupt processing on the remote channel first in order to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the R&S FSMR3000 on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

- **Visa:** `viClear()`
- **GPIB:** `ibclr()`
- **RSIB:** `RSDLLibclr()`

Now you can send the `ABORt` command on the remote channel performing the measurement.

**Example:** `ABOR; :INIT:IMM`  
Aborts the current measurement and immediately starts a new one.

**Example:** `ABOR; *WAI`  
`INIT:IMM`  
Aborts the current measurement and starts a new one once abortion has been completed.

**Usage:** Event

### **INITiate<n>:CONMeas**

This command restarts a (single) measurement that has been stopped (using `ABORt`) or finished in single measurement mode.

The measurement is restarted at the beginning, not where the previous measurement was stopped.

As opposed to `INITiate<n>[:IMMediate]`, this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using maxhold or averaging functions.

**Suffix:**  
<n> irrelevant

**Manual operation:** See "[Continue Single Sweep](#)" on page 76

**INITiate<n>:CONTInuous <State>**

This command controls the measurement mode for an individual channel.

Note that in single measurement mode, you can synchronize to the end of the measurement with \*OPC, \*OPC? or \*WAI. In continuous measurement mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous measurement mode in remote control, as results like trace data or markers are only valid after a single measurement end synchronization.

For details on synchronization see [Remote control via SCPI](#).

**Suffix:**

<n> irrelevant

**Parameters:**

<State> ON | OFF | 0 | 1  
**ON | 1**  
 Continuous measurement  
**OFF | 0**  
 Single measurement  
 \*RST: 1

**Example:**

```
INIT:CONT OFF
Switches the measurement mode to single measurement.
INIT:CONT ON
Switches the measurement mode to continuous measurement.
```

**Manual operation:** See "[Continuous Sweep / Run Cont](#)" on page 75

**INITiate<n>:[IMMEDIATE]**

This command starts a (single) new measurement.

With measurement count or average count > 0, this means a restart of the corresponding number of measurements. With trace mode MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

You can synchronize to the end of the measurement with \*OPC, \*OPC? or \*WAI.

For details on synchronization see [Remote control via SCPI](#).

**Suffix:**

<n> irrelevant

**Manual operation:** See "[Single Sweep / Run Single](#)" on page 75

**INITiate:SEQuencer:ABORt**

This command stops the currently active sequence of measurements.

You can start a new sequence any time using [INITiate:SEQuencer:IMMEDIATE](#) on page 168.

**Usage:** Event

**INITiate:SEQuencer:IMMEDIATE**

This command starts a new sequence of measurements by the Sequencer.

Its effect is similar to the `INITiate<n>[:IMMEDIATE]` command used for a single measurement.

Before this command can be executed, the Sequencer must be activated (see `SYSTem:SEQuencer` on page 169).

**Example:**

```
SYST:SEQ ON
```

Activates the Sequencer.

```
INIT:SEQ:MODE SING
```

Sets single sequence mode so each active measurement is performed once.

```
INIT:SEQ:IMM
```

Starts the sequential measurements.

**INITiate:SEQuencer:MODE <Mode>**

Defines the capture mode for the entire measurement sequence and all measurement groups and channels it contains.

**Note:** To synchronize to the end of a measurement sequence using `*OPC`, `*OPC?` or `*WAI`, use `SINGLE` Sequencer mode.

**Parameters:**

<Mode>

**SINGLE**

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence is finished.

**CONTInuous**

Each measurement group is started one after the other in the order of definition. All measurement channels in a group are started simultaneously and performed once. After *all* measurements are completed, the next group is started. After the last group, the measurement sequence restarts with the first one and continues until it is stopped explicitly.

```
*RST: CONTInuous
```

**[SENSe:]SWEep:COUNT <SweepCount>**

This command defines the number of measurements that the application uses to average traces.

See also [Chapter 4.5.1, "Trace statistics"](#), on page 51.

In continuous measurement mode, the application calculates the moving average over the average count.



In single measurement mode, the application stops the measurement and calculates the average after the average count has been reached.

**Parameters:**

<SweepCount> When you set a sweep count of 0 or 1, the R&S FSMR3 performs one single measurement in single measurement mode. In continuous measurement mode, if the sweep count is set to 0, a moving average over 10 measurements is performed.

Range: 0 to 200000

\*RST: 0

<SweepCount> If you set a sweep count of 0 or 1, the application performs one single sweep in single sweep mode.

In continuous sweep mode, if the average count is set to 0, a moving average over 10 sweeps is performed.

Range: 0 to 100000

\*RST: 0

**Example:**

```
SWE:COUN 64
```

Sets the number of measurements to 64.

```
INIT:CONT OFF
```

Switches to single measurement mode.

```
INIT;*WAI
```

Starts a measurement and waits for its end.

**Manual operation:** See "[Sweep/Average Count](#)" on page 76

**[SENSe:]SWEep:COUNT:CURRENT?**

This query returns the current number of started sweeps or measurements. This command is only available if a sweep count value is defined and the instrument is in single sweep mode.

**Return values:**

<CurrentCount>

**Usage:** Query only

**SYSTem:SEQuencer <State>**

This command turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (`INIT:SEQ...`) are executed, otherwise an error occurs.

A detailed programming example is provided in the "Operating Modes" chapter in the R&S FSMR3 User Manual.

**Parameters:**

<State> ON | OFF | 0 | 1

**ON | 1**

The Sequencer is activated and a sequential measurement is started immediately.

**OFF | 0**

The Sequencer is deactivated. Any running sequential measurements are stopped. Further Sequencer commands (INIT:SEQ...) are not available.

\*RST: 0

**Example:**

SYST:SEQ ON

Activates the Sequencer.

INIT:SEQ:MODE SING

Sets single Sequencer mode so each active measurement is performed once.

INIT:SEQ:IMM

Starts the sequential measurements.

SYST:SEQ OFF

## 9.12 Configuring the results

Some evaluation methods require or allow for additional settings to configure the result display.

- [Selecting the pulse](#).....170
- [Defining the result range](#).....171
- [Configuring a parameter distribution](#).....172
- [Configuring a parameter spectrum](#).....179
- [Configuring a pulse-pulse spectrum](#).....186
- [Configuring a parameter trend](#).....188
- [Configuring a result range spectrum](#).....207
- [Configuring the statistics and parameter tables](#).....208
- [Configuring limit checks](#).....227
- [Configuring the Y-Axis scaling and units](#).....231

### 9.12.1 Selecting the pulse

The pulse traces (frequency, magnitude and pulse vs. time) always display the trace for one specific pulse, namely the currently selected pulse. To select a pulse, use the following command:

[\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:SElected](#).....170

---

**[SENSe:]TRACe:MEASurement:DEFine:PULSe:SElected <PulseNumber>**

Selects a particular pulse for which the traces, parameters and results are displayed, or queries the number of the selected pulse.

The pulse number is always relative to the current detection range, that is: pulse number 1 is the first pulse within the detection range in the capture buffer.

Query the number of the current or all detected pulses using [\[SENSe:\]PULSe:NUMBer?](#) on page 268 or [\[SENSe:\]PULSe:ID?](#) on page 268.

Note that this command causes an error if no measurement results are available.

**Parameters:**

<PulseNumber>      Range:      0 to number of detected pulses  
                          \*RST:      0

**Example:**                SENS:TRAC:MEAS:DEF:PULS:SEL 2

## 9.12.2 Defining the result range

The result range determines which data is displayed on the screen (see also "[Measurement range vs. result range vs. detection range](#)" on page 15). This range applies to the pulse magnitude, frequency and phase vs time displays.

[SENSe:]TRACe:MEASurement:DEFine:RRANge:ALIGNment.....	171
[SENSe:]TRACe:MEASurement:DEFine:RRANge:AUTO.....	171
[SENSe:]TRACe:MEASurement:DEFine:RRANge:LENGth.....	172
[SENSe:]TRACe:MEASurement:DEFine:RRANge:OFFSet.....	172
[SENSe:]TRACe:MEASurement:DEFine:RRANge:REFerence.....	172

---

### [SENSe:]TRACe:MEASurement:DEFine:RRANge:ALIGNment <Alignment>

Specifies the alignment with respect to the reference point used to define the result range.

**Parameters:**

<Alignment>            LEFT | CENTer | RIGHT

**LEFT**

The result range starts at the pulse center or selected edge.

**CENTer**

The result range is centered around the pulse center or selected edge.

**RIGHT**

The result range ends at the pulse center or selected edge.

\*RST:            CENTer

**Manual operation:**    See "[Alignment](#)" on page 89

---

### [SENSe:]TRACe:MEASurement:DEFine:RRANge:AUTO <State>

If enabled, the result range length is determined automatically according to the width of the selected pulse (see [\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:SELeCted](#) on page 170).

**Parameters:**

<State>                **OFF**  
                          Switch the function off  
                          **ON**  
                          Switch the function on

**ONCE**

Execute the function once and then switch it off

\*RST: ON

**Manual operation:** See ["Auto Scale Continuous \(All\)"](#) on page 86  
 See ["Auto Scale Once \(All\)"](#) on page 86  
 See ["Automatic Range Scaling"](#) on page 89

**[SENSe:]TRACe:MEASurement:DEFine:RRANge:LENGth** <Length>

**Parameters:**

<Length> \*RST: 30 us  
 Default unit: S

**Manual operation:** See ["Length"](#) on page 89

**[SENSe:]TRACe:MEASurement:DEFine:RRANge:OFFSet** <Offset>

The offset (in seconds) from the reference point at which the pulse result range is aligned.

**Parameters:**

<Offset> \*RST: 0  
 Default unit: S

**Manual operation:** See ["Offset"](#) on page 89

**[SENSe:]TRACe:MEASurement:DEFine:RRANge:REFerence** <Reference>

Specifies the reference point used to define the result range.

**Parameters:**

<Reference> **RISE**  
 The result range is defined in reference to the rising edge.

**CENTer**  
 The result range is defined in reference to the center of the pulse top.

**FALL**  
 The result range is defined in reference to the falling edge.

\*RST: CENTer

**Manual operation:** See ["Result Range Reference Point"](#) on page 89

### 9.12.3 Configuring a parameter distribution

The parameter distribution evaluations allow you to visualize the number of occurrences for a specific parameter value within the current capture buffer. For each parameter distribution window you can configure which measured parameter is to be displayed.

Useful commands for configuring a parameter distribution described elsewhere:

- [LAYout:ADD\[:WINDow\]?](#) on page 236

#### Remote commands exclusive to configuring a parameter distribution:

<a href="#">CALCulate&lt;n&gt;:DISTribution:EMODEl</a> .....	173
<a href="#">CALCulate&lt;n&gt;:DISTribution:FREQUency</a> .....	174
<a href="#">CALCulate&lt;n&gt;:DISTribution:LLINes[:STATe]</a> .....	175
<a href="#">CALCulate&lt;n&gt;:DISTribution:NBINs</a> .....	175
<a href="#">CALCulate&lt;n&gt;:DISTribution:PHASe</a> .....	176
<a href="#">CALCulate&lt;n&gt;:DISTribution:POWer</a> .....	176
<a href="#">CALCulate&lt;n&gt;:DISTribution:TIMing</a> .....	178

---

#### **CALCulate<n>:DISTribution:EMODEl** <XAxis>, <YAxis>

Configures the Parameter Distribution result display.

##### **Suffix:**

<n>                    1..n  
[Window](#)

##### **Setting parameters:**

<XAxis>            RBPTime | RLPTime | RMPTime | RHPTime | RTPTime |  
 RLPLLevel | RMPLevel | RHPLLevel | RTPLevel | FBPTime |  
 FLPTime | FMPTime | FHPTime | FTPTime | FLPLLevel |  
 FMPLevel | FHPLevel | FTPLevel

##### **RBPTime**

Rise Base Point Time

##### **RLPTime**

Rise Low Point Time

##### **RMPTime**

Rise Mid Point Time

##### **RHPTime**

Rise High Point Time

##### **RTPTime**

Rise Top Point Time

##### **RLPLLevel**

Rise Low Point Level

##### **RMPLevel**

Rise Mid Point Level

##### **RHPLLevel**

Rise High Point Level

##### **RTPLevel**

Rise Top Point Level

##### **FBPTime**

Fall Base Point Time

##### **FLPTime**

Fall Low Point Time

	<b>FMPTime</b>
	Fall Mid Point Time
	<b>FHPTime</b>
	Fall High Point Time
	<b>FTPTime</b>
	Fall Top Point Time
	<b>FLPLevel</b>
	Fall Low Point Level
	<b>FMPLevel</b>
	Fall Mid Point Level
	<b>FHPLevel</b>
	Fall High Point Level
	<b>FTPLLevel</b>
	Fall Top Point Level
<YAxis>	COUNT   OCCurrence
	Parameter to be displayed on the y-axis.
	<b>COUNT</b>
	Number of pulses in which the parameter value occurred.
	<b>OCCurrence</b>
	Percentage of all measured pulses in which the parameter value occurred.
	*RST:       COUNT
<b>Usage:</b>	Setting only

---

### **CALCulate<n>:DISTribution:FREQUENCY <XAxis>, <YAxis>**

Configures the Parameter Distribution result display.

**Suffix:**

<n>                   1..n  
[Window](#)

**Setting parameters:**

<XAxis>           POINT | PPFrequency | RERRor | PERRor | DEVIation | CRATe  
 Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.3, "Frequency parameters"](#), on page 23.

**POINT**

Frequency at measurement point

**PPFrequency**

Pulse-Pulse Frequency Difference

**RERRor**

Frequency Error (RMS)

**PERRor**

Frequency Error (Peak)

	<b>DEVIation</b>
	Frequency Deviation
	<b>CRATe</b>
	Chirp Rate
	*RST:        POINT
<YAxis>	COUNT   OCCurrence
	Parameter to be displayed on the y-axis.
	<b>COUNT</b>
	Number of pulses in which the parameter value occurred.
	<b>OCCurrence</b>
	Percentage of all measured pulses in which the parameter value occurred.
	*RST:        COUNT
<b>Usage:</b>	Setting only
<b>Manual operation:</b>	See " <a href="#">X-Axis</a> " on page 92

**CALCulate<n>:DISTribution:LLINes[:STATe] <State>**

Hides or shows the limit lines in the selected Parameter Trend or Parameter Distribution result display.

Note that this function only has an effect on the visibility of the lines in the graphical displays, it does not affect the limit check in general or the display of the limit check results in the table displays.

**Suffix:**

<n>                    1..n  
[Window](#)

**Parameters:**

<State>                ON | OFF | 1 | 0  
 \*RST:                1

**Example:**            CALC:DIST:LLIN ON

**Manual operation:** See "[Display Limit Lines](#)" on page 93

**CALCulate<n>:DISTribution:NBINs <# bins>**

This command sets the number of bins used to calculate the histogram

**Suffix:**

<n>                    1..n  
[Window](#)

**Parameters:**

<# bins>                Range:        1 to 1000  
 \*RST:                100

**Manual operation:** See "[Histogram Bins](#)" on page 93

**CALCulate<n>:DISTribution:PHASe** <XAxis>, <YAxis>

Configures the Parameter Distribution result display.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<XAxis> POINT | PPPHase | RERRor | PERRor | DEViation  
 Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.4, "Phase parameters"](#), on page 24.

**POINT**

Pulse phase at measurement point

**PPPHase**

Pulse-Pulse Phase Difference

**RERRor**

Phase Error (RMS)

**PERRor**

Phase Error (Peak)

**DEViation**

Phase Deviation

\*RST: POINT

<YAxis> COUNT | OCCurrence  
 Parameter to be displayed on the y-axis.

**COUNT**

Number of pulses in which the parameter value occurred.

**OCCurrence**

Percentage of all measured pulses in which the parameter value occurred.

\*RST: COUNT

**Usage:** Setting only

**CALCulate<n>:DISTribution:POWER** <XAxis>, <YAxis>

Configures the Parameter Distribution result display.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<XAxis> TOP | BASE | AMPLitude | ON | AVG | MIN | MAX | PON |  
 PAVG | PMIN | ADPercent | ADDB | RPERcent | RDB |  
 OPERcent | ODB | POINT | PPRatio | I | Q



Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.4, "Phase parameters"](#), on page 24.

**TOP**

Top Power

**BASE**

Base Power

**AMPLitude**

Pulse Amplitude

**ON**

Average ON Power

**AVG**

Average Tx Power

**MIN**

Minimum Power

**MAX**

Peak Power

**PON**

Peak-to-Avg ON Power Ratio

**PAVG**

Peak-to-Average Tx Power Ratio

**PMIN**

Peak-to-Min Power Ratio

**ADPercent**

Droop in %

**ADDB**

Droop in dB

**RPERcent**

Ripple in %

**RDB**

Ripple in dB

**OPERcent**

Overshoot in %

**ODB**

Overshoot in dB

**POINT**

Pulse power measured at measurement point

**PPRatio**

Pulse-to-Pulse Power Difference

\*RST: TOP

<YAxis>

COUNT | OCCurrence

Parameter to be displayed on the y-axis.

**COUNT**

Number of pulses in which the parameter value occurred.

**OCCurrence**

Percentage of all measured pulses in which the parameter value occurred.

\*RST: COUNT

**Usage:** Setting only

**CALCulate<n>:DISTribution:TIMing <XAxis>, <YAxis>**

Configures the Parameter Distribution result display.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<XAxis> TSTamp | SETTling | RISE | FALL | PWIDth | OFF | DRATio | DCYCLE | PRI | PRF  
Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.1, "Timing parameters"](#), on page 16.

**TSTamp**

Timestamp

**SETTling**

Settling Time

**RISE**

Rise Time

**FALL**

Fall Time

**PWIDth**

Pulse Width (ON Time)

**OFF**

Off Time

**DRATio**

Duty Ratio

**DCYCLE**

Duty Cycle (%)

**PRI**

Pulse Repetition Interval

**PRF**

Pulse Repetition Frequency (Hz)

\*RST: RISE

<YAxis> COUNT | OCCurrence

Parameter to be displayed on the y-axis.

**COUNT**

Number of pulses in which the parameter value occurred.

**OCCurrence**

Percentage of all measured pulses in which the parameter value occurred.

\*RST: COUNT

**Usage:** Setting only

### 9.12.4 Configuring a parameter spectrum

The parameter spectrum evaluations allow you to visualize the spectrum of results for a specific parameter for all measured pulses within the current capture buffer. For each parameter spectrum window you can configure which measured parameter is to be displayed.

Useful commands for configuring a parameter spectrum described elsewhere:

- [LAYout:ADD\[:WINDow\]? on page 236](#)

#### Remote commands exclusive to configuring a parameter spectrum:

<a href="#">CALCulate&lt;n&gt;:PSPectrum:AUTO</a> .....	179
<a href="#">CALCulate&lt;n&gt;:PSPectrum:BLOCKsize</a> .....	180
<a href="#">CALCulate&lt;n&gt;:PSPectrum:EMODEl</a> .....	180
<a href="#">CALCulate&lt;n&gt;:PSPectrum:FREQUency</a> .....	181
<a href="#">CALCulate&lt;n&gt;:PSPectrum:GTHReshold</a> .....	182
<a href="#">CALCulate&lt;n&gt;:PSPectrum:MAXFrequency</a> .....	182
<a href="#">CALCulate&lt;n&gt;:PSPectrum:PHASe</a> .....	182
<a href="#">CALCulate&lt;n&gt;:PSPectrum:POWEr</a> .....	183
<a href="#">CALCulate&lt;n&gt;:PSPectrum:RBW?</a> .....	184
<a href="#">CALCulate&lt;n&gt;:PSPectrum:STHReshold</a> .....	184
<a href="#">CALCulate&lt;n&gt;:PSPectrum:TIMing</a> .....	184
<a href="#">CALCulate&lt;n&gt;:PSPectrum:WINDow</a> .....	185

---

#### **CALCulate<n>:PSPectrum:AUTO <State>**

Enables or disables automatic configuration for Parameter Spectrum displays. If enabled, the commands for individual settings are not available.

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 1

**Manual operation:** See "[Full Auto](#)" on page 95

**CALCulate<n>:PSPectrum:BLOCKsize <BlockSize>**

Defines the size of blocks used in Pulse-to-Pulse Spectrum calculation. The block size also determines the resulting RBW of the Pulse-to-Pulse Spectrum (see [CALCulate<n>:PSPectrum:RBW?](#) on page 184).

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<BlockSize> Range: 8 to 100k  
\*RST: 1024

**Manual operation:** See "[Block Size](#)" on page 95

**CALCulate<n>:PSPectrum:EMODEl <Param>****Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<Param> RBPTime | RLPTime | RMPTime | RHPTime | RTPTime |  
RLPLLevel | RMPLevel | RHPLLevel | RTPLevel | FBPTime |  
FLPTime | FMPTime | FHPTime | FTPTime | FLPLLevel |  
FMPLevel | FHPLLevel | FTPLevel

**RBPTime**

Rise Base Point Time

**RLPTime**

Rise Low Point Time

**RMPTime**

Rise Mid Point Time

**RHPTime**

Rise High Point Time

**RTPTime**

Rise Top Point Time

**RLPLLevel**

Rise Low Point Level

**RMPLevel**

Rise Mid Point Level

**RHPLLevel**

Rise High Point Level

**RTPLevel**

Rise Top Point Level

**FBPTime**

Fall Base Point Time

**FLPTime**

Fall Low Point Time

**FMPTime**  
Fall Mid Point Time

**FHPTime**  
Fall High Point Time

**FTPTime**  
Fall Top Point Time

**FLPLevel**  
Fall Low Point Level

**FMPLevel**  
Fall Mid Point Level

**FHPLevel**  
Fall High Point Level

**FTPLevel**  
Fall Top Point Level

---

**CALCulate<n>:PSPectrum:FREQuency <Param>**

Configures the Parameter Spectrum result display.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<Param> POINT | PPFRequency | RERRor | PERRor | DEVIation | CRATe  
Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.3, "Frequency parameters"](#), on page 23.

**POINT**  
Frequency at measurement point

**PPFRequency**  
Pulse-Pulse Frequency Difference

**RERRor**  
Frequency Error (RMS)

**PERRor**  
Frequency Error (Peak)

**DEVIation**  
Frequency Deviation

**CRATe**  
Chirp Rate

\*RST: POINT

**Manual operation:** See "[Parameter](#)" on page 94

**CALCulate<n>:PSPectrum:GTHReshold <GapThreshold>**

Defines the minimum time that must pass before a gap is detected as such for Pulse-to-Pulse Spectrum displays.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<GapThreshold> Range: minimum spacing between pulses to meas time  
 Default unit: S

**Manual operation:** See "[Gap Threshold](#)" on page 95

**CALCulate<n>:PSPectrum:MAXFrequency <MaxFrequency>**

Defines the maximum frequency span for which the Pulse-to-Pulse Spectrum is calculated. Internally, the span is limited by the number of possible interpolation samples (100 000).

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<MaxFrequency> Range: >0 to 1/10 of sample rate  
 Default unit: HZ

**Manual operation:** See "[Maximum Frequency](#)" on page 95

**CALCulate<n>:PSPectrum:PHASe <Param>**

Configures the Parameter Spectrum result display.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<Param> POINT | PPPHase | RERRor | PERRor | DEVIation  
 Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.4, "Phase parameters"](#), on page 24.

**POINT**

Pulse phase at measurement point

**PPPHase**

Pulse-Pulse Phase Difference

**RERRor**

Phase Error (RMS)

**PERRor**

Phase Error (Peak)

**DEVIation**

Phase Deviation

\*RST: POINT

**CALCulate<n>:PSPectrum:POWER <Param>**

Configures the Parameter Spectrum result display.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<Param> TOP | BASE | AMPLitude | ON | AVG | MIN | MAX | PON |  
 PAVG | PMIN | ADPercent | ADDB | RPERcent | RDB |  
 OPERcent | ODB | POINT | PPRatio | I | Q

Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.4, "Phase parameters"](#), on page 24.

**TOP**

Top Power

**BASE**

Base Power

**AMPLitude**

Pulse Amplitude

**ON**

Average ON Power

**AVG**

Average Tx Power

**MIN**

Minimum Power

**MAX**

Peak Power

**PON**

Peak-to-Avg ON Power Ratio

**PAVG**

Peak-to-Average Tx Power Ratio

**PMIN**

Peak-to-Min Power Ratio

**ADPercent**

Droop in %

**ADDB**

Droop in dB

**RPERcent**

Ripple in %

**RDB**

Ripple in dB

**OPERcent**

Overshoot in %

**ODB**

Overshoot in dB

**POINT**

Pulse power measured at measurement point

**PPRatio**

Pulse-to-Pulse Power Difference

\*RST: TOP

---

**CALCulate<n>:PSPectrum:RBW?**

Queries the resulting resolution bandwidth for the spectrum. Depends on the block size (see [CALCulate<n>:PSPectrum:BLOCKsize](#) on page 180).

**Suffix:**

<n> 1..n  
[Window](#)

**Return values:**

<RBW> Default unit: Hz

**Usage:** Query only

---

**CALCulate<n>:PSPectrum:STHReshold <Threshold>**

Defines the minimum section size for Pulse-to-Pulse Spectrum displays. Sections that are smaller than the threshold are ignored and considered to be part of the detected gap.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<Threshold> Minimum section size as a percentage of the block size (see [CALCulate<n>:PSPectrum:BLOCKsize](#) on page 180)

Range: 0 to 100

\*RST: 50

**Manual operation:** See "[Section Threshold](#)" on page 95

---

**CALCulate<n>:PSPectrum:TIMing <Param>**

Configures the Parameter Spectrum result display.



**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<Param> TSTamp | SETTling | RISE | FALL | PWIDth | OFF | DRATio | DCYClE | PRI | PRF  
 Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.1, "Timing parameters"](#), on page 16.

**TSTamp**

Timestamp

**SETTling**

Settling Time

**RISE**

Rise Time

**FALL**

Fall Time

**PWIDth**

Pulse Width (ON Time)

**OFF**

Off Time

**DRATio**

Duty Ratio

**DCYClE**

Duty Cycle (%)

**PRI**

Pulse Repetition Interval

**PRF**

Pulse Repetition Frequency (Hz)

\*RST: RISE

**CALCulate<n>:PSPectrum:WINDow <WindowType>**

Defines the used FFT window type for Pulse-to-Pulse Spectrum displays

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<WindowType> RECTangle | BARTlett | HAMMing | HANNing | BLACkman  
 \*RST: BLACkman

**Manual operation:** See "[Window Type](#)" on page 95

### 9.12.5 Configuring a pulse-pulse spectrum

The pulse-to-pulse spectrum evaluation allows you to visualize the spectrum of I and Q-based results for all measured pulses within the current capture buffer.

Useful commands for configuring a pulse-to-pulse spectrum distribution described elsewhere:

- [LAYout:ADD\[:WINDow\]?](#) on page 236

#### Remote commands exclusive to configuring a pulse-to-pulse spectrum:

<a href="#">CALCulate&lt;n&gt;:PPSPpectrum:AUTO</a> .....	186
<a href="#">CALCulate&lt;n&gt;:PPSPpectrum:GTHReshold</a> .....	186
<a href="#">CALCulate&lt;n&gt;:PPSPpectrum:MAXFrequency</a> .....	187
<a href="#">CALCulate&lt;n&gt;:PPSPpectrum:RBW?</a> .....	187
<a href="#">CALCulate&lt;n&gt;:PPSPpectrum:STHReshold</a> .....	187
<a href="#">CALCulate&lt;n&gt;:PPSPpectrum:WINDow</a> .....	187

---

#### **CALCulate<n>:PPSPpectrum:AUTO <State>**

Enables or disables automatic configuration for Pulse-to-Pulse Spectrum displays. If enabled, the commands for individual settings are not available.

##### Suffix:

<n> 1..n  
[Window](#)

##### Parameters:

<State> ON | OFF | 0 | 1  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on  
\*RST: 0

**Example:** CALC:PPSP:AUTO OFF

---

#### **CALCulate<n>:PPSPpectrum:GTHReshold <GapThreshold>**

Defines the minimum time that must pass before a gap is detected as such.

##### Suffix:

<n> 1..n  
[Window](#)

##### Parameters:

<GapThreshold> Range: minimum spacing between pulses to meas time  
Default unit: S

**Example:** CALC:PPSP:GTHR 100us

---

**CALCulate<n>:PPSPpectrum:MAXFrequency <MaxFrequency>**

Defines the maximum frequency span for which the Spectrum is calculated. Internally, the span is limited by the number of possible interpolation samples (100 000).

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<MaxFrequency> Range: >0 to 1/10 of sample rate  
Default unit: HZ

**Example:** CALC:PPSP:MAXF 10000Hz

---

**CALCulate<n>:PPSPpectrum:RBW?**

Queries the resulting resolution bandwidth for the spectrum. Depends on the block size (see [CALCulate<n>:PPSPpectrum:BLOCKsize](#) on page 180).

**Suffix:**

<n> 1..n  
Window

**Return values:**

<RBW>

**Example:** CALC:PPSP:RBW?

**Usage:** Query only

---

**CALCulate<n>:PPSPpectrum:STHReshold <Threshold>**

Defines the minimum section size. Sections that are smaller than the threshold are ignored and considered to be part of the detected gap.

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<Threshold> Minimum section size as a percentage of the block size (see [CALCulate<n>:PPSPpectrum:BLOCKsize](#) on page 180)

Range: 0 to 100

\*RST: 50

**Example:** CALC:PPSP:STHR 0.1

---

**CALCulate<n>:PPSPpectrum:WINDOW <WindowType>**

Defines the used FFT window type for pulse-to-pulse spectrum displays.

**Suffix:**

<n> 1..n  
Window

**Setting parameters:**

<WindowType> RECTangle | BARTlett | HAMMing | HANNing | BLACkman  
\*RST: BLACkman

**Example:**

CALC:PPSP:WIND BART

### 9.12.6 Configuring a parameter trend

The parameter trend evaluations allow you to visualize changes in a specific parameter for all measured pulses within the current capture buffer. For each parameter trend window you can configure which measured parameter is to be displayed.

Useful commands for configuring a parameter trend described elsewhere:

- [LAYout:ADD\[:WINDow\]?](#) on page 236

#### Remote commands exclusive to configuring a parameter trend:

<a href="#">CALCulate&lt;n&gt;:TRENd:DSTyle</a> .....	188
<a href="#">CALCulate&lt;n&gt;:TRENd:EMODel</a> .....	189
<a href="#">CALCulate&lt;n&gt;:TRENd:EMODel:X</a> .....	191
<a href="#">CALCulate&lt;n&gt;:TRENd:EMODel:Y</a> .....	192
<a href="#">CALCulate&lt;n&gt;:TRENd:FREQuency</a> .....	193
<a href="#">CALCulate&lt;n&gt;:TRENd:FREQuency:X</a> .....	194
<a href="#">CALCulate&lt;n&gt;:TRENd:FREQuency:Y</a> .....	195
<a href="#">CALCulate&lt;n&gt;:TRENd:LLINes[:STATe]</a> .....	196
<a href="#">CALCulate&lt;n&gt;:TRENd:PHASe</a> .....	196
<a href="#">CALCulate&lt;n&gt;:TRENd:PHASe:X</a> .....	198
<a href="#">CALCulate&lt;n&gt;:TRENd:PHASe:Y</a> .....	198
<a href="#">CALCulate&lt;n&gt;:TRENd:POWer</a> .....	199
<a href="#">CALCulate&lt;n&gt;:TRENd:POWer:X</a> .....	201
<a href="#">CALCulate&lt;n&gt;:TRENd:POWer:Y</a> .....	202
<a href="#">CALCulate&lt;n&gt;:TRENd:TIMing</a> .....	204
<a href="#">CALCulate&lt;n&gt;:TRENd:TIMing:X</a> .....	205
<a href="#">CALCulate&lt;n&gt;:TRENd:TIMing:Y</a> .....	206

---

#### **CALCulate<n>:TRENd:DSTyle** <Type>

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<Type> AUTO | DOTS | LINes | DLINes

**CALCulate<n>:TRENd:EMODEl <YAxis>, <XAxis>**

Configures the Parameter Trend result display for envelope model trends. This command defines both x-axis and y-axis parameters in one step. It is equivalent to the two subsequent commands:

CALCulate<n>:TRENd:EMODEl:X TSTamp | PNUMber (see [CALCulate<n>:TRENd:EMODEl:X](#) on page 191)

CALCulate<n>:TRENd:EMODEl:Y <YAxis> (see [CALCulate<n>:TRENd:EMODEl:Y](#) on page 192)

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<YAxis> RBPTime | RLPTime | RMPTime | RHPTime | RTPTime |  
RLPLLevel | RMPLevel | RHPLLevel | RTPLevel | FBPTime |  
FLPTime | FMPTime | FHPTime | FTPTime | FLPLLevel |  
FMPLevel | FHPLevel | FTPLLevel

**RBPTime**

Rise Base Point Time

**RLPTime**

Rise Low Point Time

**RMPTime**

Rise Mid Point Time

**RHPTime**

Rise High Point Time

**RTPTime**

Rise Top Point Time

**RLPLLevel**

Rise Low Point Level

**RMPLevel**

Rise Mid Point Level

**RHPLLevel**

Rise High Point Level

**RTPLevel**

Rise Top Point Level

**FBPTime**

Fall Base Point Time

**FLPTime**

Fall Low Point Time

**FMPTime**

Fall Mid Point Time

**FHPTime**

Fall High Point Time

	<b>FTPTime</b>
	Fall Top Point Time
	<b>FLPLevel</b>
	Fall Low Point Level
	<b>FMPLevel</b>
	Fall Mid Point Level
	<b>FHPLevel</b>
	Fall High Point Level
	<b>FTPLevel</b>
	Fall Top Point Level
<XAxis>	PNUMber   TSTamp   SETTling   RISE   FALL   PWIDth   OFF   DRATio   DCYCLE   PRI   PRF
	Pulse parameter to be displayed on the x-axis. For a description of the available parameters see <a href="#">Chapter 3.1.1, "Timing parameters"</a> , on page 16.
	<b>TSTamp</b>
	Timestamp
	<b>PNUMber</b>
	The pulse numbers are represented on the x-axis (available numbers can be queried using <a href="#">[SENSe:] PULSe: NUMBer?</a> on page 268). Intervals without pulses are not displayed.
	<b>SETTling</b>
	Settling Time
	<b>RISE</b>
	Rise Time
	<b>FALL</b>
	Fall Time
	<b>PWIDth</b>
	Pulse Width (ON Time)
	<b>OFF</b>
	Off Time
	<b>DRATio</b>
	Duty Ratio
	<b>DCYCLE</b>
	Duty Cycle (%)
	<b>PRI</b>
	Pulse Repetition Interval
	<b>PRF</b>
	Pulse Repetition Frequency (Hz)
	*RST: PNUMber
<b>Usage:</b>	Setting only

**CALCulate<n>:TREND:EMODEl:X <XAxis>**

Configures the x-axis of the Parameter Trend result display.

The y-axis is configured using the `CALCulate<n>:TREND:<GroupName>:Y` commands.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<XAxis> RBPTime | RLPTime | RMPTime | RHPTime | RTPTime |  
 RLPLLevel | RMPLevel | RHPLLevel | RTPLevel | FBPTime |  
 FLPTime | FMPTime | FHPTime | FTPTime | FLPLLevel |  
 FMPLevel | FHPLevel | FTPLevel

**RBPTime**

Rise Base Point Time

**RLPTime**

Rise Low Point Time

**RMPTime**

Rise Mid Point Time

**RHPTime**

Rise High Point Time

**RTPTime**

Rise Top Point Time

**RLPLLevel**

Rise Low Point Level

**RMPLevel**

Rise Mid Point Level

**RHPLLevel**

Rise High Point Level

**RTPLevel**

Rise Top Point Level

**FBPTime**

Fall Base Point Time

**FLPTime**

Fall Low Point Time

**FMPTime**

Fall Mid Point Time

**FHPTime**

Fall High Point Time

**FTPTime**

Fall Top Point Time

**FLPLLevel**

Fall Low Point Level

**FMPLevel**

Fall Mid Point Level

**FHPLevel**

Fall High Point Level

**FTPLevel**

Fall Top Point Level

**Usage:** Setting only**CALCulate<n>:TRENd:EMODEl:Y <YAxis>**

Configures the y-axis of the Parameter Trend result display.

The x-axis is configured using the `CALCulate<n>:TRENd:<GroupName>:X` commands.**Suffix:**<n> 1..n  
[Window](#)**Setting parameters:**<YAxis> RBPTime | RLPTime | RMPTime | RHPTime | RTPTime |  
RLPLLevel | RMPLevel | RHPLLevel | RTPLevel | FBPTime |  
FLPTime | FMPTime | FHPTime | FTPTime | FLPLLevel |  
FMPLevel | FHPLevel | FTPLevel**RBPTime**

Rise Base Point Time

**RLPTime**

Rise Low Point Time

**RMPTime**

Rise Mid Point Time

**RHPTime**

Rise High Point Time

**RTPTime**

Rise Top Point Time

**RLPLLevel**

Rise Low Point Level

**RMPLevel**

Rise Mid Point Level

**RHPLLevel**

Rise High Point Level

**RTPLevel**

Rise Top Point Level

**FBPTime**

Fall Base Point Time

**FLPTime**

Fall Low Point Time



**FMPTime**

Fall Mid Point Time

**FHPTime**

Fall High Point Time

**FTPTime**

Fall Top Point Time

**FLPLevel**

Fall Low Point Level

**FMPLevel**

Fall Mid Point Level

**FHPLevel**

Fall High Point Level

**FTPLevel**

Fall Top Point Level

**Usage:** Setting only**CALCulate<n>:TRENd:FREQuency <YAxis>, <XAxis>**

Configures the Parameter Trend result display for time trends. This command defines both x-axis and y-axis parameters in one step. It is equivalent to the two subsequent commands:

CALCulate<n>:TRENd:TIMing:X TStamp | PNUMBER (see [CALCulate<n>:TRENd:TIMing:X](#) on page 205)

CALCulate<n>:TRENd:FREQuency:Y <YAxis> (see [CALCulate<n>:TRENd:FREQuency:Y](#) on page 195)

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<YAxis> POINT | PPFRequency | RERRor | PERRor | DEVIation | CRATe  
Pulse parameter to be displayed on the y-axis. For a description of the available parameters see [Chapter 3.1.3, "Frequency parameters"](#), on page 23.

**POINT**

Frequency at measurement point

**PPFRequency**

Pulse-Pulse Frequency Difference

**RERRor**

Frequency Error (RMS)

**PERRor**

Frequency Error (Peak)

**DEVIation**

Frequency Deviation

	<b>CRATe</b> Chirp Rate *RST: POINT
<XAxis>	PNUMBER   TSTamp   SETTling   RISE   FALL   PWIDTH   OFF   DRATio   DCYCLE   PRI   PRF Pulse parameter to be displayed on the x-axis. For a description of the available parameters see <a href="#">Chapter 3.1.1, "Timing parameters"</a> , on page 16.
	<b>TSTamp</b> Timestamp
	<b>PNUMBER</b> The pulse numbers are represented on the x-axis (available numbers can be queried using <a href="#">[SENSe:] PULSe:NUMBER?</a> on page 268). Intervals without pulses are not displayed.
	<b>SETTling</b> Settling Time
	<b>RISE</b> Rise Time
	<b>FALL</b> Fall Time
	<b>PWIDTH</b> Pulse Width (ON Time)
	<b>OFF</b> Off Time
	<b>DRATio</b> Duty Ratio
	<b>DCYCLE</b> Duty Cycle (%)
	<b>PRI</b> Pulse Repetition Interval
	<b>PRF</b> Pulse Repetition Frequency (Hz) *RST: PNUMBER
<b>Usage:</b>	Setting only
<b>Manual operation:</b>	See <a href="#">"Y-Axis"</a> on page 96 See <a href="#">"X-Axis"</a> on page 97

---

**CALCulate<n>:TRENd:FREQuency:X <XAxis>**

Configures the x-axis of the Parameter Trend result display.

The y-axis is configured using the `CALCulate<n>:TRENd:<GroupName>:Y` commands.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<XAxis> POINT | PPFRequency | RERRor | PERRor | DEVIation | CRATe  
 Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.3, "Frequency parameters"](#), on page 23.

**POINT**

Frequency at measurement point

**PPFRequency**

Pulse-Pulse Frequency Difference

**RERRor**

Frequency Error (RMS)

**PERRor**

Frequency Error (Peak)

**DEVIation**

Frequency Deviation

**CRATe**

Chirp Rate

\*RST: POINT

**Example:**

CALC2:TREN:FREQ:X PERR

**Usage:**

Setting only

**Manual operation:**

See "[X-Axis](#)" on page 97

**CALCulate<n>:TRENd:FREQuency:Y <YAxis>**

Configures the y-axis of the Parameter Trend result display.

The x-axis is configured using the `CALCulate<n>:TRENd:<GroupName>:X` commands.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<YAxis> POINT | PPFRequency | RERRor | PERRor | DEVIation | CRATe  
 Pulse parameter to be displayed on the y-axis. For a description of the available parameters see [Chapter 3.1.3, "Frequency parameters"](#), on page 23.

**POINT**

Frequency at measurement point

**PPFRequency**

Pulse-Pulse Frequency Difference

**RERRor**

Frequency Error (RMS)

**PERRor**

Frequency Error (Peak)

**DEVIation**

Frequency Deviation

**CRATe**

Chirp Rate

\*RST: POINT

**Usage:** Setting only**Manual operation:** See "[Y-Axis](#)" on page 96**CALCulate<n>:TREND:LLINes[:STATe] <State>**

Hides or shows the limit lines in the selected Parameter Trend or Parameter Distribution result display.

Note that this function only has an effect on the visibility of the lines in the graphical displays, it does not affect the limit check in general or the display of the limit check results in the table displays.

**Suffix:**<n> [Window](#)**Parameters:**

&lt;State&gt; ON | OFF | 0 | 1

**OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

\*RST: 1

**Manual operation:** See "[Display Limit Lines](#)" on page 93**CALCulate<n>:TREND:PHASe <YAxis>, <XAxis>**

Configures the Parameter Trend result display for time trends. This command defines both x-axis and y-axis parameters in one step. It is equivalent to the two subsequent commands:

CALCulate<n>:TREND:TIMing:X TSTamp | PNUMber (see [CALCulate<n>:TREND:TIMing:X](#) on page 205)

CALCulate<n>:TREND:PHASe:Y <YAxis> (see [CALCulate<n>:TREND:PHASe:Y](#) on page 198)

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<YAxis> POINT | PPPHase | RERRor | PERRor | DEVIation  
 Pulse parameter to be displayed on the y-axis. For a description of the available parameters see [Chapter 3.1.4, "Phase parameters"](#), on page 24.

**POINT**

Pulse phase at measurement point

**PPPHase**

Pulse-Pulse Phase Difference

**RERRor**

Phase Error (RMS)

**PERRor**

Phase Error (Peak)

**DEVIation**

Phase Deviation

\*RST: POINT

<XAxis>

PNUMber | TSTamp | SETTling | RISE | FALL | PWIDth | OFF | DRATio | DCYCLE | PRI | PRF

Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.1, "Timing parameters"](#), on page 16.

**TSTamp**

Timestamp

**PNUMber**

The pulse numbers are represented on the x-axis (available numbers can be queried using [\[SENSe:\]PULSe:NUMBer?](#) on page 268). Intervals without pulses are not displayed.

**SETTling**

Settling Time

**RISE**

Rise Time

**FALL**

Fall Time

**PWIDth**

Pulse Width (ON Time)

**OFF**

Off Time

**DRATio**

Duty Ratio

**DCYCLE**

Duty Cycle (%)

**PRI**

Pulse Repetition Interval

**PRF**

Pulse Repetition Frequency (Hz)

\*RST: PNUMBER

**Usage:** Setting only**CALCulate<n>:TRENd:PHASe:X <XAxis>**

Configures the x-axis of the Parameter Trend result display.

The y-axis is configured using the `CALCulate<n>:TRENd:<GroupName>:Y` commands.**Suffix:**<n> 1..n  
[Window](#)**Setting parameters:**<XAxis> POINT | PPPHase | RERRor | PERRor | DEVIation  
Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.4, "Phase parameters"](#), on page 24.**POINT**

Pulse phase at measurement point

**PPPHase**

Pulse-Pulse Phase Difference

**RERRor**

Phase Error (RMS)

**PERRor**

Phase Error (Peak)

**DEVIation**

Phase Deviation

\*RST: POINT

**Example:** `CALC2:TREN:PHAS:X PERR`**Usage:** Setting only**CALCulate<n>:TRENd:PHASe:Y <YAxis>**

Configures the y-axis of the Parameter Trend result display.

The x-axis is configured using the `CALCulate<n>:TRENd:<GroupName>:X` commands.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<YAxis> POINT | PPPHase | RERRor | PERRor | DEVIation  
 Pulse parameter to be displayed on the y-axis. For a description of the available parameters see [Chapter 3.1.4, "Phase parameters"](#), on page 24.

**POINT**

Pulse phase at measurement point

**PPPHase**

Pulse-Pulse Phase Difference

**RERRor**

Phase Error (RMS)

**PERRor**

Phase Error (Peak)

**DEVIation**

Phase Deviation

\*RST: POINT

**Usage:** Setting only

**CALCulate<n>:TREND:POWER <YAxis>, <XAxis>**

Configures the Parameter Trend result display for time trends. This command defines both x-axis and y-axis parameters in one step. It is equivalent to the two subsequent commands:

CALCulate<n>:TREND:TIMing:X TSTamp | PNUMBER (see [CALCulate<n>:TREND:TIMing:X](#) on page 205)

CALCulate<n>:TREND:POWER:Y <YAxis> (see [CALCulate<n>:TREND:POWER:Y](#) on page 202)

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<YAxis> TOP | BASE | AMPLitude | ON | AVG | MIN | MAX | PON | PAVG | PMIN | ADPercent | ADDB | RPERcent | RDB | OPERcent | ODB | POINT | PPRatio | I | Q

Pulse parameter to be displayed on the y-axis. For a description of the available parameters see [Chapter 3.1.2, "Power/amplitude parameters"](#), on page 19.

**TOP**

Top Power

**BASE**

Base Power

**AMPLitude**

Pulse Amplitude

**ON**

Average ON Power

**AVG**

Average Tx Power

**MIN**

Minimum Power

**MAX**

Peak Power

**PON**

Peak-to-Avg ON Power Ratio

**PAVG**

Peak-to-Average Tx Power Ratio

**PMIN**

Peak-to-Min Power Ratio

**ADPercent**

Droop in %

**ADDB**

Droop in dB

**RPERcent**

Ripple in %

**RDB**

Ripple in dB

**OPERcent**

Overshoot in %

**ODB**

Overshoot in dB

**POINT**

Pulse power measured at measurement point

**PPRatio**

Pulse-to-Pulse Power Difference

\*RST: TOP

&lt;XAxis&gt;

PNUMBER | TSTamp | SETTling | RISE | FALL | PWIDth | OFF | DRATio | DCYCLE | PRI | PRF

Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.1, "Timing parameters"](#), on page 16.

**TSTamp**

Timestamp

**PNUMBER**

The pulse numbers are represented on the x-axis (available numbers can be queried using `[SENSe:]PULSe:NUMBER?` on page 268). Intervals without pulses are not displayed.



**SETTling**

Settling Time

**RISE**

Rise Time

**FALL**

Fall Time

**PWIDth**

Pulse Width (ON Time)

**OFF**

Off Time

**DRATio**

Duty Ratio

**DCYCLE**

Duty Cycle (%)

**PRI**

Pulse Repetition Interval

**PRF**

Pulse Repetition Frequency (Hz)

\*RST: PNUMBER

**Usage:** Setting only**CALCulate<n>:TREND:POWER:X <XAxis>**

Configures the x-axis of the Parameter Trend result display.

The y-axis is configured using the `CALCulate<n>:TREND:<GroupName>:Y` commands.**Suffix:**<n> 1..n  
[Window](#)**Setting parameters:**<XAxis> TOP | BASE | AMPLitude | ON | AVG | MIN | MAX | PON |  
PAVG | PMIN | ADPercent | ADDB | RPERcent | RDB |  
OPERcent | ODB | POINT | PPRatio | I | QPulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.2, "Power/amplitude parameters"](#), on page 19.**TOP**

Top Power

**BASE**

Base Power

**AMPLitude**

Pulse Amplitude

**ON**

Average ON Power

<b>AVG</b>	Average Tx Power
<b>MIN</b>	Minimum Power
<b>MAX</b>	Peak Power
<b>PON</b>	Peak-to-Avg ON Power Ratio
<b>PAVG</b>	Peak-to-Average Tx Power Ratio
<b>PMIN</b>	Peak-to-Min Power Ratio
<b>ADPercent</b>	Droop in %
<b>ADDB</b>	Droop in dB
<b>RPERcent</b>	Ripple in %
<b>RDB</b>	Ripple in dB
<b>OPERcent</b>	Overshoot in %
<b>ODB</b>	Overshoot in dB
<b>POINT</b>	Pulse power measured at measurement point
<b>PPRatio</b>	Pulse-to-Pulse Power Difference
*RST:	TOP

**Example:** `CALC2:TREN:POW:X ODB`

**Usage:** Setting only

---

#### **CALCulate<n>:TRENd:POWer:Y <YAxis>**

Configures the y-axis of the Parameter Trend result display.

The x-axis is configured using the `CALCulate<n>:TRENd:<GroupName>:X` commands.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<YAxis> TOP | BASE | AMPLitude | ON | AVG | MIN | MAX | PON |  
 PAVG | PMIN | ADPercent | ADDB | RPERcent | RDB |  
 OPERcent | ODB | POINT | PPRatio | I | Q

Pulse parameter to be displayed on the y-axis. For a description of the available parameters see [Chapter 3.1.2, "Power/amplitude parameters"](#), on page 19.

**TOP**

Top Power

**BASE**

Base Power

**AMPLitude**

Pulse Amplitude

**ON**

Average ON Power

**AVG**

Average Tx Power

**MIN**

Minimum Power

**MAX**

Peak Power

**PON**

Peak-to-Avg ON Power Ratio

**PAVG**

Peak-to-Average Tx Power Ratio

**PMIN**

Peak-to-Min Power Ratio

**ADPercent**

Droop in %

**ADDB**

Droop in dB

**RPERcent**

Ripple in %

**RDB**

Ripple in dB

**OPERcent**

Overshoot in %

**ODB**

Overshoot in dB

**POINT**

Pulse power measured at measurement point

**PPRatio**

Pulse-to-Pulse Power Difference

\*RST: TOP

**Usage:** Setting only**CALCulate<n>:TREND:TIMing <YAxis>, <XAxis>**

Configures the Parameter Trend result display for time trends. This command defines both x-axis and y-axis parameters in one step. It is equivalent to the two subsequent commands:

CALCulate<n>:TREND:TIMing:X TSTamp | PNUMBER (see [CALCulate<n>:TREND:TIMing:X](#) on page 205)

CALCulate<n>:TREND:TIMing:Y <YAxis> (see [CALCulate<n>:TREND:TIMing:Y](#) on page 206)

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<YAxis> TSTamp | SETTling | RISE | FALL | PWIDTH | OFF | DRATio | DCYCLE | PRI | PRF

Pulse parameter to be displayed on the y-axis. For a description of the available parameters see [Chapter 3.1.1, "Timing parameters"](#), on page 16.

**TSTamp**

Timestamp

**SETTling**

Settling Time

**RISE**

Rise Time

**FALL**

Fall Time

**PWIDTH**

Pulse Width (ON Time)

**OFF**

Off Time

**DRATio**

Duty Ratio

**DCYCLE**

Duty Cycle (%)

**PRI**

Pulse Repetition Interval

**PRF**

Pulse Repetition Frequency (Hz)

	*RST: RISE
<XAxis>	PNUMber   TSTamp   SETTling   RISE   FALL   PWIDth   OFF   DRATio   DCYClE   PRI   PRF Pulse parameter to be displayed on the x-axis. For a description of the available parameters see <a href="#">Chapter 3.1.1, "Timing parameters"</a> , on page 16.
	<b>TSTamp</b> Timestamp
	<b>PNUMber</b> The pulse numbers are represented on the x-axis (available numbers can be queried using <a href="#">[SENSe:] PULSe: NUMBer?</a> on page 268). Intervals without pulses are not displayed.
	<b>SETTling</b> Settling Time
	<b>RISE</b> Rise Time
	<b>FALL</b> Fall Time
	<b>PWIDth</b> Pulse Width (ON Time)
	<b>OFF</b> Off Time
	<b>DRATio</b> Duty Ratio
	<b>DCYClE</b> Duty Cycle (%)
	<b>PRI</b> Pulse Repetition Interval
	<b>PRF</b> Pulse Repetition Frequency (Hz)
	*RST: PNUMber
<b>Usage:</b>	Setting only

---

**CALCulate<n>:TREND:TIMing:X <XAxis>**

Configures the x-axis of the Parameter Trend result display.

The y-axis is configured using the `CALCulate<n>:TREND:<GroupName>:Y` commands.

**Suffix:**

<n> [Window](#)

**Setting parameters:**

<XAxis> PNUMber | TSTamp | SETTling | RISE | FALL | PWIDth | OFF | DRATio | DCYClE | PRI | PRF

Pulse parameter to be displayed on the x-axis. For a description of the available parameters see [Chapter 3.1.1, "Timing parameters"](#), on page 16.

**TSTamp**

Timestamp

**PNUMber**

The pulse numbers are represented on the x-axis (available numbers can be queried using [\[SENSe:\]PULSe:NUMBer?](#) on page 268). Intervals without pulses are not displayed.

**SETTling**

Settling Time

**RISE**

Rise Time

**FALL**

Fall Time

**PWIDTH**

Pulse Width (ON Time)

**OFF**

Off Time

**DRATio**

Duty Ratio

**DCYClE**

Duty Cycle (%)

**PRI**

Pulse Repetition Interval

**PRF**

Pulse Repetition Frequency (Hz)

\*RST: PNUMber

**Example:** CALC2:TREN:TIM:X DCYClE

**Usage:** Setting only

**CALCulate<n>:TRENd:TIMing:Y <YAxis>**

Configures the y-axis of the Parameter Trend result display.

The x-axis is configured using the `CALCulate<n>:TRENd:<GroupName>:X` commands.

**Suffix:**

<n> [Window](#)

**Setting parameters:**

<YAxis> TSTamp | SETTling | RISE | FALL | PWIDTH | OFF | DRATio | DCYClE | PRI | PRF

Pulse parameter to be displayed on the y-axis. For a description of the available parameters see [Chapter 3.1.1, "Timing parameters"](#), on page 16.

**TSTamp**  
Timestamp

**SETTling**  
Settling Time

**RISE**  
Rise Time

**FALL**  
Fall Time

**PWIDth**  
Pulse Width (ON Time)

**OFF**  
Off Time

**DRATio**  
Duty Ratio

**DCYClE**  
Duty Cycle (%)

**PRI**  
Pulse Repetition Interval

**PRF**  
Pulse Repetition Frequency (Hz)

\*RST:       RISE

**Example:**       CALC2:TREN:TIM:Y DCYClE

**Usage:**         Setting only

### 9.12.7 Configuring a result range spectrum

The following commands determine the FFT parameters for spectrum calculation.

CALCulate<n>:RRSPectrum:WINDow.....	207
CALCulate<n>:RRSPectrum:AUTO.....	208
CALCulate<n>:RRSPectrum:RBW.....	208

---

#### CALCulate<n>:RRSPectrum:WINDow <WindowType>

Defines the RBW for the Result Range Spectrum.

The same window types are available as for Parameter Spectrum displays (see "[Window functions](#)" on page 47).

**Suffix:**

<n>                   1..n  
                      Window

**Setting parameters:**

<WindowType>       RECTangle | BARTlett | HAMMing | HANNing | BLACKman

**Manual operation:** See "[Window Type](#)" on page 90

**CALCulate<n>:RRSPectrum:AUTO <State>**

If activated, the optimal RBW for the Result Range Spectrum is selected automatically.

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on  
\*RST: 0

**Manual operation:** See "RBW Auto" on page 91

**CALCulate<n>:RRSPectrum:RBW <RBW>**

Defines the resolution bandwidth for the Result Range Spectrum.

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<RBW> \*RST: 1000  
Default unit: Hz

**Manual operation:** See "ResBW Manual" on page 90

## 9.12.8 Configuring the statistics and parameter tables

The following commands select which parameters are displayed in the Pulse Statistics and Pulse Results evaluation.

For details on the individual parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.

CALCulate<n>:TABLE:EMODEl:ALL[:STATE]	210
CALCulate<n>:TABLE:EMODEl:FBPTime	210
CALCulate<n>:TABLE:EMODEl:FHPLLevel	210
CALCulate<n>:TABLE:EMODEl:FHPTTime	211
CALCulate<n>:TABLE:EMODEl:FLPLLevel	211
CALCulate<n>:TABLE:EMODEl:FLPTTime	211
CALCulate<n>:TABLE:EMODEl:FMPLevel	211
CALCulate<n>:TABLE:EMODEl:FMPTTime	212
CALCulate<n>:TABLE:EMODEl:FTPLLevel	212
CALCulate<n>:TABLE:EMODEl:FTPTTime	212
CALCulate<n>:TABLE:EMODEl:RBPTTime	212
CALCulate<n>:TABLE:EMODEl:RHPLLevel	213



CALCulate<n>:TABLE:EMODEl:RHPTime.....	213
CALCulate<n>:TABLE:EMODEl:RLPLevel.....	213
CALCulate<n>:TABLE:EMODEl:RLPTime.....	213
CALCulate<n>:TABLE:EMODEl:RMPLevel.....	214
CALCulate<n>:TABLE:EMODEl:RMPTime.....	214
CALCulate<n>:TABLE:EMODEl:RTPLevel.....	214
CALCulate<n>:TABLE:EMODEl:RTPTime.....	215
CALCulate<n>:TABLE:FREQuency:ALL[:STATe].....	215
CALCulate<n>:TABLE:FREQuency:CRATe.....	215
CALCulate<n>:TABLE:FREQuency:DEVIation.....	215
CALCulate<n>:TABLE:FREQuency:PERRor.....	216
CALCulate<n>:TABLE:FREQuency:POINt.....	216
CALCulate<n>:TABLE:FREQuency:PPFRequency.....	216
CALCulate<n>:TABLE:FREQuency:RERRor.....	216
CALCulate<n>:TABLE:PHASe:ALL[:STATe].....	217
CALCulate<n>:TABLE:PHASe:DEVIation.....	217
CALCulate<n>:TABLE:PHASe:PERRor.....	217
CALCulate<n>:TABLE:PHASe:POINt.....	217
CALCulate<n>:TABLE:PHASe:PPPHase.....	218
CALCulate<n>:TABLE:PHASe:RERRor.....	218
CALCulate<n>:TABLE:POWeR:ADRooP:DB.....	218
CALCulate<n>:TABLE:POWeR:ADRooP[:PERCent].....	219
CALCulate<n>:TABLE:POWeR:ALL[:STATe].....	219
CALCulate<n>:TABLE:POWeR:AMPLitude.....	219
CALCulate<n>:TABLE:POWeR:AMPLitude:I.....	219
CALCulate<n>:TABLE:POWeR:AMPLitude:Q.....	220
CALCulate<n>:TABLE:POWeR:AVG.....	220
CALCulate<n>:TABLE:POWeR:BASE.....	220
CALCulate<n>:TABLE:POWeR:MAX.....	220
CALCulate<n>:TABLE:POWeR:MIN.....	221
CALCulate<n>:TABLE:POWeR:ON.....	221
CALCulate<n>:TABLE:POWeR:OVERshoot:DB.....	221
CALCulate<n>:TABLE:POWeR:OVERshoot[:PERCent].....	221
CALCulate<n>:TABLE:POWeR:PAVG.....	222
CALCulate<n>:TABLE:POWeR:PMIN.....	222
CALCulate<n>:TABLE:POWeR:POINt.....	222
CALCulate<n>:TABLE:POWeR:PON.....	222
CALCulate<n>:TABLE:POWeR:PPRatio.....	223
CALCulate<n>:TABLE:POWeR:RIPPLe:DB.....	223
CALCulate<n>:TABLE:POWeR:RIPPLe[:PERCent].....	223
CALCulate<n>:TABLE:POWeR:TOP.....	224
CALCulate<n>:TABLE:TIMing:ALL[:STATe].....	224
CALCulate<n>:TABLE:TIMing:DCYClE.....	224
CALCulate<n>:TABLE:TIMing:DRATio.....	224
CALCulate<n>:TABLE:TIMing:FALL.....	225
CALCulate<n>:TABLE:TIMing:OFF.....	225
CALCulate<n>:TABLE:TIMing:PRF.....	225
CALCulate<n>:TABLE:TIMing:PRI.....	225
CALCulate<n>:TABLE:TIMing:PWIDth.....	226

CALCulate<n>:TABLE:TIMing:RISE.....	226
CALCulate<n>:TABLE:TIMing:SETTling.....	226
CALCulate<n>:TABLE:TIMing:TSTamp.....	226

---

#### CALCulate<n>:TABLE:EMODEl:ALL[:STATE] <State>

If enabled, all envelope model parameters are included in the result tables.

**Suffix:**

<n> 1..n  
Window

**Setting parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on  
\*RST: 0

**Usage:** Setting only

---

#### CALCulate<n>:TABLE:EMODEl:FBPTime <State>

If enabled, the Fall Base Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Fall Base Point Time](#)" on page 28

---

#### CALCulate<n>:TABLE:EMODEl:FHPLLevel <State>

If enabled, the Fall High Point Level is included in the result tables.

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Fall High Point Level](#)" on page 29

---

**CALCulate<n>:TABLE:EMODEl:FHPTime <State>**

If enabled, the Fall High Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Fall High Point Time](#)" on page 28

---

**CALCulate<n>:TABLE:EMODEl:FLPLLevel <State>**

If enabled, the Fall Low Point Level is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Fall Low Point Level](#)" on page 29

---

**CALCulate<n>:TABLE:EMODEl:FLPTime <State>**

If enabled, the Fall Low Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Fall Low Point Time](#)" on page 28

---

**CALCulate<n>:TABLE:EMODEl:FMPLevel <State>**

If enabled, the Fall Mid Point Level is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See ["Fall Mid Point Level"](#) on page 29

---

**CALCulate<n>:TABLE:EMODEl:FMPTime <State>**

If enabled, the Fall Mid Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See ["Fall Mid Point Time"](#) on page 28

---

**CALCulate<n>:TABLE:EMODEl:FTPLLevel <State>**

If enabled, the Fall Top Point Level is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See ["Fall Top Point Level"](#) on page 29

---

**CALCulate<n>:TABLE:EMODEl:FTPTime <State>**

If enabled, the Fall Top Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See ["Fall Top Point Time"](#) on page 28

---

**CALCulate<n>:TABLE:EMODEl:RBPTime <State>**

If enabled, the Rise Base Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See ["Rise Base Point Time"](#) on page 26

---

**CALCulate<n>:TABLE:EMODEl:RHPLLevel <State>**

If enabled, the Rise High Point Level is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See ["Rise High Point Level"](#) on page 28

---

**CALCulate<n>:TABLE:EMODEl:RHPTime <State>**

If enabled, the Rise High Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See ["Rise High Point Time"](#) on page 27

---

**CALCulate<n>:TABLE:EMODEl:RLPLLevel <State>**

If enabled, the Rise Low Point Level is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See ["Rise Low Point Level"](#) on page 27

---

**CALCulate<n>:TABLE:EMODEl:RLPTime <State>**

If enabled, the Rise Low Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See ["Rise Low Point Time"](#) on page 27

---

**CALCulate<n>:TABLE:EMODEl:RMPLevel <State>**

If enabled, the Rise Mid Point Level is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See ["Rise Mid Point Level"](#) on page 27

---

**CALCulate<n>:TABLE:EMODEl:RMPTime <State>**

If enabled, the Rise Mid Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See ["Rise Mid Point Time"](#) on page 27

---

**CALCulate<n>:TABLE:EMODEl:RTPLevel <State>**

If enabled, the Rise Top Point Level is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See ["Rise Top Point Level"](#) on page 28

---

**CALCulate<n>:TABLE:EMODEl:RTPTime <State>**

If enabled, the Rise Top Point Time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Rise Top Point Time](#)" on page 27

---

**CALCulate<n>:TABLE:FREQuency:ALL[:STATE] <State>**

If enabled, all frequency parameters are included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Usage:** Setting only

---

**CALCulate<n>:TABLE:FREQuency:CRATE <State>**

If enabled, the chirp rate (per  $\mu$ s) is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Chirp Rate](#)" on page 24

---

**CALCulate<n>:TABLE:FREQuency:DEVIation <State>**

If enabled, the frequency deviation is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Frequency Deviation](#)" on page 24

#### **CALCulate<n>:TABLE:FREQUENCY:PErRor <State>**

If enabled, the peak frequency error is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Frequency Error \(Peak\)](#)" on page 23

#### **CALCulate<n>:TABLE:FREQUENCY:POINt <State>**

If enabled, the frequency at the measurement point is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 1

**Manual operation:** See "[Frequency](#)" on page 23

#### **CALCulate<n>:TABLE:FREQUENCY:PPFRequency <State>**

If enabled, the Pulse-Pulse Frequency Difference is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Pulse-Pulse Frequency Difference](#)" on page 23

#### **CALCulate<n>:TABLE:FREQUENCY:RErRor <State>**

If enabled, the RMS frequency error is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)



**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Frequency Error \(RMS\)](#)" on page 23

**CALCulate<n>:TABLe:PHASe:ALL[:STATe] <State>**

If enabled, all phase parameters are included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Usage:** Setting only

**CALCulate<n>:TABLe:PHASe:DEVIation <State>**

If enabled, the Phase Deviation is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Phase Deviation](#)" on page 25

**CALCulate<n>:TABLe:PHASe:PERRor <State>**

If enabled, the Phase Error (Peak) is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Phase Error \(Peak\)](#)" on page 25

**CALCulate<n>:TABLe:PHASe:POINT <State>**

If enabled, the phase at the measurement point is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 1

**Manual operation:** See "[Phase](#)" on page 24

---

**CALCulate<n>:TABLE:PHASe:PPPHase <State>**

If enabled, the Pulse-Pulse Phase Difference is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Pulse-Pulse Phase Difference](#)" on page 24

---

**CALCulate<n>:TABLE:PHASe:RERRor <State>**

If enabled, the Phase Error (RMS) is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Phase Error \(RMS\)](#)" on page 25

---

**CALCulate<n>:TABLE:POWer:ADRooP:DB <State>**

If enabled, the Droop in dB is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Droop](#)" on page 21

---

**CALCulate<n>:TABLE:POWER:ADRoop[:PERCent] <State>**

If enabled, the droop in percent is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Droop](#)" on page 21

---

**CALCulate<n>:TABLE:POWER:ALL[:STATE] <State>**

If enabled, all power parameters are included in the result tables.

**Suffix:**

<n> 1..n

**Setting parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Usage:** Setting only

---

**CALCulate<n>:TABLE:POWER:AMPLitude <State>**

If enabled, the pulse amplitude is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Pulse Amplitude](#)" on page 20

---

**CALCulate<n>:TABLE:POWER:AMPLitude:I <State>**

If enabled, the in-phase amplitude is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[In-Phase Amplitude/Quadrature Amplitude](#)" on page 20

---

**CALCulate<n>:TABLE:POWER:AMPLitude:Q <State>**

If enabled, the quadrature amplitude is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[In-Phase Amplitude/Quadrature Amplitude](#)" on page 20

---

**CALCulate<n>:TABLE:POWER:AVG <State>**

If enabled, the average Tx power is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 1

**Manual operation:** See "[Average Tx Power](#)" on page 20

---

**CALCulate<n>:TABLE:POWER:BASE <State>**

If enabled, the base power is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Base Power](#)" on page 19

---

**CALCulate<n>:TABLE:POWER:MAX <State>**

If enabled, the maximum Tx power is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Peak Power](#)" on page 21

#### **CALCulate<n>:TABLE:POWER:MIN <State>**

If enabled, the minimum Tx power is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Minimum Power](#)" on page 20

#### **CALCulate<n>:TABLE:POWER:ON <State>**

If enabled, the average ON power is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 1

**Manual operation:** See "[Average ON Power](#)" on page 20

#### **CALCulate<n>:TABLE:POWER:OVERshoot:DB <State>**

If enabled, the overshoot in dB is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Overshoot](#)" on page 22

#### **CALCulate<n>:TABLE:POWER:OVERshoot[:PERCent] <State>**

If enabled, the overshoot in percent is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Overshoot](#)" on page 22

---

**CALCulate<n>:TABLE:POWER:PAVG <State>**

If enabled, the Peak-to-Average Tx Power Ratio is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Peak-to-Average Tx Power Ratio](#)" on page 21

---

**CALCulate<n>:TABLE:POWER:PMIN <State>**

If enabled, the Peak-to-Min Power Ratio is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Peak-to-Min Power Ratio](#)" on page 21

---

**CALCulate<n>:TABLE:POWER:POINT <State>**

If enabled, the power at the measurement point is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Power \(at Point\)](#)" on page 22

---

**CALCulate<n>:TABLE:POWER:PON <State>**

If enabled, the Peak-to-Avg ON Power Ratio is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Peak-to-Avg ON Power Ratio](#)" on page 21

**CALCulate<n>:TABLE:POWER:PPRatio <State>**

If enabled, the Pulse-to-Pulse Power Difference is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Pulse-to-Pulse Power Ratio](#)" on page 22

**CALCulate<n>:TABLE:POWER:RIPPLE:DB <State>**

If enabled, the ripple in dB is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Ripple](#)" on page 22

**CALCulate<n>:TABLE:POWER:RIPPLE[:PERCent] <State>**

If enabled, the ripple in percent is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Ripple](#)" on page 22

---

**CALCulate<n>:TABLE:POWER:TOP <State>**

If enabled, the Top power is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See "[Top Power](#)" on page 19

---

**CALCulate<n>:TABLE:TIMing:ALL[:STATe] <State>**

If enabled, all timing parameters are included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Usage:** Setting only

---

**CALCulate<n>:TABLE:TIMing:DCYClE <State>**

If enabled, the duty cycle (in %) is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 1

**Manual operation:** See "[Duty Cycle \(%\)](#)" on page 18

---

**CALCulate<n>:TABLE:TIMing:DRATio <State>**

If enabled, the duty ratio (in dB) is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0



**Manual operation:** See ["Duty Ratio"](#) on page 18

#### **CALCulate<n>:TABLE:TIMing:FALL <State>**

If enabled, the fall time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See ["Fall Time"](#) on page 17

#### **CALCulate<n>:TABLE:TIMing:OFF <State>**

If enabled, the "OFF" time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See [" Off Time"](#) on page 18

#### **CALCulate<n>:TABLE:TIMing:PRF <State>**

If enabled, the pulse repetition frequency is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Manual operation:** See ["Pulse Repetition Frequency \(Hz\)"](#) on page 19

#### **CALCulate<n>:TABLE:TIMing:PRI <State>**

If enabled, the pulse repetition interval is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 1

**Manual operation:** See "[Pulse Repetition Interval](#)" on page 18

---

**CALCulate<n>:TABLE:TIMing:PWIDth <State>**

If enabled, the pulse width is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 1

**Manual operation:** See "[Pulse Width \(ON Time\)](#)" on page 18

---

**CALCulate<n>:TABLE:TIMing:RISE <State>**

If enabled, the rise time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 1

**Manual operation:** See "[Rise Time](#)" on page 17

---

**CALCulate<n>:TABLE:TIMing:SETTling <State>**

If enabled, the settling time is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Settling Time](#)" on page 17

---

**CALCulate<n>:TABLE:TIMing:TSTamp <State>**

If enabled, the timestamp is included in the result tables.

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

**Manual operation:** See "[Timestamp](#)" on page 17

## 9.12.9 Configuring limit checks

For each parameter in the result tables you can activate a limit check and define the valid value ranges. For details see "[Pulse Results](#)" on page 37.

Useful commands for configuring limit checks described elsewhere:

- [CALCulate<n>:DISTribution:LLINes\[:STATe\]](#) on page 175
- [CALCulate<n>:TREND:LLINes\[:STATe\]](#) on page 196

For commands required to retrieve the results of the limit check for individual parameters see [Chapter 9.16.4, "Retrieving limit results"](#), on page 319.

### Remote commands exclusive to configuring limit checks:

---

```

CALCulate<n>:TABLE:<ParameterGroup>:<Parameter>:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FBPTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FHPLLevel:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FHPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FLPLLevel:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FLPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FMPLLevel:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FMPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FTPLLevel:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:FTPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RBPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RHPLLevel:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RHPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RLPLLevel:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RLPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RMPLLevel:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RMPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RTPLLevel:LIMit:STATe <State>
CALCulate<n>:TABLE:EMODEl:RTPTTime:LIMit:STATe <State>
CALCulate<n>:TABLE:FREQUency:CRATe:LIMit:STATe <State>
CALCulate<n>:TABLE:FREQUency:DEVIation:LIMit:STATe <State>
CALCulate<n>:TABLE:FREQUency:PERRor:LIMit:STATe <State>
CALCulate<n>:TABLE:FREQUency:POINt:LIMit:STATe <State>
CALCulate<n>:TABLE:FREQUency:PPFRrequency:LIMit:STATe <State>
CALCulate<n>:TABLE:FREQUency:RERRor:LIMit:STATe <State>
CALCulate<n>:TABLE:PHASe:DEVIation:LIMit:STATe <State>

```

**CALCulate<n>:TABLE:PHASe:PERRor:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:PHASe:POINT:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:PHASe:PPHase:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:PHASe:RERRor:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:ADRoop:DB:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:ADRoop[:PERCent]:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:AMPLitude:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:AMPLitude:I:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:AMPLitude:Q:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:AVG:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:BASE:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:MAX:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:MIN:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:ON:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:OVERshoot:DB:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:OVERshoot[:PERCent]:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:PAVG:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:PMIN:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:POINT:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:PON:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:PPRatio:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:RIPPlE:DB:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:RIPPlE[:PERCent]:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:POWer:TOP:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:DCYClE:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:DRATio:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:FALL:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:OFF:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:PRF:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:PRI:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:PWIDth:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:RISE:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:SETTling:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:TIMing:TSTamp:LIMit:STATe <State>**

Activates or deactivates a limit check for the selected parameter. The limits are defined using `CALCulate<n>:TABLE:<ParameterGroup>:<Parameter>:LIMit` on page 229.

**Suffix:**

<n> 1..n

**Parameters:**

<State> ON | OFF | 1 | 0  
 \*RST: 0

---

**CALCulate<n>:TABLE:<ParameterGroup>:ALL:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:EMODEl:ALL:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:FREQuency:ALL:LIMit:STATe <State>**  
**CALCulate<n>:TABLE:PHASe:ALL:LIMit:STATe <State>**

**CALCulate<n>:TABLE:POWER:ALL:LIMit:STATe <State>**

**CALCulate<n>:TABLE:TIMing:ALL:LIMit:STATe <State>**

Activates or deactivates a limit check for all parameters in the selected parameter group.

**Suffix:**

<n> 1..n

**Setting parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Usage:** Setting only

**CALCulate<n>:TABLE:ALL:LIMit:STATe <State>**

Activates or deactivates a limit check for all parameters in all parameter groups.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<State> ON | OFF | 1 | 0  
\*RST: 0

**Usage:** Setting only

**Manual operation:** See "[Deactivating all limit checks for all parameter groups](#)" on page 99

**CALCulate<n>:TABLE:<ParameterGroup>:<Parameter>:LIMit <LowLimit>, <UppLimit>**

**CALCulate<n>:TABLE:EMODEl:FBPTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:FHPLLevel:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:FHPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:FLPLLevel:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:FLPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:FMPLevel:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:FMPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:FTPLLevel:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:FTPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RBPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RHPLLevel:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RHPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RLPLLevel:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RLPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RMPLLevel:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RMPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RTPLevel:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:EMODEl:RTPTTime:LIMit <LowerLimit>, <UpperLimit>**

**CALCulate<n>:TABLE:FREQUENCY:CRATE:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:FREQUENCY:DEVIATION:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:FREQUENCY:PERror:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:FREQUENCY:POINT:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:FREQUENCY:PPFREQUENCY:LIMit** <LowerLimit>,  
 <UpperLimit>  
**CALCulate<n>:TABLE:FREQUENCY:RERror:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:PHASe:DEVIATION:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:PHASe:PERror:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:PHASe:POINT:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:PHASe:PPHase:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:PHASe:RERror:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:ADRooP:DB:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:ADRooP[:PERCent]:LIMit** <LowerLimit>,  
 <UpperLimit>  
**CALCulate<n>:TABLE:POWER:AMPLitude:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:AMPLitude:I:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:AMPLitude:Q:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:AVG:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:BASE:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:MAX:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:MIN:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:ON:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:OVERshoot:DB:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:OVERshoot[:PERCent]:LIMit** <LowerLimit>,  
 <UpperLimit>  
**CALCulate<n>:TABLE:POWER:PAVG:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:PMIN:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:POINT:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:PON:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:PPRatio:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:RIPple:DB:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:RIPple[:PERCent]:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:POWER:TOP:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:DCYCLE:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:DRATio:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:FALL:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:OFF:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:PRF:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:PRI:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:PWIDth:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:RISE:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:SETTling:LIMit** <LowerLimit>, <UpperLimit>  
**CALCulate<n>:TABLE:TIMing:TSTamp:LIMit** <LowerLimit>, <UpperLimit>

Defines the valid value range for the limit check for the selected parameter if limit check is active (**CALCulate<n>:TABLE:<ParameterGroup>:<Parameter>:LIMit:STATeON**).

For details on the individual parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.

**Suffix:**

&lt;n&gt; 1..n

**Parameters:**

&lt;LowerLimit&gt; Lower limit of the valid value range.

Default unit: S

&lt;UpperLimit&gt; Upper limit of the valid value range.

Default unit: S

### 9.12.10 Configuring the Y-Axis scaling and units

The scaling for the vertical axis is highly configurable, using either absolute or relative values. These commands are described here.

Useful commands for configuring scaling described elsewhere:

- `DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel`  
on page 144

**Remote commands exclusive to scaling the y-axis**

<code>CALCulate&lt;n&gt;:UNIT:FREQuency</code> .....	231
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:X[:SCALe]:UNIT?</code> .....	231
<code>DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:AUTO</code> .....	232
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:MAXimum</code> .....	232
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:MINimum</code> .....	232
<code>DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:PDIVision</code> .....	233
<code>DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:RPOSition</code> .....	233
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:RVALue</code> .....	234
<code>DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:Y[:SCALe]:UNIT?</code> .....	234
<code>CALCulate&lt;n&gt;:UNIT:ANGLE</code> .....	234
<code>UNIT:ANGLE</code> .....	234

**CALCulate<n>:UNIT:FREQuency <Unit>**

Switches between relative (default) and absolute frequency values. This setting applies to Pulse Frequency, Result Range Spectrum, Parameter Distribution and Parameter Trend result displays.

**Suffix:**<n> 1..n  
Window**Parameters:**

&lt;Unit&gt; REL | ABS

**Manual operation:** See "Frequency Scaling" on page 102**DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALe]:UNIT?**

This command reads the unit type currently configured for the X-axis

<b>Suffix:</b>	
<n>	1..n <a href="#">Window</a>
<t>	1..n <a href="#">Trace</a>
<b>Usage:</b>	Query only

**DISPlay[:WINDow<n>][:SUBWindow<n>]:TRACe<t>:Y[:SCALe]:AUTO <State>**

If enabled, the Y-axis is scaled automatically according to the current measurement.

<b>Suffix:</b>	
<n>	<a href="#">Window</a>
<w>	subwindow Not supported by all applications
<t>	irrelevant

**Parameters for setting and query:**

<State>	<b>OFF</b> Switch the function off
	<b>ON</b> Switch the function on
	<b>ONCE</b> Execute the function once
*RST:	ON

**Manual operation:** See ["Auto Scale Continuous \(All\)"](#) on page 86  
 See ["Auto Scale Once \(All\)"](#) on page 86  
 See ["Automatic Grid Scaling"](#) on page 100  
 See ["Auto Scale Once"](#) on page 100

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MAXimum <Value>**

Defines the maximum value on the y-axis in the specified window.

<b>Suffix:</b>	
<n>	<a href="#">Window</a>
<t>	irrelevant

**Parameters:**  
 <Max> numeric value

**Example:** DISP:WIND2:TRAC:Y:SCAL:MAX 10

**Manual operation:** See ["Absolute Scaling \(Min/Max Values\)"](#) on page 101

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MINimum <Value>**

Defines the minimum value on the y-axis in the specified window.



**Suffix:**<n> [Window](#)

&lt;t&gt; irrelevant

**Parameters:**

&lt;Min&gt; numeric value

**Example:** DISP:WIND2:TRAC:Y:SCAL:MIN -90**Manual operation:** See "[Absolute Scaling \(Min/Max Values\)](#)" on page 101**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision**  
<Value>

This remote command determines the grid spacing on the Y-axis for all diagrams, where possible.

In spectrum displays, for example, this command is not available.

**Suffix:**<n> [Window](#)<w> subwindow  
Not supported by all applications

&lt;t&gt; irrelevant

**Parameters:**

&lt;Value&gt; numeric value WITHOUT UNIT (unit according to the result display)

Defines the range per division (total range = 10\* $\langle$ Value $\rangle$ )

\*RST: depends on the result display

Default unit: DBM

**Example:** DISP:TRAC:Y:PDIV 10  
Sets the grid spacing to 10 units (e.g. dB) per division**Manual operation:** See "[Per Division](#)" on page 101**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOSition**  
<Position>

This command defines the vertical position of the reference level on the display grid (for all traces).

The R&S FSMR3 adjusts the scaling of the y-axis accordingly.

**Suffix:**<n> [Window](#)<w> subwindow  
Not supported by all applications

&lt;t&gt; irrelevant

**Parameters:**

<Position> 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border.  
 \*RST: 100 PCT = frequency display; 50 PCT = time display  
 Default unit: PCT

**Example:**

DISP:TRAC:Y:RPOS 50PCT

**Manual operation:** See "[Ref Position](#)" on page 101

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue <Value>**

This command defines the reference value assigned to the reference position in the specified window. Separate reference values are maintained for the various displays.

**Suffix:**

<n> [Window](#)  
 <t> irrelevant

**Parameters:**

<Value> numeric value WITHOUT UNIT  
 Default unit: dBm

**Manual operation:** See "[Ref Value](#)" on page 101

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:UNIT?**

This command reads the unit type currently configured for the Y-axis

**Suffix:**

<n> 1..n  
[Window](#)  
 <t> 1..n  
[Trace](#)

**Usage:** Query only

**CALCulate<n>:UNIT:ANGLE <Unit>**

**UNIT:ANGLE <Unit>**

**Parameters:**

<Unit> DEG | RAD

**Manual operation:** See "[Phase Unit](#)" on page 101

## 9.13 Configuring the result display

The following commands are required to configure the screen display in a remote environment. The tasks for manual operation are described in [Chapter 3, "Measurements and result displays"](#), on page 15.

- [General window commands](#).....235
- [Working with windows in the display](#).....236

### 9.13.1 General window commands

The following commands are required to configure general window layout, independent of the application.

Note that the suffix <n> always refers to the window *in the currently selected channel* (see [INSTRument\[:SELEct\]](#) on page 134).

<a href="#">DISPlay:FORMat</a> .....	235
<a href="#">DISPlay[:WINDow&lt;n&gt;]:SIZE</a> .....	235

---

#### DISPlay:FORMat <Format>

This command determines which tab is displayed.

##### Parameters:

<Format>	<b>SPLit</b> Displays the MultiView tab with an overview of all active channels
	<b>SINGle</b> Displays the measurement channel that was previously focused.
*RST:	SING

**Example:**           DISP:FORM SPL

---

#### DISPlay[:WINDow<n>]:SIZE <Size>

This command maximizes the size of the selected result display window *temporarily*. To change the size of several windows on the screen permanently, use the [LAY:SPL](#) command (see [LAYout:SPLitter](#) on page 239).

##### Suffix:

<n>                   Window

##### Parameters:

<Size>	<b>LARGE</b> Maximizes the selected window to full screen. Other windows are still active in the background.
	<b>SMALI</b> Reduces the size of the selected window to its original size. If more than one measurement window was displayed originally, these are visible again.

\*RST: SMALI

**Example:** DISP:WIND2:SIZE LARG

### 9.13.2 Working with windows in the display

The following commands are required to change the evaluation type and rearrange the screen layout for a channel as you do using the SmartGrid in manual operation. Since the available evaluation types depend on the selected application, some parameters for the following commands also depend on the selected channel.

Note that the suffix <n> always refers to the window *in the currently selected channel*.

(See `INSTrument[:SElect]` on page 134).

<code>LAYout:ADD[:WINDow]?</code> .....	236
<code>LAYout:CATalog[:WINDow]?</code> .....	238
<code>LAYout:IDENtify[:WINDow]?</code> .....	238
<code>LAYout:REMOve[:WINDow]</code> .....	238
<code>LAYout:REPLace[:WINDow]</code> .....	239
<code>LAYout:SPLitter</code> .....	239
<code>LAYout:WINDow&lt;n&gt;:ADD?</code> .....	241
<code>LAYout:WINDow&lt;n&gt;:IDENtify?</code> .....	241
<code>LAYout:WINDow&lt;n&gt;:REMOve</code> .....	242
<code>LAYout:WINDow&lt;n&gt;:REPLace</code> .....	242
<code>LAYout:WINDow&lt;n&gt;:TYPE</code> .....	243

---

#### `LAYout:ADD[:WINDow]?` <WindowName>, <Direction>, <WindowType>

This command adds a window to the display in the active channel.

This command is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the `LAYout:REPLace[:WINDow]` command.

#### Query parameters:

<WindowName>	String containing the name of the existing window the new window is inserted next to. By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the <code>LAYout:CATalog[:WINDow]?</code> query.
<Direction>	LEFT   RIGHT   ABOVE   BELOW Direction the new window is added relative to the existing window.
<WindowType>	text value Type of result display (evaluation method) you want to add. See the table below for available parameter values.

**Return values:**

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

**Example:**

```
LAY:ADD? '1', LEFT, MTAB
```

Result:

```
'2'
```

Adds a new window named '2' with a marker table to the left of window 1.

**Usage:**

Query only

**Manual operation:**

See "[Magnitude Capture](#)" on page 30

See "[Marker Table](#)" on page 31

See "[Parameter Distribution](#)" on page 31

See "[Parameter Spectrum](#)" on page 32

See "[Parameter Trend](#)" on page 32

See "[Pulse Frequency](#)" on page 34

See "[Pulse I and Q](#)" on page 35

See "[Pulse Magnitude](#)" on page 35

See "[Pulse Phase](#)" on page 36

See "[Pulse Phase \(Wrapped\)](#)" on page 36

See "[Pulse Results](#)" on page 37

See "[Pulse-Pulse Spectrum](#)" on page 38

See "[Pulse Statistics](#)" on page 39

See "[Result Range Spectrum](#)" on page 40

For a detailed example, see [Chapter 9.19, "Programming example: pulse measurement"](#), on page 327.

**Table 9-3: <WindowType> parameter values for Pulse application**

Parameter value	Window type
MCAPture	"Magnitude Capture Buffer"
MTABle	"Marker Table"
PDIStribution	"Parameter Distribution"
PFRequency	"Pulse Frequency"
PMAGnitude	"Pulse Magnitude"
PPHase	"Pulse Phase"
PPSPectrum	"Pulse-Pulse Spectrum"
PPWrapped	"Pulse phase, wrapped"
PREsults	"Pulse Results"
PSPectrum	"Parameter Spectrum"
PSTatistics	"Pulse Statistics"
PTREnd	"Parameter Trend"
RRSPectrum	"Result Range Spectrum"

**LAYout:CATalog[:WINDow]?**

This command queries the name and index of all active windows in the active channel from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName\_1>,<WindowIndex\_1>..<WindowName\_n>,<WindowIndex\_n>

**Return values:**

<WindowName>      string  
Name of the window.  
In the default state, the name of the window is its index.

<WindowIndex>    **numeric value**  
Index of the window.

**Example:**

LAY:CAT?

Result:

'2',2,'1',1

Two windows are displayed, named '2' (at the top or left), and '1' (at the bottom or right).

**Usage:**            Query only

**LAYout:IDENtify[:WINDow]? <WindowName>**

This command queries the **index** of a particular display window in the active channel.

**Note:** to query the **name** of a particular window, use the [LAYout:WINDow<n>:IDENtify?](#) query.

**Query parameters:**

<WindowName>    String containing the name of a window.

**Return values:**

<WindowIndex>    Index number of the window.

**Example:**

LAY:IDEN:WIND? '2'

Queries the index of the result display named '2'.

Response:

2

**Usage:**            Query only

**LAYout:REMOve[:WINDow] <WindowName>**

This command removes a window from the display in the active channel.

**Setting parameters:**

<WindowName>    String containing the name of the window. In the default state, the name of the window is its index.

**Example:**

LAY:REM '2'

Removes the result display in the window named '2'.

**Usage:** Setting only

---

**LAYout:REPLace[:WINDow]** <WindowName>, <WindowType>

This command replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window in the active channel while keeping its position, index and window name.

To add a new window, use the [LAYout:ADD\[:WINDow\]?](#) command.

**Setting parameters:**

<WindowName> String containing the name of the existing window.  
By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel, use the [LAYout:CATalog\[:WINDow\]?](#) query.

<WindowType> Type of result display you want to use in the existing window.  
See [LAYout:ADD\[:WINDow\]?](#) on page 236 for a list of available window types.

**Example:** `LAY:REPL:WIND '1',MTAB`  
Replaces the result display in window 1 with a marker table.

**Usage:** Setting only

---

**LAYout:SPLitter** <Index1>, <Index2>, <Position>

This command changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

Compared to the [DISPlay\[:WINDow<n>\]:SIZE](#) on page 235 command, the `LAYout:SPLitter` changes the size of all windows to either side of the splitter permanently, it does not just maximize a single window temporarily.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command does not work, but does not return an error.

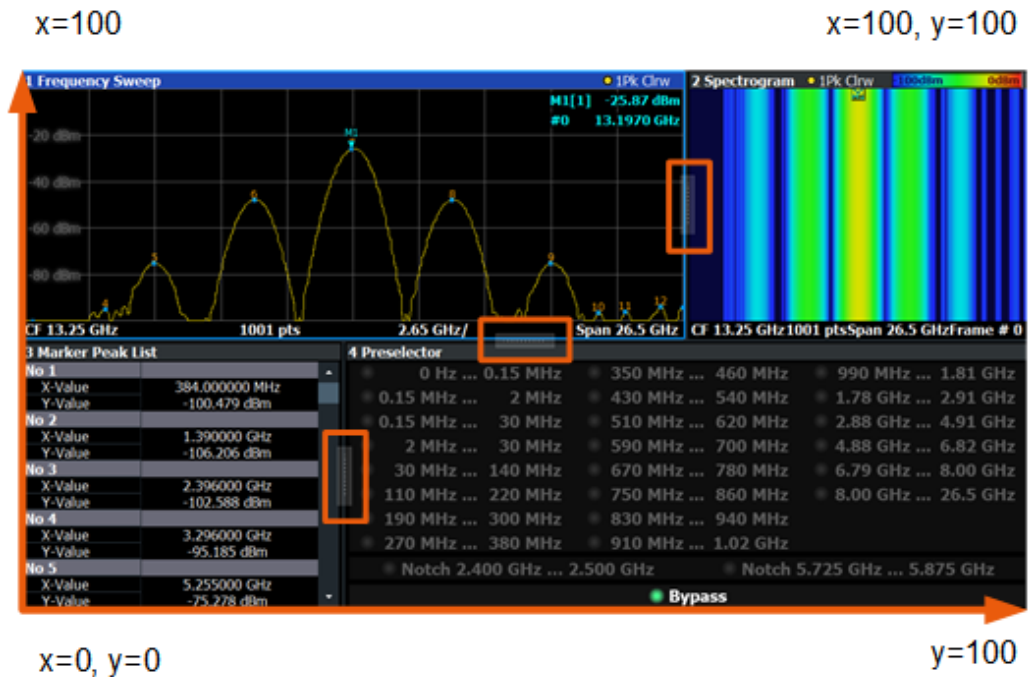


Figure 9-1: SmartGrid coordinates for remote control of the splitters

#### Setting parameters:

- <Index1> The index of one window the splitter controls.
- <Index2> The index of a window on the other side of the splitter.
- <Position> New vertical or horizontal position of the splitter as a fraction of the screen area (without channel and status bar and softkey menu).  
The point of origin (x = 0, y = 0) is in the lower left corner of the screen. The end point (x = 100, y = 100) is in the upper right corner of the screen. (See [Figure 9-1](#).)  
The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned vertically, the splitter also moves vertically.

Range: 0 to 100

#### Example:

LAY:SPL 1,3,50

Moves the splitter between window 1 ("Frequency Sweep") and 3 ("Marker Table") to the center (50%) of the screen, i.e. in the figure above, to the left.



**Example:** `LAY:SPL 1,4,70`  
 Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Peak List') towards the top (70%) of the screen. The following commands have the exact same effect, as any combination of windows above and below the splitter moves the splitter vertically.

`LAY:SPL 3,2,70`  
`LAY:SPL 4,1,70`  
`LAY:SPL 2,1,70`

**Usage:** Setting only

---

#### **LAYout:WINDow<n>:ADD? <Direction>,<WindowType>**

This command adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added. Unlike [LAYout:ADD\[:WINDow\]?](#), for which the existing window is defined by a parameter.

To replace an existing window, use the [LAYout:WINDow<n>:REPLace](#) command.

This command is always used as a query so that you immediately obtain the name of the new window as a result.

#### **Suffix:**

<n> [Window](#)

#### **Query parameters:**

<Direction> LEFT | RIGHT | ABOVE | BELOW

<WindowType> Type of measurement window you want to add.  
 See [LAYout:ADD\[:WINDow\]?](#) on page 236 for a list of available window types.

#### **Return values:**

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

**Example:** `LAY:WIND1:ADD? LEFT,MTAB`  
**Result:**  
 '2'  
 Adds a new window named '2' with a marker table to the left of window 1.

**Usage:** Query only

---

#### **LAYout:WINDow<n>:IDENTify?**

This command queries the **name** of a particular display window (indicated by the <n> suffix) in the active channel.

**Note:** to query the **index** of a particular window, use the [LAYout:IDENTify\[:WINDow\]?](#) command.

<b>Suffix:</b>	
<n>	<a href="#">Window</a>
<b>Return values:</b>	
<WindowName>	String containing the name of a window. In the default state, the name of the window is its index.
<b>Example:</b>	<code>LAY:WIND2:IDEN?</code> Queries the name of the result display in window 2. Response: '2'
<b>Usage:</b>	Query only

---

#### **LAYout:WINDow<n>:REMOve**

This command removes the window specified by the suffix <n> from the display in the active channel.

The result of this command is identical to the [LAYout:REMOve\[:WINDow\]](#) command.

<b>Suffix:</b>	
<n>	<a href="#">Window</a>
<b>Example:</b>	<code>LAY:WIND2:REM</code> Removes the result display in window 2.
<b>Usage:</b>	Event

---

#### **LAYout:WINDow<n>:REPLace <WindowType>**

This command changes the window type of an existing window (specified by the suffix <n>) in the active channel.

The effect of this command is identical to the [LAYout:REPLace\[:WINDow\]](#) command.

To add a new window, use the [LAYout:WINDow<n>:ADD?](#) command.

<b>Suffix:</b>	
<n>	<a href="#">Window</a>
<b>Setting parameters:</b>	
<WindowType>	Type of measurement window you want to replace another one with. See <a href="#">LAYout:ADD[:WINDow]?</a> on page 236 for a list of available window types.
<b>Example:</b>	<code>LAY:WIND2:REPL MTAB</code> Replaces the result display in window 2 with a marker table.
<b>Usage:</b>	Setting only

---

**LAYout:WINDow<n>:TYPE** <WindowType>

Queries or defines the window type of the window specified by the index <n>. The window type determines which results are displayed. For a list of possible window types, see [LAYout:ADD\[:WINDow\]?](#) on page 236.

Note that this command is not available in all applications and measurements.

**Suffix:**

<n> 1..n  
Window

**Parameters:**

<WindowType>

**Example:** LAY:WIND2:TYPE?

## 9.14 Configuring standard traces

Useful commands for configuring traces described elsewhere:

- [\[SENSe:\]SWEep:COUNT](#) on page 168

**Remote commands exclusive to configuring traces**

<a href="#">CALCulate&lt;n&gt;:TRACe&lt;t&gt;[:VALue]:PIAQ</a> .....	243
<a href="#">DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:MODE</a> .....	244
<a href="#">DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;:MODE:HCONtinuous</a> .....	245
<a href="#">DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:NORMalize:MODE</a> .....	245
<a href="#">DISPlay[:WINDow&lt;n&gt;]:TRACe&lt;t&gt;:NORMalize:PHASe</a> .....	246
<a href="#">DISPlay[:WINDow&lt;n&gt;][:SUBWindow&lt;w&gt;]:TRACe&lt;t&gt;[:STATe]</a> .....	246
<a href="#">[SENSe:]WINDow&lt;n&gt;:DETEctor&lt;t&gt;[:FUNCTion]</a> .....	247
<a href="#">[SENSe:]WINDow&lt;n&gt;:DETEctor&lt;t&gt;[:FUNCTion]:AUTO</a> .....	247
<a href="#">[SENSe:]STATistic&lt;n&gt;:TYPE</a> .....	248
<a href="#">[SENSe:]SWEep:POINts</a> .....	248

---

**CALCulate<n>:TRACe<t>[:VALue]:PIAQ** <Detector>

Defines which signal component (I/Q) is evaluated in which trace for the [Pulse I and Q](#) result display. By default, the I component is displayed by trace 1, while the Q component is displayed by trace 4.

This setting is not available for any other results displays.

**Suffix:**

<n> 1..n  
Window

<t> 1..n  
Trace

**Parameters:**

<Detector> ITIME | QTIME

**ITIMe**

The I component is evaluated by the selected trace.

**QTIMe**

The Q component is evaluated by the selected trace.

**Example:**

```
CALC2:TRAC2 QTIM
```

Trace 2 in window 2 evaluates the Q component of the signal.

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE <Mode>**

This command selects the trace mode. If necessary, the selected trace is also activated.

**Suffix:**

<n>	Window
<w>	subwindow Not supported by all applications
<t>	Trace

**Parameters:**

<Mode>

**WRITe**

(default:) Overwrite mode: the trace is overwritten by each sweep.

**AVERAge**

The average is formed over several sweeps. The "Sweep/Average Count" determines the number of averaging procedures.

**MAXHold**

The maximum value is determined over several sweeps and displayed. The R&S FSMR3 saves the sweep result in the trace memory only if the new value is greater than the previous one.

**MINHold**

The minimum value is determined from several measurements and displayed. The R&S FSMR3 saves the sweep result in the trace memory only if the new value is lower than the previous one.

**VIEW**

The current contents of the trace memory are frozen and displayed.

**BLANK**

Hides the selected trace.

\*RST: Trace 1: WRITe, Trace 2-6: BLANK

**Example:**

```
INIT:CONT OFF
Switching to single sweep mode.
SWE:COUN 16
Sets the number of measurements to 16.
DISP:TRAC3:MODE WRIT
Selects clear/write mode for trace 3.
INIT;*WAI
Starts the measurement and waits for the end of the measurement.
```

**Manual operation:** See "[Trace Mode](#)" on page 110

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE:HCONtinuous**  
<State>

This command turns an automatic reset of a trace on and off after a parameter has changed.

The reset works for trace modes min hold, max hold and average.

Note that the command has no effect if critical parameters like the span have been changed to avoid invalid measurement results

**Suffix:**

<n> [Window](#)  
 <w> subwindow  
 <t> [Trace](#)

**Parameters:**

<State> ON | OFF | 0 | 1  
**OFF | 0**  
 Switches the function off  
**ON | 1**  
 Switches the function on

**Example:**

```
DISP:WIND:TRAC3:MODE:HCON ON
Switches off the reset function.
```

**Manual operation:** See "[Hold](#)" on page 111

**DISPlay[:WINDow<n>]:TRACe<t>:NORMalize:MODE <Mode>**

Enables or disables normalization of the traces in reference to the measured pulse or a reference pulse. For details see [Chapter 4.5.2, "Normalizing traces"](#), on page 51.

This command is valid only for Magnitude Time, Frequency Time, Phase Time and Phase Time Wrapped result displays.

**Suffix:**

<n> 1..n

<t> 1..n

**Parameters:**

<Mode>

**OFF**

Traces are not normalized

**MEASured**

The value in the measurement point (that is: the value in the Pulse Results table) for each pulse in phase, amplitude or frequency is subtracted from the respective trace to normalize each trace to 0.

**REFerence**

The value in the measurement point (that is: the value in the Pulse Results table) for the *Reference Pulse* is subtracted from the respective trace to normalize the traces.

The reference pulse is defined using [SENSe:]TRACe:MEASurement:DEFine:PULSe:REFerence:POSition on page 163 and [SENSe:]TRACe:MEASurement:DEFine:PULSe:REFerence on page 163.

\*RST: OFF

**Example:**

DISP:WIND2:TRAC:NORM:MODE MEAS

**Manual operation:** See "[Normalization](#)" on page 112

**DISPlay[:WINDow<n>]:TRACe<t>:NORMalize:PHASe <Phase>**

Normalizes pulse phase traces to a specific phase value. For details see "[Normalization of pulse phase traces](#)" on page 54.

This command is valid only for Phase Time and Phase Time Wrapped result displays.

**Suffix:**

<n> 1..n  
[Window](#)

<t> 1..n  
irrelevant

**Parameters:**

<Phase> floating point value  
Phase offset in degrees or radians  
\*RST: 0  
Default unit: DEG

**Example:**

DISP:WIND2:TRAC:NORM:PHAS 45

**Manual operation:** See "[Phase Normalization](#)" on page 102

**DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe] <State>**

This command turns a trace on and off.

The measurement continues in the background.

**Suffix:**

<n>	<a href="#">Window</a>
<w>	subwindow Not supported by all applications
<t>	<a href="#">Trace</a>

**Parameters:**

<State>	ON   OFF   0   1 <b>OFF   0</b> Switches the function off <b>ON   1</b> Switches the function on
---------	--

**Example:** DISP:TRAC3 ON

**Manual operation:** See "[Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6](#)" on page 110  
See "[Trace 1/ Trace 2/ Trace 3/ Trace 4 \(Softkeys\)](#)" on page 113

**[SENSe:][WINDow<n>:]DETEctor<t>[:FUNCTion] <Detector>**

Defines the trace detector to be used for trace analysis.

**Suffix:**

<n>	<a href="#">Window</a>
<t>	<a href="#">Trace</a>

**Example:** DET POS  
Sets the detector to "positive peak".

**Manual operation:** See "[Detector](#)" on page 111

**[SENSe:][WINDow<n>:]DETEctor<t>[:FUNCTion]:AUTO <State>**

This command couples and decouples the detector to the trace mode.

**Suffix:**

<n>	<a href="#">Window</a>
<t>	<a href="#">Trace</a>

**Parameters:**

<State>	ON   OFF   0   1 *RST: 1
---------	-----------------------------

**Example:** DET:AUTO OFF  
The selection of the detector is not coupled to the trace mode.

**Manual operation:** See "[Detector](#)" on page 111

---

**[SENSe:]STATistic<n>:TYPE <TraceStatistic>**

**Suffix:**

<n> 1..n  
[Window](#)

**Parameters:**

<TraceStatistic> SEL | ALL

**SEL**

Only the selected pulse from each capture is included in the statistical evaluation of trace results. The pulse is selected using [\[SENSe:\]TRACe:MEASurement:DEFine:PULSe:SELEcted](#) on page 170.

**ALL**

All measured pulses from each capture are included in the statistical evaluation of trace results.

**Manual operation:** See "[Selected Pulse vs All Pulses](#)" on page 112

---

**[SENSe:]SWEEp:POINTs <SweepPoints>**

Sets/queries the number of trace points to be displayed and used for statistical evaluation.

**Parameters:**

<SweepPoints>

**Manual operation:** See "[Maximum number of trace points](#)" on page 112

---

## 9.15 Working with markers

- [Individual marker settings](#)..... 248
- [General marker settings](#)..... 253
- [Positioning the marker](#)..... 256

### 9.15.1 Individual marker settings

<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:AOFF</a> .....	249
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;ms&gt;:LINK:TO:MARKer&lt;md&gt;</a> .....	249
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;[:STATE]</a> .....	249
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:TRACe</a> .....	250
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:X</a> .....	250
<a href="#">CALCulate&lt;n&gt;:DELTamarker&lt;m&gt;:AOFF</a> .....	251
<a href="#">CALCulate&lt;n&gt;:DELTamarker&lt;m&gt;:LINK</a> .....	251
<a href="#">CALCulate&lt;n&gt;:DELTamarker&lt;ms&gt;:LINK:TO:MARKer&lt;md&gt;</a> .....	251
<a href="#">CALCulate&lt;n&gt;:DELTamarker&lt;m&gt;:MREFerence</a> .....	252



CALCulate<n>:DELTaMarker<m>[:STATe].....	252
CALCulate<n>:DELTaMarker<m>:TRACe.....	253
CALCulate<n>:DELTaMarker<m>:X.....	253

---

### CALCulate<n>:MARKer<m>:AOFF

This command turns off all markers.

**Suffix:**

<n>                      [Window](#)

<m>                      [Marker](#)

**Example:**              CALC:MARK:AOFF  
Switches off all markers.

**Manual operation:**    See "[All Markers Off](#)" on page 105

---

### CALCulate<n>:MARKer<ms>:LINK:TO:MARKer<md> <State>

This command links the normal source marker <ms> to any active destination marker <md> (normal or delta marker).

If you change the horizontal position of marker <md>, marker <ms> changes its horizontal position to the same value.

**Suffix:**

<n>                      [Window](#)

<ms>                     source marker, see [Marker](#)

<md>                     destination marker, see [Marker](#)

**Parameters:**

<State>                ON | OFF | 0 | 1  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on

**Example:**              CALC:MARK4:LINK:TO:MARK2 ON  
Links marker 4 to marker 2.

**Manual operation:**    See "[Linking to Another Marker](#)" on page 104

---

### CALCulate<n>:MARKer<m>[:STATe] <State>

This command turns markers on and off. If the corresponding marker number is currently active as a delta marker, it is turned into a normal marker.

**Suffix:**

<n>                      [Window](#)

<m>	Marker
<b>Parameters:</b>	
<State>	ON   OFF   0   1 <b>OFF   0</b> Switches the function off <b>ON   1</b> Switches the function on
<b>Example:</b>	CALC:MARK3 ON Switches on marker 3.
<b>Manual operation:</b>	See " <a href="#">Marker State</a> " on page 103 See " <a href="#">Marker Type</a> " on page 104 See " <a href="#">Select Marker</a> " on page 105

**CALCulate<n>:MARKer<m>:TRACe <Trace>**

This command selects the trace the marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<Trace>

**Example:** //Assign marker to trace 1  
CALC:MARK3:TRAC 2

**Manual operation:** See "[Assigning the Marker to a Trace](#)" on page 105

**CALCulate<n>:MARKer<m>:X <Position>**

This command moves a marker to a specific coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<Position> Numeric value that defines the marker position on the x-axis.  
The unit depends on the result display.

Range: The range depends on the current x-axis range.  
Default unit: Hz

**Example:**            `CALC:MARK2:X 1.7MHz`  
Positions marker 2 to frequency 1.7 MHz.

**Manual operation:** See "[Marker Table](#)" on page 31  
See "[X-value](#)" on page 103

#### **CALCulate<n>:DELTamarker<m>:AOFF**

This command turns off *all* delta markers.

**Suffix:**

<n>                    [Window](#)

<m>                    irrelevant

**Example:**            `CALC:DELT:AOFF`  
Turns off all delta markers.

#### **CALCulate<n>:DELTamarker<m>:LINK <State>**

This command links delta marker <m> to marker 1.

If you change the horizontal position (x-value) of marker 1, delta marker <m> changes its horizontal position to the same value.

**Suffix:**

<n>                    [Window](#)

<m>                    [Marker](#)

**Parameters:**

<State>              `ON | OFF | 0 | 1`  
**OFF | 0**  
Switches the function off  
**ON | 1**  
Switches the function on

**Example:**            `CALC:DELT2:LINK ON`

**Manual operation:** See "[Linking to Another Marker](#)" on page 104

#### **CALCulate<n>:DELTamarker<ms>:LINK:TO:MARKer<md> <State>**

This command links the delta source marker <ms> to any active destination marker <md> (normal or delta marker).

**Suffix:**

<n>                    [Window](#)

<ms>                  source marker, see [Marker](#)

<md>                  destination marker, see [Marker](#)

**Parameters:**

<State>              `ON | OFF | 0 | 1`

**OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

**Example:**`CALC:DELT4:LINK:TO:MARK2 ON`

Links the delta marker 4 to the marker 2.

**Manual operation:** See ["Linking to Another Marker"](#) on page 104**CALCulate<n>:DELTaMarker<m>:MREFerence <Reference>**

This command selects a reference marker for a delta marker other than marker 1.

The reference may be another marker or the fixed reference.

**Suffix:**<n> [Window](#)<m> [Marker](#)**Parameters:**<Reference> **1 to 16**

Selects markers 1 to 16 as the reference.

**FIXed**

Selects the fixed reference as the reference.

**D1**

Selects the deltamarker 1 as the reference.

**Example:**`CALC:DELT3:MREF 2`

Specifies that the values of delta marker 3 are relative to marker 2.

**Manual operation:** See ["Reference Marker"](#) on page 104**CALCulate<n>:DELTaMarker<m>[:STATe] <State>**

This command turns delta markers on and off.

If necessary, the command activates the delta marker first.

No suffix at DELTmarker turns on delta marker 1.

**Suffix:**<n> [Window](#)<m> [Marker](#)**Parameters:**<State> **ON | OFF | 0 | 1****OFF | 0**

Switches the function off

**ON | 1**

Switches the function on

**Example:** `CALC:DELT2 ON`  
Turns on delta marker 2.

**Manual operation:** See "[Marker State](#)" on page 103  
See "[Marker Type](#)" on page 104  
See "[Select Marker](#)" on page 105

#### **CALCulate<n>:DELTaMarker<m>:TRACe <Trace>**

This command selects the trace a delta marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<Trace> Trace number the marker is assigned to.

**Example:** `CALC:DELT2:TRAC 2`  
Positions delta marker 2 on trace 2.

#### **CALCulate<n>:DELTaMarker<m>:X <Position>**

This command moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Parameters:**

<Position> Numeric value that defines the marker position on the x-axis.

Range: The value range and unit depend on the measurement and scale of the x-axis.

**Example:** `CALC:DELT:X?`  
Outputs the absolute x-value of delta marker 1.

**Manual operation:** See "[X-value](#)" on page 103

## 9.15.2 General marker settings

<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:LINK.....</a>	254
<a href="#">CALCulate&lt;n&gt;:DELTaMarker&lt;m&gt;:LINK:TRENd.....</a>	254
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:LINK:TRENd.....</a>	254

CALCulate<n>:MARKer<m>:PEXCursion.....	254
DISPlay[:WINDow<n>]:MINFo[:STATE].....	255
DISPlay[:WINDow<n>]:MTABLE.....	255

---

### CALCulate<n>:MARKer<m>:LINK <State>

This command defines whether the markers in all diagrams with the same x-axis are linked. If enabled, and you move one marker along the x-axis, all other markers are moved to the same x-axis position.

**Suffix:**

<m>                    irrelevant

<n>                    irrelevant

**Parameters:**

<State>                ON | OFF | 1 | 0

\*RST:                0

**Example:**

CALC2:MARK:LINK ON

Links all markers across all diagrams. The window selection 2 is irrelevant.

**Manual operation:** See "[Linked Markers Across Windows](#)" on page 107

---

### CALCulate<n>:DELTaMarker<m>:LINK:TREND <State>

### CALCulate<n>:MARKer<m>:LINK:TREND <State>

If enabled, marker M1 in Parameter Trend displays is linked to the pulse selection. Thus, if you move the marker M1 to a different pulse, the [Pulse selection](#) is set to the same pulse, and vice versa.

This command requires the markers to be linked across all windows ([CALCulate<n>:MARKer<m>:LINK ON](#)). If the [CALCulate<n>:MARKer<m>:LINK:TREND](#) command is enabled, the [CALCulate<n>:MARKer<m>:LINK](#) command is automatically also enabled, if necessary.

**Suffix:**

<n>, <m>                irrelevant

**Parameters:**

<State>                ON | OFF | 1 | 0

\*RST:                0

**Example:**

CALC:MARK:LINK ON

CALC:MARK:LINK:TREN ON

**Manual operation:** See "[Link Trend M1 to Selected Pulse](#)" on page 107

---

### CALCulate<n>:MARKer<m>:PEXCursion <Excursion>

This command defines the peak excursion (for *all* markers in *all* windows).

The peak excursion sets the requirements for a peak to be detected during a peak search.

The unit depends on the measurement.

**Suffix:**

<n> irrelevant

<m> irrelevant

**Manual operation:** See "[Peak Excursion](#)" on page 108

**DISPlay[:WINDow<n>]:MINFo[:STATe] <State>**

This command turns the marker information in all diagrams on and off.

**Suffix:**

<n> irrelevant

**Parameters:**

<State>

**ON | 1**

Displays the marker information in the diagrams.

**OFF | 0**

Hides the marker information in the diagrams.

\*RST: 1

**Example:**

DISP:MINF OFF

Hides the marker information.

**Manual operation:** See "[Marker Info](#)" on page 106

**DISPlay[:WINDow<n>]:MTABle <DisplayMode>**

This command turns the marker table on and off.

**Suffix:**

<n> irrelevant

**Parameters:**

<DisplayMode>

**ON | 1**

Turns on the marker table.

**OFF | 0**

Turns off the marker table.

**AUTO**

Turns on the marker table if 3 or more markers are active.

\*RST: AUTO

**Example:**

DISP:MTAB ON

Activates the marker table.

**Manual operation:** See "[Marker Table Display](#)" on page 106

### 9.15.3 Positioning the marker

This chapter contains remote commands necessary to position the marker on a trace.

- [Positioning normal markers](#).....256
- [Positioning delta markers](#).....258

#### 9.15.3.1 Positioning normal markers

The following commands position markers on the trace.

<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:MAXimum:LEFT</a> .....	256
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:MAXimum:NEXT</a> .....	256
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:MAXimum[:PEAK]</a> .....	256
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:MAXimum:RIGHT</a> .....	257
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:MINimum:LEFT</a> .....	257
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:MINimum:NEXT</a> .....	257
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:MINimum[:PEAK]</a> .....	257
<a href="#">CALCulate&lt;n&gt;:MARKer&lt;m&gt;:MINimum:RIGHT</a> .....	257

---

#### **CALCulate<n>:MARKer<m>:MAXimum:LEFT**

This command moves a marker to the next positive peak.

The search includes only measurement values to the left of the current marker position.

**Suffix:**

<n>	<a href="#">Window</a>
<m>	<a href="#">Marker</a>

---

#### **CALCulate<n>:MARKer<m>:MAXimum:NEXT**

This command moves a marker to the next positive peak.

**Suffix:**

<n>	<a href="#">Window</a>
<m>	<a href="#">Marker</a>

---

#### **CALCulate<n>:MARKer<m>:MAXimum[:PEAK]**

This command moves a marker to the highest level.

If the marker is not yet active, the command first activates the marker.

**Suffix:**

<n>	<a href="#">Window</a>
<m>	<a href="#">Marker</a>

**Manual operation:** See "[Peak Search](#)" on page 109



**CALCulate<n>:MARKer<m>:MAXimum:RIGHT**

This command moves a marker to the next positive peak.

The search includes only measurement values to the right of the current marker position.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

---

**CALCulate<n>:MARKer<m>:MINimum:LEFT**

This command moves a marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

---

**CALCulate<n>:MARKer<m>:MINimum:NEXT**

This command moves a marker to the next minimum peak value.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

---

**CALCulate<n>:MARKer<m>:MINimum[:PEAK]**

This command moves a marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Manual operation:** See "[Search Minimum](#)" on page 109

---

**CALCulate<n>:MARKer<m>:MINimum:RIGHT**

This command moves a marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

**Suffix:**

<n> [Window](#)

<m>                      Marker

### 9.15.3.2 Positioning delta markers

The following commands position delta markers on the trace.

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT.....	258
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT.....	258
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK].....	258
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT.....	259
CALCulate<n>:DELTamarker<m>:MINimum:LEFT.....	259
CALCulate<n>:DELTamarker<m>:MINimum:NEXT.....	259
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK].....	259
CALCulate<n>:DELTamarker<m>:MINimum:RIGHT.....	259

---

#### CALCulate<n>:DELTamarker<m>:MAXimum:LEFT

This command moves a delta marker to the next positive peak value.

The search includes only measurement values to the left of the current marker position.

**Suffix:**

<n>                      Window

<m>                      Marker

---

#### CALCulate<n>:DELTamarker<m>:MAXimum:NEXT

This command moves a marker to the next positive peak value.

**Suffix:**

<n>                      1..n  
Window

<m>                      1..n  
Marker

---

#### CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]

This command moves a delta marker to the highest level.

If the marker is not yet active, the command first activates the marker.

**Suffix:**

<n>                      Window

<m>                      Marker

**Manual operation:** See "Peak Search" on page 109

**CALCulate<n>:DELTaMarker<m>:MAXimum:RIGHT**

This command moves a delta marker to the next positive peak value on the trace.

The search includes only measurement values to the right of the current marker position.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

---

**CALCulate<n>:DELTaMarker<m>:MINimum:LEFT**

This command moves a delta marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

---

**CALCulate<n>:DELTaMarker<m>:MINimum:NEXT**

This command moves a marker to the next minimum peak value.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

---

**CALCulate<n>:DELTaMarker<m>:MINimum[:PEAK]**

This command moves a delta marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

**Manual operation:** See "[Search Minimum](#)" on page 109

---

**CALCulate<n>:DELTaMarker<m>:MINimum:RIGHT**

This command moves a delta marker to the next minimum peak value.

The search includes only measurement values to the right of the current marker position.

**Suffix:**

<n> [Window](#)

<m> [Marker](#)

## 9.16 Retrieving results

The following commands are required to retrieve the calculated pulse parameters.

Note that for each pulse result query you can specify for which pulse(s) you require results:

- **ALL:** for all pulses detected in the entire measurement
- **CURRent:** for all pulses in the current capture buffer
- **SELEcted:** only for the currently selected pulse

For each pulse result, you can query either the current value (default) or the following statistical values for the pulses detected in the capture buffer or the entire measurement:

- **AVER:** average of the results
- **MIN:** minimum of the results
- **MAX:** maximum of the results
- **SDEV:** standard deviation of the results

To determine how many pulses were considered for statistical evaluation, see [\[SENSe:\] PULSe:<ParameterGroup>:<Parameter>:COUNT?](#) on page 268.

• <a href="#">Retrieving and storing trace data</a> .....	260
• <a href="#">Retrieving information on detected pulses</a> .....	264
• <a href="#">Retrieving parameter results</a> .....	269
• <a href="#">Retrieving limit results</a> .....	319
• <a href="#">Exporting trace results to an ASCII file</a> .....	321
• <a href="#">Exporting table results to an ASCII file</a> .....	323

### 9.16.1 Retrieving and storing trace data

In order to retrieve the trace results in a remote environment, use the following command:

---

**TRACe**<n>[:**DATA**]? <Trace>

This command queries the y-values in the selected result display. It is only available for graphical displays.

For each trace point, the measured or calculated value is returned. For the Magnitude Capture display, the maximum y-value for each trace point is returned.

The unit depends on the display and on the unit you have currently set.

**Suffix:**

<n> [Window](#)

**Query parameters:**

<Trace> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6  
The trace number whose values are to be returned.

**Usage:** Query only

**Manual operation:** See ["Magnitude Capture"](#) on page 30  
See ["Parameter Distribution"](#) on page 31  
See ["Parameter Spectrum"](#) on page 32  
See ["Pulse Frequency"](#) on page 34  
See ["Pulse Magnitude"](#) on page 35  
See ["Pulse Phase"](#) on page 36  
See ["Pulse Phase \(Wrapped\)"](#) on page 36  
See ["Pulse-Pulse Spectrum"](#) on page 38  
See ["Result Range Spectrum"](#) on page 40

**TRACe<n>[:DATA]:X? <Trace>**

This remote control command returns the X values only for the trace in the selected result display. Depending on the type of result display and the scaling of the x-axis, this can be either the pulse number or a timestamp for each detected pulse in the capture buffer.

This command is only available for graphical displays, except for the Magnitude Capture display.

**Suffix:**

<n> 1..n  
[Window](#)

**Query parameters:**

<Trace> TRACe1 | TRACe2 | TRACe3 | TRACe4 | TRACe5 | TRACe6  
The trace number whose values are to be returned.

**Return values:**

<Data> <char\_data>

**Example:** See [Chapter 9.19, "Programming example: pulse measurement"](#), on page 327.

**Usage:** Query only

**TRACe:IQ:DATA?**

This command initiates a measurement with the current settings and returns the captured data from I/Q measurements.

This command corresponds to:

```
INIT:IMM;*WAI;:TRACe:IQ:DATA:MEMory?
```

However, the TRACe:IQ:DATA? command is quicker in comparison.

**Return values:**

<Results> Measured voltage for I and Q component for each sample that has been captured during the measurement.

Default unit: V

**Example:**

```
TRAC:IQ:STAT ON
```

Enables acquisition of I/Q data

```
TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,0,4096
```

Measurement configuration:

Sample Rate = 32 MHz

Trigger Source = External

Trigger Slope = Positive

Pretrigger Samples = 0

Number of Samples = 4096

```
FORMat REAL,32
```

Selects format of response data

```
TRAC:IQ:DATA?
```

Starts measurement and reads results

**Usage:**

Query only

**TRACe:IQ:DATA:MEMory? [<OffsetSamples>,<NoOfSamples>]**

This command queries the I/Q data currently stored in the capture buffer of the R&S FSMR3.

By default, the command returns all I/Q data in the memory. You can, however, narrow down the amount of data that the command returns using the optional parameters.

If no parameters are specified with the command, the entire trace data is retrieved.

In this case, the command returns the same results as [TRACe:IQ:DATA?](#). (Note, however, that the `TRAC:IQ:DATA?` command initiates a new measurement before returning the captured values, rather than returning the existing data in the memory.)

The command returns a comma-separated list of the measured values in floating point format (comma-separated values = CSV). The number of values returned is 2 \* the number of complex samples.

The total number of complex samples is displayed in the channel bar in manual operation and can be calculated as:

$$\text{<SampleRate> * <CaptureTime>}$$
**Query parameters:**

<OffsetSamples> Selects an offset at which the output of data should start in relation to the first data. If omitted, all captured samples are output, starting with the first sample.

Range: 0 to <# of samples> – 1, with <# of samples> being the maximum number of captured values

\*RST: 0

<NoOfSamples> Number of samples you want to query, beginning at the offset you have defined. If omitted, all captured samples (starting at offset) are output.

Range: 1 to <# of samples> - <offset samples> with <# of samples> maximum number of captured values

\*RST: <# of samples>

**Return values:**

<IQData> Measured value pair (I,Q) for each sample that has been recorded.

The first half of the list contains the I values, the second half the Q values.

The data format of the individual values depends on [FORMat \[ : DATA\]](#) on page 321.

Default unit: V

**Example:**

```
// Perform a single I/Q capture.
INIT; *WAI
// Determine output format (binary float32)
FORMat REAL, 32
// Read 1024 I/Q samples starting at sample 2048.
TRAC: IQ: DATA: MEM? 2048, 1024
```

**Usage:** Query only

**TRACe: IQ: DATA: RRANge?**

This command queries the I/Q data currently stored in the memory of the R&S FSMR3 for the defined result range (see [Chapter 9.12.2, "Defining the result range"](#), on page 171).

**Return values:**

<IQData> Measured value pair (I,Q) for each sample that has been recorded.

The data format depends on [FORMat \[ : DATA\]](#).

Default unit: V

**Example:**

```
TRAC: IQ: DATA: RRAN?
```

**Usage:** Query only

**MMEMory: STORe<n>: TRACe <Trace>, <FileName>**

This command exports trace data from the specified window to an ASCII file.

For details on the file format, see [Chapter A, "Reference: ASCII file export format"](#), on page 335.

**Secure User Mode**

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details, see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSMR3000 base unit user manual.

**Suffix:**

<n> [Window](#)

**Parameters:**

<Trace> Number of the trace to be stored

<FileName> String containing the path and name of the target file.

**Example:**

MMEM:STOR1:TRAC 1, 'C:\TEST.ASC'

Stores trace 1 from window 1 in the file TEST.ASC.

**Example:**

See [Chapter 9.19, "Programming example: pulse measurement"](#), on page 327.

**Manual operation:** See ["Export Trace to ASCII File"](#) on page 115

## 9.16.2 Retrieving information on detected pulses

The following commands return general information on the currently selected or all detected pulses.

[SENSe:]PULSe:COUNT?	266
[SENSe:]PULSe:EMODEl:FBPTime:COUNT?	266
[SENSe:]PULSe:EMODEl:FHPLLevel:COUNT?	266
[SENSe:]PULSe:EMODEl:FHPTTime:COUNT?	266
[SENSe:]PULSe:EMODEl:FLPLLevel:COUNT?	266
[SENSe:]PULSe:EMODEl:FLPTTime:COUNT?	266
[SENSe:]PULSe:EMODEl:FMPLLevel:COUNT?	266
[SENSe:]PULSe:EMODEl:FMPTTime:COUNT?	266
[SENSe:]PULSe:EMODEl:FTPLLevel:COUNT?	266
[SENSe:]PULSe:EMODEl:FTPTTime:COUNT?	266
[SENSe:]PULSe:EMODEl:RBPTTime:COUNT?	266
[SENSe:]PULSe:EMODEl:RHPLLevel:COUNT?	266
[SENSe:]PULSe:EMODEl:RHPTTime:COUNT?	266
[SENSe:]PULSe:EMODEl:RLPLLevel:COUNT?	266
[SENSe:]PULSe:EMODEl:RLPTTime:COUNT?	266
[SENSe:]PULSe:EMODEl:RMPLLevel:COUNT?	266
[SENSe:]PULSe:EMODEl:RMPTTime:COUNT?	266
[SENSe:]PULSe:EMODEl:RTPLLevel:COUNT?	266
[SENSe:]PULSe:EMODEl:RTPTTime:COUNT?	266
[SENSe:]PULSe:FREQuency:CRATe:COUNT?	266
[SENSe:]PULSe:FREQuency:DEViation:COUNT?	266
[SENSe:]PULSe:FREQuency:PERRor:COUNT?	266



[SENSe:]PULSe:FREQuency:POINt:COUNT?.....	266
[SENSe:]PULSe:FREQuency:PPFREquency:COUNT?.....	266
[SENSe:]PULSe:FREQuency:RERRor:COUNT?.....	266
[SENSe:]PULSe:PHASe:DEViation:COUNT?.....	267
[SENSe:]PULSe:PHASe:PERRor:COUNT?.....	267
[SENSe:]PULSe:PHASe:POINt:COUNT?.....	267
[SENSe:]PULSe:PHASe:PPPHase:COUNT?.....	267
[SENSe:]PULSe:PHASe:RERRor:COUNT?.....	267
[SENSe:]PULSe:POWer:ADRoop:DB:COUNT?.....	267
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:COUNT?.....	267
[SENSe:]PULSe:POWer:AMPL:l:COUNT?.....	267
[SENSe:]PULSe:POWer:AMPL:Q:COUNT?.....	267
[SENSe:]PULSe:POWer:AMPLitude:COUNT?.....	267
[SENSe:]PULSe:POWer:AVG:COUNT?.....	267
[SENSe:]PULSe:POWer:BASE:COUNT?.....	267
[SENSe:]PULSe:POWer:MAX:COUNT?.....	267
[SENSe:]PULSe:POWer:MIN:COUNT?.....	267
[SENSe:]PULSe:POWer:ON:COUNT?.....	267
[SENSe:]PULSe:POWer:OVERshoot:DB:COUNT?.....	267
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:COUNT?.....	267
[SENSe:]PULSe:POWer:PAVG:COUNT?.....	267
[SENSe:]PULSe:POWer:PMIN:COUNT?.....	267
[SENSe:]PULSe:POWer:POINt:COUNT?.....	267
[SENSe:]PULSe:POWer:PON:COUNT?.....	267
[SENSe:]PULSe:POWer:PPRatio:COUNT?.....	267
[SENSe:]PULSe:POWer:RIPple:DB:COUNT?.....	267
[SENSe:]PULSe:POWer:RIPple[:PERCent]:COUNT?.....	267
[SENSe:]PULSe:POWer:TOP:COUNT?.....	267
[SENSe:]PULSe:STABILITY:AMPLitude:COUNT?.....	267
[SENSe:]PULSe:STABILITY:BURSt:COUNT?.....	267
[SENSe:]PULSe:STABILITY:PHASe:COUNT?.....	267
[SENSe:]PULSe:STABILITY:PIBurst:COUNT?.....	267
[SENSe:]PULSe:STABILITY:TOTal:COUNT?.....	267
[SENSe:]PULSe:TIMing:DCYClE:COUNT?.....	267
[SENSe:]PULSe:TIMing:DRATio:COUNT?.....	267
[SENSe:]PULSe:TIMing:FALL:COUNT?.....	267
[SENSe:]PULSe:TIMing:OFF:COUNT?.....	267
[SENSe:]PULSe:TIMing:PRF:COUNT?.....	267
[SENSe:]PULSe:TIMing:PRI:COUNT?.....	267
[SENSe:]PULSe:TIMing:PWIDth:COUNT?.....	267
[SENSe:]PULSe:TIMing:RISE:COUNT?.....	267
[SENSe:]PULSe:TIMing:SETTling:COUNT?.....	267
[SENSe:]PULSe:TIMing:TSTamp:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:AMPower:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:CRATio:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:IMPower:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:ISLevel:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:MFRequency:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:MPHase:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:MWIDth:COUNT?.....	267

[SENSe:]PULSe:TSIDelobe:PCORrelation:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:PSLevel:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:SDELay:COUNT?.....	268
[SENSe:]PULSe:<ParameterGroup>:<Parameter>:COUNT?.....	268
[SENSe:]PULSe:ID?.....	268
[SENSe:]PULSe:NUMBer?.....	268
TRACe:IQ:TPISample?.....	269

---

### [SENSe:]PULSe:COUNT? <QueryRange>

Queries the number of detected pulses in the current capture buffer or the entire measurement.

#### Query parameters:

<QueryRange>      CURRent | ALL

#### **CURRent**

Detected pulses in the current capture buffer

#### **ALL**

All detected pulses in the entire measurement.

**Example:**              PULS:COUN?

**Usage:**                Query only

**Manual operation:**   See "Pulse Results" on page 37

---

[SENSe:]PULSe:EMODEl:FBPTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:FHPLLevel:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:FHPTTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:FLPLLevel:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:FLPTTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:FMPLevel:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:FMPTTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:FTPLLevel:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:FTPTTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RBPTTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RHPLLevel:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RHPTTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RLPLLevel:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RLPTTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RMPLLevel:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RMPTTime:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RTPLevel:COUNT? <QueryRange>
[SENSe:]PULSe:EMODEl:RTPTime:COUNT? <QueryRange>
[SENSe:]PULSe:FREQuency:CRATe:COUNT? <QueryRange>
[SENSe:]PULSe:FREQuency:DEViation:COUNT? <QueryRange>
[SENSe:]PULSe:FREQuency:PERRor:COUNT? <QueryRange>
[SENSe:]PULSe:FREQuency:POINT:COUNT? <QueryRange>
[SENSe:]PULSe:FREQuency:PPFRrequency:COUNT? <QueryRange>
[SENSe:]PULSe:FREQuency:RERRor:COUNT? <QueryRange>

```

[SENSe:]PULSe:PHASe:DEVIation:COUNT? <QueryRange>
[SENSe:]PULSe:PHASe:PERRor:COUNT? <QueryRange>
[SENSe:]PULSe:PHASe:POINt:COUNT? <QueryRange>
[SENSe:]PULSe:PHASe:PPPHase:COUNT? <QueryRange>
[SENSe:]PULSe:PHASe:RERRor:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:ADRoop:DB:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:AMPL:I:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:AMPL:Q:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:AVG:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:BASE:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:MAX:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:MIN:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:ON:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot:DB:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:PAVG:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:PMIN:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:POINt:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:PON:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:PPRatio:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:RIPPLe:DB:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:RIPPLe[:PERCent]:COUNT? <QueryRange>
[SENSe:]PULSe:POWer:TOP:COUNT? <QueryRange>
[SENSe:]PULSe:STABILity:AMPLitude:COUNT? <QueryRange>
[SENSe:]PULSe:STABILity:BURSt:COUNT? <QueryRange>
[SENSe:]PULSe:STABILity:PHASe:COUNT? <QueryRange>
[SENSe:]PULSe:STABILity:PIBurst:COUNT? <QueryRange>
[SENSe:]PULSe:STABILity:TOTal:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:DCYClE:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:DRATio:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:FALL:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:OFF:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:PRF:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:PRI:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:PWIDth:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:RISE:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:SETTLing:COUNT? <QueryRange>
[SENSe:]PULSe:TIMing:TSTamp:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:AMPower:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:CRATio:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:IMPower:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:ISLevel:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:MFRequency:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:MPHase:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:MWIDth:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:PCORrelation:COUNT? <QueryRange>
[SENSe:]PULSe:TSIDelobe:PSLevel:COUNT? <QueryRange>

```

**[SENSe:]PULSe:TSIDelobe:SDElay:COUNt? <QueryRange>**

**[SENSe:]PULSe:<ParameterGroup>:<Parameter>:COUNt? <QueryRange>**

Returns the number of pulses considered for statistical evaluation of the specified result.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>            integer  
Number of pulses

**Example:**

PULS:POW:ADR:DB:COUN? CURR

Returns the number of pulses used to determine the statistical values for amplitude droop in dB in the current capture buffer.

**Usage:**            Query only

**Manual operation:** See "[Pulse Statistics](#)" on page 39

**[SENSe:]PULSe:ID? <QueryRange>**

Queries the ids of the detected pulses, i.e the unique index within the entire measurement (as opposed to [\[SENSe:\]PULSe:NUMBER?](#)).

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**            Query only

**[SENSe:]PULSe:NUMBER? <QueryRange>**

Queries the detected pulse numbers, i.e. the index within the capture buffer (as opposed to [\[SENSe:\]PULSe:ID?](#)).

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer


**ALL**

All detected pulses in the entire measurement.

**Usage:**            Query only

**TRACe:IQ:TPISample?**

This command queries the time offset between the sample start and the trigger event (trigger point in sample = TPIS). Since the R&S FSMR3 usually samples with a much higher sample rate than the specific application actually requires, the trigger point determined internally is much more precise than the one determined from the (down-sampled) data in the application. Thus, the TPIS indicates the offset between the sample start and the actual trigger event.

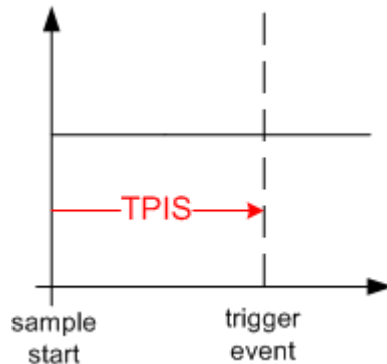

This value can only be determined in triggered measurements using external or IFPower triggers, otherwise the value is 0.

**Return values:**

<TPIS>                    numeric value  
                               Default unit: s

**Example:**

TRAC:IQ:TPIS?

Result for a sample rate of 1 MHz: between 0 and 1/1 MHz, i.e. between 0 and 1  $\mu$ s (the duration of 1 sample).

**Usage:**

Query only

**9.16.3 Retrieving parameter results**

The following commands return the calculated pulse parameters.

For details on the individual parameters see [Chapter 3.1.2, "Power/amplitude parameters"](#), on page 19.

To determine how many pulses were considered for statistical evaluation, see [\[SENSe:\]PULSe:<ParameterGroup>:<Parameter>:COUNT?](#) on page 268.

- [Retrieving power / amplitude parameters](#)..... 270
- [Retrieving timing parameters](#)..... 287
- [Retrieving frequency parameters](#)..... 296
- [Retrieving phase parameters](#)..... 301
- [Retrieving envelope model parameters](#)..... 305

### 9.16.3.1 Retrieving power / amplitude parameters

The following commands return the calculated pulse parameters.

For details on the individual parameters see [Chapter 3.1.2, "Power/amplitude parameters"](#), on page 19.

[SENSe:]PULSe:POWer:ADRoop:DB?	272
[SENSe:]PULSe:POWer:ADRoop:DB:AVERAge?	272
[SENSe:]PULSe:POWer:ADRoop:DB:MAXimum?	272
[SENSe:]PULSe:POWer:ADRoop:DB:MINimum?	272
[SENSe:]PULSe:POWer:ADRoop:DB:SDEVIation?	272
[SENSe:]PULSe:POWer:ADRoop[:PERCent]?	272
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:AVERAge?	273
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:MAXimum?	273
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:MINimum?	273
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:SDEVIation?	273
[SENSe:]PULSe:POWer:AMPLitude?	273
[SENSe:]PULSe:POWer:AMPLitude:AVERAge?	274
[SENSe:]PULSe:POWer:AMPLitude:MAXimum?	274
[SENSe:]PULSe:POWer:AMPLitude:MINimum?	274
[SENSe:]PULSe:POWer:AMPLitude:SDEVIation?	274
[SENSe:]PULSe:POWer:AMPLitude:I?	274
[SENSe:]PULSe:POWer:AMPLitude:I:AVERAge?	274
[SENSe:]PULSe:POWer:AMPLitude:I:MAXimum?	274
[SENSe:]PULSe:POWer:AMPLitude:I:MINimum?	274
[SENSe:]PULSe:POWer:AMPLitude:I:SDEVIation?	274
[SENSe:]PULSe:POWer:AMPLitude:Q?	275
[SENSe:]PULSe:POWer:AMPLitude:Q:AVERAge?	275
[SENSe:]PULSe:POWer:AMPLitude:Q:MAXimum?	275
[SENSe:]PULSe:POWer:AMPLitude:Q:MINimum?	275
[SENSe:]PULSe:POWer:AMPLitude:Q:SDEVIation?	275
[SENSe:]PULSe:POWer:AVG?	275
[SENSe:]PULSe:POWer:AVG:AVERAge?	276
[SENSe:]PULSe:POWer:AVG:MAXimum?	276
[SENSe:]PULSe:POWer:AVG:MINimum?	276
[SENSe:]PULSe:POWer:AVG:SDEVIation?	276
[SENSe:]PULSe:POWer:BASE?	276
[SENSe:]PULSe:POWer:BASE:AVERAge?	276
[SENSe:]PULSe:POWer:BASE:MAXimum?	276
[SENSe:]PULSe:POWer:BASE:MINimum?	277
[SENSe:]PULSe:POWer:BASE:SDEVIation?	277
[SENSe:]PULSe:POWer:MAX?	277
[SENSe:]PULSe:POWer:MAX:AVERAge?	277
[SENSe:]PULSe:POWer:MAX:MAXimum?	277
[SENSe:]PULSe:POWer:MAX:MINimum?	277
[SENSe:]PULSe:POWer:MAX:SDEVIation?	277
[SENSe:]PULSe:POWer:MIN?	278
[SENSe:]PULSe:POWer:MIN:AVERAge?	278
[SENSe:]PULSe:POWer:MIN:MAXimum?	278
[SENSe:]PULSe:POWer:MIN:MINimum?	278

[SENSe:]PULSe:POWer:MIN:SDEVIation?	278
[SENSe:]PULSe:POWer:ON?	278
[SENSe:]PULSe:POWer:ON:AVERage?	279
[SENSe:]PULSe:POWer:ON:MAXimum?	279
[SENSe:]PULSe:POWer:ON:MINimum?	279
[SENSe:]PULSe:POWer:ON:SDEVIation?	279
[SENSe:]PULSe:POWer:OVERshoot:DB?	279
[SENSe:]PULSe:POWer:OVERshoot:DB:AVERage?	280
[SENSe:]PULSe:POWer:OVERshoot:DB:MAXimum?	280
[SENSe:]PULSe:POWer:OVERshoot:DB:MINimum?	280
[SENSe:]PULSe:POWer:OVERshoot:DB:SDEVIation?	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]?	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:AVERage?	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:MAXimum?	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:MINimum?	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:SDEVIation?	280
[SENSe:]PULSe:POWer:PAVG?	281
[SENSe:]PULSe:POWer:PAVG:AVERage?	281
[SENSe:]PULSe:POWer:PAVG:MAXimum?	281
[SENSe:]PULSe:POWer:PAVG:MINimum?	281
[SENSe:]PULSe:POWer:PAVG:SDEVIation?	281
[SENSe:]PULSe:POWer:PMIN?	281
[SENSe:]PULSe:POWer:PMIN:AVERage?	282
[SENSe:]PULSe:POWer:PMIN:MAXimum?	282
[SENSe:]PULSe:POWer:PMIN:MINimum?	282
[SENSe:]PULSe:POWer:PMIN:SDEVIation?	282
[SENSe:]PULSe:POWer:POINT?	282
[SENSe:]PULSe:POWer:POINT:AVERage?	283
[SENSe:]PULSe:POWer:POINT:MAXimum?	283
[SENSe:]PULSe:POWer:POINT:MINimum?	283
[SENSe:]PULSe:POWer:POINT:SDEVIation?	283
[SENSe:]PULSe:POWer:PON?	283
[SENSe:]PULSe:POWer:PON:AVERage?	283
[SENSe:]PULSe:POWer:PON:MAXimum?	283
[SENSe:]PULSe:POWer:PON:MINimum?	283
[SENSe:]PULSe:POWer:PON:SDEVIation?	283
[SENSe:]PULSe:POWer:PPRatio?	284
[SENSe:]PULSe:POWer:PPRatio:AVERage?	284
[SENSe:]PULSe:POWer:PPRatio:MAXimum?	284
[SENSe:]PULSe:POWer:PPRatio:MINimum?	284
[SENSe:]PULSe:POWer:PPRatio:SDEVIation?	284
[SENSe:]PULSe:POWer:RIPPlE:DB?	285
[SENSe:]PULSe:POWer:RIPPlE:DB:AVERage?	285
[SENSe:]PULSe:POWer:RIPPlE:DB:MAXimum?	285
[SENSe:]PULSe:POWer:RIPPlE:DB:MINimum?	285
[SENSe:]PULSe:POWer:RIPPlE:DB:SDEVIation?	285
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]?	285
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:AVERage?	286
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:MAXimum?	286
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:MINimum?	286

[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:SDEViation?.....	286
[SENSe:]PULSe:POWer:TOP?.....	286
[SENSe:]PULSe:POWer:TOP:AVERAge?.....	286
[SENSe:]PULSe:POWer:TOP:MAXimum?.....	286
[SENSe:]PULSe:POWer:TOP:MINimum?.....	286
[SENSe:]PULSe:POWer:TOP:SDEViation?.....	286

---

### [SENSe:]PULSe:POWer:ADRoop:DB? <QueryRange>

Returns the amplitude droop in dB for the specified pulse(s).

#### Query parameters:

<QueryRange>      SELEcted | CURREnt | ALL

#### **SELEcted**

Currently selected pulse

#### **CURREnt**

Detected pulses in the current capture buffer

#### **ALL**

All detected pulses in the entire measurement.

#### Return values:

<Result>            <char\_data>

**Usage:**            Query only

**Manual operation:**    See "[Droop](#)" on page 21

---

### [SENSe:]PULSe:POWer:ADRoop:DB:AVERAge? <QueryRange>

### [SENSe:]PULSe:POWer:ADRoop:DB:MAXimum? <QueryRange>

### [SENSe:]PULSe:POWer:ADRoop:DB:MINimum? <QueryRange>

### [SENSe:]PULSe:POWer:ADRoop:DB:SDEViation? <QueryRange>

Returns the statistical value for the amplitude droop in dB over the specified pulses.

#### Query parameters:

<QueryRange>      CURREnt | ALL

#### **CURREnt**

Detected pulses in the current capture buffer

#### **ALL**

All detected pulses in the entire measurement.

#### Return values:

<Result>            <char\_data>

**Usage:**            Query only

---

### [SENSe:]PULSe:POWer:ADRoop[:PERCent]? <QueryRange>

Returns the amplitude droop in percent for the specified pulse(s).

#### Query parameters:

<QueryRange>      SELEcted | CURREnt | ALL



**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**Manual operation:** See "[Droop](#)" on page 21**[SENSe:]PULSe:POWer:ADRoop[:PERCent]:AVERAge?** <QueryRange>**[SENSe:]PULSe:POWer:ADRoop[:PERCent]:MAXimum?** <QueryRange>**[SENSe:]PULSe:POWer:ADRoop[:PERCent]:MINimum?** <QueryRange>**[SENSe:]PULSe:POWer:ADRoop[:PERCent]:SDEVIation?** <QueryRange>

Returns the statistical value for the amplitude droop in percent over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**[SENSe:]PULSe:POWer:AMPLitude?** <QueryRange>

Returns the pulse amplitude for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**Manual operation:** See ["Pulse Amplitude"](#) on page 20

---

```
[SENSe:]PULSe:POWer:AMPLitude:AVERage? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:MAXimum? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:MINimum? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:SDEVIation? <QueryRange>
```

Returns the statistical value for the pulse amplitude over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**  
Detected pulses in the current capture buffer

**ALL**  
All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

---

```
[SENSe:]PULSe:POWer:AMPLitude:I? <QueryRange>
```

Returns the in-phase amplitude for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**  
Currently selected pulse

**CURRent**  
Detected pulses in the current capture buffer

**ALL**  
All detected pulses in the entire measurement.

**Usage:**            Query only

**Manual operation:** See ["In-Phase Amplitude/Quadrature Amplitude"](#) on page 20  
See ["Pulse I and Q"](#) on page 35

---

```
[SENSe:]PULSe:POWer:AMPLitude:I:AVERage? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:I:MAXimum? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:I:MINimum? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:I:SDEVIation? <QueryRange>
```

Returns the statistical value for the in-phase amplitude over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**  
Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**[SENSe:]PULSe:POWer:AMPLitude:Q? <QueryRange>**

Returns the quadrature amplitude for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**Manual operation:** See ["In-Phase Amplitude/Quadrature Amplitude"](#) on page 20  
See ["Pulse I and Q"](#) on page 35**[SENSe:]PULSe:POWer:AMPLitude:Q:AVERage? <QueryRange>****[SENSe:]PULSe:POWer:AMPLitude:Q:MAXimum? <QueryRange>****[SENSe:]PULSe:POWer:AMPLitude:Q:MINimum? <QueryRange>****[SENSe:]PULSe:POWer:AMPLitude:Q:SDEVIation? <QueryRange>**

Returns the statistical value for the quadrature amplitude over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**[SENSe:]PULSe:POWer:AVG? <QueryRange>**

Returns the average transmission power for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See "[Average Tx Power](#)" on page 20

[SENSe:]PULSe:POWer:AVG:AVERage? <QueryRange>

[SENSe:]PULSe:POWer:AVG:MAXimum? <QueryRange>

[SENSe:]PULSe:POWer:AVG:MINimum? <QueryRange>

[SENSe:]PULSe:POWer:AVG:SDEViation? <QueryRange>

Returns the statistical value for the average transmission power over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

[SENSe:]PULSe:POWer:BASE? <QueryRange>

Returns the base power for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See "[Base Power](#)" on page 19

[SENSe:]PULSe:POWer:BASE:AVERage? <QueryRange>

[SENSe:]PULSe:POWer:BASE:MAXimum? <QueryRange>

[SENSe:]PULSe:POWer:BASE:MINimum? <QueryRange>  
 [SENSe:]PULSe:POWer:BASE:SDEVIation? <QueryRange>

Returns the statistical value for the base power over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL  
                          **CURRent**  
                          Detected pulses in the current capture buffer  
                          **ALL**  
                          All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

[SENSe:]PULSe:POWer:MAX? <QueryRange>

Returns the maximum transmission power for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL  
                          **SElected**  
                          Currently selected pulse  
                          **CURRent**  
                          Detected pulses in the current capture buffer  
                          **ALL**  
                          All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

**Manual operation:** See "[Peak Power](#)" on page 21

[SENSe:]PULSe:POWer:MAX:AVERage? <QueryRange>  
 [SENSe:]PULSe:POWer:MAX:MAXimum? <QueryRange>  
 [SENSe:]PULSe:POWer:MAX:MINimum? <QueryRange>  
 [SENSe:]PULSe:POWer:MAX:SDEVIation? <QueryRange>

Returns the statistical value for the maximum transmission power over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL  
                          **CURRent**  
                          Detected pulses in the current capture buffer  
                          **ALL**  
                          All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:POWer:MIN? <QueryRange>**

Returns the minimum transmission power for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Minimum Power](#)" on page 20**[SENSe:]PULSe:POWer:MIN:AVERage? <QueryRange>****[SENSe:]PULSe:POWer:MIN:MAXimum? <QueryRange>****[SENSe:]PULSe:POWer:MIN:MINimum? <QueryRange>****[SENSe:]PULSe:POWer:MIN:SDEViation? <QueryRange>**

Returns the statistical value for the minimum transmission power over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:POWer:ON? <QueryRange>**

Returns the average ON power for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Average ON Power](#)" on page 20**[SENSe:]PULSe:POWer:ON:AVERAge?** <QueryRange>**[SENSe:]PULSe:POWer:ON:MAXimum?** <QueryRange>**[SENSe:]PULSe:POWer:ON:MINimum?** <QueryRange>**[SENSe:]PULSe:POWer:ON:SDEVIation?** <QueryRange>

Returns the statistical value for the average ON power over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:POWer:OVERshoot:DB?** <QueryRange>

Returns the overshoot in dB for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Overshoot](#)" on page 22

---

```
[SENSe:]PULSe:POWer:OVERshoot:DB:AVERAge? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot:DB:MAXimum? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot:DB:MINimum? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot:DB:SDEVIation? <QueryRange>
```

Returns the statistical value for the overshoot in dB over the specified pulses.

**Query parameters:**

```
<QueryRange>    CURRent | ALL
                CURRent
                Detected pulses in the current capture buffer
                ALL
                All detected pulses in the entire measurement.
```

**Return values:**

```
<Result>        <char_data>
```

**Usage:** Query only

---

```
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]? <QueryRange>
```

Returns the overshoot in percent for the specified pulse(s).

**Query parameters:**

```
<QueryRange>    SELEcted | CURRent | ALL
                SELEcted
                Currently selected pulse
                CURRent
                Detected pulses in the current capture buffer
                ALL
                All detected pulses in the entire measurement.
```

**Return values:**

```
<Result>        <char_data>
```

**Usage:** Query only

**Manual operation:** See "[Overshoot](#)" on page 22

---

```
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:AVERAge? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:MAXimum? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:MINimum? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:SDEVIation? <QueryRange>
```

Returns the statistical value for the overshoot in percent over the specified pulses.

**Query parameters:**

```
<QueryRange>    CURRent | ALL
                CURRent
                Detected pulses in the current capture buffer
                ALL
                All detected pulses in the entire measurement.
```



**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:POWer:PAVG? <QueryRange>**

Returns the Peak-to-Average Tx Power Ratio for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Peak-to-Average Tx Power Ratio](#)" on page 21**[SENSe:]PULSe:POWer:PAVG:AVERAge? <QueryRange>****[SENSe:]PULSe:POWer:PAVG:MAXimum? <QueryRange>****[SENSe:]PULSe:POWer:PAVG:MINimum? <QueryRange>****[SENSe:]PULSe:POWer:PAVG:SDEVIation? <QueryRange>**

Returns the statistical value for the Peak-to-Average Tx Power Ratio over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:POWer:PMIN? <QueryRange>**

Returns the Peak-to-Min Power Ratio for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**Manual operation:** See "[Peak-to-Min Power Ratio](#)" on page 21**[SENSe:]PULSe:POWer:PMIN:AVERAge?** <QueryRange>**[SENSe:]PULSe:POWer:PMIN:MAXimum?** <QueryRange>**[SENSe:]PULSe:POWer:PMIN:MINimum?** <QueryRange>**[SENSe:]PULSe:POWer:PMIN:SDEVIation?** <QueryRange>

Returns the statistical value for the Peak-to-Min Power Ratio over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**[SENSe:]PULSe:POWer:POINt?** <QueryRange>

Returns the power in the measurement point for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**Manual operation:** See "[Power \(at Point\)](#)" on page 22

---

```
[SENSe:]PULSe:POWer:POINt:AVERAge? <QueryRange>
[SENSe:]PULSe:POWer:POINt:MAXimum? <QueryRange>
[SENSe:]PULSe:POWer:POINt:MINimum? <QueryRange>
[SENSe:]PULSe:POWer:POINt:SDEVIation? <QueryRange>
```

Returns the statistical value for the power in the measurement point over the specified pulses.

**Query parameters:**

```
<QueryRange>    CURRent | ALL

CURRent
Detected pulses in the current capture buffer

ALL
All detected pulses in the entire measurement.
```

**Return values:**

```
<Result>        <char_data>
```

**Usage:** Query only

---

```
[SENSe:]PULSe:POWer:PON? <QueryRange>
```

Returns the Peak-to-Avg ON Power Ratio for the specified pulse(s).

**Query parameters:**

```
<QueryRange>    SElected | CURRent | ALL

SElected
Currently selected pulse

CURRent
Detected pulses in the current capture buffer

ALL
All detected pulses in the entire measurement.
```

**Return values:**

```
<Result>        <char_data>
```

**Usage:** Query only

**Manual operation:** See "[Peak-to-Avg ON Power Ratio](#)" on page 21

---

```
[SENSe:]PULSe:POWer:PON:AVERAge? <QueryRange>
[SENSe:]PULSe:POWer:PON:MAXimum? <QueryRange>
[SENSe:]PULSe:POWer:PON:MINimum? <QueryRange>
[SENSe:]PULSe:POWer:PON:SDEVIation? <QueryRange>
```

Returns the statistical value for the Peak-to-Avg ON Power Ratio over the specified pulses.

**Query parameters:**

```
<QueryRange>    CURRent | ALL

CURRent
Detected pulses in the current capture buffer
```

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:POWer:PPRatio? <QueryRange>**

Returns the Pulse-to-Pulse Power Difference for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Pulse-to-Pulse Power Ratio](#)" on page 22**[SENSe:]PULSe:POWer:PPRatio:AVERage? <QueryRange>****[SENSe:]PULSe:POWer:PPRatio:MAXimum? <QueryRange>****[SENSe:]PULSe:POWer:PPRatio:MINimum? <QueryRange>****[SENSe:]PULSe:POWer:PPRatio:SDEViation? <QueryRange>**

Returns the statistical value for the Pulse-to-Pulse Power Difference over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only

---

**[SENSe:]PULSe:POWer:RIPPlE:DB? <QueryRange>**

Returns the ripple in dB for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**              Query only

**Manual operation:**    See "[Ripple](#)" on page 22

---

**[SENSe:]PULSe:POWer:RIPPlE:DB:AVERAge? <QueryRange>**

**[SENSe:]PULSe:POWer:RIPPlE:DB:MAXimum? <QueryRange>**

**[SENSe:]PULSe:POWer:RIPPlE:DB:MINimum? <QueryRange>**

**[SENSe:]PULSe:POWer:RIPPlE:DB:SDEVIation? <QueryRange>**

Returns the statistical value for the ripple in dB over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>              <char\_data>

**Usage:**              Query only

---

**[SENSe:]PULSe:POWer:RIPPlE[:PERCent]? <QueryRange>**

Returns the ripple in percent for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>              <char\_data>

**Usage:** Query only  
**Manual operation:** See "[Ripple](#)" on page 22

---

**[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:AVERAge? <QueryRange>**  
**[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:MAXimum? <QueryRange>**  
**[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:MINimum? <QueryRange>**  
**[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:SDEVIation? <QueryRange>**

Returns the statistical value for the ripple in percent over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL  
**CURRent**  
 Detected pulses in the current capture buffer  
**ALL**  
 All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

---

**[SENSe:]PULSe:POWer:TOP? <QueryRange>**

Returns the Top power for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL  
**SElected**  
 Currently selected pulse  
**CURRent**  
 Detected pulses in the current capture buffer  
**ALL**  
 All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See "[Top Power](#)" on page 19

---

**[SENSe:]PULSe:POWer:TOP:AVERAge? <QueryRange>**  
**[SENSe:]PULSe:POWer:TOP:MAXimum? <QueryRange>**  
**[SENSe:]PULSe:POWer:TOP:MINimum? <QueryRange>**  
**[SENSe:]PULSe:POWer:TOP:SDEVIation? <QueryRange>**

Returns the statistical value for the Top power over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**9.16.3.2 Retrieving timing parameters**

The following commands return the calculated pulse parameters.

For details on the individual parameters see [Chapter 3.1.1, "Timing parameters"](#), on page 16.

[SENSe:]PULSe:TIMing:DCYCLE?	288
[SENSe:]PULSe:TIMing:DCYCLE:AVERAge?	288
[SENSe:]PULSe:TIMing:DCYCLE:MAXimum?	288
[SENSe:]PULSe:TIMing:DCYCLE:MINimum?	288
[SENSe:]PULSe:TIMing:DCYCLE:SDEVIation?	288
[SENSe:]PULSe:TIMing:DRATio?	289
[SENSe:]PULSe:TIMing:DRATio:AVERAge?	289
[SENSe:]PULSe:TIMing:DRATio:MAXimum?	289
[SENSe:]PULSe:TIMing:DRATio:MINimum?	289
[SENSe:]PULSe:TIMing:DRATio:SDEVIation?	289
[SENSe:]PULSe:TIMing:FALL?	289
[SENSe:]PULSe:TIMing:FALL:AVERAge?	290
[SENSe:]PULSe:TIMing:FALL:MAXimum?	290
[SENSe:]PULSe:TIMing:FALL:MINimum?	290
[SENSe:]PULSe:TIMing:FALL:SDEVIation?	290
[SENSe:]PULSe:TIMing:OFF?	290
[SENSe:]PULSe:TIMing:OFF:AVERAge?	291
[SENSe:]PULSe:TIMing:OFF:MAXimum?	291
[SENSe:]PULSe:TIMing:OFF:MINimum?	291
[SENSe:]PULSe:TIMing:OFF:SDEVIation?	291
[SENSe:]PULSe:TIMing:PRF?	291
[SENSe:]PULSe:TIMing:PRF:AVERAge?	291
[SENSe:]PULSe:TIMing:PRF:MAXimum?	291
[SENSe:]PULSe:TIMing:PRF:MINimum?	291
[SENSe:]PULSe:TIMing:PRF:SDEVIation?	291
[SENSe:]PULSe:TIMing:PRI?	292
[SENSe:]PULSe:TIMing:PRI:AVERAge?	292
[SENSe:]PULSe:TIMing:PRI:MAXimum?	292
[SENSe:]PULSe:TIMing:PRI:MINimum?	292
[SENSe:]PULSe:TIMing:PRI:SDEVIation?	292
[SENSe:]PULSe:TIMing:PWIDth?	293
[SENSe:]PULSe:TIMing:PWIDth:AVERAge?	293
[SENSe:]PULSe:TIMing:PWIDth:MAXimum?	293
[SENSe:]PULSe:TIMing:PWIDth:MINimum?	293

[SENSe:]PULSe:TIMing:PWIDth:SDEVIation?.....	293
[SENSe:]PULSe:TIMing:RISE?.....	293
[SENSe:]PULSe:TIMing:RISE:AVERage?.....	294
[SENSe:]PULSe:TIMing:RISE:MAXimum?.....	294
[SENSe:]PULSe:TIMing:RISE:MINimum?.....	294
[SENSe:]PULSe:TIMing:RISE:SDEVIation?.....	294
[SENSe:]PULSe:TIMing:SETTling?.....	294
[SENSe:]PULSe:TIMing:SETTling:AVERage?.....	294
[SENSe:]PULSe:TIMing:SETTling:MAXimum?.....	294
[SENSe:]PULSe:TIMing:SETTling:MINimum?.....	295
[SENSe:]PULSe:TIMing:SETTling:SDEVIation?.....	295
[SENSe:]PULSe:TIMing:TSTamp?.....	295
[SENSe:]PULSe:TIMing:TSTamp:AVERage?.....	295
[SENSe:]PULSe:TIMing:TSTamp:MAXimum?.....	295
[SENSe:]PULSe:TIMing:TSTamp:MINimum?.....	295
[SENSe:]PULSe:TIMing:TSTamp:SDEVIation?.....	295

---

**[SENSe:]PULSe:TIMing:DCYClE? <QueryRange>**

Returns the duty cycle (in %) for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

**Manual operation:** See "Duty Cycle (%)" on page 18

---

**[SENSe:]PULSe:TIMing:DCYClE:AVERage? <QueryRange>**

**[SENSe:]PULSe:TIMing:DCYClE:MAXimum? <QueryRange>**

**[SENSe:]PULSe:TIMing:DCYClE:MINimum? <QueryRange>**

**[SENSe:]PULSe:TIMing:DCYClE:SDEVIation? <QueryRange>**

Returns the statistical value for the duty cycle (in %) over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.



**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:TIMing:DRATio? <QueryRange>**

Returns the duty ratio for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Duty Ratio](#)" on page 18**[SENSe:]PULSe:TIMing:DRATio:AVERage? <QueryRange>****[SENSe:]PULSe:TIMing:DRATio:MAXimum? <QueryRange>****[SENSe:]PULSe:TIMing:DRATio:MINimum? <QueryRange>****[SENSe:]PULSe:TIMing:DRATio:SDEVIation? <QueryRange>**

Returns the statistical value for the duty ratio over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:TIMing:FALL? <QueryRange>**

Returns the fall time for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**Manual operation:** See "[Fall Time](#)" on page 17**[SENSe:]PULSe:TIMing:FALL:AVERage?** <QueryRange>**[SENSe:]PULSe:TIMing:FALL:MAXimum?** <QueryRange>**[SENSe:]PULSe:TIMing:FALL:MINimum?** <QueryRange>**[SENSe:]PULSe:TIMing:FALL:SDEVIation?** <QueryRange>

Returns the statistical value for the fall time over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**[SENSe:]PULSe:TIMing:OFF?** <QueryRange>

Returns the Off time for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:**

Query only

**Manual operation:** See "[Off Time](#)" on page 18

---

```
[SENSe:]PULSe:TIMing:OFF:AVERage? <QueryRange>
[SENSe:]PULSe:TIMing:OFF:MAXimum? <QueryRange>
[SENSe:]PULSe:TIMing:OFF:MINimum? <QueryRange>
[SENSe:]PULSe:TIMing:OFF:SDEVIation? <QueryRange>
```

Returns the statistical value for the Off time over the specified pulses.

**Query parameters:**

```
<QueryRange>    CURRent | ALL
                CURRent
                Detected pulses in the current capture buffer
                ALL
                All detected pulses in the entire measurement.
```

**Return values:**

```
<Result>        <char_data>
```

```
Usage:        Query only
```

---

```
[SENSe:]PULSe:TIMing:PRF? <QueryRange>
```

Returns the Pulse Repetition Frequency (Hz) for the specified pulse(s).

**Query parameters:**

```
<QueryRange>    SELEcted | CURRent | ALL
                SELEcted
                Currently selected pulse
                CURRent
                Detected pulses in the current capture buffer
                ALL
                All detected pulses in the entire measurement.
```

**Return values:**

```
<Result>        <char_data>
```

```
Usage:        Query only
```

```
Manual operation: See "Pulse Repetition Frequency \(Hz\)" on page 19
```

---

```
[SENSe:]PULSe:TIMing:PRF:AVERage? <QueryRange>
[SENSe:]PULSe:TIMing:PRF:MAXimum? <QueryRange>
[SENSe:]PULSe:TIMing:PRF:MINimum? <QueryRange>
[SENSe:]PULSe:TIMing:PRF:SDEVIation? <QueryRange>
```

Returns the statistical value for the Pulse Repetition Frequency (Hz) over the specified pulses.

**Query parameters:**

```
<QueryRange>    CURRent | ALL
                CURRent
                Detected pulses in the current capture buffer
```

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:TIMing:PRI? <QueryRange>**

Returns the Pulse Repetition Interval for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Pulse Repetition Interval](#)" on page 18**[SENSe:]PULSe:TIMing:PRI:AVERage? <QueryRange>****[SENSe:]PULSe:TIMing:PRI:MAXimum? <QueryRange>****[SENSe:]PULSe:TIMing:PRI:MINimum? <QueryRange>****[SENSe:]PULSe:TIMing:PRI:SDEViation? <QueryRange>**

Returns the statistical value for the Pulse Repetition Interval over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only

---

**[SENSe:]PULSe:TIMing:PWIDth? <QueryRange>**

Returns the pulse width for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See "[Pulse Width \(ON Time\)](#)" on page 18

---

**[SENSe:]PULSe:TIMing:PWIDth:AVERage? <QueryRange>**

**[SENSe:]PULSe:TIMing:PWIDth:MAXimum? <QueryRange>**

**[SENSe:]PULSe:TIMing:PWIDth:MINimum? <QueryRange>**

**[SENSe:]PULSe:TIMing:PWIDth:SDEVIation? <QueryRange>**

Returns the pulse width for the phase deviation over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

---

**[SENSe:]PULSe:TIMing:RISE? <QueryRange>**

Returns the rise time for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Rise Time](#)" on page 17**[SENSe:]PULSe:TIMing:RISE:AVERage?** <QueryRange>**[SENSe:]PULSe:TIMing:RISE:MAXimum?** <QueryRange>**[SENSe:]PULSe:TIMing:RISE:MINimum?** <QueryRange>**[SENSe:]PULSe:TIMing:RISE:SDEVIation?** <QueryRange>

Returns the statistical value for the rise time over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:TIMing:SETTling?** <QueryRange>

Returns the settling time for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Settling Time](#)" on page 17**[SENSe:]PULSe:TIMing:SETTling:AVERage?** <QueryRange>**[SENSe:]PULSe:TIMing:SETTling:MAXimum?** <QueryRange>

[SENSe:]PULSe:TIMing:SETTling:MINimum? <QueryRange>

[SENSe:]PULSe:TIMing:SETTling:SDEVIation? <QueryRange>

Returns the statistical value for the settling time over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

[SENSe:]PULSe:TIMing:TSTamp? <QueryRange>

Returns the timestamp for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

**Manual operation:** See "[Timestamp](#)" on page 17

[SENSe:]PULSe:TIMing:TSTamp:AVERage? <QueryRange>

[SENSe:]PULSe:TIMing:TSTamp:MAXimum? <QueryRange>

[SENSe:]PULSe:TIMing:TSTamp:MINimum? <QueryRange>

[SENSe:]PULSe:TIMing:TSTamp:SDEVIation? <QueryRange>

Returns the timestamp for the phase deviation over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:** Query only

### 9.16.3.3 Retrieving frequency parameters

The following commands return the calculated pulse parameters.

For details on the individual parameters see [Chapter 3.1.3, "Frequency parameters"](#), on page 23.

[SENSe:]PULSe:FREQuency:CRATe?	296
[SENSe:]PULSe:FREQuency:CRATe:AVERAge?	297
[SENSe:]PULSe:FREQuency:CRATe:MAXimum?	297
[SENSe:]PULSe:FREQuency:CRATe:MINimum?	297
[SENSe:]PULSe:FREQuency:CRATe:SDEViation?	297
[SENSe:]PULSe:FREQuency:DEViation?	297
[SENSe:]PULSe:FREQuency:DEViation:AVERAge?	297
[SENSe:]PULSe:FREQuency:DEViation:MAXimum?	297
[SENSe:]PULSe:FREQuency:DEViation:MINimum?	298
[SENSe:]PULSe:FREQuency:DEViation:SDEViation?	298
[SENSe:]PULSe:FREQuency:PERRor?	298
[SENSe:]PULSe:FREQuency:PERRor:AVERAge?	298
[SENSe:]PULSe:FREQuency:PERRor:MAXimum?	298
[SENSe:]PULSe:FREQuency:PERRor:MINimum?	298
[SENSe:]PULSe:FREQuency:PERRor:SDEViation?	298
[SENSe:]PULSe:FREQuency:POINt?	299
[SENSe:]PULSe:FREQuency:POINt:AVERAge?	299
[SENSe:]PULSe:FREQuency:POINt:MAXimum?	299
[SENSe:]PULSe:FREQuency:POINt:MINimum?	299
[SENSe:]PULSe:FREQuency:POINt:SDEViation?	299
[SENSe:]PULSe:FREQuency:PPFRrequency?	299
[SENSe:]PULSe:FREQuency:PPFRrequency:AVERAge?	300
[SENSe:]PULSe:FREQuency:PPFRrequency:MAXimum?	300
[SENSe:]PULSe:FREQuency:PPFRrequency:MINimum?	300
[SENSe:]PULSe:FREQuency:PPFRrequency:SDEViation?	300
[SENSe:]PULSe:FREQuency:RERRor?	300
[SENSe:]PULSe:FREQuency:RERRor:AVERAge?	300
[SENSe:]PULSe:FREQuency:RERRor:MAXimum?	300
[SENSe:]PULSe:FREQuency:RERRor:MINimum?	301
[SENSe:]PULSe:FREQuency:RERRor:SDEViation?	301

---

**[SENSe:]PULSe:FREQuency:CRATe? <QueryRange>**

Returns the chirp rate (per  $\mu$ s) for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer



**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See "[Chirp Rate](#)" on page 24

[SENSe:]PULSe:FREQuency:CRATe:AVERAge? <QueryRange>

[SENSe:]PULSe:FREQuency:CRATe:MAXimum? <QueryRange>

[SENSe:]PULSe:FREQuency:CRATe:MINimum? <QueryRange>

[SENSe:]PULSe:FREQuency:CRATe:SDEViation? <QueryRange>

Returns the statistical value for the chirp rate (per  $\mu\text{s}$ ) over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

[SENSe:]PULSe:FREQuency:DEViation? <QueryRange>

Returns the frequency at the measurement point for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See "[Frequency Deviation](#)" on page 24

[SENSe:]PULSe:FREQuency:DEViation:AVERAge? <QueryRange>

[SENSe:]PULSe:FREQuency:DEViation:MAXimum? <QueryRange>

[SENSe:]PULSe:FREQuency:DEViation:MINimum? <QueryRange>  
 [SENSe:]PULSe:FREQuency:DEViation:SDEViation? <QueryRange>

Returns the statistical value for the chirp rate (per  $\mu$ s) over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL  
                          **CURRent**  
                          Detected pulses in the current capture buffer  
                          **ALL**  
                          All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

[SENSe:]PULSe:FREQuency:PERRor? <QueryRange>

Returns the peak frequency error for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL  
                          **SElected**  
                          Currently selected pulse  
                          **CURRent**  
                          Detected pulses in the current capture buffer  
                          **ALL**  
                          All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

**Manual operation:** See "[Frequency Error \(Peak\)](#)" on page 23

[SENSe:]PULSe:FREQuency:PERRor:AVERage? <QueryRange>  
 [SENSe:]PULSe:FREQuency:PERRor:MAXimum? <QueryRange>  
 [SENSe:]PULSe:FREQuency:PERRor:MINimum? <QueryRange>  
 [SENSe:]PULSe:FREQuency:PERRor:SDEViation? <QueryRange>

Returns the statistical value for the peak frequency error over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL  
                          **CURRent**  
                          Detected pulses in the current capture buffer  
                          **ALL**  
                          All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:** Query only

---

**[SENSe:]PULSe:FREQuency:POINt? <QueryRange>**

Returns the frequency at the measurement point for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See "[Frequency](#)" on page 23

---

**[SENSe:]PULSe:FREQuency:POINt:AVERAge? <QueryRange>**

**[SENSe:]PULSe:FREQuency:POINt:MAXimum? <QueryRange>**

**[SENSe:]PULSe:FREQuency:POINt:MINimum? <QueryRange>**

**[SENSe:]PULSe:FREQuency:POINt:SDEVIation? <QueryRange>**

Returns the statistical value for the phase deviation over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

---

**[SENSe:]PULSe:FREQuency:PPFRrequency? <QueryRange>**

Returns the Pulse-Pulse Frequency Difference for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See ["Pulse-Pulse Frequency Difference"](#) on page 23

[SENSe:]PULSe:FREQuency:PPFREquency:AVERage? <QueryRange>

[SENSe:]PULSe:FREQuency:PPFREquency:MAXimum? <QueryRange>

[SENSe:]PULSe:FREQuency:PPFREquency:MINimum? <QueryRange>

[SENSe:]PULSe:FREQuency:PPFREquency:SDEViation? <QueryRange>

Returns the statistical value for the Pulse-Pulse Frequency Difference over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

[SENSe:]PULSe:FREQuency:RERRor? <QueryRange>

Returns the Frequency Error (RMS) for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result> <char\_data>

**Usage:** Query only

**Manual operation:** See ["Frequency Error \(RMS\)"](#) on page 23

[SENSe:]PULSe:FREQuency:RERRor:AVERage? <QueryRange>

[SENSe:]PULSe:FREQuency:RERRor:MAXimum? <QueryRange>

**[SENSe:]PULSe:FREQuency:RERRor:MINimum? <QueryRange>**

**[SENSe:]PULSe:FREQuency:RERRor:SDEVIation? <QueryRange>**

Returns the statistical value for the Frequency Error (RMS) over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

### 9.16.3.4 Retrieving phase parameters

The following commands return the calculated pulse parameters.

For details on the individual parameters see [Chapter 3.1.4, "Phase parameters"](#), on page 24.

[SENSe:]PULSe:PHASe:DEVIation?.....	302
[SENSe:]PULSe:PHASe:DEVIation:AVERage?.....	302
[SENSe:]PULSe:PHASe:DEVIation:MAXimum?.....	302
[SENSe:]PULSe:PHASe:DEVIation:MINimum?.....	302
[SENSe:]PULSe:PHASe:DEVIation:SDEVIation?.....	302
[SENSe:]PULSe:PHASe:PERRor?.....	302
[SENSe:]PULSe:PHASe:PERRor:AVERage?.....	303
[SENSe:]PULSe:PHASe:PERRor:MAXimum?.....	303
[SENSe:]PULSe:PHASe:PERRor:MINimum?.....	303
[SENSe:]PULSe:PHASe:PERRor:SDEVIation?.....	303
[SENSe:]PULSe:PHASe:POINT?.....	303
[SENSe:]PULSe:PHASe:POINT:AVERage?.....	303
[SENSe:]PULSe:PHASe:POINT:MAXimum?.....	303
[SENSe:]PULSe:PHASe:POINT:MINimum?.....	304
[SENSe:]PULSe:PHASe:POINT:SDEVIation?.....	304
[SENSe:]PULSe:PHASe:PPPHase?.....	304
[SENSe:]PULSe:PHASe:PPPHase:AVERage?.....	304
[SENSe:]PULSe:PHASe:PPPHase:MAXimum?.....	304
[SENSe:]PULSe:PHASe:PPPHase:MINimum?.....	304
[SENSe:]PULSe:PHASe:PPPHase:SDEVIation?.....	304
[SENSe:]PULSe:PHASe:RERRor?.....	305
[SENSe:]PULSe:PHASe:RERRor:AVERage?.....	305
[SENSe:]PULSe:PHASe:RERRor:MAXimum?.....	305
[SENSe:]PULSe:PHASe:RERRor:MINimum?.....	305
[SENSe:]PULSe:PHASe:RERRor:SDEVIation?.....	305

---

**[SENSe:]PULSe:PHASe:DEViation? <QueryRange>**

Returns the phase deviation for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

**Manual operation:** See "[Phase Deviation](#)" on page 25

---

**[SENSe:]PULSe:PHASe:DEViation:AVERage? <QueryRange>**

**[SENSe:]PULSe:PHASe:DEViation:MAXimum? <QueryRange>**

**[SENSe:]PULSe:PHASe:DEViation:MINimum? <QueryRange>**

**[SENSe:]PULSe:PHASe:DEViation:SDEViation? <QueryRange>**

Returns the statistical value for the phase deviation over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**            Query only

---

**[SENSe:]PULSe:PHASe:PERRor? <QueryRange>**

Returns the peak phase error for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Phase Error \(Peak\)](#)" on page 25**[SENSe:]PULSe:PHASe:PERRor:AVERage?** <QueryRange>**[SENSe:]PULSe:PHASe:PERRor:MAXimum?** <QueryRange>**[SENSe:]PULSe:PHASe:PERRor:MINimum?** <QueryRange>**[SENSe:]PULSe:PHASe:PERRor:SDEVIation?** <QueryRange>

Returns the statistical value for the peak phase error over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**[SENSe:]PULSe:PHASe:POINT?** <QueryRange>

Returns the phase at the measurement point for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Phase](#)" on page 24**[SENSe:]PULSe:PHASe:POINT:AVERage?** <QueryRange>**[SENSe:]PULSe:PHASe:POINT:MAXimum?** <QueryRange>

[SENSe:]PULSe:PHASe:POINt:MINimum? <QueryRange>  
 [SENSe:]PULSe:PHASe:POINt:SDEVIation? <QueryRange>

Returns the statistical value for the phase at the measurement point over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL  
**CURRent**  
 Detected pulses in the current capture buffer  
**ALL**  
 All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**             Query only

[SENSe:]PULSe:PHASe:PPPHase? <QueryRange>

Returns the Pulse-Pulse Phase Difference for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL  
**SElected**  
 Currently selected pulse  
**CURRent**  
 Detected pulses in the current capture buffer  
**ALL**  
 All detected pulses in the entire measurement.

**Return values:**

<Result>            <char\_data>

**Usage:**             Query only

**Manual operation:** See "[Pulse-Pulse Phase Difference](#)" on page 24

[SENSe:]PULSe:PHASe:PPPHase:AVERage? <QueryRange>  
 [SENSe:]PULSe:PHASe:PPPHase:MAXimum? <QueryRange>  
 [SENSe:]PULSe:PHASe:PPPHase:MINimum? <QueryRange>  
 [SENSe:]PULSe:PHASe:PPPHase:SDEVIation? <QueryRange>

Returns the statistical value for the Pulse-Pulse Phase Difference over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL  
**CURRent**  
 Detected pulses in the current capture buffer  
**ALL**  
 All detected pulses in the entire measurement.



**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only

---

**[SENSe:]PULSe:PHASe:RERRor? <QueryRange>**

Returns the phase error (RMS) for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only**Manual operation:** See "[Phase Error \(RMS\)](#)" on page 25

---

**[SENSe:]PULSe:PHASe:RERRor:AVERage? <QueryRange>****[SENSe:]PULSe:PHASe:RERRor:MAXimum? <QueryRange>****[SENSe:]PULSe:PHASe:RERRor:MINimum? <QueryRange>****[SENSe:]PULSe:PHASe:RERRor:SDEViation? <QueryRange>**

Returns the statistical value for the phase error (RMS) over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

&lt;Result&gt; &lt;char\_data&gt;

**Usage:** Query only

### 9.16.3.5 Retrieving envelope model parameters

The following commands return the calculated pulse parameters.

For details on the individual parameters see [Chapter 3.1.5, "Envelope model \(cardinal data points\) parameters"](#), on page 25.

[SENSe:]PULSe:EMODel:FBPTime?.....	307
[SENSe:]PULSe:EMODel:FBPTime:AVERAge?.....	308
[SENSe:]PULSe:EMODel:FBPTime:MAXimum?.....	308
[SENSe:]PULSe:EMODel:FBPTime:MINimum?.....	308
[SENSe:]PULSe:EMODel:FBPTime:SDEVIation?.....	308
[SENSe:]PULSe:EMODel:FHPLLevel?.....	308
[SENSe:]PULSe:EMODel:FHPLLevel:AVERAge?.....	308
[SENSe:]PULSe:EMODel:FHPLLevel:MAXimum?.....	308
[SENSe:]PULSe:EMODel:FHPLLevel:MINimum?.....	308
[SENSe:]PULSe:EMODel:FHPLLevel:SDEVIation?.....	308
[SENSe:]PULSe:EMODel:FHPTime?.....	309
[SENSe:]PULSe:EMODel:FHPTime:AVERAge?.....	309
[SENSe:]PULSe:EMODel:FHPTime:MAXimum?.....	309
[SENSe:]PULSe:EMODel:FHPTime:MINimum?.....	309
[SENSe:]PULSe:EMODel:FHPTime:SDEVIation?.....	309
[SENSe:]PULSe:EMODel:FLPLLevel?.....	309
[SENSe:]PULSe:EMODel:FLPLLevel:AVERAge?.....	310
[SENSe:]PULSe:EMODel:FLPLLevel:MAXimum?.....	310
[SENSe:]PULSe:EMODel:FLPLLevel:MINimum?.....	310
[SENSe:]PULSe:EMODel:FLPLLevel:SDEVIation?.....	310
[SENSe:]PULSe:EMODel:FLPTime?.....	310
[SENSe:]PULSe:EMODel:FLPTime:AVERAge?.....	310
[SENSe:]PULSe:EMODel:FLPTime:MAXimum?.....	310
[SENSe:]PULSe:EMODel:FLPTime:MINimum?.....	310
[SENSe:]PULSe:EMODel:FLPTime:SDEVIation?.....	310
[SENSe:]PULSe:EMODel:FMPLLevel?.....	311
[SENSe:]PULSe:EMODel:FMPLLevel:AVERAge?.....	311
[SENSe:]PULSe:EMODel:FMPLLevel:MAXimum?.....	311
[SENSe:]PULSe:EMODel:FMPLLevel:MINimum?.....	311
[SENSe:]PULSe:EMODel:FMPLLevel:SDEVIation?.....	311
[SENSe:]PULSe:EMODel:FMPTime?.....	311
[SENSe:]PULSe:EMODel:FMPTime:AVERAge?.....	312
[SENSe:]PULSe:EMODel:FMPTime:MAXimum?.....	312
[SENSe:]PULSe:EMODel:FMPTime:MINimum?.....	312
[SENSe:]PULSe:EMODel:FMPTime:SDEVIation?.....	312
[SENSe:]PULSe:EMODel:FTPLLevel?.....	312
[SENSe:]PULSe:EMODel:FTPLLevel:AVERAge?.....	312
[SENSe:]PULSe:EMODel:FTPLLevel:MAXimum?.....	312
[SENSe:]PULSe:EMODel:FTPLLevel:MINimum?.....	312
[SENSe:]PULSe:EMODel:FTPLLevel:SDEVIation?.....	312
[SENSe:]PULSe:EMODel:FTPTime?.....	313
[SENSe:]PULSe:EMODel:FTPTime:AVERAge?.....	313
[SENSe:]PULSe:EMODel:FTPTime:MAXimum?.....	313
[SENSe:]PULSe:EMODel:FTPTime:MINimum?.....	313
[SENSe:]PULSe:EMODel:FTPTime:SDEVIation?.....	313
[SENSe:]PULSe:EMODel:RBPTime?.....	313
[SENSe:]PULSe:EMODel:RBPTime:AVERAge?.....	314
[SENSe:]PULSe:EMODel:RBPTime:MAXimum?.....	314
[SENSe:]PULSe:EMODel:RBPTime:MINimum?.....	314
[SENSe:]PULSe:EMODel:RBPTime:SDEVIation?.....	314

[SENSe:]PULSe:EMODel:RHPLLevel?.....	314
[SENSe:]PULSe:EMODel:RHPLLevel:AVERAge?.....	314
[SENSe:]PULSe:EMODel:RHPLLevel:MAXimum?.....	314
[SENSe:]PULSe:EMODel:RHPLLevel:MINimum?.....	314
[SENSe:]PULSe:EMODel:RHPLLevel:SDEVIation?.....	314
[SENSe:]PULSe:EMODel:RHPTTime?.....	315
[SENSe:]PULSe:EMODel:RHPTTime:AVERAge?.....	315
[SENSe:]PULSe:EMODel:RHPTTime:MAXimum?.....	315
[SENSe:]PULSe:EMODel:RHPTTime:MINimum?.....	315
[SENSe:]PULSe:EMODel:RHPTTime:SDEVIation?.....	315
[SENSe:]PULSe:EMODel:RLPLLevel?.....	315
[SENSe:]PULSe:EMODel:RLPLLevel:AVERAge?.....	316
[SENSe:]PULSe:EMODel:RLPLLevel:MAXimum?.....	316
[SENSe:]PULSe:EMODel:RLPLLevel:MINimum?.....	316
[SENSe:]PULSe:EMODel:RLPLLevel:SDEVIation?.....	316
[SENSe:]PULSe:EMODel:RLPTTime?.....	316
[SENSe:]PULSe:EMODel:RLPTTime:AVERAge?.....	316
[SENSe:]PULSe:EMODel:RLPTTime:MAXimum?.....	316
[SENSe:]PULSe:EMODel:RLPTTime:MINimum?.....	316
[SENSe:]PULSe:EMODel:RLPTTime:SDEVIation?.....	316
[SENSe:]PULSe:EMODel:RMPLLevel?.....	317
[SENSe:]PULSe:EMODel:RMPLLevel:AVERAge?.....	317
[SENSe:]PULSe:EMODel:RMPLLevel:MAXimum?.....	317
[SENSe:]PULSe:EMODel:RMPLLevel:MINimum?.....	317
[SENSe:]PULSe:EMODel:RMPLLevel:SDEVIation?.....	317
[SENSe:]PULSe:EMODel:RMPTTime?.....	317
[SENSe:]PULSe:EMODel:RMPTTime:AVERAge?.....	318
[SENSe:]PULSe:EMODel:RMPTTime:MAXimum?.....	318
[SENSe:]PULSe:EMODel:RMPTTime:MINimum?.....	318
[SENSe:]PULSe:EMODel:RMPTTime:SDEVIation?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel:AVERAge?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel:MAXimum?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel:MINimum?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel:SDEVIation?.....	318
[SENSe:]PULSe:EMODel:RTPTTime?.....	319
[SENSe:]PULSe:EMODel:RTPTTime:AVERAge?.....	319
[SENSe:]PULSe:EMODel:RTPTTime:MAXimum?.....	319
[SENSe:]PULSe:EMODel:RTPTTime:MINimum?.....	319
[SENSe:]PULSe:EMODel:RTPTTime:SDEVIation?.....	319

---

**[SENSe:]PULSe:EMODel:FBPTTime? <QueryRange>**

Returns the Fall Base Point Time for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

**Manual operation:** See "[Fall Base Point Time](#)" on page 28

[SENSe:]PULSe:EMODel:FBPTime:AVERage? <QueryRange>  
 [SENSe:]PULSe:EMODel:FBPTime:MAXimum? <QueryRange>  
 [SENSe:]PULSe:EMODel:FBPTime:MINimum? <QueryRange>  
 [SENSe:]PULSe:EMODel:FBPTime:SDEVIation? <QueryRange>

Returns the statistical value for the Fall Base Point Time over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

[SENSe:]PULSe:EMODel:FHPLLevel? <QueryRange>

Returns the Fall High Point Level for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

**Manual operation:** See "[Fall High Point Level](#)" on page 29

[SENSe:]PULSe:EMODel:FHPLLevel:AVERage? <QueryRange>  
 [SENSe:]PULSe:EMODel:FHPLLevel:MAXimum? <QueryRange>  
 [SENSe:]PULSe:EMODel:FHPLLevel:MINimum? <QueryRange>  
 [SENSe:]PULSe:EMODel:FHPLLevel:SDEVIation? <QueryRange>

Returns the statistical value for the Fall High Point Level over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**[SENSe:]PULSe:EMODel:FHPTime? <QueryRange>**

Returns the Fall High Point Time for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**Manual operation:** See "[Fall High Point Time](#)" on page 28**[SENSe:]PULSe:EMODel:FHPTime:AVERage? <QueryRange>****[SENSe:]PULSe:EMODel:FHPTime:MAXimum? <QueryRange>****[SENSe:]PULSe:EMODel:FHPTime:MINimum? <QueryRange>****[SENSe:]PULSe:EMODel:FHPTime:SDEViation? <QueryRange>**

Returns the statistical value for the Fall High Point Time over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**[SENSe:]PULSe:EMODel:FLPLLevel? <QueryRange>**

Returns the Fall Low Point Level for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**Manual operation:** See "[Fall Low Point Level](#)" on page 29

```
[SENSe:]PULSe:EMODel:FLPLLevel:AVERAge? <QueryRange>
[SENSe:]PULSe:EMODel:FLPLLevel:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:FLPLLevel:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:FLPLLevel:SDEVIation? <QueryRange>
```

Returns the statistical value for the Fall Low Point Level over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

```
[SENSe:]PULSe:EMODel:FLPTime? <QueryRange>
```

Returns the Fall Low Point Time for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**Manual operation:** See "[Fall Low Point Time](#)" on page 28

```
[SENSe:]PULSe:EMODel:FLPTime:AVERAge? <QueryRange>
[SENSe:]PULSe:EMODel:FLPTime:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:FLPTime:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:FLPTime:SDEVIation? <QueryRange>
```

Returns the statistical value for the Fall Low Point Time over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**[SENSe:]PULSe:EMODel:FMPLevel? <QueryRange>**

Returns the Fall Mid Point Level for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**Manual operation:** See "[Fall Mid Point Level](#)" on page 29**[SENSe:]PULSe:EMODel:FMPLevel:AVERage? <QueryRange>****[SENSe:]PULSe:EMODel:FMPLevel:MAXimum? <QueryRange>****[SENSe:]PULSe:EMODel:FMPLevel:MINimum? <QueryRange>****[SENSe:]PULSe:EMODel:FMPLevel:SDEVIation? <QueryRange>**

Returns the statistical value for the Fall Mid Point Level over the specified pulses.

**Query parameters:**

&lt;QueryRange&gt; CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only**[SENSe:]PULSe:EMODel:FMPTime? <QueryRange>**

Returns the Fall Mid Point Time for the specified pulse(s).

**Query parameters:**

&lt;QueryRange&gt; SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

**Manual operation:** See "[Fall Mid Point Time](#)" on page 28

---

```
[SENSe:]PULSe:EMODel:FMPTime:AVERAge? <QueryRange>
[SENSe:]PULSe:EMODel:FMPTime:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:FMPTime:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:FMPTime:SDEVIation? <QueryRange>
```

Returns the statistical value for the Fall Mid Point Time over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

---

```
[SENSe:]PULSe:EMODel:FTPLevel? <QueryRange>
```

Returns the Fall Top Point Level for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

**Manual operation:** See "[Fall Top Point Level](#)" on page 29

---

```
[SENSe:]PULSe:EMODel:FTPLevel:AVERAge? <QueryRange>
[SENSe:]PULSe:EMODel:FTPLevel:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:FTPLevel:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:FTPLevel:SDEVIation? <QueryRange>
```

Returns the statistical value for the Fall Top Point Level over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.



**Usage:** Query only

---

**[SENSe:]PULSe:EMODel:FTPTime? <QueryRange>**

Returns the Fall Top Point Time for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

**Manual operation:** See "[Fall Top Point Time](#)" on page 28

---

**[SENSe:]PULSe:EMODel:FTPTime:AVERage? <QueryRange>**

**[SENSe:]PULSe:EMODel:FTPTime:MAXimum? <QueryRange>**

**[SENSe:]PULSe:EMODel:FTPTime:MINimum? <QueryRange>**

**[SENSe:]PULSe:EMODel:FTPTime:SDEVIation? <QueryRange>**

Returns the statistical value for the Fall Top Point Time over the specified pulses.

**Query parameters:**

<QueryRange> CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

---

**[SENSe:]PULSe:EMODel:RBPTime? <QueryRange>**

Returns the Rise Base Point Time for the specified pulse(s).

**Query parameters:**

<QueryRange> SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:** Query only

**Manual operation:** See "[Rise Base Point Time](#)" on page 26

---

```
[SENSe:]PULSe:EMODel:RBPTime:AVERage? <QueryRange>
[SENSe:]PULSe:EMODel:RBPTime:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:RBPTime:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:RBPTime:SDEVIation? <QueryRange>
```

Returns the statistical value for the Rise Base Point Time over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**  
Detected pulses in the current capture buffer

**ALL**  
All detected pulses in the entire measurement.

**Usage:**              Query only

---

```
[SENSe:]PULSe:EMODel:RHPLLevel? <QueryRange>
```

Returns the Rise High Point Level for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**  
Currently selected pulse

**CURRent**  
Detected pulses in the current capture buffer

**ALL**  
All detected pulses in the entire measurement.

**Usage:**              Query only

**Manual operation:**    See "[Rise High Point Level](#)" on page 28

---

```
[SENSe:]PULSe:EMODel:RHPLLevel:AVERage? <QueryRange>
[SENSe:]PULSe:EMODel:RHPLLevel:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:RHPLLevel:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:RHPLLevel:SDEVIation? <QueryRange>
```

Returns the statistical value for the Rise High Point Level over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**  
Detected pulses in the current capture buffer

**ALL**  
All detected pulses in the entire measurement.

**Usage:**              Query only

---

**[SENSe:]PULSe:EMODel:RHPTime? <QueryRange>**

Returns the Rise High Point Time for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**              Query only

**Manual operation:**    See "[Rise High Point Time](#)" on page 27

---

**[SENSe:]PULSe:EMODel:RHPTime:AVERage? <QueryRange>**

**[SENSe:]PULSe:EMODel:RHPTime:MAXimum? <QueryRange>**

**[SENSe:]PULSe:EMODel:RHPTime:MINimum? <QueryRange>**

**[SENSe:]PULSe:EMODel:RHPTime:SDEVIation? <QueryRange>**

Returns the statistical value for the Rise High Point Time over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**              Query only

---

**[SENSe:]PULSe:EMODel:RLPLLevel? <QueryRange>**

Returns the Rise Low Point Level for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**              Query only

**Manual operation:**    See "[Rise Low Point Level](#)" on page 27

---

```
[SENSe:]PULSe:EMODel:RLPLLevel:AVERage? <QueryRange>
[SENSe:]PULSe:EMODel:RLPLLevel:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:RLPLLevel:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:RLPLLevel:SDEVIation? <QueryRange>
```

Returns the statistical value for the Rise Low Point Level over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**  
Detected pulses in the current capture buffer

**ALL**  
All detected pulses in the entire measurement.

**Usage:**              Query only

---

```
[SENSe:]PULSe:EMODel:RLPTime? <QueryRange>
```

Returns the Rise Low Point Time for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**  
Currently selected pulse

**CURRent**  
Detected pulses in the current capture buffer

**ALL**  
All detected pulses in the entire measurement.

**Usage:**              Query only

**Manual operation:**    See "[Rise Low Point Time](#)" on page 27

---

```
[SENSe:]PULSe:EMODel:RLPTime:AVERage? <QueryRange>
[SENSe:]PULSe:EMODel:RLPTime:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:RLPTime:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:RLPTime:SDEVIation? <QueryRange>
```

Returns the statistical value for the Rise Low Point Time over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**  
Detected pulses in the current capture buffer

**ALL**  
All detected pulses in the entire measurement.

**Usage:**              Query only

---

**[SENSe:]PULSe:EMODel:RMPLLevel? <QueryRange>**

Returns the Rise Mid Point Level for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**                      Query only

**Manual operation:**    See "[Rise Mid Point Level](#)" on page 27

---

**[SENSe:]PULSe:EMODel:RMPLLevel:AVERage? <QueryRange>**

**[SENSe:]PULSe:EMODel:RMPLLevel:MAXimum? <QueryRange>**

**[SENSe:]PULSe:EMODel:RMPLLevel:MINimum? <QueryRange>**

**[SENSe:]PULSe:EMODel:RMPLLevel:SDEVIation? <QueryRange>**

Returns the statistical value for the Rise Mid Point Level over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**                      Query only

---

**[SENSe:]PULSe:EMODel:RMPTTime? <QueryRange>**

Returns the Rise Mid Point Time for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**                      Query only

**Manual operation:**    See "[Rise Mid Point Time](#)" on page 27

---

```
[SENSe:]PULSe:EMODel:RMPTime:AVERage? <QueryRange>
[SENSe:]PULSe:EMODel:RMPTime:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:RMPTime:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:RMPTime:SDEVIation? <QueryRange>
```

Returns the statistical value for the Rise Mid Point Time over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL  
                           **CURRent**  
                           Detected pulses in the current capture buffer  
                           **ALL**  
                           All detected pulses in the entire measurement.

**Usage:**                      Query only

---

```
[SENSe:]PULSe:EMODel:RTPLLevel? <QueryRange>
```

Returns the Rise Top Point Level for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL  
                           **SElected**  
                           Currently selected pulse  
                           **CURRent**  
                           Detected pulses in the current capture buffer  
                           **ALL**  
                           All detected pulses in the entire measurement.

**Usage:**                      Query only

**Manual operation:**      See "[Rise Top Point Level](#)" on page 28

---

```
[SENSe:]PULSe:EMODel:RTPLLevel:AVERage? <QueryRange>
[SENSe:]PULSe:EMODel:RTPLLevel:MAXimum? <QueryRange>
[SENSe:]PULSe:EMODel:RTPLLevel:MINimum? <QueryRange>
[SENSe:]PULSe:EMODel:RTPLLevel:SDEVIation? <QueryRange>
```

Returns the statistical value for the Rise Top Point Level over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL  
                           **CURRent**  
                           Detected pulses in the current capture buffer  
                           **ALL**  
                           All detected pulses in the entire measurement.

**Usage:**                      Query only

---

**[SENSe:]PULSe:EMODEl:RTPTime? <QueryRange>**

Returns the Rise Top Point Time for the specified pulse(s).

**Query parameters:**

<QueryRange>      SElected | CURRent | ALL

**SElected**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**              Query only

**Manual operation:**    See "[Rise Top Point Time](#)" on page 27

---

**[SENSe:]PULSe:EMODEl:RTPTime:AVERage? <QueryRange>**

**[SENSe:]PULSe:EMODEl:RTPTime:MAXimum? <QueryRange>**

**[SENSe:]PULSe:EMODEl:RTPTime:MINimum? <QueryRange>**

**[SENSe:]PULSe:EMODEl:RTPTime:SDEVIation? <QueryRange>**

Returns the statistical value for the Rise Top Point Time over the specified pulses.

**Query parameters:**

<QueryRange>      CURRent | ALL

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Usage:**              Query only

## 9.16.4 Retrieving limit results

The following commands retrieve the results of the limit check for individual parameters.

---

**[SENSe:]PULSe:<Parametertype>:<Parameter>:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FBPTime:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FHPLLevel:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FHPTTime:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FLPLLevel:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FLPTTime:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FMPLevel:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FMPTTime:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FTPLLevel:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:FTPTTime:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:RBPTTime:LIMit? <QueryRange>**

**[SENSe:]PULSe:EMODEl:RHPLLevel:LIMit? <QueryRange>**

```

[SENSe:]PULSe:EMODEl:RHPTIME:LIMit? <QueryRange>
[SENSe:]PULSe:EMODEl:RLPLevel:LIMit? <QueryRange>
[SENSe:]PULSe:EMODEl:RLPTIME:LIMit? <QueryRange>
[SENSe:]PULSe:EMODEl:RMPLevel:LIMit? <QueryRange>
[SENSe:]PULSe:EMODEl:RMPTIME:LIMit? <QueryRange>
[SENSe:]PULSe:EMODEl:RTPLevel:LIMit? <QueryRange>
[SENSe:]PULSe:EMODEl:RTPTIME:LIMit? <QueryRange>
[SENSe:]PULSe:FREQuency:CRATe:LIMit? <QueryRange>
[SENSe:]PULSe:FREQuency:DEViation:LIMit? <QueryRange>
[SENSe:]PULSe:FREQuency:PERRor:LIMit? <QueryRange>
[SENSe:]PULSe:FREQuency:POINT:LIMit? <QueryRange>
[SENSe:]PULSe:FREQuency:PPFREquency:LIMit? <QueryRange>
[SENSe:]PULSe:FREQuency:RERRor:LIMit? <QueryRange>
[SENSe:]PULSe:PHASe:DEViation:LIMit? <QueryRange>
[SENSe:]PULSe:PHASe:PERRor:LIMit? <QueryRange>
[SENSe:]PULSe:PHASe:POINT:LIMit? <QueryRange>
[SENSe:]PULSe:PHASe:PPPHase:LIMit? <QueryRange>
[SENSe:]PULSe:PHASe:RERRor:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:ADRoop:DB:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:I:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:AMPLitude:Q:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:AVG:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:BASE:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:MAX:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:MIN:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:ON:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot:DB:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:PAVG:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:PMIN:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:POINT:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:PON:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:PPRatio:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:RIPPlE:DB:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:LIMit? <QueryRange>
[SENSe:]PULSe:POWer:TOP:LIMit? <QueryRange>
[SENSe:]PULSe:TIMing:DCYClE:LIMit? <QueryRange>
[SENSe:]PULSe:TIMing:DRATio:LIMit? <QueryRange>
[SENSe:]PULSe:TIMing:FALL:LIMit? <QueryRange>
[SENSe:]PULSe:TIMing:OFF:LIMit? <QueryRange>
[SENSe:]PULSe:TIMing:PRF:LIMit? <QueryRange>
[SENSe:]PULSe:TIMing:PRI:LIMit? <QueryRange>
[SENSe:]PULSe:TIMing:PWIDth:LIMit? <QueryRange>
[SENSe:]PULSe:TIMing:RISE:LIMit? <QueryRange>

```



[SENSe:]PULSe:TIMing:SETTling:LIMit? <QueryRange>

[SENSe:]PULSe:TIMing:TSTamp:LIMit? <QueryRange>

Returns the limit value for the specified parameter. For details on available parameters see [Chapter 3.1, "Pulse parameters"](#), on page 15.

**Query parameters:**

<QueryRange>      SELEcted | CURRent | ALL

**SELEcted**

Currently selected pulse

**CURRent**

Detected pulses in the current capture buffer

**ALL**

All detected pulses in the entire measurement.

**Return values:**

<CheckResult>      <char\_data>

**Example:**              SENS:PULS:POW:ON:LIM? CURR

**Usage:**                Query only

**Manual operation:**   See ["Timestamp"](#) on page 17

### 9.16.5 Exporting trace results to an ASCII file

Trace results can be exported to an ASCII file for further evaluation in other (external) applications.

<a href="#">FORMat[:DATA]</a> .....	321
<a href="#">FORMat:DEXPort:DSEParator</a> .....	322
<a href="#">FORMat:DEXPort:HEADer</a> .....	322
<a href="#">FORMat:DEXPort:TRACes</a> .....	323
<a href="#">FORMat:DEXPort:TSTamp</a> .....	323

---

**FORMat[:DATA]** <Format>[, <BitLength>]

This command selects the data format that is used for transmission of trace data from the R&S FSMR3 to the controlling computer.

Note that the command has no effect for data that you send to the R&S FSMR3. The R&S FSMR3 automatically recognizes the data it receives, regardless of the format.

**Parameters:**

<Format>

**AScii**

AScii format, separated by commas.

This format is almost always suitable, regardless of the actual data format. However, the data is not as compact as other formats can be.

**REAL**

Floating-point numbers (according to IEEE 754) in the "definite length block format".

The format setting `REAL` is used for the binary transmission of trace data.

<BitLength>

Length in bits for floating-point results

**16**

16-bit floating-point numbers.

Compared to `REAL, 32` format, half as many numbers are returned.

**32**

32-bit floating-point numbers

For I/Q data, 8 bytes per sample are returned for this format setting.

**64**

64-bit floating-point numbers

Compared to `REAL, 32` format, twice as many numbers are returned.

**Example:**

```
FORM REAL, 32
```

**FORMat:DEXPort:DSEParator** <Separator>

This command selects the decimal separator for data exported in ASCII format.

**Parameters:**

<Separator>

POINT | COMMa

**COMMa**

Uses a comma as decimal separator, e.g. *4,05*.

**POINT**

Uses a point as decimal separator, e.g. *4.05*.

\*RST:        \*RST has no effect on the decimal separator.  
Default is POINT.

**Example:**

```
FORM:DEXP:DSEP POIN
```

Sets the decimal point as separator.

**Manual operation:** See "[Decimal Separator](#)" on page 114

**FORMat:DEXPort:HEADer** <State>

If enabled, additional instrument and measurement settings are included in the header of the export file for result data. If disabled, only the pure result data from the selected traces and tables is exported.

**Parameters:**

<State>

ON | OFF | 0 | 1

\*RST:        1

**Manual operation:** See "[Include Instrument & Measurement Settings](#)" on page 114

**FORMat:DEXPort:TRACes** <Selection>

This command selects the data to be included in a data export file (see [MMEMory:STORe<n>:TRACe](#) on page 263).

**Parameters:**

<Selection>            SINGle | ALL

**SINGle**

Only a single trace is selected for export, namely the one specified by the [MMEMory:STORe<n>:TRACe](#) command.

**ALL**

Selects all active traces and result tables (e.g. "Result Summary", marker peak list etc.) in the current application for export to an ASCII file.

The <trace> parameter for the [MMEMory:STORe<n>:TRACe](#) command is ignored.

\*RST:            SINGle

**Manual operation:** See "[Export all Traces and all Table Results](#)" on page 114

**FORMat:DEXPort:TSTamp** <State>

Turns on display of absolute time stamp for table export.

**Parameters:**

<State>            ON | OFF

\*RST:            OFF

**Example:**            FORMat:DEXPort:TSTamp ON

**Manual operation:** See "[Absolute Time Stamp](#)" on page 117

## 9.16.6 Exporting table results to an ASCII file

Table results can be exported to an ASCII file for further evaluation in other (external) applications.

Useful commands for exporting table results described elsewhere:

- [FORMat:DEXPort:DSEPARATOR](#) on page 322
- [Chapter 9.12.8, "Configuring the statistics and parameter tables"](#), on page 208

### Remote commands exclusive to exporting table results

<a href="#">MMEMory:STORe&lt;n&gt;:TABLE</a> .....	323
<a href="#">MMEMory:STORe&lt;n&gt;:TABLE:LIMit</a> .....	324

**MMEMory:STORe<n>:TABLE** <Columns>, <FileName>

This command exports result table data from the specified window to an ASCII file (.DAT).

For details on the file format see [Chapter A, "Reference: ASCII file export format"](#), on page 335.

**Suffix:**

<n> [Window](#)

**Setting parameters:**

<Columns> Columns to be stored in file

**SElected**

Export only the selected (visible) table columns

**ALL**

Export all table columns (all possible measured parameters)

\*RST: SEL

<FileName> String containing the path and name of the target file.

**Example:**

```
MMEM:STOR1:TABL SEL, 'TEST.DAT'
```

Stores the selected columns from the result table in window 1 in the file TEST.DAT.

**Example:**

See [Chapter 9.19, "Programming example: pulse measurement"](#), on page 327.

**Usage:**

Setting only

**Manual operation:**

See ["Export table to ASCII File"](#) on page 115

See ["Columns to Export"](#) on page 116

**MMEMory:STORe<n>:TABLe:LIMit <Columns>, <Filename>**

This command stores the table columns (all or selected), along with limit check results in a file with ASCII format. The decimal separator (decimal point or comma) for floating-point numerals contained in the file is defined with the [FORMAT:DEXPort:DSEParator](#) command.

**Suffix:**

<n> 1..n  
[Window](#)

**Setting parameters:**

<Columns> SElected | ALL

**SElected**

Only the currently visible columns in the result display are exported.

**ALL**

All columns, including currently hidden ones, for the result display are exported.

<Filename> String containing the path and name of the file.

**Usage:**

Setting only

**Manual operation:**

See ["Export Limits"](#) on page 116

## 9.17 Retrieving marker results

The following commands are required to retrieve marker results.

Useful commands for retrieving marker results described elsewhere:

- `CALCulate<n>:DELTaMarker<m>:X` on page 253
- `CALCulate<n>:MARKer<m>:X` on page 250

### Remote commands exclusive to retrieving marker results:

<code>CALCulate&lt;n&gt;:DELTaMarker&lt;m&gt;:X:RELative?</code> .....	325
<code>CALCulate&lt;n&gt;:DELTaMarker&lt;m&gt;:Y?</code> .....	325
<code>CALCulate&lt;n&gt;:MARKer&lt;m&gt;:Y?</code> .....	325

---

#### `CALCulate<n>:DELTaMarker<m>:X:RELative?`

This command queries the relative position of a delta marker on the x-axis.

If necessary, the command activates the delta marker first.

##### Suffix:

<n>                      Window

<m>                      Marker

##### Return values:

<Position>              Position of the delta marker in relation to the reference marker.

##### Example:

`CALC:DELT3:X:REL?`

Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.

**Usage:**                      Query only

---

#### `CALCulate<n>:DELTaMarker<m>:Y?`

Queries the result at the position of the specified delta marker.

##### Suffix:

<n>                      1..n

<m>                      1..n

##### Return values:

<Result>                      Result at the position of the delta marker.  
The unit is variable and depends on the one you have currently set.

Default unit: DBM

**Usage:**                      Query only

---

#### `CALCulate<n>:MARKer<m>:Y?`

Queries the result at the position of the specified marker.

<b>Suffix:</b>	
<n>	1..n
<m>	1..n
<b>Return values:</b>	
<Result>	Default unit: DBM
<b>Usage:</b>	Query only
<b>Manual operation:</b>	See " <a href="#">Marker Table</a> " on page 31

## 9.18 Deprecated commands

<a href="#">CALCulate&lt;n&gt;:TRACe&lt;t&gt;[:VALue]</a> .....	326
<a href="#">DISPlay[:WINDow&lt;n&gt;]:TYPE</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:POWer:AVG?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:POWer:MAX?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:POWer:MIN?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:POWer:PULSe:BASE?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:POWer:PULSe:TOP?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:PULSe:DCYCLE?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:PULSe:DURation?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:PULSe:PERiod?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:PULSe:SEParation?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:TRANSition:NEGative:DURation?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:TRANSition:POSitive:DURation?</a> .....	327
<a href="#">[SENSe:]TRACe:MEASurement:TRANSition:POSitive:OVERshoot?</a> .....	327

---

### **CALCulate<n>:TRACe<t>[:VALue]** <Detector>

Defines which signal component (I/Q) is evaluated in which trace for the [Pulse I and Q](#) result display. This setting is not available for any other result displays. By default, the I component is displayed by trace 1, while the Q component is displayed by trace 4.

#### **Suffix:**

<n>                      [Window](#)

<t>                      [Trace](#)

#### **Parameters:**

<Detector>            ITIME | QTIME

##### **ITIME**

The I component is evaluated by the selected trace.

##### **QTIME**

The Q component is evaluated by the selected trace.

#### **Example:**

`CALC2:TRAC2 QTIM`

Trace 2 in window 2 evaluates the Q component of the signal.

**Manual operation:** See "[Evaluation](#)" on page 111

---

**DISPlay[:WINDow<n>]:TYPE <ResultType>**

Note that this command is maintained for compatibility reasons only. Use the `LAYout` commands for new remote control programs (see [Chapter 9.13.2, "Working with windows in the display"](#), on page 236).

**Suffix:**

<n>                    1..n  
                          Window

**Parameters:**

<ResultType>        MCApture | PDIStrib | PRESults | PSTatistics | PTRend |  
                          PSPpectrum | PPSpectrum | RRSpectrum | PMAGnitude |  
                          PPHase | PPWRapped | PFRrequency | MTABLE | CMCapture |  
                          CPMagnitude | PPERror | PFERror | PIAQ | STABility |  
                          SWATerfall

---

**[SENSe:]TRACe:MEASurement:POWer:AVG?**  
**[SENSe:]TRACe:MEASurement:POWer:MAX?**  
**[SENSe:]TRACe:MEASurement:POWer:MIN?**  
**[SENSe:]TRACe:MEASurement:POWer:PULSe:BASE?**  
**[SENSe:]TRACe:MEASurement:POWer:PULSe:TOP?**  
**[SENSe:]TRACe:MEASurement:PULSe:DCYCLe?**  
**[SENSe:]TRACe:MEASurement:PULSe:DURation?**  
**[SENSe:]TRACe:MEASurement:PULSe:PERiod?**  
**[SENSe:]TRACe:MEASurement:PULSe:SEParation?**  
**[SENSe:]TRACe:MEASurement:TRANSition:NEGative:DURation?**  
**[SENSe:]TRACe:MEASurement:TRANSition:POSitive:DURation?**  
**[SENSe:]TRACe:MEASurement:TRANSition:POSitive:OVERshoot?**

The `SENS:TRAC:MEAS:...` commands are maintained for compatibility reasons only. For new remote control programs, use the corresponding `[SENS:]PULS:...` commands instead.

**Usage:**                    Query only

## 9.19 Programming example: pulse measurement

This example demonstrates how to perform a pulse measurement in a remote environment.

Note that some of the used commands may not be necessary as they define default values, but are included to demonstrate their use.

```
//----- Preparing the measurement -----
//Reset the instrument
*RST
//Activate the pulse measurement application
INST:SEL 'PULSE'
```

## Programming example: pulse measurement

```

//-----Configuring the measurement -----
//Set the center frequency
FREQ:CENT 1GHz

// Set the filter, bandwidth, and implicitly the sample rate
SENS:BWID:DEM:TYPE GAUSS
SENS:BWID:DEM 80MHZ
SENS:SRAT?

//Configure the expected pulse:
//width between 1ms and 1.5ms, off time at least 0.5ms
SENS:TRAC:MEAS:DEF:DUR:AUTO OFF
SENS:TRAC:MEAS:DEF:DUR:MIN 1ms
SENS:TRAC:MEAS:DEF:DUR:MAX 1.5ms
SENS:TRAC:MEAS:DEF:DUR:OFF 0.5ms

//Assume amplitude droop
SENS:TRAC:MEAS:DEF:PULS:ADR ON
//Assume Linear FM modulation
SENS:TRAC:MEAS:DEF:PULS:MOD LFM
//Pulse starts with rising edge
SENS:TRAC:MEAS:DEF:PULS:PER LH
//Determine freq offset and chirp rate for each pulse automatically
SENS:TRAC:MEAS:DEF:FREQ:OFFS:AUTO ON
SENS:TRAC:MEAS:DEF:FREQ:RATE:AUTO ON

//Input from RF input connector
INP:SEL RF
//Alternatively: Input from I/Q data file
//INP:SEL FIQ
//INP:FILE:PATH 'C:\R_S\Instr\user\data.iq.tar'

//Configure a power trigger at -20dBm (pulse level - 10dB default attenuation)
TRIG:SOUR RFP
TRIG:LEV:RFP -20dBm
//Avoid triggering on overshoot:
//level must remain below trigger level at least 0.5ms
TRIG:DTIM 0.5ms

//Configure the conditions for pulse detection:
//max. 10 pulses, min. -30dB power level, 2dB hysteresis
DET:LIM ON
DET:LIM:COUN 10
DET:REF ABS
DET:THR -30dB
DET:HYST 2dB

//Configure how and which levels are used for pulse detection:
//mean level for top, power values in dBm, consider droop
//ripple calculated in first 5% of pulse top

```



## Programming example: pulse measurement

```

SENS:TRAC:MEAS:ALG MEAN
SENS:TRAC:MEAS:DEF:AMPL:UNIT DBM
SENS:TRAC:MEAS:DEF:COMP:ADR ON
SENS:TRAC:MEAS:DEF:RIPP 5

// meas levels at 15,50,85% power
//in dB: -1.41, -6.02, -26.02
SENS:TRAC:MEAS:DEF:TRAN:HREF -1.41
SENS:TRAC:MEAS:DEF:TRAN:REF -6.02
SENS:TRAC:MEAS:DEF:TRAN:LREF -26.02

//boundary calculated in top 5% = 0.26dB
SENS:TRAC:MEAS:DEF:BOUN:TOP 0.26

//Configure which point is used to determine pulse characteristics:
//0.1ms from top center, window 1ms
SENS:TRAC:MEAS:DEF:PULS:INST:REF CENT
SENS:TRAC:MEAS:DEF:PULS:INST 0.1ms
SENS:TRAC:MEAS:DEF:PULS:INST:AWIN 1ms

//Configure the range used for estimation: 0.1ms from either edge
SENS:TRAC:MEAS:DEF:PULS:EST:REF EDGE
SENS:TRAC:MEAS:DEF:PULS:EST:OFFS:LEFT 0.1ms
SENS:TRAC:MEAS:DEF:PULS:EST:OFFS:RIGH 0.1ms

//Configure the range for which individual pulse results are displayed:
//300us starting from left edge of pulse top
SENS:TRAC:MEAS:DEF:RRAN:REF RISE
SENS:TRAC:MEAS:DEF:RRAN:ALIG LEFT
SENS:TRAC:MEAS:DEF:RRAN:LENG 300us

//Configure data acquisition for 10ms
SWE:TIME 10ms

//----- Configuring the results -----
//Result displays:
//upper row: (1)MagCapt (2)Pulse results (3)Pulse statistics
//bottom row: (4)Pulse magnitude (5)Pulse power dist vs occurrence
//(6)Pulse power spectrum
LAY:REPL '1',MCA
LAY:REPL '2',PRES
LAY:ADD:WIND? '2',RIGH,PST
LAY:REPL '4',PMAG
LAY:REPL '5',PDIS
CALC5:DIST:POW POIN,OCC
LAY:REPL '6',PSP
CALC6:PSP:POW POIN

//Configure magnitude capture: automatic scaling
DISP:WIND1:TRAC:Y:SCAL:AUTO ON

```

## Programming example: pulse measurement

```

//Configure parameters in pulse results table:
//Freq.: freq. at meas point, pulse-pulse difference, freq.dev., freq. err peak
CALC2:TABL:FREQ:POIN ON
CALC2:TABL:FREQ:PPFR ON
CALC2:TABL:FREQ:DEV ON
CALC2:TABL:FREQ:PERR ON

//Phase: phase deviation
CALC2:TABL:PHAS:DEV ON

//Power: average ON, droop, pulse-pulse difference, amplitude
CALC2:TABL:POW:ON ON
CALC2:TABL:POW:ADR ON
CALC2:TABL:POW:PPR ON
CALC2:TABL:POW:AMPL ON
//Limit check for average ON power: lower limit -10 dBm, upper: 1 dBm
CALC2:TABL:POW:ON:LIM:STAT ON
CALC2:TABL:POW:ON:LIM -10DBM,1DBM

//Timing: settling time, pulse width
CALC2:TABL:TIM:SETT ON
CALC2:TABL:TIM:PWID ON

//Configure pulse statistics table - same par. as results table
CALC3:TABL:FREQ:POIN ON
CALC3:TABL:FREQ:PPFR ON
CALC3:TABL:FREQ:DEV ON
CALC3:TABL:FREQ:PERR ON
CALC3:TABL:PHAS:DEV ON
CALC3:TABL:POW:ON ON
CALC3:TABL:POW:ADR ON
CALC3:TABL:POW:PPR ON
CALC3:TABL:POW:AMPL ON
CALC3:TABL:TIM:SETT ON
CALC3:TABL:TIM:PWID ON

//Configure pulse magnitude:
//scaling is 25 dBm above and below pulse mid level
DISP:WIND4:TRAC:Y:SCAL:AUTO OFF
DISP:WIND4:TRAC:Y:SCAL:RPOS 50
DISP:WIND4:TRAC:Y:SCAL:RVAL 0
DISP:WIND4:TRAC:Y:SCAL:PDIV 2

//-----Performing the Measurement-----
INIT:CONT OFF
//Selects single sweep mode.
INIT;*WAI

```

## Programming example: pulse measurement

```
//Initiates a new measurement and waits until the sweep has finished.

//-----Retrieving Results-----
//Select pulse for individual pulse results: pulse 1
SENS:TRAC:MEAS:DEF:PULS:SEL 1
// Determine pulse numbers in entire meas
SENS:PULS:NUMB? ALL
// Determine pulse numbers in current capture buffer
SENS:PULS:NUMB? CURR

//Retrieve parameter results from results table (pulse 1)
SENS:PULS:FREQ:POIN? SEL
SENS:PULS:FREQ:PPFR? SEL
SENS:PULS:FREQ:DEV? SEL
SENS:PULS:FREQ:PERR? SEL
SENS:PULS:PHAS:DEV? SEL
SENS:PULS:POW:ON? SEL
SENS:PULS:POW:ADR? SEL
SENS:PULS:POW:PPR? SEL
SENS:PULS:POW:AMPL? SEL
SENS:PULS:TIM:SETT? SEL
SENS:PULS:TIM:PWID? SEL

//Retrieve limit check result for average ON power in pulses in current meas
SENS:PULS:POW:ON:LIM? CURR

//Retrieve pulse statistics (aver., min., max) for all pulses in entire meas
SENS:PULS:FREQ:POIN:AVER? ALL
SENS:PULS:FREQ:POIN:MIN? ALL
SENS:PULS:FREQ:POIN:MAX? ALL

SENS:PULS:FREQ:PPFR:AVER? ALL
SENS:PULS:FREQ:PPFR:MIN? ALL
SENS:PULS:FREQ:PPFR:MAX? ALL

SENS:PULS:FREQ:DEV:AVER? ALL
SENS:PULS:FREQ:DEV:MIN? ALL
SENS:PULS:FREQ:DEV:MAX? ALL

SENS:PULS:FREQ:PERR:AVER? ALL
SENS:PULS:FREQ:PERR:MIN? ALL
SENS:PULS:FREQ:PERR:MAX? ALL

SENS:PULS:PHAS:DEV:AVER? ALL
SENS:PULS:PHAS:DEV:MIN? ALL
SENS:PULS:PHAS:DEV:MAX? ALL

SENS:PULS:POW:ON:AVER? ALL
SENS:PULS:POW:ON:MIN? ALL
```

```
SENS:PULS:POW:ON:MAX? ALL

SENS:PULS:POW:ADR:AVER? ALL
SENS:PULS:POW:ADR:MIN? ALL
SENS:PULS:POW:ADR:MAX? ALL

SENS:PULS:POW:PPR:AVER? ALL
SENS:PULS:POW:PPR:MIN? ALL
SENS:PULS:POW:PPR:MAX? ALL

SENS:PULS:POW:AMPL:AVER? ALL
SENS:PULS:POW:AMPL:MIN? ALL
SENS:PULS:POW:AMPL:MAX? ALL

SENS:PULS:TIM:SETT:AVER? ALL
SENS:PULS:TIM:SETT:MIN? ALL
SENS:PULS:TIM:SETT:MAX? ALL

SENS:PULS:TIM:PWID:AVER? ALL
SENS:PULS:TIM:PWID:MIN? ALL
SENS:PULS:TIM:PWID:MAX? ALL

//Retrieve trace data for pulse magnitude (pulse 1)
//TRAC4:DATA? TRACe1
//TRAC4:DATA:X? TRACe1

//Export entire result table (all params) to an ASCII file
//MMEM:STOR2:TABL ALL, 'C:\R_S\Instr\user\AllResults.dat'

//Store I/Q data for result range to an iq-tar file
//MMEM:STOR:IQ:COMM 'I/Q data for result range'
//MMEM:STOR:IQ:RANG RRAN
//MMEM:STOR:IQ:STAT 1, 'C:\R_S\Instr\user\RRTestdata.iq.tar'
```

## Annex

<b>A</b>	<b>Reference: ASCII file export format.....</b>	<b>335</b>
<b>B</b>	<b>Effects of large gauss filters.....</b>	<b>337</b>
<b>C</b>	<b>I/Q data file format (iq-tar).....</b>	<b>338</b>



## A Reference: ASCII file export format

Trace data can be exported to a file in ASCII format for further evaluation in other applications

The file consists of the header containing important scaling parameters and a data section containing the trace data.

Generally, the format of this ASCII file can be processed by spreadsheet calculation programs, e.g. MS-Excel. Different language versions of evaluation programs may require a different handling of the decimal point. Thus you can define the decimal separator to be used (decimal point or comma, see "[Decimal Separator](#)" on page 114).

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the two lines containing the measured parameter names and units, followed by the measured data in multiple columns (depending on measurement) which are also separated by a semicolon.

**Table A-1: ASCII file format for table export**

File contents	Description
<b>Header data</b>	
Type;R&S FSMR3;	Instrument model
Version;5.00;	Firmware version
Date;01.Oct 2006;	Date of data set storage
Mode;PULSE;	Application
Center Freq;55000;Hz	Center frequency
Freq Offset;0;Hz	Frequency offset
Meas BW;10000000;Hz	Measurement Bandwidth
Filter Type;GAUS;	Measurement filter type can be Gaussian (GAUS) or flat (FLAT)
Ref Level;-30;dBm	Reference level
Level Offset;0;dB	Level offset
Rf Att;20;dB	Input attenuation
EI Att;2.0;dB	Electrical attenuation
SWT;0.005;s	Sweep time (measurement time)
Sweep Count;20;	Number of sweeps set
Preamplifier;OFF	Preamplifier status
Top Pos.;CENT;	Top (100%) level position can be Edge (EDGE) or Center (CENT)
Top Alg.;MEDI	Top level measurement algorithm can be Median (MEDI) or Mean (MEAN)
Ripple Portion;50;%	Portion of pulse top where ripple is measured

File contents	Description
High Level;90;%V	High (distal) threshold level
Mid Level;50;%V	Mid (mesial) threshold level
Low Level;10;%V	Low (proximal) threshold level
Boundary;3;%V	The (top +/-) boundary level
Point Ref;CENT;	Measurement point reference can be Rise (RISE), Center (CENT) or Fall (FALL)
Point Offset;0;s	Measurement point offset
Range Ref;CENT;	Measurement range reference can be Center (CENT) or Edge (EDGE)
Range Length;75;%	Measurement range length (only valid for "Range Ref.:CENT")
Range Offset Rise;0;s	Measurement range offset from rising edge (only valid for "Range Ref.:EDGE")
Range Offset Fall;0;s	Measurement range offset from falling edge (only valid for "Range Ref.:EDGE")
<b>Data section</b>	
Values; 1001;	Number of rows of measured values in the table
ID;;Pulse No.;;Rise Time;;...	Pulse parameter names
Unit;;s;...	Unit of pulse parameters
1;1;10.0e-9;... 2;2;10.1e-9;... 1;3;9.9e-9;... ...;...;...;...	Measured values: <ID>, <Pulse No.>, <Param 1>, ... , <Param N>



## B Effects of large gauss filters

As an alternative to the nearly rectangular "flat" measurement filters, the R&S FSMR3 also provides Gaussian filters. Gaussian filters have an optimized settling behavior, which avoids overshoot distortions in time domain data.

However, for Gaussian filters whose -3dB bandwidth is large compared to the maximum I/Q bandwidth, the ideal Gaussian filter shape would exceed the maximum I/Q bandwidth at its outer edges. Thus, the actual filter only follows the ideal Gaussian filter shape in the inner range of the set I/Q bandwidth. At a certain frequency offset it must deviate from the ideal Gauss filter and drop off faster.

### Gaussian filters with large -3dB bandwidths (<10 MHz)

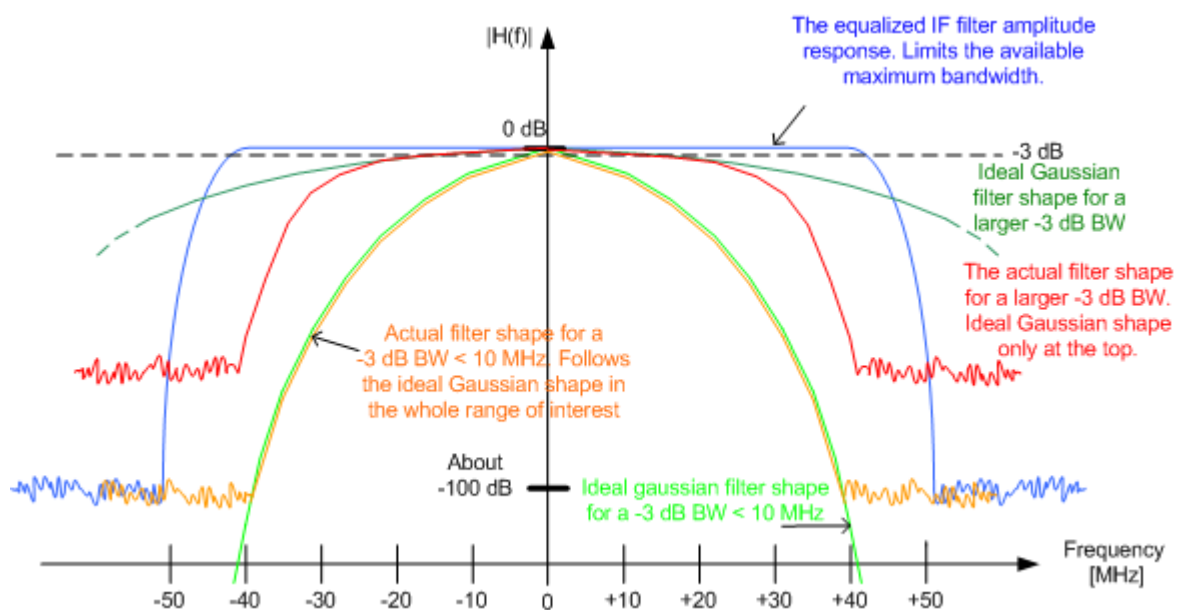


Table B-1: Gauss filters with large -3 dB bandwidths

-3 dB BW	Max. freq. with Gaussian shape	Attenuation at max. freq.	Attenuation at I/Q range edge ( $\pm 40$ MHz)
40 MHz	+/-24 MHz	4 dB	> 60 dB
28 MHz	+/-22 MHz	7 dB	> 65 dB
18 MHz	+/-28 MHz	29 dB	> 100 dB
10 MHz	+/-25 MHz	75 dB	> 100 dB

## C I/Q data file format (iq-tar)

I/Q data is packed in a file with the extension `.iq.tar`. An `iq-tar` file contains I/Q data in binary format together with meta information that describes the nature and the source of data, e.g. the sample rate. The objective of the `iq-tar` file format is to separate I/Q data from the meta information while still having both inside one file. In addition, the file format allows you to include user-specific data and to preview the I/Q data in a web browser (not supported by all web browsers).

The `iq-tar` container packs several files into a single `.tar` archive file. Files in `.tar` format can be unpacked using standard archive tools (see [http://en.wikipedia.org/wiki/Comparison\\_of\\_file\\_archivers](http://en.wikipedia.org/wiki/Comparison_of_file_archivers)) available for most operating systems. The advantage of `.tar` files is that the archived files inside the `.tar` file are not changed (not compressed) and thus it is possible to read the I/Q data directly within the archive without the need to unpack (`untar`) the `.tar` file first.



### Sample iq-tar files

Some sample `iq-tar` files are provided in the `C:\R_S\INSTR\USER\Demo\` directory on the R&S FSMR3.



An application note on converting Rohde & Schwarz I/Q data files is available from the Rohde & Schwarz website:

[1EF85: Converting R&S I/Q data files](#)

### Contained files

An `iq-tar` file must contain the following files:

- **I/Q parameter XML file**, e.g. `xyz.xml`  
Contains meta information about the I/Q data (e.g. sample rate). The filename can be defined freely, but there must be only one single I/Q parameter XML file inside an `iq-tar` file.
- **I/Q data binary file**, e.g. `xyz.complex.float32`  
Contains the binary I/Q data of all channels. There must be only one single I/Q data binary file inside an `iq-tar` file.

Optionally, an `iq-tar` file can contain the following file:

- **I/Q preview XSLT file**, e.g. `open_IqTar_xml_file_in_web_browser.xslt`  
Contains a stylesheet to display the I/Q parameter XML file and a preview of the I/Q data in a web browser (not supported by all web browsers).  
A sample stylesheet is available at [http://www.rohde-schwarz.com/file/open\\_IqTar\\_xml\\_file\\_in\\_web\\_browser.xslt](http://www.rohde-schwarz.com/file/open_IqTar_xml_file_in_web_browser.xslt).

- [I/Q parameter XML file specification](#)..... 339
- [I/Q data binary file](#)..... 343

## C.1 I/Q parameter XML file specification



The content of the I/Q parameter XML file must comply with the XML schema `RsIqTar.xsd` available at: <http://www.rohde-schwarz.com/file/RsIqTar.xsd>.

In particular, the order of the XML elements must be respected, i.e. `iq-tar` uses an "ordered XML schema". For your own implementation of the `iq-tar` file format make sure to validate your XML file against the given schema.

The following example shows an I/Q parameter XML file. The XML elements and attributes are explained in the following sections.

### Sample I/Q parameter XML file: xyz.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<?xml-stylesheet type="text/xsl"
href="open_IqTar_xml_file_in_web_browser.xslt"?>
<RS_IQ_TAR_FileFormat fileFormatVersion="1"
xsi:noNamespaceSchemaLocation="RsIqTar.xsd"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <Name>R&S FSMR3</Name>
  <Comment>Here is a comment</Comment>
  <DateTime>2011-01-24T14:02:49</DateTime>
  <Samples>68751</Samples>
  <Clock unit="Hz">6.5e+006</Clock>
  <Format>complex</Format>
  <DataType>float32</DataType>
  <ScalingFactor unit="V">1</ScalingFactor>
  <NumberOfChannels>1</NumberOfChannels>
  <DataFilename>xyz.complex.float32</DataFilename>
  <UserData>
    <UserDefinedElement>Example</UserDefinedElement>
  </UserData>
  <PreviewData>...</PreviewData>
</RS_IQ_TAR_FileFormat>
```

### C.1.1 Minimum data elements


The following data elements are the minimum required for a valid `iq-tar` file. They are always provided by an `iq-tar` file export from a Rohde & Schwarz product. If not specified otherwise, it must be available in all `iq-tar` files used to import data to a Rohde & Schwarz product.

Element	Possible Values	Description
<RS_IQ_TAR_FileFormat>	-	The root element of the XML file. It must contain the attribute <code>fileFormatVersion</code> that contains the number of the file format definition.
<Name>	string	Optional: describes the device or application that created the file.
<Comment>	string	Optional: contains text that further describes the contents of the file.
<DateTime>	yyyy-mm-ddThh:mm:ss	Contains the date and time of the creation of the file. Its type is <code>xs:dateTime</code> (see <code>RsIqTar.xsd</code> ).
<Samples>	integer	Contains the number of samples of the I/Q data. For multi-channel signals all channels have the same number of samples. One sample can be: <ul style="list-style-type: none"> <li>• A complex number represented as a pair of I and Q values</li> <li>• A complex number represented as a pair of magnitude and phase values</li> <li>• A real number represented as a single real value</li> </ul> See also <Format> element.
<Clock>	double	Contains the clock frequency in Hz, i.e. the sample rate of the I/Q data. A signal generator typically outputs the I/Q data at a rate that equals the clock frequency. If the I/Q data was captured with a signal analyzer, the signal analyzer used the clock frequency as the sample rate. The attribute <code>unit</code> must be set to "Hz".
<Format>	complex   real   polar	Specifies how the binary data is saved in the I/Q data binary file (see <DataFilename> element). Every sample must be in the same format. The format can be one of the following: <ul style="list-style-type: none"> <li>• <code>complex</code>: Complex number in cartesian format, i.e. I and Q values interleaved. I and Q are unitless</li> <li>• <code>real</code>: Real number (unitless)</li> <li>• <code>polar</code>: Complex number in polar format, i.e. magnitude (unitless) and phase (rad) values interleaved. Requires <code>DataType = float32 or float64</code></li> </ul>
<DataType>	int8   int16   int32   float32   float64	Specifies the binary format used for samples in the I/Q data binary file (see <DataFilename> element and <a href="#">Chapter C.2, "I/Q data binary file"</a> , on page 343). The following data types are allowed: <ul style="list-style-type: none"> <li>• <code>int8</code>: 8 bit signed integer data</li> <li>• <code>int16</code>: 16 bit signed integer data</li> <li>• <code>int32</code>: 32 bit signed integer data</li> <li>• <code>float32</code>: 32 bit floating point data (IEEE 754)</li> <li>• <code>float64</code>: 64 bit floating point data (IEEE 754)</li> </ul>
<ScalingFactor>	double	Optional: describes how the binary data can be transformed into values in the unit Volt. The binary I/Q data itself has no unit. To get an I/Q sample in the unit Volt the saved samples have to be multiplied by the value of the <ScalingFactor>. For polar data only the magnitude value has to be multiplied. For multi-channel signals the <ScalingFactor> must be applied to all channels. The attribute <code>unit</code> must be set to "v".  The <ScalingFactor> must be > 0. If the <ScalingFactor> element is not defined, a value of 1 V is assumed.

Element	Possible Values	Description
<NumberOfChannels>	integer	Optional: specifies the number of channels, e.g. of a MIMO signal, contained in the I/Q data binary file. For multi-channels, the I/Q samples of the channels are expected to be interleaved within the I/Q data file (see <a href="#">Chapter C.2, "I/Q data binary file"</a> , on page 343). If the <NumberOfChannels> element is not defined, one channel is assumed.
<DataFilename>		Contains the filename of the I/Q data binary file that is part of the iq-tar file.  It is recommended that the filename uses the following convention: <xyz>.<Format>.<Channels>ch.<Type> <ul style="list-style-type: none"> <li>• &lt;xyz&gt; = a valid Windows file name</li> <li>• &lt;Format&gt; = complex, polar or real (see <a href="#">Format</a> element)</li> <li>• &lt;Channels&gt; = Number of channels (see <a href="#">NumberOfChannels</a> element)</li> <li>• &lt;Type&gt; = float32, float64, int8, int16, int32 or int64 (see <a href="#">DataType</a> element)</li> </ul> Examples: <ul style="list-style-type: none"> <li>• xyz.complex.1ch.float32</li> <li>• xyz.polar.1ch.float64</li> <li>• xyz.real.1ch.int16</li> <li>• xyz.complex.16ch.int8</li> </ul>
<UserData>	xml	Optional: contains user, application or device-specific XML data which is not part of the iq-tar specification. This element can be used to store additional information, e.g. the hardware configuration. User data must be valid XML content.
<PreviewData>	xml	Optional: contains further XML elements that provide a preview of the I/Q data. The preview data is determined by the routine that saves an iq-tar file (e.g. R&S FSMR3). For the definition of this element refer to the <a href="#">RsIqTar.xsd</a> schema. Note that the preview can be only displayed by current web browsers that have JavaScript enabled and if the XSLT stylesheet <a href="#">open_IqTar_xml_file_in_web_browser.xslt</a> is available.

### C.1.2 Example

The following example demonstrates the XML description inside the iq-tar file. Note that this preview is not supported by all web browsers.

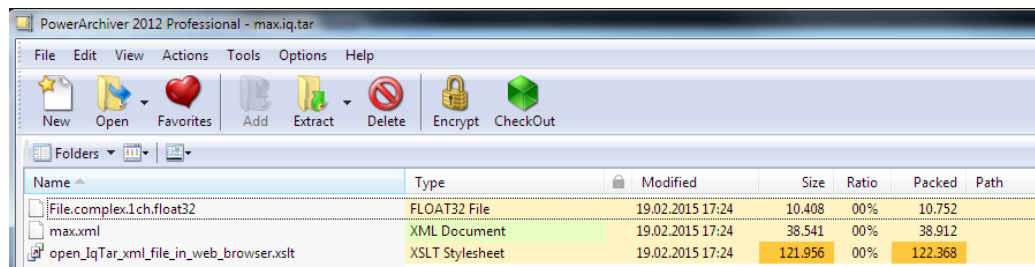

Open the xml file in a web browser, e.g. Microsoft Internet Explorer. If the stylesheet [open\\_IqTar\\_xml\\_file\\_in\\_web\\_browser.xslt](#) is in the same directory, the web browser displays the xml file in a readable format.

**max.xml (of .iq.tar file)**

Description	
Saved by	VSE_1.10
Date & Time	2014-11-24 14:34:06
Sample rate	32 MHz
Number of samples	3200300
Duration of signal	100.009 ms
Data format	complex, float32
Data filename	File.complex.1ch.float32
Scaling factor	1 V

**IQ Analyzer**

**Power vs time**  
y-axis: 10 dB /div  
x-axis: 10 ms /div

**Spectrum**  
y-axis: 10 dB /div  
x-axis: 5 MHz /div

**I/Q**

```
<?xml version="1.0" encoding="UTF-8"?>
<?xml-stylesheet type="text/xsl" href="open_IqTar_xml_file_in_web_browser.xslt"?>
<RS_IQ_TAR_FileFormat fileFormatVersion="1" xsi:noNamespaceSchemaLocation=
"http://www.rohde-schwarz.com/file/RsIqTar.xsd" xmlns:xsi=
"http://www.w3.org/2001/XMLSchema-instance">
  <Name>VSE_1.10a 29 Beta</Name>
  <Comment></Comment>
  <DateTime>2015-02-19T15:24:58</DateTime>
  <Samples>1301</Samples>
  <Clock unit="Hz">32000000</Clock>
  <Format>complex</Format>
  <DataType>float32</DataType>
```

```

<ScalingFactor unit="V">1</ScalingFactor>
<NumberOfChannels>1</NumberOfChannels>
<DataFilename>File.complex.1ch.float32</DataFilename>

<UserData>
  <RohdeSchwarz>
    <DataImportExport_MandatoryData>
      <ChannelNames>
        <ChannelName>IQ Analyzer</ChannelName>
      </ChannelNames>
      <CenterFrequency unit="Hz">0</CenterFrequency>
    </DataImportExport_MandatoryData>
    <DataImportExport_OptionalData>
      <Key name="Ch1_NumberOfPostSamples">150</Key>
      <Key name="Ch1_NumberOfPreSamples">150</Key>
    </DataImportExport_OptionalData>
  </RohdeSchwarz>
</UserData>

</RS_IQ_TAR_FileFormat>

```

**Example: ScalingFactor**

Data stored as int16 and a desired full scale voltage of 1 V

ScalingFactor = 1 V / maximum int16 value = 1 V / 2<sup>15</sup> = 3.0517578125e-5 V

Scaling Factor	Numerical value	Numerical value x ScalingFactor
Minimum (negative) int16 value	- 2 <sup>15</sup> = - 32768	-1 V
Maximum (positive) int16 value	2 <sup>15</sup> -1= 32767	0.999969482421875 V

## C.2 I/Q data binary file

The I/Q data is saved in binary format according to the format and data type specified in the XML file (see <Format> element and <DataType> element). To allow reading and writing of streamed I/Q data, all data is interleaved, i.e. complex values are interleaved pairs of I and Q values and multi-channel signals contain interleaved (complex) samples for channel 0, channel 1, channel 2 etc. If the <NumberOfChannels> element is not defined, one channel is presumed.

**Example: Element order for real data (1 channel)**

```

I[0],           // Real sample 0
I[1],           // Real sample 1
I[2],           // Real sample 2
...

```

**Example: Element order for complex cartesian data (1 channel)**

```
I[0], Q[0],           // Real and imaginary part of complex sample 0
I[1], Q[1],           // Real and imaginary part of complex sample 1
I[2], Q[2],           // Real and imaginary part of complex sample 2
...
```

**Example: Element order for complex polar data (1 channel)**

```
Mag[0], Phi[0],      // Magnitude and phase part of complex sample 0
Mag[1], Phi[1],      // Magnitude and phase part of complex sample 1
Mag[2], Phi[2],      // Magnitude and phase part of complex sample 2
...
```

**Example: Element order for complex cartesian data (3 channels)**

Complex data: I[channel no][time index], Q[channel no][time index]

```
I[0][0], Q[0][0],      // Channel 0, Complex sample 0
I[1][0], Q[1][0],      // Channel 1, Complex sample 0
I[2][0], Q[2][0],      // Channel 2, Complex sample 0

I[0][1], Q[0][1],      // Channel 0, Complex sample 1
I[1][1], Q[1][1],      // Channel 1, Complex sample 1
I[2][1], Q[2][1],      // Channel 2, Complex sample 1

I[0][2], Q[0][2],      // Channel 0, Complex sample 2
I[1][2], Q[1][2],      // Channel 1, Complex sample 2
I[2][2], Q[2][2],      // Channel 2, Complex sample 2
...
```

**Example: Element order for complex cartesian data (1 channel)**

This example demonstrates how to store complex cartesian data in float32 format using MATLAB®.

```
% Save vector of complex cartesian I/Q data, i.e. iqiqli...
N = 100
iq = randn(1,N)+1j*randn(1,N)
fid = fopen('xyz.complex.float32','w');
for k=1:length(iq)
    fwrite(fid, single(real(iq(k))), 'float32');
    fwrite(fid, single(imag(iq(k))), 'float32');
end
fclose(fid)
```

**Example: PreviewData in XML**

```
<PreviewData>
  <ArrayOfChannel length="1">
    <Channel>
      <PowerVsTime>
        <Min>
```



```

        <ArrayOfFloat length="256">
            <float>-134</float>
            <float>-142</float>
            ...
            <float>-140</float>
        </ArrayOfFloat>
    </Min>
    <Max>
        <ArrayOfFloat length="256">
            <float>-70</float>
            <float>-71</float>
            ...
            <float>-69</float>
        </ArrayOfFloat>
    </Max>
</PowerVsTime>
<Spectrum>
    <Min>
        <ArrayOfFloat length="256">
            <float>-133</float>
            <float>-111</float>
            ...
            <float>-111</float>
        </ArrayOfFloat>
    </Min>
    <Max>
        <ArrayOfFloat length="256">
            <float>-67</float>
            <float>-69</float>
            ...
            <float>-70</float>
            <float>-69</float>
        </ArrayOfFloat>
    </Max>
</Spectrum>
<IQ>
    <Histogram width="64" height="64">0123456789...0</Histogram>
</IQ>
</Channel>
</ArrayOfChannel>
</PreviewData>

```

## List of Commands (Pulse)

[SENSe:] [WINDow<n>:] DETector<t>[:FUNCTION].....	247
[SENSe:] [WINDow<n>:] DETector<t>[:FUNCTION]:AUTO.....	247
[SENSe:] ADJust:LEVel.....	143
[SENSe:] BANDwidth:DEMod.....	153
[SENSe:] BANDwidth:DEMod:TYPE.....	153
[SENSe:] BWIDth:DEMod.....	153
[SENSe:] BWIDth:DEMod:TYPE.....	153
[SENSe:] DEMod:FMVF:TYPE.....	154
[SENSe:] DETect:HYSTeresis.....	157
[SENSe:] DETect:LIMit.....	156
[SENSe:] DETect:LIMit:COUNT.....	156
[SENSe:] DETect:RANGe.....	157
[SENSe:] DETect:RANGe:LENGth.....	157
[SENSe:] DETect:RANGe:STARt.....	157
[SENSe:] DETect:REFerence.....	158
[SENSe:] DETect:THReshold.....	158
[SENSe:] FREQuency:CENTer.....	142
[SENSe:] FREQuency:CENTer:STEP.....	142
[SENSe:] FREQuency:CENTer:STEP:AUTO.....	142
[SENSe:] FREQuency:OFFSet.....	143
[SENSe:] PULSe:<ParameterGroup>:<Parameter>:COUNT?.....	268
[SENSe:] PULSe:<Parametertype>:<Parameter>:LIMit?.....	319
[SENSe:] PULSe:COUNT?.....	266
[SENSe:] PULSe:EMODel:FBPTime:AVERage?.....	308
[SENSe:] PULSe:EMODel:FBPTime:COUNT?.....	266
[SENSe:] PULSe:EMODel:FBPTime:LIMit?.....	319
[SENSe:] PULSe:EMODel:FBPTime:MAXimum?.....	308
[SENSe:] PULSe:EMODel:FBPTime:MINimum?.....	308
[SENSe:] PULSe:EMODel:FBPTime:SDEViation?.....	308
[SENSe:] PULSe:EMODel:FBPTime?.....	307
[SENSe:] PULSe:EMODel:FHPLLevel:AVERage?.....	308
[SENSe:] PULSe:EMODel:FHPLLevel:COUNT?.....	266
[SENSe:] PULSe:EMODel:FHPLLevel:LIMit?.....	319
[SENSe:] PULSe:EMODel:FHPLLevel:MAXimum?.....	308
[SENSe:] PULSe:EMODel:FHPLLevel:MINimum?.....	308
[SENSe:] PULSe:EMODel:FHPLLevel:SDEViation?.....	308
[SENSe:] PULSe:EMODel:FHPLLevel?.....	308
[SENSe:] PULSe:EMODel:FHPTTime:AVERage?.....	309
[SENSe:] PULSe:EMODel:FHPTTime:COUNT?.....	266
[SENSe:] PULSe:EMODel:FHPTTime:LIMit?.....	319
[SENSe:] PULSe:EMODel:FHPTTime:MAXimum?.....	309
[SENSe:] PULSe:EMODel:FHPTTime:MINimum?.....	309
[SENSe:] PULSe:EMODel:FHPTTime:SDEViation?.....	309
[SENSe:] PULSe:EMODel:FHPTTime?.....	309
[SENSe:] PULSe:EMODel:FLPLLevel:AVERage?.....	310
[SENSe:] PULSe:EMODel:FLPLLevel:COUNT?.....	266
[SENSe:] PULSe:EMODel:FLPLLevel:LIMit?.....	319

[SENSe:]PULSe:EMODel:FLPLLevel:MAXimum?	310
[SENSe:]PULSe:EMODel:FLPLLevel:MINimum?	310
[SENSe:]PULSe:EMODel:FLPLLevel:SDEVIation?	310
[SENSe:]PULSe:EMODel:FLPLLevel?	309
[SENSe:]PULSe:EMODel:FLPTTime:AVERage?	310
[SENSe:]PULSe:EMODel:FLPTTime:COUNT?	266
[SENSe:]PULSe:EMODel:FLPTTime:LIMit?	319
[SENSe:]PULSe:EMODel:FLPTTime:MAXimum?	310
[SENSe:]PULSe:EMODel:FLPTTime:MINimum?	310
[SENSe:]PULSe:EMODel:FLPTTime:SDEVIation?	310
[SENSe:]PULSe:EMODel:FLPTTime?	310
[SENSe:]PULSe:EMODel:FMPLLevel:AVERage?	311
[SENSe:]PULSe:EMODel:FMPLLevel:COUNT?	266
[SENSe:]PULSe:EMODel:FMPLLevel:LIMit?	319
[SENSe:]PULSe:EMODel:FMPLLevel:MAXimum?	311
[SENSe:]PULSe:EMODel:FMPLLevel:MINimum?	311
[SENSe:]PULSe:EMODel:FMPLLevel:SDEVIation?	311
[SENSe:]PULSe:EMODel:FMPLLevel?	311
[SENSe:]PULSe:EMODel:FMPTTime:AVERage?	312
[SENSe:]PULSe:EMODel:FMPTTime:COUNT?	266
[SENSe:]PULSe:EMODel:FMPTTime:LIMit?	319
[SENSe:]PULSe:EMODel:FMPTTime:MAXimum?	312
[SENSe:]PULSe:EMODel:FMPTTime:MINimum?	312
[SENSe:]PULSe:EMODel:FMPTTime:SDEVIation?	312
[SENSe:]PULSe:EMODel:FMPTTime?	311
[SENSe:]PULSe:EMODel:FTPLLevel:AVERage?	312
[SENSe:]PULSe:EMODel:FTPLLevel:COUNT?	266
[SENSe:]PULSe:EMODel:FTPLLevel:LIMit?	319
[SENSe:]PULSe:EMODel:FTPLLevel:MAXimum?	312
[SENSe:]PULSe:EMODel:FTPLLevel:MINimum?	312
[SENSe:]PULSe:EMODel:FTPLLevel:SDEVIation?	312
[SENSe:]PULSe:EMODel:FTPLLevel?	312
[SENSe:]PULSe:EMODel:FTPTTime:AVERage?	313
[SENSe:]PULSe:EMODel:FTPTTime:COUNT?	266
[SENSe:]PULSe:EMODel:FTPTTime:LIMit?	319
[SENSe:]PULSe:EMODel:FTPTTime:MAXimum?	313
[SENSe:]PULSe:EMODel:FTPTTime:MINimum?	313
[SENSe:]PULSe:EMODel:FTPTTime:SDEVIation?	313
[SENSe:]PULSe:EMODel:FTPTTime?	313
[SENSe:]PULSe:EMODel:RBPTTime:AVERage?	314
[SENSe:]PULSe:EMODel:RBPTTime:COUNT?	266
[SENSe:]PULSe:EMODel:RBPTTime:LIMit?	319
[SENSe:]PULSe:EMODel:RBPTTime:MAXimum?	314
[SENSe:]PULSe:EMODel:RBPTTime:MINimum?	314
[SENSe:]PULSe:EMODel:RBPTTime:SDEVIation?	314
[SENSe:]PULSe:EMODel:RBPTTime?	313
[SENSe:]PULSe:EMODel:RHPLLevel:AVERage?	314
[SENSe:]PULSe:EMODel:RHPLLevel:COUNT?	266
[SENSe:]PULSe:EMODel:RHPLLevel:LIMit?	319
[SENSe:]PULSe:EMODel:RHPLLevel:MAXimum?	314

[SENSe:]PULSe:EMODel:RHPLLevel:MINimum?.....	314
[SENSe:]PULSe:EMODel:RHPLLevel:SDEVIation?.....	314
[SENSe:]PULSe:EMODel:RHPLLevel?.....	314
[SENSe:]PULSe:EMODel:RHPTTime:AVERage?.....	315
[SENSe:]PULSe:EMODel:RHPTTime:COUNT?.....	266
[SENSe:]PULSe:EMODel:RHPTTime:LIMit?.....	320
[SENSe:]PULSe:EMODel:RHPTTime:MAXimum?.....	315
[SENSe:]PULSe:EMODel:RHPTTime:MINimum?.....	315
[SENSe:]PULSe:EMODel:RHPTTime:SDEVIation?.....	315
[SENSe:]PULSe:EMODel:RHPTTime?.....	315
[SENSe:]PULSe:EMODel:RLPLLevel:AVERage?.....	316
[SENSe:]PULSe:EMODel:RLPLLevel:COUNT?.....	266
[SENSe:]PULSe:EMODel:RLPLLevel:LIMit?.....	320
[SENSe:]PULSe:EMODel:RLPLLevel:MAXimum?.....	316
[SENSe:]PULSe:EMODel:RLPLLevel:MINimum?.....	316
[SENSe:]PULSe:EMODel:RLPLLevel:SDEVIation?.....	316
[SENSe:]PULSe:EMODel:RLPLLevel?.....	315
[SENSe:]PULSe:EMODel:RLPTTime:AVERage?.....	316
[SENSe:]PULSe:EMODel:RLPTTime:COUNT?.....	266
[SENSe:]PULSe:EMODel:RLPTTime:LIMit?.....	320
[SENSe:]PULSe:EMODel:RLPTTime:MAXimum?.....	316
[SENSe:]PULSe:EMODel:RLPTTime:MINimum?.....	316
[SENSe:]PULSe:EMODel:RLPTTime:SDEVIation?.....	316
[SENSe:]PULSe:EMODel:RLPTTime?.....	316
[SENSe:]PULSe:EMODel:RMPLLevel:AVERage?.....	317
[SENSe:]PULSe:EMODel:RMPLLevel:COUNT?.....	266
[SENSe:]PULSe:EMODel:RMPLLevel:LIMit?.....	320
[SENSe:]PULSe:EMODel:RMPLLevel:MAXimum?.....	317
[SENSe:]PULSe:EMODel:RMPLLevel:MINimum?.....	317
[SENSe:]PULSe:EMODel:RMPLLevel:SDEVIation?.....	317
[SENSe:]PULSe:EMODel:RMPLLevel?.....	317
[SENSe:]PULSe:EMODel:RMPTTime:AVERage?.....	318
[SENSe:]PULSe:EMODel:RMPTTime:COUNT?.....	266
[SENSe:]PULSe:EMODel:RMPTTime:LIMit?.....	320
[SENSe:]PULSe:EMODel:RMPTTime:MAXimum?.....	318
[SENSe:]PULSe:EMODel:RMPTTime:MINimum?.....	318
[SENSe:]PULSe:EMODel:RMPTTime:SDEVIation?.....	318
[SENSe:]PULSe:EMODel:RMPTTime?.....	317
[SENSe:]PULSe:EMODel:RTPLLevel:AVERage?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel:COUNT?.....	266
[SENSe:]PULSe:EMODel:RTPLLevel:LIMit?.....	320
[SENSe:]PULSe:EMODel:RTPLLevel:MAXimum?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel:MINimum?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel:SDEVIation?.....	318
[SENSe:]PULSe:EMODel:RTPLLevel?.....	318
[SENSe:]PULSe:EMODel:RTPTTime:AVERage?.....	319
[SENSe:]PULSe:EMODel:RTPTTime:COUNT?.....	266
[SENSe:]PULSe:EMODel:RTPTTime:LIMit?.....	320
[SENSe:]PULSe:EMODel:RTPTTime:MAXimum?.....	319
[SENSe:]PULSe:EMODel:RTPTTime:MINimum?.....	319

[SENSe:]PULSe:EMODel:RTPTime:SDEVIation?.....	319
[SENSe:]PULSe:EMODel:RTPTime?.....	319
[SENSe:]PULSe:FREQuency:CRATe:AVERAge?.....	297
[SENSe:]PULSe:FREQuency:CRATe:COUNT?.....	266
[SENSe:]PULSe:FREQuency:CRATe:LIMit?.....	320
[SENSe:]PULSe:FREQuency:CRATe:MAXimum?.....	297
[SENSe:]PULSe:FREQuency:CRATe:MINimum?.....	297
[SENSe:]PULSe:FREQuency:CRATe:SDEVIation?.....	297
[SENSe:]PULSe:FREQuency:CRATe?.....	296
[SENSe:]PULSe:FREQuency:DEVIation:AVERAge?.....	297
[SENSe:]PULSe:FREQuency:DEVIation:COUNT?.....	266
[SENSe:]PULSe:FREQuency:DEVIation:LIMit?.....	320
[SENSe:]PULSe:FREQuency:DEVIation:MAXimum?.....	297
[SENSe:]PULSe:FREQuency:DEVIation:MINimum?.....	298
[SENSe:]PULSe:FREQuency:DEVIation:SDEVIation?.....	298
[SENSe:]PULSe:FREQuency:DEVIation?.....	297
[SENSe:]PULSe:FREQuency:PERRor:AVERAge?.....	298
[SENSe:]PULSe:FREQuency:PERRor:COUNT?.....	266
[SENSe:]PULSe:FREQuency:PERRor:LIMit?.....	320
[SENSe:]PULSe:FREQuency:PERRor:MAXimum?.....	298
[SENSe:]PULSe:FREQuency:PERRor:MINimum?.....	298
[SENSe:]PULSe:FREQuency:PERRor:SDEVIation?.....	298
[SENSe:]PULSe:FREQuency:PERRor?.....	298
[SENSe:]PULSe:FREQuency:POINt:AVERAge?.....	299
[SENSe:]PULSe:FREQuency:POINt:COUNT?.....	266
[SENSe:]PULSe:FREQuency:POINt:LIMit?.....	320
[SENSe:]PULSe:FREQuency:POINt:MAXimum?.....	299
[SENSe:]PULSe:FREQuency:POINt:MINimum?.....	299
[SENSe:]PULSe:FREQuency:POINt:SDEVIation?.....	299
[SENSe:]PULSe:FREQuency:POINt?.....	299
[SENSe:]PULSe:FREQuency:PPFRequency:AVERAge?.....	300
[SENSe:]PULSe:FREQuency:PPFRequency:COUNT?.....	266
[SENSe:]PULSe:FREQuency:PPFRequency:LIMit?.....	320
[SENSe:]PULSe:FREQuency:PPFRequency:MAXimum?.....	300
[SENSe:]PULSe:FREQuency:PPFRequency:MINimum?.....	300
[SENSe:]PULSe:FREQuency:PPFRequency:SDEVIation?.....	300
[SENSe:]PULSe:FREQuency:PPFRequency?.....	299
[SENSe:]PULSe:FREQuency:RERRor:AVERAge?.....	300
[SENSe:]PULSe:FREQuency:RERRor:COUNT?.....	266
[SENSe:]PULSe:FREQuency:RERRor:LIMit?.....	320
[SENSe:]PULSe:FREQuency:RERRor:MAXimum?.....	300
[SENSe:]PULSe:FREQuency:RERRor:MINimum?.....	301
[SENSe:]PULSe:FREQuency:RERRor:SDEVIation?.....	301
[SENSe:]PULSe:FREQuency:RERRor?.....	300
[SENSe:]PULSe:ID?.....	268
[SENSe:]PULSe:NUMBer?.....	268
[SENSe:]PULSe:PHASe:DEVIation:AVERAge?.....	302
[SENSe:]PULSe:PHASe:DEVIation:COUNT?.....	267
[SENSe:]PULSe:PHASe:DEVIation:LIMit?.....	320
[SENSe:]PULSe:PHASe:DEVIation:MAXimum?.....	302

[SENSe:]PULSe:PHASe:DEViation:MINimum?.....	302
[SENSe:]PULSe:PHASe:DEViation:SDEViation?.....	302
[SENSe:]PULSe:PHASe:DEViation?.....	302
[SENSe:]PULSe:PHASe:PERRor:AVERage?.....	303
[SENSe:]PULSe:PHASe:PERRor:COUNT?.....	267
[SENSe:]PULSe:PHASe:PERRor:LIMit?.....	320
[SENSe:]PULSe:PHASe:PERRor:MAXimum?.....	303
[SENSe:]PULSe:PHASe:PERRor:MINimum?.....	303
[SENSe:]PULSe:PHASe:PERRor:SDEViation?.....	303
[SENSe:]PULSe:PHASe:PERRor?.....	302
[SENSe:]PULSe:PHASe:POINT:AVERage?.....	303
[SENSe:]PULSe:PHASe:POINT:COUNT?.....	267
[SENSe:]PULSe:PHASe:POINT:LIMit?.....	320
[SENSe:]PULSe:PHASe:POINT:MAXimum?.....	303
[SENSe:]PULSe:PHASe:POINT:MINimum?.....	304
[SENSe:]PULSe:PHASe:POINT:SDEViation?.....	304
[SENSe:]PULSe:PHASe:POINT?.....	303
[SENSe:]PULSe:PHASe:PPPHase:AVERage?.....	304
[SENSe:]PULSe:PHASe:PPPHase:COUNT?.....	267
[SENSe:]PULSe:PHASe:PPPHase:LIMit?.....	320
[SENSe:]PULSe:PHASe:PPPHase:MAXimum?.....	304
[SENSe:]PULSe:PHASe:PPPHase:MINimum?.....	304
[SENSe:]PULSe:PHASe:PPPHase:SDEViation?.....	304
[SENSe:]PULSe:PHASe:PPPHase?.....	304
[SENSe:]PULSe:PHASe:RERRor:AVERage?.....	305
[SENSe:]PULSe:PHASe:RERRor:COUNT?.....	267
[SENSe:]PULSe:PHASe:RERRor:LIMit?.....	320
[SENSe:]PULSe:PHASe:RERRor:MAXimum?.....	305
[SENSe:]PULSe:PHASe:RERRor:MINimum?.....	305
[SENSe:]PULSe:PHASe:RERRor:SDEViation?.....	305
[SENSe:]PULSe:PHASe:RERRor?.....	305
[SENSe:]PULSe:POWer:ADRoop:DB:AVERage?.....	272
[SENSe:]PULSe:POWer:ADRoop:DB:COUNT?.....	267
[SENSe:]PULSe:POWer:ADRoop:DB:LIMit?.....	320
[SENSe:]PULSe:POWer:ADRoop:DB:MAXimum?.....	272
[SENSe:]PULSe:POWer:ADRoop:DB:MINimum?.....	272
[SENSe:]PULSe:POWer:ADRoop:DB:SDEViation?.....	272
[SENSe:]PULSe:POWer:ADRoop:DB?.....	272
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:AVERage?.....	273
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:COUNT?.....	267
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:LIMit?.....	320
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:MAXimum?.....	273
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:MINimum?.....	273
[SENSe:]PULSe:POWer:ADRoop[:PERCent]:SDEViation?.....	273
[SENSe:]PULSe:POWer:ADRoop[:PERCent]?.....	272
[SENSe:]PULSe:POWer:AMPL:I:COUNT?.....	267
[SENSe:]PULSe:POWer:AMPL:Q:COUNT?.....	267
[SENSe:]PULSe:POWer:AMPLitude:AVERage?.....	274
[SENSe:]PULSe:POWer:AMPLitude:COUNT?.....	267
[SENSe:]PULSe:POWer:AMPLitude:I:AVERage?.....	274

[SENSe:]PULSe:POWer:AMPLitude:I:LIMit?.....	320
[SENSe:]PULSe:POWer:AMPLitude:I:MAXimum?.....	274
[SENSe:]PULSe:POWer:AMPLitude:I:MINimum?.....	274
[SENSe:]PULSe:POWer:AMPLitude:I:SDEVIation?.....	274
[SENSe:]PULSe:POWer:AMPLitude:I?.....	274
[SENSe:]PULSe:POWer:AMPLitude:LIMit?.....	320
[SENSe:]PULSe:POWer:AMPLitude:MAXimum?.....	274
[SENSe:]PULSe:POWer:AMPLitude:MINimum?.....	274
[SENSe:]PULSe:POWer:AMPLitude:Q:AVERage?.....	275
[SENSe:]PULSe:POWer:AMPLitude:Q:LIMit?.....	320
[SENSe:]PULSe:POWer:AMPLitude:Q:MAXimum?.....	275
[SENSe:]PULSe:POWer:AMPLitude:Q:MINimum?.....	275
[SENSe:]PULSe:POWer:AMPLitude:Q:SDEVIation?.....	275
[SENSe:]PULSe:POWer:AMPLitude:Q?.....	275
[SENSe:]PULSe:POWer:AMPLitude:SDEVIation?.....	274
[SENSe:]PULSe:POWer:AMPLitude?.....	273
[SENSe:]PULSe:POWer:AVG:AVERage?.....	276
[SENSe:]PULSe:POWer:AVG:COUNT?.....	267
[SENSe:]PULSe:POWer:AVG:LIMit?.....	320
[SENSe:]PULSe:POWer:AVG:MAXimum?.....	276
[SENSe:]PULSe:POWer:AVG:MINimum?.....	276
[SENSe:]PULSe:POWer:AVG:SDEVIation?.....	276
[SENSe:]PULSe:POWer:AVG?.....	275
[SENSe:]PULSe:POWer:BASE:AVERage?.....	276
[SENSe:]PULSe:POWer:BASE:COUNT?.....	267
[SENSe:]PULSe:POWer:BASE:LIMit?.....	320
[SENSe:]PULSe:POWer:BASE:MAXimum?.....	276
[SENSe:]PULSe:POWer:BASE:MINimum?.....	277
[SENSe:]PULSe:POWer:BASE:SDEVIation?.....	277
[SENSe:]PULSe:POWer:BASE?.....	276
[SENSe:]PULSe:POWer:MAX:AVERage?.....	277
[SENSe:]PULSe:POWer:MAX:COUNT?.....	267
[SENSe:]PULSe:POWer:MAX:LIMit?.....	320
[SENSe:]PULSe:POWer:MAX:MAXimum?.....	277
[SENSe:]PULSe:POWer:MAX:MINimum?.....	277
[SENSe:]PULSe:POWer:MAX:SDEVIation?.....	277
[SENSe:]PULSe:POWer:MAX?.....	277
[SENSe:]PULSe:POWer:MIN:AVERage?.....	278
[SENSe:]PULSe:POWer:MIN:COUNT?.....	267
[SENSe:]PULSe:POWer:MIN:LIMit?.....	320
[SENSe:]PULSe:POWer:MIN:MAXimum?.....	278
[SENSe:]PULSe:POWer:MIN:MINimum?.....	278
[SENSe:]PULSe:POWer:MIN:SDEVIation?.....	278
[SENSe:]PULSe:POWer:MIN?.....	278
[SENSe:]PULSe:POWer:ON:AVERage?.....	279
[SENSe:]PULSe:POWer:ON:COUNT?.....	267
[SENSe:]PULSe:POWer:ON:LIMit?.....	320
[SENSe:]PULSe:POWer:ON:MAXimum?.....	279
[SENSe:]PULSe:POWer:ON:MINimum?.....	279
[SENSe:]PULSe:POWer:ON:SDEVIation?.....	279

[SENSe:]PULSe:POWer:ON?.....	278
[SENSe:]PULSe:POWer:OVERshoot:DB:AVERAge?.....	280
[SENSe:]PULSe:POWer:OVERshoot:DB:COUNT?.....	267
[SENSe:]PULSe:POWer:OVERshoot:DB:LIMit?.....	320
[SENSe:]PULSe:POWer:OVERshoot:DB:MAXimum?.....	280
[SENSe:]PULSe:POWer:OVERshoot:DB:MINimum?.....	280
[SENSe:]PULSe:POWer:OVERshoot:DB:SDEViation?.....	280
[SENSe:]PULSe:POWer:OVERshoot:DB?.....	279
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:AVERAge?.....	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:COUNT?.....	267
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:LIMit?.....	320
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:MAXimum?.....	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:MINimum?.....	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]:SDEViation?.....	280
[SENSe:]PULSe:POWer:OVERshoot[:PERCent]?.....	280
[SENSe:]PULSe:POWer:PAVG:AVERAge?.....	281
[SENSe:]PULSe:POWer:PAVG:COUNT?.....	267
[SENSe:]PULSe:POWer:PAVG:LIMit?.....	320
[SENSe:]PULSe:POWer:PAVG:MAXimum?.....	281
[SENSe:]PULSe:POWer:PAVG:MINimum?.....	281
[SENSe:]PULSe:POWer:PAVG:SDEViation?.....	281
[SENSe:]PULSe:POWer:PAVG?.....	281
[SENSe:]PULSe:POWer:PMIN:AVERAge?.....	282
[SENSe:]PULSe:POWer:PMIN:COUNT?.....	267
[SENSe:]PULSe:POWer:PMIN:LIMit?.....	320
[SENSe:]PULSe:POWer:PMIN:MAXimum?.....	282
[SENSe:]PULSe:POWer:PMIN:MINimum?.....	282
[SENSe:]PULSe:POWer:PMIN:SDEViation?.....	282
[SENSe:]PULSe:POWer:PMIN?.....	281
[SENSe:]PULSe:POWer:POINT:AVERAge?.....	283
[SENSe:]PULSe:POWer:POINT:COUNT?.....	267
[SENSe:]PULSe:POWer:POINT:LIMit?.....	320
[SENSe:]PULSe:POWer:POINT:MAXimum?.....	283
[SENSe:]PULSe:POWer:POINT:MINimum?.....	283
[SENSe:]PULSe:POWer:POINT:SDEViation?.....	283
[SENSe:]PULSe:POWer:POINT?.....	282
[SENSe:]PULSe:POWer:PON:AVERAge?.....	283
[SENSe:]PULSe:POWer:PON:COUNT?.....	267
[SENSe:]PULSe:POWer:PON:LIMit?.....	320
[SENSe:]PULSe:POWer:PON:MAXimum?.....	283
[SENSe:]PULSe:POWer:PON:MINimum?.....	283
[SENSe:]PULSe:POWer:PON:SDEViation?.....	283
[SENSe:]PULSe:POWer:PON?.....	283
[SENSe:]PULSe:POWer:PPRatio:AVERAge?.....	284
[SENSe:]PULSe:POWer:PPRatio:COUNT?.....	267
[SENSe:]PULSe:POWer:PPRatio:LIMit?.....	320
[SENSe:]PULSe:POWer:PPRatio:MAXimum?.....	284
[SENSe:]PULSe:POWer:PPRatio:MINimum?.....	284
[SENSe:]PULSe:POWer:PPRatio:SDEViation?.....	284
[SENSe:]PULSe:POWer:PPRatio?.....	284



[SENSe:]PULSe:POWer:RIPPlE:DB:AVERAge?	285
[SENSe:]PULSe:POWer:RIPPlE:DB:COUnT?	267
[SENSe:]PULSe:POWer:RIPPlE:DB:LIMit?	320
[SENSe:]PULSe:POWer:RIPPlE:DB:MAXimum?	285
[SENSe:]PULSe:POWer:RIPPlE:DB:MINimum?	285
[SENSe:]PULSe:POWer:RIPPlE:DB:SDEVIation?	285
[SENSe:]PULSe:POWer:RIPPlE:DB?	285
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:AVERAge?	286
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:COUnT?	267
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:LIMit?	320
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:MAXimum?	286
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:MINimum?	286
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]:SDEVIation?	286
[SENSe:]PULSe:POWer:RIPPlE[:PERCent]?	285
[SENSe:]PULSe:POWer:TOP:AVERAge?	286
[SENSe:]PULSe:POWer:TOP:COUnT?	267
[SENSe:]PULSe:POWer:TOP:LIMit?	320
[SENSe:]PULSe:POWer:TOP:MAXimum?	286
[SENSe:]PULSe:POWer:TOP:MINimum?	286
[SENSe:]PULSe:POWer:TOP:SDEVIation?	286
[SENSe:]PULSe:POWer:TOP?	286
[SENSe:]PULSe:STABility:AMPLitude:COUnT?	267
[SENSe:]PULSe:STABility:BURSt:COUnT?	267
[SENSe:]PULSe:STABility:PHASe:COUnT?	267
[SENSe:]PULSe:STABility:PIBurst:COUnT?	267
[SENSe:]PULSe:STABility:TOTal:COUnT?	267
[SENSe:]PULSe:TIMing:DCYClE:AVERAge?	288
[SENSe:]PULSe:TIMing:DCYClE:COUnT?	267
[SENSe:]PULSe:TIMing:DCYClE:LIMit?	320
[SENSe:]PULSe:TIMing:DCYClE:MAXimum?	288
[SENSe:]PULSe:TIMing:DCYClE:MINimum?	288
[SENSe:]PULSe:TIMing:DCYClE:SDEVIation?	288
[SENSe:]PULSe:TIMing:DCYClE?	288
[SENSe:]PULSe:TIMing:DRATio:AVERAge?	289
[SENSe:]PULSe:TIMing:DRATio:COUnT?	267
[SENSe:]PULSe:TIMing:DRATio:LIMit?	320
[SENSe:]PULSe:TIMing:DRATio:MAXimum?	289
[SENSe:]PULSe:TIMing:DRATio:MINimum?	289
[SENSe:]PULSe:TIMing:DRATio:SDEVIation?	289
[SENSe:]PULSe:TIMing:DRATio?	289
[SENSe:]PULSe:TIMing:FALL:AVERAge?	290
[SENSe:]PULSe:TIMing:FALL:COUnT?	267
[SENSe:]PULSe:TIMing:FALL:LIMit?	320
[SENSe:]PULSe:TIMing:FALL:MAXimum?	290
[SENSe:]PULSe:TIMing:FALL:MINimum?	290
[SENSe:]PULSe:TIMing:FALL:SDEVIation?	290
[SENSe:]PULSe:TIMing:FALL?	289
[SENSe:]PULSe:TIMing:OFF:AVERAge?	291
[SENSe:]PULSe:TIMing:OFF:COUnT?	267
[SENSe:]PULSe:TIMing:OFF:LIMit?	320

[SENSe:]PULSe:TIMing:OFF:MAXimum?.....	291
[SENSe:]PULSe:TIMing:OFF:MINimum?.....	291
[SENSe:]PULSe:TIMing:OFF:SDEVIation?.....	291
[SENSe:]PULSe:TIMing:OFF?.....	290
[SENSe:]PULSe:TIMing:PRF:AVERAge?.....	291
[SENSe:]PULSe:TIMing:PRF:COUNT?.....	267
[SENSe:]PULSe:TIMing:PRF:LIMit?.....	320
[SENSe:]PULSe:TIMing:PRF:MAXimum?.....	291
[SENSe:]PULSe:TIMing:PRF:MINimum?.....	291
[SENSe:]PULSe:TIMing:PRF:SDEVIation?.....	291
[SENSe:]PULSe:TIMing:PRF?.....	291
[SENSe:]PULSe:TIMing:PRI:AVERAge?.....	292
[SENSe:]PULSe:TIMing:PRI:COUNT?.....	267
[SENSe:]PULSe:TIMing:PRI:LIMit?.....	320
[SENSe:]PULSe:TIMing:PRI:MAXimum?.....	292
[SENSe:]PULSe:TIMing:PRI:MINimum?.....	292
[SENSe:]PULSe:TIMing:PRI:SDEVIation?.....	292
[SENSe:]PULSe:TIMing:PRI?.....	292
[SENSe:]PULSe:TIMing:PWIDth:AVERAge?.....	293
[SENSe:]PULSe:TIMing:PWIDth:COUNT?.....	267
[SENSe:]PULSe:TIMing:PWIDth:LIMit?.....	320
[SENSe:]PULSe:TIMing:PWIDth:MAXimum?.....	293
[SENSe:]PULSe:TIMing:PWIDth:MINimum?.....	293
[SENSe:]PULSe:TIMing:PWIDth:SDEVIation?.....	293
[SENSe:]PULSe:TIMing:PWIDth?.....	293
[SENSe:]PULSe:TIMing:RISE:AVERAge?.....	294
[SENSe:]PULSe:TIMing:RISE:COUNT?.....	267
[SENSe:]PULSe:TIMing:RISE:LIMit?.....	320
[SENSe:]PULSe:TIMing:RISE:MAXimum?.....	294
[SENSe:]PULSe:TIMing:RISE:MINimum?.....	294
[SENSe:]PULSe:TIMing:RISE:SDEVIation?.....	294
[SENSe:]PULSe:TIMing:RISE?.....	293
[SENSe:]PULSe:TIMing:SETTling:AVERAge?.....	294
[SENSe:]PULSe:TIMing:SETTling:COUNT?.....	267
[SENSe:]PULSe:TIMing:SETTling:LIMit?.....	321
[SENSe:]PULSe:TIMing:SETTling:MAXimum?.....	294
[SENSe:]PULSe:TIMing:SETTling:MINimum?.....	295
[SENSe:]PULSe:TIMing:SETTling:SDEVIation?.....	295
[SENSe:]PULSe:TIMing:SETTling?.....	294
[SENSe:]PULSe:TIMing:TSTamp:AVERAge?.....	295
[SENSe:]PULSe:TIMing:TSTamp:COUNT?.....	267
[SENSe:]PULSe:TIMing:TSTamp:LIMit?.....	321
[SENSe:]PULSe:TIMing:TSTamp:MAXimum?.....	295
[SENSe:]PULSe:TIMing:TSTamp:MINimum?.....	295
[SENSe:]PULSe:TIMing:TSTamp:SDEVIation?.....	295
[SENSe:]PULSe:TIMing:TSTamp?.....	295
[SENSe:]PULSe:TSIDelobe:AMPower:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:CRATio:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:IMPower:COUNT?.....	267
[SENSe:]PULSe:TSIDelobe:ISLevel:COUNT?.....	267

[SENSe:]PULSe:TSIDelobe:MFRrequency:COUNT?	267
[SENSe:]PULSe:TSIDelobe:MPHase:COUNT?	267
[SENSe:]PULSe:TSIDelobe:MWIDth:COUNT?	267
[SENSe:]PULSe:TSIDelobe:PCORrelation:COUNT?	267
[SENSe:]PULSe:TSIDelobe:PSLevel:COUNT?	267
[SENSe:]PULSe:TSIDelobe:SDElay:COUNT?	268
[SENSe:]RLENgth?	154
[SENSe:]SRATe?	154
[SENSe:]STATistic<n>:TYPE	248
[SENSe:]SWEep:COUNT	168
[SENSe:]SWEep:COUNT:CURRent?	169
[SENSe:]SWEep:POINts	248
[SENSe:]SWEep:TIME	155
[SENSe:]TRACe:MEASurement:ALGorithm	159
[SENSe:]TRACe:MEASurement:DEFine:AMPLitude:UNIT	159
[SENSe:]TRACe:MEASurement:DEFine:BOUNdary:TOP	160
[SENSe:]TRACe:MEASurement:DEFine:COMPensate:ADRoop	160
[SENSe:]TRACe:MEASurement:DEFine:DURation:AUTO	134
[SENSe:]TRACe:MEASurement:DEFine:DURation:MAX	135
[SENSe:]TRACe:MEASurement:DEFine:DURation:MIN	135
[SENSe:]TRACe:MEASurement:DEFine:DURation:OFF	135
[SENSe:]TRACe:MEASurement:DEFine:FREQuency:OFFSet	135
[SENSe:]TRACe:MEASurement:DEFine:FREQuency:OFFSet:AUTO	136
[SENSe:]TRACe:MEASurement:DEFine:FREQuency:RATE	136
[SENSe:]TRACe:MEASurement:DEFine:FREQuency:RATE:AUTO	136
[SENSe:]TRACe:MEASurement:DEFine:PULSe:ADRoop	136
[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:LENgth	164
[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:OFFSet:LEFT	164
[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:OFFSet:RIGHT	164
[SENSe:]TRACe:MEASurement:DEFine:PULSe:ESTimation:REFerence	165
[SENSe:]TRACe:MEASurement:DEFine:PULSe:INSTant	162
[SENSe:]TRACe:MEASurement:DEFine:PULSe:INSTant:AWINdow	162
[SENSe:]TRACe:MEASurement:DEFine:PULSe:INSTant:REFerence	162
[SENSe:]TRACe:MEASurement:DEFine:PULSe:MODulation	136
[SENSe:]TRACe:MEASurement:DEFine:PULSe:PERiod	137
[SENSe:]TRACe:MEASurement:DEFine:PULSe:REFerence	163
[SENSe:]TRACe:MEASurement:DEFine:PULSe:REFerence:POStion	163
[SENSe:]TRACe:MEASurement:DEFine:PULSe:SElEcted	170
[SENSe:]TRACe:MEASurement:DEFine:RIPple	160
[SENSe:]TRACe:MEASurement:DEFine:RRANge:ALIGNment	171
[SENSe:]TRACe:MEASurement:DEFine:RRANge:AUTO	171
[SENSe:]TRACe:MEASurement:DEFine:RRANge:LENgth	172
[SENSe:]TRACe:MEASurement:DEFine:RRANge:OFFSet	172
[SENSe:]TRACe:MEASurement:DEFine:RRANge:REFerence	172
[SENSe:]TRACe:MEASurement:DEFine:TOP:FIXed	160
[SENSe:]TRACe:MEASurement:DEFine:TRANsition:HREFerence	161
[SENSe:]TRACe:MEASurement:DEFine:TRANsition:LREFerence	161
[SENSe:]TRACe:MEASurement:DEFine:TRANsition:REFerence	161
[SENSe:]TRACe:MEASurement:POWer:AVG?	327
[SENSe:]TRACe:MEASurement:POWer:MAX?	327

[SENSe:]TRACe:MEASurement:POWer:MIN?	327
[SENSe:]TRACe:MEASurement:POWer:PULSe:BASE?	327
[SENSe:]TRACe:MEASurement:POWer:PULSe:TOP?	327
[SENSe:]TRACe:MEASurement:PULSe:DCYClE?	327
[SENSe:]TRACe:MEASurement:PULSe:DURation?	327
[SENSe:]TRACe:MEASurement:PULSe:PERiod?	327
[SENSe:]TRACe:MEASurement:PULSe:SEParation?	327
[SENSe:]TRACe:MEASurement:TRANsition:NEGative:DURation?	327
[SENSe:]TRACe:MEASurement:TRANsition:POSitive:DURation?	327
[SENSe:]TRACe:MEASurement:TRANsition:POSitive:OVERshoot?	327
ABORT	165
CALCulate<n>:DELTaMarker<m>:AOFF	251
CALCulate<n>:DELTaMarker<m>:LINK	251
CALCulate<n>:DELTaMarker<m>:LINK:TRENd	254
CALCulate<n>:DELTaMarker<m>:MAXimum:LEFT	258
CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT	258
CALCulate<n>:DELTaMarker<m>:MAXimum:RIGHT	259
CALCulate<n>:DELTaMarker<m>:MAXimum[:PEAK]	258
CALCulate<n>:DELTaMarker<m>:MINimum:LEFT	259
CALCulate<n>:DELTaMarker<m>:MINimum:NEXT	259
CALCulate<n>:DELTaMarker<m>:MINimum:RIGHT	259
CALCulate<n>:DELTaMarker<m>:MINimum[:PEAK]	259
CALCulate<n>:DELTaMarker<m>:MREFerence	252
CALCulate<n>:DELTaMarker<m>:TRACe	253
CALCulate<n>:DELTaMarker<m>:X	253
CALCulate<n>:DELTaMarker<m>:X:RELative?	325
CALCulate<n>:DELTaMarker<m>:Y?	325
CALCulate<n>:DELTaMarker<m>[:STATe]	252
CALCulate<n>:DELTaMarker<ms>:LINK:TO:MARKer<md>	251
CALCulate<n>:DISTribution:EMODEl	173
CALCulate<n>:DISTribution:FREQuency	174
CALCulate<n>:DISTribution:LLINes[:STATe]	175
CALCulate<n>:DISTribution:NBINs	175
CALCulate<n>:DISTribution:PHASe	176
CALCulate<n>:DISTribution:POWer	176
CALCulate<n>:DISTribution:TIMing	178
CALCulate<n>:MARKer<m>:AOFF	249
CALCulate<n>:MARKer<m>:LINK	254
CALCulate<n>:MARKer<m>:LINK:TRENd	254
CALCulate<n>:MARKer<m>:MAXimum:LEFT	256
CALCulate<n>:MARKer<m>:MAXimum:NEXT	256
CALCulate<n>:MARKer<m>:MAXimum:RIGHT	257
CALCulate<n>:MARKer<m>:MAXimum[:PEAK]	256
CALCulate<n>:MARKer<m>:MINimum:LEFT	257
CALCulate<n>:MARKer<m>:MINimum:NEXT	257
CALCulate<n>:MARKer<m>:MINimum:RIGHT	257
CALCulate<n>:MARKer<m>:MINimum[:PEAK]	257
CALCulate<n>:MARKer<m>:PEXCursion	254
CALCulate<n>:MARKer<m>:TRACe	250
CALCulate<n>:MARKer<m>:X	250

CALCulate<n>:MARKer<m>:Y?.....	325
CALCulate<n>:MARKer<m>[:STATe].....	249
CALCulate<n>:MARKer<ms>:LINK:TO:MARKer<md>.....	249
CALCulate<n>:PPSPectrum:AUTO.....	186
CALCulate<n>:PPSPectrum:GTHReshold.....	186
CALCulate<n>:PPSPectrum:MAXFrequency.....	187
CALCulate<n>:PPSPectrum:RBW?.....	187
CALCulate<n>:PPSPectrum:STHReshold.....	187
CALCulate<n>:PPSPectrum:WINDow.....	187
CALCulate<n>:PSPectrum:AUTO.....	179
CALCulate<n>:PSPectrum:BLOCKsize.....	180
CALCulate<n>:PSPectrum:EMODEl.....	180
CALCulate<n>:PSPectrum:FREQuency.....	181
CALCulate<n>:PSPectrum:GTHReshold.....	182
CALCulate<n>:PSPectrum:MAXFrequency.....	182
CALCulate<n>:PSPectrum:PHASe.....	182
CALCulate<n>:PSPectrum:POWEr.....	183
CALCulate<n>:PSPectrum:RBW?.....	184
CALCulate<n>:PSPectrum:STHReshold.....	184
CALCulate<n>:PSPectrum:TIMing.....	184
CALCulate<n>:PSPectrum:WINDow.....	185
CALCulate<n>:RRSPectrum:AUTO.....	208
CALCulate<n>:RRSPectrum:RBW.....	208
CALCulate<n>:RRSPectrum:WINDow.....	207
CALCulate<n>:TABLe:<ParameterGroup>:<Parameter>:LIMit.....	229
CALCulate<n>:TABLe:<ParameterGroup>:<Parameter>:LIMit:STATe.....	227
CALCulate<n>:TABLe:<ParameterGroup>:ALL:LIMit:STATe.....	228
CALCulate<n>:TABLe:ALL:LIMit:STATe.....	229
CALCulate<n>:TABLe:EMODEl:ALL:LIMit:STATe.....	228
CALCulate<n>:TABLe:EMODEl:ALL[:STATe].....	210
CALCulate<n>:TABLe:EMODEl:FBPTime.....	210
CALCulate<n>:TABLe:EMODEl:FBPTime:LIMit.....	229
CALCulate<n>:TABLe:EMODEl:FBPTime:LIMit:STATe.....	227
CALCulate<n>:TABLe:EMODEl:FHPLLevel.....	210
CALCulate<n>:TABLe:EMODEl:FHPLLevel:LIMit.....	229
CALCulate<n>:TABLe:EMODEl:FHPLLevel:LIMit:STATe.....	227
CALCulate<n>:TABLe:EMODEl:FHPTime.....	211
CALCulate<n>:TABLe:EMODEl:FHPTime:LIMit.....	229
CALCulate<n>:TABLe:EMODEl:FHPTime:LIMit:STATe.....	227
CALCulate<n>:TABLe:EMODEl:FLPLLevel.....	211
CALCulate<n>:TABLe:EMODEl:FLPLLevel:LIMit.....	229
CALCulate<n>:TABLe:EMODEl:FLPLLevel:LIMit:STATe.....	227
CALCulate<n>:TABLe:EMODEl:FLPTime.....	211
CALCulate<n>:TABLe:EMODEl:FLPTime:LIMit.....	229
CALCulate<n>:TABLe:EMODEl:FLPTime:LIMit:STATe.....	227
CALCulate<n>:TABLe:EMODEl:FMPLevel.....	211
CALCulate<n>:TABLe:EMODEl:FMPLevel:LIMit.....	229
CALCulate<n>:TABLe:EMODEl:FMPLevel:LIMit:STATe.....	227
CALCulate<n>:TABLe:EMODEl:FMPTime.....	212
CALCulate<n>:TABLe:EMODEl:FMPTime:LIMit.....	229

CALCulate<n>:TABLE:EMODEl:FMPTime:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:FTPLLevel.....	212
CALCulate<n>:TABLE:EMODEl:FTPLLevel:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:FTPLLevel:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:FTPTime.....	212
CALCulate<n>:TABLE:EMODEl:FTPTime:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:FTPTime:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RBPTime.....	212
CALCulate<n>:TABLE:EMODEl:RBPTime:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RBPTime:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RHPLLevel.....	213
CALCulate<n>:TABLE:EMODEl:RHPLLevel:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RHPLLevel:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RHPTime.....	213
CALCulate<n>:TABLE:EMODEl:RHPTime:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RHPTime:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RLPLLevel.....	213
CALCulate<n>:TABLE:EMODEl:RLPLLevel:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RLPLLevel:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RLPTime.....	213
CALCulate<n>:TABLE:EMODEl:RLPTime:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RLPTime:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RMPLLevel.....	214
CALCulate<n>:TABLE:EMODEl:RMPLLevel:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RMPLLevel:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RMPTime.....	214
CALCulate<n>:TABLE:EMODEl:RMPTime:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RMPTime:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RTPLLevel.....	214
CALCulate<n>:TABLE:EMODEl:RTPLLevel:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RTPLLevel:LIMit:STATe.....	227
CALCulate<n>:TABLE:EMODEl:RTPTime.....	215
CALCulate<n>:TABLE:EMODEl:RTPTime:LIMit.....	229
CALCulate<n>:TABLE:EMODEl:RTPTime:LIMit:STATe.....	227
CALCulate<n>:TABLE:FREQuency:ALL:LIMit:STATe.....	228
CALCulate<n>:TABLE:FREQuency:ALL[:STATe].....	215
CALCulate<n>:TABLE:FREQuency:CRATe.....	215
CALCulate<n>:TABLE:FREQuency:CRATe:LIMit.....	230
CALCulate<n>:TABLE:FREQuency:CRATe:LIMit:STATe.....	227
CALCulate<n>:TABLE:FREQuency:DEViation.....	215
CALCulate<n>:TABLE:FREQuency:DEViation:LIMit.....	230
CALCulate<n>:TABLE:FREQuency:DEViation:LIMit:STATe.....	227
CALCulate<n>:TABLE:FREQuency:PERRor.....	216
CALCulate<n>:TABLE:FREQuency:PERRor:LIMit.....	230
CALCulate<n>:TABLE:FREQuency:PERRor:LIMit:STATe.....	227
CALCulate<n>:TABLE:FREQuency:POINt.....	216
CALCulate<n>:TABLE:FREQuency:POINt:LIMit.....	230
CALCulate<n>:TABLE:FREQuency:POINt:LIMit:STATe.....	227
CALCulate<n>:TABLE:FREQuency:PPFREquency.....	216
CALCulate<n>:TABLE:FREQuency:PPFREquency:LIMit.....	230

CALCulate<n>:TABLE:FREQuency:PPFRequency:LIMit:STATe.....	227
CALCulate<n>:TABLE:FREQuency:RERRor.....	216
CALCulate<n>:TABLE:FREQuency:RERRor:LIMit.....	230
CALCulate<n>:TABLE:FREQuency:RERRor:LIMit:STATe.....	227
CALCulate<n>:TABLE:PHASe:ALL:LIMit:STATe.....	228
CALCulate<n>:TABLE:PHASe:ALL[:STATe].....	217
CALCulate<n>:TABLE:PHASe:DEViation.....	217
CALCulate<n>:TABLE:PHASe:DEViation:LIMit.....	230
CALCulate<n>:TABLE:PHASe:DEViation:LIMit:STATe.....	227
CALCulate<n>:TABLE:PHASe:PERRor.....	217
CALCulate<n>:TABLE:PHASe:PERRor:LIMit.....	230
CALCulate<n>:TABLE:PHASe:PERRor:LIMit:STATe.....	228
CALCulate<n>:TABLE:PHASe:POINt.....	217
CALCulate<n>:TABLE:PHASe:POINt:LIMit.....	230
CALCulate<n>:TABLE:PHASe:POINt:LIMit:STATe.....	228
CALCulate<n>:TABLE:PHASe:PPPHase.....	218
CALCulate<n>:TABLE:PHASe:PPPHase:LIMit.....	230
CALCulate<n>:TABLE:PHASe:PPPHase:LIMit:STATe.....	228
CALCulate<n>:TABLE:PHASe:RERRor.....	218
CALCulate<n>:TABLE:PHASe:RERRor:LIMit.....	230
CALCulate<n>:TABLE:PHASe:RERRor:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:ADRoop:DB.....	218
CALCulate<n>:TABLE:POWer:ADRoop:DB:LIMit.....	230
CALCulate<n>:TABLE:POWer:ADRoop:DB:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:ADRoop[:PERCent].....	219
CALCulate<n>:TABLE:POWer:ADRoop[:PERCent]:LIMit.....	230
CALCulate<n>:TABLE:POWer:ADRoop[:PERCent]:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:ALL:LIMit:STATe.....	229
CALCulate<n>:TABLE:POWer:ALL[:STATe].....	219
CALCulate<n>:TABLE:POWer:AMPLitude.....	219
CALCulate<n>:TABLE:POWer:AMPLitude:l.....	219
CALCulate<n>:TABLE:POWer:AMPLitude:l:LIMit.....	230
CALCulate<n>:TABLE:POWer:AMPLitude:l:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:AMPLitude:LIMit.....	230
CALCulate<n>:TABLE:POWer:AMPLitude:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:AMPLitude:Q.....	220
CALCulate<n>:TABLE:POWer:AMPLitude:Q:LIMit.....	230
CALCulate<n>:TABLE:POWer:AMPLitude:Q:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:AVG.....	220
CALCulate<n>:TABLE:POWer:AVG:LIMit.....	230
CALCulate<n>:TABLE:POWer:AVG:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:BASE.....	220
CALCulate<n>:TABLE:POWer:BASE:LIMit.....	230
CALCulate<n>:TABLE:POWer:BASE:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:MAX.....	220
CALCulate<n>:TABLE:POWer:MAX:LIMit.....	230
CALCulate<n>:TABLE:POWer:MAX:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:MIN.....	221
CALCulate<n>:TABLE:POWer:MIN:LIMit.....	230
CALCulate<n>:TABLE:POWer:MIN:LIMit:STATe.....	228

CALCulate<n>:TABLE:POWer:ON.....	221
CALCulate<n>:TABLE:POWer:ON:LIMit.....	230
CALCulate<n>:TABLE:POWer:ON:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:OVERshoot:DB.....	221
CALCulate<n>:TABLE:POWer:OVERshoot:DB:LIMit.....	230
CALCulate<n>:TABLE:POWer:OVERshoot:DB:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:OVERshoot[:PERCent].....	221
CALCulate<n>:TABLE:POWer:OVERshoot[:PERCent]:LIMit.....	230
CALCulate<n>:TABLE:POWer:OVERshoot[:PERCent]:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:PAVG.....	222
CALCulate<n>:TABLE:POWer:PAVG:LIMit.....	230
CALCulate<n>:TABLE:POWer:PAVG:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:PMIN.....	222
CALCulate<n>:TABLE:POWer:PMIN:LIMit.....	230
CALCulate<n>:TABLE:POWer:PMIN:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:POINt.....	222
CALCulate<n>:TABLE:POWer:POINt:LIMit.....	230
CALCulate<n>:TABLE:POWer:POINt:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:PON.....	222
CALCulate<n>:TABLE:POWer:PON:LIMit.....	230
CALCulate<n>:TABLE:POWer:PON:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:PPRatio.....	223
CALCulate<n>:TABLE:POWer:PPRatio:LIMit.....	230
CALCulate<n>:TABLE:POWer:PPRatio:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:RIPPlE:DB.....	223
CALCulate<n>:TABLE:POWer:RIPPlE:DB:LIMit.....	230
CALCulate<n>:TABLE:POWer:RIPPlE:DB:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:RIPPlE[:PERCent].....	223
CALCulate<n>:TABLE:POWer:RIPPlE[:PERCent]:LIMit.....	230
CALCulate<n>:TABLE:POWer:RIPPlE[:PERCent]:LIMit:STATe.....	228
CALCulate<n>:TABLE:POWer:TOP.....	224
CALCulate<n>:TABLE:POWer:TOP:LIMit.....	230
CALCulate<n>:TABLE:POWer:TOP:LIMit:STATe.....	228
CALCulate<n>:TABLE:TIMing:ALL:LIMit:STATe.....	229
CALCulate<n>:TABLE:TIMing:ALL[:STATe].....	224
CALCulate<n>:TABLE:TIMing:DCYClE.....	224
CALCulate<n>:TABLE:TIMing:DCYClE:LIMit.....	230
CALCulate<n>:TABLE:TIMing:DCYClE:LIMit:STATe.....	228
CALCulate<n>:TABLE:TIMing:DRATio.....	224
CALCulate<n>:TABLE:TIMing:DRATio:LIMit.....	230
CALCulate<n>:TABLE:TIMing:DRATio:LIMit:STATe.....	228
CALCulate<n>:TABLE:TIMing:FALL.....	225
CALCulate<n>:TABLE:TIMing:FALL:LIMit.....	230
CALCulate<n>:TABLE:TIMing:FALL:LIMit:STATe.....	228
CALCulate<n>:TABLE:TIMing:OFF.....	225
CALCulate<n>:TABLE:TIMing:OFF:LIMit.....	230
CALCulate<n>:TABLE:TIMing:OFF:LIMit:STATe.....	228
CALCulate<n>:TABLE:TIMing:PRF.....	225
CALCulate<n>:TABLE:TIMing:PRF:LIMit.....	230
CALCulate<n>:TABLE:TIMing:PRF:LIMit:STATe.....	228



CALCulate<n>:TABLe:TIMing:PRI.....	225
CALCulate<n>:TABLe:TIMing:PRI:LIMit.....	230
CALCulate<n>:TABLe:TIMing:PRI:LIMit:STATe.....	228
CALCulate<n>:TABLe:TIMing:PWIDth.....	226
CALCulate<n>:TABLe:TIMing:PWIDth:LIMit.....	230
CALCulate<n>:TABLe:TIMing:PWIDth:LIMit:STATe.....	228
CALCulate<n>:TABLe:TIMing:RISE.....	226
CALCulate<n>:TABLe:TIMing:RISE:LIMit.....	230
CALCulate<n>:TABLe:TIMing:RISE:LIMit:STATe.....	228
CALCulate<n>:TABLe:TIMing:SETTling.....	226
CALCulate<n>:TABLe:TIMing:SETTling:LIMit.....	230
CALCulate<n>:TABLe:TIMing:SETTling:LIMit:STATe.....	228
CALCulate<n>:TABLe:TIMing:TSTamp.....	226
CALCulate<n>:TABLe:TIMing:TSTamp:LIMit.....	230
CALCulate<n>:TABLe:TIMing:TSTamp:LIMit:STATe.....	228
CALCulate<n>:TRACe<t>[:VALue].....	326
CALCulate<n>:TRACe<t>[:VALue]:PIAQ.....	243
CALCulate<n>:TREND:DSTYle.....	188
CALCulate<n>:TREND:EMODEl.....	189
CALCulate<n>:TREND:EMODEl:X.....	191
CALCulate<n>:TREND:EMODEl:Y.....	192
CALCulate<n>:TREND:FREQuency.....	193
CALCulate<n>:TREND:FREQuency:X.....	194
CALCulate<n>:TREND:FREQuency:Y.....	195
CALCulate<n>:TREND:LLINes[:STATe].....	196
CALCulate<n>:TREND:PHASe.....	196
CALCulate<n>:TREND:PHASe:X.....	198
CALCulate<n>:TREND:PHASe:Y.....	198
CALCulate<n>:TREND:POWer.....	199
CALCulate<n>:TREND:POWer:X.....	201
CALCulate<n>:TREND:POWer:Y.....	202
CALCulate<n>:TREND:TIMing.....	204
CALCulate<n>:TREND:TIMing:X.....	205
CALCulate<n>:TREND:TIMing:Y.....	206
CALCulate<n>:UNIT:ANGLE.....	234
CALCulate<n>:UNIT:FREQuency.....	231
DISPlay:FORMat.....	235
DISPlay[:WINDow<n>]:MINFo[:STATe].....	255
DISPlay[:WINDow<n>]:MTABle.....	255
DISPlay[:WINDow<n>]:SIZE.....	235
DISPlay[:WINDow<n>]:TRACe<t>:NORMalize:MODE.....	245
DISPlay[:WINDow<n>]:TRACe<t>:NORMalize:PHASe.....	246
DISPlay[:WINDow<n>]:TRACe<t>:X[:SCALE]:UNIT?.....	231
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:MAXimum.....	232
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:MINimum.....	232
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RVALue.....	234
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:UNIT?.....	234
DISPlay[:WINDow<n>]:TYPE.....	327
DISPlay[:WINDow<n>][:SUBWIndow<n>]:TRACe<t>:Y[:SCALE]:AUTO.....	232
DISPlay[:WINDow<n>][:SUBWIndow<w>]:TRACe<t>:MODE.....	244

DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:MODE:HCONtinuous.....	245
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:PDIVision.....	233
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel.....	144
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	144
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>:Y[:SCALe]:RPOStition.....	233
DISPlay[:WINDow<n>][:SUBWindow<w>]:TRACe<t>[:STATe].....	246
FORMat:DEXPort:DSEParator.....	322
FORMat:DEXPort:HEADer.....	322
FORMat:DEXPort:TRACes.....	323
FORMat:DEXPort:TSTamp.....	323
FORMat[:DATA].....	321
INITiate:SEQuencer:ABORT.....	167
INITiate:SEQuencer:IMMediate.....	168
INITiate:SEQuencer:MODE.....	168
INITiate<n>:CONMeas.....	166
INITiate<n>:CONtinuous.....	167
INITiate<n>[:IMMediate].....	167
INPut<ip>:ATTenuation.....	146
INPut<ip>:ATTenuation:AUTO.....	146
INPut<ip>:ATTenuation:PROTection:RESet.....	138
INPut<ip>:ATTenuation:PROTection[:STATe].....	138
INPut<ip>:COUPling.....	138
INPut<ip>:DPATH.....	139
INPut<ip>:FILE:PATH.....	141
INPut<ip>:FILTer:HPASs[:STATe].....	139
INPut<ip>:FILTer:YIG[:STATe].....	140
INPut<ip>:GAIN:STATe.....	144
INPut<ip>:GAIN[:VALue].....	145
INPut<ip>:IMPedance.....	140
INPut<ip>:SELEct.....	140
INSTrument:CREate:DUPLicate.....	131
INSTrument:CREate:REPLace.....	132
INSTrument:CREate[:NEW].....	131
INSTrument:DELEte.....	132
INSTrument:LIST?.....	132
INSTrument:REName.....	133
INSTrument[:SELEct].....	134
LAYout:ADD[:WINDow]?.....	236
LAYout:CATalog[:WINDow]?.....	238
LAYout:IDENtify[:WINDow]?.....	238
LAYout:REMOve[:WINDow].....	238
LAYout:REPLace[:WINDow].....	239
LAYout:SPLitter.....	239
LAYout:WINDow<n>:ADD?.....	241
LAYout:WINDow<n>:IDENtify?.....	241
LAYout:WINDow<n>:REMOve.....	242
LAYout:WINDow<n>:REPLace.....	242
LAYout:WINDow<n>:TYPE.....	243
MMEMory:STORe<n>:TABLe.....	323
MMEMory:STORe<n>:TABLe:LIMit.....	324

MMEMory:STORe<n>:TRACe.....	263
OUTPut<up>:TRIGGer<tp>:DIRection.....	151
OUTPut<up>:TRIGGer<tp>:LEVel.....	151
OUTPut<up>:TRIGGer<tp>:OTYPe.....	152
OUTPut<up>:TRIGGer<tp>:PULSe:IMMEdiate.....	152
OUTPut<up>:TRIGGer<tp>:PULSe:LENGth.....	152
SYSTem:PRESet:CHANnel[:EXEC].....	134
SYSTem:SEQuencer.....	169
TRACe:IQ:DATA:MEMory?.....	262
TRACe:IQ:DATA:RRANge?.....	263
TRACe:IQ:DATA?.....	261
TRACe:IQ:LCAPture.....	155
TRACe:IQ:TPISample?.....	269
TRACe<n>[:DATA]:X?.....	261
TRACe<n>[:DATA]?.....	260
TRIGGer[:SEQuence]:DTIME.....	147
TRIGGer[:SEQuence]:HOLDoff[:TIME].....	147
TRIGGer[:SEQuence]:IFPower:HOLDoff.....	148
TRIGGer[:SEQuence]:IFPower:HYSTeresis.....	148
TRIGGer[:SEQuence]:LEVel:IFPower.....	149
TRIGGer[:SEQuence]:LEVel:IQPower.....	149
TRIGGer[:SEQuence]:LEVel:RFPower.....	149
TRIGGer[:SEQuence]:LEVel[:EXTernal<port>].....	148
TRIGGer[:SEQuence]:RFPower:HOLDoff.....	150
TRIGGer[:SEQuence]:SLOPe.....	150
TRIGGer[:SEQuence]:SOURce.....	150
UNIT:ANGLE.....	234

# Index

## A

Aborting	
Sweep	75, 76
Absolute	
Time Stamp	117, 120
AC/DC coupling	62, 66
Activating	
Pulse measurements (remote)	131
Algorithm	
Base/Top level	81
Alignment	
Result range	89
Amplitude	20, 219, 220, 273, 274
Configuration (remote)	143
Configuration (Softkey)	64
Settings	64
Application cards	10
Application notes	10
ASCII trace export	335
Attenuation	66
Auto	66
Configuration (remote)	145
Manual	66
Protective (remote)	138
Auto scaling	100
Auto settings	85
Average count	76
Averaging window	
Measurement point	83

## B

Base level	44
Algorithm	81
Base power	19, 220, 276, 277
Boundary	82
Brochures	10

## C

Capture time	
see also Measurement time	155
Cardinal data points	
Parameters	25
Center frequency	63
Softkey	63
Step size	63
Channel	
Creating (remote)	132
Deleting (remote)	132
Duplicating (remote)	131
Querying (remote)	132
Renaming (remote)	133
Replacing (remote)	132
Chirp rate	24, 215, 296, 297, 298
Auto mode	60
Configuring	60
Closing	
Channels (remote)	132
Windows (remote)	242
Continue single sweep	
Softkey	76

Continuous sweep	
Softkey	75
Conventions	
SCPI commands	126
Copying	
Channel (remote)	131

## D

Data acquisition	
Bandwidth	74
Filter type	73
Measurement time	74, 76
Remote control	153
Softkey	72
Data format	
Remote	322, 323
Data management	125
Data sheets	10
Decimal separator	
Trace export	114, 116, 119
Delta markers	104
Defining	104
Detection range	46
Detectors	
Remote control	247
Trace	111
Diagram footer information	14
Display	
Configuration (Softkey)	102
Distal	
Threshold	81
Doppler frequencies	
Analyzing	38
Droop	45, 218, 219
Calculation	42
Considering	80
Ratio	21, 272, 273
Drop-out time	
Trigger	70
Duplicating	
Channel (remote)	131
Duty cycle	18, 224, 288
Duty ratio	18, 224, 289

## E

Electronic input attenuation	66
Envelope model	
Parameters	25
Errors	
IF OVLD	65
Evaluation	
Magnitude Capture	30
Parameter Distribution	31
Parameter Spectrum	32
Parameter Trend	32
Pulse Frequency	34
Pulse I and'Q	35
Pulse Magnitude	35
Pulse Phase	36
Pulse phase (wrapped)	36
Pulse Results	37

- Pulse Statistics ..... 39
- Pulse-Pulse Spectrum ..... 38
- Result Range Spectrum ..... 40
- Evaluation methods
  - Remote ..... 236
- Evaluation range
  - see Measurement range ..... 84
- Evaluations ..... 29
- Export format
  - Traces ..... 335
- Exporting
  - Data ..... 117, 120
  - Functions ..... 115, 118
  - I/Q data ..... 343
  - Measurement settings ..... 114
  - Table results ..... 116, 118
  - Trace data ..... 123
  - Traces ..... 113, 115, 117, 120
- External trigger ..... 68
  - Level (remote) ..... 148
- F**
- Fall Base Point Time ..... 28
- Fall High Point Level ..... 29
- Fall High Point Time ..... 28
- Fall Low Point Level ..... 29
- Fall Low Point Time ..... 28
- Fall Mid Point Level ..... 29
- Fall Mid Point Time ..... 28
- Fall time ..... 17, 45, 225, 289, 290
  - Position ..... 80
  - Thresholds ..... 79
- Fall Top Point Level ..... 29
- Fall Top Point Time ..... 28
- File format
  - Trace export ..... 335
- Files
  - Format, I/Q data ..... 338
  - I/Q data binary XML ..... 343
  - I/Q data input ..... 49
  - I/Q parameter XML ..... 339
- Filter type
  - Data acquisition ..... 73
  - Gauss, effects ..... 337
- Filters
  - High-pass (RF input) ..... 62
  - YIG (remote) ..... 140
- Fixed value
  - 100% level ..... 81
- FM video bandwidth ..... 91
  - Pulse frequency ..... 34
  - Pulse results ..... 37
- Format
  - Data (remote) ..... 322, 323
- Free Run
  - Trigger ..... 68
- Frequency ..... 23, 216
  - Configuration (remote) ..... 142
  - Configuration (Softkey) ..... 63
  - Deviation ..... 24, 215
  - Difference between pulses ..... 23, 216
  - Error (Peak) ..... 23, 216, 298
  - Error (RMS) ..... 23, 216, 300, 301
  - Offset ..... 64
- Frequency offset
  - Auto mode ..... 59
  - Value ..... 59
- Frontend
  - Configuration ..... 63
  - Configuration (remote) ..... 137, 141
- G**
- Gauss filters
  - Large Bandwidth ..... 337
- Getting started ..... 9
- H**
- Hardware settings
  - Displayed ..... 13
- High
  - Threshold ..... 81
- High-pass filter
  - RF input ..... 62
- Histogram bins
  - Parameter Distribution ..... 93
- Hold
  - Trace setting ..... 111
- Hysteresis
  - Pulse detection ..... 78
  - Trigger ..... 70
- I**
- I/Q data
  - Export file binary data description ..... 343
  - Export file parameter description ..... 339
  - File format ..... 338
  - Input file format ..... 338
  - Input files ..... 49
  - Trigger point in sample (TPIS) ..... 269
- I/Q Power
  - Trigger ..... 69
  - Trigger level (remote) ..... 149
- IF Power
  - Trigger ..... 69
  - Trigger level (remote) ..... 149
- Impedance
  - Setting ..... 62, 67
- Importing
  - Functions ..... 115, 118
  - I/Q data ..... 339
- Input
  - Configuration ..... 60
  - Configuration (remote) ..... 137
  - Coupling ..... 62, 66
  - Overload (remote) ..... 138
  - RF ..... 61
  - Settings ..... 60, 66
  - Source Configuration (softkey) ..... 60
  - Source Configuration (Softkey) ..... 60
  - Source, Radio frequency (RF) ..... 60
- Input sources
  - I/Q data files ..... 49
- Input/Frontend
  - Softkey ..... 60
- Installation ..... 11
- Instrument configuration ..... 125
- Instrument security procedures ..... 10

- iq-tar
  - Example file ..... 341
  - Mandatory data elements ..... 339
- K**
- Keys
  - MKR -> ..... 108
  - Peak Search ..... 109
  - RUN CONT ..... 75
  - RUN SINGLE ..... 75, 76
- L**
- Length
  - Result range ..... 89
- Levels
  - 100% ..... 44, 80
  - Base ..... 44
  - Median ..... 44
  - OFF ..... 44
  - ON ..... 44
  - Top ..... 44
- Limit checks
  - Pulse Results ..... 37
- Limits
  - Detection ..... 78
  - Parameters ..... 98
- Linking
  - Markers ..... 104
- Loading
  - Functions ..... 115, 118
- Low
  - Threshold ..... 82
- M**
- Magnitude Capture
  - Evaluation ..... 30
- Marker table
  - Configuring ..... 105
  - Evaluation method ..... 31
- Marker to Trace ..... 105
- Markers
  - Assigned trace ..... 105
  - Configuration (softkey) ..... 102
  - Configuring ..... 102
  - Deactivating ..... 105
  - Delta markers ..... 104
  - General settings (remote) ..... 253
  - Linking ..... 104
  - Linking across windows ..... 107
  - Linking to pulse ..... 107
  - Minimum ..... 109
  - Minimum (remote control) ..... 256
  - Next minimum (remote control) ..... 256
  - Next peak (remote control) ..... 256
  - Peak ..... 109
  - Peak (remote control) ..... 256
  - Positioning ..... 108
  - Settings (remote) ..... 248
  - State ..... 103
  - Table ..... 106
  - Table (evaluation method) ..... 31
  - Type ..... 104
- Maximizing
  - Windows (remote) ..... 235
- Measurement bandwidth
  - Data acquisition ..... 74
- Measurement levels
  - Configuring ..... 79
  - Configuring (remote) ..... 159
- Measurement point
  - Configuring ..... 82
  - Configuring (remote) ..... 162
  - Reference ..... 83
- Measurement range
  - Configuring ..... 84
  - Configuring (remote) ..... 164
- Measurement time ..... 74, 76
  - Remote ..... 155
- Mesial
  - Threshold ..... 81
- Mid
  - Threshold ..... 81
- Mid level ..... 44
- Minimum ..... 109
  - Marker positioning ..... 109
- MKR ->
  - Key ..... 108
- Multiple
  - Measurement channels ..... 12
- N**
- Normalization
  - Phases ..... 102
  - Referenced pulse ..... 83
  - Trace ..... 112
- O**
- OFF
  - Level ..... 44
- Off time ..... 18, 290, 291
- OFF time ..... 45, 225
- Offset
  - Frequency ..... 64
  - Measurement point ..... 83
  - Reference level ..... 65
  - Result range ..... 89
- ON
  - Level ..... 44
- ON power
  - Average ..... 20, 221, 278, 279
  - Peak-to-Avg ratio ..... 21, 222, 283
- ON time ..... 18, 45, 293
- Options
  - High-pass filter ..... 62
  - Preamplifier ..... 66
- Output
  - Configuration ..... 60
  - Configuration (remote) ..... 137, 141
  - Trigger ..... 71
- Overload
  - RF input (remote) ..... 138
- Overshoot ..... 221
  - Calculation ..... 44
  - Ratio ..... 22, 279, 280
- Overview ..... 55

**P**

Parameter	
Configuration (result displays)	91
Parameter distribution	
Configuration (remote)	172
Parameter Distribution	
Bins	93
Configuration	91
Evaluation	31
Parameters	92
X-axis	92
Y-axis	92
Parameter spectrum	
Configuration (remote)	179, 186
Parameter Spectrum	
Configuration	93
Evaluation	32
Parameters	94
X-axis	94
Parameter tables	
Configuration	97
Configuration (remote)	208
Parameter trend	
Configuration	95
Configuration (remote)	188
Evaluation	32
Parameters	96
X-axis	97
Y-axis	96
Parameters	18
Amplitude	19
Avg ON Power	20
Avg Tx Power	20
Base Power	19
Chirp Rate	24
Description	15
Droop	21
Duty Cycle (%)	18
Envelope model	26, 27, 28, 29
Fall Time	17
Frequency	23
Frequency Deviation	24
Frequency Error (Peak)	23
Frequency Error (RMS)	23
IEEE 181 Standard	15
Min Power	20
Off Time	18
ON Time	18
Overshoot	22
Peak Power	21
Peak-to-Average Tx Power Ratio	21
Peak-to-Avg ON Power Ratio	21
Peak-to-Min Power Ratio	21
Phase	24
Phase Deviation	25
Phase Error (Peak)	25
Phase Error (RMS)	25
Power	19, 22
Pulse Amplitude	20
Pulse Period	18
Pulse Repetition Frequency (Hz)	19
Pulse Repetition Interval	18
Pulse Width	18
Pulse-Pulse Frequency Difference	23
Pulse-Pulse Phase Difference	24
Pulse-to-Pulse Power Ratio	22
Ripple	22
Rise Time	17
Settling Time	17
Timestamp	17
Top Power	19
Peak excursion	108
Peak frequency error	216
Peak list	
Peak excursion	108
Peak search	
Key	109
Mode	107
Peaks	
Marker positioning	109
Softkey	109
Performing	
Pulse measurement	121
Phase	24
Deviation	25, 302
Difference between pulses	24, 304
Error (Peak)	25, 302, 303
Error (RMS)	25, 305
Unwrapped (evaluation)	36
Wrapped (evaluation)	36
Phase deviation	217
Phase Error (Peak)	217
Phase Error (RMS)	218
Phases	
Normalization	102
Position	
100% level	80
Power	
at point	22
Average ON	20, 221, 278, 279
Average transmission	20, 275, 276
Base	19, 220, 276, 277
Minimum transmission	20, 221, 278
Peak to average ratio transmission	21, 222, 281
Peak to min ratio transmission	21, 222, 281, 282
Peak transmission	21, 220, 277
Peak-to-Avg ratio ON	21, 222, 283
Range	20, 219, 220, 273, 274
Top	19, 224, 286
Preamplifier	
Setting	66
Softkey	66
Presetting	
Channels	57
Pretrigger	70
Protection	
RF input (remote)	138
Proximal	
Threshold	82
Pulse	
Droop	58
Frequency (evaluation)	34
I/Q (evaluation)	35
Magnitude (evaluation)	35
Modulation	58
Negative	44
Off time	59
Period	18, 45, 58
Phase (evaluation)	36
Phase, wrapped (evaluation)	36
Positive	44
Repetition interval	45
Selecting	87

- Selecting (remote) ..... 170
    - Statistics (evaluation) ..... 39
    - to pulse spectrum (evaluation) ..... 38
    - Width ..... 18, 45, 59, 226, 293
  - Pulse detection
    - Basics ..... 44
    - Configuring ..... 76
    - Limit ..... 78
    - Maximum count ..... 78
    - Remote control ..... 156
  - Pulse measurements
    - Basics ..... 41
  - Pulse repetition frequency ..... 19, 225, 291
  - Pulse repetition interval ..... 225
  - Pulse Results
    - Evaluation ..... 37
  - Pulse-Pulse Frequency Difference ..... 216, 299, 300
  - Pulse-Pulse Phase Difference ..... 218, 304
  - Pulse-Pulse Spectrum
    - Configuration ..... 93
  - Pulse-to-Pulse Power Difference ..... 223, 284
  - Pulse-to-Pulse Power Ratio ..... 22
- Q**
- Quick Config
    - Traces ..... 113
- R**
- Range
    - Scaling ..... 100
  - Range power ..... 20, 219, 220, 273, 274
  - Record length ..... 74
  - Reference
    - Measurement point ..... 83
    - Measurement range ..... 85
    - Normalization ..... 83
    - Pulse ..... 83
    - Pulse detection ..... 77
    - Result range ..... 89
  - Reference level ..... 65
    - Offset ..... 65
    - Unit ..... 65, 81
    - Value ..... 65
  - Reference marker ..... 104
  - Release notes ..... 10
  - Remote commands
    - Basics on syntax ..... 125
    - Boolean values ..... 129
    - Capitalization ..... 127
    - Character data ..... 130
    - Data blocks ..... 130
    - Numeric values ..... 128
    - Optional keywords ..... 127
    - Parameters ..... 128
    - Strings ..... 130
    - Suffixes ..... 127
  - Repetition interval ..... 18, 292
  - Resetting
    - RF input protection ..... 138
  - Restoring
    - Channel settings ..... 57
  - Result configuration
    - Remote control ..... 170
    - Softkey ..... 87
  - Result display
    - Configuration (remote) ..... 235
  - Result displays ..... 29
    - Marker table ..... 31
  - Result range ..... 15
    - Alignment ..... 89
    - Configuring ..... 88
    - Configuring (remote) ..... 171
    - Length ..... 89
    - Reference ..... 89
    - Spectrum ..... 89
  - Result Range Spectrum
    - Evaluation ..... 40
  - Results
    - Data format (remote) ..... 322, 323
    - Exporting ..... 114
  - RF attenuation
    - Auto ..... 66
    - Manual ..... 66
  - RF input ..... 60
    - Overload protection (remote) ..... 138
    - Remote ..... 137
  - RF Power
    - Trigger ..... 69
    - Trigger level (remote) ..... 149
  - Ripple ..... 81, 223
    - Calculation ..... 42
    - Ratio ..... 22, 285, 286
  - Rise Base Point Time ..... 26
  - Rise High Point Level ..... 28
  - Rise High Point Time ..... 27
  - Rise Low Point Level ..... 27
  - Rise Low Point Time ..... 27
  - Rise Mid Point Level ..... 27
  - Rise Mid Point Time ..... 27
  - Rise time ..... 17, 45, 226, 293, 294
    - Position ..... 80
    - Thresholds ..... 79
  - Rise Top Point Level ..... 28
  - Rise Top Point Time ..... 27
  - RMS frequency error ..... 216
  - RUN CONT
    - Key ..... 75
  - RUN SINGLE
    - Key ..... 75, 76
- S**
- Safety instructions ..... 10
  - Sample rate ..... 74
  - Saving
    - Functions ..... 115, 118
  - Scaling
    - Amplitude range, automatically ..... 100
    - Automatic ..... 100
    - Y-axis ..... 99, 100
    - Y-axis (remote) ..... 231
  - Searching
    - Configuration ..... 107
  - Security procedures ..... 10
  - Select Marker ..... 105, 108
  - Selected Pulse
    - Softkey ..... 87
  - Sequencer ..... 12
    - Activating (remote) ..... 168
    - Remote ..... 167



- Sequences
    - Aborting (remote) ..... 167
    - Mode (remote) ..... 168
  - Service manual ..... 9
  - Settling time ..... 17, 82, 226, 294, 295
  - Signal capturing
    - Duration (remote) ..... 155
  - Signal description
    - Configuration ..... 57
    - Configuration (remote) ..... 134
    - Softkey ..... 57
  - Single sweep
    - Softkey ..... 75
  - Slope
    - Trigger ..... 70, 150
  - Softkeys
    - Amplitude Config ..... 64
    - Center ..... 63
    - Continue Single Sweep ..... 76
    - Continuous Sweep ..... 75
    - Data acquisition ..... 72
    - Display Config ..... 102
    - Export config ..... 117, 120
    - External ..... 68
    - Free Run ..... 68
    - Frequency Config ..... 63
    - I/Q Power ..... 69
    - IF Power ..... 69
    - Input Source Config ..... 60
    - Input/Frontend ..... 60
    - Marker Config ..... 102
    - Marker to Trace ..... 105
    - Min ..... 109
    - Norm/Delta ..... 104
    - Peak ..... 109
    - Preamp ..... 66
    - Ref Level ..... 65
    - Ref Level Offset ..... 65
    - Result Config ..... 87
    - RF Atten Auto ..... 66
    - RF Atten Manual ..... 66
    - RF Power ..... 69
    - Select Marker ..... 105, 108
    - Selected Pulse ..... 87
    - Signal Description ..... 57
    - Single Sweep ..... 75
    - Sweep Count ..... 76
    - Trace 1/2/3/4 ..... 113
    - Trigger Offset ..... 70
    - Trigger/Gate Config ..... 67
  - Specifics for
    - Configuration ..... 57
  - Spectrum
    - Result range ..... 89
  - Statistics
    - Configuration ..... 97
    - Configuration (remote) ..... 208
  - Status registers ..... 125
    - STAT:QUES:POW ..... 138
  - Suffixes
    - Common ..... 130
    - Remote commands ..... 127
  - Sweep
    - Aborting ..... 75, 76
    - Performing (remote) ..... 165
    - Settings ..... 75
  - Settings (remote) ..... 165
  - Time (remote) ..... 155
  - Sweep Count ..... 76
- ## T
- Tables
    - Exporting ..... 115, 116, 118, 119
  - Thresholds
    - Configuring (remote) ..... 159
    - Fall time ..... 79
    - High (Distal) ..... 81
    - Low (Proximal) ..... 82
    - Mid (Mesial) ..... 81
    - Pulse detection ..... 44, 78
    - Reference ..... 77
    - Rise time ..... 79
  - Time Stamp
    - Absolute ..... 117, 120
  - Timestamp ..... 17, 295
  - Timestamps ..... 226
  - Timing
    - Auto mode ..... 59
  - Top level ..... 44
    - Algorithm ..... 81
  - Top power ..... 19, 224, 286
  - TPIS
    - I/Q data ..... 269
  - Traces ..... 113
    - Configuring (remote control) ..... 243
    - Detector ..... 111
    - Detector (remote control) ..... 247
    - Export format ..... 114, 116, 119
    - Exporting ..... 113, 114, 115, 117, 120, 123
    - Hold ..... 111
    - Mode ..... 110
    - Mode (remote) ..... 244
    - Selecting ..... 110
    - Settings ..... 51
    - Settings (remote control) ..... 243
    - Settings, predefined ..... 113
  - Transmission power
    - Average ..... 20, 220, 275, 276
    - Minimum ..... 20, 221, 278
    - Peak ..... 21, 220, 277
    - Peak to average ratio ..... 21, 222, 281
    - Peak to min ratio ..... 21, 222, 281, 282
  - Trigger
    - Conditions (remote) ..... 147
    - Drop-out time ..... 70
    - External (remote) ..... 150
    - Holdoff ..... 71
    - Hysteresis ..... 70
    - Offset ..... 70
    - Output ..... 71
    - Remote control ..... 146
    - Slope ..... 70, 150
  - Trigger level ..... 70
    - External trigger (remote) ..... 148
    - I/Q Power (remote) ..... 149
    - IF Power (remote) ..... 149
    - RF Power (remote) ..... 149
  - Trigger source ..... 68
    - External ..... 68
    - Free Run ..... 68
    - I/Q Power ..... 69

IF Power .....	69
RF Power .....	69
Trigger/Gate	
Configuration (Softkey) .....	67
Troubleshooting	
Input overload .....	138
TX power	
see Transmission power .....	20, 220, 275, 276

## U

Units	
Reference level .....	65, 81

## W

White papers .....	10
Window title bar information .....	14
Windows	
Adding (remote) .....	236
Closing (remote) .....	242
Configuring .....	57
Layout (remote) .....	239
Maximizing (remote) .....	235
Querying (remote) .....	238
Replacing (remote) .....	239
Splitting (remote) .....	235
Types (remote) .....	236

## X

X-axis	
Parameter Distribution .....	92
Parameter Spectrum .....	94
Parameter trend .....	97
X-value	
Marker .....	103

## Y

Y-axis	
Parameter Distribution .....	92
Parameter trend .....	96
Scaling .....	100
Y-Scaling .....	99
Remote control .....	231
YIG-preselector	
Activating/Deactivating .....	62
Activating/Deactivating (remote) .....	140